

P-03D

INSTRUCTION MANUAL '11.11

docomo STYLE series

Thank you for selecting the "P-03D".

Read this manual before use to correctly operate your P-03D.

About manual of P-03D

The operating procedures for the P-03D are also published as in "使いかたガイド (Guide)" on-screen manual installed onto your FOMA terminal, and "Instruction Manual (Detailed Version)" as a PDF. (In Japanese only)

- ◆"Instruction Manual" (this manual)◆
 Description of the displayed content and operating procedures for basic functions
- ◆"使いかたガイド (Guide)" (installed onto your FOMA terminal)◆
 Description of the outline and operations of frequently used functions

From the P-03D ●便利ツール (Tool) ● 使いかたガイド (Guide) ※ This function is available in Japanese mode only.

◆"Instruction Manual (Detailed Version)" (PDF)◆

From a PC, download detailed information about all the functions and the operating procedures. (In Japanese only) http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html

Note that the URL and published contents may be modified without notice.

Basic Package

 P-03D Handset (With Warranty and Back Cover P55)



- Desktop Holder P49
- Instruction Manual (Japanese version)



Battery Pack P23



 \bullet See page 102 for optional items that support this FOMA terminal.

For Using This Manual

- Note that "P-03D" is referred to as "FOMA terminal" in this manual.
- Most operating procedures and displays in this manual are shown with the default settings of the "Black" handset. Further, displays and illustrations shown in this manual are for reference. The actual ones might differ.



Support -----94

Appendix------103

FOMA Terminal2 What You can Do with P-03D3 Part Names and Functions4	Handling Precautions1
--	-----------------------

Introduction ▶ P.1 ~

Before Using 24 Screen Explanation 29 Character Entry 37	Sound/Screen Setting39 Lock/Security44	Basic Operation ▶ P.24 ~
Call Telephone 49 Mail 57	Phonebook62	Connect ▶ P.49 ~
i-mode/Full Browser	Map/GPS68	Search ▶ P.64 ~
Camera 71 1Seg 74 Music 78	i-appli/i-Widget·····80 i-motion/Movie····82	Enjoy ▶ P.71 ~
Osaifu-Keitai	Convenient Tools85 Data Management89	More Convenient ▶ P.83 ~

Index -----117

Others

▶ P.94 ~

FOMA Terminal

1000

- · P-03D supports W-CDMA system.
- Because the FOMA terminal uses radio waves, you cannot use it in places where the radio waves do not reach, where they are weak even outdoors, such as inside tunnels, basements, or buildings, or out-of-service area. You might not be able to operate the FOMA terminal even when you are in a place with a fine view such as in a high-rise building or apartment. Note that you may experience interruption of calls even if the three antennas respond to a strong radio wave, and you remain without moving to use the FOMA terminal.
- Since the FOMA terminal uses radio waves as the medium of telecommunication, calls may be tapped by a third party.
 However, the W-CDMA system automatically supports tapping prevention, so your conversation will be incomprehensible to the third party, because it is recognized as mere noise.
- The FOMA terminals change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice may sound different from the actual one.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifiers as listed herein make any representation and warranty as for the security in the use of SSL/TLS. In the event that the user shall sustain damage or loss due to the use of SSL/TLS, neither DOCOMO nor the certifiers shall be responsible for any such damage or loss. Certifiers: VeriSign Japan K.K., Oybertrust Japan Co., Ltd.,

GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc., and Go Daddy, Inc.

 This FOMA terminal supports FOMA Plus-Area and FOMA High-Speed Area.

- You are advised that you make separate notes of information (such as Phonebook entries, schedule events, memos, record messages, voice memos) stored in the FOMA terminal and keep them in a safe place. Note that we cannot be held responsible for the unlikely event of loss of the stored content due to a malfunction, repair, change of your model, or other mishandling of the FOMA terminal.
- You are advised to save your important data on the microSD card. If you have a personal computer, you can transfer and save data such as Phonebook entries, mail messages, schedule events, and others on the personal computer by using DOCOMO keitai datalink.

Unlocking SIM

This FOMA terminal supports SIM unlock. When the SIM is unlocked, other operator company's SIM cards can be used with your FOMA terminal.

- Contact your nearest docomo Shop for unlocking SIM.
- You are charged separately a charge for unlocking SIM.
- If other operator company's SIM is used, restrictions may be applied to some of the services or the functions. Note that NTT DOCOMO, INC. cannot provide any guarantees for operating the FOMA terminal when using other company's card.
- For further details on the SIM unlock, refer to the DOCOMO website.

What You can Do with P-03D



docomo Palette UI ► P.34

■MyFACE ► P.34

You can freely place MyFACE content, which displays various information, on either side of the Stand-by display. MyFACE content is updated periodically and new information can be obtained. In addition, with MyFACE, you can download and add content from your favorite site, and it is easy to change the order in which items are displayed or delete them.

Shortcut ▶ P35

You can freely place shortcuts at the bottom of the Stand-by display. Placing shortcuts allows you to easily access frequently used functions and content. You can easily divide the shortcuts into groups, and change the order in which they are displayed.

Shabette-Kensaku



This convenient function enables you to conduct i-mode searches using voice commands. You can perform an i-mode search by saying the keyword (the word, station, or address that you want to look up) when "Speak keyword in Japanese" is displayed.

使いかたガイド (Guide) ▶ P.36

You can check "使いかたガイド (Guide)" on screen for how to operate a function you want. Even when you do not have the printed "Instruction Manual" at hand, you can easily operate your FOMA terminal by referring to it.

*This function is available in Japanese mode only.

eco Mode



This function allows you to reduce battery consumption by adjusting the brightness of the display, eco Mode can also be turned on according to the amount of remaining battery power.

■ECO NAVI ▶ P.44

ECO NAVI is a function that identifies waste and conserves energy. A notification icon will be displayed when the eco Mode is automatically set, or when the FOMA terminal has not been operated for a certain period of time and 15ea has terminated.

Quick Mirror



Simply by sliding the display downwards, you can start the inside camera (approx. 1,300,000 pixels), allowing you to use your mobile phone like a hand mirror.

Speed Selector

▶ P.31

Rotate to easily scroll the screen or select items.

Waterproof Performance ► P.19

The FOMA terminal is designed to exhibit a waterproof performance equivalent to the IPX5 and IPX7 classes once its connector terminal cover has been closed tightly and the back cover is attached firmly.

High-image-quality Camera ▶P.7

Using the high-image-quality camera with its 13,200,000 pixels, skin is shot beautifully and scenery is shot vividly.


Snoopy Contents



The popular character, "Snoopy" can be set in Kisekae Tool or Machi-chara.

Part Names and Functions



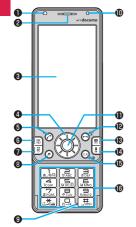

OLight sensor

For sensing brightness (Do not cover it with your hands or do not put a sticker on it. Doing so might disable detecting the brightness.)

2Earpiece


For listening to the other party's voice

- Objective
 Objective
- **♦** Speed selector
 For operating functions and menus
- Start key
 For starting to talk
- Menu key
 For showing the Main Menu
- Mail key
 For showing the Mail Menu
- 8 Multi key
 For showing the Task menu
- Microphone
 For speaking to the other party
- Incam light
- Call/Charging indicator Lights while you are receiving a call or message, talking, or charging.

Power/End key
For turning on/off the power or ending a

- Camera key/1Seg key
- (β iπ)i-mode key/i-αppli key
- (CLR) Clear key/i-Channel key
- ®Numeric keys
- For entering phone numbers and text **®**Speaker
- Inside camera For using Quick mirror or shooting photos of yourself
- Photo light
- Infrared data port
 For using infrared communication and the
- infrared remote control

 a) mark
 - An IC card is installed. Use it for Osaifu-Keitai or iC communications.
- Back cover Remove this when attaching/removing the battery pack, docomo mini UIM card, and microSD card

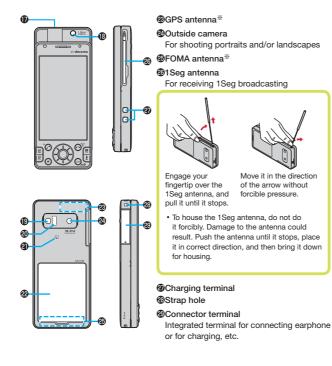

For using earphone

Connect an optional connector-terminalcompatible earphone. When using a connector-terminal-non-compatible earphone, use an optional plug adapter for connection.

Example for connecting the Stereo Earphone Set 01 (option) to external connector terminal This mobile phone serves as the port where both the AC Adapter (charging) and Stereo Earphone Set 01 (Earphone/microphone terminal) are plugged in.




*The antenna is embedded in the handset. Covering the area near the antenna with your hand may adversely affect the quality of the communication

Opening/Closing the FOMA terminal

Hold the FOMA terminal with both hands and slide the display upward or downward.

Be careful not to touch keys then. Otherwise erroneous operation of the keys might result.

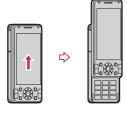


Down Style

By sliding the display side downwards, you can open the FOMA terminal into the Down Style, allowing you to use the inside camera function.

 The main functions available while in the Down Style are as follows:

·Camera

·Quick mirror ·Videophone calls

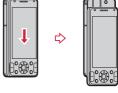


Down Style

Precautions

ALWAYS FOLLOW THESE DIRECTIONS



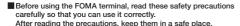

- Be sure to observe these safety precautions to prevent you or those around you from inflicting injury and to avoid unnecessary damage to the property.
- The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed and equipments are not used properly.



Danger

This symbol indicates that incorrect handling will almost certainly cause death or serious injury.



Warning handling poses a or serious injury.

This symbol indicates that incorrect handling poses a risk of causing death or serious injury.



Caution

This symbol indicates that incorrect handling poses a risk of causing a slight injury or damage to the product or property.

■The following symbols show specific directions:



Denotes actions prohibited to do.

Don't



Denotes not to disassemble the units.

disassemble



Denotes not to touch with wet hands

Not wet hands



Denotes not to use where the equipment may get wet, and avoid get it wet.



Water

Denotes mandatory instructions (matters that must be complied with).



Denotes to pull the power plug out of an outlet.

power plug out

"Precautions" are divided into the following six sections:

Frecautions are divided into the following six sections.	
General precautions for FOMA terminal, batteries,	
adapters, desktop holder, and docomo mini UIM card	P.8
Precautions for FOMA terminal	P.9
Precautions for batteries	P.11
Precautions for adapters and desktop holder	P.12
Precautions for docomo mini UIM card	P.13
Notes on using near electronic medical equipment	P.14
1	

General precautions for FOMA terminal, batteries, adapters, desktop holder, and docomo mini **UIM** card



Danger Do not use, store, or leave the



mobile phone or its accessories in places with a high temperature (such as near fire, near heating appliances, inside a kotatsu or near other furniture with heating elements, in places exposed to direct sunlight, or in cars heated by the sun).

Fire, burns, or injury may result. Do not place the FOMA terminal



or its accessories inside cooking appliances such as microwave ovens or high-pressure containers. Fire, burns, injury or electric shock may result.



Do not attempt to disassemble or remodel the FOMA terminal or its accessories

Fire, burns, injury or electric shock disassemble may result.



Avoid

Do not allow the FOMA terminal or its accessories to get wet either from water, drinking water or pet urine, etc.

Water Fire, burns, injury or electric shock may result.

> See "Waterproof Performance" on page 19 for details on waterproof performance.



With your FOMA terminal, use the batteries and adapters specified by NTT DOCOMO, INC. Fire, burns, injury or electric shock

Warning

may result.



Do not throw the FOMA terminal or accessories, or subject them to severe force or shocks

Don't

Fire, burns, injury or electric shock may result.



Do not allow electrically conductive foreign objects (such as metal pieces or pencil leads) to come into contact with the FOMA terminal's charging terminal or connector terminal. Do not allow such objects to enter into the FOMA terminal.

Fire, burns, injury or electric shock may result.



Do not cover or wrap the FOMA terminal or its accessories with a cushion, etc. while it is being used or recharged.

Fire or burns may result.



Before entering a gas station or other places where flammable gases are generated, be absolutely sure to turn off the FOMA terminal and stop charging if it is being charged.

Otherwise, the flammable gases may ignite.

Use the Osaifu-Keitai with the FOMA terminal turned off when you are near a gas station. (When IC Card Lock is set, release the lock. and then turn off the power.)



If odor, overheat, discoloration, or deformation is detected during use, battery charge, or storage. immediately follow the instructions below:

- Pull the power plug out of the outlet or cigarette lighter socket.
- Turn off the power of the FOMA terminal
- Remove the battery pack from the FOMA terminal.

Fire, burns, injury or electric shock may result.



Caution



Do not place the FOMA terminal or accessories on unstable locations such as wobbly tables or slanted locations.

They may fall off and cause injury.

Do not store in humid or dusty



places, or in high temperature environments.

Fire, burns or electric shock may result.



If the FOMA terminal and its accessories are used by a child, a guardian should explain how to operate them correctly. During use, a guardian should also check that they are being used as instructed. Otherwise, injury may result.



Keep out of the reach of babies and infants.

Accidental swallowing or injury may result.



Take special care when you use the FOMA terminal for a long time with the adapter connected.

If you use the i-cippli programs, talk on the videophone, watch 1Seg programs and so on for a prolonged period of time while charging, the temperature of the FOMA terminal, battery pack or adapter may rise. If you keep direct contact with high-temperature parts, redness, itching, a rash or low-temperature skin burns may result depending on the state of your physical condition or constitution.

Precautions for FOMA terminal



Warning

Do not directly point the infrared data port at someone's eyes during transmission.



n't Doing so may harm the person's eyes.



Don't

While using infrared communication, do not point the FOMA terminal's infrared data port at a home electrical appliance which is equipped with an infrared device.

The infrared device may malfunction, and possibly cause an accident.



Don't

Do not light the photo light/incam light close to eyes. It is particularly important that you hold the mobile phone at a distance of at least one meter away from bables and infants when shooting them.

Light the flash close to eyes may

Light the flash close to eyes may damage eyesight. Also, accidents such as injury might occur if someone is startled or dazzled by the light.



Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the docomo mini UIM card or microSD card slot of the FOMA terminal.

Fire, burns, injury or electric shock may result.



Do not turn on the photo light/ incam light toward car drivers. It disturbs driving, and accidents may result.



Turn off the FOMA terminal in places where use is prohibited such as in airplanes and hospitals. Otherwise, the electronic devices and electronic medical equipment in those places may be adversely affected. If the Auto power ON function is set, deactivate the setting, then turn off the power. For use inside medical facilities. make sure that you comply with their regulations. Engaging in any prohibited acts

such as using the FOMA terminal in an airplane is punishable by law. However, it may be possible to use a mobile phone in an airplane, such as by setting radio wave emission to off. Comply with the instructions given by the airline company.



When talking in Hands-free mode or when a ring tone is sounding, be absolutely sure to keep the FOMA terminal away from your ear. Further, when you play games or play back music with the earphone/ microphone etc. connected, adjust the sound volume to moderate volume

The excessive sound volume impairs your hearing. Further, accidents may result due to the hardness of hearing of surrounding sound.



For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully. Otherwise, the functions may adversely affect your heart.



If you are using an electronic medical device or other type of device, check with its manufacturer or vendor as to whether it will be affected by the signals from the FOMA terminal.

The FOMA terminal may adversely affect the device.



Turn off the FOMA terminal when near electronic devices using high-precision control or weak signals.

The FOMA terminal may cause the electronic devices to malfunction and have other adverse effects. * Electronic devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatically controlled devices. If you use an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical equipment, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



If the display part or camera lens is broken, be careful about broken glasses or the exposed interior of the FOMA terminal.

A plastic panel is used for the surface of the display area and camera lens, making it hard for the glass to break into pieces. However, if you touch the damaged or exposed parts by mistake, you may injure yourself.



Caution



Do not swing around the FOMA terminal by its strap, antenna or other parts.

You may hit yourself or others. possibly causing injury or other accidents.



Do not use the FOMA terminal if it has been damaged. Fire, burns, injury or electric shock

may result.



When using the motion sensor. ensure that you check around you for safety, securely take hold of your FOMA terminal, and do not swing more than necessitated.

Otherwise, injury or other accidents may result.

10



If you accidentally damage the display part and the substance inside leaks out, keep your face. hands and skin away from it.

Otherwise, you may impair your evesight or damage your skin. If this substance should get into your eyes or mouth, immediately rinse them with clean water, and then seek medical attention If it should adhere to your skin or clothing, immediately wipe it off with alcohol or similar liquid, and then rinse the affected area with soap



and water.

Before using the FOMA terminal inside a car, check with its manufacturer or dealer whether the signals from the FOMA terminal will have any adverse effects.

In some vehicle models, the signals may adversely affect the electronic devices inside the vehicle. Such cases are rare. However, if this happens, stop using the FOMA terminal immediately.



Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the FOMA terminal immediately, and then seek medical attention. See "List of materials used" on page 15 for material of each part.



Be careful not to get your finger or a strap caught in the parts when you close or open the FOMA terminal. Otherwise, injury or other accidents may result.



light place keeping a certain distance from your eyes. Otherwise, your eyesight may

become impaired.

View the display in a sufficiently

Precautions for batteries

Check the description on the label of the battery pack for the type of battery.

Description	Type
Li-ion 00	Lithium-ion battery



Danger



Do not let any metal object such as a wire come in contact with the battery terminals. Also do not carry or store the battery together with any metal objects like a necklace. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



When installing the battery in the FOMA terminal, check that it is facing the right way, and if the battery cannot be installed easily, do not force it into place.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Do not throw the battery into fire. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Don't

Do not pierce it with nails, hit it with a hammer, or step on it. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



If the battery fluid or other material gets into your eyes, do not rub them. Flush your eyes with clean water and seek medical attention immediately.

Otherwise, the loss of eyesight may result



Warning



Never use the FOMA terminal if it has damages such as deformities or scratches as a result of dropping it.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Immediately stop using the FOMA terminal and keep it away from fire if the battery leaks or emits an odor.

The leaked battery fluid may ignite, causing fire or burst.



Be careful that your pets do not bite into the battery pack. Otherwise, the battery pack may

ignite, burst or overheat and its electrolyte may leak.



Caution



Do not dispose of the exhausted battery with other waste.

Don't

The battery may catch fire or

damage the environment. After insulating the battery terminals with tape, take the unneeded battery to a handling counter such as a docomo Shop or dispose of it in accordance with local waste disposal regulations.



Do not use or attempt to charge a wet battery.



Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



If the electrolyte fluid or other material inside the battery has leaked out, do not allow it to come into contact with the skin on your face, hands or any other part of your body.

Contact may result in loss of sight or skin problems.

If you get the fluid or other material in your eves or mouth, or on skin or clothing, immediately wash the affected areas with clean water. If you get it in your eyes or mouth, immediately seek medical attention after rinsing.

Precautions for adapters and desktop holder



Warning



result

Do not use the adapter if its cord has been damaged. Fire, burns or electric shock may

Do not use the AC adapter and desktop holder in humid places such as a bathroom

Don't

Fire, burns or electric shock may result.



The DC adapter is for use only in a negative (-) grounded vehicle. Do not use it in a positive (+) grounded vehicle.

Fire, burns or electric shock may result.



If a thunderstorm is nearby, do not touch the adapter. Otherwise, you may receive an

electric shock.



Never short-circuit the charging terminal when the adapter is plugged into the power outlet or cigarette lighter socket. Also, never touch the charging terminal with fingers or other bare skin.

Fire, burns or electric shock may result.



Do not place heavy objects on the adapter cord.

Fire, burns or electric shock may result.



When plugging the AC adapter into the power outlet, or when unplugaing it from the outlet, do not allow metal straps or other metal objects to come in contact with it.

Fire, burns or electric shock may result



Do not touch the adapter cord, desktop holder, or power outlet with wet hands

hands

Fire, burns or electric shock may result.



Use the adapter at the specified V AC.

When charging the FOMA terminal overseas, use the AC adapter available for use overseas to charge the FOMA terminal. Supplying the wrong voltage to the AC adapter may result in a fire. burns or electric shocks. AC adapter: 100 V AC

DC adapter: 12/24 V DC [For negative (-) grounded vehicles only)

AC adapter available for use overseas: 100 V to 240 V AC [Connect only to household AC outlet



If a fuse of the DC adapter has blown, replace it with a specified fuse

Dο Fire, burns or electric shock may result.

For the specified fuse, refer to each instruction manual.



Keep the power plugs dust-free. Fire, burns or electric shock may result.

When plugging the AC adapter into the power outlet, plug it in Dο

securely. Fire, burns or electric shock may result



When unplugging the power plug from the power outlet or cigarette lighter socket, do not yank the adapter cord, but take hold of the adapter to unplug it.

Fire, burns or electric shock may result.



out

When you do not intend to use the adapter for a long period of time, disconnect the power plug from the power outlet or cigarette lighter power plug socket.

Fire, burns or electric shock may result



If liquids such as water get in the adapter, unplug the power cord immediately from the outlet or cigarette lighter socket.

OUIT

power plug Fire, burns or electric shock may result



Before cleaning, pull the power plug out of the outlet or cigarette lighter socket.

power plug result.

Fire, burns or electric shock may

Precautions for docomo mini UIM card



Caution



Be careful not to touch the cut surface of the docomo mini UIM card when removing it.

Otherwise, injury may result.

Notes on using near electronic medical equipment

■ The description below meets "Guidelines on the Use of Radio-communication Equipment such as Cellular Telephones - Safeguards for Electronic Medical Equipment" by the Electromagnetic Compatibility Conference Japan.



Warning



Comply with the following in hospitals or health care facilities:

- Do not carry the FOMA terminal into operating rooms, intensive care units (ICU) or coronary care units (CCU).
- Turn off the FOMA terminal in hospital wards.
- If there is any electronic medical equipment near you, turn off the FOMA terminal even when in a location such as a lobby.
- Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.
- If the Auto power ON function is set, deactivate the setting, then turn off the power.



Do

Turn off the FOMA terminal in trains during the rush hour or other crowded areas as there may be someone near you with an implanted cardiac pacemaker or implanted defibrillator.

The FOMA terminal's signals may adversely affect the operation of implanted cardiac pacemakers and implanted defibrillators.



If you use electronic medical equipment such as an implanted cardiac pacemaker or implanted defibrillator, use the FOMA terminal 22 cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

The FOMA terminal's signals may adversely affect the operation of electronic medical equipment.



Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

The FOMA terminal's signals may adversely affect the operation of electronic medical equipment.

List of materials used

Where it is used		Material/Finishing	
Panel of outside camera lens area, Panel of inside camera lens area, Side panel of inside camera lens area		PMMA/hard coating	
Start key, Power/End key, Multi key, Clear key/i-Channel key, Speed selector, Menu key, Mail key, Camera key/1Seg key, i-mode key/i-αppli key		PC/UV coating	
Outer casing	Numeric key side surface, Display side surface	PC/UV coating	
	Slide surface	ABS	
	Battery surface	ABS/UV coating	
Connector	Resin part	PA	
terminal	Metal part	Stainless steel/nickel plating + tin plating	
	Cover	PC/UV coating	
	Flexural area	Elastomer	
	Packing	Silicon rubber	
Charging terminal		Brass/nickel plating + nickel palladium plating + gold plating	
Slide surface	Сар	PET	
(upside)	Rail area	Stainless steel	
Slide surface	Pad	Polyethylene	
(downside)	Sheet	PET	

W	here it is used	Material/Finishing	
Key area, She surface	et area of numeric key	Acrylic urethane	
Call/Charging indicator		PC	
Display panel		PMMA/hard coating	
Battery comp	artment surface	Stainless steel/nickel plating	
Battery stopp	er (Battery compartment)	POM	
Battery	Resin part	PA	
terminal	Terminal area	Titanium copper/nickel plating + gold plating	
Battery pack	Resin part	PC	
	Label	PET	
	Terminal area	Glass epoxy substrate/nickel plating + gold plating	
docomo mini UIM card slot area		Glass epoxy substrate copper foil/gold plating	
docomo mini		LCP	
UIM card tray	Metal part	Stainless steel/nickel plating + gold plating	
Label (Battery compartment)		Polyester	
Back cover	Body	PC/UV coating	
	Pad	PC	
	Packing	Silicon rubber	
1Seg	Resin part	ABS	
antenna	Wire part	Nickel-titanium alloy	
	Hinge area at bottom part (Wire connection area)	Brass/nickel plating + tin-cobalt plating	
	Hinge area at bottom part (Lift up area)	Stainless steel/nickel plating + tin-cobalt plating	

Handling Precautions



General notes

■The P-03D is provided with the waterproof performance, however, do not have water entered into the inside of the FOMA terminal, or do not spray water over accessories and optional items.

The battery, adapter, desktop holder, and docomo mini UIM card are not waterproofed. Do not use them in environments, which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them against your body, they become moist due to perspiration and the internal parts may become corroded, causing malfunction.

If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible.

This may be repaired at a cost if repairs are possible.

- ■Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
 - The display may be scratched if it is rubbed hard with a dry cloth.
 Stains may result from droplets of water or dirt if they are left on the display.
 - Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.
- Occasionally clean the terminals of the equipment using a dry cotton swab, etc.
 - The soiled terminals deteriorate the connection and might cause power discontinuity or incomplete charging. Wipe the terminals with a cotton swab, etc.
- Take care not to damage the terminals when cleaning them.
- Do not place the FOMA terminal near an air conditioner outlets. Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.

- Do not apply excessive force onto the FOMA terminal and battery pack.
- If you put the FOMA terminal in a bag along with many other articles or sit with the FOMA terminal in a clothes pocket, the display, internal circuitry and the battery pack could be damaged or malfunction. Also, if an external device is left connected to the connector terminal (earphone/microphone terminal), the connector could be damaged, or malfunction.
- Do not rub or scratch the display part with metals. Doing so might cause damage to the part, resulting in trouble or malfunction.
- Carefully read each instruction manual attached to battery pack or adapter.

Notes on handling the FOMA terminal

- Avoid using in extremely high or low temperatures.

 The FOMA terminal should be used within a temperature range
 - In a FUMA terminal should be used within a temperature range of 5° C to 40° C (however, the use at 36° C or higher should be limited to temporal use in a bathroom etc.) and a humidity range of 45% to 85%.
- ■If the FOMA terminal is operated near a land-line phone, television set, radio or other devices in use, it may adversely affect the devices. Operate the FOMA terminal as far away from these devices as possible.
- It is recommended that you make separate notes of the information stored in the FOMA terminal and keep such notes in a safe place.
- We take no responsibility for any loss of the stored data items.

 Do not drop the FOMA terminal or subject it to strong impacts.

 Malfunction or damage may result.
- Do not insert an external device to the connector terminal (earphone/microphone terminal) at a slant when connecting, and do not pull it out when it is inserted. Malfunction or damage may result.
- Make sure that nothing, such as a strap, gets caught between the parts of the FOMA terminal when you close it. Otherwise, malfunction or damage may result.

- ■The FOMA terminal becomes warm during use or charging but this is not an abnormality. Use the FOMA terminal as it is.
- Do not leave the camera in places exposed to direct sunlight.

 Pixels may be discolored or burns may result.
- When using the FOMA terminal, ensure that you shut the cover for the connector terminal.
 - Dust or water might enter into the FOMA terminal, causing malfunction.
- Do not use the FOMA terminal with the back cover left removed. The battery pack might come out, or malfunction or damage may result.
- Do not apply an excessively thick sticker onto the surfaces of the keys.
- Otherwise, malfunctioning, damage or problems with operation may result.
- Do not put a label or sticker on the back of the display.

 When you open or close the FOMA terminal, the upper and lower units may stuck resulting in a malfunction or damage.
- ■While you are using the microSD card, never take it off or turn off the power of the FOMA terminal.

Data may be erased or malfunction may result.

- Do not place magnetic cards or similar objects near the FOMA terminal or between phone parts.
 - Magnetic data on cash cards, credit cards, telephone cards and floppy disks, etc. may be deleted.
- Do not bring magnetic substances close to your FOMA terminal. Problems with operation may result if items with strong magnetic fields are brought close to the FOMA terminal.

Notes on handling batteries

■Batteries have a limited life.

Though it varies depending on the usage state, you are advised to replace the battery if its usable time is extremely short even when you fully charge it. Make sure that you buy the specified battery.

- Charge the battery in a place with an appropriate ambient temperature of 5° C to 35° C.
- ■The usable time of the battery differs depending on the usage environment or its remaining life.

- Depending on how the battery pack is used, it might swell as its operating life becomes short, but this is not a problem.
 Note the following points when you store a battery pack:
- Storage in a fully charged state (the state immediately after charging is completed)
- Storage with no battery power left (the state you cannot turn on the power of the handset due to battery drain)

These may lower the battery pack's performance and shorten its operating life.

Before storing a battery, check its remaining battery level: it is recommendable, as a general rule, for the battery icon to show two bars or for its remaining battery level to be about 40%.

Notes on handling adapters and desktop holder

- Charge the battery in a place with an appropriate ambient temperature of 5° C to 35° C.
- Charge the battery where:
 - There is very little humidity, vibration, and dust.
- There are no land-line phones, television sets or radios nearby.
 While you are charging, the adapter may become warm. This is
- not a malfunction, so you can keep on using.
- ■Do not use the DC adapter for charging the battery when the car engine is not running.

The car battery could go flat.

- When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.
- Do not give a strong shock. Also, do not deform the charging terminal.

Malfunction may result.

■When housing the leg onto the desktop holder, be careful that your fingers or the adapter cable not to be caught between them.

Accidents such as injury or damage may result.

Notes on handling the docomo mini UIM card

- Do not apply more force than is necessary when installing or removing the docomo mini UIM card.
- The warranty does not cover damage caused by inserting the docomo mini UIM card into some other types of IC card reader/ writer.
- Always keep the IC portion clean.
- ■Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
- It is recommended that you make separate notes of the information stored on the docomo mini UIM card and keep such notes in a safe place.
- __We take no responsibility for any loss of the stored data items.
- For the environmental protection, bring unneeded docomo mini UIM card to a handling counter such as a docomo Shop.
- Do not damage, carelessly touch, or short-circuit the IC. Data might be lost or malfunction may result.
- ■Do not drop the docomo mini UIM card or subject it to strong impacts.
 - Malfunction may result.
- Do not bend the docomo mini UIM card or place something heavy on it.
 - Malfunction may result.
- Into the FOMA terminal, do not insert the docomo mini UIM card with a label or sticker pasted.

 Malfunction may result.

Notes on handling the FeliCa reader/writer

- ■The FeliCa reader/writer function on the FOMA terminal uses very weak radio waves which do not require to be licensed as radio stations.
- ■The FeliCa reader/writer is operated on the 13.56 MHz frequencies. When you use another reader/writer nearby, take enough distance between your FOMA terminal and the reader/writer. Further, ensure that there are no radio stations that use the same frequencies.

Caution

■ Do not use the modified FOMA terminal. Using a modified FOMA terminal infringes the Radio Law.

The FOMA terminals are granted technical regulations conformity certification as the specified radio equipment under the Radio Law and bear a "technical conformity mark "on the nameplate as evidence of conformity. Unscrewing the FOMA terminal and modifying internal components void the technical regulations conformity certification. Do not use the FOMA terminal in this state, which infringes the Radio Law.

■Take special care not to operate the FOMA terminal while driving.

Holding a mobile phone in your hand while driving is subject to a fine or other penalties.

However, this does not apply in unavoidable circumstances when, for instance, responding to someone who is sick or injured or when maintaining public order.

■Use the FeliCa reader/writer functions in Japan only.

The FeliCa reader/writer functions on the FOMA terminal have been authorized in compliance with the radio transmission standards in Japan.

You might be imposed punishment if you use them overseas.

Waterproof Performance

Your P-03D comes with the waterproof performance equivalent to IPX5*1 and IPX7*2 with the connector terminal cover and back cover firmly closed and no clearance gap and float found in them.

- #1 IPX5 means that the P-03D maintains its performance as a phone even after a water jet flow has been sprayed over the FOMA terminal from all directions under conditions where water in a volume of 12.5 liters/minute is sprayed from a distance of about 3 meters for at least 3 minutes using a water-pouring nozzle with an inside diameter of 6.3 mm.
- ※2 IPX7 means that the P-03D maintains its performance as a phone even after the phone has been gently submerged in a container of still city water to a depth of 1 meter at room temperature, and left in place for about 30 minutes, and then removed from the water.
- (Note) This does not mean that the waterproof performance is guaranteed in all given conditions of actual use. Read this manual thoroughly before use to prevent invasion of water or foreign materials and then to enable you to safely use your FOMA terminal.

You can operate the FOMA terminal in the rain, in your kitchen, in the bathroom, and also around poolside.

In the Rain

- You can talk on the phone by holding the phone in the rain with your
 wet hand without umbrella. (Less than 20 mm/hour of rainfall, and
 your feet get wet by drops of rain rebounded off the ground)
 *When your hands are wet or water drops remain on the FOMA
- **Winen your nands are wet or water drops remain on the FOMA terminal, do not attach/remove the back cover, nor open/close the connector terminal cover

Wash

- When the FOMA terminal gets dirty, you can slowly swing and wash it in a bowl filled with fresh water or tap water at an ambient temperature, or wash it by hand while running a slightly-weak water flow from a faucet.
- Wash your FOMA terminal with the back cover firmly attached and while you are pushing the cover of the connector terminal down.



Soap/detergent

- · Do not use brushes, sponges, soaps, or detergents for washing.
- After rinsing off the FOMA terminal in water, wipe its surfaces thoroughly using a dry cloth, drain off the water (see page 22), and allow the FOMA terminal to dry out naturally.

On Leisure

- Do not soak or drop your FOMA terminal into a pool or the sea nor operate it in water.
- If pool water or seawater splash the FOMA terminal, wash the terminal by following the prescribed method (see page 19).



Sea/pool

In the Bathroom

- Do not soak or drop your FOMA terminal into a bathtub, nor use it in water.
- Do not soak the FOMA terminal into spa or water containing soap detergent or bath additive.
- Do not directly expose to the strong water flows (such as water jets from a faucet or shower head strong enough to feel pain on the skin) that exceed the standard (see page 19).



Spa/bath salts

- Avoid using the FOMA terminal for a long time in the bathroom.
- If you take your FOMA terminal from a cold place to a warm bathroom, condensation might result because of sudden change in ambient temperature. Warm it up until ambient temperature is restored, and then take it to the bathroom.

In the Kitchen

- Do not spray liquids other than fresh water or tap water at room temperature onto the FOMA terminal or soak the terminal in them.
- Do not spray hot water or cold water onto the FOMA terminal or soak it in them.

Important Information before Use

- Before using the FOMA terminal, make sure that you attach the back cover firmly after tightly closing the connector terminal cover. If there is any small particles (fine fibers, hair or grains of sand) between the covers and the phone, water could find its way inside the phone.
 When attaching the back cover after closing the connector terminal
- cover, ensure that there is no particles or dirt on or around these parts (especially the packing).

 Ensure that the connector terminal cover and back cover are closed tightly and that none of these covers are askew. If the covers are not closed tightly, water could find its way inside the FOMA terminal.
- To keep the waterproof performance, you need to replace parts without fail once two years regardless whether any abnormality with the FOMA terminal is found or not. You are charged for replacement of parts. Take your FOMA terminal to a repair counter specified by DOCOMO.

Opening/Closing the Connector Terminal Cover

- Opening the connector terminal cover
- Hook your finger over the groove, pull out the cover to direction A, and open it as direction B.



- ■Closing the connector terminal cover
- ① Align the connector terminal cover in parallel with the FOMA terminal, and while holding its base part firmly, push it into place.
- ② Ensure that no float is found with the connector terminal cover as a whole



Removing/Attaching the Back Cover


Removing the back cover

- ① Using the " ____ " part of the FOMA terminal, lift up in the direction of the arrow to remove the back cover.
 - Removing the back cover might produce a sound.
 - The back cover should be firmly closed for maintaining waterproofness. Opening the cover forcibly may injure your nails or fingers.



■Attaching the back cover

• Fit the claws at the upper side of the back cover to the FOMA terminal securely (A), and fit the claws at the left, right and bottom sides of the back cover into the corresponding indentations, and push the cover into place (B).

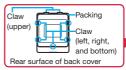

②Push the nine O marks printed on the sticker of the back cover, and ensure that no float is found anywhere on the cover.



③ Confirm there is no gap between the back cover and the FOMA terminal.

Caution

■About FOMA terminal

- Do not wash the FOMA terminal with a washing machine or ultrasonic cleaner.
- · Never charge the battery when it gets wet.
- Do not leave the FOMA terminal with drops of water remained on.
 The connector terminal might be short-circuited.
 - Water might enter into the Inside of the FOMA terminal through the keys or slide part. In cold districts, drops of water on the FOMA terminal might freeze, resulting in malfunction.
- If the FOMA terminal gets wet, keep the back cover attached and the connector terminal cover closed, drain off the water (see page 22), and immediately wipe off the moisture remaining on the FOMA terminal with a clean dry cloth.
- Do not drop the FOMA terminal nor give a shock to it.
 The deterioration of the waterproof performance might result depending on the damage.
- Do not soak the FOMA terminal in hot water, use in a sauna, nor expose to hot wind currents such as those of a dryer.
- . The FOMA terminal does not float on water.
- Do not directly expose to the strong water flows that exceed the standard (see page 19) or submerge the mobile phone in water.
- Do not directly place the FOMA terminal on sandy beaches.
 Sands enter into the holes on the microphone, earpiece, or speakers may reduce the volume.
 - If you operate the FOMA terminal with water drops or sands adhered to, sound might be deteriorated.
 - Even the slightest sands entered from the connector terminal cover or back cover could cause water to enter the inside of the FOMA terminal.

■About the connector terminal cover and back cover

- Do not open or close them with gloves put on hands.
- Fine dirt might adhere to the contact surface of the packing.
- Be careful that no fibers adhere to the packing when you try to wipe off moisture with a clean dry cloth.

- Do not peel the packing off. Also do not insert something pointed at the head into the clearance of the connector terminal cover or back cover.
 - The packing is damaged, resulting in water to enter into the FOMA terminal.
- If the packing for the connector terminal cover or back cover is damaged or deformed, replace them at a repair counter specified by DOCOMO
- If the back cover is broken, replace it with new one.
- Otherwise liquid such as water enters into the inside of the FOMA terminal through broken portions, and an electric shock or corrosion of the battery pack could result.
- When the FOMA terminal gets wet with the connector terminal cover or back cover left open, water enters inside, and an electric shock or malfunction could be caused. Do not use it as is, but turn off the power, remove the battery pack, and then take it to a repair counter specified by DOCOMO.

■About microphone, earpiece, and speakers

- Do not thrust something pointed at the head into the holes on microphone, earpiece, or speakers.
- Do not leave water drops adhered to them. It might happen that communications are disabled.

Others

- Accessories and optional items are not waterproofed. When you
 watch 1Seg programs with your FOMA terminal attached to the
 desktop holder provided, do not operate it in a bathroom, shower
 room, kitchen, or lavatory where water is used, even if you do not
 connect to AC adapter.
- It is not that the waterproof performance is guaranteed in all given conditions of actual use. If the damage is found to be caused by your mishandling of the FOMA terminal as a result of our inspection, the quarantee is not supported.

Draining Water

- If you operate the FOMA terminal with water drops left adhered to, the volume level from the speakers might be decreased or sound quality vary.
- Moisture may have entered inside through the clearance gap of the keys or slide part.
- Follow the procedures described below to wipe moisture off the FOMA terminal:
- $\ensuremath{\ensuremath{\mathbb{O}}}$ Wipe completely moisture off the surface of the FOMA terminal with a clean dry cloth.







<Draining from speaker>



- ③ Lightly push the FOMA terminal against a clean dry cloth, and wipe moisture off the clearance gap of the microphone, earpiece, speaker, keys, or slide part.
 - Do not directly wipe moisture out of joint gap using a cotton swab, etc.





- 4 Fully drain moisture and then operate the FOMA terminal.
- Even when you follow the procedures for draining water as described above, moisture might remain in the FOMA terminal. Therefore, use the FOMA terminal after allowing it to dry out naturally. Also, take care to keep any objects you do not want to get wet away from the FOMA terminal since water may leak out from the FOMA terminal.

When Charging Battery

Accessories and optional items are not waterproofed. Check the following before and after charging:

- Never charge the battery with the FOMA terminal left wet. If the FOMA terminal gets wet, drain and wipe off moisture with a clean dry cloth and then charge.
- When you charge the battery with the connector terminal cover open, firmly close it after charging. To prevent water from entering inside through the connector terminal, you are advised to use the desktop holder provided for charging.
- Do not touch the AC adapter and desktop holder with your hands wet.
- Do not use the AC adapter and desktop holder in a bathroom, shower room, kitchen, and lavatory where water is used.

Before Using



Attaching docomo mini UIM card/ Battery Pack

To insert the docomo mini UIM card/battery pack, remove the back cover and insert. (See page 20)

Insert the docomo mini UIM card.

- Pulling the tab of the tray with your finger, slowly pull the tray straight out until it stops.
- The tray cannot be removed, so be sure not to pull the tray beyond the position at which it stops. Doing so might damage the tray or tab.
- With the gold IC side of the docomo mini UIM card facing up, check that the cut is facing left, and place the card in the tray.
- Push the docomo mini UIM card until it stops.
- Push the docomo mini UIM card inward firmly until it is in place.







When you remove the docomo mini UIM card

Pull out the tray, and then slide the docomo mini UIM card slowly to pull it out.

 After pulling out the tray until about half of the docomo mini UIM card is visible, pull out the docomo mini UIM card by sliding it out.

2 Attach the battery pack.

With the arrow mark on the battery pack facing up, insert the side of the battery pack that is in the direction of the arrow inside the FOMA



terminal, and then push in the A direction while pushing down in the B direction.

When you remove the battery pack

Lift the battery up using the projection of it.

About docomo mini UIM card


The docomo mini UIM card is an IC card that holds your information such as phone numbers. You cannot use the FOMA terminal for communications such as voice/videophone calls, i-mode, or sending/receiving mail, unless the docomo mini UIM card is inserted.



- Ensure that you turn off, close, and take hold of the FOMA terminal when you install or remove the docomo mini UIM card or battery pack.
- You can use only a docomo mini UIM card with this FOMA terminal. If you have a docomo UIM card or FOMA card, replace it at a handling counter of a docomo Shop.

Charging


Charging Using Desktop Holder

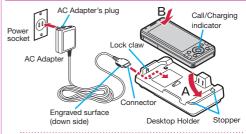

- With the engraved surface of the connector of the AC Adapter (option) face down, plug the connector straight into the connector terminal of the desktop holder provided.
- Pull out the AC Adapter's plug, and plug it into a household power socket of 100 V AC.

- 3 Put the bottom of the FOMA terminal into the stopper of the desktop holder (A) to fit the head to the lock claw, and then depress the FOMA terminal until it clicks (B).
 - Be careful that a commercial strap is not caught between the FOMA terminal and desktop holder.
- 4 When charging is completed, hold the desktop holder with fingers and lift up the head of FOMA terminal to remove.

Charging Using AC Adapter

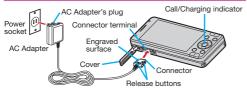

- Open the cover of the connector terminal. (See page 20)
 - To charge the battery, place the cover of the connector terminal as illustrated. When you close or open the FOMA terminal with the cover of the connector terminal opened, be careful not to catch the cover of the connector terminal between the parts of the FOMA terminal.
- Insert the connector horizontally with the engraved surface facing up until it clicks.
- 3 Pull out the AC Adapter's plug, and plug it into a household power socket of 100 V AC.
- 4 When charging is completed, pull out the connector from the connector terminal while pressing the release buttons.
 - For detaching, pull out the connector horizontally while pressing the release buttons. Malfunction could result if you try to pull it forcibly.
 - When charging starts, the Call/Charging indicator lights in red. When charging is completed, it turns off.

Turning Power ON



Press and hold (for at least one second.

After the notes of waterproof and Wake-up display are displayed, the Stand-by display appears.

To turn off the power

- Press and hold for at least two seconds Select "YES".
- Depending on the display in operation, the confirmation display may not appear.

The Initial Setting display appears when any of Initial Setting items have not been set. In that case, follow on-screen instructions.



Configuring Initial Setting

The Initial Setting display appears when you turn on the power for the first time.

Set the date and time.

You can set the date and time. You can also correct the date and time automatically.

Set your Terminal Security Code.

You can set your Terminal Security Code required for setting functions.

- "0000" is set at purchase.
- 3 Set the size of fonts.

You can set the size of fonts on the display.

4 Set Location Request Set.

You can select whether to notify your current location for when a GPS location provision request arrives.

5 Set Keypad Sound.

You can select whether to play a keypad sound.

6 Set Speed Selector Sound.

You can set the sound for when you turn the speed selector.


Notifying Your Caller ID on the Other Party's Phone

- MENU TEL function Dial/Receive setting Caller ID notification
- Select "Activate/Deactivate".
- 3 Select "ON".
 - If you hear the guidance requesting your caller ID, either set the Caller ID notification or add "186" first and then try calling again.

Checking Your Own Phone Number

You can check your own phone number (Own number), the model name, etc.

- MENU Profile
 - . From the display on the right, press (Fd t) to store your name, mail address etc.
 - · Refer to "Mobile Phone User's Guide [i-model FOMA version" for how to check or change your mail address.

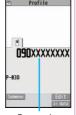

Own number


Switching to English Display

- MENU) 本体設定 (Setting) ▶文字表示/入力 (Text display/input) ▶Select language
- Select "English".
 - The "バイリンガル (Select language)" setting is saved on the docomo mini UIM card.


Screen Explanation



Viewing Display/Icon

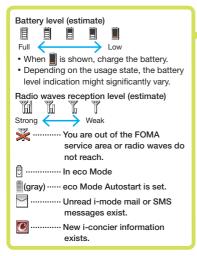



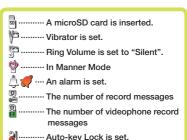

Here are given descriptions of the main icons. For descriptions of other icons appearing on the display, you can get them following the procedures as shown below:









Using Motion Control

Motion Control enables to switch the display direction automatically by tilting the FOMA terminal.

- The major functions that support Motion Control are listed below:
 - · Picture Album*1

· Movie Plaver*2

Music&Video Channel*2

· i-motion Player*2
· Full Browser*2

· 1Sea*2

- · Video Player*2
- ※1 When the mobile phone is tilted by 90 degrees to the left or right or when it is rotated by 180 degrees, the top and the bottom of the display follow the orientation of the mobile phone.
- ※2 When the mobile phone is tilted by 90 degrees to the left, the image appears horizontally.
- Setting Other setting
 Motion control setting
- 2 Select "All ON".
 - If you tilt the FOMA terminal while a confirmation or submenu pop-up display appears, the pop-up display may be cleared.

Proceed to respective functions from icons, etc.


You can proceed to respective functions by selecting "Status icon", "Notification icon", "Stand-by shortcut", or date and time.



Navigation Displays and Key Operations

Key operations you can perform while you are operating a function are shown at the bottom of the display. (Navigation displays)

Key assignments and basic navigation displays

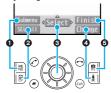

0	Operations you can perform with the key.	Submenu Exit
0	Operations you can perform with the key.	SEL all Page 🛦
8	Operations you can perform with the key.	Select Set
9	Directions in which you can scroll and select items with the key.	
4	Operations you can perform with the key.	Change Page ▼
6	Operations you can perform with the key.	Finish Send



Operating Speed Selector

- . Moves the cursor or highlighted display up. (Hold down to scroll continuously.)
- . Scrolls the page up.

- · Moves the cursor to the right.
- · Scrolls forward page by page. (Hold down to scroll continuously.)



- · Fixes the operation.
- . Moves the cursor to the left
- · Scrolls back page by page. (Hold down to scroll continuously.)
- · Moves the cursor or highlighted display down. (Hold down to scroll continuously.)
- · Scrolls the page down.

Operating by Turning Speed Selector

In some displays, you can turn the speed selector to select items the same way as you press , and can move the cursor.

Turning direction

Operation example







A presentation of a new

Selecting pictograms, etc.





Moving the cursor


 The turning operation may not be valid depending on the function.

Menu Operation

Main Menu

Press From the Stand-by display to show Main Menu.

 In this manual, the descriptions of operating procedures are given mainly starting with the Stand-by display.

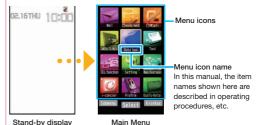

Use to highlight a menu icon and press ()(Select). Functions categorized by the menu items are displayed. Repeat selecting items to call up the target function.

- You can press (LR) to return to the previous display. When you press (¬) from any display, the Stand-by display returns.
- See "Function List" for the menu items of each function. (See page 103)

Simple Menu

Simple Menu is a menu focusing on only basic functions for easy operation. By setting " \mathcal{YIJJJJ} —(Simple menu)" using the Kisekae tool, you can show the Simple Menu by pressing (web) from the Stand-by display.

 Some operating procedures or items which appear on the display in Simple Menu differ from the ones described in this manual.

Submenu

When "Submenu" is displayed at the lower left of the display, you can use functions such as Store, Edit, and Delete by pressing [MENU].

<Example> Display the submenu of a Phonebook entry



 The "
 "is displayed when there are further items under a particular menu item.

Functions Starting with Simple Operation

Depending on the function, you can start it either by selecting a menu item or by key operation from the Stand-by display. The following are the functions you can start by pressing keys for at least one second.


Key	Performance
•	Sets/Releases Keypad Lock.
0	Shows the Registration display for Phonebook entries.
0	Starts i-widget.
	Starts 1Seg.
	Executes Check mail/message.
= \(\alpha \)	Shows the Software list.
\bigcirc	Executes Start by voice.**
3	Sets/Releases IC Card Lock.
5	Sets/Releases eco Mode.
7	Shows the Font setting display.
8	Switches View Blind on/off.
*	Activates/Deactivates Public mode (Drive mode).
#	Activates/Deactivates Manner Mode.

*This function is available in Japanese mode only.

docomo Palette UI

The docomo Palette UI is a user interface that allows you to easily access a variety of functions and services from the center of the Stand-by display. You can freely customize this interface.

The MyFACE display appears to the left and right of the Stand-by display, and the Shortcut display appears below.

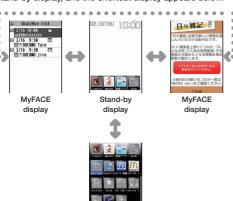

Shortcut display

Using MyFACE

MyFACE is a convenient function that allows you to download MyFACE content from a site and register the content to the left or right of the Stand-by display. You can then immediately display the content by pressing () from the Stand-by display.

- 1 Press (O
- Operate MyFACE content.

Downloading MvFACE Content

You can download MyFACE content from a site and register the content to the left or right of the Stand-by display. You can register up to 12 items, including the pre-installed MyFACE content.

- Display a site from which content can be downloaded
 Select a MvFACE content.
- 2. Use to select a location (Select)

 ➤ YES/NO
- Depending on the MyFACE content, some information might be updated automatically, and communication is performed automatically at most once per hour. Packet communication fees are charged during these updates. (Packet communication fees are not charged for updates to the pre-installed MyFACE content.)
- If you are using international roaming or have changed the i-mode connection destination settings, packet communication fees are charged even for updates to the pre-installed MyFACE content.
- If some files could not be acquired during an update of MyFACE content, all files are re-acquired during the next update, resulting in packet communication fees being charged again.

Using Shortcut

A list of shortcuts appears at the bottom of the Stand-by display. By creating shortcuts to, for example, functions you use frequently, you can use certain functions immediately.

- Press (
 - Use to highlight a Stand-by shortcut and press (Sclect). You can start the shortcut.

 Stand-by shortcut



2 Press (C



3 Use 🔘 to highlight a shortcut and press



Creating Shortcuts

- 1. On the display to which you want to create a shortcut, press (Submenu) ➤ Create shortcut
- If you have created a large number of shortcuts, the shortcut images might be replaced by alternate images.

Using Guide

You can search and check the operating methods of the functions you want to know and use. You can execute some functions from "使いかたガイド (Guide)".

This function is available in Japanese mode only.



Enter a keyword or select a way of searching.

Highlight each item and press (\(\lambda \). The detailed descriptions are displayed.



Character Entry



You can enter characters on the Registration display for Phonebook entries or the Composition display for mail messages, etc.

Select a input mode.

Press (Chrct) to select one of the input modes.



Enter characters.

By repeatedly pressing a numeric key, you can enter other characters assigned to the key.

<Example> When you press 2

Kanji/Hiragana input mode

Katakana input mode

Alphabet input mode (Uppercase) $"A \rightarrow B \rightarrow C \rightarrow a \rightarrow b \rightarrow c \rightarrow 2"$

Alphabet input mode (Lowercase)

"a→b→c→A→B→C→2" Numeral input mode

"2"

3



Convert/fix characters.

- Press o to specify the area to be converted.
- 2. Press to move the cursor onto the candidate list.
- 3. Press to select a conversion candidate.
- 4. Press () to fix the character.

Other key operations

- (SB · SM): Enter symbols, smileys, or URLs.
 - (RIFIC): Enter pictograms, Deco-mail pictograms, or Deco-mail pictures.
- Enter a line feed.

(You can switch between uppercase and lowercase or enter "" and "" by pressing this key after you enter a character.)

- (for at least one second): Undo the fixed/erased characters.
- CLR): Clear text.





シ ただのかし « 3 Use (○) to move the cursor to the right of "O".



2 Enter hiragana characters in Kanji/Hiragana input mode.


 $t \in \mathsf{Press}(4)$ once and (0) once.

 $t\tilde{c}$ → Press 4 once and * once.


 $\mathcal{O} \to \mathsf{Press}(5)$ five times.

 $h \to \text{Press} (2)$ once.

U → Press 3 twice.

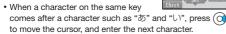

 You can press to select one of the prediction conversion candidates while you are entering the characters.

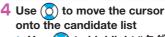





5 Use ○ to move the cursor onto the candidate list > Use ○ to highlight "菓子" and press ○ (Select).

Sound/Screen Setting



Changing Ring Tone

<Example> Changing the ring tone for incoming voice calls

- Setting ➤ Sound/Vib./Manner
 ➤ Select ring tone
- 2 Select "Phone".
 - Press (Play) to check the content actually played back or displayed.
 - To set a ring tone for mail messages, videophone calls, and so on, select the corresponding item.
- 3 Select "Select ring tone".
- 4 Select a type of ring tone.
- 5 Select a folder ➤ Select a ring tone.

Adjusting Ring Volume

<Example> Adjusting the ring volume for incoming voice calls

- Setting ➤ Sound/Vib./Manner
 ► Ring volume
- Select "Phone".
 - To adjust ring volume for mail messages, videophone calls, and so on, select the corresponding item.
- 3 Use 🔘 to adjust the volume.

Setting Vibrator

You can set the vibrator to notify you of incoming calls. <Example> Setting the vibrator for incoming voice calls

- Setting Sound/Vib./Manner
 Vibrator setting
- 2 Select "Phone".
 - To set a vibrator for mail messages, videophone calls, and so on, select the corresponding item.
- 3 Select a pattern.

Using Manner Mode

With a single key press, you can set a tone from the FOMA terminal such as a ring tone, keypad sound, and alarm sound silent. When you start Manner Mode, not a sound but the vibration notifies you of incoming calls or messages.



Press and hold (#) for at least one second.



To release

Perform the same operation.

Using Original

You can use "Original" to tailor your FOMA terminal to how it works while Manner Mode is ON.

- Setting ➤ Sound/Vib./Manner
 Manner mode setting ➤ Manner mode set ➤ Original
- 2. Set each item.
 3. Press (Finish).
- Even in Manner Mode, the shutter tone and focus lock tone of the camera, and the start/end tones of the voice recorder sound.

Setting Keypad Sound OFF

You can silence a Keypad sound for when you press a key.

- Setting Sound/Vib./Manner
 Other sound setting Keypad sound
- 2 Select "OFF".

Changing Display Settings

Changing Stand-by display

- Setting Screen/Display
 Stand-by display
- Select "Stand-by display".
- 3 Select a type of image.
- 4 Select a folder ➤ Select an image.
 - You may be able to select a display format depending on the image.

Changing Display Brightness

You can adjust the brightness of the display. You can also set to automatically adjust the display brightness according to the ambient light.

- Setting ➤ Backlight/Illum.Backlight
- 2 Select "Brightness" ➤ Select "ON".
- 3 Press (to adjust the brightness.

Lighting off/Power Saver Mode

You can set the display brightness to OFF. You can also set the time that elapses before Power Saver Mode activates. Power Saver Mode activates when the time set for "Time to saver" has elapsed without any operations on the FOMA terminal. The display turns off to reduce battery consumption.

- 1. (MENU) ► Setting ► Backlight/Illum. ► Backlight
- 2. Select "Lighting".
 - "Time to saver" setting for the FOMA terminal when closed can be set from "When slide closed"
- Select "OFF" ► Enter the time (seconds) for "Time to saver".

Making Display Hard to See from People Around

You can set "View blind" to make it harder for the people around you to see the display from oblique angles.



Press and hold 8 for at least one second.



To release

Perform the same operation.

Changing Font Size

<Example> Changing the size of all the characters to "X-large

- Press and hold for at least one second.
- Select "Character size".
- 3 Select "X-large".
 - Select "Separate setting" when you want to set the character size of each function separately.

Changing Machi-chara Setting

You can change the Machi-chara image which appears to inform you of missed calls, new mail messages, new i-concier information and others.

- Setting ➤ Screen/Display
 Machi-chara setting
- 2 Select "Display setting" ➤ Select "ON"
 Select a folder.
- 3 Highlight a Machi-chara image and press

Using Kisekae Tool

You can set the ring tone, Stand-by display, menu icons and others at a time.

- Setting ➤ Screen/Display
 ► Kisekae Tool setting
- Select a folder.
- 3 Highlight a Kisekae Tool file and press (Set all).
- 4 Select "YES".
 - Some menu configurations change according to the usage frequency depending on the type of the menu.


Reset Menu Icons to Default

- 1. MENU MENU (Submenu) Reset menu screen
- 2. Enter your Terminal Security Code ➤ Select "YES".

Changing Illumination When Receiving

<Example> Changing call Illumination for voice calls

- ► Setting ► Backlight/Illum.
 - ►Illumination setting
- 2 Select "Illumination in call"
 - ► Select "Illumination".
- 3 Select "Phone".
 - To set illumination such as for mail messages and videophone calls, select the corresponding menu
- 4 Select an illumination.
 - If you select "Gradation", Color 1 to 12 light up in sequence.

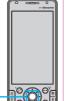

The indicator lights in the set color when a call comes in.

Switching to the eco Mode

With a single key press, you can set the eco Mode that reduces battery consumption. Changing to eco Mode affects items specified in "eco mode setting", e.g. dimming the display.



Press and hold (5) for at least one second.



To release
Perform the same operation.

eco Mode Setting

You can set the items for reducing battery consumption for when the eco Mode activates.

- Setting ► Battery ► eco mode setting
- Put a check mark for items to be set.
- 3 Press (Finish).

eco Mode Autostart

This setting ensures that the mode will be automatically set to the eco Mode when the remaining battery level has dropped to the set level or less.

"Battery level" of "eco mode autostart" is set to "40%" in default.

Setting Battery eco mode autostart

2 Select "ON".

3 Set each item ► ([Finish])

When the "eco mode autostart" is set to "ON", "[(gray)" will be displayed. When the mobile phone automatically switches to eco Mode, "["]" will be displayed and "["]" will be displayed on the desktop.



Lock/Security



Various Security Codes

■Caution on security codes

- You should avoid using the numbers for security codes such as denoting your birth date, part of your phone number, local address number, room number, "1111" or "1234" that is easily decoded by a third party. Also make sure that you take a note of the security codes you have selected just in case you forget them.
- Take care not to let others know your security codes.
 Even if your security codes are known and used by a third party, we at DOCOMO take no responsibility in any event for the resultant loss.
- If you do not remember your respective security codes, you need to bring an identification card such as your driver's license, the FOMA terminal and docomo mini UIM card to the handling counter of a docomo Shop.
 For details, contact "docomo Information Center" on the back page of this manual.
- The PIN unblocking key (PUK) is described on the application form (your copy) that is handed over to you at a docomo Shop at the time of contract. If your contract has been made at a shop other than a docomo Shop, you need to bring an identification card such as your driver's license, and the docomo mini UIM card to the handling counter of a docomo Shop, or consult "docomo Information Center" on the back page of this manual.

Basic Operation

This is a four-to-eight digit number for deleting all files or changing settings. When the display for entering the Terminal Security Code appears, enter your four-to-eight digit code and press () (Set).

To change

1. MENU ➤ Setting ➤ Lock/Security ➤ Change security code

Network Security Code Determining at the time of contract

This is a four-digit number required for your identification when you place an order at a docomo Shop, docomo Information Center, or "お客様サポート (User support)" site, or when you use respective network services.

• "お客様サポート (User support)" is available in Japanese only.

To change

From i-mode, you can change your Network Security Code by selecting " § Menu"→"お客様サポート (User support)"→ "各種設定(確認・変更・利用) [Respective settings (Confirmation/ Change/Use)]"→"ネットワーク暗証番号変更 (Change Network Security Code)".

i-mode Password "0000" at the time of your contract

This is a four-digit number required for registering/deleting My Menu, applying for/canceling Message Services or i-mode pay services, etc.

To change

From i-mode, you can change your i-mode password by selecting "

Menu"→"English"→"Options"

→ "Change i-mode Password".

For the docomo mini UIM card, you can set two security codes, namely the PIN1 code and PIN2 code.

The PIN1 code is a four-to-eight digit number for checking the user each time the docomo mini UIM card is inserted into the FOMA terminal or each time the FOMA terminal is turned on, to prevent the unauthorized use by a third party.

The PIN2 code is a four-to-eight digit number for executing Reset Total Charge, using the user certificate or applying for the issue of it, etc.

When the PIN1 Code/PIN2 Code entry display appears, enter your four-to-eight digit PIN1 code/PIN2 code and press (Set).

 If you enter a wrong PIN1 code/PIN2 code three times in succession, the FOMA terminal locks and cannot be used.

To change

- 1. MENU ► Setting ► Lock/Security ► UIM setting
- 2. Enter your Terminal Security Code
 - ► Select "Change PIN1 code" or "Change PIN2 code".
- You need to set "PIN1 code entry set" to "ON" to change the PIN1 code in advance.

PIN Unblocking Key (PUK)

The PIN unblocking key (PUK) is the eight-digit number for releasing the blocked PIN1 code and PIN2 code.

You cannot change this code by yourself.

 If you enter a wrong PIN unblocking key (PUK) 10 times in succession, the docomo mini UIM card is locked. In that case contact one of docomo Shops.

PIN1 Code Entry Set

You can set the FOMA terminal not to work unless you enter your PIN1 code when turning on the power.

- Setting Lock/Security
 UIM setting
- Enter your Terminal Security CodeSelect "PIN1 code entry set".
- 3 Select "ON" ► Enter the PIN1 code.

To release Select "OFF".

Various Lock Functions

A variety of lock functions is installed on your FOMA terminal such as preventing illegal use of a third party, or protecting your private information.

Dial Lock You can set your FOMA terminal not to be			
Diai Lock	-		
	used by a third party.		
	You can do no operations other than		
	answering calls and turning on/off the power.		
	1. MENU ➤ Setting ➤ Lock/Security ➤ Lock		
	Enter your Terminal Security Code		
	▶ Dial lock		
	To release, enter your Terminal Security Code		
	from the Stand-by display.		
IC Card	You can lock the IC card function.		
Lock	You cannot use the Osaifu-Keitai, ToruCa		
	download, iC Communication, etc.		
	1. Press and hold 3 for at least one second.		
	To release, perform the same operation and		
	enter your Terminal Security Code.		

Omakase When you have lost your FOMA terminal or Lock in other cases, you can lock your personal data (such as Phonebook entries) and the IC card function of Osaifu-Keitai by contacting DOCOMO. For details on Omakase Lock refer to "User's Guide [Basic Usage]". ■Setting/Releasing Omakase Lock 0120-524-360 (In Japanese only) Business hours: 24 hours (open all year round) *Unavailable from some IP phones. . You can set/release also from the Mv docomo site via your personal computer or other devices, (In Japanese only) Original You can lock functions which utilize personal Lock information such as Phonebook entries or schedule events. 1. MENU ► Setting ► Lock/Security ► Lock Enter your Terminal Security Code Select a level for Original Lock. · To release, select "OFF". Keypad Key operations are disabled. Lock 1. Press and hold () for at least one second. • To release, perform the same operation or open the FOMA terminal.

Setting Auto-key Lock

Keypad Lock can be activated when you close the FOMA terminal or the specified time elapses without any operations.

- Setting Lock/Security
 Keypad lock
- Enter yourTerminal Security Code
 Auto-key lock
- 3 Select "Closed lock set." or "Unoperated lock set." ➤ Select an item.
- "Closed lock set." is set to "ON" in default. When the FOMA terminal is closed and keypad locks, Power Saver Mode activates and the display disappears. Also, when Power Saver Mode activates with the FOMA terminal closed, display disappears and keypad locks. Pressing will turn the display back on.

To prevent keypad from locking such as when the FOMA terminal is closed, follow the steps listed above and set "Closed lock set." to "OFF".

Setting Incoming Call Restriction

You can set whether to receive (accept) or not to receive (reject) incoming calls depending on the reason, such as from the parties which has not been registered in Phonebook or incoming calls from any parties who do not notify you of their phone numbers. There are three reasons for no caller ID; "User unset", "Payphone", and "Unknown".

- Setting Lock/Security
 Call rejection set.
- Enter your Terminal Security CodeSelect an item to be set.
- 3 Select "Accept" or "Reject".
 - If you select "Accept" for "User unset", "Payphone" or "Unknown", you can set a ring tone or call receiving display.

Resetting to Default

Resetting the Function Settings to Default

- The items indicated by might include the functions which do not return to their default settings or state.
- Setting Other setting
 Reset settings
- 2 Enter your Terminal Security Code ▶ Select "YES".

Deleting Stored Data at Once

You can delete all the stored files together and each function setting will return to the default.

- Setting Other setting Initialize
- ≥ Enter your Terminal Security Code ► Select "YES".
- 3 Select "YES".

Call Telephone



Making a Call/Videophone Call

Making a Call by Entering the Phone Number

- Enter a phone number starting with a city code.
- 2 Press to make a call.
 - Vphone) to make a videophone call.
- to end the call.

You can put a call on hold by pressing CLR during a call.

You can release held call by pressing (CLR).



Making a Call from Phonebook

<Example> Search a Phonebook entry by the name stored in Phonebook

Press



Select "Search name".

Enter the reading of the name from the first character.

- · You can use another search method such as "Search phone No.", and "Search e-mail".
- 3 Enter a part of the name ► (○)



- If you enter nothing and press (); then you can display all Phonebook entries
- 4 Select a Phonebook entry ►(

 (**)



When an entry contains multiple phone numbers, press to select a desired phone number.

• Press (Vphone) to make a videophone call.



Making a Call with Dial/Received List

Press (

2 Select a call record ► €

Press (Vphone) to make a videophone call.

Using Koe-no-Takuhaibin

This service keeps voice message on behalf of you.

• For details, refer to the DOCOMO website.

Enter a phone number.

 Koe-no-Takuhaibin message can be sent from a Phonebook entry or Dial/Received List as well.

2 (Koetaku)

Operate following the voice guidance.

Playing Back Messages

When Koe-no-Takuhaibin message has been received, an SMS message is given as notice of recording. Select "再生 (Play)" on the detailed display of the SMS message to play back the received message.

 You can also play back messages by following the operation below:

"MENU TEL function Koe-no-Takuhaibin Message confirm(voice)".

Making an International Call

You can use WORLD CALL to make an international call from Japan.

- Contact "docomo Information Center" on the back page of this manual for inquiries about details on WORLD CALL.
- When using international carriers other than DOCOMO, contact them.
- 1 (o)(for at least one second)
 - Enter numbers in order of country code
 - →area code (city code)
 - →destination phone number.

 - When the area code (city code) begins with "0", enter the area code without "0". However, include "0" when making a call to some countries or regions such as Italy.
- 2 Press 🕜
 - Press (Vphone) to make a videophone call.
- 3 Select "Dial".
 - DOCOMO videophones conform to "3G-324M standardized by the international standard 3GPP". You cannot connect to the videophone using a different format.

Receiving a Call/Videophone Call

A call comes in.

The ring tone sounds and the Call/Charging indicator lights.

2 Press (r) to answer the call.

When a videophone call comes in

You can receive the videophone call the same way as with a voice call.

The substitute image is sent to the other party.

3 Press (to end the call.

Adjusting Earpiece Volume

Press to adjust the earpiece volume during a call.

When You cannot Answer a Call

Activate Record Message

By activating Record Message, you can record a caller's voice/video message when you cannot answer the call.

- When a call comes in, an answer message is played back after the ring time elapses. Then, the caller's voice is recorded with audio or video.
- TEL function
 - ► Rec. msg./Voice memo
 - ► Record message setting
- 2 Select "ON" ➤ Select "Phone".
 - To activate Record Message for videophone calls, select "Videophone".
- 3 Select an answer message
 - ► Enter a ring time (seconds).

When a voice or video message is recorded as Record Message, the notification icon like "" or "" or "" appears in the Stand-by display.

Select "" or "" icon to play either the voice or video message.



Using Public Mode (Drive Mode)

Once you activate Public mode (Drive mode), the guidance is played back telling that you cannot answer the call as you are currently driving or in a public place (such as a train, bus or movie theater) where you should refrain from speaking on the phone. Then, the call is disconnected automatically.



Press and hold $(\frac{\times}{})$ for at least one second.



To deactivate

Perform the same operation.



Using Public Mode (Power Off)

Once you activate Public mode (Power off), when the FOMA terminal's power is OFF, the guidance is played back telling that you cannot answer the call as you are currently in a public place (such as a hospital, airplane or near a priority seat on a train) where you are required to turn off the power of the FOMA terminal. Then, the call is disconnected automatically.

- 1 Enter (*)(2)(5)(2)(5)(1)
- 2 Press 🕜.

To deactivate

- 1. Enter (*)(2)(5)(0)
- 2. Press (r)



When a call comes in during Public mode (Drive mode), the ring tone does not sound and the record is stored in "Received calls". The alarm does not sound even when the specified alarm time comes.

Using Various Network Services

■ Network services available

The following are the DOCOMO network services available for the FOMA terminal.

Service	Application	Monthly fee	
Voice Mail Service	Required	Charged	
Missed Call Notification Service	Not required	Free	
Call Waiting Service	Required	Charged	
Call Forwarding Service	Required	Free	
Nuisance Call Blocking Service	Not required	Free	
Caller ID Notification Service	Not required	Free	
Caller ID Display Request Service	Not required	Free	
Dual Network Service	Required	Charged	

Service	Application	Monthly fee	
English Guidance	Not required	Free	
Multi Number	Required	Charged	
2in1	Required	Charged	
Public mode (Drive mode)	Not required	Free	
Public mode (Power off)	Not required	Free	
OFFICEED	Required	Charged	
Melody Call	Required	Charged	
Koe-no-Takuhaibin	Not required	Free	

- The network services are not available when you are out of the service area or out of reach of radio waves.
- "Deactivate" does not mean that the contract for Voice Mail Service, Call Forwarding Service or other services is canceled.
- For details on "OFFICEED", refer to the DOCOMO corporate service website (in Japanese only). http://www.docomo.biz/html/service/officeed/
- The outlines of the each network service in this manual are described along with the menus of the FOMA terminal.
 For details, refer to "Mobile Phone User's Guide [Network Services]".
- For subscriptions and inquiries, contact "docomo Information Center" on the back page of this manual.



Using Voice Mail Service

TEL function ➤ Voice mail service

To activate the service

- 1. Select "Activate" ➤ Select "YES".
- · You can also specify a ring time.

To play back the message

- 1. Select "Play messages"
 - Select "Play (voice call)" or "Play (videophone)"
 - ► Select "YES".
- 2. Operate following the voice guidance.

Using Call Waiting Service

TEL function ▶ Other network serv. ▶ Call waiting

To activate the service

1. Select "Activate" ➤ Select "YES".

Answer an Incoming Call during a Call

Press (). Each time you press (), you can switch the parties you can talk with.

Using Call Forwarding Service

TEL function ▶ Other network serv. ► Call forwarding

To activate the service

- 1. Select "Activate" ➤ Select "Activate" ➤ Select "YES".
- You can set the phone number of forwarding destination or ring time as well.

Emergency Call

Emergency Calls	Phone number
Calls to police	110
Calls to fire station and ambulance	119
Calls for accidents at sea	118

- This FOMA terminal supports "Emergency Location Report". When you make an emergency call such as at 110/119/118, information about the place where you are dialing from (location information) is automatically notified to emergency-response agencies such as police stations. It might happen that your correct location is not detected by emergency-response agencies depending on the location you dial from or radio wave conditions. When your location information is notified, the name of emergency-response agency is displayed on the Stand-by display. When you do not notify your phone number such as by adding "184" by every call, your location information and phone number are not notified. However, when an emergency-response agency has judged that the location information and phone number should be detected because of emergency priority such as for protection of human life, it might get location information and phone number regardless of your setting. Areas and timing "Emergency Location Report" introduced vary depending on the preparation of respective emergency-response agencies.
- When you make a call at 110/119/118 from the FOMA terminal, tell an operator that you are calling from a mobile phone and let them know your phone number, and then clearly tell where you are currently around, so that police/fire station can make a confirmation call to your mobile phone. In addition, stay at the current location while talking preventing the call from being disconnected. Do not turn off the power immediately, and make sure to place your phone standby for at least 10 minutes after the call.
- · You might not be connected to regional police/fire station depending on the area where you are calling from.
- When using the videophone function of the FOMA terminal to place an emergency call to 110, 119 or 118, the call will
 automatically be made as a voice call.

Using Overseas

International Roaming (WORLD WING) is a service that allows you to use the FOMA terminal with the phone number and mail address you use in Japan, in a service area of the overseas carrier partnered with DOCOMO. It enables you to continue using the voice call, SMS and i-mode mail settings without having to make any changes.

- Concerning the areas where the service is supported:
 This FOMA terminal is available within the service area of 3G network, and in the countries/regions supporting 3G 850MHz. Check the areas where you can use the service.
- Refer to the following before you use this FOMA terminal overseas:
- "Mobile Phone User's Guide [International Services]"
- · DOCOMO International Services website
- For the country codes, international call access codes, international prefix numbers for the universal number, and connectable countries, regions, and overseas carriers, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International Services website
- A fee charged for overseas use (call fee, packet communication fee) differs from that of in Japan.

Available Service Overseas

Major Communication Service	3G
Voice call*1	0
Videophone call ^{™1}	0
SMS ^{*2}	0
i-mode ^{**3}	0
i-mode mail	0
i-Channel*3*4	0
i-concier ^{*5}	0
i-Widget ^{*6}	0
Packet communication by connecting with a personal	
computer	
Position location of GPS ^{*7}	0

- : Available
- **1 When using 2in1, you cannot make calls using your B number. When using Multi Number, you cannot make calls using an additional number.
- %2 If the destination is a FOMA terminal, enter the other party's phone number as you do in Japan.
- ※3 You need to establish i-mode International Settings.
- ※4 You need to establish i-Channel International Settings. You are charged a packet communication fee for automatically updating the basic channel information as well (which, in Japan, is included in the i-Channel fee).
- %5 You need to establish i-concier International Settings. You are charged a packet communication fee for each information you receive.
- %6 You need to establish i-Widget International Settings. When you show an i-Widget display, multiple Widget Appli programs might start communication. In that case, you are charged a packet communication fee for each communication.
- ※7 No fee is charged for GPS measuring (checking current location). However, you are charged a packet communication fee for displaying maps from location information.
- Some services are not available depending on the overseas carrier or network.

Making a Call to Outside the Country You Stay in

- 1 O(for at least one second)
 - Enter numbers in order of country code
 - →area code (city code)
 - →destination phone number.
 - You can enter "+" by pressing and holding O for at least one second
 - Enter "81" as a country code when you make an international call to Japan.
 - When the area code (city code) begins with "0", enter the area code without "0". However, include "0" when making a call to some countries or regions such as Italy.
- 2 Press (r) to make a call.
 - Press () (Vphone) to make a videophone call.

Making a Call in Country You Stay

- Enter a phone number.
- 2 Press (r) to make a call.
 - Press (Vphone) to make a videophone call.

Making a Call to WORLD WING User Overseas

When you make a call to a person who is also internationally roaming, make the call the same way as to make international calls to Japan even if he/she is in the country you stay at.





Sending i-mode Mail

Once you subscribe to i-mode, you can exchange e-mail messages over the Internet. You can attach within 2 Mbytes of up to 10 files (photos, moving pictures, etc.) with body text added. For details on i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".



2 Enter each item.



3 Press 🔯 (Send).

Sending Deco-mail

You can change the color or size of characters or background color, or insert images or Deco-mail pictograms.

- New New
 - You can also select "Decome-Template" to create Deco-mail.
- Enter an address and subject.
- 3 Select the text field ► ♠
 Select one of decorations from the palette ► Enter text



 When the text field is selected, the prediction conversion candidates appear. Press (cir) to close the conversion candidate display, and then press (r) to display the palette. (In Japanese mode only)



4 Press 🔯 (Send).

Sending Decome-Anime

You can create impressive messages by inserting text or images into a Flash file.

- 2 Enter an address and subject.
- 3 Select the text field
 ► Highlight a DecomeAnime template and press (Set).




© 2011 Peanuts Worldwide LLC

- 4 Edit characters and images ► (a) (Finish)
- 5 Press (Send).

Displaying Received i-mode Mail

- Select a folder.
- Select an i-mode mail message.

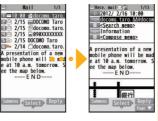

When you receive an i-mode mail message, " papears on the upper area of the display.



Replying to i-mode Mail

- Press ((Reply)) while an i-mode mail is displayed.
- 2 Enter each item.
- 3 Press (Send).

Forwarding i-mode Mail

- Men) (Submenu) while an i-mode mail is displayed
 Reply/Forward > Forward
- 2. Enter each item.
- 3. Press (Send).

Checking New i-mode Mail

You can check the i-mode Center for a new mail message or Message R/F.

Press and hold (☑) for at least one second.

When checking is completed, the following display appears.



messages Select an item to show the display for selecting a message.

Sorting i-mode Mail

You can use "Auto-sort" to sort received/sent i-mode mail messages into a folder such as "Business" or "Friend" which has been created in advance.

<Example> Sorting mail messages, which come from the address stored in the Phonebook, into a folder

- Highlight a folder from Inbox Folder list and press (Submenu) ➤ Auto-sort
- Select "Address sort".
- 3 Select "Look-up address"

 ► Select "Phonebook".
- 4 Look up for Phonebook entries and select a target i-mode mail address.

Early Warning "Area Mail"

Receiving Area Mail

You can receive information such as about earthquake alerts that are issued from the Japan Meteorological Agency as an Area Mail message.

When an Area Mail message arrives, "Ights and the buzzer for Area Mail sounds."

The received contents of some messages are automatically displayed. To erase the displayed content, select "OK".

 You can receive Area Mail messages even when you are not contracted to use i-mode.



Setting Area Mail

- l ⊠ ► Mail setting ► Area Mail setting
- 2 Select an item to be set
 - Set each setting.
 - You can also check "Check ring tone" for how your FOMA terminal works when you receive an Area Mail message.

Using SMS

You can send text messages to the mobile phone number at the other party.

Sending SMS

- **1 ☑** ► Compose new SMS
- Enter each item.



3 Press (Send).

Displaying Received SMS Message

- 1 ☑ ►Inbox
- Select a folder.
- ᢃ Select an SMS message.

When you receive an SMS message, " appears on the upper area of the display.



Phonebook



Storing Phonebook Entries

Storing New Phone Numbers/Mail Addresses, etc.

You can store Phonebook entries in the FOMA terminal (Phone) or on the docomo mini UIM card.

- Press and hold of for at least one second.
- Select "Phone".

The display for entering a name appears. Enter a name and proceed.

When storing entries onto the docomo mini UIM card Phonebook Select "UIM".

3 Enter each item.



4 Press (Finish).

Storing Phonebook Entries from Dial/ Received List

- Press (O).
- 2 Highlight a call record and press

 MEN (Submenu) ➤ Select "Add to phonebook".
- 3 Select "Phone" ➤ Select "New".
- 4 Enter each item.
- 5 Press (Finish).

Stored birthdays are displayed also in your schedule. If you do not wish them to be displayed, select "Disp. in schedule" — "Not disp. in schedule" in the submenu on the birthday input display.



Editing Phonebook Entries

- Search and select a Phonebook entry.
- 2 MENU (Submenu) ➤ Edit phonebook
 - Select an item to be edited
 - ► Edit the contents.
- 3 Press (Finish).
- 4 Select "YES".

Deleting Phonebook Entries

- Search and select a Phonebook entry.
- 2 MENU (Submenu) > Select "Delete data".
- Select "Delete this".
- 4 Select "YES".

* i-mode/Full Browser



Displaying i-mode Sites

i-mode is a service that enables you, by using the display of the mobile phone supporting i-mode, to use online services such as site access, Internet access, and i-mode mail.

- i-mode is a pay service that is available on a subscription basis.
- For details on i-mode, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can display SSL/TLS*-compatible pages via FOMA terminal.

SSL/TLS are the safer data communication systems using authentication/encryption technology to protect your privacy.

Î Press (≩α

You can access the \$\frac{1}{6}\$ Menu. Repeat selecting items (links) to display the desired site.

- While you are online, "
 blinks.



■Before using i-mode

- Content of sites or websites is in general protected by copyrights law. You can use data such as text and images for your entertainment, which you download to your mobile phone supporting i-mode, but you cannot use them, part or whole of it as is, or modify them for the purpose of sale or redistribution, without approval from copyright holders.
- If you replace the docomo mini UIM card with another one
 or turn on the power without docomo mini UIM card, you
 cannot display/play back files, such as still images/moving
 pictures/melodies you download from sites, attached files
 (still images/moving pictures/melodies and other files) sent/
 received by mail, Screen Memo, and Messages R/F.
- When the file has been set for the Stand-by display or for specified ring tone, of which display or playback is restricted by the docomo mini UIM card, the settings return to default if you replace it with new one or turn on the power without docomo mini UIM card.

Displaying Websites Designed for PC

You can browse Internet websites designed for PCs using the Full Browser function.

- Note that you are charged a high communication fee for the massive data communication such as browsing Internet websites having many images or downloading data. For details on the packet communication fee, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- · You can browse Internet websites composed of frames. You can select a frame to display it as well.



8 mode/web ► Full Browser Home

- · By default, a confirmation display appears asking whether you want to use Full Browser.
- You might not correctly display some Internet websites.

Switching Browsers

You can switch to Full Browser to show the Internet websites incorrectly displayed by i-mode.

 The billing system differs between i-mode and Full Browser. With the latter, as packet communications fee will be a large sum, you are advised to use i-mode packet flat-rate service.



MENU (Submenu) while the website is displayed by i-mode Full Browser Switch to FB.

Select "YES".

To switch from Full Browser to i-mode

1. MENU (Submenu) while the website is displayed by Full Browser \sigma \circ mode Browser \sigma Switch to \circ mode

Viewing and Operating Sites

Operations on site viewing display

Scroll display/Move highlighted/


Move the pointer:

Select an item (link): ()(Select)

Return to previous page: (Back)

Forward to next page: Review Next

"F"" or "F" appears while accessing by Full Browser.

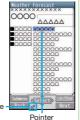

Storing Frequently Accessed Sites

Bookmark websites or i-mode sites you frequently visit to get them displayed easily.

- | Submenu | while the site is displayed
 | Bookmark | Add bookmark
- **2** Select "OK" ▶ Select a destination folder.

To access a site stored in Bookmark

- 1. MENU ► 🖁 mode/web ► Bookmark
- 2. Select a folder ➤ Select a bookmark.

Saving Site Contents

If you save the page once you visited as a screen memo, you can easily refer to it without connecting to i-mode.

MENU (Submenu) while the site is displayed
➤ Screen Memo ➤ Save screen memo

2 Select "Phone" ➤ Select "YES".

To display a saved screen memo

- 1. MENU ► 를 mode/web ► Screen Memo
- 2. Select "Phone" or "microSD".
- 3. Select a screen memo.
- Depending on the site, for instance, when saving of screen memos is disabled at the site, you may not be able to save screen memos properly.

i-Channel



This service distributes information such as news and weather forecast to i-Channel mobile phones. The automatically received latest information flows on the Stand-by display by tickers. You can read it on the i-Channel list by pressing (CIR).

Further, two types of channels, "Basic channel" provided by DOCOMO and "Okonomi (Optional) channel" provided by IPs (Information Providers) are available. You are not charged a packet communication fee for auto-updates of "Basic channel" information.

You are charged a packet communication fee for auto-updates of "Okonomi (Optional) channel" information that will be available by registering your favorite channels. Note that you are charged separately a packet communication fee for browsing detailed information for both "Basic channel" and "Okonomi (Optional) channel". When you use the international roaming service, you are charged a packet communication fee for both auto-update and browsing detailed information.

- i-Channel is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-Channel).
- For details on i-Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- The i-Channel service is provided in Japanese only.

Displaying i-Channel



Select each channel to browse its detailed information.

Map/GPS



- GPS is a function that receives radio waves from the GPS satellites and acquires location information of the FOMA terminal.
- This GPS function cannot be used as a navigation device for airplanes, vehicles or people or as a device for conducting high-accuracy survey. If it is used for these purposes or even if used for other purposes, we do not take any responsibility for a loss, such as pure economic loss resulting from the facts that you have missed the chance to check the positioning (communication) results, which have been caused by external factors such as malfunctions, erroneous operations, or power failure (including battery shortage) on the FOMA terminal.
- GPS is operated by the United States Department of Defense, so the GPS radio wave conditions might be controlled (accuracy deterioration or radio wave supply suspension, etc.) depending on the defense strategy of the United States Department of Defense. In addition, even when surveys have been conducted in the same location or environment, the radio wave status may differ depending on the positions of the satellites so that the same results may not be obtained.
- GPS uses the radio waves from satellites so note that in the environments listed below make impossible or difficult to receive radio waves, and as a result, the error in the position information may be greater than 300 meters.
 - · In densely wooded areas, downtown high-rise areas, built-up residential areas
 - · In a building or right under it . In the basement, tunnel, ground, water
 - · Close to high-tension wires

- · In a car or train
- · In bad weather such as heavy rain and snow · In a bag or case
- ·There are obstacles (persons and articles) around the FOMA terminal.
- · When you cover the displays, keys, microphone, or speakers of the FOMA terminal with your hand.
- When providing position information or notify your current location, check the information given from your GPS service provider or DOCOMO's website. In some cases, you may be charged for using these functions.
- · When you are outside the service area, you cannot use the GPS function except to check your current position.
- In the following cases, you cannot use the GPS function except to provide your position.
 - · During Dial Lock · During Keypad Lock · During Omakase Lock

Reading Map

You can start GPS compatible i-αppli, and you can read a map of current or specified location.

• At purchase, "地図アプリ (Map Application)" is set.



To change GPS compatible i- α ppli to be started

- Map/Overseas ► Map&GPS set./history
 Map setting ► Select Map
- 2. Select an i-αppli program ➤ Select "OK".

Using Navi

You can activate a GPS compatible i- $\!\alpha ppli$ to use the navigation functions.

• At purchase, "地図アプリ (Map Application)" is set.




When you use a GPS compatible i-αppli, the location information is sent to the information provider of the i-αppli program you use.



Checking Current Location

You can locate your current location by GPS. You can also display a map using this location information and send this information as an i-mode mail.

 You are not charged a packet communication fee for checking your current location. However, a separate packet communication fee are charged in cases where, for instance, a map has been displayed from the location information.

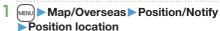



Positioning

Positioning location result

Your current position is located by GPS, and the positioning accuracy is displayed.

To display the map of the current location

- Select "Read Map" from the Position Location Result display.
- \bullet GPS compatible i- $\alpha ppli$ starts and shows the map.

Using AUTO-GPS

Your current location is automatically positioned, and by sending your location information periodically to your GPS service provider, you are enabled to receive a variety of services according to your location, such as weather forecast, shopping guide, or sightseeing information around.

- To use a service that supports the AUTO-GPS function, use the AUTO-GPS function compatible i-αppli to establish the AUTO-GPS service information for respective services.
- The AUTO-GPS function enables you to automatically position your current location according to your movements, and to send your location information and pedometer information to your service provider. (Your location is positioned once every five minutes according to your movements.)
- When you start to use the AUTO-GPS function, check GPS service providers or the DOCOMO website for how you can use services. It might happen that you will be charged a fee for using them.
- You might separately be charged a packet communication fee for sending your location information.
- Note that depending on the way you use your FOMA terminal, the level of the power consumed by the FOMA terminal may be increased as a result of periodical communication.

Setting AUTO-GPS

You can set whether to use AUTO-GPS function. ("ON" is set at purchase.)

AUTO-GPS function uses your stride when determining your movements so you can set your stride as well.

- Map/Overseas

 Map&GPS set./history ► AUTO-GPS

 ► AUTO-GPS setting
- 2 Select "ON".
- 3 Enter a stride (cm).

Using Service provided by DOCOMO


Select whether you use the AUTO-GPS service that syncs with i-concier or respective services provided by DOCOMO.

- Set the service to "ON" to automatically and periodically send your location information from the FOMA terminal to DOCOMO.
- To use i-concier or respective services, you need to separately subscribe for and establish the settings.
- Map/Overseas
 Map&GPS set./history AUTO-GPS
 DOCOMO service set.
- Select "ON" or "OFF".






Viewing and Operation of Finder Display

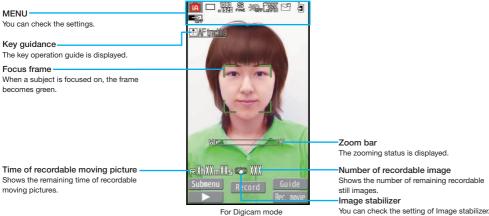

Operations for shooting

Shoot/Save still image:



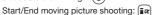





Focus function (when the outside camera is used): (()

- . Do not leave the FOMA terminal with the lens pointing to direct sunlight. Pixels may be discolored or burns may result.
- · When the battery level is low, you may not be able to save still images/moving pictures you shoot.

Shooting Still Images/Moving Pictures

Shooting Still Images

- CAMERA/TV/MUSIC Camera
 Digicam mode
- 2 Press (Record).
- 3 Press (Save).

Shooting still images with the inside camera

Switching to Down Style when you using the outside camera, you can shoot still images or moving pictures with the inside camera.

Shooting Moving Pictures

- Start recording by pressing (Rec movie) from the Finder display for Digicam Mode.
- 2 End the recording by pressing

The moving picture is automatically saved.

 If you save the moving picture to a microSD card, playback is possible only from Picture Album.

Viewing Still Images/Moving Pictures after Shooting

You can display the still image or the moving picture you have shot in Picture Album. You can detect a person's face on the still image you have shot and expand it, or add corrective effects to the detected face. You can also play expressive slide shows with the effect function.

- 1 MENU ▶ Data box
 - ► My picture or 🖁 motion/Movie
 - ▶ Picture album
 - Picture Album is also activated by pressing ()
 from the Finder display.
- Select a folder ➤ Select a file.
 - To play a moving picture, press ()(Play).

Shooting in Various Ways

Continuous Shooting Still Images

You can continuously shoot still images within the sizes from Stand-by (480 x 854) to 3M (1536 x 2048) by the outside camera.

- | MENU (Submenu) from the Finder display for Digicam Mode ➤ Burst Shoot ➤ Continuous
- 2 Press ((Record).
- 3 Highlight a still image to be saved and press () (Save).
 - You can save all the shot images by pressing (\$10 all).

Shooting Still Images Using Auto Shutter

The camera automatically shoots identifying the number of faces and detecting the distance between faces by the face detection.

<Example> Using "Group shutter" to shoot a group of three persons

- l (Submenu) from the Finder display for Digicam Mode ➤ AutoShutter
- Select "Group shutter".
- 3 Select "Three".

When the faces of three persons are detected, the self timer works, and about three seconds later an image of the group is shot.

4 Press (Save).

When you select "Love shutter", the camera automatically shoots identifying the distance between two faces and facial expression.



74

1Seg



Using 1Seg

■Using 1Seg

1Seg is a service provided by television entrepreneurs (broadcasting stations). You are not charged a communication fee for receiving video and audio. For about fee charged by NHK, contact NHK.

- ※You are charged a packet communication fee for browsing "Data broadcasting site" and "i-mode site". You might be charged an information fee for using some sites (i-mode pay sites).
- *For details on the 1Seg service, browse the following websites:

The Association for Promotion of Digital Broadcasting

From personal computer: http://www.dpa.or.jp/english/ From i-mode: http://www.dpa.or.jp/1seg/k/ (In Japanese only)

■Broadcasting waves

1Seg is one of the broadcasting services receiving radio waves (broadcasting waves) different from that used for the FOMA services. Reception condition might be deteriorated or you might not be able to receive 1Seg broadcast in places as follows:

- Places far away from radio towers that transmit broadcasting waves
 Mountain-ringed regions or behind buildings
- In tunnels, underground, or recesses of buildings

To improve reception conditions, fully extend the 1Seg antenna. Also the reception conditions might be improved by changing the direction of the antenna, or by moving yourself to another place.

**Channels might be reorganized along with the discontinuation of analog broadcasting. For this reason, you might need to reset the channels by using an automatic scan (see page 75). After resetting the channels, be sure to register the channels to the channel list. For details about channel changes accompanying terrestrial digital broadcasting, check resources such as the following website:

Ministry of Internal Affairs and Communications Television Receiver Support Center (Digital Support) Channel Changes Call Center Phone number: 0120-922-303

Personal computer: http://www.digisuppo.jp/index.php/repack/ i-mode: http://digisuppo.jp/m/index.php

Battery level

If you try to start 1Seg when the battery is low, the battery alert tone sounds, and a confirmation display appears asking whether to start it. When you do nothing on the confirmation display for about one minute, 1Seg automatically terminates.

■Messages on the display when you use 1Seg for the first time

for broadcast stations you can watch.

- You need to set this function with the 1Seg antenna extended when you are in a terrestrial digital TV broadcasting service area.
- CAMERA/TV/MUSIC 1Seg
 Channel setting Auto channel setting
- 2 Select "YES".
- 3 Select "YES" ► Enter a title.

To execute Channel Setting by selecting an area

- 1. MEND CAMERA/TV/MUSIC ▶ 1Seg ▶ Channel setting ▶ Select area
- 2. Select an area > Select a prefecture.
- 3. Select "YES".



Press and hold (for at least one second.


1Seg starts and the viewer display appears.

Each time (cr) is pressed while viewing, the mode is switched between mute and unmute.



Enjoy

Viewing and Operating Viewer Display

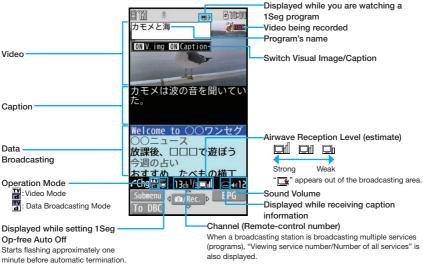

The operation on the viewer display

Channel switch: (0)

Video recording: ()()(for at least one second)

The recorded video is saved on the microSD card

Sound volume adjustment: Switch TV/data BC:



Enjoy

Setting Timer Watching or Recording 1Seg

Set the date and time, a channel, and program name, and enter them to the TV Timer List or Timer Recording List. When the set time arrives, you can start watching or recording.

- I MENU ► CAMERA/TV/MUSIC ► 1Seg
- Select "TV timer list" or "Timer recording list".
- 3 Press (New)
- 4 Enter each item.
- 5 Press (Finish).

Playing Recorded Video

- Data box ►1Seg
- 2 Select "Video" ➤ Select a file.

Each time o is pressed while playing, the mode is switched between mute and unmute.



Music **



Music&Video Channel

Music&Video Channel is a service which automatically delivers up to about two-hour sound programs at night just by selecting your favorite music programs etc. in advance. Further, you can enjoy high-quality video program of up to about one-hour. Programs are updated periodically and you can enjoy the delivered programs at any time such as on commuting.

■Before using Music&Video Channel

- Music&Video Channel is a pay service that is available on a subscription basis. (To apply for Music&Video Channel, you need to subscribe to i-mode and i-mode packet flat-rate service.)
- In addition to the service fee for using Music&Video Channel, you might be charged separately an information fee depending on the program.
- If you insert the docomo mini UIM card to the Music&Video Channel incompatible FOMA terminal after you subscribe to Music&Video Channel, you cannot use Music&Video Channel Service. Note that the service fee applies unless you cancel the Music&Video Channel subscription.
- You cannot set or download programs during international roaming*. Take procedures to halt the distribution of programs before going abroad. Then, after homecoming, resume the reception of distribution.
 When you try to set or download programs during international roaming, note that you are charged a packet communication fee for i-mode communication.
- For details on Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- The Music&Video Channel service is provided in Japanese only.

Setting Programs

- CAMERA/TV/MUSIC

 Music&Video Channel Program set.
- 2 Follow the instructions on the display to set a program.

The program automatically downloads at night.

Playing Programs

- CAMERA/TV/MUSIC

 Music&Video Channel
- Select a program.

Operation while playing back a Music&Video Channel program

Halt:

Pause: (o)(

Sound volume adjustment:

Search (fast forward): Press and hold

Search (fast rewind): Press and hold





Downloading Chaku-uta Full® Music **Files**

You can download Chaku-uta Full® music files from sites.

- Select a Chaku-uta Full® music file from a downloadable site.
- Select "Save" ➤ Select "YES".
- Select a destination folder.
- "Chaku-uta Full" is a registered trademark of Sony Music Entertainment Inc.

Handling music files

You can use music files saved on the microSD card for personal use only. Before using, give enough consideration not to infringe on the third party's intellectual property rights or other rights such as copyright.

Playing Music Files

MUSIC Player enables you to play Chaku-uta Full® music files you have downloaded from sites, or to play Windows Media® Audio (WMA) files you saved on the microSD card using your personal computer.

- MENU CAMERA/TV/MUSIC MUSIC Player
- Select "All music"
 - Select a music file.

Operations of MUSIC Player display



Search (fast forward): Press and hold

Search (fast rewind): Press and hold (Sound volume adjustment: (5)

Replay next file:

Replay previous file: (()) (When playback time is over three seconds, you go back to the beginning of the file.)



i-αppli/i-Widget



i-αppli is a software program for mobile phone supporting i-mode. By downloading various software programs from the i-mode site, you can use your FOMA terminal more conveniently. You can automatically update the stock price information or weather information, and enjoy games without accessing network.

i-Widget is a useful function for gaining easy access to frequently used contents and tools (Widget Appli programs) such as the calculator, clock, memo pad and stock market information. Widget Appli programs can be added by downloading them from the web site.

- Depending on the i-αppli program, you might be charged a communication fee for using.
- The packet communication fee for overseas use differs from the one for domestic use.
- A multiple number of Widget Appli programs may start communicating when you open the i-Widget display. If you browse detailed information, you are charged separately a packet communication fee.
- For details on i-αppli/i-Widget, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Starting i-αppli

- Press and hold (for at least one second.
- Select a software program.



Starting Widget Appli

Press and hold of for at least one second.

The i-Widget display that can simultaneously start multiple Widget Appli programs appears.

Select a Widget Appli program.

You can operate Widget Appli program separately.

Downloading i-αppli from Sites

- Select a software program from a downloadable site.
- Select "OK" when downloading ends.
- 3 Select "YES".

- You can delete the pre-installed i-αppli programs. You can re-download deleted programs from the "P-SQUARE" site. You can download not only i-αppli programs but also the pre-installed Deco-mail pictograms, Kisekae Tool files, Machi-chara images, Chara-den images, templates, dictionaries, and Content packages from the "P-SQUARE" site (in Japanese only).
 - § Menu→メニューリスト (Menu List)→ケータイ電話メーカー (Mobile Phone Maker)→P-SQUARE
- · Deadlines for re-download services
- ・"リバーシ (REVERSI)": the end of September, 2015 ・"ハイパー四川省 (Hyper Sichuan)": the end of September, 2015
- ・"モバイルGoogleマップ (Google Map for Mobile)": the end of October. 2014
- The re-download services may be halted or closed without notice even in the service period.

i-motion/Movie



i-motion is a file consisting from video, audio, and music which you can download to your FOMA terminal from i-motion sites that support i-motion. You can also set it for a ring tone.

Also, by using high speed communication, you can play back smooth and high-quality movie files provided by portal sites, movie specialty sites and other sites on the Internet.

- When downloading or streaming an i-motion/movie file, you
 might receive a bulky file. When data size required for sending
 or receiving is bulky, packet communications fees will be a
 large sum. You are advised to use i-mode packet flat-rate
 service.
- Two types of i-motion/movie files, streaming type and normal/ download type are available.

	Categories	Description
	Streaming type	Plays data while receiving.
	(cannot be saved)	
	Normal/Download type	When download is completed,
1	(can be saved)	the Download Completion display
		appears. You can then play or save
		data.

Downloading i-motion/Movie

- Select an i-motion/movie file from a downloadable site.
- 2 Select "Save" ➤ Select "YES".
- 3 Select a destination folder.

Playing i-motion/Movie

- Data box ► a motion/Movie
- Select a folder Select a file.

Osaifu-Keitai



Osaifu-Keitai/ToruCa

Osaifu-Keitai is equipped with the IC card which enables you to make payments, use coupons, enjoy stamp rallies and so on by placing the FOMA terminal over the scanning device in the stores or other locations. Furthermore, by placing the FOMA terminal over a scanning device, you can access sites and web pages, obtain the latest coupons by communication, and check the deposits of electronic money and the status of its use. Security of the card is well established so that you can use it carefree.


ToruCa is an electronic card that you can receive with FOMA terminal for use as fliers, restaurant cards, and coupon tickets. You can download ToruCa files from scanning devices, sites, or data broadcasting, and can easily exchange them using mail, infrared communication, iC communication, or a microSD card. The downloaded ToruCa files are saved to "ToruCa" on "Osaffu-Keitai".

For details on Osaifu-Keitai and ToruCa, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- Data on the IC card (including electronic money, reward points, etc.) might be lost or deformed owing to the malfunction of the FOMA terminal. (You cannot deposit your FOMA terminal at our hand for repair, remaining data files on it. You are asked, as a rule, to delete them by yourself.) As to the support such as reissue, restoration, temporal storage, and transfer of data, consult the provider of your Osaifu-Keitai compatible service, except for the transfer by the iC transfer service. For your important data, be sure to use Osaifu-Keitai compatible service with backup support.
- In any case including malfunction or model change, we cannot be held responsible for the loss or deformation of data on the IC card or other losses caused regarding Osaifu-Keitai compatible services.
- When your FOMA terminal is stolen or lost, immediately inquire of the provider of your Osaifu-Keitai compatible service about the countermeasures.
- Even when the power is turned off or the battery runs out, the IC card function is available by holding the mark over the scanning device. The function may not be available, however, if you do not use the battery pack for a long time or leave the battery uncharged after the low battery alert activates.

Place the mark over a scanning device.

The Call/Charging indicator lights when you bring your FOMA terminal close to the scanning device and communication becomes ready.

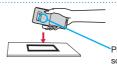

Place the mark over a scanning device.

i-concier



i-concier works to serve you with a pleasant life just like a clerk or concierge does. The service holds your data (area information about your neighborhood, Memo, Schedule, ToruCa, Phonebook, etc.) and sends you information, with good timing, about a variety of things according to the contents of your memo and your schedule event, your living area, your current location, or your preference or taste. This service provides related information about Memos, schedule events, or ToDo items, and automatically updates schedule events or ToruCa files to the latest, and also automatically adds useful information such as about the opening hours of various shops to your Phonebook. It also allows you to share the schedules or images held by the DOCOMO's Data Storage Center with friends, family members or other groups. It also enables you to easily print out the images held, i-concier information is notified by a Machi-chara image (cartoon character that appears on the Stand-by display).

- For details on i-concier, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- i-concier is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-concier).
- If you have not subscribed to Data Security Service but will newly subscribe to i-concier, you are to subscribe to Data Security Service as well as i-concier.
- Depending on the content (information, i-schedule, and others), you might be charged separately an information fee other than the i-concier monthly fee.
- You are charged a packet communication fee separately for receiving information except some.
- You are charged separately a packet communication fee for using detailed information.
- You are charged separately a packet communication fee for auto-updates of i-schedule, Memo, ToruCa, and Phonebook, etc.
- i-concier is available in Japanese only.

Receiving Information

When information arrives, blinks and the content is displayed on the Stand-by display.



- Select a message
 - ► Select a piece of information.

Displaying i-concier

- Information list) i-concier ▶インフォメーション一覧
- 2 Select a piece of information.

Convenient Tools



Using Shabette-Kensaku

You can execute i-mode search by voice.

- The first time you use this function, select "Use" on the usage information display.
- You are charged separately a packet communication fee.
- · This function recognizes only Japanese word.
- Tool ➤ Shabette-Kensaku
- Within 10 seconds after the vibration begins, speak into the microphone, and then press (Set).
 - Even if you do not press (Set), your voice input is accepted automatically within about 3 seconds after you finish speaking.
 - Speak as clearly as possible, in natural conversation speed.
- · Speak in quiet, noise-free locations.
- Recognition result may differ depending on pronunciation and the surrounding environment.

Using Start by Voice

You can call up the function by voice.

This function is available in Japanese mode only.

- The first time you use this function, select "利用する (Use)" on the usage information display, or press (開始).
- Press and hold for at least one second.
- When "それではどうぞ ★★音声受付中 ★★ (Please ★★Voice is being accepted.★★)" is displayed, pronounce the function into the microphone within 10 seconds.
 - When the function to be called up cannot be specified, you can look it up in "使いかたガイド (Guide)".
 - Speak as clearly as possible, in natural conversation speed.
 - Speak in quiet, noise-free locations.
 - Recognition result may differ depending on pronunciation and the surrounding environment.

Using Schedule

MENU Tool Schedule

Select a date to show a schedule event of the selected date. Select the schedule event to confirm its details.



- 2 MENU (Submenu) Select "New".
- 3 Enter each item.



4 Press (Finish).

Using Alarm

- 1 MENU ► Tool ► Alarm
- 2 Highlight an alarm and press () (Edit
- 3 Enter each item.



- 4 Press (Finish).
 - The alarm does not sound in Public mode (Drive mode), Dial Lock, "Alarm" locked in Original Lock or Omakase Lock.

Using Bar Code Reader

You can use the outside camera to scan QR codes and others, and store them as files.

From the scanned data, you can make calls, compose i-mode mail messages, access Internet websites, and so on.

■When scanning with Bar Code Reader • Scan the code as large as possible within

- the guide frame.

 Autofocus works when you scan the code
- Autorocus works when you scan the code about 10 cm or more away from it.
 When you scan the code in the out-of-focus state, the recognition rate lowers.
- Hold the camera in parallel with the code when you scan.



■QR code

QR code is one of the two-dimensional codes that denotes data in the vertical and horizontal directions.

 "株式会社NTTドコモ (NTT DOCOMO, INC.)" is displayed when you scan the QR code with the FOMA terminal.



Scan a Code

<Example> Access P-SQUARE by using QR code on the right



QR code for accessing the site

- MENU ► Tool ► Bar code reader
- Select "Scan code".
- Fit a code to the guide frame and press .

The subject is focused on by autofocus function.

- 4 Press (Start) to scan the code.

 A URL is displayed as a scanned result.
- 5 Select the URL Select "i-mode Browser".

Using Pedometer

As you walk with your FOMA terminal in hand or in your pocket, your pace is measured, and then depending on the measured results, your distance, calories consumed, and body fat burned are displayed.

■Caution when using Pedometer

- If you have not yet set Set Main Time, you cannot use this function.
- When you use Carry Case L 01/Carry Case 02 (option) to house it, fasten it to your waist belt.
- When you put Pedometer into your bag, store it in a pocket or partition that holds it securely.

 About measurement
- Note that measurement results are just for reference.
- When the power is not turned on or while software is being updated, no measurement is carried out.
- Your pace might not be correctly measured depending on the usage conditions.

1 MENU ► Tool ► Pedometer

The measurement records of your pace are displayed.

 From the submenu, you can switch between ON/OFF of Pedometer, or set user information.

Using Quick Mirror

In the Down Style, you can use the inside camera to use your FOMA terminal like a hand mirror.

Switch to the Down Style.

 Quickly switching the FOMA terminal between the Down Style and the closed position might prevent the Quick Mirror function from starting.



Data Management



Using microSD Card

If you do not have a microSD card, you need to purchase it.

 P-03D supports a commercial microSD card of up to 2 Gbytes and microSDHC card of up to 32 Gbytes (As of October 2011).

For the latest operation, check information such as the memory capacity and manufacturers of microSD cards, access the following sites (in Japanese only). For the microSD cards other than published in the sites, contact each microSD card maker.

- ・From i-mode to P-SQUARE (As of October 2011) இ Menu→メニューリスト (Menu List)
- →ケータイ電話メーカー (Mobile Phone Maker)
- → アータイ 电前スーカー (Mobile Phone Maker → P-SQUARF
- From personal computers http://panasonic.jp/mobile/

Note that the published information is the result obtained from the operation check, which does not necessarily guarantee all performances of those microSD cards

 Make sure that you turn off the power, and then insert/remove the microSD card.



With the metal terminal surface facing downward, make sure that the cut edge is positioned at right and then insert.



· Push it until it clicks.

When you remove the microSD card

Push the microSD card until it stops and remove it.

 Note that the microSD card may pop out when you insert or remove it.


The inserting slot of the microSD card is in the inside of the back cover.

To insert it, remove the back cover, and then remove the battery pack.



Icons on the Display



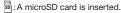

Data is being read/written.
 (Do not remove the microSD card nor turn off the FOMA terminal.)

:The microSD card is write-protected.

:The microSD card cannot be used. (Insert the microSD card again. If """ is still displayed, execute "Check microSD" or "microSD format".)

Checking microSD Card

Check and repair a microSD card.

 Depending on the condition of the microSD card, correctly repairing the card might not be possible, and data might be deleted or the card might be initialized.

Tool ➤ microSD

Refer microSD data ➤ MENU (Submenu)


Check microSD

Select "YES".

Formatting microSD Card

When you use the microSD card for the first time, you need to format (initialize) it.

- Be sure to use P-03D for formatting. The microSD card formatted using other devices such as personal computers may not work properly.
- Note that formatting deletes all content on the microSD card.

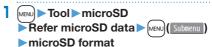

Enter your Terminal Security Code
Select "YES".

Copying Data to microSD Card

<Example> Copying a still image

- Data box ► My picture
 - Select a folder.
- 2 Highlight a still image to be copied and press MENU (Submenu)
 - ► Select "Copy to microSD"
 - ► Select "Copy this"
 - Select a destination folder.


Copying Data to FOMA Terminal

<Example> Copying a still image

- Data box ► My picture ► (micros0) ► Select a folder.
- 2 Highlight a still image to be copied and press MENU (Submenu)
 - ► Select "Copy to phone"
 - ► Select "Copy this"
 - Select a destination folder.

Displaying Data Stored on microSD Card

<Example> Displaying a still image

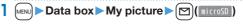

2 Select a folder ► Select an image.

Check Capacity of microSD Card

The total memory and used memory (estimated) in the microSD card can be displayed.

- 1. (MENU) ➤ Tool ➤ microSD ➤ Refer microSD data
- 2. (MENU) (Submenu) ➤ Select "microSD info".

Backing up Data to microSD Card

You can back up Phonebook entries, schedule events, mail messages, memos, bookmarks, and the settings on and information about your FOMA terminal collectively onto the microSD card. When restoring the backup data onto your FOMA terminal, they are collectively restored.

 Backing up data from the FOMA terminal onto the microSD card is collectively applied to all data, so emptied files in the FOMA terminal are also backed up on the microSD card.
 When you restore such data onto your FOMA terminal, emptied files on the microSD card overwrite the data in the FOMA terminal created later.

Tool ➤ microSD ➤ Backup/Restore
➤ Backup to microSD

≥ Enter your Terminal Security Code
Select "YES".


To restore backup data to FOMA terminal

- 1. MENU ► Tool ► microSD ► Backup/Restore ► Restore to phone
- 2. Enter your Terminal Security Code Select "YES".

Sending/Receiving Data by Infrared Communication/iC Communication

You can send or receive data such as Phonebook entries to or from a device supporting infrared communication function or iC communication function.

 You cannot exchange data depending on the other party's device or FOMA terminal.

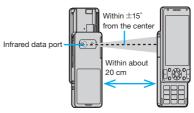

<Infrared communication>



<iC communication>

Sending Data

- For infrared communications, set the receiving end terminal first, and then start sending data within 30 seconds.
- Submenu of the data to be sent Select "Send Ir data" or "iC transmission".
 - Procedure for sending data might differ depending on the data.
- Select "YES".

Receiving Data by Infrared Communication

- 1 Menu ► Tool ► Receive Ir data ► Receive
- Select "YES".

Receiving Data by iC Communication

- Face the

 mark of the receiving end terminal which shows the Stand-by display, to the
 mark of the sending end terminal.
- Select "YES".

Connecting to a PC

You can connect the FOMA terminal to a personal computer to exchange WMA files, images or other files stored on microSD card.

You can also access the Internet to perform data communication.

- *To perform data communication, you need to install the "FOMA communication configuration file" (driver).

For details, refer to "Manual for PC Connection".

You can download the "FOMA communication configuration file" and "Manual for PC Connection" from the DOCOMO website.

http://www.nttdocomo.co.jp/english/support/

DOCOMO Connection Manager

"DOCOMO Connection Manager" is a software which comes in handy for DOCOMO's data communication.

It enables easy PC settings according with the terms and conditions of the user's agreement.

It also makes it possible to check the amount of the data communication and provides a rough estimate of the charges using the charge counter function.

For details, refer to the DOCOMO website.

http://www.nttdocomo.co.jp/support/utilization/application/service/connection_manager/ (In Japanese only)

Support



Troubleshooting

- First of all, check to see if you need to update the software program and then update it if necessary. See page 99 for how to update software programs.
- When symptom persists even after you check the countermeasures for the problem you suffer, contact the "Repairs" counter listed on the back page of this manual or a repair counter specified by DOCOMO.

The "Repairs" counter is available in Japanese only.

Power source

The FOMA terminal does not turn on.

- ···Make sure the battery pack is attached to the FOMA terminal correctly. (See page 24)
- ... Make sure the battery is fully charged. (See page 25)

Charging

Cannot charge.

(The Call/Charging indicator does not light, or it flickers.)

- ··· Make sure the battery pack is attached to the FOMA terminal correctly. (See page 24)
- ··· Make sure the power plug of the adapter or cigarette lighter plug is securely inserted into the outlet or cigarette lighter socket.
- ···Make sure the adapter and the FOMA terminal are connected correctly. (See page 26)
- ... When you use an AC adapter (option), make sure its connector is firmly connected to the FOMA terminal or the provided desktop holder. (See page 25, page 26)
- ···When you use the desktop holder, make sure the connector terminal of the FOMA terminal is not stained. If it is stained, wipe the terminal part with a dry cotton swab, etc.
- …If you talk on the phone, have communications, or operate other functions for a long time during battery charge, the temperature of the FOMA terminal may rise to flicker the Call/Charging indicator. In that case, charge the battery after the FOMA terminal cools down. (See page 25)

Operation of terminal

While you operate the FOMA terminal or charge the battery, they get hot.

··· While operating or charging, or when you operate i-αppli programs, talk on the videophone, or watch 1Seg programs for a long time during battery charge, the FOMA terminal, battery pack, or adapter may become warm, but this is not a safety hazard, so you can continue to use them.

The usable time of the battery is short.

- ... Make sure not to leave the FOMA terminal out-of-service-area for a long time. If your FOMA terminal is left out-of-service area, it searches for radio waves to establish communications, consuming more power.
- ···The usable time of the battery pack varies depending on the usage environment or its remaining life.
- ... Battery packs are consumables. The usable time slightly shortens each time you charge the battery. If the usable time becomes extremely short as compared with the default state even if fully charged, purchase the specified battery pack.

The power of the FOMA terminal shuts down and restarts.

... If the terminal of the battery pack is stained, the connection might deteriorate to shut down the power. Wipe the battery terminal with a dry cotton swab, etc.

Pressing keys is disabled.

- ··· Make sure Dial Lock is deactivated, (See page 46)
- ··· Make sure Keypad Lock is deactivated. (See page 47)

The docomo mini UIM card is not recognized.

···Make sure you insert the docomo mini UIM card in the correct direction. (See page 24)

The clock does not show the correct time.

... The clock may not show the correct time when the power has been kept on for a prolonged period of time. Check whether "Auto time adjust" and "Auto time difference" of "Set main time" have been set to "Auto" and then, move to a location with good signal reception, turn off the power of FOMA terminal and then back on.

Call

Cannot make a call by pressing numeric keys.

- ··· Make sure Restrict Dialing is deactivated.
- ···Make sure the lock for "Keypad dial" in Original Lock is released. (See page 47)
- ··· Make sure Dial Lock is deactivated. (See page 46)
- ··· Make sure Self Mode is deactivated.

Cannot talk.

("">" does not disappear even if you move to another place.
You cannot make or receive a call, though the radio wave
conditions are not bad.)

- ···Turn off and on the FOMA terminal, or remove and attach/insert the battery pack or docomo mini UIM card. (See page 24, page 27)
- ... Depending on the characteristics of the radio waves, you may not be able to make or receive a call even if the FOMA terminal is "within service area" or "fill" is displayed for a radio wave condition. Move to another place and redial.
- Make sure the call restrictions such as Call Rejection, Call Acceptation, etc. are deactivated.
- ... Depending on the radio wave congestion state, calls and mail messages may be congested and hard to be connected in crowded places. In that case, the message "Please wait" or "Please wait for a while" is displayed and a busy tone sounds. Move to another place or wait for a while, and then redial.

Camera

Still images and movies shot by the camera are blurred.

- ···When you shoot a subject in a short distance, set Focus mode to "Macro".
- ···When you shoot portraits, set Focus mode to "FaceDetect".
- ··· Set Stabilizer to "Auto" and then shoot.
- ... Make sure the lens of the camera is not fogged or stained.

Osaifu-Keitai

Cannot use Osaifu-Keitai function.

- …If you remove the battery pack or activate Omakase Lock, the IC card function becomes unavailable regardless of the setting of IC Card Lock. (See page 24, page 47)
- ··· Make sure IC Card Lock is deactivated. (See page 46)
- ··· Make sure you place the \bigcirc mark on the FOMA terminal over the scanning device. (See page 83)

Warranty and After-sales Service

Warranty

- Make sure that you have received a warranty card provided at purchase. After checking the contents of the warranty card as well as "Shop name and date of purchase", keep the warranty card in a safe place. If you notice that necessary items of the warranty card are not filled in, immediately contact the shop where you purchased the FOMA terminal from. The term of the warranty is one year from the date of purchase.
- All or part of this product including the accessories may be modified for improvement without notice.

After-sales Services

OWhen there is a problem with the FOMA terminal

Before asking repairs, check "Troubleshooting" in this manual or in "使いかたガイド (Guide)" mounted on the FOMA terminal. ("使いかたガイド (Guide)" is available in Japanese mode only.) If the problem remains unsolved, contact the "Repairs" counter listed on the back page of this manual for malfunction and consult them. The "Repairs" counter is available in Japanese only.

When repairs are necessitated as a result of consultation Bring your FOMA terminal to a repair counter specified by DOCOMO. Note that your FOMA terminal is accepted for repair during the repair counter's business hours. Further, note that you may need to wait for fixing depending on the malfunction state.

■In warranty period

- · Your FOMA terminal is repaired charge free in accordance with the terms of warranty.
- Make sure that you bring the warranty card to the counter for repair. If you do not show the warranty card, or when troubles or malfunctions are regarded to be caused by your mishandling (the damages of liquid crystal, connector, etc.), the repair cost is charged even within the warranty period.
- The cost for troubles caused by the use of devices and consumables other than those specified by DOCOMO is charged even within the warranty period.

Repairs may not be carried out in the following cases:

- · When exposure to water is found at our repair counter (Example: When the moisture detection sticker has reacted)
- When, as a result of inspection at our repair center, corrosion is found due to exposure to water, dew condensation, or sweat, or when damage or deformation is found in the circuit board [Repairs might not be carried out when damage to the connector terminal (earphone/microphone terminal) or liquid crystal, or cracks in the body are found.]
- *Even if repair is feasible, the repair cost is charged when the trouble you suffer matches one of the symptoms listed above, which is not supported by the warranty.

■After the warranty period

We will repair your FOMA terminal on request (charges will apply).

■Spare parts availability period

The minimum storage period of the performance spare parts (parts required for maintaining performance) for the FOMA terminal is basically six years after the closure of its production. Note, however, that your FOMA terminal might not be repaired depending on the troubled portions because of the shortage of spare parts.

Other points to note

Make sure not to modify the FOMA terminal or its accessories.
 We might reject to repair depending on the degrees of your modification.

The following might be regarded as modifications:

- · To put stickers, etc. onto the liquid crystal or keys
- To decorate the FOMA terminal using adhesives
- · To replace the coverings etc. with those of other than DOCOMO genuine products
- Repairs of troubles or malfunctions resulting from the modifications are charged even within the warranty period.
- Do not peel the nameplate off the FOMA terminal.
 Note that when we cannot ensure the contents described on the nameplate and therefore cannot verify the product conformity to the technical standard, it might happen that we at DOCOMO reject to repair the malfunction.
- The information such as about function settings, etc. might be reset depending on the troubles or repairs, or the way you handle the FOMA terminal. Set the settings again.
- The parts generating magnetism are used in the following portions
 of the FOMA terminal. Note that if you place a magnetism-sensitive
 object such as a cash card near the FOMA terminal, the card might
 become unusable.

Portions: speaker, earpiece

 This FOMA terminal comes with the waterproof performance, however, if the inside of the FOMA terminal gets wet or becomes moist, immediately turn off the power and remove the battery pack; then visit a repair counter. The FOMA terminal may not be repaired depending on the condition.

Error Information Send Setting

When an error occurs on the FOMA terminal, the error information is created automatically and send it to DOCOMO if this function is set to "ON".

- MENU Setting Other setting
 - Error info send set.
 - ► Enter your Terminal Security Code
 - ►ON/OFF

i-mode Fault Diagnosis Site

You can check on your FOMA terminal whether sending/ receiving mail messages, downloading images/melodies, and others are normally working. When you think your FOMA terminal is in trouble as a result of your check, contact the "Repairs" counter listed on the back page of this manual.

The "Repairs" counter is available in Japanese only.

• To connect to "i モード故障診断サイト (i-mode Fault Diagnosis Site)" [in Japanese only]

i-mode site: 🖁 Menu→お知らせ (News)

- →サポート情報 (Support information)
- →お問い合わせ (Inquiries)
- →故障·電波状況お問い合わせ先 (Failures &

Radio wave condition)

→ i モード故障診断 (i-mode Fault Diagnosis)



QR code for accessing the site

· When you use overseas, you are charged a fee.

Updating Software


This function is to check whether you need to update software programs in the FOMA terminal by connecting to the network, and if necessary, you can download some parts of software programs using packet communication, and can update the software programs.

If you need to update the software programs, the DOCOMO website and "お客様サポート (User support)" in Japanese

- 8 Menu lets you know information about updating software programs. There are three kinds for updating software programs; "Auto-update", "Update Now" and "Reserve Update".
- You can update software programs, with data retained, such as Phonebook entries, images shot by the camera, or
 downloaded data in the FOMA terminal; however note that data may not be protected depending on the conditions (such
 as malfunction, damage, or drench) your FOMA terminal is placed in. You are advised to back up important data. Note
 that data such as downloaded ones might not be backed up.
- ■Before using Software Update
- · Do not remove the battery pack while updating software programs. You may fail to update.
- Fully charge the battery before updating software programs.
- It may take time to update (download or rewrite) software programs.
- You cannot make/receive calls, use communication functions, and other functions while updating software programs. (You can receive voice calls during download.)
- You are advised to update software programs when radio wave is strong enough with the three antennas displayed and
 while you are not moving. If radio wave conditions get worse while downloading software programs, or download is
 suspended, move to a place with better radio wave conditions and try again to update software programs.
- When updating software programs, the proprietary information about your FOMA terminal (model name or serial number, etc.) is automatically sent to the server (DOCOMO-managed server for Software Update). We at DOCOMO never use the sent information for purposes other than to update software programs.
- If you fail to update software programs, "Rewrite failed" is displayed and you cannot do all operations. In that
 case, you are kindly requested to come to a repair counter specified by DOCOMO.

Start Software Update from Icon

Select "Update notification icon" on the Stand-by display.

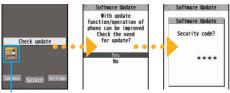

Update notification icon

Check whether you need to update software programs.

When update is necessary, "Update is needed" is displayed. And you can select either "Now update" or "Reserve".

- When you select "Now update", update immediately starts.
- immediately starts
 When rewriting is completed, your FOMA terminal automatically
 restarts and the



Update Completion Confirmation display appears.

• When you select "Reserve", you can select the date and time you want.

Start Software Update from Menu

- Setting ➤ Other setting ➤ Software Update
- 2 Enter your Terminal
 Security Code
 ▶ Select "Update".

 Software Update

 Security Code
 ▶ Select "Update".
- 3 Go to step 2 of "Start Software Update from Icon" on page 100.

Scanning Function

You can detect data or application programs, which might cause troubles, from among those downloaded to your FOMA terminal, and then can delete the data or stop starting the application programs.

 This scan function provides a certain protective measure to filter out data that might cause troubles with your FOMA terminal at the time when you browse websites or receive messages. Note that when the virus pattern data supporting respective troubles is not yet downloaded to your FOMA terminal, or when no virus pattern data supporting them is found, this function does not prevent troubles from occurring.

Updating pattern data

First of all, update the pattern data to obtain the latest.

Setting ► Lock/Security ► Scanning function ► Update ► YES ► YES

Displays for scanning results

About the display for scanned problem elements



A warning display appears when problematic data is found. Press [ix] (pearl) from the warning display to show the name of the problem element.

- When six or more problem elements are found, the sixth and later problem element names are omitted.
- "Detail" might not appear depending on the detected problem element.

■The displays for scanning result

Alert level 0	Operation may not run properly	Press ((0K) to continue the operation.
Alert level 1	Scanning function Operation may not run properly Cancel operation?	Press (YES) to stop and end the operation. Press (NO) to continue the operation.
Alert level 2	Scanning function Operation may not run properly Canceling operation	Press () () to stop and end the operation.
Alert level 3	Scanning function Operation may not run properly Delete data?	Press () (YES) to delete the data and end the operation. Press () (NO) to stop and end the operation.
Alert level 4	Operation may not run properly Deleting data	Press () () to delete the data and end the operation.

• The alert displays differ from shown above may appear.

Options and Related Devices

Combining various options with the FOMA terminal, you can realize more versatile use from personal purpose to business purposes. Some products may not be dealt in depending on the area. For details, consult a handling counter such as a docomo Shop. For details on options, refer to the user's manuals of respective options and related devices.

- ·Battery Pack P23
- ·Back Cover P55
- · Desktop Holder P49
- ·FOMA AC Adapter 01/02*1
- ·FOMA AC Adapter 01 for Global use*1
- ·FOMA DC Adapter 01/02
- ·FOMA Portable Charging Adapter 01/02/03
- · FOMA Dry Battery Adapter 01
- ·FOMA eco Solar Panel 01
- ·FOMA USB Cable with Charge Function 02*2
- ·FOMA USB Cable *2
- ·FOMA Indoor Booster Antenna^{*3}
- ·FOMA Indoor Booster Antenna (Stand Type) **3
- ·Carry Case L 01

- · Carry Case 02
- ·In-Car Holder 01 **4
- · Earphone/Microphone 01
- ·Stereo Earphone Set 01
- ·Earphone/Microphone with Switch P001/P002*5
- ·Flat-plug Earphone/Microphone with Switch P01/P02^{*6}
- ·Flat-plug Stereo Earphone Set P01*6
- ·Earphone Plug Adapter P001 **6
- ·Earphone Plug Adapter for External connector terminal 01
- · Earphone Plug Adapter 01
- ·Flat-plug Connector/Stereo Mini-jack Conversion Adapter P01 **6
- ·Bone conduction microphone/receiver 01 **6
- ·In-Car Hands-Free Kit 01*7
- ·FOMA In-Car Hands-Free Cable 01
- $\%\,1\,$ See page 25 and page 26 for charging batteries using AC adapter.
- $\ensuremath{\%2}$ If you use a USB hub, outer devices may not work correctly.
- ※3 Use it in Japan only.
- **4 If the connector terminal, etc. of the FOMA terminal comes into contact with the In-Car Holder, change the direction of the FOMA terminal or In-Car Holder. Then, install.
- *5 Earphone Plug Adapter P001 and Earphone Plug Adapter for External connector terminal 01 are required.
- %7 To use/charge the P-03D, FOMA In-Car Hands-Free Cable 01 is required.

Appendix



Function List

Execute "Resetting the Function Settings to Default" on page 48 for the items indicated by to return to the respective defaults.

Inbox	
Outbox	
Draft	
Mail history box	
Compose new message	
Create new Deco-Anime	
Danama Tamalata	Deco-mail
Decome-Template	Decome-Anime
Compose new SMS	
Check mail/message	
Check new SMS	
Receive option	
Mail setting	Receive setting
	Display setting
	Text predict
	Signature setting
	Phrases/Store word
	Mail box lock
	Set check mail/message
	Blog/Mail group
	Address/Spam Mail Set.
	Auto save setting
	Draft Mail history box Compose new message Create new Deco-Anime Decome-Template Compose new SMS Check mail/message Check new SMS Receive option

ai	Mail setting	SMS setting
≥		Area Mail setting
		Auto Deco-mail setting
		Check settings
		Reset

qe	™ Menu/Search	
mode/web	Bookmark	
bo	Screen Memo	
E ش	Browsing history	
uw	Enter URL	Enter URL
		URL enter history
	i-Channel	i-Channel list
		Ticker display setting
		Reset i-Channel
	្ទី mode/web setting	≣ mode Browser Set.
		Full Browser Settings
		Common Settings
		Confirm
		Reset 🖁 mode setting
	Full Browser Home	

宣	Software list (phone)	
α ppli	្តី αppli (microSD)	Software list
003		ිසි αppli data
	្តី αppli call logs	
		End stand-by info
		End Widget appli info
	ි αppli run info	Security error history
		Auto start info
		Trace info
		Auto-start setting
	ි appli setting	Disp. software info
		i-Widget overseas use
		i-Widget sound effect
		AUTO-GPS preferred set
		i-αppli call settings
		្ឌី αppli volume
		Preferred tone
		αBacklight
		αVibrator
		Check settings

ပ		Digicam mode
CAMERA/TV/MUSIC	SI	Photo mode
₹	Camera	Movie mode
15		Picture album
1 2		Activate 1Seg
Į≅į		Program guide
0		TV timer list
		Timer recording list
	1Seg	Recording result
		TVlink
		Channel list
		Channel setting
		User setting
	MUSIC Player	
	Music&Video Channel	
_		

ŏ	My picture
	MUSIC
Data	Music&Video Channel
	g motion/Movie
	Melody
	Content package
	My document
	Kisekae Tool
	Machi-chara
	Chara-den

pox	1Seg	Image
ab		Video
Data		Position memory
_	Document viewer	
	Font	
	SD other files	-
	Search all history	

100	Bar code reader	Scan code	
₽		Saved data	
	Calculator		
	Alarm		
	Receive Ir data	Receive	
		Receive all	
	Schedule		
	Memo		
	Quick mirror		
	Pedometer		
	Data Security Service	Data check/Download	
		Update phonebooks	
		Update schedule etc.	
		Update images	
		Update setting info	
		Setting/History	
	microSD	Refer microSD data	
		Backup/Restore	
	Guide		
	Voice recorder		
	Voice announce		

ш					
	Tool	Dictionary	Enter word		
			Reference history		
		Phrases/Store word	Common phrases		
			Store word		
		Download dictionary			
		Voice quick start			
		Shabette-Kensaku			
		Contact DOCOMO			

n	Phonebook	Search phonebook
FEL function		Add to phonebook
‡		UIM operation
一百		Phonebook set./Check
-		Forwarding image
		Play/Delete msg.
	D //-i	Play/Delete VP msg.
	Rec. msg./Voice memo	Record voice memo
		Record message setting
	Dialed/Received call	Dialed calls
		Received calls
		Redial
		Nuis. call blocking
		Caller ID request
		Caller ID notification
	Di-I/Di	Arrival call act
	Dial/Receive setting	Dial call setting
		Receive call setting
		In-call setting
		Headset function set.
$\overline{}$		

TEL function	Dial/Receive setting	Call rejection set.
		Missed call notice
	Videophone setting	Visual preference
		Select image
		Auto redial as voice
		Ntfy switch-mode
		Hands-free switch
		V.phone while packet
	Call duration/charge	Call duration/charge
		Notify cost limit
		Reset total
		Auto reset
	Disaster Voice Messaging	
	Koe-no-Takuhaibin	Msg. confirm/set(site)
		Message confirm(voice)
		Settings(voice)
	2in1	
	Melody call	
	Voice mail service	Play messages
		Activate
		Deactivate
		Set ring time
		Check setting
		Voice mail setting
		Check messages
		Message notification
		Delete icon
		Setting for videophone

function	Other network serv.	Call forwarding
		Call waiting
		English guidance
量		Remote access
-		Multi Number
		Dual network
İ		Additional service
		OFFICEED
	Choku-Den	

Setting	Screen/Display	Kisekae Tool setting
		Stand-by display
		MyFACE setting
İ		Color theme setting
		Each display setting
İ		Machi-chara setting
İ		Soft key
		Menu Theme
		Viewer settings
		Icons
		Icons setting
		View blind
		Image display mode
		LCD AI
		Mail ticker display
		Information display

βL	Sound/Vib./Manner	Ring volume	
Setting		Select ring tone	
Ś		Other sound setting	
		Vibrator setting	
		Manner mode setting	
		Machi-chara chat set.	
	D 15 1.40	Backlight	
	Backlight/Illum.	Illumination setting	
		Font	
	Text display/input	Character input set	
		バイリンガル	
		Set main time	
		Sub clock setting	
	Time	Clock display	
		Auto power ON	
		Auto power OFF	
	Lock/Security	Lock	
		Keypad lock	
		Secret mode	
		Secret data only mode	
		Call rejection set.	
		Change security code	
		UIM setting	
		Scanning function	
		Timer lock ON at close	
		IC card lock setting	

ρ		eco mode	
Setting		eco mode setting	
Š	Battery	eco mode autostart	
		Use history	
		Battery level	
		USB mode	
	External connection	Headset microphone	
		Femtocell	
		Down slide setting	
		Speed selector setting	
	Other setting	Motion control setting	
		Camera-button setting	
		Alarm setting	
		Self mode	
		Reset settings	
		Initialize	
		Software Update	
		Error info send set.	
		Quick search URL	
S	Мар		
Map/Overseas	Navigation		
Ver	_	imadoco kantan search	
0	imadoco search	imadoco search	
1a	i-area	rea	

as	Мар	
Se	Navigation	
ye	imadoco search	imadoco kantan search
Map/Overseas		imadoco search
Ma	i-area	
	GPS αppli list	
	Position/Notify	Position location
		Location notification

Location history		
GPS button setting		
Location request set.		
AUTO-GPS		
Map&GPS set./history Positioning mode set.		
Register LCS client		
Service setting		
Serv. host URL set.		
Illum./Tone settings		
Network search setting		
PLMN setting		
Overseas NW search Display operator name		
Display area status		
Re-search icon set.		
Inquiries (overseas)		
Sub clock setting		
Bar incoming when roam		
Missed call notice		
Overseas setting Roaming guidance		
Int'l dial assistance		
្តី mode service set.		
Mail/Message usage set		
Network service		
Overseas use guide		
i-concier		

Pro	Profile		
i <u>a</u>	IC card content		
Kei	DCMX		
Ţ.	ToruCa		
Osaifu-Keitai	ia	IC card lock	
10	IC card lock setting	IC lock (power-off)	
	Setting	ToruCa settings	
		Receive ToruCa	
		IC card notice set	
IC card usage Check IC owner			
	Change IC owner	-	
Search by 🖁 mode			

Others	Character input
--------	-----------------

Main Specifications

Handset

Model		P-03D
Dimensions (when closed)		Height: Approx. 113 mm Width: Approx. 51 mm Depth: Approx. 16.1 mm
Weight (vattached)	vith the battery pack	Approx. 121 g
Continuo (FOMA/3	us standby time G)	Standstill: Approx. 580 hours
Continuo (FOMA/3	us talk time G)	Voice call : Approx. 200 minutes Videophone call: Approx. 100 minutes
1Seg wat	ching time	Approx. 260 minutes
Charging	time	AC adapter: Approx. 120 minutes DC adapter: Approx. 120 minutes
Display	Туре	TFT 262,144 colors
	Size	Approx. 3.4 inches
	Number of pixels	409,920 pixels (480 dots x 854 dots)
Image pickup	Туре	Inside camera: CMOS Outside camera: CMOS
device	Size	Inside camera: 1/6.0 inches Outside camera: 1/3.0 inches
Camera	Number of effective pixels	Inside camera: Approx. 1,300,000 pixels Outside camera: Approx. 13,200,000 pixels
	Number of recording pixels (maximum)	Inside camera: Approx. 1,200,000 pixels Outside camera: Approx. 13,000,000 pixels

Recording	Number of recordable still images ^{*1}	Approx. 1,200 max. (default)
	Number of still images for continuous shooting	For Digicam Mode in Continuous setting 3M: 8 2M Wide: 8 2M: 8 Stand-by: 8 For Continuous Mode VGA: 4 QVGA: 5, 10 QCIF: 5, 10, 15, 20 Sub-QCIF: 5, 10, 15, 20
Music playback	Continuous playback time **2	SD-Audio file (supports Play Background): Approx. 6,500 minutes ^{®3} Chaku-uta Full [®] music file (supports Play Background): Approx. 6,000 minutes ^{®3} i-motion file (including Chaku-uta [®] music file): Approx. 380 minutes ^{®3} WMA file (supports Play Background): Approx. 4,600 minutes Music&Video Channel program (supports Play Background) Sound : Approx. 6,000 minutes Moving picture: Approx. 270 minutes
Memory	Chaku-uta®	Approx. 158 Mbytes (default) ^{※4}
capacity	Chaku-uta Full®	

"Chaku-uta" is a registered trademark of Sony Music Entertainment Inc.

- **1 Picture size: QVGA (320 x 240), Quality: Standard, File size: 25 Kbytes
- **2 The continuous playback time is the estimated duration that you can play back using the Stereo Earphone Set 01 (option) with the FOMA terminal closed.
- ※3 File format: AAC
- ※4 Shares with still images, i-motion files, melodies, PDF files, Music&Video Channel programs, Kisekae Tool files, Machi-chara images, Content packages, Font, Screen memos, ToruCa files, and i-αppli programs.

■Battery pack

Name of product	Battery Pack P23
Battery type	Li-ion (lithium ion) battery
Voltage	3.7 V
Capacity	800 mAh

■Specifications of shooting

<Still image (Photo mode)>

File format (Extension)	JPEG (jpg)
The number of files that can be	Approx. 1,200 max. *1*2
saved to P-03D	
The number of files that can be	Approx. 61,466 max. *2
saved to the microSD card (2 Gbytes)	

<Moving picture (Movie mode)>

File format (Extension)	MP4, ASF (3gp, asf)
Recordable time to P-03D	Approx. 30 seconds max. *1*3
Recordable time to the microSD	Approx. 180 minutes max. **4
card (2 Gbytes)	

<Zoom>

Still image	Level of zoom	21 levels
(Photo mode)	The maximum	Approx. 16.2 times
	magnifications	
Moving picture	Level of zoom	21 levels
(Movie mode)	The maximum	Approx. 7.7 times
	magnifications	

- *1 Default setting
- **2 The number of files that can be saved under the conditions of "Picture size: QVGA (320 x 240), Quality: Standard, File size: 25 Kbytes".
- *3 Maximum recording duration per shot that can be saved to the main unit under the conditions of "Movie size: VGA (640 x 480), File size: Mail restriction (L), Quality: Standard, Movie type set: Normal".

**4 Maximum recording duration per shot that can be saved to the microSD card (2 Gbytes) under the conditions of "Movie size: VGA (640 x 480), File size: Long time, Quality: Standard, Movie type set: Normal".

■Recordable time of 1Seg

Maximum (total) recordable time to	Approx. 640 minutes
the microSD card (2 Gbytes)	
Maximum (total) recordable time to	Approx. 10,240 minutes
the microSDHC card (32 Gbytes)	

- The maximum recordable time is the estimate for 224 kbps of video, 48 kbps of audio, and 52 kbps of data (including captions). The recordable time varies depending on the broadcasting station or program.
- The maximum file size for continuous recording is up to 2 Gbytes under SD-VIDEO specifications.
- ■Number of savable/registerable items in FOMA terminal

Function		Number of savable/ registerable items
Phonebook		1,000
Schedule		2,500 max. **1
Mail	Received mail	2,500 max. *1*2
	Sent mail	1,000 max. *1
Still image i-motion file		3,500 max. **1
		3,500 max. **1
Music&Video	Downloaded	2
Channel	program	
	Saved program	10 max. **1
Kisekae Tool i-αppli		3,500 max. **1
		100 max. **1

- %1 The number of savable/registerable items may decrease depending on the data volume.
- ※2 Includes pre-installed data.

Specific Absorption Rate (SAR) of Mobile Phones

SAR Certification Information

This model P-03D mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves' and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.387 W/kg. There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device.

This mobile phone can be used in positions other than against your ear. This mobile phone satisfies the international guidelines when used with a carrying case or a wearable accessory approved by NTT DOCOMO, INC.** In case you are not using the approved accessory, please use a product that does not contain any metals, and one that positions the mobile phone at least 1.5 cm away from your body.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone uses."

Please refer to the WHO website if you would like more detailed information.

http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website: http://www.tele.soumu.go.jp/e/sys/ele/index.htm Association of Radio Industries and Businesses Website: http://www.arib-emf.org/index02.html (In Japanese only) NTT DOCOMO INC Website:

http://www.nttdocomo.co.jp/english/product/sar/ Panasonic Mobile Communications Co., Ltd. Website: http://panasonic.jp/mobile/ (In Japanese only)

- Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
- ** Regarding the method of measuring SAR when using mobile phones in positions other than against the ear, international standards (IEC62209-2) were set in March of 2010. On the other hand, technical regulation is currently being deliberated on by national council. (As of October, 2011)

European RF Exposure Information

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was 0.272 W/kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

- * The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAB.
- ** The SAR limit for mobile phones used by the public is 2.0 watts/ kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- **** Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Declaration of Conformity

C€0168

The product "P-03D" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on http://panasonic.net/pmc/support/index.html.

*The European RTTE approval of this product is limited to the use of the P-03D handset, Battery Pack and FOMA AC Adapter 01 for Global use (100 to 240 V AC) only. Other accessories are not part of the approval.

FCC Notice

- This device complies with part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

This model phone meets the U.S. government's requirements for exposure to radio waves.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR), The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base

station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed in various positions and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.499 W/kg, and when worn on the body in a holster or carry case, is 0.452 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at http://www.fcc.gov/oet/ea/fccid/ after search on FCC ID UCE111045A. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Important Safety Information

Aircraft

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

Driving

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

Hospitals

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Petrol Stations

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 22 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration Regulations

This product and its accessories might be covered by the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). To export this product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry.

In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

Intellectual Property Right

Copyrights and Portrait Rights

You have no right to copy, modify, or distribute the contents such as text, images, music, or software programs downloaded from websites on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law.

Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait rights.

Trademarks

- "FOMA", "i-mode", "i-αppli", "i-motion", "Deco-mail", "Chara-den", "ToruCa", "WORLD CALL", "DCMX", "i-area", "WORLD WING", "OFFICEED", "2in1", "docomo STYLE series", and the logos of "i-mode", "i-αppli", and "Music&Video Channel" are trademarks or registered trademarks of NTT DOCOMO, INC.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/ or its affiliates in the US and/or other countries.
- Rovi, G-GUIDE, G-GUIDE MOBILE and G-Guide related logos are trademarks or registered trademarks of Rovi Corporation and/or its subsidiaries in Japan.
- QuickTime is a registered trademark of Apple Inc., in the US and other countries
- Microsoft[®], Windows[®], Windows Media[®] and Windows Vista[®] are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

- Powered by JBlend™ Copyright 2002-2011 Aplix Corporation.
 All rights reserved.
- JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- is a registered trademark of FeliCa Networks, Inc.
 microSDHC Logo is a trademark of SD-3C, LLC.

IBlend

- "Multitask" is a registered trademark of NEC Corporation.
- "AXIS Font" is a trademark of AXIS Inc., and the "AXIS" font is a font developed by Type Project Inc.
- This product contains NetFront Browser, NetFront Document Viewer and NetFront Sync Client of ACCESS CO., LTD.

ACCESS*
NetFront*

ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

Copyright © 2011 ACCESS CO., LTD. All rights reserved. This software is based in part on the work of the Independent JPEG Group.

- · QR code is a registered trademark of Denso Wave Inc.
- "VIERA®" is a registered trademark of Panasonic Corporation.
- Google and Google Map for Mobile are trademarks of Google Inc.
- Powered by Mascot Capsule®/Micro3D Edition™
- Mascot Capsule® is a trademark of HI CORPORATION.
- "Blu-ray Disc" and "Blu-ray" are trademarks of the Blu-ray Disc Association.
- Other company names and product names described in the text are trademarks or registered trademarks of those companies.

Others

- This product contains IrFront of ACCESS CO., LTD. IrFront is a registered trademark or trademark of ACCESS CO., LTD. in the United States, Japan and/or other countries.
- The IrDA[®] Feature Trademark is owned by the Infrared Data Association and used under license therefrom.
- Contains Adobe[®] Flash[®] Lite[®] and Adobe Reader[®] Mobile technology by Adobe Systems Incorporated.

Adobe Flash Lite Copyright © 2003-2011 Adobe Systems Incorporated. All rights reserved.

Adobe Reader Mobile Copyright © 1993-2011 Adobe Systems Incorporated. All rights reserved.

Adobe, Adobe Reader and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.
- This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see "GPL/LGPLライセンス説明" in " \S mode" of "My document" under "Data box" from the Main Menu.
- (The first part of "GPL/LGPLライセンス説明" is only available in Japanese.)
- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.
- iWnn © OMRON SOFTWARE Co., Ltd. 2008-2011 All Rights Reserved.
- "Text Profiler" is trademark of OMRON Corporation.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to
- (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or

(ii)decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide MPEG-4/AVC/VC-1 Video.

No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

- This product is manufactured or sold under license from InterDigital Technology Corporation.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.

Windows 7 stands for Microsoft® Windows® 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).

Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise and Ultimate).

Windows XP indicates the Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.

- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

- Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.
- Copyright 2001 Seiko Epson Corporation. All Rights Reserved.
 PRINT Image Matching is a trademark of Seiko Epson

Corporation.
The PRINT Image Matching logo is a trademark of Seiko

The PRINT Image Matching logo is a trademark of Seiko Epson Corporation.

 The HMM-Based Speech Synthesis Engine in this product uses the Simplified BSD License.

PRINT

Matchind

The HMM-Based Speech Synthesis System (HTS) hts_engine API developed by HTS Working Group http://hts-engine.sourceforge.net/

Copyright ©

2001-2010 Nagoya Institute of Technology, Department of Computer Science

2001-2008 Tokyo Institute of Technology, Interdisciplinary Graduate School of Science and Engineering

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. - Neither the name of the HTS working group nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED. WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES: LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE. EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Index AC adapter......26 After-sales service......96 Alarm......86 Antenna......5 Area mail61 AUTO-GPS......70 Auto-key lock......47 Auto shutter......73 Auto-sort60 Back cover......4 Backlight......41 Bar code reader.....87 Battery pack24 Attaching/removing.....24 Charging25 Bookmark 66 Calendar......86 Call/charging indicator.....4 Caller ID notification.....28 Call forwarding service.....54 Call rejection setting......48 Call waiting service54

Camera......71

Channel setting	.75
Character entry	
Line feed	
Pictograms	
Smiley	
Symbols	
Character size	
Charging	
Charging terminal	
Check mail/message	
Closed lock setting	
Connector terminal	
Connector terminal cover	
Continuous shooting	
Copyrights	
D	
Deco-mail	.58
Decome-Anime	
Desktop holder	
Dial lock	
Dial/received list	
Display4	
DOCOMO connection manager	.93
docomo mini UIM card	
docomo Palette UI	
Down style	
Draining water	

E	
Early warning "Area Mail"61	
Earphone5	
Earpiece4	
Earpiece volume51	
eco mode43	
eco mode autostart44	
eco mode setting43	
ECO NAVI3, 30	
Emergency call55	
English display28	
Error information send setting98	
Export administration regulations113	
F	
FeliCa4, 83, 92	
Osaifu-Keitai83	
Finder display71	
FOMA antenna5	
Full browser65	
Function list103	
G	
GPS68	
GPS antenna5	
GPS antenna5 GPS compatible i-αppli69	

H	K	MUSIC player79
Holding49	Keypad lock47	MUSIC player display79 Music&Video channel78
	Keypad sound40	
	Kisekae tool42	MyFACE34
i-αppli80	Koe-no-takuhaibin50	N
IC card lock46		Navi69
iC communication92	L.	Navigation displays31
i-Channel67	Light sensor4	. ,
i-concier84	List of materials used15	Network security code45
Illumination setting43	Location information68	Network services53
i-mode64		Notification icon30
i-mode fault diagnosis site98	M	Numeric keys4
i-mode mail57	Machi-chara setting42	0
Compose57	Mail57	Omakase lock47
Forward59	Main menu32	
Receive59	Main specifications109	Options102
Reply59	Making a call49	Original40
Send57	Making a videophone call49	Original lock47
i-mode password45	Manner mode40	Osaifu-Keitai83
i-motion82	Map application69	Out-of-service-area indication29
Incam light4	Map/GPS68	Outside camera5
Infrared communication92	Menu icon32	Overseas use56
Infrared data port4, 92	Microphone4	Own number28
Initialize48	microSD card89	D
Initial setting27	Back up/restore92	
Inside camera4	Check90	Part names and functions4
Intellectual property right114	Copy91	PC connection93
International call50	Format90	Pedometer88
International roaming56	Inserting/removing89	Phonebook62
i-Widget80	Motion control setting30	Add to phonebook62
i-wiuget00	Movie82	Delete data63
	1VIOVIG02	Edit phonebook63

Search phonebook49	Schedule86	ToruCa83
Photo light4	Screen memo67	Trademarks114
Picture album72	Security codes44	Troubleshooting94
PIN1 code45	Security scan function	TV timer77
PIN1 code entry set46	(Scanning function)101	U
PIN2 code45	Select language28	U
PIN unblocking key (PUK)46	Select ring tone39	Unoperated lock setting47
Playing moving picture72, 82	Shabette-Kensaku85	Update (Pattern data)101
Portrait rights114	Shooting moving pictures72	V
Position location69	Shooting still images72	V
Power on/off27	Shortcut35	Vibrator setting39
Power saver mode41	Simple menu33	Video77
Profile28	Site access64	Video recording76
Public mode (Drive mode)52	SMS61	View blind41
Public mode (Power off)52	Compose61	Viewer display76
	Receive62	Viewing still images72
Q	Send61	Voice mail service54
QR code87	Send	
		W
QR code	Software update99	W Warranty96
QR code	Software update99 Speaker4	W Warranty96 Waterproof performance19
QR code	Software update	W Warranty96 Waterproof performance19 WORLD CALL50
QR code	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32	W Warranty96 Waterproof performance19
QR code 87 Quick mirror 88 R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32 Stand-by display 32, 40	W Warranty
QR code	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32 Stand-by display 32, 40 Stand-by shortcut 30	W Warranty
QR code 87 Quick mirror 88 R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51	Software update 99 Speaker .4 Specific absorption rate .111 Speed selector .31, 32 Stand-by display .32, 40 Stand-by shortcut .30 Start by voice .85	W Warranty
QR code 87 Quick mirror 88 R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51 Record message 51 Related devices 102 Reset settings 48	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32 Stand-by display 32, 40 Stand-by shortcut 30 Start by voice 85 Status icon 29	W Warranty
QR code 87 Quick mirror 88 R R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51 Record message 51 Related devices 102	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32 Stand-by display 32, 40 Stand-by shortcut 30 Start by voice 85 Status icon 29 Strap hole 5	W Warranty
QR code 87 Quick mirror 88 R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51 Record message 51 Related devices 102 Reset settings 48	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32 Stand-by display 32, 40 Stand-by shortcut 30 Start by voice 85 Status icon 29 Strap hole 5	W Warranty
QR code 87 Quick mirror 88 R R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51 Record message 51 Related devices 102 Reset settings 48 Ring volume 39	Software update 99 Speaker 4 Specific absorption rate 111 Speed selector 31, 32 Stand-by display 32, 40 Stand-by shortcut 30 Start by voice 85 Status icon 29 Strap hole 5	W Warranty
QR code 87 Quick mirror 88 R Radio waves reception level 29 Receiving a call 51 Receiving a videophone call 51 Record message 51 Related devices 102 Reset settings 48	Software update 99 Speaker .4 Specific absorption rate .111 Speed selector .31, 32 Stand-by display .32, 40 Stand-by shortcut .30 Start by voice .85 Status icon .29 Strap hole .5 Submenu .33	W Warranty

Access the following for checking or changing the contents of your contract, or for applying to respective services, and asking for related documents:

From i-mode

i Menu ▶ お客様サポート (User support) ▶ お申込・お手続き (Applications/Procedures) ▶ 各種お申込・お手続き (Respective applications/procedures)

From PC

My docomo (http://www.mydocomo.com/) > 各種お申込・お手続き

- "お客様サポート (User support)" and My docomo are available in Japanese only.
- · You will need your "Network Security Code" for the access from i-mode. · No packet communication charges are incurred for the access from

i-mode. Accessing from overseas will incur charges.

• You will need your "docomo ID/password" for the access from a PC.

- · If you do not have or you have forgotten your "Network Security Code" or "docomo ID/password", contact "General Inquiries" listed on the back page of this manual.

Packet communication charges free

- . You may not be able to access the site depending on the details of your subscription.
- · You may not be able to access the site due to system maintenance, etc.



Using mobile phone with your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

In the following cases, be certain to turn off the power.

Where use is prohibited

• Be sure to turn off the power of your mobile phone in airplanes, in hospitals and around priority seat in a train, etc.

In the following cases, be certain to set Public mode.

■While driving

- Using the mobile phone in your hand while driving is subject to punishment. This does not apply in unavoidable circumstances when, for instance, responding to someone who is sick, injured or when maintaining public order.
- When in theaters, movie theaters, museums, and similar venues

Respect the privacy.

Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.



An Environment Protection Program by DOCOMO

Simplified Version of the Manual

We have edited the traditional instruction manual to simplify the descriptions of basic operational procedures for respective functions. As a result, we have succeeded to reduce the consumption of paper used

For the functions frequently used and more detailed descriptions, you can refer to "使いかたガイド (Guide)" (in Japanese only) that comes with the FOMA terminal and the DOCOMO website.

Collection and Recycling of Mobile Phones



To carry out the protection of environment and the reuse of precious resources, we at mobile phone and PHS carriers collect your disused mobile phones. batteries, or chargers for recycling to a shop having

this mark, regardless of brand names or makers.

Kindly take your disused ones to a docomo Shop nearby.

Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

From DOCOMO mobile phones

International call access code for the country you stay at

-81-3-6832-6600* (toll free)

*You are charged a call fee to Japan when calling from a land-line phone, etc.

If you use P-03D, you should dial the number +81-3-6832-6600 (to enter "+", press and hold the "0" key for at least one second).

From land-line phones

<Universal number>

Universal number international prefix

-8000120-0151*

*You might be charged a domestic call fee according to the call rate for the country you stay at

 For international call access codes for major countries and universal number. international prefix, refer to the DOCOMO International Services website.

Failures encountered overseas <Network Support and Operation Center>

(available 24 hours a day)

From DOCOMO mobile phones

for the country you stay at

International call access code -81-3-6718-1414* (toll free)

*You are charged a call fee to Japan when calling from a land-line phone, etc. * If you use P-03D, you should dial the number +81-3-6718-1414

(to enter "+", press and hold the "0" key for at least one second).

From land-line phones <Universal number>

Universal number

international prefix

-8005931-8600*

*You might be charged a domestic call fee according to the call rate for the country you stay at.

 For international call access codes for major countries and universal number. international prefix, refer to the DOCOMO International Services website.

- If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
- If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.

General Inquiries <docomo Information Center>

0120-005-250 (toll free)

- * Service available in English, Portuguese, Chinese, Spanish, and Korean,
- * Unavailable from part of IP phones. (Business hours: 9:00 a.m. to 8:00 p.m.)

(In Japanese only)

From DOCOMO mobile phones From land-line phones (In Japanese only)

(No prefix) 151 (toll free) * Unavailable from land-line phones, etc.

0120-800-000 (toll free) * Unavailable from part of IP phones.

(Business hours: 9:00 a.m. to 8:00 p.m. (open all year round))

Please confirm the phone number before you dial.

• For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DOCOMO website or the i-mode site.

NTT DOCOMO website http://www.nttdocomo.co.jp/english/

i-mode site i Menu ▶ お客様サポート (User support) ▶ ドコモショップ (docomo Shop) (In Japanese only)



Don't forget your mobile phone ... or your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Sales: NTT DOCOMO, INC.

Manufacturer: Panasonic Mobile Communications Co., Ltd.



To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a

November '11 (Edition 1.1) 3TR100426AAA F1011-1

recycle center.

Repairs

From DOCOMO mobile phones From land-line phones (In Japanese only)

(In Japanese only) (No prefix) 113 (toll free)

0120-800-000 (toll free)

* Unavailable from land-line phones, etc.

* Unavailable from part of IP phones.

(Business hours: 24 hours (open all year round))

P-03D

Manual for PC Connection

Data Communication Available from FOMA Terminal	1
Before Using Data Communication	2
Setup Flow for Data Transfer (OBEX™ Communication)	4
Setup Flow for Data Communication	
Installing FOMA Communication Configuration File (Driver)	6
DOCOMO Connection Manager	
Before Installing DOCOMO Connection Manager	11
Installing DOCOMO Connection Manager	12
Starting DOCOMO Connection Manager	15
Setting Dial-up Network	16
Making Dial-up Connection	30
AT Command	34
AT Command List	35

About Manual for PC Connection

This manual gives you the explanations of details required for having data communication with your P-03D, and installing "FOMA communication configuration file"/"DOCOMO Connection Manager" on your personal computer assuming that you are using the one that comes with Windows 7.

Some procedures and displays may differ depending on your operating environment.

Data Communication Available from FOMA Terminal

The data communication services you can use by connecting the FOMA terminal to a personal computer are classified as data transfer (OBEX[™] communication), packet communication, and 64K data communication. The FOMA terminal is equipped with the adapter function for packet communication.


- To perform the packet communication overseas, perform it via the IP connection. (You cannot perform the packet communication via the PPP connection.)
- •64K data communication is not available overseas.

Data Transfer (OBEX™ Communication)

You can exchange data files such as images, melody files, Phonebook entries and mail messages with another FOMA terminal or a personal computer.

•The data files you can exchange vary depending on the transfer methods. For details, confirm each transfer method.



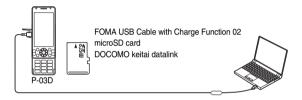

Packet Communication

This communication system requires a communication fee according to the amount of data you sent and received. (Best effort system with 7.2 Mbps of maximum download speed and 2.0 Mbps of maximum upload speed) It uses an access point which supports FOMA packet communication such as DOCOMO Internet access service "mopera U".

Packet communication is available by configuring various settings after connecting the FOMA terminal to a personal computer via the FOMA USB Cable with Charge Function 02 (option), and is suitable for using applications which require the high-speed communication.

To carry out the settings and connection, see page 4 and after.

- The maximum speed is based on the technical specification. The actual communication speed varies depending on the network congestion state and the communication environment. The communication speed might be lowered when you connect the FOMA terminal to an access point which does not support HIGH-SPEED or the terminal is outside the FOMA High-Speed Area, or when you use the device which does not support High-Speed such as DOCOMO's PDA "sigmarion II".
- •The packet communication is charged according to the amount of data you sent and received. Note that you are charged a high communication fee for the massive data communication such as browsing Internet websites having many images or downloading data files.

64K Data Communication

This communication system requires a communication fee according to the duration of connection. By connecting the FOMA terminal to a personal computer via the FOMA USB Cable with Charge Function 02 (option), you can execute communication.

It uses an access point which supports FOMA 64K data communication such as DOCOMO Internet access service "mopera U", or an ISDN-synchronous 64K access point. To carry out the settings and connection, see page 4 and after.

•The 64K data communication is charged according to the duration of connection. Note that a communication fee becomes expensive if you use this service for a long time.

Information

- •The FOMA terminal does not support Remote Wakeup.
- The FOMA terminal does not support the FAX communication.
- ●You can perform data communications by connecting the FOMA terminal with DOCOMO's PDA "sigmarion II".

Before Using Data Communication

Charge of Internet service provider

To use the Internet, you need to pay the charge for the Internet service provider you use. Besides the FOMA service fee, you need to directly pay this charge to the Internet service provider. For details on the charge, contact the Internet service provider you use.

You can use the DOCOMO Internet access service, "mopera U". To use "mopera U", subscription (charged) is required.

Setting access point (Internet service provider, etc.)

The access points for the packet communication and 64K data communication differ. To use the packet communication, connect to an access point which supports packet communication. To use the 64K data communication, connect to an access point which supports FOMA 64K data communication or ISDN-synchronous 64K.

• You cannot connect to the DoPa access point.

About user authentication for accessing network

User authentication (ID and password) may be required at connection to some access points. In that case, enter your ID and password on the communication software (dial-up network). ID and password are specified by the Internet service provider or network administrator of the access point. For details, contact the provider or network administrator.

About access authentication for using browser

To use the FirstPass supporting site from a browser on your personal computer, you need to have FirstPass (user certificate) for access to authentication. Download the FirstPass PC software from the DOCOMO website, and then install it and establish the settings on your personal computer. For details, refer to the DOCOMO website.

Conditions of packet communication and 64K data communication

To carry out the communication using the FOMA terminal in Japan, the following conditions are required:

- The personal computer to be used can use the FOMA USB Cable with Charge Function 02 (option).
- The PDA to be used should support FOMA packet communication and 64K data communication.
- · Within the FOMA service area
- · For packet communication, the access point should support packet communication of the FOMA.
- · For 64K data communication, the access point should support the FOMA 64K data communication or ISDN-synchronous 64K.

Even when these conditions are satisfied, if the base station is congested or the radio wave conditions are bad, you may not carry out the communication.

Operating Environment

For the data communication, the following operating environment is required for your personal computer:

Item	Necessary Environment
PC main unit	PC/AT compatible model When using the FOMA USB Cable with Charge Function 02 (option): USB port (Universal Serial Bus Specification Rev1.1/2.0 compliant) Display resolution 800 x 600 dots, high color 16 bits or more recommended. ● For DOCOMO Connection Manager, display resolution 1024 x 600 dots or more (1024 x 768 dots or more recommended)
os	Windows 7 32-bit version/64-bit version (Japanese version) •For DOCOMO Connection Manager, Windows 7 (including SP1) Windows Vista 32-bit version/64-bit version (Japanese version) •For DOCOMO Connection Manager, Windows Vista SP2 only Windows XP 32-bit version (Japanese version) •For DOCOMO Connection Manager, Windows XP SP3 only
Memory requirements	Windows 7 32-bit version: 1 Gbyte or more Windows 7 64-bit version: 2 Gbytes or more Windows Vista: 512 Mbytes or more Windows XP: 128 Mbytes or more (Japanese version in each)
Hard disk space size	Unused memory space of 5 Mbytes or more ■Unused memory space of 10 Mbytes or more for DOCOMO Connection Manager

[•] The following operating environment is required for DOCOMO Connection Manager:

Web-browsing software: Internet Explorer 6.0 or later

E-mail software: Windows Mail or Outlook Express 6.0

- For the latest information about the operating environment, refer to the DOCOMO website.
- The operation in the added/changed operating environment and on the upgraded OS is not guaranteed.
- The memory requirements and hard disk space size may vary depending on the system environment.

Necessary Devices

The following hardware and software are required besides the FOMA terminal and personal computer:

- · FOMA USB Cable with Charge Function 02 (option) or FOMA USB Cable (option)
- · "FOMA communication configuration file" (driver)*
- *Download the FOMA communication configuration file from the DOCOMO website.

Information

- Use a dedicated FOMA USB Cable with Charge Function 02 or FOMA USB Cable. The USB cable for personal computers cannot be
 used because the shape of the connector differs.
- $\bullet\,\mbox{If you use a USB hub, the devices may not work correctly.}$


Setup Flow for Data Transfer (OBEX™ Communication)

When you use the FOMA USB Cable with Charge Function 02 (option), install the FOMA communication configuration file.

Install the "FOMA communication configuration file" (driver). (See page 6) • Download the FOMA communication configuration file from the DOCOMO website and install. Data transfer

Setup Flow for Data Communication


The following outline shows a setup flow for packet communication or 64K data communication.

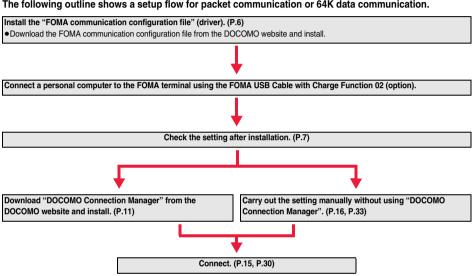

Connecting PC and the FOMA Terminal

The following steps explain how to connect the FOMA USB Cable with Charge Function 02 (option).

1 Check the direction of the connector terminal of the FOMA terminal, then straight insert the external connector of the FOMA USB Cable with Charge Function 02 until it clicks.

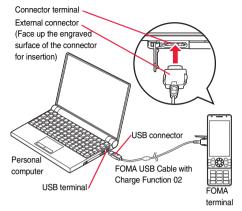

Connect the USB connector of the FOMA USB Cable with Charge Function 02 to the USB terminal of the personal computer.

Information

- Set "USB mode" to "Communication mode" for data communication.

 Operate "

 Setting


 External connection

 USB mode

 Communication mode".
- Do not forcibly insert the FOMA USB Cable with Charge Function 02. Malfunction may result. Insert each connector in the correct direction at the correct angle; otherwise, you will fail connection. When the direction and angle are correct, you can insert a connector smoothly without the strong force. If you fail to insert a connector, check its shape and direction once more without inserting a connector forcibly.
- Use a dedicated FOMA USB Cable with Charge Function 02. (The USB cable for personal computers cannot be used because the shape of the connector differs.)
- Symbol " "]" appears on the FOMA terminal when the FOMA terminal recognizes the connection with the personal computer after you install the FOMA communication configuration file (driver) for packet communication or 64K data communication. Before you install the FOMA communication configuration file (driver), the FOMA terminal does not recognize the connection with the personal computer, and symbol " "]" does not appear.

Removing

- While holding down the release buttons of the external connector of the FOMA USB Cable with Charge Function 02, straight pull out the connector.
- Pull out the FOMA USB Cable with Charge Function 02 from the USB terminal of the personal computer.

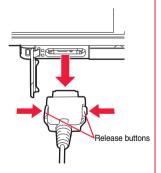

Information

- Do not disconnect the FOMA USB Cable with Charge Function 02 forcibly. Malfunction may result.
- Do not disconnect the FOMA USB Cable with Charge Function 02 during data communication. Erroneous operation or malfunction of the personal computer or FOMA terminal, or loss of data could result.
- Do not connect/disconnect the FOMA USB Cable with Charge Function 02 in succession. Once you connect the cable, wait for a
 while, then disconnect it and vice versa.

Installing FOMA Communication Configuration File (Driver)

Installing the FOMA communication configuration file (driver) is required when you connect the FOMA terminal to your personal computer via the FOMA USB Cable with Charge Function 02 (option) for the first time

- Operate as the user who has the PC administrator right.
- End all the programs resident on your personal computer before installing the FOMA communication configuration file (driver).
- Download the FOMA communication configuration file (driver) from the DOCOMO website.
- Double-click "exe" file of the downloaded FOMA communication configuration file (driver) to execute. Decompress it into the desired folder.
- 3 Double-click "P03D_ins.exe" in the decompressed folder, and click "はい (Yes)".
 - ●For Windows Vista, click "続行 (Continue)" instead of "はい (Yes)".
 - For Windows XP, the user account control display does not appear.
- ✓ Click "OK".



Turn on the FOMA terminal's power, then connect the FOMA terminal to the personal computer using the FOMA USB Cable with Charge Function 02. (See page 5)

Installation starts.

Click "OK".

After the installation of all the "FOMA communication configuration files" (driver) is completed, a pop-up message "デバイスを使用する準備ができました デバイス ドライバー ソフトウェアが正しくインストールされました。(The system is ready to use the device. The device driver software was installed correctly.)" appears for a few seconds from the indicator on the task bar.

Confirm Installed FOMA Communication Configuration File (Driver)

Confirm that the "FOMA communication configuration file" (driver) is installed correctly.

For Windows 7

- **1** " 🛜 [スタート (Start)]"
 - ▶ Open "デバイスとプリンター (Devices and printers)".
- Open "docomo STYLE series P-03D"
 - ▶ Click the "ハードウェア (Hardware)" tab.
- Confirm the installed driver names.

Confirm that all driver names are displayed.

 The COM port number varies depending on the personal computer you use.



For Windows Vista, Windows XP

1 "☑ [スタート (Start)]" ➤ Open "コントロールパネル (Control panel)" ➤ Open "システムとメンテナンス (System and maintenance)".

<For Windows XP>

"スタート (Start)"→Open "コントロールパネル (Control panel)"

→"パフォーマンスとメンテナンス (Performance and maintenance)"→Open "システム (System)".

2 Open "ハードウェアとデバイスを表示 (Show hardwares and devices)" ► Click "続行 (Continue)".


<For Windows XP>

Click the "ハードウェア (Hardware)" tab→ Click "デバイスマネージャ (Device manager)".

Click each device, then confirm the installed FOMA communication configuration file (driver) names.

Confirm that all FOMA communication configuration file (driver) names are displayed under "ポート (COMとLPT) [Port (COM/LPT)]", "モデム (Modem)", and "ユニバーサル シリアル バス コントローラ (Universal serial bus controller)".

The COM port number varies depending on your personal computer

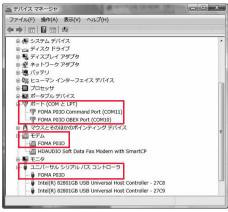

The following drivers are installed by installation of the "FOMA communication configuration file" (driver):

Device name	FOMA communication configuration file (driver) name
ポート (COMとLPT) [Port (COM/LPT)]	FOMA P03D Command Port FOMA P03D OBEX Port
モデム (Modem)	· FOMA P03D
⟨For Windows 7⟩ ユニバーサル シリアル パス コントローラー (Universal serial bus controller) ⟨For Windows Vista> ユニバーサル シリアル パス コントローラ (Universal serial bus controller) ⟨For Windows XP> USB (Universal Serial Bus) コントローラ [USB (Universal Serial Bus) controller]	· FOMA P03D

Uninstall FOMA Communication Configuration File (Driver)

When uninstalling the "FOMA communication configuration file" (driver) is necessary (such as when upgrading the version), perform the operation below.

. Operate as the user who has the PC administrator right.

- 1 If the FOMA terminal is connected to a personal computer via the FOMA USB Cable with Charge Function 02 (option), disconnect the FOMA USB Cable with Charge Function 02.
- 2 "[スタート (Start)]"▶Open "コントロールパネル (Control panel)" ▶Open "プログラムのアンインストール (Uninstall programs)".

<For Windows XP>

"スタート (Start)"→Open "コントロールパネル (Control panel)"→Open "プログラムの追加と削除 (Add and delete programs)".

3 Select "FOMA P03D USB" and click "アンインストールと変更 (Uninstall and change)".

<For Windows Vista>

When the user account control display appears after step 3, click "続行 (Continue)".

Select "FOMA P03D USB" and click "変更と削除 (Change and delete)".

- Click "OK".
- 「Click "はい (Yes)" to restart Windows.

The uninstallation is then completed.

• If you click "いいえ (No)", restart Windows manually.

Information

•If you remove the FOMA USB Cable with Charge Function 02 from the personal computer or click the "キャンセル (Cancel)" button to stop installation while installing the "FOMA communication configuration file" (driver), the "FOMA communication configuration file" (driver) may not be installed correctly. In that case, execute "P03D_un.exe" in the folder decompressed in step 2 on page 6 to delete the "FOMA communication configuration file" (driver), and then install the files again.

DOCOMO Connection Manager

DOCOMO Connection Manager is a convenient software program to perform flat-rate data communication and volume charging data communication. It enables you to sign up for "mopera U" and easily make PC settings according to your contract situation. It also enables you to check the estimate data traffic and usage amount with the charge counter function.

This manual explains how to install "DOCOMO Connection Manager".

** To access the Internet by using a terminal, you need to apply for the flat-rate data plan or the FOMA service and contract with a Internet service provider (such as "mopera U") which supports data communication.
For details, refer to the DOCOMO website.



■When Using Volume Charging Data Communication

Note that a communication fee might become expensive when you transfer a large amount of data such as by browsing websites having many images, or by downloading data (such as application, music/movie data, updating of OS/Anti-virus software). When you perform data communication by connecting the FOMA terminal to your personal computer via the USB cable, note that the communication is not covered by the flat-rate service of "Pake-hodai" and "Pake-hodai full".

Before Installing DOCOMO Connection Manager

Preparation for Installation

STEP

Prepare the FOMA terminal and the FOMA USB Cable with Charge Function 02 (option).

STEP

Check the billing plan or the discount service and the contract contents with Internet service provider.

STEP

- When a connection software program other than "DOCOMO Connection Manager" is installed, set it not to start automatically.
- See page 12 for using communication software other than "DOCOMO Connection Manager".

About Internet Explorer Settings

Before using this software program, make the setting on the "接続 (Connection)" tab of "インターネットオプション (Internet option)" of Internet Explorer to "ダイヤルしない (Not to dial)".

Start Internet Explorer, and select "ツール (Tool)" → "インターネット オプション (Internet option)".



- **2** Select the "接続 (Connection)" tab and select "ダイヤルしない (Not to dial)".
- ? Click "OK".

Log on as a DOCOMO Connection Manager User

When installing DOCOMO Connection Manager, be sure to do so from a user account that has computer administrator permissions. Installing from another account might result in an error.

<For Windows 7 and Windows Vista>

An administrator account is required. If you are logged onto a non-administrator account, a window prompting you to enter an administrator user name and password appears during installation. <For Windows XP>

Log on as a user that is a member of the Administrators group or is a computer administrator.

Quit All Open Applications

When installing DOCOMO Connection Manager, quit all resident programs in Windows, including antivirus software

(Example) Right-click the icon appears on the task tray, and select "閉じる (Close)" or "終了 (Quit)".

Information

<use of connection software other than "DOCOMO Connection Manager">

- You do not simultaneously need following software programs as this software program includes the functions equivalent to them. Uninstall or set them not to start depending on your needs.
- *Software programs you do not need to use simultaneously
 - ・mopera Uかんたんスタート (mopera U start up tool)
 - ・ Uかんたん接続設定ソフト (mopera U connection & setting tool)
 - ・FOMA PC設定ソフト (FOMA PC configuration software) ・FOMAバイトカウンタ (FOMA byte counter)

When you use Mzone (DOCOMO public wireless LAN service) with this software program, uninstall the following public wireless LAN connection software programs.

*You cannot use Mzone when they are simultaneously installed:

- ・U公衆無線LANユーティリティソフト (U public wireless LAN utility software)
- ・ドコモ公衆無線LANユーティリティソフト (DOCOMO public wireless LAN utility software)
- ・ドコモ公衆無線LANユーティリティプログラム (DOCOMO public wireless LAN utility program)


Installing DOCOMO Connection Manager

To connect the FOMA terminal to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication.

Using "DOCOMO Connection Manager", you can easily set up dial-up, communication setup optimization, and access point name (APN).

- Access the Web page of DOCOMO Connection Manager on the DOCOMO website.
 - http://www.nttdocomo.co.jp/support/utilization/application/service/connection_manager/ (In Japanese only)
- Select "ドコモ コネクションマネージャ (Windows®)へ [To DOCOMO Connection Manager (for Windows®)]".
- Select "ドコモ コネクションマネージャ (Windows®用) ダウンロードへ [Download DOCOMO Connection Manager (for Windows®)]".
- Confirm the licensing contract contents. If you agree with the contents, select "同意する (Agree)" to download.
- Double-click downloaded "dcm connect mng setup.exe" to execute, and click "はい (Yes)".
 - ●For Windows Vista, you click "続行 (Continue)" instead of "はい (Yes)".
 - For Windows XP, the user account control display does not appear.

ら Click "次へ (Next)".

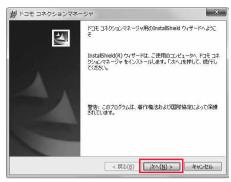

7 Confirm the display precautions and click "次へ (Next)".



8 Confirm the licensing contract contents. If you agree with the contents, select "使用許諾契約の条項に同意します (Agree with the licensing contract contents)" and click "次へ (Next)".




Confirm the installation destination folder, then click "次へ (Next)".



10 Click "インストール (Install)".

11 Click "完了 (Finish)".
Installation is completed.

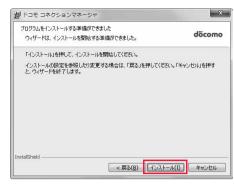



Starting DOCOMO Connection Manager

- 1 "[[スタート (Start)]" ▶ "すべてのプログラム (All programs)" ▶ "NTT DOCOMO"
 - ▶ "ドコモ コネクションマネージャ (DOCOMO Connection Manager)"
 - ▶ "ドコモ コネクションマネージャ (DOCOMO Connection Manager)"

"DOCOMO Connection Manager" starts.

When this is the first start-up, the setting wizard appears automatically.

Hereafter, proceed operation/settings following the instruction of software to complete the preparation to access the Internet. For details, refer to Help for DOCOMO Connection Manager.



When you disconnect the communication line

You cannot disconnect the communication line only by exiting a browser software or e-mail software.

When you do not use the communication line, be sure to click "切断する (Disconnect)" to disconnect the communication line.

When you have set the auto-update for OS and others, note that you may be charged a high packet communication fee for when they are automatically updated.



Setting Dial-up Network

Set Packet Communication

This section explains how to set up a connection for packet communication without using "DOCOMO Connection Manager".

The packet communication uses AT commands to carry out the settings from a personal computer. To specify settings, communication software to enter AT command is required. "Hyper Terminal", which is attached to Windows as the standard software, is used here for explanation.

When using DOCOMO Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN) (see page 19).

You can set "caller ID notified/not notified" (see page 22) as required. (You need to set "caller ID notified" when using "mopera U" or "mopera".)

• Windows 7 and Windows Vista do not support "Hyper Terminal". For these operating systems, use a software program which supports Windows 7 or Windows Vista for setting up the connection. (Follow the settings of the software program used.)

<Packet communication setting flow using AT commands>

Confirm the COM port number (See page 17)



Start the communication software that enables the entry of AT commands (See step 3 on page 19)



Set an access point name (APN) (See step 7 on page 20)



Set "caller ID notified/not notified" (See step 2 on page 22)



Set others (See page 34)



Exit the communication software (See step 9 on page 21)

■AT commands

- •The AT commands are used to control a modem. The FOMA terminal, which conforms to the AT commands, supports some extended commands and unique AT commands.
- By entering AT commands, you can carry out detailed setting for packet communication and FOMA terminal, and confirm (display) the setting contents.
- •If the entered AT command is not displayed, enter "ATE1 ☐.".

Confirm COM Port Number

To manually carry out the communication setting, you need to specify a COM port number, which is assigned to "FOMA P03D" (modem) embedded after you install the "FOMA communication configuration file" (driver). The confirmation method varies depending on the operating system of your personal computer.

When using DOCOMO Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN);
 therefore, you do not need to confirm the modem.

For Windows 7

- **1** "[[スタート (Start)]" ▶ Open "コントロールパネル (Control panel)".
 - ●The "表示方法 (Display method)" changes to "大きいアイコン (Large icon)" or "小さいアイコン (Small icon)" for "カテゴリ (Category)".
- 🤈 Open "電話とモデム (Phone and modem)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".
- 4 Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P03D", then click "OK".
 - •The COM port number you confirmed is used to set an access point name (APN) (see page 19).
 - The contents on the property display and COM port number vary depending on your personal computer.



For Windows Vista

- **1** "🛐 [スタート (Start)]"▶Open "コントロールパネル (Control panel)".
- **2** From "ハードウェアとサウンド (Hardware and sound)" in "コントロールパネル (Control panel)", open "電話とモデムのオプション (Phone and modem options)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".

- 4 Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P03D", then click "OK".
 - •The COM port number you confirmed is used to set an access point name (APN) (see page 19).
 - The contents on the property display and COM port number vary depending on your personal computer.



For Windows XP

- <mark>1</mark> "スタート (Start)" ▶Open "コントロールパネル (Control panel)".
- **2** From "プリンタとその他のハードウェア (Printer and the other hardware)" in "コントロールパネル (Control panel)", open "電話とモデムのオプション (Phone and modem options)".
- 3 If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".
- 4 Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P03D", then click "OK".
 - The COM port number you confirmed is used to set an access point name (APN) (see page 19).
 - The contents on the property display and COM port number vary depending on your personal computer.



Set an Access Point Name (APN)

This section explains how to set an access point name (APN) for packet communication. You can register up to 10 access point names (APNs), which are managed with cid1 to cid10 (see page 21).

When using "mopera U" or "mopera", you do not need to set the access point name (APN).

The explained here is an example when you use "XXX.abc" as the access point name (APN) and use the FOMA USB Cable with Charge Function 02 (option). For the actual access point name (APN), contact your Internet service provider or network administrator.

The setting here will be the access point number for dial-up network setting (see page 23).

For Windows XP

- Connect the FOMA USB Cable with Charge Function 02 to the FOMA terminal.
- Turn the power to the FOMA terminal on, then connect the FOMA USB Cable with Charge Function 02 connected to the FOMA terminal to the personal computer.
- Start Hyper Terminal.

"スタート (Start)"→"すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communications)"→Open "ハイパーターミナル (Hyper Terminal)".

After starting Hyper Terminal, when the message "『既定のTeInet』プログラムにしますか? (Select the specified TeInet program?)" is displayed, set as desired. Contact the maker of your personal computer and Microsoft Corporation for the setting contents.

4 Enter any name in the "名前 (Name)" field, then click "OK".

Here, "Sample" is entered as an example.



Select a connection method.

<When you can select the COM port number of "FOMA P03D">

Select the COM port number with which you install the "FOMA P03D" in the "接続方法 (Connection method)" field, then click "OK"

Then, go to step 6.

 Here, "COM3" is selected as an example. See page 17 for the COM port number of "FOMA P03D" you should actually select in the "接続方法 (Connection method)" field.



<When you cannot select the COM port number of "FOMA P03D">

Click "キャンセル (Cancel)" to close the "接続の設定 (Set a connection)" display, then perform the following operations: (1)"ファイル (File)" menu→Select "プロパティ (Properties)".

- (2) Select "FOMA P03D" in the "接続方法 (Connection method)" field of the "接続の設定 (Set a connection)" tab on the "Sampleのプロパティ (Sample properties)" display.
- (3) Uncheck "国/地域番号と市外局番を使う (Use country/region code and city code)".
- (4) Click "OK".

Then, go to step 7.



The properties of the COM port number appear on the display, then click "OK".

•This display appears when you select a COM port number in step 5.

7 Set an access point name (APN).

Enter an access point name (APN) in the following format:

AT+CGDCONT = cid, "PDP_type", "APN"

cid: Enter any number from 5 through 10.

If you have already specified cid, be careful that its contents are overwritten by the access point name you enter here.

"PDP_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"PDP_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"PDP_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"PDP_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"PDP_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are o


"APN": Enclose an access point name (APN) in double quotation marks (").

(Example:When specifying APN "XXX.abc" in cid5)

AT+CGDCONT=5,"PPP","XXX.abc"

Enter this character string, then press . If "OK" appears, the APN setting is completed.

• To confirm the current APN setting, enter "AT+CGDCONT?

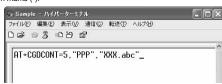

Confirm that "OK" appears on the display.



9 "ファイル (File)" menu▶Select "ハイパーターミナルの終了 (Exit Hyper Terminal)" to exit Hyper Terminal.

- ●If the message "現在、接続されています。 切断してもよろしいですか? (Currently connected. Do you want to disconnect this line?") appears, select "はい (Yes)".
- ●The message "セッションXXXを保存しますか? (Do you want to save session XXX?)" then appears. You do not need to especially save that session.

Information

- •The access point name (APN) is information to be registered in the FOMA terminal, so if you connect another FOMA terminal, you need to register the access point name (APN) again.
- •To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA terminal.
- ●If the entered AT command is not displayed, enter "ATE1 —".

■cid (Registration number)

The FOMA terminal has registration numbers cid1 through cid10. cid1 contains "mopera.ne.jp", cid2 and cid3 contain "mopera.net", and cid4 contains "mpr.ex-pkt.net" as the default access point names (APN). To connect to a provider other than "mopera U" or "mopera", the access point name (APN) must be set to the number from cid5 to cid10 specified by the provider or network administrator.

Default cid contents

Registration No. (cid)	Access point name (APN)
1	mopera.ne.jp (PPP)
2	mopera.net (PPP)
3	mopera.net (IP)
4	mpr.ex-pkt.net (PPP)
5 to 10	Not set

■"Phone number" for connecting to an access point name (APN) you register in cid

"*99***cid No.>#"

(Example) When connecting to the access point name (APN) you register in cid5, enter the following: *99***5#

■Resetting/Confirming the access point name (APN) settings

You can use AT commands to reset/confirm the access point name (APN) settings.

Resetting access point name (APN)

The access point name (APN) for cid1 returns to "mopera.ne.jp" (default), the names for cid2 and cid3 return to "mopera.net" (default), and the name for cid4 returns to "mpr.ex-pkt.net" (default). The settings for cid5 through cid10 will be reset to the unregistered status if you proceed with resetting.

(Entry method)

AT+CGDCONT= (When resetting all the cid contents)

AT+CGDCONT=<cid> (When resetting only a specific cid)

Confirming access point name (APN)

The currently specified access point name appears on the display.

(Entry method)

AT+CGDCONT? ☐

Set Caller ID Notified/Not Notified

For packet communication, you can specify whether to notify your caller ID (caller ID notified/not notified). The caller ID is your important information; so, take a great care to notify your caller ID. You can use AT commands (*DGPIR command) to specify "caller ID notified/not notified" before dial-up connection.

- Start the communication software such as "Hyper Terminal".
 - See page 19 for details on how to operate "Hyper Terminal".
- Use the *DGPIR command (see page 36) to specify "caller ID notified/not notified".
 - To automatically add "184 (not notify)" for outgoing or incoming call, enter the following:
 - AT*DGPIR=1 Д
 - ■To automatically add "186 (notify)" for outgoing or incoming call, enter the following: AT*DGPIR=2
- Confirm that "OK" appears on the display.





Information

- When using DOCOMO Internet access service "mopera U" or "mopera", you need to set your caller ID to be "notified".
- If the entered AT command is not displayed, enter "ATE1 "...".

■ Specifying "caller ID notified/not notified" in dial-up network

Also by dial-up network setting (see page 23), you can add "186 (notify)" or "184 (not notify)" to each access point number. When you specify "186 (notify)" or "184 (not notify)" using both the *DGPIR command and dial-up network setting, the caller ID is set as follows:

Dial-up network setting (cid = 3)	Caller ID notification setting by *DGPIR command	Notify/Not notify caller ID	
*99***3#	Not set	Notify	
	Not notify	Not notify	
	Notify	Notify	
184*99***3#	Not set	Not notify	
	Not notify	("184" specified in the dial-up network has a priority)	
	Notify		
186*99***3#	Not set	Notify	
	Not notify	("186" specified in the dial-up network has a priority)	
	Notify		

• To connect to "mopera U" or "mopera", you need to notify your caller ID.

Set Dial-up Network for Windows 7

- 1 " [スタート (Start)]" ▶ Open "コントロールパネル (Control panel)"
 - ▶"インターネットへの接続 (Connection to Internet)"
 - ► Click "ダイヤルアップ接続 (Dial-up connection)".
 - After the access point has been set, the confirmation display appears asking whether the existing connection is to be used. In response, check "いいえ、新しい接続を作成しま す (No, I will create a new connection)", then click "次へ (Next)".



- If the display for selecting a modem appears, click "FOMA P03D".
 - •The display for selecting a modem appears only when you have registered two or more modems.
- 3 Enter an access point number in the "ダイヤルアップの電話番号 (Phone number for dial-up)" field.
 - •When connecting to "mopera U", enter "*99***3#" as the access point number.
 - See page 21 for access point numbers other than "mopera U".



- Enter the user name and password supplied from your Internet service provider or network administrator in the "ユーザー名 (User name)" and "パスワード (Password)" fields.
 - •When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- 5 Enter any name in the "接続名 (Connection name)" field. Then click "接続 (Connect)"▶Click "スキップ (Skip)".
 - •Here, "SAMPLE" is entered as an example.
 - •Only confirm the setting contents without connecting here.
- _____Click "閉じる (Close)".
- 7 "⋒ [スタート (Start)]"▶Open "コントロールパネル (Control panel)"
 - ▶ "ネットワークの状態とタスクの表示 (View network status and tasks)"
 - ▶ Click "アダプターの設定の変更 (Change the adapter settings)".

- 8 Highlight the access point which is finished with setting, and select "プロパティ (Property)" after the right click
 - ► Click the "全般 (General)" tab to confirm the setting contents.

When "ダイヤル情報を使う (Use dial information)" is checked. uncheck it.

- The COM port number allocated to "FOMA P03D" varies depending on your personal computer.
- When connecting to "mopera U", enter "*99***3#" as the access point number.

See page 21 for access point numbers other than "mopera U".



Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル バージョン4 (TCP/IPv4) [Internet protocol version 4 (TCP/IPv4)]".

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.



- <mark>1</mark> Click the "オプション (Option)" tab, then click "PPP設定 (PPP settings)".
- 11 Uncheck all the items, then click "OK".




19 Return to the display in step 9, then click "OK".

Set Dial-up Network for Windows Vista

- **1** "**』** [スタート (Start)]"▶"接続先 (Access point)"▶Click "接続または ネットワークをセットアップします (Setup the connection or network)".
- 2 Select "ダイヤルアップ接続を セットアップします (Setup the dial-up connection)", then click "次へ (Next)".



- If the display for selecting a modem appears, click "FOMA P03D".
 - •The display for selecting a modem appears only when you have registered two or more modems.
- 4 Enter an access point number in the "ダイヤルアップの電話番号 (Phone number for dial-up)" field.
 - When connecting to "mopera U", enter "*99***3#" as the access point number.
 - See page 21 for access point numbers other than "mopera I."

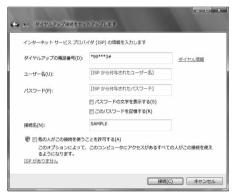

- 5 Enter the user name and password supplied from your Internet service provider or network administrator in the "ユーザー名 (User name)" and "パスワード (Password)" fields.
 - •When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- 6 Enter any name in the "接続名 (Connection name)" field. Then click "接続 (Connect)"▶Click "スキップ (Skip)".
 - •Here, "SAMPLE" is entered as an example.
 - Only confirm the setting contents without connecting here.
- **7** Click "接続をセットアップします (Setup the connection)"
 - ▶Click "閉じる (Close)".
- - ▶ Highlight the access point which is finished with connection, and select "プロパティ (Property)" after the right click.

General)" tab to confirm the setting contents.

When "ダイヤル情報を使う (Use dial information)" is checked, uncheck it.

- The COM port number allocated to "FOMA P03D" varies depending on your personal computer.
- When connecting to "mopera U", enter "*99***3#" as the access point number.

See page 21 for access point numbers other than "mopera $\ensuremath{\text{U}}\xspace$ ".

10 Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル バージョン4 (TCP/IPv4) [Internet protocol version 4 (TCP/IPv4)]".

You can set the "QoS パケットスケジューラ (QoS packet scheduler)" if necessary.

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.





- <mark>11</mark> Click the "オプション (Option)" tab, then click "PPP設定 (PPP settings)".
- 12 Uncheck all the items, then click "OK".



13 Return to the display in step 10, then click "OK".

Set Dial-up Network for Windows XP

- <mark>1</mark> "スタート (Start)"▶"すべてのプログラム (All programs)"
 - ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)"
 - ▶Open "新しい接続ウィザード (New connection wizard)".
- 2 When the "新しい接続ウィザード (New connection wizard)" display appears, click "次へ (Next)".



- 3 Select "インターネットに接続する (Connect to the Internet)", then click "次へ (Next)".
- 4 Select "接続を手動でセットアップする (Manually set up the connection)", then click "次へ (Next)".
- 5 Select "ダイヤルアップモデムを使用して接続する (Use a dial-up modem for connection)", then click "次へ (Next)".
- 6 If the "デバイスの選択 (Select a device)" display appears, check "FOMA P03D" only, then click "次へ (Next)".
 - ●The "デバイスの選択 (Select a device)" display appears only when you have registered two or more modems.




- 7 Enter any name in the "ISP 名 (ISP name)" field, then click "次へ (Next)".
 - •Here, "SAMPLE" is entered as an example.



- 8 Enter an access point number in the "電話番号 (Phone number)" field, then click "次へ (Next)".
 - \bullet When connecting to "mopera U", enter "*99***3#" as the access point number.

See page 21 for access point numbers other than "mopera $\ensuremath{\text{U}}\xspace$ ".

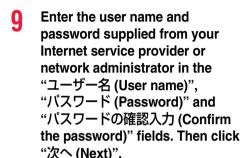





- When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- **1** Click "完了 (Complete)".
- **11** スタート (Start)"▶"すべてのプログラム (All programs)"
 - ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)"
 - ▶ Open "ネットワーク接続 (Connect to network)".
- 12 Select the dial-up icon, then select "ネットワークタスク (Network task)"
 - ▶"この接続の設定を変更する (Modify this connection setting)".

Here, click the icon of the name you entered in step 7.



13 Click the "全般 (General)" tab to confirm the setting contents.

- The COM port number allocated to "FOMA P03D" varies depending on your personal computer.
- When connecting to "mopera U", enter "*99***3#" as the access point number.

See page 21 for access point numbers other than "mopera $\ensuremath{\text{U}}$ ".

14 Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "呼び出すダイヤルアップサーバーの種類 (Type of calling dial-up server)" field, select "PPP: Windows 95/98/NT4/2000, Internet".

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル (TCP/IP) [Internet protocol (TCP/IP)]".

You cannot modify the setting of the "QoS パケットスケジューラ (QoS packet scheduler)" field; so use the default setting as it is. Next, click "設定 (Setting)".

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.

15 Uncheck all the items, then click "OK".







16 Return to the display in step 14, then click "OK".

Making Dial-up Connection

Making Dial-up Connection for Windows 7

Perform the operation on page 5 to connect the FOMA terminal to your personal computer.

- 1 "<a> [スタート (Start)]" ▶ Open "コントロールパネル (Control panel)" ▶ Click "インターネットへの接続 (Connection to Internet)".
- 2 Check "はい、既存の接続を選びます (Yes, I choose the existing connection)", then select the access point, and click "次へ (Next)".



- **Q** Confirm the contents and click "ダイヤル (Dial)".
 - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.




- 5 After the connection is completed, click "閉じる (Close)".
 - You can start the browser software to browse websites, use e-mail and so on.



Making Dial-up Connection for Windows Vista

Perform the operation on page 5 to connect the FOMA terminal to your personal computer.

- **1** "**Manual Proof of Start**)]"▶Open "接続先 (Access point)".
- 2 Select access point and click "接続 (Connect)".

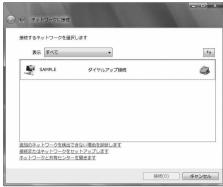

- **Q** Confirm the contents and click "ダイヤル (Dial)".
 - •When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



- 5 After the connection is completed, click "閉じる (Close)".
 - You can start the browser software to browse websites, use e-mail and so on.



Making Dial-up Connection for Windows XP

Perform the operation on page 5 to connect the FOMA terminal to your personal computer.

- **1** "スタート (Start)"▶"すべてのプログラム (All programs)"
 - ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)"
 - ▶ Open "ネットワーク接続 (Network connection)".
- Open the access point to be used.
 Select the access point icon of the ISP name (see page 27)

Select the access point icon of the ISP name (see page 21) you specified in "Set Dial-up Network", then "ネットワークタスク (Network task)"→"この接続を開始する (Start this connection)".

Otherwise, double-click the access point icon.



- **♀** Confirm the contents and click "ダイヤル (Dial)".
 - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



i) SAMPLE に接続しました ×

速度:460.8 Kbps

The connection is completed.

After the connection is completed, the message appears from the indicator on the task bar for a few seconds.

- You can start the browser software to browse websites, use
 e-mail and so on
- If this message does not appear, confirm the setting of the access point again.

Information

- For dial-up connection, use the FOMA terminal with the dial-up setting completed. To connect another FOMA terminal, you may need to reinstall the FOMA communication configuration file (driver).
- The power consumption of the FOMA terminal increases during communication.
- During packet communication, the communication state appears on the FOMA terminal.

"," (Communicating, data sending)

" -" (Communicating, data receiving)

" " (Communicating, no data sending/receiving)

" " (Outgoing or being disconnected)

" incoming or being disconnected)

During 64K data communication, " ♥ "appears on the FOMA terminal.




1000 @ 1000

ncni

Disconnecting Communication Line

Click the dial-up icon on the task tray.

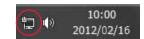

2 Select the access point with which the connection is to be terminated, and click "切断 (Disconnect)".

<For Windows Vista>

Select "接続または切断 (Connect or disconnect)" and click "切断 (Disconnect)", then click "閉じる (Close)".

<For Windows XP>

Click "切断 (Disconnect)".

Information

- The communication line may not be disconnected just by exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

When you cannot connect to network

If you cannot connect to network (if you fail a dial-up connection), confirm the following items:

If this error occurs	Confirm those:
Your personal computer cannot recognize "P-03D"	Confirm whether your personal computer satisfies the operating environment (see page 3). Confirm whether "FOMA communication configuration file" (driver) is installed in your personal computer. Confirm whether the FOMA terminal is connected to your personal computer and powered on. Confirm whether the FOMA USB Cable with Charge Function 02 (option) is securely connected.
You cannot connect to the access point	・Confirm whether the ID (user name) and password are correct. ・When you need to notify your caller ID such as when using "mopera U" or "mopera", make sure "184" is not prefixed to the phone number. ・Confirm that "フロー制御を使う (Use the flow control)" is checked in the modem properties. ・If you cannot connect to the access point even after confirming above, contact your Internet service provider or network administrator for the setting method, and so on.

Set 64K Data Communication

This section explains how to set up a connection for the 64K data communication without using "DOCOMO Connection Manager".

Setting dial-up connection and TCP/IP

The setting of dial-up connection and TCP/IP for the 64K data communication is the same as for the packet communication (see page 16).

Take care of the following points:

- In the 64K data communication, you do not need to set an access point name (APN). For the access point of the dial-up connection, enter the phone number of the access point specified by your Internet service provider or network administrator. (To connect to "mopera U", enter "*8701" in the phone number field, and to connect to "mopera", enter "*9601".)
- Set "caller ID notified/not notified" and "others" as required.
- (When connecting to "mopera U" or "mopera", you need to notify your caller ID.)
- Contact your Internet service provider or network administrator for details on the setting contents.

Connecting and Disconnecting

You can operate in the same way as for the packet communication. Perform the operations on page 15, page 30 or page 32.

AT Command

AT commands are used to specify and modify the functions of the FOMA terminal through the personal computer.

The following abbreviations are used in the AT command list:

[AT]: Commands which are available at the FOMA P03D Command Port.

[M]: Commands which are available in the FOMA P03D (modem).

[&F]: Commands whose settings are initialized by the AT&F command.

[&W]: Commands whose settings are saved by the AT&W command. The set value can be recalled by the ATZ command.

Information

• When you make a call from an external device or make an AT command call, the call is made from Number A in A Mode or Dual Mode of 2in1, and the call is made from Number B in B Mode of 2in1.

Entry Format of AT Command

To enter an AT command, use the terminal mode display of the communication software. Be sure to enter half-pitch alphanumeric characters.

Entry example



• You need to enter an AT command on one line, including a parameter (digits and symbols) which follows the command.

Information

•The terminal mode enables you to operate a personal computer as one communication terminal. Using this mode, you can send characters you have entered from the keyboard to a line connected to the communication port.

Switch between Online Data Mode and Online Command Mode

There are following two methods of switching the FOMA terminal between the online data mode and online command mode:

- · Enter the "+++" command or enter the code specified in the "S2" register.
- · Set the ER signal of the RS-232C** off when "AT&D1" is set.
- To switch the online command mode to the online data mode, enter "ATO "...".

*The RS-232C signal line, which is emulated via the USB interface, is controlled by a communication application.

Saving the setting contents

Please be careful that the setting contents with AT commands are initialized when the FOMA terminal is turned off and on or the external device is removed, except for the access point name (APN) setting with the AT+CGDCONT command, QoS setting with the AT+CGEQMIN or AT+CGEQRIN or A

AT Command List

AT command	Outline	Parameter/Explanation	Command execution example
A/	Re-executes the last executed	_	A/
[M]	command. No carriage return is required.		ОК
AT%V	Displays the version of the	-	AT%V
	FOMA terminal.		Ver1.00
[M]			ок
AT&Cn	Selects the operating conditions	n=0: CD is always ON.	AT&C1
[M]	of the circuit CD signal sent to	n=1: CD varies according to the carrier of the other	ОК
[&F][&W]	the DTE.	party's modem. (default)	
AT&Dn	Selects an operation to be	n=0: Ignores the ER status. (Always assumed to be	AT&D1
	performed when the circuit ER	ON.)	ок
	signal received from the DTE	n=1: Sets the online command state when the ER	
	transits from ON to OFF.	changes from ON to OFF.	
[M]		n=2: Sets the offline command state when the ER	
[&F][&W]		changes from ON to OFF. (default)	
AT&En	Selects the speed display	n=0: Displays communication speed between radio	AT&E0
	specification for connection.	wave blocks.	ОК
[M]		n=1: Displays DTE serial communication speed.	
[&F][&W]		(default)	
AT&Fn	Returns all registers to the	Only n=0 is specifiable. (Can be omitted)	_
	default. Performs line		
	disconnection processing if you		
	enter this command during		
[AT][M]	communication.		
AT&Sn	Specifies the control of the data	n=0: DR is always ON. (default)	AT&S0
[M]	set ready signal to be output to	n=1: DR is set to ON at connection of the line (at	ОК
[&F][&W]	the DTE.	establishment of a communication call).	
AT&Wn	Stores the current set values.	Only n=0 is specifiable. (Can be omitted)	_
[M]			
AT*DANTE	Shows the number of antenna	0: Antenna shows the out of the service area	AT*DANTE
	bars. (0 to 3)	1: Zero antenna bars or a single antenna bar	*DANTE:3
		2: Two antenna bars	ок
		3: Three antenna bars	AT*DANTE=?
			*DANTE:(0-3)
[AT][M]			ОК
AT*DGANSM=n	Sets the reject/accept setting	n=0: Invalidates the incoming call reject/accept setting.	AT*DGANSM=0
	mode for the packet incoming	(default)	ОК
	call.	n=1: Validates the incoming call reject setting	AT*DGANSM?
	The setting with this command is	(AT*DGARL).	*DGANSM:0
	valid for incoming calls in packet	n=2: Validates the incoming call accept setting	ОК
	communication after you enter	(AT*DGAPL).	
[M]	the setting command.	AT*DGANSM?: Displays the current setting.	
AT*DGAPL=n	Sets the APN of which packet	n=0: Adds the APN defined by <cid> to the incoming call</cid>	AT*DGAPL=0,1
[,cid]	incoming call is to be accepted.	accept list.	ок
	To specify the APN, use the	n=1: Deletes the APN defined by <cid> from the</cid>	AT*DGAPL?
	<cid> parameter defined in</cid>	incoming call accept list.	*DGAPL:1
	AT+CGDCONT.		ОК
		Applied to all the cid contents if <cid> is omitted.</cid>	AT*DGAPL=1
			OK
		AT*DGAPL?: Displays the incoming call accept list.	AT*DGAPL?
[M]		AT*DGAPL?: Displays the incoming call accept list.	AT∗DGAPL? OK
[M] AT*DGARL=n	Sets the APN of which packet	AT*DGAPL?: Displays the incoming call accept list. n=0: Adds the APN defined by <cid> to the incoming call</cid>	ОК
	Sets the APN of which packet incoming call is to be rejected.		ОК
AT*DGARL=n	•	n=0: Adds the APN defined by <cid> to the incoming call</cid>	OK AT*DGARL=0,1 OK AT*DGARL?
AT*DGARL=n	incoming call is to be rejected.	n=0: Adds the APN defined by <cid> to the incoming call reject list.</cid>	OK AT*DGARL=0,1 OK
AT*DGARL=n	incoming call is to be rejected. To specify the APN, use the	n=0: Adds the APN defined by <cid> to the incoming call reject list. n=1: Deletes the APN defined by <cid> from the</cid></cid>	OK AT*DGARL=0,1 OK AT*DGARL?
AT*DGARL=n	incoming call is to be rejected. To specify the APN, use the <cid> parameter defined in</cid>	n=0: Adds the APN defined by <cid> to the incoming call reject list. n=1: Deletes the APN defined by <cid> from the</cid></cid>	OK AT*DGARL=0,1 OK AT*DGARL? *DGARL:1
AT*DGARL=n	incoming call is to be rejected. To specify the APN, use the <cid> parameter defined in</cid>	n=0: Adds the APN defined by <cid> to the incoming call reject list. n=1: Deletes the APN defined by <cid> from the incoming call reject list.</cid></cid>	OK AT*DGARL=0,1 OK AT*DGARL? *DGARL:1 OK
AT*DGARL=n	incoming call is to be rejected. To specify the APN, use the <cid> parameter defined in</cid>	n=0: Adds the APN defined by <cid> to the incoming call reject list. n=1: Deletes the APN defined by <cid> from the incoming call reject list.</cid></cid>	OK AT*DGARL=0,1 OK AT*DGARL? *DGARL:1 OK AT*DGARL:1

AT command	Outline	Parameter/Explanation	Command execution
		·	example
AT*DGPIR=n	This command is valid at dialing/	, ,	AT*DGPIR=0
	receiving calls.	n=1: Adds "184" to the APN. (always not notify)	OK
	In the dial-up network setting,	n=2: Adds "186" to the APN. (always notify)	AT*DGPIR?
	you can add "186" (notify) or	AT*DGPIR?: Displays the current setting.	*DGPIR:0
	"184" (not notify) to the phone		ок
	number of the access point.		
[M]	(See page 22)		
AT*DRPW	Displays the output power index	_	AT*DRPW
	for receiving.		*DRPW:0
	(0: minimum value to 75:		ок
AT][M]	maximum value)		
+++	Changes to the online command	_	_
	state without disconnecting the		
	line when the escape sequence		
M]	is executed in the online mode.		
AT+CAOC		Result: +CAOC:"n"	AT+CAOC
1110000	Displays the charging		
2.0	information for now or latest call.	n: Displays the charging information in a hexadecimal	+CAOC:"00001E"
[M]		number.	OK
AT+CBC	Displays the battery level.	Result: +CBC:n,m	AT+CBC
		n=0: FOMA terminal is powered by the battery.	+CBC:0,80
		n=1: During charging	ОК
		n=2: The battery is not connected.	
		n=3: Power-supply error	
M]		m=0~100: Battery level	
AT+CBST=n,1,0	Sets the bearer service to be	n=116: 64000 bps (bit transparent) (default)	AT+CBST=116,1,0
	used.	n=134: 64000 bps (multimedia)	OK
	uocu.	in-104. 04000 bps (maiamodia)	AT+CBST?
[M]			+CBST:116,1,0
			OK
[&W][&F]	Cata whathauta dianlas	a O. Dana and display "Danais and sub-addunas" when	7
AT+CDIP=n	Sets whether to display	n=0: Does not display "Received sub-address" when	AT+CDIP=0
	"Received sub-address" on your	you receive a call. (default)	OK
	personal computer when you	n=1: Displays "Received sub-address" when you	AT+CDIP?
	receive a call.	receive a call.	+CDIP:0,1
		Result: +CDIP: <n>,<m></m></n>	ОК
		m=0: Not signed up for Multi Number	
[M][AT]		m=1: Signed up for Multi Number	
[&F][&W]		m=2: Unknown	
AT+CEER	Displays the reason why the	<report></report>	AT+CEER
	preceding call was disconnected.	Disconnection reason list (See page 43)	+CEER:36
AT][M]	, g	(**************************************	ок
AT+CGDCONT	Sets the access point name	See page 41.	See page 41.
3 3 5 0 0 1 1 1	(APN) for when dialing for packet	ooo pago	SSS page 41.
[M]	communication.		
AT+CGEQMIN	Registers the reference value to	AT+CGEQMIN=[parameter]	See page 42.
TITOGEGIVIIN	judge whether the system	See page 42.	oee page 42.
		AT+CGEQMIN=?	
	permits QoS (Quality of service)		
	reported from the network at	Lists the settable values.	
	establishment of the packet	AT+CGEQMIN?	
M]	communication.	Displays the current setting.	
AT+CGEQREQ	Sets QoS (Quality of service) to	AT+CGEQREQ=[parameter]	See page 42.
	be requested to the network at	See page 42.	
		AT COFOREO O	1
	dialing of the packet	AT+CGEQREQ=?	
	dialing of the packet communication.	Lists the settable values.	
		Lists the settable values. AT+CGEQREQ?	
[M]	communication.	Lists the settable values.	AT+CGMR
		Lists the settable values. AT+CGEQREQ?	AT+CGMR 1234512345123456

AT command	Outline	Parameter/Explanation	Command execution example
AT+CGREG=n	Sets whether the network	n=0: Not notified. (default)	AT+CGREG=1
	registration state is notified.	n=1: Notified at switching between the inside and	ОК
	Displays whether you are inside	outside of the service area.	(set to "Notified")
	or outside the service area	(Inquiry)	AT+CGREG?
	according to the returned	AT+CGREG?	+CGREG:1,0
	notification.	+CGREG: <n>,<stat></stat></n>	ОК
		n: Set value	(means the outside of the service
		stat:	area)
		0: Outside packet area	a.ou/
		1: Inside packet area	(when moved from the outside to
[M]		4: Unknown	the inside of the service area)
			+CGREG: 1
[&F][&W]		5: Inside packet area (during roaming)	
AT+CGSN	Displays the serial number of the	_	AT+CGSN
	FOMA terminal.		123456789012345
[M]			OK
AT+CLIP=n	Enables to display the other	n=0: Does not notify. (default)	AT+CLIP=0
	party's caller ID on the personal	n=1: Notifies.	ОК
	computer at reception of 64K		AT+CLIP?
	data communication or	Result: +CLIP: <n>,<m></m></n>	+CLIP:0,1
	videophone calls.	m=0: NW setting not to notify caller ID at calling	ок
[AT][M]		m=1: NW setting to notify caller ID at calling	
[&F][&W]		m=2: Unknown	
AT+CLIR=n	Sets whether to notify your	n=0: Notifies (does not notify) caller ID according to	AT+CLIR=0
AT+GLIN=II	phone number to do 64K data	CLIR service.	OK
	communication or to make	n=1: Does not notify the other party of your caller ID.	AT+CLIR?
	videophone calls.	n=2: Notifies the other party of your caller ID. (default)	+CLIR:0,1
		Result: +CLIR: <n>,<m></m></n>	OK
		m=0: CLIR is not launched. (always notify)	AT+CLIR=?
		m=1: CLIR is launched. (always not notify)	+CLIR:(0-2)
		m=2: Unknown	OK
		m=3: CLIR temporary mode (not notify, default)	
[M]		m=4: CLIR temporary mode (notify, default)	
AT+CMEE=n	Sets how the FOMA terminal	n=0: Uses the ordinary ERROR result. (default)	AT+CMEE=0
	shows an error report.	n=1: +CME ERROR: Uses the <err> result code. <err></err></err>	OK .
		indicates a numeric value.	AT+CNUM
		n=2: +CME ERROR: Uses the <err> result code. <err></err></err>	ERROR
		indicates characters.	AT+CMEE=1
			OK
		AT+CMEE?: Displays the current setting.	
		Command execution examples on the right are for when	
		the FOMA terminal or connection has abnormality.	+CME ERROR: 10
		Below listed are the +CME ERROR result codes.	AT+CMEE=2
		1: no connection to phone	ОК
		10: SIM not inserted	AT+CNUM
		15: SIM wrong	+CME ERROR: SIM
[M]		16: incorrect password	not inserted
[&F][&W]		100: unknown	
AT+CNUM	Displays the own phone number	number: Phone number (In B Mode of 2in1, Number B	AT+CNUM
	of the FOMA terminal.	is displayed.)	+CNUM:,"+8190123
	of the FOWA tellillial.	1	
		type: 129 or 145	45678",145
		129: Does not include the IDD prefix code (+).	OK
		145: Includes the IDD prefix code (+).	
[AT][M]		Result: +CNUM:, <number>,<type></type></number>	

AT command	Outline	Parameter/Explanation	Command execution
AT+COPS=n,2,m	Selects the carrier to be	n=0: Automatic (searches the network and switches the	example AT+COPS=1,2,"44F001"
A1+00F3=11,2,111	connected.	network operator automatically) (default)	OK
	connected.	n=1: Manual (connects to the network operator	O.C.
		specified in "m")	
		n=2: Disconnects the connection to the network	
		operator	
		n=3: Mapping is not performed.	
		n=4: Manual/Automatic (if the connection to the network	
		operator specified in "m" fails, works as automatic	
		mode.)	
		m: Country code (MCC) and operator code (MNC) are	
		displayed in a hexadecimal number.	
		The format is as follows:	
		Digit 1 of MCC · · · octet 1 bits 1 to 4.	
		Digit 2 of MCC · · · octet 1 bits 5 to 8.	
		Digit 3 of MCC · · · octet 2 bits 1 to 4.	
		Digit 3 of MNC · · · octet 2 bits 5 to 8.	
		Digit 2 of MNC · · · octet 3 bits 5 to 8.	
[M]		Digit 1 of MNC · · · octet 3 bits 1 to 4.	
AT+CPAS	Displays whether to send the	Result: +CPAS:n	AT+CPAS
	control signals to the FOMA	n=0: Can send/receive control signals to/from the	+CPAS:0
	terminal.	FOMA terminal.	OK
		n=1: Cannot send/receive control signals to/from the	
		FOMA terminal.	
		n=2: Unknown (control signal sending/receiving is not	
		assured).	
		n=3: Can send/receive control signals to/from the	
		FOMA terminal, and currently receiving.	
		n=4: Can send/receive control signals to/from the	
[M]		FOMA terminal, and currently communicating.	
AT+CPIN=n.m	Enters the UIM password (PIN1	When the UIM is in a state waiting for the entry of PIN1	AT+CPIN="1234"
7.1.101.111-11,111	or PIN2).	or PIN2 code	OK
		n: PIN1/PIN2	AT+CPIN="12345678","1234"
		When the UIM is in a state waiting for the entry of PUK	ок
		due to failure in unblocking PIN1 or PIN2 code	AT+CPIN?
		n: PUK	+CPIN:SIM PIN
		m: New PIN1 or PIN2	OK
		AT+CPIN?: Displays the state of code entry requested	
		about current SIM.	
		Result: +CPIN: <state></state>	
		<state>=READY: Code entry not requested</state>	
		<state>=SIM PIN: PIN1 code entry waited</state>	
		<state>=SIM PIN2: PIN2 code entry waited</state>	
		<state>=SIM PUK: PUK entry waited due to failure in</state>	
		unblocking PIN1 code	
		<state>=SIM PUK2: PUK entry waited due to failure in</state>	
[M][AT]		unblocking PIN2 code	
AT+CR=n	Displays the bearer service type	n=0: Does not display. (default)	AT+CR=1
	before the CONNECT result	n=1: Displays.	OK
	code appears at connection of	<serv>: Displays only "GPRS" that means packet</serv>	ATD*99***1#
	the line.	communication.	+CR: GPRS
		(Displays "SYNC" or "AV64K", depending on	CONNECT
[M]		the line type.)	
[&F][&W]		AT+CR?: Displays the current set value.	
AT+CRC=n	Sets whether the extended result	n=0: Does not use +CRING. (default)	AT+CRC=0
	code is used at reception.	n=1: Uses +CRING. <type>.</type>	OK
	Table acceptable	AT+CRC?: Displays the current setting.	AT+CRC?
		The +CRING format is as follows:	+CRC: 0
		+CRING: <type></type>	OK
[AT][M]		During PPP packet ringing	
[&F][&W]		+CRING: GPRS "PPP",,, <apn></apn>	
[][]			1

AT command	Outline	Parameter/Explanation	Command execution example
AT+CREG=n	Sets whether the result is	n=0: Not notified. (default)	AT+CREG=1
	displayed about the inside and	n=1: Notified at switching between the inside and	ок
	outside of the service area.	outside of the service area.	(set to "Notified")
		(Inquiry)	AT+CREG?
		AT+CREG?	+CREG: 1,0
		+CREG: <n>,<stat></stat></n>	ок
		n: Set value	(means the outside of the service
		stat:	area)
		0: Outside voice call area	,
		1: Inside voice call area	(when moved from the outside to
[AT][M]		4: Unknown	the inside of the service area)
[&F][&W]		5: Inside voice call area (during roaming)	+CREG: 1
AT+CUSD=n," <str>",0</str>	Sets or checks the additional	n=0: Does not display mid result. (default)	AT+CUSD=0,
, ,.	service for network.	n=1: Displays mid result.	OK
	COLVICE TO THE WORK	<str>: Service code</str>	AT+CUSD=1,"*148*1*0000#",0
		Mid result: m," <str>",0</str>	+CUSD:0,"148*7#",0
[M]		m=0: Shows the setting is completed.	OK
[&F][&W]		m=1: Shows the network requires the information.	OK .
AT+FCLASS=n	Sets communication class	n=0: Data communication (default)	AT+FCLASS=0
AT+FOLASS=II		n=o. Data communication (default)	OK
n n	in the FOMA terminal.		OK
[M]			
[&F][&W]			
AT+GCAP	Displays the AT command	Result +GCAP: n	AT+GCAP
	supported by FOMA terminal.	n=+CGSM: Some or all GSM commands are supported.	
		n=+FCLASS: +FCLASS command is supported.	OK
[M]		n=+W: +W command is supported.	
AT+GMI	Displays the manufacturer name	-	AT+GMI
	(Panasonic).		Panasonic
[M]			OK
AT+GMM	Displays the product name	_	AT+GMM
	(FOMA P-03D) of the FOMA		FOMA P03D
[M]	terminal.		ок
AT+GMR	Displays the version of the	_	AT+GMR
	FOMA terminal.		Ver1.00
[M]			ок
AT+IFC=n,m	Selects the flow control method.	n: DCE by DTE	AT+IFC=2,2
		m: DTE by DCE	OK
		0: No flow control	
		1: XON/XOFF flow control	
		2: RS/CS (RTS/CTS) flow control	
[M]		Default: n, m = 2.2	
[&F][&W]		AT+IFC?: Inquires the set value.	
AT+WS46=n	Selects the wireless	Returns "ERROR" for the mode setting because the	AT+WS46=22
A1+VV340=II	communication network of the	wireless communication network is not selected on the	ERROR
	FOMA terminal.		AT+WS46?
	FOMA terminal.	FOMA terminal by this command.	
		n=12: GSM/GPRS	25
		n=22: W-CDMA (Wideband CDMA)	OK
[M]		n=25: Automatic	
ATA	Performs the receiving process	_	RING
	in the mode when the FOMA		ATA
	terminal received the incoming		CONNECT
[AT][M]	call.		
ATD	Performs the automatic outgoing	<cid>: 1 to 10. Displays the APN defined by</cid>	ATD*99***1#
	process to the FOMA terminal	+CGDCONT.	CONNECT
	according to the contents	When calling cid1, you can omit the phone number like	
	specified in the parameter and	"ATD*99***#."	
[AT][M]	dial parameter.		
ATEn	Sets whether echo-back is	n=0: Issues no echo-back.	ATE1
[AT][M]	issued to the DTE in the	n=1: Issues echo-back. (default)	OK
[&F][&W]	command mode.	,,	
ATHn	Places the FOMA terminal into	n=0: Disconnects the line. (can be omitted)	(During packet communication)
***	the on-hook state.	(sur so similar)	+++
	a.s on nook state.		ATH
ΓΔΤΊΓΜΊ			NO CARRIER
[AT][M]	1		INO CANNIEN

AT command	Outline	Parameter/Explanation	Command execution example
ATIn	Displays the ID code.	n=0: Displays "NTT DoCoMo".	ATIO
******	Biopiayo are ib code.	n=1: Displays the product name. (same as +GMM)	NTT DoCoMo
		n=2: Displays the version of the FOMA terminal. (same	ок
		as +GMR)	ATI1
		n=3: Displays ACMP information element.	FOMA P03D
		n=4: Displays the details of the function available for	OK
[AT][M]		communication on the FOMA terminal.	- · ·
ATOn	Returns from the online command	n=0: Returns from the online command mode to the	ATO
	mode to the online data mode	online data mode. (can be omitted)	CONNECT
[M]	during communication.	online data mode. (dan be onlined)	001111201
ATQn	Sets whether the result code is to	n=0: Displays the result code. (default)	ATQ0
ATQII	be displayed for the DTE.	n=1: Does not display the result code.	OK
	be displayed for the DTL.	ITE 1. Does not display the result code.	ATQ1
ram.			("OK" is not returned at this
[M]			,
[&F][&W]			time.)
ATS0=n	Sets the number of rings	n=0: Does not automatically receive an incoming call.	ATS0=0
	required until the FOMA terminal	(default)	OK
	automatically receives an	n=1 to 255: Automatically receives an incoming call with	ATS0?
	incoming call.	the specified number of rings.	000
		(when n≥10, does not automatically receive a packet	ОК
		(PPP) incoming call, then the line is disconnected after	
[M]		about 30 seconds.)	
[&F][&W]		ATS0?: Inquires the set value.	
ATS2=n	Sets the escape character.	n=43: Default	ATS2=43
	·	n=127: Makes escape processing invalid.	ок
			ATS2?
[M]		ATS2?: Inquires the set value.	043
[&F]		711 CE. 1 Inquired the oot value.	ok
ATS3=n	Sets the carriage return (CR)	n=13: Default (n=13 only specifiable)	ATS3=13
A 100-11	character.	11-13. Delault (11-13 offly specifiable)	OK
	Character.	ATC22. Inquires the set value	ATS3?
ra at		ATS3?: Inquires the set value.	013
[M]			
[&F]			OK
ATS4=n	Sets the line feed (LF) character.	n=10: Default (n=10 only specifiable)	ATS4=10
			OK
		ATS4?: Inquires the set value.	ATS4?
[M]			010
[&F]			ОК
ATS5=n	Sets the back space (BS)	n=8: Default (n=8 only specifiable)	ATS5=8
	character.		ок
		ATS5?: Inquires the set value.	ATS5?
[M]			008
[&F]			OK
ATS30=n	Sets the inactive timer (minute).	n=0 to 255 (default=0) (unit: minute)	ATS30=0
	When no user data is sent or		ок
	received, the connection is cut		
	after the set time has elapsed.		
	This command is for only 64K data		
	communication. When 0 is set, the		
[M][&F]	inactive timer turns to OFF.		
ATS103=n	Selects characters to pause for	n=0: *(asterisk)	ATS103=0
	incoming sub-address.	n=1: / (slash) (default)	OK
[M][&F]	mooning sub-address.	n=2: ¥ or back slash	
	Cologto abovesta a taracter		ATC104 0
ATS104=n	Selects characters to pause for	n=0: # (sharp)	ATS104=0
TAMICO ET	outgoing sub-address.	n=1: % (percentage) (default)	OK
[M][&F]	0.1.111	n=2: & (and)	ATV4
ATVn	Sets all the result codes in the	n=0: Returns the result code in a numeric value.	ATV1
[M]	numeric or alphabetical notation.	n=1: Returns the result code in alphabetical characters.	OK
[&F][&W]		(default)	1.TV
ATXn	Sets whether to display the	n=0: Dial tone not detected; busy tone not detected;	ATX1
	speed in the CONNECT display	speed not displayed.	OK
	at connection.	n=1: Dial tone not detected; busy tone not detected;	
	Detects busy tone and dial tone.	speed displayed.	
		n=2: Dial tone detected; busy tone not detected; speed	
		displayed.	
		n=3: Dial tone not detected; busy tone detected; speed	
		displayed.	
[M]		n=4: Dial tone detected; busy tone detected; speed	
[&F][&W]			

AT command	Outline	Parameter/Explanation	Command execution example
ATZn	Resets the setting to the	Only n=0 is specifiable. (Can be omitted)	(In online)
	contents of the nonvolatile		ATZ
	memory. If this command is		NO CARRIER
	entered during communication,		(In offline)
	the line is disconnected.		ATZ
[M]			OK
AT¥Sn	Displays the contents of the each	Only n=0 is specifiable. (Can be omitted)	AT¥S
	command and S register		E1 Q0 V1 X4 &C1
	currently set.		&D2 &S0 &E1 ¥V0
			S000=000
			S002=043
			S003=013
			S004=010
			S005=008
			S006=005
			S007=060
			S008=003
			S010=001
			S030=000
			S103=000
			S104=000
[M]			OK
AT¥Vn	Selects the response code	n=0: Does not use the extended result code. (default)	AT¥V0
[M]	specifications at connection.	n=1: Uses the extended result code.	OK
[&F][&W]			

*The following commands do not result in an error even if specified; however, they do not function as commands.

- · AT (AT only entered.)
- · ATP (Pulse setting)
- · ATS8 (Setting the pause time by comma dialing)
- · ATT (Tone setting)
 - · ATS6 (Setting the pause time taken for dialing)
 - · ATS10 (Setting the automatic disconnection delay time)

Supplementary Explanation of AT Commands

- Command name: +CGDCONT=[parameter]
 - Outline
 - This command sets an access point name (APN) for when dialing for packet communication.
 - · Format
 - +CGDCONT=[<cid>[,"<PDP_type>"[,"<APN>"]]]
 - · Explanation of parameters

You set an access point name (APN) for when dialing for packet communication. See the example below for command instructions.

<cid>%: 1 to 10 <PDP_type>: PPP or IP

<APN>%: Arbitrary
%The <cid>numbers ar

- **The <cid> numbers are used to manage access point name (APN) for packet communication, and they are registered in the FOMA terminal. Although it is possible to register numbers cid1 to cid10 in the FOMA terminal, "mopera.ne.ip" (PPP) was already registered for <cid>=1, "mopera.net" (IP) for <cid>=2, "mopera.net" (IP) for <cid>=3 and "mpr.ex-pkt.net" (PPP) for <cid>=4 prior to purchase. Use numbers 5 to 10 to register other access point names.
- <APN> indicates any character string for each access point name.
- · Operation at omission of parameters

+CGDCONT= : Sets all the <cid> contents to the default. +CGDCONT=<cid> : Sets the specified <cid> to the default.

+CGDCONT=? : Lists the specifiable values. +CGDCONT? : Displays the current setting.

· Command execution example

AT+CGDCONT=5,"PPP","abc"

OK

- *The command used to register an APN name, abc (cid=5)
- % This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

```
    Command name:

                       +CGEQMIN=[parameter]
                                                           [M]
   Outline
    This command registers the reference value to judge whether the system permits QoS (Quality of service) reported from the network at establishment of
    You can specify four setting patterns described in the command execution example below.
    +CGEQMIN=[<cid>[,,<Maximum bitrateUL>[,<Maximum bitrate DL>]]]
  · Explanation of parameters
    ∠cid>.%
                                       : 1 to 10
    <Maximum bitrate UL>*
                                      : None (default), 2048
    ∠Maximum hitrate DI >->
                                      : None (default), 7232
     **<cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA terminal.
      <Maximum bitrate UL> and <Maximum bitrate DL> are used to specify the maximum baud rates (kbps) for upload and download between the FOMA
      terminal and base station. "None" (default) accepts all baud rates, however, you may not be able to establish packet communication if you specify
      2048 and 7232 because the baud rate less than these values are not accepted.
  · Operation at omission of parameters
                           : Sets all the <cid> contents to the default.
    +CGEQMIN=
    +CGEQMIN=<cid>
                            : Sets the specified <cid> to the default.
  · Command execution example
    You can specify only the following four setting patterns:
    (The setting in (1) is defined in each cid as the default.)
    (1)Command that accepts all the baud rates for both upload and download (cid=5)
       AT+CGEQMIN=5
    (2)Command that accepts 2048 kbps for upload and 7232 kbps for download (cid=6)
       AT+CGEQMIN=6,,2048,7232
    (3)Command that accepts 2048 kbps for upload and all baud rates for download (cid=7)
       AT+CGEQMIN=7..2048
    (4)Command that accepts all baud rates for upload and 7232 kbps for download (cid=8)
       AT+CGEQMIN=8,,,7232
     **This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.
Command name:
                       +CGEQREQ=[parameter]
    This command sets QoS (Quality of service) to be requested to the network at dialing of the packet communication.
    You can specify only one setting pattern described in the command execution example below, which is set as the default.

    Format

    +CGEQREQ=[<cid>]
  · Explanation of parameter
    <cid>%: 1 to 10
     **<cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA terminal.
  · Operation at omission of parameter
    +CGEQREQ=
                           : Sets all the <cid> contents to the default.
    +CGEOREO=<cid>
                            : Sets the specified <cid> to the default.
  · Command execution example
    You can specify only the following one pattern:
    (This setting is defined in each cid as the default.)
```

(1)Command that requests a connection at arbitrary speed NW sets (cid=5)

AT+CGEQREQ=5

OK

*This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

Command name: +CLIP

· Outline

The result for "AT+CLIP=1" is displayed in the following format:

+CLIP: <number> <type>

· Command execution example

AT+CLIP=1

OK

RING

+CLIP: "09012345678",49

Disconnection Reason List

■64K Data Communication

Value	Reason
1	The specified number does not exist.
16	The line was normally disconnected.
17	Cannot communicate because the other party is communicating.
18	Dialed but no response has come in within the specified duration.
19	Cannot communicate because the other party is dialing.
21	The other party rejected to receive the call.
63	The network service and options are not valid.
65	The specified transmission performance is not provided.
88	Dialed to or received the call from the phone with different properties.

■ Packet Communication

Value	Reason
27	No APN was found; or an invalid APN was specified.
30	The line was disconnected from the network.
33	You have not applied for the service option you requested.
36	The line was normally disconnected.

Result Codes

Result Code List

Numeric notation	Character notation	Meaning
0	OK	Processing has been executed normally.
1	CONNECT	The line has been connected to the other party.
2	RING	An incoming call has arrived.
3	NO CARRIER	The line has been disconnected.
4	ERROR	The system can receive no command.
6	NO DIALTONE	The system can detect no dial tone.
7	BUSY	The system is detecting the busy tone.
8	NO ANSWER	The connection completed; timeout
100	RESTRICTION	The network is restricted.
101	DELAYED	Within restricted redialing time

■Extended Result Code List

For &E0

Connection speed between the FOMA terminal and the base station is displayed.

Numeric notation	Character notation	Connection speed
121	CONNECT 32000	32,000bps
122	CONNECT 64000	64,000bps
125	CONNECT 384000	384,000bps
133	CONNECT 3648000	3,648,000bps
135	CONNECT 7232000	7,232,000bps

For &E1

Numeric notation	Character notation	Connection speed
5	CONNECT 1200	1,200bps
10	CONNECT 2400	2,400bps
11	CONNECT 4800	4,800bps
13	CONNECT 7200	7,200bps
12	CONNECT 9600	9,600bps
15	CONNECT 14400	14,400bps
16	CONNECT 19200	19,200bps
17	CONNECT 38400	38,400bps
18	CONNECT 57600	57,600bps
19	CONNECT 115200	115,200bps
20	CONNECT 230400	230,400bps
21	CONNECT 460800	460,800bps

Information

- Result codes are displayed in the character notation (default) when the ATVn command (see page 40) is set to n=1 and displayed in the numeric notation when it is set to n=0.
- The baud rate is displayed to keep the compatibility with a conventional modern connected via RS-232C. However, the FOMA terminal and personal computer are connected via the FOMA USB Cable with Charge Function 02 (option); so, the baud rate is different from the actual connection speed.
- "RESTRICTION" (numeric notation: 100) means that the communication network is congested. If this result code appears, wait for a while, then connect the line again.

Communication Protocol Result Code List

Numeric notation	Character notation	Meaning
1	PPPoverUD	Connected by 64K data communication
3	AV64K	Connected by 64K videophone
5	PACKET	Connected by packet communication

■ Result Code Display Examples

When ATX0 is set:

CONNECT only appears at completion of the connection, regardless of the contents specified in the AT¥V command (see page 41).

Example in character notation: ATD*99***1# CONNECT

Example in numeric notation: ATD*99***1#

• When ATX1 is set^{※1}:

If ATX1 and AT¥V0 are set (default):

A result code appears in the following format at completion of the connection: CONNECT

beaud rate between the FOMA terminal and PC>

Example in character notation: ATD*99***1#

CONNECT 460800

Example in numeric notation: ATD*99***1#

1 21

· If ATX1 and AT¥V1 are set*1:

A result code appears in the following format at completion of the connection:

CONNECT
baud rate between the FOMA terminal and PC>PACKET<access point name (APN)>/<maximum baud rate for upload (the FOMA terminal

→ wireless base station)>/<maximum baud rate for download (the FOMA terminal ← wireless base station)>*2

Example in character notation: ATD*99***1#

CONNECT 460800 PACKET

mopera.ne.jp /2048/7232

Example in numeric notation: ATD*99***1#

1215

*1 If you specify ATX1 and AT¥V1 at the same time, you may not be able to correctly carry out the dial-up connection.

You are advised to use only AT¥V0.

*2 The displayed maximum band rate is the one reported from the wireless base station and does not guarantee the actual communication speed.

Kuten Code List

<How to read Kuten Code List>

First enter the number for "Kuten digit 1 to 3", and enter the number for "Kuten digit 4".

• Some characters in Kuten Code List may appear different on the display.

Kuten	Kuten digit 4									Kuten Kuten digit 4									Kuten	Kuten digit 4												
digit 1 to 3	0	1	2		4	5		7	8	9	digit 1 to 3	0	1	2		4	5	6	7	8	9	digit 1 to 3	0	1	2	3	4	5		7	8	9
010 011 012 013 014 015 016 017	! * - : < +	\$PACE * \ \ \ C	、。 ゞ\() 《 ± :: £	° // ~) » × ♂ %	· 全=〔[÷♀#	·· 々ー〕」=。&	· ^ ~ [· O ·]] < " @	: · ~[> C@		130 131 132 133 134 135 136 137	(1) (2) X X X X Km (⊕ ÷	① ① I ?" mg ⑤ =	② ® II ** *	③ ③ Ⅲ *□ ド ℃ 職 毎 ∮	④ 個 N 学 於 所 、 ㈱ N	⑤ ⑥ V 添 松 、 (例 √	⑥ 16 VI 公司 No. (代)	⑦⑰Ⅵエンジ KK 聯∠	8 18 VIII た mm TE	▽ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・	209 210 211 212 213 214 215 216 217	旗 紀鬼犠吉客宮究	既機徽亀疑吃脚弓窮	期帰規偽祇喫虐急笈	棋毅記儀義桔逆救級	棄気貴妓蟻橘丘朽糾	汽起宜誼詰久求給	畿軌戱議砧仇汲旧	祈輝技掬杵休泣牛	季飢擬菊黍及灸去	稀騎欺鞠却吸球居
019 020 021 022 023 024 026	★ →	\$	_	%	#\langle \bar{\bar{\bar{\bar{\bar{\bar{\bar{\bar	▲⇒≡	*	▼ ∋ ∀ «	% ⊆ ∃ ≫	ĭ F Ω	139 160 161 162 163 164	□:【 葵梓鮎鞍【	□ ○ 亜茜圧或杏	」 し あ 唖 穐 斡粟 い 以	, 娃悪扱袷 伊	一 】阿握宛安 】位	衰渥姐	→ 愛旭虻按 偉	人 挨葦飴暗 囲	」 姶芦絢案 夷	コ 逢鯵綾闇 委	218 219 220 221 222 223 224 225 226	九巨禦 卿挟蕎業巾芹	第拒魚供叫教郷局錦蘭	及拠亨侠喬橋鏡曲斤衿		科渠京兇峡狂饗玉欽謹	和虚 競強狭驚桐琴近	口許 共彊矯仰粁禁金	十距 凶怯胸凝僅禽吟	云鋸 協恐脅尭勤筋銀	h 漁 三 恭 興 暁 均 緊
028 029 031 032 033 034 035	4 H R	5 1 S	Å 6 J	7 7 K U	3#() 8BLV	ь 9СМ W	0 DNX	† 1 E 0 Y	‡ 2 FPZ	9 3 6 Q	165 166 167 168 169 170	威移井稲引 【	尉維亥茨飲院	以惟緯域芋淫陰う	げ 意胃育鰯胤隠	^山 慰萎郁允蔭韻】	易衣磯		為違壱	R. 思遺溢因 鳥	女異医逸姻 羽	226 227 228 229 230 231 232	上 人 人 人 人 人 人 人 人 人 人 人 人 人 人 人 人 人 人 人	图 句具櫛掘繰	7く 区愚釧窟桑	际 狗虞屑沓鍬	財政・財政・財政・財政・財政・財政・財政・財政・財政・財政・財政・財政・財政・財		苦偶 窪薫	P 躯寓 熊訓	駆遇 隈群	九駈隅 粂軍
036 037 038 039 040 041 042 043 044	ごぞと	gg あかさたどび	hr あがざだなぴ	is ぃきしちにっ	jt いぎじぢぬご	aku うくすつねぷ	b - v うぐずつのへ	cmw えけせづはべ	dnx えげぜてばぺ	eoy おこそでばら	171 172 173 173 174 175 176 177 178	迂唄云【 曳衛閱掩	雨欝運 栄詠榎援芸	卯蔚雲え 永鋭厭沿夢	鵜鰻 荏泳液円演奏	窺姥 】餌洩疫園炎如	丑厩 叡瑛益堰焰智	営盈駅奄煙	臼瓜 嬰穎悦宴燕	渦閏 影頴謁延猿	嘘噂 映英越怨縁	232 233 234 235 236 237 238 239 240	【 珪携繋鶏傑倹建	卦型敬罫芸欠倦\ 憲 \$	け袈契景茎迎決健懸ち	祁形桂荊鯨潔兼拳奔	】係径渓蛍劇穴券捲4	傾恵畦計戟結剣 も	刑慶稽詣撃血喧 豆	兄慧系警激訣圈 母	啓憩経軽隙月堅 4	主掲継頚桁件嫌 『
046 047 048 050 051 052 053	ぼゆゐ オゴゾ	びぽょゑ アカサタ	ぴまよを アガザダ	ふみらん ィキシチ	ぶむり イギジヂ	ぷめる ゥクスッ・	もれ ウグズツ	ゃろ ェケセヅ	やゎ エゲゼテ	ほゅわ ォコソデ	178 179 180 181 182	艶【凹陽牡【	苑 央押黄乙 !	薗お 奥旺岡俺か	遠往横沖卸	鉛】 応欧荻恩】	億温	塩 王屋穏	於 翁憶音		甥 鴬桶 化	241 242 243 243 244 245 246	肩鹸絃【 姑糊顧	検見元舷 孤袴鼓!	権謙原言と 己股五	牽賢厳諺 庫胡互命	犬軒幻限】 弧菰伍	献遣弦 乎戸虎午	研鍵減 個故誇呉	硯険源 古枯跨吾	絹顕玄 呼湖鈷娯	宗験現 固狐雇後
054 055 056 057 058 060 061	トヒボユヰ K	ドビポョヱ A∧	ナピマヨヲ BM	ニフミラン FN	ヌブムリヴ △三	ネプメルヵ EO	ノヘモレヶ ZⅡ	ハベャロ HP	バペヤヮ ΘΣ	パホュワ IT	183 184 185 186 187 188 189 190	仮家禍蝦我介恢	何寡禾課牙会懷魁	伽科稼嘩画解戒晦	価暇箇貨臥回拐械	佳果花迦芽塊改海	加架苛過蛾壊 灰	可歌茄霞賀廻 界	嘉河荷蚊雅快 皆	夏火華俄餓怪 絵	嫁珂菓峨駕悔 芥	247 248 249 250 251 252 253 254	御乞効 巧拘江紅	悟鯉勾后巷控洪紘	梧交厚喉幸攻浩絞	檎佼口坑広昂港綱	瑚侯向垢庚晃溝耕	碁候 好康更甲考	語倖 孔弘杭皇肯	誤光 孝恒校硬肱	護公 宏慌梗稿腔	醐功 工抗構糠膏
062 063 064 065 070 071 072	Υ θ σ И	Ф <i>l</i> <i>T</i> А Й у	X κυ	Ψ α λ φ Β Π X	Ω β μ χ Γ Μ Ц	<i>Y v ψ</i> ДНЧ	δ ξ ω Ε Ο Ш	ε 0 ЁПЩ	ζπ Ж Р Ъ	7 O C J	191 192 193 194 195 196 197 198	蟹慨馨拡赫顎恰叶	開概蛙撹較掛括椛	階涯垣格郭笠活樺	貝碍柿核閣樫渇鞄	凱蓋蛎殼隔橿滑株	劾街鈎獲革梶葛兜	外該劃確学鰍褐竃	咳鎧嚇穫岳潟轄蒲	害骸各覚楽割且釜	崖浬廓角額喝鰹鎌	255 256 257 258 259 260 261	航磁号告忽 昏	荒鋼合国惚此昆	行閣壕穀骨頃根さ	衡降拷酷狛今梱	講項濠鵠込困混】	貢香豪黒 坤痕	購高轟獄 墾紺	郊鴻麹漉 婚艮	酵剛克腰 恨魂	鉱劫刻甑 懇
073 074 075 076 077 078	Б	у Э в л х я	ΨЮ	ХЯДнч	еош	ë п щ	ж р ъ	З С	ИТЬ	айуэ	199 200 201 202 203 204 205	噛 勘幹款竿諌	鴨粥勧患歓管貫	栢刈巻感汗簡還	茅苅喚慣漢緩鑑	萱瓦堪憾澗缶間	乾姦換潅翰閑	侃完敢環肝関	冠官柑甘艦陥	寒寛桓監莞韓	刊干棺看観館	261 262 263 264 265 266 267	【 佐詐哉災載堺	叉鎖塞采際榊	唆裟妻犀剤肴	嵯坐宰砕在咲	· 左座彩砦材崎	差挫才祭罪埼	查債採斎財碕	沙催栽細冴鷺	瑳再歳菜坂作	些砂最済裁阪削
080 081 082 083	⊣ - -	_ + _ _	- +	F	¬ - -	_ 7 1		+	+ +	⊣ + +	206 207 207 208	舘贋【 基	丸雁 奇	含頑き 嬉	岸顔 寄	巌願】岐	玩 企希	癌 伎幾	眼 危忌	岩 喜揮	翫 器机	268 269 270 271 272	咋鮭 鯖惨	搾笹察捌撒	昨匙拶錆散	朔冊撮鮫桟	柵刷擦皿燦	窄 札晒珊	策 殺三産	索 薩傘算	錯 雑参纂	桜 皐山蚕

Kuten	Kuten digit 4									Kuten Kuten digit 4										Kuten Kuten digit 4												
digit 1 to 3	0	1	2		4			7	8	9	digit 1 to 3	0	1	2		4			7	8	9	digit 1 to 3	0	1	2		4	5		7	8	9
273	讃	賛	酸	餐	斬	暫			J	-		Ĭ		た		Ì		,	•	J	,	400		函	箱	硲	箸	肇	筈	櫨	幡	肌
	[し		1				_	_	343	他	多	太	汰	詑	唾	堕	妥	惰	打	401	畑	畠	八	鉢	溌	発	醗	髪	伐	罰
273 274	使	刺	司	史	嗣	四	±	仕始		伺姿	344 345	柁岱	舵帯	楕待	陀怠	駄態	騨戴	体替	堆泰	対滞	耐胎	402 403	抜半	筏反	閥叛	鳩帆	噺搬	塙斑	蛤板	隼氾	伴汎	判版
275	子	屍	市) 師	志	思思	上指	左支		安斯	346	沿腿	市苔	付袋	总貸	忠退	逮	首 隊	 孫黛	滞鯛	胎代	404	- 犯		料	繁	抛般		販販	池範		M 煩
276	施	旨	枝	止	死	氏	獅	祉		糸	347	台	大	第	配	題	鷹	滝	瀧	卓	啄	405	頒		挽		番		磐	蕃	蛮	/><
277	紙	紫	肢	脂	至		詞	詩	試	誌	348	宅	托	択	拓	沢			託	鐸	濁		[ひ		1					
278	諮	資	賜	雌	飼	歯	事	似	侍	児	349	諾	茸	凧	蛸	只		n.v.		DE 17	Sili	405	rtn.	_	17	-	/th	at-	_	ш.	444	匪
279 280	字	寺次	慈滋	持治	時爾	璽	痔	磁	=	而	350 351	棚	叩谷	但狸	達鱈	辰樽	奪誰	脱丹	巽単	竪嘆	辿坦	406 407	卑比	企	妃疲	庇皮	彼碑	悲秘	扉緋	批罷	披肥	斐被
281	耳	人自	游	沿辞	汐	選鹿	行式	識		血丝	352	担	口探	旦	敷	愕淡	温	万炭	短短	端端	箪	408	誹	沙	避	非	飛		簸	備	尼尾	微微
282		宍	雫	Ë	叱	執	失	嫉		悉	353	綻	耽	胆	蛋	誕	鍛		壇	弾	断	409	枇	毘	琵	眉	美	IA.E	744	IVIIJ	, 0	D-2X
283	湿	漆	疾	質	実	蔀	篠	偲	柴	芝	354	暖	檀	段	男	談						410		鼻	柊	稗	兀		髭	彦	膝	菱
284 285	屡	蕊如	縞	舎	写	射	捨	赦		煮	354	ľ		ち		1	店	⁄гП	444	214	н:	411 412	肘	弼	必	畢	筆	逼	桧油	姫	媛	紐書
286	社尺	紗杓	者灼	謝爵	車酌	遮釈	蛇錫	邪若		勺弱	355	智	池	痴	稚	置	値 致		地遅	弛馳	恥築	413	百評	謬豹	俵廟	彪描	標病	氷秒	漂苗	瓢錨	票鋲	表蒜
287	惹		取	守	手		殊	狩		種	356	畜	竹	筑	蓄	逐	秩	窒	茶		着	414	蛭	鰭	品			浜				頻
288	腫	趣	酒	首	儒		呪	寿	授	樹	357	中	仲	宙	忠	抽	昼	柱	注	虫	衷	415		瓶								
289	綬	需	Д	収	周	±u.	10	200	_	7. I.	358	註	酎	鋳	駐	樗帘	瀦	猪	苧	著	貯	445	[ıZı]	_		_		_
290 291	終	宗繍	就習	州臭	修舟	愁蒐	拾衆	洲襲		秋蹴	359 360	丁	兆帖	凋帳	喋庁	龍弔	張	彫	徴	懲	挑	415 416	府	怖	不扶	付敷	埠斧	夫普	帰浮	富父	富符	布腐
292	輯	週	酋	州	集	魂	什	在		+	361	暢	朝	潮	牒	町	眺	聴	脹	腸	蝶	417	膚	芙	譜	負	厂賦	赴		附		撫
293	従	戎	柔	汁	渋	獣	縦	重		叔	362	調	諜	超	跳	銚	長	頂	鳥	勅		418	武	舞	葡	蕪	部	封		風	葺	蕗
294	夙	宿	淑	祝	縮	粛	塾	熟		術	363	直	朕	沈	珍	賃	鎮	陳				419	伏		復		服					
295	述	俊	峻	春	瞬	竣	舜	駿		循	000	[つ]			-	na.	146	420	-	福	腹	複	覆			払	沸	仏
296 297	旬醇	楯順	殉処	淳初	準所	潤暑	盾曙	純渚		遵緒	363 364	松色	迫	全色	京	海	坛	栂	津掴	墜槻	椎佃	421 422	物粉	鮒糞	分紛	吻雰	噴文	墳聞	憤	扮	焚	奮
298	野署	書	型 薯	初藷	活諸		曜叙	酒 女		紹徐	365	槌漬		鎚辻	痛蔦	通綴	塚鍔			焼坪	並	766	初【	兵	初へ	分	ì	[H]				
299	恕	鋤	除	傷	償	->3	320	^	,,,	12.	366	嬬			吊	釣	鶴	114	/5-0	- 1		422	•				•		丙	併	兵	塀
300		勝	匠	升	召	哨	商	唱		奨		[τ]						423	幣	平	弊	柄	並		閉	陛		頁
301	妾	娼	宵	将	小	少博	尚	庄		廠	366		_		TH.		**	亭	低	停	偵	424	僻	壁	癖	碧	別	瞥	蔑	箆	偏	変
302 303	彰松	承梢	抄樟	招樵	掌沼	捷消	昇渉	昌湘		晶焦	367 368	剃悌	貞抵	呈挺	堤提	定梯	帝汀		庭禎	廷程	弟締	425 426	片鞭	篇	補用	겓	沤	遍	1史	勉	娩	弁
304	照	症	省	硝	礁	祥	称	章		<u></u>	369	艇	訂	諦	蹄	逓	/]	WE	112	仕	WID	420	*K		ほ		1					
305	紹	肖	菖	蒋	蕉	衝	裳	訟		詔	370		邸	鄭	釘	鼎	泥	摘	擢	敵	滴	426	•	保	舗	鋪	圃	捕	歩	甫	補	輔
306	詳	象	賞	醤	鉦	鍾	鐘	障		上	371	的	笛	適	鏑	溺	哲	徹	撤	轍	迭	427	穂	募	墓	慕	戊	暮		簿	菩	倣
307	丈	丞	乗	冗	剰	城	場	壌		常	372	鉄	典	填	天	展		添日	纏	甜	貼	428	俸	包	呆	報	奉	宝	峰	峯	崩	庖
308 309	情醸	擾錠	条嘱	杖埴	浄飾	状	畳	穣	蒸	譲	373	転【	顛	点と	伝	殿	澱	ш	電			429 430	抱	捧法	放泡	方烹	朋砲	縫	胞	芳	萌	蓬
310	HER	拭	植	殖	燭	織	職	色	触	食	373	١,		_		1				兎	叶	431	蜂	褒	訪	豊	邦	鋒	飽	鳳	鵬	差
311	蝕	辱	尻	伸	信	侵	唇	娠		審	374	堵	塗	妬	屠	徒	斗	杜	渡	登	莵	432	亡	傍	剖	坊	妨			忙	房	暴
312	ιĽι	慎	振	新	晋		榛	浸		申	375	賭	途	都	鍍	砥	砺	努	度	土	奴	433	望	某	棒				膨	謀		貿
313	疹	真	神	秦	紳		芯	薪		診	376	怒	倒	党	冬	凍	刀	唐	塔心	塘	套	434	鉾	防	吠	頬	北	僕	<u> </u>	墨	撲	朴
314 315		辛	進尽	針	震	人迅	仁	刃靭	塵	壬	377 378	岩次	島淘	嶋	悼津		搭級	東当	桃痘	梼	棟	435 436		睦	穆	釦	勃	没	始	堀	幌	奔
313	尋	甚	す	腎	ゴ 】	ш	甲	型			379	盗答	海筒	湯糖	涛統	灯到	燈	=	炄	祷	等	430	4	翻	凡 ま	盆	1					
315	•		,		•				笥	諏	380	П	董	蕩	藤	討	謄	豆	踏	逃	透	436	•		٠.		摩	磨	魔	麻	埋	妹
316	須		図	厨	逗		垂	帥		水	381	鐙	陶	頭	騰	闘	働	動	同	堂	導	437		枚		哩	槙	幕	膜	枕	鮪	柾
317	炊	睡	粋	翠			酔	錐		随	382	憧	撞	洞	瞳	童	胴		道	銅	峠	438	鱒	桝	亦	俣		抹	末	沫	迄	侭
318 319	瑞坦	髄帯	崇頔	嵩坐		枢	趨	雛	据	杉	383 384	鴇	匿詰	得版	徳橡	涜	特空	督	禿尾	篤	毒	439 440	繭	麿温	万蔓	慢	満					
320	椙	菅澄		雀寸	裾						384	独寅	読酉	栃瀞	隊順	凸屯	突恒	椴敦	届沌	鳶豚	苫遁	440	[漫	曼み		1					
	[137	せ	J	1						386	頓	吞	曇	鈍	. 6	13	水	/ E	יפנו	72	440	,		5,	味	未	魅	Е	箕	岬	密
320					世	瀬	畝	是		制		Ī		な		1						441		湊	蓑	稔	脈	妙			眠	
321	勢		征	性	成	政成	整	星		棲	386	=nt/	2004	+25	фгя	奈						441	[む]					347
322 323	栖西	正誠	清誓	牲請	生逝	盛醒	精青	聖静		製税	387 388	謎軟		捺汝	鍋	楢	馴	縄	畷	南	楠	441 442	夢	無	牟	矛	霧	鵡	椋	辉	娘	務
324	脆	隻	言席	借	戚	唯斥	昔	析		行積	550	1	大性	に		1							\$	т	め	\J.	795]	政制	JVI.	거	МX	
325	籍		脊	責	赤	跡	蹟	碩		拙	388	•			\equiv		弐	迩	匂	賑	肉	442	•		-		•					冥
326	接	摂	折	設	窃	節	説	雪	絶	舌	389	虹	#	旦	乳	入						443	名	命	明	盟			鳴	姪	牝	滅
327			先	千	占	宣	専	尖		戦	390		如	尿	韮		妊	忍	認			444	免	棉		緬	面	麺				
328 329	扇帽		栓突	梅鈴		浅	洗	染	潜	煎	390	ľ		ぬ		1				100		444	ľ		ŧ		1		描	描	盐	÷
330	HIS	旋繊	牙羨		線舛	船	蓙	詮	賎	眯	550	ľ		ね]				濡		444	孟	丰	猛	盲	網	耗			茂木	妄默
331	選	遷							漸		390	•		104		1					禰	446						戻				
332			繕	膳	糎			_			391	袮	寧	葱	猫	熱	年	念	捻	撚	燃	447	紋	菛	匁	- / 1		`				~
000	[そ		1	n.e.	***	400	141	۵.	392	粘		_								447	[ゃ]		~~	п-	m-	7/-
332	#	杰木	χp	衣	7#	噌啉	塑	岨	措恕		392	[TL	の zm	٠,] **	丰	W.	***	śrb	4K	447 448	<u>_</u>	_	4rc	也约	治典	夜	爺	耶	野咖	弥
333 334	曽組		狙訴	疏阻		礎鼠	祖僧	租創		素叢	392	BW.	川贈	廼農	~ 調		誕	悩	辰	MY	ĦE	448 449	大鑓	IL	1又	北刀	采	訳	雌	項	49/1	釵
335	倉	喪	壮	奏	 爽		層層		惣		550	IIA 【	川原	は	שתניי	ı						. 10	延		Þ]					
336	捜	掃	挿	掻	操	早	曹		槍		393	•		.5.		1				覇	杷	449	•		愈		癒					
337	漕	燥	争	痩	相	窓	糟	総	綜	聡	394	波		琶		婆	罵	芭	馬	俳	廃	450		諭	輸	唯	佑	優		友		
338	草		葬	蒼		装	走	送	遭	鎗	395			敗	杯		牌牌		肺	輩	配	451						湧			猷	由
339 340	霜	騒職	像蔵	増贈	憎造	促	但川	BII	即	p	396 397	1台	培這	烘棚	梅秤	楳矧	煤萩	归伯			賠拍	452	石【	裕	誘よ	<u>107</u>	=	郵	桩	南出	タ	
341	捉	順東	剧	照足					族		398	柏	洹泊	白	竹箔	粕	秋舶	油薄				452	ľ		٥		1					予
342		袖							村		399	爆	縛	莫	駁	麦	, JH	, .,	~=			453	余	与	誉	輿	預	傭	幼	妖	容	庸
	_				_		_					_											_									_

Kuten	Kuten digit 4									Kuten Kuten digit 4										Kuten	Kuten digit 4									٦		
digit 1 to 3	0	1	2	3	4	5	6	7	8	9	digit 1 to 3	0	1	2	3	4	5	6	7	8	9	digit 1 to 3	0	1	2		4			7	ρ	9
454	揚	揺	擁	曜	楊	様	洋	溶	熔熔	用	521	圷	址	坎	折	址	坏	坩	垂	华	坡	599	椢	椦	棡	椌	相	Э	0	1	0	9
455	窯		耀	葉	蓉	要	謡	踊	遥	陽	522	坿	地	垓	垠	垳	垤	拼	垰	埃	埆	600	1000	棔	棧	棕	椶	椒	椄	棗	棣	椥
456	養	慾		欲	沃	浴	翌	翼	淀		523	埔	埒	埓	堊	埖	埣		堙	堝	塲	601	棹	棠	棯	椨	椪	椚	椣	椡	棆	楹
450	[5		1						524	堡塘	塢	塋	塰	毀	塒	堽	塹	墅	墹	602	楷	楜	楸	楫	楔	楾	楮	椹	棉	椽中
456 457	₩	÷π	117	±±	お西	(eTe)	347	447	块	羅	525 526	墟	増擴	墺壘	壞壥	墙壜	堵壌	堕	壅壯	壓	壑	603 604	林岩	椰槁	楡	楞	楝槎	榁	楪槊	榲槝	榮	槐
458	螺乱	裸卵	来嵐	莱欄	料濫	雷藍		船覧	落	酪	527	壗壻	販売	書	煙	塩	歩	聖夛	拉梦	壺夥	壹夬	605	榿榧	恫樮	槓榑	榾榠	佐榜	寨榕	紹榴	梅	楊槨	槃樂
	ľ	Эl	b	11249	Ī	ш	1940	晃			528	关	卒	夸	夾	竒	奕	奐	奎		类	606	樛	槿	權	槹	槲	槧	樅	榎	樞	械
458	•		-		•				利	吏	529	奢	奠	奥	奬	奩		-			-	607	樔	槫	樊	樒	櫁	樣	樓	橄	樌	橲
459	履	李		理	璃	-					530		奸	妁	妝	佞	侫	妣	妲	姆	姨	608	樶	橸	橇		橙	橦	橈	樸	樢	檐
460 461	75	痢	裏	裡	里	離	陸	律	率	7	531 532	姜	妍	姙	姚	娥	娟婢	娑林	娜	娉	娚	609 610	檍	檠檗	檄蘗	檢	檣舞	133	∔r¢a	150	枯	160
462	葎隆	掠竜	略龍	劉侶	流慮	溜旅	琉虜	留了	硫亮	粒僚	533	婀嫋	婬嫂	婉媽	娵嫣	娶嫗	姓嫦	婪嫩	媚嫖	媼嫺	媾嫻	611	櫑	架櫟	檗檪	檻櫚	櫃櫪	櫂櫻	檸欅	檳蘗	標櫺	機樂
463	画	凌	寮	料	梁	涼	猟	療	瞭	稜	534	嬌	嬋	嬖	嬲	嫐	嬪	嬶	州	嬢	孅	612	欖	鬱	欟	欸	欷	盜	欹	飲	歇	歃
464	糧	良	諒	遼	量	陵	領	力	緑	倫	535	孀	子	孕	孚	孛	孥	孩	孰	孶	孵	613	歉	歐	歙	歔	歛	歟	歡	歸	歹	歿
465	厘	林	淋	燐	琳	臨	輪	隣	鱗	麟	536	學	斈	孺	$\dot{\Box}$	它	宦	宸	寃	寇	隺	614	殀	殄	殃		殘	殕	殞	殤	殪	殫
466	тыл	型	る :::	=	】 **西						537 538	寔	寐	寤	實	寢	奠	寥	寫	寰	寶尸	615 616	殯	殲	殱毳		殷	殼	殿	毋	毓	毟
400	瑠【	솔	涙れ	累	類】						539	寳尹	尅屁	將屆	専屎	對屓	尓	色岁	尢	旭	Γ	617	毬氣	毫汞	延汕		麾汪	氈沂	氓沍	气沚	氛沁	氮沛
466	•		,,,		'	令	伶	例	冷	励	540	,	屐	屏	居	屬	Ш	乢	岃	屹	岌	618	汾	汨	汳		沫	泄	泱	泓	沽	泗
467	嶺	怜		礼	苓	鈴	隷	零	霊	麗	541	岑	岔	妛	岫	岻	岶	岼	岷	峅	岾	619	泅	泝	沮	沱	沾					
468	齢	暦	歴	列		烈	裂	廉	恋	憐	542	峇	峙	峩	峽	便	峭	嶌	峪	華	崕	620		沺	泛		泙	沮	洟	衍	洶	渔
469 470	漣	煉蒲	簾連	練錬	聯						543 544	崗嵌	寄品	崟嵎	崛嵋	崑嵬	崔差	崢嵶	崚嶇	崙嶄	崘嶂	621 622	洽 浚	洸浹	洗浙	洵涎	洳涕	洒濤	洌涅	浣淹	涓渕	浤渊
-7.0	[浬	選ろ	业术	1						545	吹嶢	嶝	嶬	順嶮	鬼嶽	産隆	殿嶷	嶼	順	巍	623	液涵	汝淇	油淦	涸	海	海淬	汪淞	准淌) 淨	冲凄
470	•		_		Ŕ	魯	櫓	炉	賂	路	546	巓	巒	巖	**	巫	Ē	巵	系	帚	帙	624	淅	茂淺	淙		淕	淪	淮	渭	湮	海
471	露	労	婁	廊	弄	朗	楼	榔		漏	547	帑	帛	帶	帷	幄	幃	幀	幎	幗	幔	625	渙	湲	湟	渾	渣	湫	渫	湶	湍	渟
472	牢	狼	篭	老	聾	蝋	郎	六	麓	禄	548	幟	幢	幣庫	幇	H G	并	幺	麼	广	庠	626	湃	渺	渔	渤	滿	渝	游	溂	溪	溘
473	肋	録	論わ		1						549 550	廁	厢廖	夏廣	廐廝	廏廚	廛	廢	廡	廨	廩	627 628	滉溥	溷滂	滓溟	溽潁	溯溉	ء 灌	溲滬	滔滸	滕滾	溏漿
473	,		1)	倭	和	話	歪	賄	脇	惑	551	廬	廖廱	廳	廰	3	廸	廾	弃	弊	桑	629	滲	凉漱	滞	漲	滌	准	//巴	/o I	/ <u>1</u> R	水
474	枠	鷲	亙	宣	鰐		藁	蕨	椀		552	彜	弋	弑	弖	弩	弭	弸	彁	彈	彌	630	12	漾	漓	滷	澆	潺	潸	澁	初初	潯
475	碗	腕									553	彎	弯	彑	彖	彗	彙	3	彭	7	彷	631	潜	潛	潭	澂	潼	潘	澎	澑	濂	潦
476											554	徃	徂	彿	徊	很	徑	徇	從	徙	徘	632	澳	澣	澡	澤	澹	濆	澪	濟	濕	濬
477 478											555 556	徠悳	徨忿	徭怡	徼恠	忖怙	忻恂	忤怩	忸怎	忱忽	忝 怛	633 634	濔瀏	濘濾	濱瀛	濮瀚	濛潴	瀉瀝	瀋瀘	濺瀟	瀑瀰	瀁瀾
479											557	怕	常	怦	怏	怺	惠	恁		怂恷	恟	635	瀲	灑	灣	炙	炒	炯	烱	炬	炸	炳
480		#	丐	丕	\uparrow	IJþ	\	丼	J	Х	558	恊	恆	恍	恣	恃				恫	恙	636	炮	烟	烋	烝	烙	焉	烽	焜	焙	煥
481	乖	乘	亂	J	豫	亊	舒	ĴΞ	于	亞	559	悁	悍	惧	悃	悚						637	煕	熈	煦		煌	煖	煬	熏	燻	熄
482	亟		九	京	亳	亶	씼	仍	仄	仆	560	_	悄	悛	悖	悗		悧	恪	惡	悸	638	煩		熬		熹	熾	燒	燉	燔	燎
483 484	仂侚	仗佗	15万	仭佶	仟侈	价件	伉侘	佚佻	估佩	佛佰	561 562	惠愆	惓惶	悴惷	忰愀	悽惴	惆惺	慢愃	惘惚	慍惻	愕惱	639 640	燠	燬燹	燧燿	燵爍	燼爐	爛	爨	爭	爬	爰
485	侑	佯	來	侖	儘	倪	俟	俎	俘	倪	563	愍	恒愎	慇	愾	殼	愧	慊	愿	恒	愬	641	爲	交	俎	爿	牀	牆	牋	順	牴	牾
486	俑	俚		俤	俥	倚	倨	倔	倪	倥	564	愴	愽	慂	慄	慳	慷	慘	慙	慚	慫	642	犂	犁	犇	犒	犖	犢	犧	犹	犲	狃
487	倅	伜		倡	倩		俾	俯	們	倆	565	慴	慯	慥	慱	慟	慝	慓	慵	憙	憖	643	狆	狄	狎	狒	狢	狠	狡	狹	狷	倏
488	偃	假	會	偕	修	偈	做	偖	偬	偸	566	憇	憬	憔	憚	憊	憑	憫	憮	懌	懊	644	猗	猊	猜	猖	猝	猴	猯	猩	猥	猾
489 490	傀	傚僉	伊僊	傴傳	傲僂	僖	僞	僥	僣	僣	567 568	應懣	懷懶	懈懺	慙懴	燥懿	憺懽	懋懼	罹懾	懔戀	懦戈	645 646	獎獺	獏 珈	默玳		獪玻	獨珀	獰珥	獸珮	獵珞	獻璢
491	僮	價	僵	儉	儁	儂	艦	儕	儔	儚	569	戊	戍	戌	惑	戛	惟	惟	ІНН	75%	~	647	琅	瑯	琥	珸				琿	起	瑙
492	儡	儺	儷	儼	儻	儿	兀	兒	兌	兔	570		戞	戡	截	戮	戰	戲	戳	扁	扎	648	瑁	瑜	瑩	瑰	瑣	瑪			璋	璞
493	兢	競	兩	兪	兮	冀		囘	册	冉	571	扞	扣	扛	扠	扨	扼	抂	抉	找	抒	649	璧	瓊	瓏	瓔	珱		T-2	T/\		
494 495	冏、	胃油	冓	冕山	٦k	冤况	冦	冢	寫	幕凛	572 573	抓	抖擔	拔址	抃拜	抔拌	拗拊	拑塘	抻拇	拏抛	拿拉	650 651	2/2	瓠甄	瓣甃	社	瓩甌	瓮甎	瓲甍	脸 甕	瓲 甓	000
495	ン几	决處	冱凩	冲凭	冰凰	元	冽凾	凅刃	凉刋		573 574	拆挌	措	 払 共	挧	挂	11 撃	拂拯	控护	抛捐	拉挾	652	瓷甦	到甬	光	甅出	剛	靴	気畉	幾畛	瓮畆	普番
497	刎	刧	刪	刮	刳	刹	剏	剄	剋	刺	575	捍	搜	捏	掖	掎	掀	掫	捶	掣	掏	653	畩	畤	畧	#	畭	畸	當	疆	疇	畴
498	剞	剔	剪	剴	剩	剳		剽	劍	劔	576	掉	掟	掵	捫	捩	掾	揩	揀	揆	揣	654	疊	疉	疂	疔	疚	疝	疥	疣	痂	疳
499	劒	剱	劈	劑	辨	4	777.L			***	577	揉	插	挪	揄	搖	搴		搓	搦	搶	655	痃			疸	疼	疱	痍	痊	痒	痙
500 501	勣	辨勦	劬飭	劭勠	劼勳	券勵	勁勸	勍	勗匆	勞匈	578 579	攝撓	搗撥	搨撩	搏撈	摧撼	摰	摶	摎	攪	撕	656 657	痣瘋	痞瘍	痾瘉	痿瘟	痼瘧	瘁瘠	痰瘡	痺瘢	痲瘤	痳瘴
502	則甸	制	割	剱匏	制匕	周	卸匣	匯	漫	凾	580	15%	撥據	擦	短擅	燃擇	撻	擘	擂	擱	舉	658	烛寒	憲	癇	癌癈	經	角癜			溜癢	厚癯
503	Ī	品		#	H		臣	準	卡	Ī	581	舉	擠	擡		擣	擯		擶	擴	擲	659	癩	瘡	癧		癰	m-ox	11-20	INC	1.19%	/#
504	卮	夘	卻	卷		厖	厠	厦	厥	厮	582	擺	攀	擽	攘	攜	攅	攤	攣	攫	攴	660		癲	74	癸		皀				皎
505	厰	\triangle		篡	雙	叟	曼	燮	叮	叨	583	攵	攷	收	攸	畋	效	敖	敕	敍	敘	661	皖	皓		皚	皰	皴	皸	皹	皺	盂
506 507	叭吩	以 吝	吁呎	吽咏	呀呵	听咎	吭呟	吼	吮呷	吶呰	584 585	敞斷	敝旃	敲旆	數旁	斂旄	斃旌	變旒	解旛	斟旙	斫工	662 663	盍眈	盖眇	盒眄	盞眩	盡昵	盥眞	盧眥	盪眦	蘯眛	 皆
508	咒咒		咀	呶	咄	百附	咆	哇	咢	百咸	586	光	押	果	昊	尺	昱	杏	服	旭	无昴	664	眸	睇	睚		睫	時	睥	睿	翠	睹
509		咬	哄	哈	咨			_			587	昜	晏	晄	晉	晁	睎	晝	晤	晧	晨	665	瞎	瞋	瞑	瞠	瞞	瞰	瞶	瞹	瞿	瞼
510			哂	咤	咾	周	哘	哥	哦	唏	588	晟	晢	断	暃	暈	暎	暉	暄	暘	瞑	666	瞽	瞻	矇	矍	矗	矖	矜	矣硴	矮	矼
511 512	唔售		哮响	哭凇	哺	哢哈	唹匾	啀	啣	啌	589 590	曁	暹	曉	暾	警嘩	DEF	or÷	D94	-		667 668	砌	砒码	礦	砠	礪	硅			碆	硼
512 513	售咯	啜喊	喧唱	啖啻	啗啾	唸喘	唳卿	啝單	喙啼	喀喃	590 591	曳	曄曷	瞭朏	曖朖	矇朞	曠朦	脏朧		襄朮	市田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田	668 669	碚碾	碌碼	碣碎	碵磊	碪 磬	碯	磑	磆	磋	磔
514	日喩		响喨	鳴	嗅	咣	嗄	平階	嗤	順	592	交杂	杁	朸	机	月杆				杣		670	YEN	磧	磚	磽		礇	礒	礑	礙	礬
515	嘔		嘖	嗾	嗽	嘛	嗹	噎	器	營	593	枉	杰	枩	杼	杪	枌		枦		枅	671	礫	祀	酮	祗	祟	祚	祕	祓	祺	禄
516	嘴	嘶	嘲	嘸	噫	噤	嘯	噬	噪	噶	594	枷	柯	枴	柬		柩	枸		柞	柝	672	禊	禝	禧	齋	禪	禮	穰	禹	禺	秉
517 518	嚀	嚊	嚠囃	嚏	嚏	燕	嚮囑	嚶	嚴口	囂四	595 596	抵恕	柮粹	枹	柎	拉梳	柧섫	檜桙			栩	673 674	批高	秧賣	秬經	秡	秣亭	程		棋神	稙程	稠藥
519	嚼囹	囁 圀	厢	轉吾	囈 圉	囎	1990	囓		化	597	桀梟	桍梏	栲梭	桎梔		栫梛			桷梹	桿桴	675	稟穢	禀穩	稱龝	稻穰	稟穹	稷穽	容窈	穂窗	穉窕	穑窘
520			或			專	BE	嗇	寰	圦	598	梵	梠	**	椏	棉				椈	棘	676	窖	窓窩	電電		窶	竅	竄		邃	~ 寶
		_	_			_	_	_	_	-			. , , , ,		,		. , ,,,,,,						_	. ~			_		-24		-	-

Kuten	Kutan disit 4	Kuten	Kuton digit 4	Kuten Kuten digit 4
digit	Kuten digit 4	digit	Kuten digit 4	Kuten digit 4
1 to 3 677	0 1 2 3 4 5 6 7 8 9 竊 竏 竏 竕 竓 站 竚 竝 竡 竢	1 to 3 0 1 755 誨 諦		
678	竦竭竰笂笏笊笆笳笘笙		東音諧諤諱謔諠	
679	笞 笼 笨 笑 筐	757 諞 諛	史 謌 謇 謚 諡 謖 謐	證 謗 謠 835 <u>麭 靡 黌 黎 黏 黐 黔 黜 點 點</u>
680	筐 笄 筍 笋 筌 筅 筵 筥 筴	758 謳 鞧		
681 682	算 筰 筱 筬 筮 箝 箘 箟 箍 箜	759 760 證 讀	替替譚 譫彙 譬譯 譴 譽 讀 讌	837
683	箴 篆 篝 篩 簑 簑 篦 篥 籠 簀	761 讓 讖		
684	族 節 篳 篷 簗 簍 篶 簀 簪	762 豐 涿		20 11 11 11 11 11 11 11 11 11 11 11 11 11
685	簟 簷 簫 簽 籌 籃 籔 籏 籀 籐	763 貍 新	祝 貔 豼 貘 戝 貭 貪	1 胎 貲
686	籘 籟 籤 籤 籥 離 籵 粃 粐 粤	764 貳 貮		
687 688	給 粢 粫 粡 粨 粳 粲 粱 粮 粹 粽 糀 糅 糂 稼 糒 糜 糢 蠶 糯	765 賻 誓 766 賍 昴		
689	粽 糀 糅 糂 糘 糒 糜 糢 鷺 糯 糲 糴 糶 糺 紆	767 趾 趺		
690	紂 紜 紕 紊 絅 紘 紮 紲 紿	768 跟 跳		
691	紵 絆 絳 絖 絎 絲 絨 絮 絏 絣	769 蹂 選		
692	經綉條綏絽綛綺綮綣綵	770 771		
693 694	緇綽綫總綢綯縣綸綟綰	771 蹣 選 772 躊 躓		
695	縡 縒 縱 縟 縉 縋 縢 繆 繦 縻	773 躱 躾		
696	縵 縹 繃 縷 縲 縺 繧 繝 繖 繞	774 軾 轁		
697	繙繚繹繪繩繼繻纃緕繽	775 輌 辇		
698 699		776 轆 轎		
700	趣 縣 標 型 歐 瞬 智 暑 曇 罐 网 罕 罔 罘	778		
701	苦 罠 罨 罩 罧 罸 羂 羆 羃 羈	779 逧 逶	委 逹 迸	
702	羇 羌 羔 羞 羝 羚 羣 羯 羲 羹	780 返	遏 遐違適適適逾	
703 704	羹 羶 羸 譱 翅 翆 翊 翕 翔 翡 煎 翮 翠 ≉ 孝 孝 孝 末 末	781		
704	翦翩翳翹飜耆耄耋耒耘耙耜耡耨耿耻聊聆聒聘	782 邊 邊 海 783 郛 鄂		
706	聚智聢聨聳聲聰聶聹聽	784 酥酪		
707	聿肄肆肅肛肓肚肭胃肬	785 醪 醋	據 醴 醺 醸 釁 釉 釋	整 釖
708	胛 胥 胙 胝 胄 胚 胖 脉 胯 胱	786 釟 釡		
709 710	脛 脩 脣 脯 腋 隋 腆 脾 腓 腑 胼 腱 腮 腥	787 28 20 31 32 32 33 34 34 35 36 36 37 37 38 38 38 38 38 38 38 38 38 38 38 38 38	版 鉞 鉗 鉅 鉉 鉤 鉈 跖 銜 銖 銓 銛 鉚 鋏	
711	隋 腆 脾 腓 腑 胼 腱 腮 腥 腦 腴 膃 膈 膊 膀 膂 膠 膕 膤	789		日報 改革
712	膣 腟 膓 膩 膰 膵 膾 膸 瞻 臀	790 錙		比 鍜 鍠
713	臂膺臉臍臑臙臘臈臚臟	791 鍼 鍼	渝 鍖 鎰 鎬 鎭 鎔 鎹	
714	機 臧 臺 臻 臾 舁 舂 舅 與 舊	792 鏨 錠		
715 716	舍 舐 舖 舩 舫 舸 舳 艀 艙 艘 艝 艚 艟 艤 艢 艨 艪 艫 舮 艱	793 鐓 鋳		
717	艷 艸 艾 芍 芒 芫 芟 芻 芬 苡	795 鑷 鑵		
718	苣苟苒苴苳苺莓范苻苹	796 閔 隊		
719	苞 茆 苜 茉 茁 # # #	797 閹 閾		
720 721	茵 茵 茖 茲 茱 荀 茹 荐 荅 茯 茫 茗 荔 莅 莚 莪 莟 莢 莖	798 關單799 陏陋		上 陂 陌
722	莫莎莇莊茶莵荳荵莠莉	800 陝		計 隕 隗
723	莨菴 萱 菫 菎 菽 萃 菘 萋 菁	801 險 隧		
724	蒂 萇 菠 菲 萍 萢 萠 莽 萸 蓤	802 雋 雉		
725 726	菻 葭 萪 萼 萼 蒄 葷 葫 蒭 葮蒂 葩 葆 萬 葯 葹 萵 蓊 葢 兼	803 需 第 804 解 题		
727	蒂葩葆萬葯葹萵蓊葢蒹蒿蒟蓙蓍蒻蓚蓐蓁蓆蓖	805 龍 酥		
728	蒡 蔡 蓿 蓴 蔗 蔘 蔬 蔟 蔕 蔔	806 靺 鄞		
729	蓼 蕀 蕣 蕘 蕈	807 鞴 鞱		
730 731	蕁 蘂 蕋 蕕 薀 薤 薈 薑 <u>薊</u>	808 韶 部		類類
732	売 蕭 薔 薛 藪 薇 薜 蕷 蕾 薐 藉 薺 藏 薹 藐 藕 藝 藥 藜 藹	809 顧 期		· 第
733	蘊充蘋藾菌蘆龍蘚蘰蘿	811 飆 餌		
734	虎 馬 虔 號 虧 虱 蚓 蚣 蚩 蚪	812 餞 餤	数 餅 餬 餮 魄 餾 饂	監 饉 饅
735	纳蚌蚶蚯蛄蛆蚰蛉蠣蚫	813 億 館		
736 737	蛔 蛞 蛩 蛬 蛟 蛛 蛯 蜒 蜆 蜈蜀 蜃 蛻 蜑 蜉 蜍 蛹 蜊 蜴 蜿	814 馮 駅 815 駲 駽		
737	蛾 蜻 蜥 蜩 蜚 蝠 蝟 蝸 蝌 蝎	816 驅 駿		
739	蝴蝗蝨蝮蝙	817 驢 駿	THE THE THE THE DT DO	12 11
740	蝓 蝣 蝪 蠅 螢 螟 螂 螯 蟋	818 髏 髑	圈 髓 體 髞 髟 髢 髣	
741 742	<u> </u>	819 髫 髮		≨
742	蟯 蟲 蟠 蠏 蠍 蟾 蟶 蟷 蠎 蟒 蠑 蠖 蠕 蠢 蠡 蠱 蠶 蠹 蠹 蠻	820		
744	衄衂衒衙衞衢衫袁衾袞	822 魎 魑		
745	祖 衽 袵 衲 袂 袗 袒 袮 袙 袢	823 鮠 鮨	皆 鮴 鯀 鯊 鮹 鯆 鯏	則鯑 鯒
746	抱裹袰袿袱裃裄裔裘裙	824 鯣 鮹	兒 鯤 鯔 鯡 鰺 鯲 鯱	
747 748	装 裹 褂 裼 裴 裨 裲 褄 褌 褊 褓 襃 褞 褥 褪 褫 襁 襄 褻 褶	825 鰔 鮭 鰯		
748	探 褎 褞 褥 褪 搋 襁 襄 褻 褶 褸 襌 禅 襠 襞	826 鰛 鰥 827 鱠 鱧		
750	襦 襤 襭 襪 襯 襴 欅 襾 覃	828		
751	覈 覊 覓 覘 覡 覩 覦 覬 覯 覲	829 鵁 頜	鳴 鴾 鵆 鵈	
752	覺 覽 觀 觀 觚 觜 觝 觧 觴 觸	830 期	鳴驚鵤鵐鵙鵲	
753 754	計 訖 訐 訌 訛 訝 訥 訶 詁 詛 治 詆 詈 詼 詭 詬 詢 誅 誂 誄	831 鶇 鵯 832 鶸 鶺		
7 04	四四三三次间间对环流	35 能	妈 妈 妈 妈 妈	a this Bis