

NVR-series Install Camera Instruction

Compatible Model

NVR-0504	NVR-0508	NVR-1316	NVR-1332
NVR-0437	NVR-0732	NVR-0764	

Camera Protocol List

LevelOne 1

**NVR include PoE port only working with "Levelone1" protocol cameras,
Plug and play function.**

FCS-3073	FCS-3084	FCS-3085	FCS-3086	FCS-3087
FCS-3088	FCS-3090	FCS-3096	FCS-3097	FCS-3098
FCS-4103	FCS-4203	FCS-5058	FCS-5059	FCS-5060
FCS-5067	FCS-5068	FCS-5092	FCS-5093	FCS-5094
FCS-5095	FCS-5096			


LevelOne 2

FCS-3101	FCS-3102	FCS-4101	FCS-4102	FCS-4201
FCS-4202	FCS-4301	FCS-4302	FCS-4041	FCS-4047
FCS-4059	FCS-1131	FCS-5051	FCS-5061	FCS-3081
FCS-3095				

LevelOne 3

FCS-1153	FCS-1154	FCS-1158	FCS-1160	FCS-5053
FCS-3053	FCS-3054	FCS-3055	FCS-3056	FCS-3063
FCS-3064	FCS-3065	FCS-3072	FCS-3082	FCS-3083
FCS-3092	FCS-3093	FCS-3094	FCS-3302	FCS-3303
FCS-3305	FCS-3306	FCS-3307	FCS-3304	FCS-4042
FCS-4044	FCS-4045	FCS-4046	FCS-4048	FCS-4043
FCS-5054	FCS-5055	FCS-5055	FCS-5056	FCS-5057
FCS-5063	FCS-5064	FCS-5065	FCS-5066	FCS-5101
FCS-5102	FCS-5103	FCS-5104		

1. Please login NVR Local GUI Menu into camera setting page

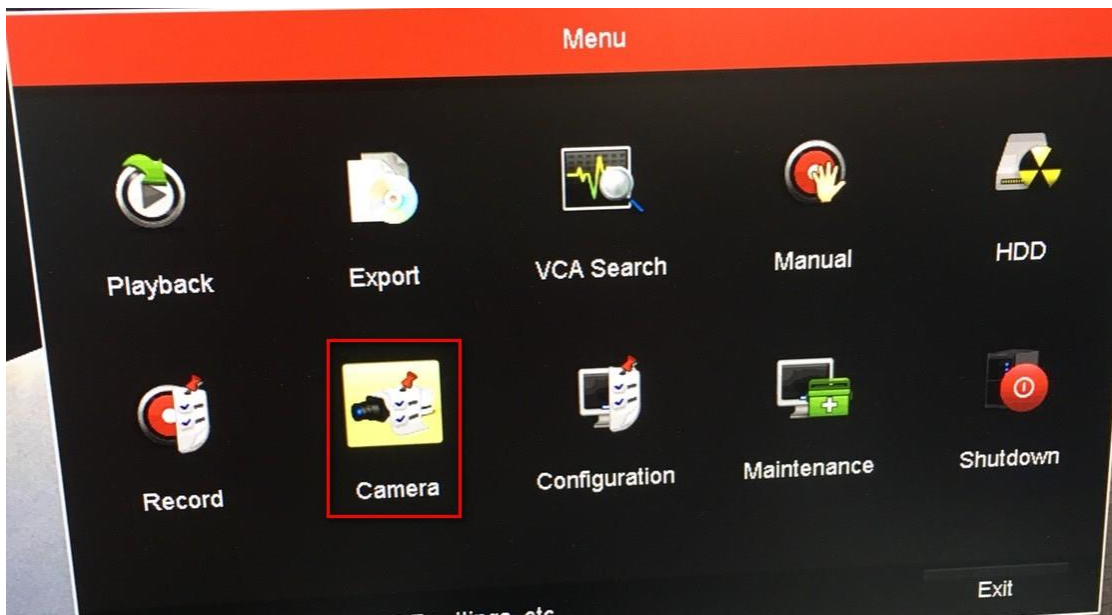

2. Click Edit



3. Edit camera information

IP Camera No.	D6
Adding Method	Manual
IP Camera Address	192.168.0.173
Protocol	LevelOne2
Management Port	80
Channel Port	1
Transfer Protocol	Auto
User Name	root
Password	

Add Method :

Manual type: Support all camera include thirty part cameras.

Auto type: Support Protocol **LevelOne 1** cameras Plug and play with include PoE NVR-series.

IP Camera address :

Fill Camera IP address

Protocol:

LevelOne1, **LevelOne2**, **LevelOne3**, SONY, AXIS, BoSCH, SAMSUNG, PANASONIC....etc,
Please follow protocol of camera type; Levelone camera list refer P.1 camera type list.

4. Camera Management page Click Status pre-view video

Camera No.	Add/Delete	Status	Security	IP Camera Address
—	—	🟢	Strong Password	192.168.0.223
—	—	🟡	Strong Password	192.168.0.217
—	—	🟡	Strong Password	192.168.0.160
—	—	🟡	Risk Password	192.168.0.162
—	—	🟡	Strong Password	192.168.0.112
—	—	🟡	Risk Password	192.168.0.173
—	—	🟡	Strong Password	192.168.0.191
—	—	🟡	Risk Password	192.168.0.156
—	—	🟢	Active	192.168.0.109