



دليل المستخدم | KU730

هذه الوثيقة هي دليل مستخدم الهاتف الجوال LG KU730 من الجيل الثالث ومزود بإمكانيات تصوير الفيديو. كل الحقوق المتعلقة بهذه الوثيقة محفوظة لشركة إل جي إلكترونيكس. ويحظر نسخ أو تعديل أو توزيع هذه الوثيقة دون الحصول على موافقة إل جي إلكترونيكس.

CE 0889



دليل المستخدم

P/N : MMBB0212306 (1.1)




دليل المستخدم | KU730 | USER GUIDE

This document is the user guide for the LG KU730 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.

CE 0889

 دليل المستخدم | KU730 |

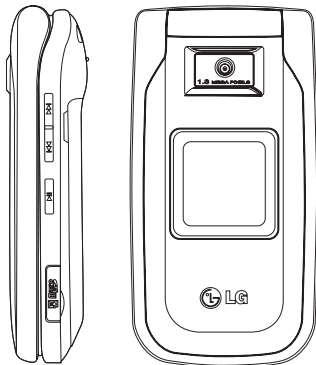

هذه الوثيقة هي دليل مستخدم الهاتف الجوال LG KU730 من الجيل الثالث ومزود بإمكانيات تصوير الفيديو. كل الحقوق المتعلقة بهذه الوثيقة محفوظة لشركة إل جي إلكترونيكس. ويحظر نسخ أو تعديل أو توزيع هذه الوثيقة دون الحصول على موافقة إل جي إلكترونيكس.

٤ ٢	دفتر العناوين جهات الاتصال اسم جديد ارقام الاتصال السريع مجموعات	٢ ٥	الوظائف العامة	٦	توجيهات من أجل الاستخدام الآمن والفعال
٤ ٣	أرقام الاتصال بالخدمة رقم هاتفي الإعدادات	٣ ٠	القائمة الرئيسية	١ ٠	أجزاء الهاتف
		٣ ٣	المكالمات مكالمات الفيديو سجل المكالمات مدة المكالمة عرض تكلفة المكالمة	١ ٣	البداية
		٣ ٥	تحويل المكالمات		
		٣ ٨	حظر المكالمات		
		٣ ٩	أرقام الاتصال الثابت		
		٤ ٠	انتظار المكالمات الإعدادات		

٥٤	الرسائل
	رسالة جديدة
٦٤	مسودات
٦٥	صندوق البريد
٦٦	مسودات
٦٧	صندوق الصادر
	العناصر المرسلّة
٦٨	نماذج
	الرموز التعبيرية
	الاعدادات

٥٠	الوسائط
	كاميرا الفيديو
٥١	التقاط صورة
٥٢	مسجّل الصوت

٤٤	الإعدادات
	التاريخ والوقت
٤٥	الشبكة
	نقاط الوصول
٤٦	إعدادات الحماية
٤٨	اللغة
	حالة الذاكرة
٤٩	معلومات حول الهاتف
	إعادة ضبط المصنع
	إعدادات التدفق

٧٤	المتصفح	٧٧	ألبوم الوسائط	٨٤	ألعاب وتنزيلات
	الصفحة الرئيسية		الصور		ألعاب وتطبيقات
	العلامات	٧٨	مقاطع فيديو		ألعاب إضافية
	الصفحات المحفوظة	٨٠	الصوت		تنزيلات
	الذهاب الى عنوان الموقع	٨١	التطبيقات		
	إعدادات الحماية		أخرى		
٧٥	الإعدادات		بلوتوث	٨٥	المزيد
		٨٢	ذاكرة خارجية		ساعة المنبه
		٨٣	قوائم التشغيل		الاتصال
				٩١	الحاسبة
					التوقيت العالمي
					محول الوحدة

٩٨	التقويم	٩٦	الاضاع	٩٤	شاشة العرض
	التقويم		عادي		سمة الشاشة
٩٩	المهام		صامت		سمة الشاشة الامامية
١٠٠	المذكرة		اهتزاز فقط	٩٥	الاضاعة الخلفية
	مذكرة سرية		بالخارج		الخط
	محدد التاريخ		هاتف		نظام الهاتف
	عداد التاريخ		مخصص ١		تنزيل المزيد
١٠١	الاعدادات		مخصص ٢		
			مخصص ٣		
١٠٢	استكشاف الأخطاء وإصلاحها				
١٠٤	الملحقات				

توجيهات من أجل الاستخدام الآمن والفعال

◀ الحد الموصى به لمعدل الامتصاص النوعي SAR من قبل اللجنة الدولية للحماية من الإشعاع غير الأيوني (ICNIPR) يبلغ معدله ٢ وات/كيلو جرام فوق عشرة (١٠) جرامات من النسيج البشري.

◀ تم اختبار أعلى قيمة لمعدل الامتصاص النوعي SAR لموديل الهاتف هذا بتقنية DASY4 للاستخدام في الأذن وقد بلغت ١,٨١ وات/كيلوجرام (١٠ جرام).

العناية بالهاتف وصيانتة

تحذير! لا تستخدم سوى البطاريات والشاحن والملحقات المعتمدة للاستخدام مع موديل هذا الهاتف فقط. قد يؤدي استخدام أي أنواع أخرى غير المعتمدة إلى إبطال أي تصديق أو ضمان ينطبق على الهاتف. وقد يشكل ذلك خطراً.

◀ لا تقم بفك أجزاء هذه الوحدة. عندما يصبح من الضروري القيام بأعمال الإصلاح، عليك الذهاب إلى أحد فنيي الخدمة المؤهلين لذلك.

◀ ابتعد عن الأجهزة الكهربائية مثل أجهزة التلفزيون أو الراديو أو الكمبيوتر.

الرجاء قراءة تلك التوجيهات البسيطة. يعد انتهاك القوانين من الأمور الخطيرة أو غير الشرعية. يمدك هذا الدليل بالمزيد من المعلومات المفصلة.

التعرض لطاقة موجات التردد اللاسلكي

معلومات حول التعرض لموجات الراديو (اللاسلكية) ومعدل الامتصاص النوعي (SAR)

لقد تم تصميم موديل الهاتف الجوال KU730 بحيث يتوافق مع شروط السلامة السارية والخاصة بالتعرض للموجات اللاسلكية. وتعتمد هذه الشروط على التوجيهات العلمية التي تتضمن احتياطات السلامة التي تهدف إلى تأمين سلامة جميع الأشخاص بغض النظر عن أعمارهم أو مستوى صحتهم.

◀ وتستخدم توجيهات التعرض للموجات اللاسلكية وحدة قياس تعرف باسم (معدل الامتصاص النوعي) أو SAR. يتم إجراء الاختبارات على SAR (معدل الامتصاص النوعي) باستخدام أسلوب معياري مع إرسال الهاتف عند أعلى مستويات الطاقة المعتمدة في جميع حزم التردد المستخدمة.

◀ على الرغم من إمكانية وجود اختلافات بين مستويات SAR (معدل الامتصاص النوعي) لموديلات هاتف LG المختلفة. إلا أن جميعها مصممة لتفي بالتوجيهات المتعلقة بالتعرض للموجات اللاسلكية.

- ◀ استعمل ملحقات، مثل سماعات الرأس وسماعات الاذن بحذر. تأكد من ادخال الكابلات بسلامة ولا تقوم بلمس هوائي التلفون بدون ضرورة
- ◀ استخدم الملحقات مثل السماعة بكل حرص.

الأجهزة الإلكترونية

- ◀ جميع الهواتف الجواله قد تتعرض للتداخل (التشوش) مما قد يؤثر على الأداء.
- ◀ لا تستخدم هاتفك الجوال بالقرب من الأجهزة الطبية دون الحصول على موافقة بذلك. تجنب وضع الهاتف فوق جهاز تنظيم ضربات القلب، كوضعه في الجيب العلوي مثلاً.
- ◀ قد تؤدي الهواتف الجواله إلى تعرض بعض الوسائل السمعية المساعدة للتشوش.
- ◀ قد يؤثر التداخل البسيط على أجهزة التلفاز والمذياع والكمبيوتر.

السلامة على طريق القيادة

- ◀ اطلع على القوانين واللوائح الخاصة باستخدام الهواتف الجواله في الأماكن التي تقود فيها.
- ◀ لا تستخدم الهواتف الجواله يدوياً أثناء قيادة السيارة.

- ◀ يجب الحفاظ على الوحدة بعيداً عن مصادر الحرارة مثل أجهزة التدفئة أو أفران الطبخ.
- ◀ لا تضع أبداً هاتفك في فرن المايكرويف لأن ذلك سيؤدي الى انفجار البطارية
- ◀ تجنب سقوط الوحدة.
- ◀ لا تعرض هذه الوحدة للاهتزازات الميكانيكية أو الصدمات.
- ◀ قد تتعرض الطبقة الخارجية للهاتف للتلف إذا تم كسوتها بغطاء ما أو بغطاء مصنوع من الفيلين.
- ◀ استخدم قطعة قماش جافة لتنظيف سطح الوحدة الخارجي.
- ◀ (لا تستخدم المواد المذيبة مثل البنزين أو التتر (مخفف الطلاء) أو الكحول).
- ◀ لا تعرض هذه الوحدة للدخنة أو الأتربة بشكل مفرط.
- ◀ لا تضع الهاتف بالقرب من بطاقات الائتمان أو تذاكر المواصلات. فمن الممكن أن يؤثر على المعلومات الموجودة على الأشرطة المغنطة.
- ◀ لا تنقر على الشاشة بأداة حادة، وإلا فقد يتسبب ذلك في تلف الهاتف.
- ◀ لا تعرض الهاتف للسوائل أو الرطوبة.

توجيهات من أجل الاستخدام الآمن والفعال

◀ اعط القيادة انتباهك الكامل.

◀ استعمل طقم الاستخدام غير اليدوي (تحرير اليدين)، إذا كان ذلك متوافراً.

◀ توقف على جانب الطريق وقم بإيقاف السيارة قبل إجراء مكالمة أو الرد عليها وذلك إذا ما استدعت ظروف القيادة ذلك.

◀ قد تؤثر طاقة التردد اللاسلكي على بعض الأنظمة الإلكترونية في سيارتك، كمجسم الصوت (الاستريو) وتجهيزات الأمان مثلاً.

◀ إذا كانت سيارتك مزودة بوسائد هوائية، فلا تعق مسارها بتجهيزات لاسلكية مثبتة أو محمولة. فمن الممكن أن يتسبب هذا في التعرض لإصابات خطيرة نتيجة.

إذا كنت تستمع إلى الموسيقى وأنت في الخارج هنا وهناك، رجاء تأكد بأن حجم الصوت في مستوى معقول لكي تدرك ما يدور حولك. خصوصاً عندما تحاول عبور الشارع.

تجنب الضرر لاذنك

يمكن ان يحدث الضرر لاذنك إذا تعرضت إلى الصوت العالي لفترات طويلة من الوقت. لذا نوصي بأن لا تشغل أو تطفئ الهاتف بالقرب من أذنك. أيضاً نوصي بأن يوضع حجم صوت الموسيقى والمكالمة في مستوى معقول.

مناطق تفجير الألغام

لا تستخدم الهاتف أثناء القيام بعمليات التفجير. انتبه للحدود المسموح بها. وقم باتباع أي لوائح أو قوانين.

الأماكن القابلة للاشتعال

◀ لا تستخدم الهاتف داخل محطات التزود بالوقود. ولا تستخدمه بالقرب من الوقود أو المواد الكيميائية.

◀ لا تقم بنقل أو تخزين الغازات أو السوائل القابلة للاشتعال أو المواد المتفجرة في مقصورة السيارة التي يوجد بها هاتفك الجوال والملحقات الخاصة به.

على متن الطائرة

قد تتسبب الأجهزة اللاسلكية في حدوث تداخل (تشوش) في الطائرات.

◀ قم بإغلاق (إيقاف تشغيل) هاتفك الجوال قبل الصعود على متن الطائرة.

◀ لا تستخدمه وأنت على الطائرة بدون الحصول على موافقة طاقم الطائرة.

الأطفال

يجب حفظ الهاتف في مكان آمن بعيداً عن متناول الأطفال. لأنه يشتمل على أجزاء صغيرة قد تسبب خطر الإصابة بالاختناق في حال فكها.

مكالمات الطوارئ

قد لا تتاح مكالمات الطوارئ في شبكات الهواتف الخلوية. لذلك، لا يجب أبداً أن تعتمد فقط على الهاتف لإجراء مكالمات الطوارئ. عليك مراجعة ذلك مع مزود الخدمة المحلي لديك.

معلومات عن البطارية والعناية بها

- ◀ لا يلزمك إفراغ شحنة البطارية بالكامل قبل إعادة الشحن. فبخلاف بقية أنظمة البطاريات الأخرى، لا يوجد أي تأثير للذاكرة من شأنه أن يضعف من أداء البطارية.
- ◀ لا تستخدم سوى بطاريات وشاحن LG فقط. لقد تم تصميم شاحن LG ليزيد من عمر البطارية.
- ◀ لا تقم بفك حزمة البطارية أو قصر دائرتها.

- ◀ حافظ على نظافة الوصلات المعدنية الخاصة بالبطارية.
- ◀ قم باستبدال البطارية عند عدم توفيرها مستوى الأداء المطلوب. من الممكن إعادة شحن حزمة البطارية مئات المرات حتى يحين الوقت الذي يلزم استبدالها فيه.
- ◀ أعد شحن البطارية في حال عدم استخدامها لفترة زمنية طويلة لزيادة فترة القابلية للاستخدام.
- ◀ لا تعرض شاحن البطارية لضوء الشمس المباشر ولا تستخدمه في أماكن عالية الرطوبة، مثل دورات المياه.
- ◀ لا تترك البطارية في الأماكن الحارة أو الباردة، لأن ذلك قد يقلل من أدائها.

أجزاء الهاتف

 
المنظر الأمامي

العدسات الخارجية
للكamera

الشاشة الأمامية



منظر خلفي

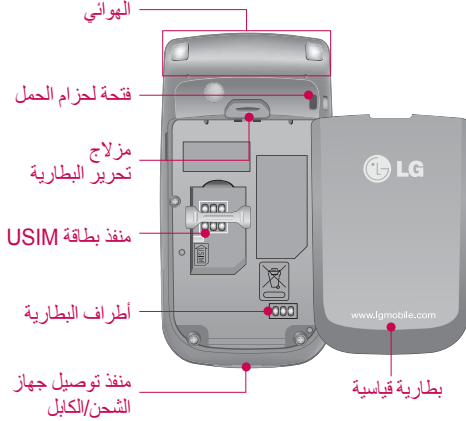


ملاحظة

◀ لا تلمس أبداً الهوائي أثناء إجراء مكالمة أو عند استخدام اتصال بلوتوث. حيث يمكن أن يؤدي ذلك إلى انخفاض مستوى جودة الصوت.

منظر من الجانب الأيمن



 منظر من الجانب الأيسر

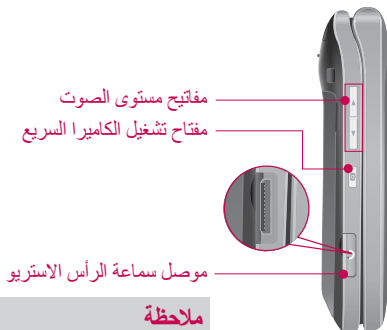

ملاحظة

◀ وصل قابلاً يناسب شكل الوحدة الطرفية. وإلا يمكن أن يتعرض المنتج للتلف.

أجزاء الهاتف

منظر فتح الهاتف

أجزاء الهاتف





لإخراج بطاقة USIM

ملاحظة

تأكد دائماً قبل التركيب من إيقاف تشغيل الهاتف وإخراج البطارية. قد تتلف المنطقة الذهبية لبطاقة USIM بسهولة عن طريق الخدش. ينبغي توخ الحرص عند التعامل مع بطاقة USIM وتركيبها. الخطوات المرفقة مع بطاقة USIM.

 
تركيب بطاقة USIM والبطارية

١. إدخال بطاقة USIM

تحتوي بطاقة USIM على رقم الهاتف وتفاصيل الخدمة وجهات الاتصال ويجب إدخالها في الهاتف.

إذا أخرجت بطاقة USIM من هاتفك فسيصبح غير قابل للاستخدام (فيما عدا مكالمات الطوارئ) حتى يتم إدخال بطاقة USIM صالحة. قم دائماً بفصل شاحن البطارية وملحقات الهاتف الأخرى عن الهاتف قبل إدخال أو إخراج بطاقة USIM الخاصة بك.


أدخل بطاقة USIM في الحامل؛ ثم اسحبها داخل الحامل. تأكد من إدخال بطاقة USIM بطريقة صحيحة وأن اتجاه منطقة التلامس الذهبية الموجودة على البطاقة لأسفل. لإخراج بطاقة USIM، اضغط لأسفل برفق واسحب البطاقة في الاتجاه العكسي.

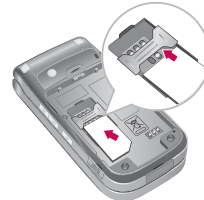

لإدخال بطاقة USIM

٢. إدخال البطارية

 أدخل البطارية مع محاذاة المنطقة الذهبية في البطارية مع أطراف البطارية (المنطقة الذهبية) في مكان تركيب البطارية. ثم اضغط على مقمة البطارية لأسفل إلى أن تستقر في مكانها.

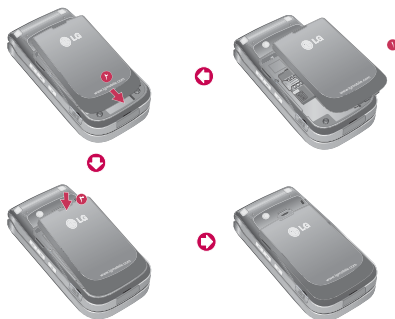


٣. إخراج البطارية

أوقف الهاتف. (إذا أبقيت الهاتف يعمل، سيكون هناك احتمال بفقد أرقام الهاتف والرسائل المخزنة.) اضغط مزاليح تحرير البطارية ① وارفع البطارية ② ثم أخرج البطارية.



 ٢. صل الطرف الآخر من شاحن السفر بمقيس التيار الرئيسي.
لا تستخدم سوى جهاز الشحن المرفق بعبوة الهاتف.

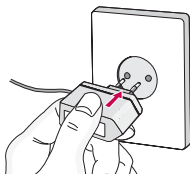

تحذير

◀ لا تضغط بقوة على منفذ التوصيل، حيث قد يؤدي ذلك إلى تلف الهاتف أو الشاحن.

يرجى ملاحظة أن وقت البدء غير المعتاد يمكن أن يستغرق ٣٥ ثانية عند التشغيل الأول أو عند إخراج البطارية.

شحن البطارية

يجب تركيب البطارية قبل توصيل شاحن السفر بالهاتف.

١. والسهم في مواجهتك كما هو موضح في الشكل، ادفع القابس الخاص بمهاوىء البطارية داخل المقيس الموجود في الجزء السفلي من الهاتف حتى سماع صوت نكة التثبيت.



فصل جهاز الشحن

افصل شاحن السفر من الهاتف بالضغط على زريه الجانبيين كما هو مبين في الرسم التخطيطي.



ملاحظة

- ◀ تأكد من شحن البطارية تماماً قبل استخدام الهاتف.
- ◀ لا تقم بإخراج البطارية أو بطاقة USIM أثناء الشحن.
- ◀ ستتوقف الأشرطة المتحركة الدالة على شحن البطارية عن الحركة بعد اكتمال عملية الشحن
- ◀ إذا استنفدت طاقة البطارية تماماً، فسوف تأخذ عملية الشحن عدة دقائق لتبدأ.

ملاحظة

- ◀ إذا لم يتم شحن البطارية:
- ◀ فأوقف تشغيل الهاتف.
- ◀ فتأكد من تركيب البطارية بطريقة صحيحة.

٣. أدخل بطاقة الذاكرة في الفتحة. يجب أن تتلامس مناطق الاتصال الذهبية الجزء الخلفي من بطاقة microSD. لا تدفع بطاقة microSD كثيرًا. إذا لم تتمكن من إدخال البطاقة في الفتحة، فربما كنت تحاول إدخالها في الاتجاه الخطأ أو ربما يكون هناك جسم غريب في الفتحة.



كيفية استخدام بطاقات الذاكرة *microSD



<بطاقة ذاكرة microSD>

<كيفية إدخال بطاقة ذاكرة microSD>

١. أوقف تشغيل الهاتف. إدخال وإخراج بطاقة microSD عندما يكون الهاتف في وضع تشغيل ربما يؤدي إلى تلف الملفات المخزنة في بطاقة الذاكرة.
٢. ارفع الغطاء البلاستيكي الذي يحمي فتحة بطاقة microSD.



٤. بمجرد إدخالها، ادفع بطاقة الذاكرة حتى تسمع صوت "نكة"،
تفيد بأن بطاقة microSD تم تركيبها بطريقة صحيحة.



٥. أغلق الغطاء البلاستيكي الذي يحمي الفتحة.

٦. لإخراج بطاقة الذاكرة، أوقف تشغيل الهاتف، ثم افتح واقي
الفتحة وادفع بطاقة microSD لإلغاء قفلها. أخرج بطاقة
الذاكرة بعناية.

تنبيه:

◀ تجنب استخدام بطاقة ذاكرة التخزين المؤقت عندما تكون
طاقة البطارية منخفضة.

◀ عند التسجيل في البطاقة، انتظر حتى استكمال العملية قبل
إخراج البطاقة.

◀ البطاقة مصممة ليتم تركيبها بسهولة في النظام في اتجاه
واحد فقط.

◀ لا تثن البطاقة أو تدخلها عنوة في الفتحة.

◀ لا تدخل أي نوع آخر من بطاقات الذاكرة بخلاف بطاقة
microSD.

لمزيد من المعلومات حول بطاقة microSD، يرجى الرجوع
إلى دليل الإرشادات الخاص ببطاقة الذاكرة.


تهيئة بطاقة الذاكرة

قبل البدء باستخدام بطاقة الذاكرة يلزم تهيئتها. بعد إدخال بطاقة
الذاكرة، اختر القائمة - الإعدادات - إعادة ضبط الإعدادات -
مسح الذاكرة - ذاكرة خارجية، ثم اضغط OK (موافق). يجب
القيام بالعملية فقط عند إدخال بطاقة الذاكرة للمرة الأولى. عند
التهيئة، سيتم إنشاء مجلدات مختلفة لتتلائم مع أنواع بيانات
مختلفة.

تشغيل الهاتف

تأكد أن بطاقة USIM لديك في الهاتف وأن البطارية مشحونة. اضغط مع الاستمرار على المفتاح  حتى يتم التشغيل. أدخل رمز PIN الخاص ببطاقة USIM المرفق مع بطاقة USIM الخاصة بك، إذا كان إعداد رمز PIN في وضع التشغيل. وبعد بضع ثوانٍ، سيتم تسجيلك على الشبكة.

إيقاف تشغيل الهاتف

اضغط مع الاستمرار على المفتاح  حتى يتم إيقاف التشغيل. ربما يكون هناك تأخير ليضع ثوانٍ حتى يتوقف تشغيل هاتفك. لا تقم بإعادة تشغيل الهاتف خلال هذه الفترة.

رموز الوصول (تمكين الاستخدام)

يمكن استخدام رموز الوصول (تمكين الاستخدام) المشروحة في هذا القسم لتجنب الاستخدام غير المرخص به لهاتفك. يمكن تغيير رموز الوصول (تمكين الاستخدام) (باستثناء رمز PUK و PUK2) عن طريق استخدام خاصية تغيير الرموز من [قائمة ٣-٤-٣].

رقم التعريف الشخصي PIN (من ٤ إلى ٨ أرقام)

يحمي رمز PIN (رقم التعريف الشخصي) بطاقتك USIM من الاستعمال غير المرخص. عادة ما يتم تزويد رمز PIN (رقم التعريف الشخصي) مع بطاقة USIM. وعند ضبط إعداد طلب إدخال رمز PIN على تمكين، فإن هاتفك سيطلب منك إدخال رمز PIN في كل مرة تقوم فيها بتشغيل الهاتف. وعلى النقيض، فعند ضبط إعداد طلب إدخال رمز PIN على تعطيل، يتصل هاتفك بالشبكة مباشرة دون الحاجة لإدخال رمز PIN.

رمز PIN2 (من ٤ إلى ٨ أرقام)

ينبغي إدخال رمز PIN2 المرفق مع بعض بطاقات USIM للوصول إلى وظائف مثل رقم الاتصال الثابت. هذه الوظائف متاحة فقط إذا كانت بطاقة USIM تدعمها.

رمز PUK (من ٤ إلى ٨ أرقام)

يجب إدخال رمز PUK (مفتاح إلغاء حظر رمز PIN) لإلغاء قفل رمز PIN المحظور. ربما يتم تقديم رمز PUK مع بطاقة USIM. وإلا فينبغي الاتصال بخدمة العملاء لمشغل الشبكة لديك لطلب الرمز. إذا فقدت الرمز عليك الاتصال بخدمة العملاء لمشغل الشبكة لديك.

رمز PUK2 (من ٤ إلى ٨ أرقام)

يجب إدخال رمز PUK2 المرفق مع بعض بطاقات USIM لإلغاء قفل رمز PIN2 المحظور. إذا فقدت الرمز عليك الاتصال بخدمة العملاء لمشغل الشبكة لديك.

رمز الحماية (من ٤ إلى ٨ أرقام)

يقوم رمز الحماية بحماية الهاتف من الاستخدام غير المرخص. رمز الحماية الافتراضي مضبوط على "0000" ويجب إدخال رمز الحماية لمسح كل إدخالات الهاتف ولاستعادة إعدادات المصنع للهاتف.

معلومات العرض

لا توجد شاشة سكون لبطاقة USIM

هذه هي الشاشة الأولية للهاتف التي تظهر عندما لا تكون هناك بطاقة USIM مثبتة في هاتفك، أو كانت بطاقة USIM غير صالحة. في هذه الشاشة، يمكن للمستخدمين إجراء مكالمات الطوارئ، وإيقاف تشغيل الهاتف. لإيقاف تشغيل الهاتف، اضغط مع الاستمرار على مفتاح الإنهاء لبضع ثوانٍ.

هيكل الشاشة

إذا لم تكن هناك بطاقة USIM مثبتة، يظهر رسم متحرك يطلب منك إدخال بطاقة USIM. إذا كانت بطاقة USIM المثبتة داخل الهاتف غير صالحة، يظهر رسم متحرك يخبرك أن بطاقة USIM مقفلة.

وظيفة مكالمات الطوارئ

مفتاح الاختيار الأيمن ممثل بواسطة كلمة "الطوارئ" على الشاشة. اضغط مفتاح الاختيار الأيمن ثم اضغط OK (موافق) لإجراء مكالمات طوارئ.

شاشة السكون

تظهر شاشة السكون عند تثبيت بطاقة USIM الصحيحة وتشغيل الهاتف.

هيكل الشاشة

تتكون شاشة السكون من اسم المشغل والمؤشرات والتاريخ والوقت وصورة الخلفية. كما يمكن تغيير الخلفية في قائمة إعدادات العرض.

١ شريط رموز المؤشر

يوضح العمليات الجارية ويذكرك بقوة الإشارة وطاقاة البطارية. ويظهر ذلك خلال كل الأنشطة.

٢ شريط قائمة الاختصار

في وضع السكون، يمكنك الدخول إلى القوائم التالية:

دفتر العناوين: جهات الاتصال، جهة اتصال جديدة

المكالمات: سجل المكالمات، المكالمات الفائتة، المكالمات المستلمة،
المكالمات المطلوبة

الرسائل: كتابة رسالة، الوارد، صندوق البريد

التقويم: اليوم، لا توجد مواعيد، موعد جديد

الكاميرا: النقاط صورة، ألبوم وسائط خلفية

اضغط على مفتاح OK (موافق) لاختيار شريط قائمة الاختصار. حدد القائمة المطلوبة باستخدام مفاتيح الانتقال للأعلى/للأسفل. ادخل إلى القوائم الفرعية بالضغط على مفتاح OK (موافق).

 
٣ شريط المطالبة

يظهر شريط المطالبة في مربعات الاختيار. ويتم تنشيطها بالضغط على مفتاح الاختيار المناسب تحت كل مربع.



وظائف المفاتيح

فيما يلي وصف لوظائف المفاتيح في حالة شاشة السكون.

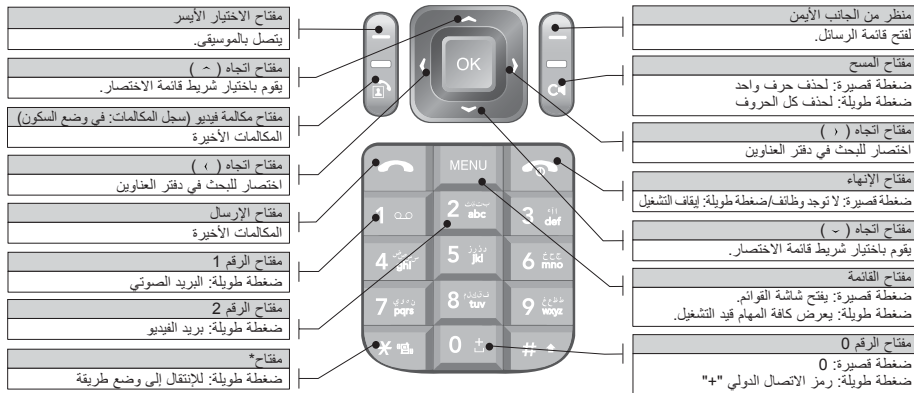

شاشة الترقيم

تظهر شاشة الترقيم عند ضغط مفتاح رقم شاشة السكون.

هيكل الشاشة

تتكون شاشة الترقيم من مؤشرات الحالة والرقم المطلوب وقائمة الاختيار. مؤشرات الحالة هي نفس المؤشرات الموجودة في شاشة السكون. يمكن تغيير حجم ولون خط الاتصال من قائمة ضبط العرض. يمكنك إجراء مكالمات بينما تقوم بطلب رقم هاتف وذلك عن طريق الضغط على مفتاح إرسال أو مكالمات فيديو.

مفاتيح الاختيار

يمكنك استخدام مفاتيح الاختيار في العديد من الوظائف بينما تقوم بطلب رقم. يمكن باستخدام مفتاح الاختيار الأيسر حفظ الرقم الحالي في جهات الاتصال، وأيضاً إرسال رسالة إلى الرقم، ويمكن باستخدام مفتاح الاختيار الأيمن البحث عن الرقم في جهات الاتصال ويمكنك أيضاً إجراء مكالمات صوتية أو مكالمات فيديو.

شاشة قفل الهاتف

عند اختيار وظيفة قفل الهاتف، يمكنك فقط في هذه الشاشة إجراء مكالمات طوارئ وتحرير القفل وإيقاف تشغيل الهاتف. وكما هو الحال دائماً، يمكنك إيقاف تشغيل الهاتف عن طريق الضغط مع الاستمرار لثوانٍ قليلة على مفتاح الإنهاء.

هيكل الشاشة

يعتبر هيكل شاشة قفل الهاتف هو نفسه هيكل شاشة السكون، باستثناء ظهور شاشة القفل بدلاً من شاشة السكون.

وظيفة مكالمات الطوارئ

يمكنك إجراء مكالمات طوارئ باستخدام مفتاح الاختيار الأيمن. وكما هو الحال مع شاشة السكون لا توجد USIM، يمكن الاتصال فقط بأرقام الطوارئ.

وظائف إلغاء القفل

إذا قمت بالضغط على مفتاح OK (موافق)، تظهر لك رسالة تطلب منك إدخال رمز الحماية لإلغاء قفل الهاتف. تتم تهيئة رمز الأمان عن طريق اختيار الإعدادات ← الحماية ← تغيير الرمز. في حالة إدخال رمز حماية خطأ، سوف يبقى الهاتف في حالة قفل الهاتف. في حالة إدخال رمز الحماية الصحيح، سيتم إلغاء قفل الهاتف، وستظهر شاشة السكون. إذا قمت بإيقاف تشغيل الهاتف في حالة قفل الهاتف، فسوف تجده على نفس الحالة عند تشغيله مرة أخرى.

الوظائف العامة

◀ سوف يتم إخبارك بأنك ستحتاج إلى غلق التطبيقات الأخرى لإجراء مكالمة الفيديو.

ملاحظة


◀ يمكن أن تستغرق مكالمة الفيديو بعض الوقت للاتصال. لذلك يرجى الانتظار والتحلي بالصبر. ومدة الاتصال تعتمد أيضاً على مدى سرعة رد الطرف الآخر على المكالمة.

٤. اضغط على مفتاح الإنهاء لإنهاء المكالمة أو أغلق الهاتف.


إجراء المكالمات الصوتية

١. أدخل الرقم مشتملاً على رمز المنطقة كاملاً.

◀ لحذف رقم واحد اضغط على مفتاح .

لحذف كل الأرقام اضغط مع الاستمرار على المفتاح .

٢. اضغط على المفتاح  لإجراء المكالمة.

٣. اضغط على المفتاح  لإنهاء المكالمة، أو أغلق الهاتف.

ملاحظة



◀ لتنشيط مكبر صوت الهاتف أثناء المكالمة، اضغط مع الاستمرار على المفتاح  لمدة ثانيتين على الأقل.

إجراء المكالمات والرد عليها


إجراء مكالمات الفيديو والرد عليها

يمكنك إجراء مكالمة فيديو في المنطقة التي تغطيها خدمة الجيل الثالث من الهاتف. إذا كان الشخص المطلوب يستخدم الجيل الثالث من الهواتف المزودة بكاميرا الفيديو في محيط تغطية الخدمة الخاصة بتلك الهواتف، فسوف يتم إجراء المكالمة. يمكنك أيضاً الرد على مكالمة فيديو لمكالمة فيديو واردة. لإجراء أو الرد على مكالمة فيديو، قم بعمل الآتي.

١. أدخل رقم الهاتف باستخدام لوحة المفاتيح، أو باختيار رقم الهاتف من قائمة المكالمات المستلمة/الصادرة.

◀ لتصحيح الأخطاء، اضغط على المفتاح  لفترة وجيزة لحذف آخر رقم، أو اضغط مع الاستمرار على المفتاح  لحذف كل الأرقام.



٢. إذا كنت لا تريد استخدام مكبر صوت الهاتف، تأكد من توصيل سماعة الرأس.

٣. لبدء وظيفة الفيديو، اضغط على .



الوظائف العامة

إجراء مكالمة صوتية/فيديو من جهات الاتصال

من السهل الاتصال بأي شخص قمت بتخزين رقمه في جهات الاتصال.

اضغط على مفتاح التنقل للأسفل للوصول إلى قائمة جهات الاتصال. انتقل إلى جهة الاتصال المطلوبة. اضغط على المفتاح  لإجراء مكالمة فيديو. اضغط على المفتاح  لإنهاء المكالمة.

إجراء مكالمة دولية



- استمر في الضغط على المفتاح  لتحديد بادئة الاتصالات الدولية. يمكن استبدال الرمز "+" برمز الوصول الدولي.
- قم بإدخال كود البلد ثم كود المنطقة ثم رقم الهاتف.
- اضغط .

ضبط مستوى الصوت


إذا أردت ضبط مستوى صوت السماع، أثناء المكالمة، قم باستخدام المفاتيح الجانبية للهاتف. في وضع السكون مع فتح غطاء المفاتيح، يمكن ضبط مستوى الصوت باستخدام المفاتيح الجانبية.


الرد على مكالمة

عند استلام (تلقي) مكالمة، يصدر الهاتف رنيناً ويتم عرض رمز الهاتف الوامض على شاشة الهاتف، إذا تم التعرف على هوية المتصل، فسيتم عرض رقم الهاتف المتصل (أو اسمه إذا كان مخزناً في دليل الهاتف) على شاشة العرض.

- افتح الغطاء واضغط على المفتاح  للرد على مكالمة واردة. إذا تم ضبط وضع الرد على اضغط على أي مفتاح، فسوف يتم الرد على المكالمة بالضغط على أي مفتاح باستثناء المفتاح .

ملاحظة

- لرفض المكالمة الواردة، اضغط على المفتاح  أو على مفتاح الاختيار الأيمن مرتين.
- إذا قمت بضبط "وضع الرد" عن طريق "فتح الغطاء" (القائمة ٩-٤)، فسوف يمكنك الرد على المكالمة ببساطة بمجرد فتح الغطاء.

٢. يتم إنهاء المكالمات عن طريق غلق الهاتف أو بالضغط على المفتاح .

ملاحظة

يمكن الرد على المكالمات أثناء استخدام دليل الهاتف أو ميزات القوائم الأخرى.

قوة الإشارة

إذا كنت داخل بناية، فإن وجودك بالقرب من النافذة سوف يوفر لك فرصة استقبال أفضل. يمكن معرفة قوة الإشارة عن طريق مؤشر قوة الإشارة (📶) الموجود في شاشة الهاتف.

إدخال نص

يمكنك إدخال الحروف الأبجدية الرقمية بواسطة استخدام لوحة مفاتيح الهاتف.

على سبيل المثال، تخزين الأسماء في جهات الاتصال، كتابة رسالة، إنشاء رسالة ترحيب شخصية أو جدولة الأحداث في التقويم، فكل ذلك يتطلب إدخال نص. طرق إدخال النص التالية متاحة في الهاتف.


وسيلة T9

يتيح لك هذا الوضع إدخال الكلمات بواسطة الضغط على المفتاح ضغطة واحدة فقط لكل حرف تريد إدخاله. كل مفتاح من مفاتيح لوحة مفاتيح الهاتف مزود بأكثر من حرف واحد. ويقوم الوضع T9 تلقائياً بمقارنة ضغطك على المفاتيح بواسطة قاموس داخلي بالهاتف وذلك لتحديد الكلمة الصحيحة، مما يتطلب القليل جداً من قيامك بالضغط على المفاتيح أكثر من وضع الحروف الأبجدية (أ ب ج). ويطلق على هذا النص أحياناً النص التنبئي.

وضع أ ب ت (الحروف)

يتيح لك هذا الوضع إمكانية القيام بإدخال الحروف عن طريق الضغط على المفتاح المطبوع الذي يحمل الحرف المراد كتابته وذلك لمرة واحدة فقط أو مرتان أو ثلاث أو أربع مرات حتى يتم عرض الحرف المراد على شاشة عرض الهاتف.

وضع 123 (وضع الأرقام)

اكتب الأرقام بواسطة ضغطة واحدة فقط لكل رقم يراد كتابته. للانتقال إلى وضع الأرقام في حقل مدخلات النص، اضغط على مفتاح  حتى يتم عرض وضع الأرقام على شاشة العرض.

الوظائف العامة



تغيير وضع إدخال النص

١. عندما تكون في حقل يسمح لك بإدخال حروف، سوف تلاحظ مؤشر وضع إدخال نص في الركن الأيمن العلوي للشاشة.


٢. الضغط لفترة وجيزة على المفتاح  للتنقل بين T9ABC، T9abc، ABC، abc و 123.

استخدام وضع T9

يُمكنك وضع إدخال النص T9 والمعروف بالوضع التنبئي من إدخال الكلمات بكل سهولة مع أقل عدد ممكن من الضغوطات على المفاتيح. فعند الضغط على أي مفتاح من المفاتيح، يبدأ الهاتف في عرض الأحرف التي يعتقد أنك تريد كتابتها وذلك بناءً على قاموس مدمج بالهاتف. يمكنك كذلك إضافة المزيد من الكلمات الجديدة في القاموس. وبمجرد إضافة الكلمات الجديدة، فإن الكلمة تتغير لعرض الكلمات الأكثر ترشيحاً من القاموس.


١. عندما يكون وضع إدخال النص التنبئي T9 قيد التشغيل، ابدأ في إدخال الكلمة عن طريق الضغط على المفاتيح من  إلى . اضغط على مفتاح واحد لكل حرف مراد إدخاله.

◀ تتغير الكلمة مع كل حرف تتم كتابته. تجاهل ما هو مكتوب على الشاشة حتى تتم كتابة الكلمة بالكامل.

◀ إذا كانت الكلمة بعد كتابتها بالكامل ما زالت غير صحيحة، اضغط على المفتاح  مرة واحدة أو أكثر للتنقل عبر الخيارات الأخرى للكلمة.

مثال



اضغط على     لكتابة كلمة واثق.

اضغط على المفتاح  للوصول للشاشة الرئيسية.

◀ إذا فقدت الكلمة المراد كتابتها من قائمة خيارات الكلمات، فقم بالإضافة مستخدماً وضع الحروف الأبجدية أ ب ت.

٢. قم بإدخال الكلمة بأكملها قبل تحرير أو حذف أي حرف مدخل بواسطة الضغط على المفاتيح.

٣. قم بإنهاء كل كلمة من الكلمات بمسافة فاصلة عن طريق الضغط على مفتاح .

لحذف أي حرف من الحروف، اضغط على مفتاح ، استمر في الضغط على مفتاح  لمحو الكلمات كلياً.

استخدم وضع أ ب ت (الحروف)

يمكن استخدام المفاتيح من  إلى  للقيام بإدخال النص الخاص بك.


١. اضغط على المفتاح المطبوع والذي يحمل الحرف المراد كتابته:

◀ ضغطة واحدة للحرف الأول

◀ ضغطتان للحرف الثاني

◀ وعلى هذا النحو

القائمة الرئيسية

يمكنك بدء تشغيل القائمة بالضغط على المفتاح  في شاشة السكون. تحرك إلى العنصر المطلوب ثم اضغط المفتاح OK (موافق) للذهاب إلى القائمة الفرعية.

يمكن الدخول أيضًا مباشرةً من القائمة الرئيسية إلى القائمة الفرعية بالضغط على مفتاح الرقم المناظر كما يلي. تحتوي القائمة الرئيسية على القوائم الفرعية والقوائم الفرعية التالية.

١. المكالمات	٢. دفتر العناوين	٣. الإعدادات
١-١ مكالمات الفيديو	١-٢ جهات الاتصال	١-٣ التاريخ والوقت
٢-١ سجل المكالمات	٢-٢ اسم جديد	٢-٣ الشبكة
٣-١ مدة المكالمة	٣-٢ أرقام الاتصال السريع	٣-٣ نقاط الوصول
٤-١ عرض تكلفة المكالمة	٤-٢ مجموعات	٤-٣ إعدادات الحماية
٥-١ تحويل المكالمات	٥-٢ أرقام الاتصال بالخدمة	٥-٣ اللغة
٦-١ حظر المكالمات	٦-٢ رقم هاتفي	٦-٣ حالة الذاكرة
٧-١ أرقام الاتصال الثابت	٧-٢ الإعدادات	٧-٣ معلومات حول الهاتف
٨-١ انتظار المكالمات		٨-٣ إعادة ضبط المصنع
٩-١ الإعدادات		٩-٣ إعدادات التدفق

٨. ألعاب وتنزيلات

١-٨ ألعاب وتطبيقات
٢-٨ ألعاب إضافية
٣-٨ تنزيلات
٩. المزيد
١-٩ ساعة المنبه
٢-٩ الاتصال
٣-٩ الحاسبة
٤-٩ التوقيت العالمي
٥-٩ محول الوحدة

٦. المتصفح


١-٦ الصفحة الرئيسية
٢-٦ العلامات
٣-٦ الصفحات المحفوظة
٤-٦ الذهاب الى عنوان الموقع
٥-٦ إعدادات الحماية
٦-٦ الإعدادات
٧. اليوم الوسائط
١-٧ الصور
٢-٧ مقاطع فيديو
٣-٧ الصوت
٤-٧ التطبيقات
٥-٧ أخرى
٦-٧ بلوتوث
٧-٧ ذاكرة خارجية
٨-٧ قوائم التشغيل



٤. الوسائط

١-٤ كاميرا الفيديو
٢-٤ التقاط صورة
٣-٤ مسجل الصوت
٥. الرسائل
١-٥ رسالة جديدة
٢-٥ مسودات
٣-٥ صندوق البريد
٤-٥ مسودات
٥-٥ صندوق الصادر
٦-٥ العناصر المرسلة
٧-٥ نماذج
٨-٥ الرموز التعبيرية
٩-٥ الاعدادات

#. التقويم	١٠. الاوضاع	*. شاشة العرض
#١- التقويم	١٠-١ عادي	*١- سمة الشاشة
#٢- المهام	٢-٠ صامت	*٢- سمة الشاشة الأمامية
#٣- المذكرة	٣-٠ احتراز فقط	*٣- الإضاءة الخلفية
#٤- مذكرة سرية	٤-٠ بالخارج	*٤- الخط
#٥- محدد التاريخ	٥-٠ هاتف	*٥- نظام الهاتف
#٦- عداد التاريخ	٦-٠ مخصص ١	*٦- تنزيل المزيد
#٧- الإعدادات	٧-٠ مخصص ٢	
	٨-٠ مخصص ٣	

ميزة المهام المتعددة

يدعم KU730 ميزة المهام المتعددة. يمكنك استخدام تطبيقات متعددة في نفس الوقت. أثناء تشغيل تطبيق، يمكنك الوصول إلى تطبيق آخر بالضغط لفترة طويلة على .

على سبيل المثال، إذا رغبت في استخدام الحاسبة أثناء كتابة رسالة، اضغط مع الاستمرار على  وحدد المزيد والحاسبة. ارجع إلى محرر الرسائل واضغط مع الاستمرار على . تظهر قائمة تعرض كافة المهام قيد التشغيل في الجزء السفلي من الشاشة. يمكنك تحديد المهمة المطلوبة باستخدام مفاتيح التنقل لليسار/اليمين والمفتاح OK (موافق).

ملاحظة: لتغيير اللغة، تحتاج إلى إغلاق كافة المهام.

القائمة ٢-١

سجل المكالمات

تستطيع عرض سجلات المكالمات كلها والمطلوبة والمستلمة والفائنة. تقدم كل قائمة سجل مكالمات الوظائف التالية.

- ◀ يمكنك إجراء مكالمات صوتية أو فيديو للرقم الموجود في سجل المكالمات.
- ◀ تستطيع حفظ الرقم الموجود في سجل المكالمات في جهات الاتصال.
- ◀ يمكنك إرسال رسالة إلى الرقم الموجود في قائمة سجل المكالمات.
- ◀ تستطيع عرض المعلومات المفصلة عن سجلات المكالمات مثل التاريخ والوقت ووقت المكالمات.
- ◀ يمكنك مسح سجلات المكالمات.

مكالمات لم يرد عليها (القائمة ١-٢)

تسمح لك بعرض سجلات المكالمات الفائنة وإجراء مكالمات وإرسال رسالة وحفظ الرقم في جهات الاتصال.

القائمة ١-١

مكالمات الفيديو

يمكنك ضبط عرض الشاشة بينما تقوم بإجراء أو استلام مكالمات فيديو.

- ◀ **حجم صورتني:** لتحديد عرض حجم صورتني.
- ◀ **موضع صورتني:** لتحديد موضع عرض الصورة الخاصة بك.
- ◀ **إخفاء صورتني:** لتحديد عرض أو عدم عرض صورتني.
- ◀ **انعكاس:** لتحديد تنشيط أو عدم تنشيط مؤثر الانعكاس.
- تشغيل: لعرض الصورة مقلوبة من جانب إلى آخر.
- إيقاف: يعرض الصورة كما هي.
- ◀ **الصورة البديلة:** لتحديد إما إرسال صورتني أو الصورة البديلة أثناء بث الفيديو.
- تشغيل: لعرض الصورة البديلة بدلاً من صورتني. يمكن اختيار الصورة البديلة من ملف البديل.
- إيقاف: لعرض الصورة كما هي.
- ◀ **الملف البديل:** لتحديد الصورة البديلة المطلوبة.

مكالمات واردة (القائمة ٢-٢-١)

تسمح لك بعرض سجلات المكالمات المستلمة وإجراء مكالمة وإرسال رسالة وحفظ الرقم في جهات الاتصال.

مكالمات صادرة (القائمة ٣-٢-١)

تسمح لك بعرض سجلات المكالمات المطلوبة وإجراء مكالمة وإرسال رسالة وحفظ الرقم في جهات الاتصال.

كل المكالمات (القائمة ٤-٢-١)

تسمح لك بعرض كل سجلات المكالمات الفائتة والمستلمة والمطلوبة. تستطيع إجراء مكالمة أو إرسال رسالة إلى الرقم الذي قمت باختياره من السجلات. تستطيع أيضًا حفظ الرقم في جهات الاتصال.

مدة المكالمة

القائمة ٣-١

يمكنك عرض وقت المكالمة بطرق مختلفة. اضغط على مفتاح خيارات لاختيار إما تهيئة جزئية أو تهيئة كلية. أيضًا اضغط على مفتاح مسح لتهيئة نوع المدة المحدد. سوف تتطلب عملية التهيئة إدخال رمز الحماية الخاص بك.

آخر مكالمة (القائمة ١-٣-١)

يعرض مدة آخر مكالمة بالوحدات الزمنية ساعة/دقيقة/ثانية.

مكالمات واردة (القائمة ٢-٣-١)

يعرض مدة المكالمة الواردة.

مكالمات صادرة (القائمة ٣-٣-١)

يعرض مدة المكالمة الصادرة.

كل المكالمات (القائمة ٤-٣-١)

يعرض إجمالي مدة المكالمات.

عرض تكلفة المكالمات

القائمة ٤-١

١. هذه الوظيفة تعرض تكلفة آخر مكالمات وكل المكالمات.
٢. للتهيئة، اضغط على زر "مسح"، ثم أدخل رمز PIN2.
٣. يمكنك اختيار إما وحدة أو عملة عند ضبط تكلفة المكالمات. وطبقًا لإعداداتك، يتم عرض تكلفة المكالمات أثناء أي مكالمات.

٢. عند تحديد إلى مركز البريد الصوتي، يتم تنشيط رقم مركز البريد الصوتي على أنه رقم التحويل. لتسجيل رقم خدمة البريد الصوتي VMS، حدد الرسائل ← الإعدادات ← مركز البريد الصوتي من القائمة. عند تحديد هذه القائمة في حالة عدم وجود رقم مسجل، تظهر رسالة "لم يتم تشغيل خدمة البريد الصوتي". ويؤدي تحديد هذه القائمة عند وجود رقم مسجل إلى عرض رسوم متحركة ورسالة مطلوبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٣. عند تحديد إلى رقم آخر – يظهر إطار حوار يتيح لك إدخال رقم الهاتف الذي تريد التحويل إليه. أدخل رقم الهاتف الذي تريد تحويل المكالمات إليه، ثم اضغط مفتاح OK (موافق). وفي الوقت الذي تنتظر فيه الرد من الشبكة، يظهر لك رسم متحرك ورسالة مطلوبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٤. عند تحديد إدخال الرقم المطلوب (DN) – يظهر إطار، ليقوم المستخدم بعد ذلك بتحديد إلى رقم آخر، ثم يقوم بإدخال الرقم. يتم أداء تسجيل التحويل مع الرقم المحدد. حدد الرقم، واضغط على المفاح OK (موافق). وفي الوقت الذي تنتظر فيه الرد من الشبكة، تظهر لك رسوم متحركة ورسالة مطلوبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٤. في تهيئة ضبط الحد، اختر تشغيل لتهيئة حد التكلفة. عند تهيئة حد التكلفة، لن يُسمح لك بإجراء أي مكالمات عند وصول تكلفة المكالمة إلى هذا الحد.

تحويل المكالمات

القائمة ٥-١

يتوفر بالهاتف قوائم تحويل المكالمات للمكالمات الصوتية ومكالمات الفيديو.

ولكن، القوائم المتاحة يتم تحديدها بواسطة CPHS الداعمة لبطاقة USIM.

تتكون القائمة من خيارات المكالمات الصوتية ومكالمات الفيديو وإلغاء تنشيط الكل.

المكالمات الصوتية

كل المكالمات الصوتية

١. عند اختيار قائمة إيقاف التشغيل – يتم حذف رقم تحويل المكالمات المسجل في الشبكة. وفي الوقت الذي تنتظر فيه الرد من الشبكة، تظهر لك رسوم متحركة ورسالة مطلوبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٥. بعد تنشيط قائمة كل المكالمات الصوتية، يؤدي تحديد قائمة خيارات في أسفل القوائم إلى عرض قوائم تنشيط وإلغاء تنشيط وإلغاء تنشيط الكل وحالة العرض وقوائم مسح القائمة. تنشيط: انتقل إلى قائمة الإعدادات لتنشيط تحويل المكالمات. توضح قائمة حالة العرض الإعدادات على الشبكة. إذا حددت هذه القائمة، يظهر لك رسم متحرك ورسالة مطالبة. وبعد ذلك يتم عرض إعدادات الشبكة عند استلام المعلومات من الشبكة. ويؤدي تحديد الحالة من قائمة الاختيار اليمنى إلى نفس النتيجة. عند تحديد قائمة إلغاء تنشيط، يتم حذف أرقام التحويل المسجلة في الشبكة بعد تأكيد المستخدم. وتحديد قائمة حذف يؤدي إلى عرض نتيجة العملية بعد إظهار رسم متحرك ورسالة مطالبة. ستقوم قائمة حذف القائمة بحذف قائمة أرقام التحويل.

مكالمات الفيديو

كل مكالمات الفيديو

١. عند اختيار قائمة إيقاف التشغيل - يتم حذف رقم تحويل المكالمات المسجل في الشبكة. وفي الوقت الذي تنتظر فيه الرد من الشبكة، تظهر لك رسوم متحركة ورسالة مطالبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٢. عند تحديد إلى رقم آخر - يظهر إطار حوار يتيح لك إدخال رقم الهاتف الذي تريد التحويل إليه. أدخل رقم الهاتف الذي تريد تحويل المكالمات إليه، ثم اضغط مفتاح OK (موافق). وفي الوقت الذي تنتظر فيه الرد من الشبكة، يظهر لك رسم متحرك ورسالة مطالبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٣. عند تحديد إدخال الرقم المطلوب (DN) - يظهر إطار، ليقوم المستخدم بعد ذلك بتحديد إلى رقم آخر، ثم يقوم بإدخال الرقم. يتم أداء تسجيل التحويل مع الرقم المحدد. حدد الرقم، واضغط على المفاح OK (موافق). وفي الوقت الذي تنتظر فيه الرد من الشبكة، تظهر لك رسوم متحركة ورسالة مطالبة. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٤. قائمة خيارات - بعد تنشيط قائمة كل مكالمات الفيديو، وعند تحديد قائمة خيارات في أسفل القوائم تظهر قوائم تنشيط وإلغاء تنشيط وإلغاء تنشيط الكل وحالة العرض وقوائم مسح القائمة. تنشيط: انتقل إلى قائمة الإعدادات (أعلى ١-٤) لتنشيط تحويل المكالمات. توضح قائمة حالة العرض الإعدادات على الشبكة. إذا حددت هذه القائمة، يظهر لك رسم متحرك ورسالة مطالبة. وبعد ذلك يتم عرض إعدادات الشبكة عند

عند عدم الرد

١. عند تحديد قائمة إيقاف – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٢. عند تحديد قائمة إلى رقم آخر – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٣. عند تحديد قائمة إدخال الرقم المطلوب (DN) – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٤. عند تحديد قائمة خيارات – يتم تنشيط قائمة عند عدم الرد. وهي تؤدي نفس عمل قائمة كل المكالمات الصوتية باستثناء أنه بإمكان المستخدمين أن يقوموا بتهيئة وقت التأخير في قائمة ضبط التأخير في القائمة.

عندما يكون غير متاح

١. عند تحديد قائمة إيقاف – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٢. عند تحديد قائمة إلى رقم آخر – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٣. عند تحديد قائمة إدخال الرقم المطلوب (DN) – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٤. عند تحديد قائمة خيارات – يتم تنشيط قائمة عندما يكون غير متاح. وهي تؤدي نفس عمل قائمة كل المكالمات الصوتية.

استلام المعلومات من الشبكة. ويؤدي تحديد الحالة من قائمة الاختيار اليمنى إلى نفس النتيجة. عند تحديد قائمة إلغاء تنشيط، يتم حذف أرقام التحويل المسجلة في الشبكة بعد تأكيد المستخدم. وتحديد قائمة حذف يؤدي إلى عرض نتيجة العملية بعد إظهار رسم متحرك ورسالة مطالبة. ستقوم قائمة حذف القائمة بحذف قائمة أرقام التحويل.

عند انشغال الخط

١. عند تحديد قائمة إيقاف – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٢. عند تحديد قائمة إلى رقم آخر – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٣. عند تحديد قائمة إدخال الرقم المطلوب (DN) – تؤدي نفس عمل قائمة كل المكالمات الصوتية.
٤. عند تحديد قائمة خيارات – يتم تشغيل قائمة عند انشغال الخط. وهي تؤدي نفس عمل قائمة كل المكالمات الصوتية.

حظر المكالمات

القائمة ٦-١

تتوفر قوائم حظر المكالمات للمكالمات الصوتية ومكالمات الفيديو.

لكن يتم تحديد القوائم المتاحة بواسطة بطاقة USIM تدعم مواصفات CPHS.

تتكون القائمة من خيارات المكالمات الصوتية ومكالمات الفيديو وإلغاء تنشيط الكل. تتضمن قائمتنا المكالمات الصوتية ومكالمات الفيديو القوائم الفرعية التالية.

تتضمن قائمة حظر المكالمات القوائم الفرعية كل الصادرة والصادرة الدولية والصادرة الدولية عدا بلدي وكل الواردة والواردة في الخارج. لكن توفر القوائم يتوقف على ما إذا كانت بطاقة USIM تدعم مواصفات CPHS من عدمه.

تؤدي قائمة كل الصادرة إلى حظر الاتصال بكافة المكالمات الصادرة، وتؤدي قائمة الصادرة الدولية إلى حظر الاتصال بالمكالمات الصادرة الدولية، وتؤدي قائمة الصادرة الدولية عدا بلدي إلى حظر الاتصال بالمكالمات الصادرة الدولية باستثناء الدولة التي توجد بها شبكة المحمول المحلية العامة المستخدمة. تؤدي قائمة كل الواردة إلى رفض كل المكالمات الواردة وتؤدي قائمة الواردة في الخارج إلى رفض كافة المكالمات الواردة أثناء التجوال.

المكالمات الصوتية

مكالمات الفيديو

كل الصادرة

١. عند تحديد المفتاح موافق يتم استلام كلمة مرور الحظر من المستخدم وتنشيط خدمة الحظر على شبكة الاتصال. تظهر رسالة الطلب والرسم المتحرك الخاص به. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

٢. عند تحديد قائمة "خيارات" يتم تنشيط قائمة المكالمات الصادرة. حدد قائمة الخيارات من قوائم الاختيار بالقائمة السفلى. بعد ذلك تظهر قائمة كلمة مرور الحظر وإلغاء تنشيط وتنشيط لإلغاء تنشيط الكل وعرض الحالة. حدد قائمة تنشيط لاستلام كلمة مرور الحظر من المستخدم وتنشيط خدمة الحظر على الشبكة. تقوم قائمة إلغاء تنشيط بإلغاء تنشيط خدمة الحظر بعد إدخال كلمة مرور الحظر الخاصة بالمستخدم. تقوم قائمة إلغاء تنشيط الكل بإلغاء تنشيط كافة خدمات الحظر المهيأة في الشبكة بعد إدخال كلمة مرور الحظر الخاصة بالمستخدم. تتيح قائمة عرض الحالة للمستخدمين عرض ضبط الشبكة الحالي. يؤدي تحديد قائمة عرض الحالة إلى عرض رسالة طلب مصحوبة برسم متحرك ونتيجة

المكالمات الواردة أثناء التجوال

١. عند تحديد الزر OK (موافق) تعمل كما الحال مع قائمة المكالمات الصادرة.
٢. عند تحديد قائمة خيارات يتم تنشيط قائمة المكالمات الواردة في الخارج وتشغيلها. تعمل كما الحال مع قائمة المكالمات الصادرة.

أرقام الاتصال الثابت

القائمة ٧-١

١. للدخول إلى القائمة التي تتيح ضبط رقم الاتصال الثابت (FDN)، يتطلب ذلك مصادقة PIN2.
٢. تعرض القائمة الأولى الحالة النشطة. ادخل إلى قائمة التنشيط بالضغط على المفتاح OK (موافق).
٣. تعرض القائمة الثانية الرقم الحالي.
٤. أدخل الاسم ورقم الهاتف لإجراء التهيئة. يتم حفظ معلومات التهيئة في بطاقة USIM.
٥. تُستخدم المعلومات المحفوظة في بطاقة USIM عند حظر رقم الاتصال الثابت (FDN) للمكالمات الصادرة.

العملية عند إجابة الشبكة. تتيح قائمة كلمة مرور الحظر للمستخدمين تغيير كلمة مرور الحظر الحالية.

الصادرة الدولية

١. عند تحديد الزر OK (موافق) تعمل كما الحال مع قائمة المكالمات الصادرة.
٢. عند تحديد قائمة خيارات يتم تنشيط قائمة المكالمات الدولية وتشغيلها. تعمل كما الحال مع قائمة المكالمات الصادرة.

المكالمات الصادرة الدولية عدا بلدي

١. عند تحديد الزر OK (موافق) تعمل كما الحال مع قائمة المكالمات الصادرة.
٢. عند تحديد قائمة خيارات يتم تنشيط قائمة الدولية عدا بلدي وتشغيلها. تعمل كما الحال مع قائمة المكالمات الصادرة.

كل الواردة

١. عند تحديد الزر OK (موافق) تعمل كما الحال مع قائمة المكالمات الصادرة.
٢. عند تحديد قائمة خيارات يتم تنشيط قائمة المكالمات الواردة وتشغيلها. تعمل كما الحال مع قائمة المكالمات الصادرة.

انتظار المكالمات

القائمة ٨-١

- ◀ **تنشيط:** لتنشيط خدمة الانتظار. يؤدي تحديد هذا الخيار إلى عرض رسالة الطلب والرسم المتحرك. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.
- ◀ **إلغاء تنشيط:** لإلغاء تنشيط خدمة انتظار المكالمات. يؤدي تحديد هذا الخيار إلى عرض رسالة الطلب والرسم المتحرك. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.
- ◀ **عرض الحالة:** لعرض عنصر مجموعة خدمة انتظار المكالمات النشط للشبكة. يؤدي تحديد هذا الخيار إلى عرض رسالة الطلب والرسم المتحرك. وعند إجابة الشبكة على الطلب، تظهر نتيجة العملية.

الإعدادات

القائمة ٩-١

رفض المكالمات (القائمة ١٠-٩-١)

- يمكنك ضبط رفض المكالمات الواردة من عدمه.
- ١. حدد "تشغيل" في قائمة رفض لتنشيط خاصية رفض المكالمات. تظهر قائمة رفض.

٢. اضبط خيار رفض المكالمات المطلوب في قائمة رفض.

- ◀ **رفض كل المكالمات:** لرفض كافة المكالمات.
- ◀ **جهات اتصال:** لرفض المكالمات الواردة من رقم محفوظ في جهات الاتصال.
- ◀ **مجموعات:** يمكن تحديد رفض المكالمات حسب وحدات المجموعات المحفوظة في جهات الاتصال.
- ◀ **غير المسجلة:** لرفض المكالمات الواردة من رقم غير محفوظ في جهات الاتصال.

إرسال رقمي (القائمة ٩-١-٢)

- ◀ **ضبط بواسطة الشبكة:** للتهيئة باستخدام الإعدادات الافتراضية المحددة بواسطة مزود الخدمة.
- ◀ **تشغيل:** للتهيئة لإرسال رقم الهاتف الشخصي عند إجراء مكالمات صادرة.
- ◀ **إيقاف:** للتهيئة لعدم إرسال رقم الهاتف الشخصي عند إجراء مكالمات صادرة.

إعادة اتصال آلياً (القائمة ٣-٩-١)

يتيح ضبط وظيفة إعادة الاتصال الآلي عند فشل محاولة اتصال.

وضع الرد (القائمة ٤-٩-١)

يُتيح ضبط طريقة الرد. ويمكن الاختيار ما بين الضغط على مفتاح الإرسال وفتح الغطاء والضغط على أي مفتاح.

تذكير كل دقيقة (القائمة ٥-٩-١)

يحدد إصدار نغمة واحدة كل مرة عند مرور دقيقة واحدة أثناء التحدث في الهاتف من عدمه.

وضع رد بلوتوث (القائمة ٦-٩-١)

◀ **اللايدي:** يمكن الرد على مكالمة باستخدام سماعة رأس بلوتوث أثناء اتصال بلوتوث.

◀ **الهاتف:** في حالة الضغط على مفتاح إرسال على الهاتف للرد على مكالمة، يمكنك التحدث في الهاتف. وإذا ضغطت على مفتاح سماعة بلوتوث للرد على مكالمة، يمكنك التحدث باستخدام سماعة بلوتوث.

هذا هو اختيار وضع الرد الأولي. وأثناء التحدث يمكنك التبديل من السماعة إلى الهاتف أو من الهاتف إلى السماعة.

دفتر عناوين

ع.
ت.
ن.

الرئيسية ونغمة الرنين والرمز أو الصورة (الفوتوغرافية) في معلومات عنوان جهة الاتصال. يتاح أيضًا إدخال عناوين جهات الاتصال والتحكم فيها حسب درجة استخدام الذاكرة.

أرقام الاتصال السريع

القائمة ٣-٢

يمكن من خلال هذه القائمة التحكم في أرقام الاتصال السريع. تتم تهيئة أرقام الاتصال السريع بين ٣ و ٩. ويتسنى تسجيل أرقام الاتصال السريع لأي رقم مكون من ٥ أرقام لعنوان جهة اتصال محددة، كما يمكن تخصيص أكثر من رقم اتصال سريع لعنوان جهة اتصال معينة.

مجموعات

القائمة ٤-٢

يتاح باستخدام هذه القائمة التحكم في معلومات المجموعات المحفوظة على الهاتف. توجد أربع مجموعات افتراضية في ذاكرة الهاتف: وهي العائلة والأصدقاء والزلاء والمدرسة. يتاح لك إضافة المجموعات وتعديلها وحذفها. عند ورود مكالمة من رقم لم يتم تحديد نغمة رنين له، تصدر نغمة الرنين المخصصة لرقم المجموعة.

توجد وظيفة دفتر العناوين الخاصة بتسجيل عناوين جهات الاتصال وإدارتها. باستخدام قائمة إدارة جهات الاتصال، يمكن تسجيل عناوين جهات الاتصال الجديدة أو البحث عن العناوين المطلوبة حسب الاسم أو رقم الهاتف أو المجموعات.

جهات الاتصال

القائمة ١-٢

يقوم بالبحث عن عناوين جهات الاتصال. يتم تنفيذ عملية البحث حسب الاسم بشكل افتراضي. تظهر طريقة البحث الحالية ونتائج البحث في إطار بحث. وعلى يمين الشاشة تظهر صورة أو رمز مُسجل لعنوان جهة الاتصال المحددة. يمكنك إجراء مكالمة هاتفية أو إرسال رسالة إلى رقم الهاتف المحدد. يمكن إجراء البحث عن جهات الاتصال حسب رقم الهاتف أو معلومات المجموعة.

اسم جديد

القائمة ٢-٢

يمكنك تسجيل عنوان جهة اتصال جديدة. ويمكنك إدخال الاسم وأرقام الهواتف وعناوين البريد الإلكتروني، وتخصيصها إلى مجموعات وتضمين مذكرات وتضمين الشركة/المؤسسة والوظيفة/المهنة وعنوان المنزل وعنوان المكتب وعنوان URL الصفحة

أرقام الاتصال بالخدمة

(حسب بطاقة USIM)

القائمة ٥-٢

يمكن عرض قائمة بأرقام الاتصال بالخدمة (SDN) المخصصة من قبل مُوفر الخدمة (إذا كانت بطاقة USIM تدعم ذلك). تتضمن تلك الأرقام أرقام الطوارئ واستعلامات الدليل والبريد الصوتي. بعد تحديد رقم الخدمة، اضغط على مفتاح الإرسال.

رقم هاتفي

يُتيح عرض رقم الهاتف في بطاقة USIM.

الإعدادات

القائمة ٧-٢

عرض البيانات (القائمة ١٠-٢)

يحدد مكان حفظ بيانات دفتر العناوين. يمكنك تحديد ذاكرة الهاتف أو بطاقة USIM أو كلا الإعدادين. الهاتف و USIM هو الإعداد الافتراضي. ويمكن تغيير الإعداد من خلال استخدام مفتاحي لأعلى ولأسفل.

إظهار الصورة/الرمز (القائمة ٢-٧-٢)

يحدد إظهار الصورة/الرمز من عدمه.

نسخ الكل (القائمة ٣-٧-٢)

يمكن نسخ معلومات عناوين جهة الاتصال من ذاكرة الهاتف إلى بطاقة USIM أو من بطاقة USIM إلى ذاكرة الهاتف. ويمكن نسخ العناصر المحددة فقط أو كل العناصر.

نقل الكل (القائمة ٤-٧-٢)

يمكن نقل معلومات عناوين جهة الاتصال من ذاكرة الهاتف إلى بطاقة USIM أو من بطاقة USIM إلى ذاكرة الهاتف. ويمكن نقل العناصر المحددة فقط أو كل العناصر.

مسح جهات الاتصال (القائمة ٥-٧-٢)

يسمح كافة معلومات عناوين جهة الاتصال. بوسك حذف كافة عناوين جهة الاتصال المحفوظة في ذاكرة الهاتف الجوال وأيضاً المحفوظة في بطاقة USIM.

التاريخ والوقت

القائمة ١-٣

على الرغم من أنه تتم تهيئة الوقت الحالي آليًا عند تسجيل الهاتف على الشبكة، يستطيع المستخدمون تهيئة الوقت والتاريخ مباشرةً باستخدام هذه القائمة. يكون الوقت الذي قام المستخدم بتهيئته صالحًا فقط أثناء تشغيل الهاتف.

ضبط الوقت (القائمة ١-٣)

١. حدد عنصر "الوقت" من قائمة التاريخ والوقت واضغط على [موافق].

٢. انتقل إلى الحقل المطلوب ضمن "ساعة" و"دقيقة" و"صباحًا/مساءً" باستخدام مفاتيح التنقل. (عند تحديد "١٢ ساعة" كإعداد "تنسيق الوقت")

٣. أدخل "الساعات" و"الدقائق" باستخدام مفاتيح الأرقام.

٤. حدد تنسيق الوقت باستخدام مفاتيح التنقل للسيارة ولليمين.

٥. انتقل لأسفل لتحديد تنسيق مؤشر الساعة، مثل إيقاف أو ساعة الطائر أو الجرس.

٦. اضغط على مفتاح تم لضبط الوقت على القيمة المحددة.

ضبط التاريخ (القائمة ٢-١-٣)

١. حدد عنصر "التاريخ" من قائمة التاريخ والوقت واضغط على [موافق].

٢. أدخل "اليوم" و"الشهر" و"السنة" باستخدام مفاتيح الأرقام.

٣. حدد تنسيق التاريخ باستخدام مفاتيح التنقل للسيارة ولليمين.

٤. اضغط على مفتاح تم لضبط التاريخ على القيمة المحددة.

تحديث التاريخ/الوقت آليًا (القائمة ٣-١-٣)

عند تهيئة تحديث آلي على تشغيل، يتم تحديث الوقت والتاريخ آليًا حسب المنطقة الزمنية الحالية. في حالة تحديد تأكيد أولاً، يتم تأكيد تحديث الوقت والتاريخ قبل إجراء التحديث الآلي.

التوقيت الصيفي (القائمة ٤-١-٣)

يحدد تنشيط وظيفة التوقيت الصيفي من عدمه. إذا كانت بلد الإقامة لا تستخدم التوقيت الصيفي، يتعذر ضبط التوقيت الصيفي على تشغيل.

الشبكة

القائمة ٢-٣

تحديد الشبكة (القائمة ١-٢-٣)

اختر ما بين آلي ويدي.

◀ آلي: يبحث عن الشبكة بشكل آلي ويقوم بتسجيل الهاتف عليها. يوصى بتحديد هذا الإعداد للحصول على أفضل خدمة وجودة.

◀ يدوي: يتم عرض كافة شبكات 2G(GSM) و 3G(UMTS) المتاحة في الوقت الحالي ويمكن تحديد إحداها لتسجيل الهاتف عليها. إذا فشل تسجيل الشبكة، يتم إدراج الشبكات المتاحة حاليًا مرة أخرى ويمكنك تحديد إحداها للتسجيل.

وضع الشبكة (القائمة ٢-٢-٣)

يمكنك ضبط نوع الشبكة المطلوب البحث عنها عند البحث عن الشبكات في قائمة "تحديد الشبكة".

◀ آلي: يبحث عن كافة الشبكات التي يمكن الاتصال بها.

◀ 3G فقط: يبحث فقط عن الشبكات التي تدعم 3G.

◀ GSM فقط: يبحث فقط عن الشبكات التي تدعم GSM/GPRS.

قائمة المفضلة (القائمة ٣-٢-٣)

إذا كانت الشبكة تقوم بإجراء البحث آليًا، يمكنك إضافة شبكة مفضلة للاتصال بها. كما تتوفر الخيارات الآتية.

◀ إضافة جديدة: يمكنك إضافة شبكة جديدة باستخدام الخيارات التالية.

- بحث: يمكن تحديد إحدى الشبكات من قائمة الشبكات المحفوظة في الهاتف.

- إدخال شبكة جديدة: يمكن إدخال رمز الدولة (MCC) ورمز الشبكة (MNC) لإضافة الشبكة، ثم الضغط على مفتاح "تم".

◀ حذف: يحذف الشبكة المحددة.

◀ نقل للأعلى: ينقل الشبكة المحددة للأعلى.

◀ نقل للأسفل: ينقل الشبكة المحددة للأسفل.

نقاط الوصول

القائمة ٣-٣

تسرد هذه القائمة نقاط الوصول. يمكنك إنشاء أوضاع جديدة أو حذفها أو تعديلها باستخدام قائمة الخيارات. ولكن يتعذر حذف الإعدادات الافتراضية أو تعديلها.

يمكن تعديل عناصر التهيئة التالية بتحديد مفتاح الاختيار الآمن.

عنوان الاتصال	اسم وضع نقطة الاتصال.
الحامل	اختر الحامل من القائمة. (الإعداد الافتراضي هو "UMTS/GPRS")
المصادقة	اختر المصادقة من القائمة. (الإعداد الافتراضي هو "بلا مصادقة")
اسم المستخدم	معلومات يقدمها مُوفر الخدمة.
كلمة المرور	معلومات يقدمها مُوفر الخدمة.
APN	اسم APN للوصول للشبكة. معلومات يقدمها مُوفر الخدمة.

◀ اضغط على مفتاح "تم" لحفظ أية تغييرات يتم إجراؤها على التهيئة.

إعدادات الحماية

القائمة ٤-٣

يمكن ضبط الإعدادات المرتبطة بالحماية.

تُستخدم العديد من كلمات المرور لمنع الاستخدام غير المُرخص للهاتف. ارجع إلى الصفحة ١٩-٢٠.

طلب رمز PIN (القائمة ١-٤-٣)

عند ضبط هذا الخيار على تشغيل، تتم مطالبتك بإدخال رمز PIN كل مرة عند تشغيل الهاتف.

ملاحظة

- ◀ اضغط على مفتاح C في إطار إدخال رمز PIN للرجوع إلى الخطوة السابقة.
- ◀ يؤدي إدخال رمز PIN غير صحيح ٣ مرات إلى إبطال رمز PIN. ويتعين عندئذ إدخال رمز PUK (مفتاح إلغاء قفل PIN) لتهيئة رمز PIN مرة أخرى.
- ◀ أقصى عدد محاولات مسموح به لإدخال رمز PUK هو ١٠ محاولات. (انتبه: بعد إدخال رمز PUK خطأ ١٠ مرات، يتم غلق بطاقة USIM ويتعين استبدالها).
- ◀ إذا تعذر تعطيل طلب رمز PIN بواسطة إعدادات المُشغل، فلن تتمكن من اختيار هذا العنصر من القائمة.

قفل الهاتف (القائمة ٢-٤-٣)

يمكن قفل الهاتف. تتوفر وظائف القفل الأربع التالية.

عند تشغيل الهاتف: يقفل الهاتف كلما تم تشغيله.

عند تغيير USIM: يقفل الهاتف عند تغيير بطاقة USIM الخاصة به.

فوراً: يقفل الهاتف على الفور.

تتم مطالبتك بإدخال رمز الحماية لتأكيد الاختيار.

◀ لإلغاء قفل الهاتف، يتعين إدخال رمز الحماية.

تغيير الرموز (القائمة ٣-٤-٣)

يمكنك تغيير رمزي PIN و PIN2 وكلمة مرور الهاتف المحمول وكلمة مرور حظر المكالمات.

رمز PIN

PIN هو اختصار لكلمة "رقم التعريف الشخصي" وهو يُستخدم لمنع الاستخدام غير المصرح به للهاتف.

إجراء تغيير رمز PIN

١. حدد "رمز PIN" من قائمة "تغيير كلمة المرور" ثم اضغط على [موافق].

٢. أدخل رمز PIN الحالي واضغط على [موافق].

٣. أدخل رمز PIN الجديد واضغط على [موافق].

٤. أدخل رمز PIN الجديد مرةً أخرى واضغط على [موافق].

- إذا كان رمز PIN مختلفاً عن ذلك الوارد في الخطوة ٣، فيجدر إعادة بدء الإجراء من الخطوة ٣.

٥. عند تغيير رمز PIN على نحو صحيح، تظهر رسالة "تم تغيير PIN". إذا تم إدخال رمز PIN غير صحيح في الخطوة ٢، فيتعين إعادة بدء الإجراء من الخطوة ٢ ويقبل عدد محاولات إدخال الرمز المتاحة الباقية مرةً واحدة.

٦. اضغط على مفتاح C في إطار إدخال رمز PIN للرجوع إلى الخطوة السابقة.

ملاحظة

◀ يؤدي إدخال رمز PIN غير صحيح ثلاث مرات في إطار إدخال رمز PIN إلى إبطال رمز PIN. وعندئذٍ يجب إدخال رمز PUK (مفتاح إلغاء قفل PIN) لتهيئة رمز PIN مرةً أخرى. أقصى عدد من محاولات إدخال رمز PUK المتاحة هو ١٠ مرات. انتبه: بعد إدخال رمز PUK خطأً ١٠ مرات، يتم غلق بطاقة USIM ويتعين استبدالها.

رمز PIN2

PIN2 هو اختصار لكلمة "رقم التعريف الشخصي ٢" وهو يُستخدم لمنع الاستخدام غير المصرح به للهاتف كما الحال مع رمز PIN. يعد إجراء تغيير رمز PIN2 مماثلاً لذلك المُتبع عند تغيير رمز PIN. يؤدي إدخال رمز PIN2 غير الصحيح ٣ مرات إلى إبطال الرمز. وفي هذه الحالة يجب إدخال رمز PUK2 حتى يمكن استخدام رمز PIN2 مرةً أخرى. أقصى عدد لمحاولات إدخال رمز PUK2 المتاحة هو ١٠ مرات مثل رمز PUK1. يؤدي إدخال رمز PUK2 غير الصحيح ١٠ مرات إلى إبطال رمز PIN2.

رمز الحماية

يُستخدم رمز الحماية لتغيير كلمة مرور الهاتف الجوال. وليس هناك حد أقصى لعدد مرات إدخال رمز الحماية كما الحال مع رمزي PIN و PIN2.

اللغة

القائمة ٥-٣

يمكنك اختيار لغة شاشة العرض. عند ضبط خيار اللغة على ألي، يتم تحديد اللغة ألياً حسب لغة بطاقة USIM المُستخدمة. يتم اختيار اللغة الإنجليزية إذا لم يكن الهاتف يدعم لغة بطاقة USIM.

حالة الذاكرة

الذاكرة العامة (القائمة ١-٦-٣)

تعرض هذه الوظيفة حالة ذاكرة الهاتف المحمول. يستغرق استخدام هذه الوظيفة عدة ثوانٍ حيث إنها تقوم بإجراء مسح شامل لنظام الملفات الكلي لتقديم الإحصائيات.

الذاكرة المحفوظة (القائمة ٢-٦-٣)

تعرض هذه الوظيفة حالة الذاكرة المحفوظة. والمحتويات المعتادة هي الرسائل النصية وجهات الاتصال والتقويم والمهام والمذكرة. وهي تقدم توضيحاً للرقم الفعلي لإجمالي عدد كل عنصر.

ذاكرة USIM (القائمة ٣-٦-٣)

تعرض هذه الوظيفة حالة ذاكرة مستخدم بطاقة USIM.

ذاكرة خارجية (القائمة ٤-٦-٣)

تعرض هذه الوظيفة حالة ذاكرة مستخدم البطاقة الخارجية. تعرض هذه الوظيفة إحصائيات استخدام الذاكرة الفارغة والذاكرة قيد الاستخدام.

القائمة ٩-٣

إعدادات التدفق

إذا أردت ضبط إعداد شبكة مختلف لتشغيل محتوى متدفق،
يتاح لك ضبط إعدادات شبكة مختلفة.

تهيئة الذاكرة الخارجية (القائمة ٥-٦-٣)

حدد هذه الوظيفة لتهيئة الذاكرة الخارجية.

معلومات حول الهاتف

القائمة ٧-٣

توضح هذه الوظيفة رقم هاتف بطاقة USIM واسم الطراز
وإصدار البرنامج للهاتف الجوال.

إعادة ضبط المصنع

القائمة ٨-٣

مسح الذاكرة (القائمة ١٠-٨-٣)

حدد هذه الوظيفة لمسح الذاكرة. ينبغي إدخال رمز الحماية.

الإعداد الافتراضي (القائمة ٢-٨-٣)

حدد هذه الوظيفة لإعادة ضبط الهاتف على التهيئة الافتراضية.
ينبغي إدخال رمز الحماية.

كاميرا الفيديو

القائمة ١-٤

يتيح هذا التطبيق تسجيل مقاطع الفيديو. ويمكن تشغيل ملف فيديو محفوظ ومشاهدته في هذه القائمة. بعد تسجيل مقاطع الفيديو، يمكن إرسالها على هيئة رسالة صورة أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

١. اضغط على مفتاح الاختيار الأيسر [خيارات] لضبط الإعدادات المطلوبة على النحو التالي.

◀ **الجودة:** يمكنك اختيار جودة الفيديو المطلوبة بتحديد إما "ممتازة" أو "جيدة" أو "عادية".

◀ **تكبير/تصغير:** يمكنك اختيار مستوى التكبير/التصغير.

◀ **الإضاءة:** يمكنك اختيار أحد المستويات من -٢,٠ حتى ٢,٠ بمقدار ٠,٥ كل مرة. كلما زاد المستوى زادت درجة إضاءة الشاشة.

◀ **توازن اللون الأبيض:** يتاح ضبط درجة لون صورة الخلفية على أحوال الطقس المختلفة بتحديد أحد الخيارات من بين "ألي" و"ضوء النهار" و"غائم" و"ساطع" و"داخلي".

◀ **وضع الليل:** بوسعك التقاط صور أفضل في أوقات الليل بضبط هذه الوظيفة على "تشغيل".

◀ **التأثير:** يتاح لك تحديد تأثير خاص للكاميرا من بين الخيارات "بلا" و"أبيض وأسود" و"سليبي" و"بني داكن".

◀ **المدة:** حدد وقت التسجيل المطلوب من بين حجم MMS (حوالي ٢٥ ثانية) و ٣٠ ثانية ودقيقة واحدة ودقيقتان و ٥ دقائق و ٦٠ دقيقة.

◀ **الذاكرة:** حدد الذاكرة المطلوبة من بين هاتف وخارجية.

◀ **صورة معكوسة:** يمكنك تنشيط تأثير الصورة المعكوسة بتحديد "تشغيل".

◀ **صوت:** حدد إما تسجيل الصوت أم لا.

◀ **تبديل الكاميرا:** يمكنك ضبط الكاميرا للتبديل بين الكاميرا الداخلية والكاميرا الخارجية.

بعد الانتهاء من ضبط كافة الإعدادات، اضغط على مفتاح الاختيار الأيمن [إغلاق].

٢. اضبط بؤرة الكاميرا على المنطقة التي ترغب في التسجيل منها واضغط على مفتاح OK (موافق) [تسجيل] لبدء التسجيل. اضغط على مفتاح OK (موافق) [إيقاف] لإيقاف التسجيل.

٣. يمكن حفظ مقطع الفيديو بالضغط على مفتاح OK (موافق). ويتم حفظه في مجلد مقاطع الفيديو في ألبوم الوسائط. أو يتسنى إرسال مقطع الفيديو على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث بالضغط على مفتاح الاختيار الأيمن [إرسال].

- ◀ **الجودة:** يمكنك تحديد جودة الصور المطلوبة من بين ممتازة أو جيدة أو عادية.
- ◀ **لقطات عديدة:** يمكنك التقاط ٣/٦/٩ صور متتالية. (يعتمد العدد المتاح من اللقطات المتعددة على الحجم).
- ◀ **تكبير/تصغير:** يمكنك اختيار مستوى التكبير/التصغير.
- ◀ **الإضاءة:** يمكنك اختيار أحد المستويات من -٢,٠ حتى ٢,٠ بمقدار ٠,٥ كل مرة. كلما زاد المستوى زادت درجة إضاءة الشاشة.
- ◀ **توازن اللون الأبيض:** يتاح ضبط درجة لون صورة الخلفية على أحوال الطقس المختلفة بتحديد أحد الخيارات من بين "ألي" و"ضوء النهار" و"غائم" و"ساطع" و"داخلي".
- ◀ **وضع الليل:** بوسعك التقاط صور أفضل في أوقات الليل بضبط هذه الوظيفة على "تشغيل".
- ◀ **موقت التأخير:** يمكن باستخدام هذه الوظيفة تأخير وقت غالق الكاميرا مدة ٣ أو ٥ أو ١٠ ثوانٍ.
- ◀ **التأثير:** يتاح لك تحديد تأثير خاص للكاميرا من بين الخيارات "بلا" و"أبيض وأسود" و"سلبى" و"بني داكن".
- ◀ **صوت الغالق:** حدد صوت الغالق المطلوب.

٤. لعرض مقاطع الفيديو الموجودة، اضغط على مفتاح الاختيار الأيمن [المشغل]. يتم فتح مجلد مقاطع الفيديو الذي يعرض مقاطع الفيديو الموجودة على هيئة صور مصغرة. انتقل إلى مقطع الفيديو المراد عرضه واضغط على مفتاح OK (موافق) [تشغيل]. يمكن أيضاً إرسال مقطع الفيديو المحدد لهاتف آخر على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

ملاحظة

- ◀ يمكنك التبديل بين كاميرا الفيديو والكاميرا بسهولة بواسطة مفتاح التنقل الأيسر/الأيمن في وضع المعاينة.

التقاط صورة

القائمة ٢-٤

يوفر هذا التطبيق إمكانية التقاط الصور الثابتة. يمكنك التقاط صورة بالحجم الذي ترغب فيه واستخدامها كصورة في دفتر العناوين أو شاشة الصفحة الرئيسية بالإضافة إلى العديد من الأغراض العامة الأخرى. بعد التقاط الصورة الثابتة، يمكن إرسالها على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

١. اضغط على مفتاح الاختيار الأيسر [خيارات] لضبط الإعدادات المطلوبة على النحو التالي.

- ◀ **الحجم:** يمكنك تحديد الحجم المطلوب من بين ٩٦٠×١٢٨٠ و ٤٨٠×٦٤٠ و ٢٤٠×٣٢٠ والشاشة الرئيسية وجهة اتصال.

ملاحظة

- يمكنك التبديل بين كاميرا الفيديو والكاميرا بسهولة بواسطة مفتاح التنقل الأيسر/الأيمن في وضع المعاينة.

مسجل الصوت

القائمة ٣-٤

يمكن تسجيل مقطع صوتي واستخدامه كنغمة رنين للتنوع بين أنواع نغمات الرنين. بعد تسجيل ملف الصوت، يمكن إرساله على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

١. اضغط على مفتاح الاختيار الأيسر [خيارات] لضبط الخيارات التالية.

- الجودة: يمكنك اختيار جودة التسجيل من بين ممتازة وجيدة وعادية.

المدة: يمكنك ضبط مدة التسجيل على حجم رسالة MMS أو ٣٠ ثانية أو دقيقة.

- تسجيل جديد: حدد هذه القائمة لبدء تسجيل ملف جديد.

متعلقاتي: يعرض الملفات الصوتية.

- الذاكرة: حدد الذاكرة المطلوبة من بين هاتف وخارجية.

صورة معكوسة: يمكنك تنشيط تأثير الصورة المعكوسة بتحديد "تشغيل".

- تبديل الكاميرا: يمكنك ضبط الكاميرا للتبديل بين الكاميرا الداخلية والكاميرا الخارجية.

بعد الانتهاء من ضبط كافة الإعدادات، اضغط على مفتاح الاختيار الأيمن [إغلاق].

٢. اضغط بؤرة الكاميرا على المنطقة التي ترغب في التقاطها واضغط على مفتاح OK (موافق) [التقاط].

٣. يمكن حفظ الصورة بالضغط على مفتاح OK (موافق). ويتم حفظها في مجلد الصور في اليوم الوسائط. أو يمكن إرسال الصورة على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث بالضغط على مفتاح الاختيار الأيمن [إرسال].

٤. لعرض الصور الموجودة التي تم التقاطها، اضغط على مفتاح الاختيار الأيمن [العارض]. يتم فتح مجلد الصور الذي يعرض الصور الموجودة على هيئة صور مصغرة. انتقل إلى الصورة المراد عرضها واضغط على مفتاح OK (موافق) [عرض] لعرض الصورة. يمكن أيضاً إرسال الصورة المحددة إلى هاتف آخر على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

- ◀ **سمة صوت:** يمكنك ضبطها كنغمة رنين صوتية أو نغمة رنين فيديو أو نغمة رسالة أو صوت التشغيل/إيقاف التشغيل.
- ◀ **متعلقاتي:** يعرض الملفات الصوتية.

٢. يؤدي الضغط على مفتاح [موافق] إلى بدء التسجيل. بعد بدء التسجيل، يظهر وقت التسجيل على شاشة LCD. لإلغاء التسجيل، اضغط على مفتاح الاختيار الأيمن.

٣. عند إنهاء التسجيل، اضغط على مفتاح OK (موافق) للخروج. يتم حفظ الملف المُسجل الآن في مجلد مُسجل الصوت في اليوم الوسائط (ألبوم الوسائط - الأصوات - مُسجل الصوت).

٤. يمكن إرسال المذكرة الصوتية على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث بالضغط على مفتاح الاختيار الأيمن [إرسال].

٥. بعد إجراء التسجيل الصوتي، يمكن الوصول إلى مختلف الخيارات على النحو التالي بالضغط على مفتاح الاختيار الأيسر [خيارات].

- ◀ **حذف:** يحذف المذكرة الصوتية.
- ◀ **تسجيل جديد:** حدد هذه الوظيفة لبدء تسجيل صوتي جديد.
- ◀ **إرسال:** يمكنك عبر هذه القائمة إرسال المذكرة الصوتية على هيئة رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

رسالة جديدة


الرسائل النصية (قائمة ١-٥)

القائمة ١-٥

يمكنك كتابة رسالة نصية واحدة يصل عدد الحروف بها إلى ١٦٠ حرفاً وتعديلها. يمكنك كتابة وتعديل حتى ٧ رسائل متسلسلة.

١. اضغط على مفتاح القائمة في وضع الخمول وحدد الرسائل.
٢. حدد رسالة جديدة واضغط على مفتاح OK (موافق).
٣. حدد رسالة نصية واضغط على مفتاح OK (موافق).

ملاحظة

يمكنك استخدام قائمة الاختصارات في وضع السكون. في وضع السكون، اضغط على المفتاح OK (موافق) وحدد  ← كتابة رسائل.

٤. أدخل رقمًا في حقل "إلى" مباشرةً أو ابحث عن الرقم في جهات الاتصال.
٥. يؤدي الضغط على مفتاح الاتجاه للأسفل إلى عرض حقل "إلى" آخر يمكن إدخال رقم به. (يمكنك إدخال حتى ١٠ أرقام)
٦. في حالة الضغط على مفتاح الاتجاه للأسفل، ينتقل التمييز إلى حقل الرسالة.

٧. أدخل رسالتك في حقل الرسالة.

٨. اضغط على مفتاح الاختيار الأيمن [إرسال] لإرسال الرسالة. وسيتم حفظ الرسالة في العناصر المرسلة آليًا. في حالة عدم إرسال الرسالة، فإنها ستظل في الصادر مع توضيح حالة فشل الإرسال.

قوائم الخيارات في حقل "إلى"

- ◀ **جهات الاتصال:** يمكنك البحث عن أحد الأرقام بين جهات الاتصال.
- ◀ **إرسال الرسالة:** حدد هذه الوظيفة لإرسال الرسالة.
- ◀ **حفظ إلى مسودات:** يتم حفظ الرسالة في المسودات.
- ◀ **إلغاء:** يقوم بإلغاء كتابة الرسالة ويرجع إلى قائمة رسالة جديدة.

قوائم الخيارات في حقل الرسالة

- ◀ **إدراج:** يمكنك إدراج العناصر التالية.
- ١. **شريحة جديدة:** حدد هذا الخيار لإضافة شريحة جديدة.
- ٢. **رمز:** يمكنك إدراج العديد من الرموز. بعد إدخال مفاتيح الأرقام المناظرة، اضغط على مفتاح OK (موافق).
- ٣. **نموذج:** يمكنك إدراج نموذج نصي محفوظ على الهاتف. بعد تحديد أحد النماذج اضغط على مفتاح OK (موافق).
- يتم إدراج النموذج المحدد في إطار الرسالة.

٤. رمز تعبيرى: لإضافة رمز تعبيرى.
٥. جهات الاتصال: تتاح إضافة اسم و/أو رقم محفوظ في دفتر العناوين. بعد تحديد أحد العناصر من الاسم والرقم والاسم والرقم، اضغط على مفتاح OK (موافق). يتم فتح دفتر العناوين ويمكن البحث عن جهة الاتصال المطلوب إدراجها.

ملاحظة

◀ في رسالة نصية،

إذا قمت بإدراج شريحة جديدة أو صورة أو صوت أو مقطع فيديو أو نسخة كربونية أو عنوان، فستتغير الشاشة إلى شاشة رسالة وسائط.

- ◀ إرسال الرسالة: حدد هذا الخيار لإرسال الرسالة التي تم إنشاؤها.
- ◀ حفظ إلى المسودات: يتم حفظ الرسالة في المسودات.
- ◀ القاموس: حدد وضع القاموس المطلوب.
- ◀ إضافة إلى القاموس: يمكن إضافة كلمة في القاموس.
- ◀ إلغاء: يقوم بإلغاء كتابة الرسالة ويرجع إلى قائمة رسالة جديدة.

رسالة وسائط (القائمة ٢٠١-٥)

لإرسال مقطع فيديو محفوظ على الهاتف:

١. اضغط على مفتاح القائمة في وضع الخمول وحدد الرسائل.
٢. حدد رسالة جديدة واضغط على مفتاح OK (موافق).
٣. حدد رسالة وسائط واضغط على مفتاح OK (موافق).

٦. صورة: يمكنك إدراج صورة. (صورة واحدة لكل شريحة)
٧. فيديو: يمكنك إدراج مقطع فيديو. (مقطع فيديو واحد لكل شريحة)
٨. صوت: يمكنك إدراج ملف صوتي. (ملف صوتي واحد لكل شريحة)
٩. صورة جديدة: تُفتح وحدة الكاميرا ويتاح لك التقاط صورة. يتم إدراج الصورة التي يتم التقاطها في إطار الرسالة. (صورة واحدة لكل شريحة)
١٠. فيديو جديد: تُفتح وحدة كاميرا الفيديو ويتاح تسجيل مقطع فيديو. يتم إدراج الفيديو الذي يتم تسجيله في الرسالة. (مقطع فيديو واحد لكل شريحة)
- * صوت جديد: تُفتح وحدة مُسجل الصوت ويتاح تسجيل صوت. يتم إدراج الصوت الذي يتم تسجيله في الرسالة. (ملف صوتي واحد لكل شريحة)

٤. أدخل أرقام الهاتف في حقل "إلى" و"نسخة". حدد خيارات ← جهات الاتصال أو اضغط على OK (موافق) في حقل "إلى" أو "نسخة" لتحديد رقم الهاتف من جهات الاتصال.
٥. أدخل عنوان الرسالة في حقل العنوان.
٦. أدخل رسالتك في حقل الرسالة.
٧. حدد إدراج.
١. **شريحة جديدة:** حدد هذا الخيار لإضافة شريحة جديدة.
٢. **رمز:** يمكنك إدراج العديد من الرموز. بعد إدخال مفاتيح الأرقام المناظرة، اضغط على مفتاح OK (موافق).
٣. **نموذج:** يمكنك إدراج نموذج نصي محفوظ على الهاتف. بعد تحديد أحد النماذج اضغط على مفتاح OK (موافق). يتم إدراج النموذج المحدد في إطار الرسالة.
٤. **رمز تعبيري:** لإضافة رمز تعبيري.
٥. **جهات الاتصال:** يمكن إضافة اسم و/أو رقم محفوظ في دفتر العناوين. بعد تحديد أحد العناصر من الاسم والرقم والاسم والرقم، اضغط على مفتاح OK (موافق). يتم فتح دفتر العناوين ويمكن البحث عن جهة الاتصال المطلوب إدراجها.
٦. **صورة:** يمكنك إدراج صورة. (صورة واحدة لكل شريحة)
٧. **فيديو:** يمكنك إدراج مقطع فيديو. (مقطع فيديو واحد لكل شريحة)
٨. **صوت:** يمكنك إدراج ملف صوتي. (ملف صوتي واحد لكل شريحة)
٩. **صورة جديدة:** تُفتح وحدة الكاميرا ويتاح لك التقاط صورة. يتم إدراج الصورة التي يتم التقاطها في إطار الرسالة. (صورة واحدة لكل شريحة)
١٠. **فيديو جديد:** تُفتح وحدة كاميرا الفيديو ويتاح تسجيل مقطع فيديو. يتم إدراج الفيديو الذي يتم تسجيله في الرسالة. (مقطع فيديو واحد لكل شريحة)
- * **صوت جديد:** تُفتح وحدة مُسجل الصوت ويتاح تسجيل صوت. يتم إدراج الصوت الذي يتم تسجيله في الرسالة. (ملف صوتي واحد لكل شريحة)
٨. حدد إرسال الرسالة من قائمة خيارات أو اضغط على مفتاح الاختيار الأيمن. يتم إرسال الرسالة.

< قوائم الخيارات >

◀ إدراج: يمكنك إدراج العناصر التالية.

١. **شريحة جديدة:** حدد هذا الخيار لإضافة شريحة جديدة.
٢. **رمز:** يمكنك إدراج العديد من الرموز. بعد إدخال مفاتيح الأرقام المناظرة، اضغط على مفتاح OK (موافق).
٣. **نموذج:** يمكنك إدراج نموذج نصي محفوظ على الهاتف. بعد تحديد أحد النماذج اضغط على مفتاح OK (موافق). يتم إدراج النموذج المحدد في إطار الرسالة.
٤. **رمز تعبير:** لإضافة رمز تعبير.

٥. **جهات الاتصال:** يمكن إضافة اسم و/أو رقم محفوظ في دفتر العناوين. بعد تحديد أحد العناصر من الاسم والرقم والاسم والرقم، اضغط على مفتاح OK (موافق). يتم فتح دفتر العناوين ويمكن البحث عن جهة الاتصال المطلوب إدراجها.

٦. **صورة:** يمكنك إدراج صورة. (صورة واحدة لكل شريحة)
٧. **فيديو:** يمكنك إدراج مقطع فيديو. (مقطع فيديو واحد لكل شريحة)

٨. **صوت:** يمكنك إدراج ملف صوتي. (ملف صوتي واحد لكل شريحة)

٩. **صورة جديدة:** تُفتح وحدة الكاميرا ويتاح لك التقاط صورة. يتم إدراج الصورة التي يتم التقاطها في إطار الرسالة. (صورة واحدة لكل شريحة)

١٠. **فيديو جديد:** تُفتح وحدة كاميرا الفيديو ويتاح تسجيل مقطع فيديو. يتم إدراج الفيديو الذي يتم تسجيله في الرسالة. (مقطع فيديو واحد لكل شريحة)

* **صوت جديد:** تُفتح وحدة مُسجل الصوت ويتاح تسجيل صوت. يتم إدراج الصوت الذي يتم تسجيله في الرسالة. (ملف صوتي واحد لكل شريحة)

◀ **إرسال الرسالة:** حدد هذه الوظيفة لإرسال الرسالة التي تم إنشاؤها.

◀ **حفظ إلى مسودات:** يتم حفظ الرسالة في المسودات.

◀ **معاينة:** حدد هذه القائمة لمعاينة الرسالة التي تم إنشاؤها قبل إرسالها.

◀ **عرض العناصر:** حدد هذه القائمة لعرض كافة الملفات المرفقة بكافة شرائح الرسالة الحالية.

◀ **ضبط الشريحة:** حدد هذه القائمة لتهيئة وقت التشغيل ولون الخلفية لكل شريحة من الشرائح.

عرض الرسائل الوسائطية

لمعاينة الرسائل الوسائطية

١. حدد معاينة من قائمة خيارات لمعاينة الرسالة الوسائطية التي تم إنشاؤها.
٢. اضغط على مفتاح للأعلى أو للأسفل أو OK (موافق) [إيقاف مؤقت] لإيقاف تشغيل الرسالة مؤقتًا، واضغط على مفتاح OK (موافق) [تشغيل] لاستئناف تشغيل الرسالة.
٣. بعد انتهاء تشغيل الرسالة، تظهر شاشة العرض التفصيلي. إذا أردت إعادة تشغيل الرسالة، فانقر فوق مفتاح الاختيار تشغيل.
- يمكنك استخدام الوظائف التالية باستخدام مفتاح خيارات في شاشة تشغيل.
- ◀ **تشغيل/إيقاف مؤقت:** تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.
- ◀ **تعديل:** يعرض شاشة تعديل الرسالة.
- ◀ **إرسال الرسالة:** يُرسل الرسالة.
- ◀ **حفظ إلى المسودة:** يحفظ الرسالة في صندوق المسودات.
- ◀ **عرض عناصر:** يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة. يمكنك أيضًا حفظ هذه الملفات بأسماء مختلفة إلى موضع محدد.

- ◀ **إزالة:** حدد هذه القائمة لإزالة الشريحة الحالية أو عنصر مرفق بها.
- ◀ **انتقال إلى الشريحة:** حدد هذه القائمة للانتقال إلى الشريحة السابقة أو التالية.
- ◀ **القاموس:** حدد وضع القاموس المطلوب.
- ◀ **إضافة إلى القاموس:** يمكن إضافة كلمة في القاموس.
- ◀ **إلغاء:** يقوم بإلغاء كتابة الرسالة ويرجع إلى قائمة رسالة جديدة.

ملاحظة

- ◀ يمكنك إرسال رسالة وسائط مباشرة من الكاميرا أو كاميرا الفيديو أو مسجل الصوت.
- ١. بعد التقاط صورة بالكاميرا أو تسجيل فيديو بكاميرا الفيديو أو تسجيل صوت بمسجل الصوت.
- ٢. حدد إرسال.
- ٣. حدد إرسال عبر رسالة وسائط.
- ٤. يتم إدراج الصوت أو مقطع الفيديو أو الصورة المحددة في الرسالة الوسائطية.
- ٥. حدد إرسال رسالة من قائمة الخيارات أو اضغط على مفتاح الاختيار الأيمن ← يتم إرسال الرسالة.

◀ **كتم الصوت (أو إلغاء كتم الصوت):** تتيح هذه القائمة تحديد إمكانية كتم الصوت عند احتواء الرسالة على ملف صوت أو فيديو.

◀ **انتقال إلى الشريحة:** للانتقال إلى الشريحة المحددة.

◀ **عرض التفاصيل:** لعرض شاشة العرض المفصلة. تعرض لك معلومات مفصلة عن الرسائل.

عرض الرسائل الواسطية في الوارد والصادر وصندوق الرسائل المرسلة

١. حدد رسالة وسائط لعرض محتوياتها.

٢. اضغط على مفتاح للأعلى أو للأسفل أو OK (موافق) [إيقاف مؤقت] لإيقاف تشغيل الرسالة بصفة مؤقتة، واضغط على مفتاح OK (موافق) [تشغيل] لاستئناف تشغيل الرسالة.

في حالة تشغيل رسالة وسائط، تظهر شاشة العرض التفصيلي بعد تشغيل الرسالة.

- اضغط على مفتاح تشغيل لتشغيل الرسالة.

- يمكن استخدام الوظائف التالية باستخدام مفتاح خيارات.

[قائمة الوارد/شاشة العرض التفصيلي]

◀ **تشغيل:** تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.

◀ **الرد على المرسل/الكل:** لإنشاء رد على المرسل أو كل المستلمين للرسالة المحددة.

◀ **توجيه:** لتوجيه الرسالة المحددة.

◀ **اتصال:** يتم الاتصال بمرسل الرسالة.

◀ **حفظ عنوان:** يحفظ رقم المرسل في دفتر العناوين.

◀ **رسالة جديدة:** لعرض شاشة التعديل التي يمكنك إنشاء رسالة جديدة فيها.

◀ **الاستخدام:** يعرض شاشة (الحصول على رقم/عنوان البريد الإلكتروني/شاشة عنوان الويب) التي تعرض الرقم/عنوان البريد الإلكتروني/عنوان الويب في الرسالة.

◀ **عرض العناصر:** يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة.

◀ **كتم/إلغاء كتم:** تسمح هذه القائمة بتحديد كتم الصوت من عدمه في حالة وجود ملف صوت أو فيديو مضمن في الرسالة.

◀ **حذف:** لحذف الرسالة المحددة.

[قائمة الوارد/شاشة التشغيل]

◀ **تشغيل/إيقاف مؤقت:** تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.

◀ **رد على المرسل/الكل:** يقوم بإنشاء رد على مرسل الرسالة المحددة أو كافة المستلمين.

◀ **توجيه:** لتوجيه الرسالة المحددة.

◀ **اتصال:** يتم الاتصال بمُرسل الرسالة.

◀ **حفظ عنوان:** يحفظ رقم المُرسل في دفتر العناوين.

◀ **رسالة جديدة:** لعرض شاشة التعديل التي يمكنك إنشاء رسالة جديدة فيها.

◀ **الاستخدام:** يعرض شاشة (الحصول على رقم/عنوان البريد الإلكتروني/شاشة عنوان الويب) التي تعرض الرقم/عنوان البريد الإلكتروني/عنوان الويب في الرسالة.

◀ **عرض عناصر:** يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة. يمكنك أيضًا حفظ هذه الملفات بأسماء مختلفة إلى موضع محدد.

◀ **كتم الصوت/إلغاء كتم الصوت:** تتيح هذه القائمة تحديد إمكانية كتم الصوت عند احتواء الرسالة على ملف صوت أو فيديو.

◀ **حذف:** لحذف الرسالة المحددة.

◀ **نقل إلى الشريحة:** للنقل إلى الشريحة المحددة.

◀ **عرض التفاصيل:** لعرض شاشة العرض المفصلة. تعرض لك معلومات مفصلة عن الرسائل.

◀ **قائمتنا الصادر/شاشة العرض التفصيلي]**

◀ **إعادة إرسال:** لإعادة إرسال الرسالة.

◀ **تعديل:** لتعديل الرسالة المحددة.

◀ **تشغيل/إيقاف مؤقت:** تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.

◀ **توجيه:** لتوجيه الرسالة المحددة.

◀ **حفظ عنوان:** لحفظ رقم المستلم إلى دفتر العناوين.

◀ **رسالة جديدة:** لعرض شاشة التعديل التي يمكنك إنشاء رسالة جديدة فيها.

◀ **الاستخدام:** يعرض شاشة (الحصول على رقم/عنوان البريد الإلكتروني/شاشة عنوان الويب) التي تعرض الرقم/عنوان البريد الإلكتروني/عنوان الويب في الرسالة.

◀ **عرض عناصر:** يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة.

◀ **كتم/إلغاء كتم:** تسمح هذه القائمة بتحديد كتم الصوت من عدمه في حالة وجود ملف صوت أو فيديو مضمن في الرسالة.

◀ **حذف:** لحذف الرسالة المحددة.

[صندوق الصادر/تشغيل قوائم الشاشة]

- ◀ إعادة إرسال: لإعادة إرسال الرسالة.
- ◀ تعديل: لتعديل الرسالة المحددة.
- ◀ تشغيل/إيقاف مؤقت: تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.
- ◀ توجيه: لتوجيه الرسالة المحددة.
- ◀ حفظ عنوان: لحفظ رقم المستلم إلى دفتر العناوين.
- ◀ رسالة جديدة: لعرض شاشة التعديل التي يمكنك إنشاء رسالة جديدة فيها.
- ◀ الاستخدام: يعرض شاشة (الحصول على رقم/عنوان البريد الإلكتروني/شاشة عنوان الويب) التي تعرض الرقم/عنوان البريد الإلكتروني/عنوان الويب في الرسالة.
- ◀ عرض عناصر: يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة. يمكنك أيضًا حفظ هذه الملفات بأسماء مختلفة إلى موضع محدد.
- ◀ كتم/إلغاء كتم: تسمح هذه القائمة بتحديد كتم الصوت من عدمه في حالة وجود ملف صوت أو فيديو مضمن في الرسالة.

◀ حذف: لحذف الرسالة المحددة.

- ◀ نقل إلى الشريحة: للنقل إلى الشريحة المحددة.
- ◀ عرض التفاصيل: لعرض شاشة العرض المفصلة. تعرض لك معلومات مفصلة عن الرسائل.
- ◀ [إرسال/قوائم شاشة العرض المفصلة]
- ◀ تشغيل: تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.
- ◀ تعديل: لتعديل الرسالة المحددة.
- ◀ الرد على المرسل/الكل: لإنشاء رد على المرسل أو كل المستلمين للرسالة المحددة.
- ◀ توجيه: لتوجيه الرسالة المحددة.
- ◀ حفظ عنوان: لحفظ رقم المستلم إلى دفتر العناوين.
- ◀ رسالة جديدة: لعرض شاشة التعديل التي يمكنك إنشاء رسالة جديدة فيها.
- ◀ الاستخدام: يعرض شاشة (الحصول على رقم/عنوان البريد الإلكتروني/شاشة عنوان الويب) التي تعرض الرقم/عنوان البريد الإلكتروني/عنوان الويب في الرسالة.

◀ **عرض عناصر:** يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة. يمكنك أيضًا حفظ هذه الملفات بأسماء مختلفة إلى موضع محدد.

◀ **كتم/إلغاء كتم:** تسمح هذه القائمة بتحديد كتم الصوت من عدمه في حالة وجود ملف صوت أو فيديو مضمن في الرسالة.

◀ **حذف:** لحذف الرسالة المحددة.

◀ **نقل إلى الشريحة:** للنقل إلى الشريحة المحددة.

◀ **عرض التفاصيل:** لعرض شاشة العرض المفصلة. تعرض لك معلومات مفصلة عن الرسائل.

رسالة المجموعة (القائمة ١٠-٣)

يمكنك إرسال رسالة إلى مجموعة من الأشخاص في دفتر العناوين.

١. اضغط على مفتاح الاختيار الأيسر [خيارات] في الحقل "إلى".

٢. حدد جهات الاتصال ويتم عرض قائمة مجموعة جهات الاتصال.

٣. حدد المجموعة (المجموعات) المطلوبة باستخدام المفتاح OK (موافق) واضغط على مفتاح الاختيار الأيمن [تم].

٤. أدخل العنوان وقم بإنشاء الرسالة. ارجع إلى رسالة وسائط في الصفحة ٥٥-٥٨

◀ **عرض العناصر:** يعرض الشاشة (شاشة عرض العنصر) التي تستطيع فيها عرض ملفات الفيديو والصورة والصوت المضمنة في الرسالة.

◀ **كتم/إلغاء كتم:** تسمح هذه القائمة بتحديد كتم الصوت من عدمه في حالة وجود ملف صوت أو فيديو مضمن في الرسالة.

◀ **حذف:** لحذف الرسالة المحددة.

[صندوق الصادر/تشغيل قوائم الشاشة]

◀ **تعديل:** لتعديل الرسالة المحددة.

◀ **الرد على المرسل/الكل:** لإنشاء رد على المرسل أو كل المستلمين للرسالة المحددة.

◀ **تشغيل/إيقاف مؤقت:** تشغيل الرسالة أو إيقاف تشغيل الرسالة مؤقتًا.

◀ **توجيه:** لتوجيه الرسالة المحددة.

◀ **حفظ عنوان:** لحفظ رقم المستلم إلى دفتر العناوين.

◀ **رسالة جديدة:** لعرض شاشة التعديل التي يمكنك إنشاء رسالة جديدة فيها.

◀ **الاستخدام:** يعرض شاشة (الحصول على رقم/عنوان البريد الإلكتروني/شاشة عنوان الويب) التي تعرض الرقم/عنوان البريد الإلكتروني/عنوان الويب في الرسالة.

بريد إلكتروني (القائمة ١-٥)

إنشاء بريد إلكتروني

يمكنك إنشاء بريد إلكتروني جديد.

١. حدد بريد إلكتروني من رسالة جديدة، واضغط على المفتاح OK (موافق).

٢. يمكنك تعديل العناصر الضرورية لإنشاء رسالة بريد إلكتروني باستخدام المؤشر.

٣. حرك المؤشر إلى الحقل "إلى" وأدخل عنوان البريد الإلكتروني لمستلم البريد الإلكتروني.

٤. حرك المؤشر إلى الحقل "نسخة كربونية" وأدخل عنوان البريد الإلكتروني المرجع لتوجيه رسالة البريد الإلكتروني.

٥. حرك المؤشر إلى الحقل "نسخة كربونية مخفية" وأدخل عنوان البريد الإلكتروني المرجع المخفي لتوجيه رسالة البريد الإلكتروني بدون توجيه المعلومات.

٦. يُسمح فقط بعنوان بريد إلكتروني صحيح فقط لحقل المستلم (إلى) وعنوان المرجع (CC) وعنوان المرجع المخفي (BCC). عند تحديد عنوان بريد إلكتروني، يظهر حقلًا آخر يمكنك تحديد عنوان آخر فيه. يمكنك تحديد حتى ٢٠ مستلمًا لحقول العناوين (إلى) و(نسخة كربونية) و ١٠ مستلمين لحقل عنوان (نسخة كربونية مخفية).

٧. لإدخال بيانات في حقول المستلم (إلى) وعنوان المرجع (نسخة كربونية) وعنوان المرجع المخفي (نسخة كربونية مخفية)، يمكنك البحث في جهات الاتصال باستخدام مفتاح جهات الاتصال واستخدم الوظائف التالية باستخدام المفتاح [خيارات].

◀ **إضافة جهات اتصال:** حدد هذه القائمة لإدراج الاسم المحفوظ في جهات الاتصال.

◀ **إرسال رسالة:** لإرسال رسالة البريد الإلكتروني التي تم إنشاؤها.

◀ **حفظ إلى المسودات:** حدد هذه القائمة لحفظ الرسالة في المسودات.

◀ **عرض عنصر:** لعرض الملف المرفق.

◀ **إزالة:** لإزالة الملف المرفق.

◀ **إلغاء:** للخروج من مؤلف رسائل البريد الإلكتروني.

٨. حرك المؤشر إلى حقل الموضوع لإنشاء موضوع. استخدم الوظائف التالية عن طريق استخدام المفتاح [خيارات].

◀ **إدراج:** حدد هذه القائمة لإدراج الرمز والنماذج و جهات الاتصال.

◀ **القاموس:** حدد هذه القائمة لاستخدام القاموس.

◀ **إرسال رسالة:** لإرسال رسالة البريد الإلكتروني التي تم إنشاؤها.

◀ **حفظ إلى المسودات:** حدد هذه القائمة لحفظ الرسالة في صندوق المسودات.

◀ **عرض عنصر:** لعرض الملف المرفق.

◀ **إزالة:** لإزالة الملف المرفق.

◀ **إلغاء:** للخروج من مؤلف رسائل البريد الإلكتروني.

٩. يمكنك إدخال محتويات الرسالة عن طريق نقل المؤشر إلى الحقل رسالة. استخدم الوظائف التالية عن طريق استخدام المفتاح [خيارات].

◀ **إدراج:** حدد هذه القائمة لإدراج الحروف الخاصة والنماذج وجهات الاتصال. من الممكن أيضًا إرفاق ملفات وسائط متعددة.

◀ **معاينة:** يمكنك معاينة رسالة البريد الإلكتروني الذي تم إنشاؤها قبل الإرسال.

◀ **القاموس:** حدد هذه القائمة لاستخدام القاموس.

◀ **إرسال رسالة:** لإرسال رسالة البريد الإلكتروني التي تم إنشاؤها.

◀ **ضبط أولوية البريد:** يمكنك تهيئة أولوية رسالة البريد الإلكتروني التي تريد إرسالها.

◀ **حفظ إلى المسودات:** حدد هذه القائمة لحفظ الرسالة في المسودات.

◀ **عرض عنصر:** لعرض الملف المرفق.

◀ **إزالة:** لإزالة الملف المرفق.

◀ **إلغاء:** للخروج من مؤلف رسائل البريد الإلكتروني.

١٠. عند الانتهاء من كتابة بريد إلكتروني، اضغط على المفتاح "إرسال" لإرسال البريد الإلكتروني.

مسودات

القائمة ٢.٥

١. يمكنك عرض الرسائل المحفوظة. حدد رسالة ثم اضغط على المفتاح OK (موافق) لعرض الرسالة.

٢. يمكنك عرض الرسالة السابقة أو التالية باستخدام مفتاحي الاختيار الأيمن والأيسر.

٣. لعرض رسالة وسائط (إخطار)، حدد استرداد في شاشة عرض الرسالة. ثم يتم إرسال الملف ويمكنك عرض الملف عند اكتمال الإرسال.

٤. يمكنك استخدام الوظائف التالية باستخدام المفتاح [خيارات].

◀ **الرد على المرسل/الكل:** لإنشاء رد على المرسل أو كل المستلمين للرسالة المحددة.

◀ **توجيه:** لتوجيه الرسالة المحددة. (غير مدعومة للرسالة الصورية (إخطار) ورسائل دفع WAP).

- ◀ **عرض:** يمكنك عرض الرسالة الحالية.
- ◀ **رسالة جديدة:** يمكنك كتابة رسالة جديدة.
- ◀ **تحديد/إلغاء تحديد:** يمكنك تحديد رسالة واحدة أو أكثر للحذف المتعدد.
- ◀ **مرشح:** يعرض الرسائل حسب الأنواع المطلوبة.
- ◀ **حذف:** لحذف الرسالة الحالية.
- ◀ **معلومات الرسالة:** لعرض المعلومات المفصلة الخاصة بالرسالة.
- ◀ **نقل/نسخ:** يمكنك نقل أو نسخ الرسائل من الهاتف الى USIM والعكس
- ◀ **رد على الكل:** لإنشاء رد على كل المستلمين.
- ◀ **توجيه:** لتوجيه رسالة البريد الإلكتروني المحددة إلى عنوان بريد إلكتروني آخر.
- ◀ **فتح:** لفتح رسالة البريد الإلكتروني المحددة.
- ◀ **استرداد:** لاسترداد رسائل بريد إلكتروني جديدة.
- ◀ **رسالة جديدة:** لإنشاء رسالة جديدة.
- ◀ **تحديد/إلغاء تحديد:** لاستخدام خيار تحديد/إلغاء تحديد.
- ◀ **حذف:** لحذف رسالة بريد إلكتروني. يتم حفظ رسائل البريد الإلكتروني المحذوفة في المهنلات.
- ◀ **حذف من الهاتف والخادم:** لحذف رسالة البريد الإلكتروني المحددة من الهاتف والخادم.

عرض رسالة البريد الإلكتروني

صندوق البريد القائمة ٣-٥

عرض قائمة رسائل البريد الإلكتروني

١. حدد إحدى رسائل البريد الإلكتروني المستلمة واضغط على المفتاح فتح لاستلام المحتويات من رسالة البريد الإلكتروني.
٢. يتم عرض محتويات رسالة البريد الإلكتروني المستلمة تلقائيًا في الشاشة عرض.
٣. يمكنك عرض محتويات الرسالة السابقة أو التالية باستخدام مفتاح الاختيار الأيمن/الأيسر.
٤. في شاشة عرض رسالة البريد الإلكتروني، يمكنك تحديد الوظائف التالية باستخدام المفتاح [خيارات].
١. حدد حساب بريد إلكتروني ثم اضغط على المفتاح OK (موافق) لعرض قائمة البريد الإلكتروني المستلم.
٢. باستخدام المفتاح استرداد، يمكنك استرداد قائمة بريد إلكتروني جديدة من خادم البريد الإلكتروني للحساب المحدد.
٣. في قائمة البريد الإلكتروني، يمكنك استخدام الوظائف التالية باستخدام المفتاح [خيارات].
- ◀ **رد:** لإنشاء رد على رسالة البريد الإلكتروني المحددة. يمكنك كتابة رد باستخدام رسالة البريد الإلكتروني.

٤. اضغط على المفتاح استعادة لاستعادة رسالة بريد إلكتروني محذوفة.
٥. باستخدام المفتاح خيار، يمكنك تحديد الوظائف التالية.
 - ◀ **استعادة:** لاستعادة رسالة بريد إلكتروني محذوفة.
 - ◀ **حذف:** لحذف بريد إلكتروني بشكل دائم.
 - ◀ **تحديد/إلغاء تحديد:** لاستخدام خيار تحديد/إلغاء تحديد.

ملاحظة

- ◀ لن يتم استلام رسائل البريد الإلكتروني الموجودة في المهمات مرة أخرى.

القائمة ٥-٤

مسودات

١. يمكنك عرض الرسائل المحفوظة. حدد رسالة ثم اضغط على المفتاح OK (موافق) لتعديل الرسالة.
٢. يمكنك استخدام الوظائف التالية باستخدام المفتاح [خيارات].
 - ◀ **تعديل:** يمكنك تعديل الرسائل.
 - ◀ **رسالة جديدة:** يمكنك كتابة رسالة جديدة.
 - ◀ **تحديد/إلغاء تحديد:** يمكنك تحديد رسالة واحدة أو أكثر للحذف المتعدد.
 - ◀ **مرشح:** يعرض الرسائل حسب الأنواع المطلوبة.

◀ **رد:** لإنشاء رد على رسالة البريد الإلكتروني المحددة.

◀ **رد على الكل:** لإنشاء رد على كل المستلمين.

◀ **توجيه:** لتوجيه رسالة البريد الإلكتروني المحددة إلى عنوان بريد إلكتروني آخر.

◀ **حفظ عنوان:** لحفظ عنوان المرسل أو تحديثه.

◀ **رسالة جديدة:** لكتابة رسالة نصية جديدة أو رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني.

◀ **الاستخدام:** لاستخلاص رقم أو عنوان بريد إلكتروني أو URL من رسالة البريد الإلكتروني.

◀ **عرض عناصر:** لعرض الملف المرفق.

◀ **حذف:** لحذف رسالة البريد الإلكتروني المحددة.

المهمات

١. يمكنك استعادة رسائل البريد الإلكتروني في المهمات أو حذفها نهائياً.
٢. حدد المهمات في صندوق البريد واضغط على المفتاح OK (موافق) لعرض قائمة البريد الإلكتروني المحذوف.
٣. اضغط على المفتاح حذف لحذف رسالة بريد إلكتروني محذوفة بشكل دائم.

◀ **حذف:** لحذف الرسالة الحالية.

صندوق الصادر

القائمة ٥-٥

صندوق الصادر عبارة عن مخزن مؤقت للرسائل المنتظرة ليتم إرسالها.

١. حدد رسالة ثم اضغط على المفتاح OK (موافق) لعرض الرسالة.

٢. يمكنك استخدام الوظائف التالية باستخدام المفتاح [خيارات].

[لِلرَّسَائِلِ الْمُرْسَلَةِ/الْمُنْتَظَرَةِ]

◀ **رسالة جديدة:** يمكنك كتابة رسالة جديدة.

◀ **عرض حالة الخطأ:** يعرض سبب خطأ الإرسال للرسائل المنتظرة.

◀ **إلغاء:** يمكنك إيقاف حالة الانتظار/الإرسال.

[لِلإِرسَالِ رِسَالَةٍ فَاشِلَةٍ]

◀ **إعادة إرسال:** لإعادة إرسال الرسالة المحددة.

◀ **توجيه:** لتوجيه الرسالة المحددة.

◀ **تعديل:** يمكنك تعديل الرسائل.

◀ **رسالة جديدة:** يمكنك كتابة رسالة جديدة.

◀ **عرض الحالة:** لعرض سبب فشل الإرسال.

◀ **تحديد/إلغاء تحديد:** يمكنك تحديد رسالة واحدة أو أكثر للحذف المتعدد.

◀ **مرشح:** يعرض الرسائل حسب الأنواع المطلوبة.

◀ **حذف:** لحذف الرسالة الحالية.

◀ **معلومات الرسالة:** يمكنك التحقق من نوع الرسالة والتاريخ والوقت ومكان الحفظ.

العناصر المرسلة

القائمة ٦-٥

لعرض الرسائل التي قمت بإرسالها (رسالة نصية/رسالة وسائط/بريد إلكتروني).

[خيارات]

◀ **الرد على المرسل/الكل:** لإنشاء رد على المرسل أو كل المستلمين للرسالة المحددة.

◀ **توجيه:** لتوجيه الرسالة المحددة.

◀ **عرض:** لفتح الرسالة المحددة.

◀ **تعديل:** يمكنك تعديل الرسائل.

◀ **رسالة جديدة:** يمكنك كتابة رسالة جديدة.

القائمة ٩.٥

الإعدادات

رسالة نصية (القائمة ١-٩.٥)

مركز الرسائل

• أدخل عنوان مركز الرسائل النصية.

تقرير التسليم

• تشغيل/إيقاف

فترة الصلاحية

• ساعة/٦ ساعات/١٢ ساعة/يوم/يومان/أسبوع/الحد الأقصى

رسالة وسائط (القائمة ٢٠٩.٥)

يمكنك تهيئة الخيارات المرتبطة بالرسالة الوسائطية.

١. تقرير التسليم: يسمح لك بتحديد طلب رسالة بريد لتأكيد

وصول الرسالة من المستلم من عدمه، وتحديد السماح

بإرسال بريد لتأكيد الاستلام إلى مرسل.

◀ **حفظ عنوان:** لحفظ رقم المستلم في دفتر العناوين.

◀ **تحديد/إلغاء تحديد:** يمكنك تحديد رسالة واحدة أو أكثر للحذف المتعدد.

◀ **مرشح:** يعرض الرسائل حسب الأنواع المطلوبة.

◀ **حذف:** لحذف الرسالة الحالية.

◀ **معلومات الرسالة:** لعرض المعلومات المفصلة الخاصة بالرسالة.

القائمة ٧.٥

نماذج

يمكنك إضافة العبارات المفيدة المستخدمة باستمرار وتعديلها وحذفها.

يمكنك حفظ العبارات المستخدمة باستمرار في نافذة الإدخال مقدّمًا.

يمكنك حفظ هذه العبارات المفيدة باستخدام القائمة خيارات.

◀ **وفقًا لمزود الخدمة،** يتم حفظ العبارات المفيدة كرسائل افتراضية.

القائمة ٨.٥

الرموز التعبيرية

يمكنك إضافة الرموز التعبيرية المستخدمة باستمرار وتعديلها وحذفها.

يتم حفظ ١٨ رمزًا تعبيريًا كرموز افتراضية.

٥. **فترة الصلاحية:** يسمح بتهيئة مدة الصلاحية لرسالة عند إرسال رسالة وسائط. سيتم حفظ الرسالة في خادم الرسائل الوسائطية فقط للفترة التي تم تهيئتها.

٦. **مدة الشريحة:** يسمح بتهيئة مدة كل صفحة عند كتابة الرسالة.

٧. **حجم الرسالة:** يقوم بتهيئة حجم الرسالة لإرسال رسالة وسائط. يمكنك ضبط الرسالة إلى الحجم المطلوب.

٨. **وقت التسليم:** يقوم بتهيئة وقت تسليم الرسالة إلى المستلم. سيقوم مركز الرسائل الوسائطية بتسليم الرسالة بعد وقت التسليم.

٩. **مركز رسائل الصور**

تسمح هذه القائمة بتهيئة معلومات الشبكة مثل بوابة WAP و MMSC لإرسال رسالة وسائط.

في القائمة خيار، يمكنك إضافة ملف أو حذفه باستخدام مفتاح الاختيار الأيسر. يمكنك إنهاء التهيئة بالضغط على المفتاح "تم".

اسم الوضع المحدد باستخدام علامة الاختيار هو القيمة المهيأة حاليًا. يمكنك عرض محتويات الوضع وتعديلها في وضع

◀ **طلب تقرير:** يحدد طلب رسالة بريد لتأكيد تسليم رسالة الوسائط المتعددة من عدمه.

◀ **السماح بتقرير:** يحدد السماح بإرسال رسالة بريد لتأكيد استلام رسالة البريد من عدمه.

٢. **تقرير قراءة:** يسمح لك بتحديد طلب رسالة بريد لتأكيد القراءة من المستلم من عدمه، وتحديد السماح بإرسال رسالة بريد لتأكيد القراءة إلى المرسل.

◀ **طلب رد:** يحدد طلب رسالة بريد لتأكيد القراءة لرسالة الوسائط المتعددة من عدمه.

◀ **السماح بالرد:** يحدد السماح بإرسال رسالة بريد لتأكيد القراءة لطلب رسالة بريد لتأكيد القراءة من عدمه.

٣. **استرداد تلقائي:** يسمح بتحديد تنزيل رسالة وسائط من عدمه عند وصول إخطار رسالة وسائط.

٤. **الأولوية:** يمكنك تحديد مستوى الأولوية للرسائل (منخفضة، عادية، مرتفعة).

التعديل بالضغط على المفتاح تعديل. تظهر شاشة التعديل أيضاً عند إنشاء وضع جديد في الخيارات. فيما يلي معاني العناصر.

◀ عنوان: اسم الوضع.

◀ **MMSC URL**: أدخل URL مركز الرسائل الواسائطية.

◀ **وكيل MMS**: أدخل رقم منفذ بوابة WAP.

◀ **وضع الاتصال**: حدد UDP (CO/CL)، TCP مع وكيل و TCP بدون وكيل.

◀ **نقاط الوصول**: حدد اسم نقطة الوصول (انظر إعدادات اتصال WAP).

اضغط على المفتاح تم (خيارات) لحفظ التغييرات وإكمال إعداد مركز الرسائل الواسائطية.

إذا قمت بإجراء تغييرات، فاضغط على المفتاح تم لحفظ التغييرات والخروج.

بريد إلكتروني (الصفحة ٣-١٠)

يمكنك تهيئة الإعدادات لاستلام رسائل البريد الإلكتروني وإرسالها.

١. **السماح ببريد إلكتروني للرد**: يحدد السماح بإرسال رسالة بريد إلكتروني لتأكيد القراءة لطلب رسالة بريد إلكتروني لتأكيد القراءة من عدمه.

٢. **طلب رد بريد إلكتروني**: يحدد طلب بريد تأكيد القراءة من عدمه.

٣. **استرداد تلقائي**

يمكنك تهيئة الاسترداد التلقائي لاسترداد رسائل البريد الإلكتروني تلقائياً من خادم البريد الوارد. عند وصول رسالة بريد إلكتروني جديدة، يظهر رمز في الجزء العلوي من الشاشة. يمكنك تحديد وقت الاستلام التلقائي من بين إيقاف و ١٥ دقيقة وساعة و ٤ ساعات ويوم. يرجى ملاحظة أنه قد تفرض تكلفة إضافية إثر استخدام ميزة [الاسترداد التلقائي].

٤. **التوقيع**

يمكنك تهيئة توقيع نصي ليتم إرفاقه في نهاية رسالة البريد الإلكتروني. يتم إرفاق نص التوقيع يدوياً أو تلقائياً في نهاية رسالة البريد الإلكتروني عند إرساله ويمكن إرفاقه بشكل مختلف وفقاً للحساب المستخدم كحساب افتراضي.

٥. حسابات البريد الإلكتروني

١. يمكنك إنشاء وتهيئة حساب بريد إلكتروني، ويشتمل ذلك على خادم البريد الإلكتروني ومعرف المستخدم.
٢. يمكنك تعديل حساب البريد الإلكتروني المحدد بالضغط على المفتاح تعديل.
٣. يمكنك تحديد حساب بريد إلكتروني لاستخدامه لإرسال بريد إلكتروني باستخدام المفتاح OK (موافق).
٤. يمكنك تحديد الوظائف التالية باستخدام المفتاح خيار.
- ◀ **إضافة جديد:** لإنشاء حساب بريد إلكتروني جديد.
- ◀ **حذف:** لحذف حساب البريد الإلكتروني المحدد.

إنشاء حساب بريد إلكتروني جديد

١. حدد إضافة جديد من خيارات قائمة حساب البريد الإلكتروني.
٢. بتحريرك المؤشر إلى عنصر مطلوب، يمكنك تعديل العنصر لإنشاء حساب بريد إلكتروني.
٣. حرك المؤشر إلى الحقل عنوان وأدخل عنواناً.
٤. حرك المؤشر إلى حقل اسم المستخدم وأدخل اسم مستخدم حساب البريد الإلكتروني.
٥. حرك المؤشر إلى حقل كلمة المرور وقم بتهيئة كلمة مرور حساب البريد الإلكتروني.

٦. حرك المؤشر إلى حقل عنوان البريد الإلكتروني وقم بتهيئة عنوان البريد الإلكتروني للبريد الصادر.
٧. حرك المؤشر إلى حقل عنوان البريد الإلكتروني لـ "رد" وقم بتهيئة عنوان البريد الإلكتروني للرد على رسالة البريد الإلكتروني.
٨. حرك المؤشر إلى حقل خادم البريد الصادر وقم بتهيئة خادم البريد الإلكتروني للبريد الصادر.
٩. حرك المؤشر إلى حقل خادم البريد الوارد وقم بتهيئة خادم البريد الإلكتروني الوارد.
١٠. حرك المؤشر إلى حقل رقم منفذ SMTP وقم بتهيئة رقم منفذ خادم البريد. وبوجه عام، SMTP (رقم منفذ خادم البريد الصادر) هو ٢٥.
١١. حرك المؤشر إلى حقل منفذ خادم الوارد وقم بتهيئة رقم منفذ خادم البريد. وبوجه عام، فإن رقم منفذ خادم البريد الوارد هو ١١٠ (POP3) أو ١٤٣ (IMAP4).
١٢. حرك المؤشر إلى حجم الاستلام الأقصى وقم بتهيئة حجم البريد الإلكتروني الأقصى. حجم الاستلام الأقصى المسموح لا يزيد عن ٣٠٠ ك ب.

١٣. حرك المؤشر إلى نوع صندوق البريد وحدد نوع وارء البريد الإلكتروني. يمكنك التحديد من بين POP3 وIMAP4.

١٤. حرك المؤشر إلى حفظ إلى الخاءم وحدد نساة من الرسائل في خاءم الواء من عءمه. يمكنك تحديد تشغيل أو إيقاف باءءءاء مفتاح القائمة.

١٥. حرك المؤشر إلى حفظ البريد المرسل في ثم حدد مكان حفظ رسائل البريد المرسل.

١٦. حرك المؤشر إلى حفظ نقطة الوصول لتحديد نقطة الوصول للتوصيل بالإنترنت. يمكنك تحديد نقطة وصول مهيأة باءءءاء مفتاح القائمة.

١٧. حرك المؤشر إلى عنصر الاءترءاء التلقائي وحدء الاءءلام التلقائي لرسائل البريد الإلكتروني كمنفذ وقت ثابت، يمكنك تحديد التشغيل/الإيقاف باءءءاء مفتاح القائمة. إذا رعبء في اءءءاء هءه الوظيفة، فيوءء اءءراء تلقائي محءء في إءءاءاء البريد الإلكتروني. لكن الاءءراء التلقائي عفر محءء، يمكنك تحديد الاءءراء التلقائي في خيار.

١٨. حرك المؤشر إلى حفظ مصادقة SMTP وحدء ما إذا كان خاءم البريد الصاءر يءطلب مصادقة من عءمه. يمكنك تحديد تشغيل أو إيقاف باءءءاء مفتاح القائمة. عء ضبط توثيق SMTP على تشغيل، يمكنك إءءال اسم مءءءء SMTP وكلمة مرور SMTP لتوثيق SMTP.

١٩. حرك المؤشر إلى حفظ تسجيل الدءول الآمن لـ APOP وحدء تنشيط تسجيل الدءول الآمن لـ APOP من عءمه.

٢٠. اءضط على المفتاح ثم لإكمال تهيئة حساب البريد الإلكتروني.

تعءيل حساب البريد الإلكتروني

١. حدد حساب البريد الإلكتروني المطلوب من قائمة حساب البريد الإلكتروني واضط على المفتاح تعءيل.

٢. يمكنك تعءيل الحقول المطلوبة عن طريق نقل المؤشر لأعلى ولأسفل.

٣. عء اكءمال التهيئة، اءضط على المفتاح ثم لإكمال تهيئة حساب البريد الإلكتروني.

بريد الفيديو (القائمة ٤-٩-٥)

يمكنك إضافة أو تعديل مركز بريد الفيديو.

البريد الصوتي (القائمة ٥-٩-٥)

يمكنك إضافة أو تعديل مركز بريد الفيديو.

رسائل الخدمة (القائمة ٦-٩-٥)

يمكنك تهيئة خيار استلام رسالة الخدمة.

- ◀ غير مسموح: لن يستقبل الهاتف أي رسائل خدمة.
- ◀ عند التأكد: يمكنك استلام رسائل الخدمة عند التأكد.
- ◀ بدون تأكيد: سيقوم الهاتف باستلام رسائل الخدمة.

الصفحة الرئيسية

القائمة ١-٦

يمكنك بدء مستعرض الويب والوصول إلى الصفحة الرئيسية لخدمة الويب التي يقدمها مزود الخدمة.

يمكنك أيضًا الوصول مباشرة إلى الإنترنت بالضغط على مفتاح الاختيار الأيسر [الإنترنت] في وضع السكون.

العلامات

قائمة ٢-٦

لحفظ صفحات أو عناوين URL المفضلة أو التي تتصفحها بشكل متكرر. يمكن إجراء عمليات الإرسال أو إضافة جديد أو التعديل أو الحذف في العلامات.

لإضافة علامة جديدة، اضغط على مفتاح الاختيار الأيمن [إضافة]. أدخل "العنوان" ومعلومات "URL" المطلوب واضغط على المفتاح "تم" للحفظ.

للتوصيل بالعلامة المطلوبة حدد "توصيل" من القائمة "خيارات".

لإرسال العلامة إلى آخرين، حدد "إرسال" من القائمة "خيارات". يمكنك الإرسال عبر رسالة نصية/رسالة وساناط/رسالة المجموعة.

لحذف علامة، حدد "حذف" من القائمة "خيارات".

الصفحات المحفوظة

القائمة ٣-٦

يستطيع الهاتف حفظ الصفحة التي توجد على الشاشة كملف دون الاتصال بالإنترنت. يمكن حفظ ٢٠ صفحة كحد أقصى.

الذهاب إلى عنوان الموقع

القائمة ٤-٦

إدخال العنوان

يستطيع المستخدم تعديل URL للاتصل بالصفحة مباشرة والتوصيل بـ URL الذي تم تعديله.

لإدخال رمز، اضغط على مفتاح النجمة ("*") لعرض جدول الرموز ولتغيير وضع الإدخال، اضغط على المفتاح رطل ("#").

الصفحات الأخيرة

تعرض "الصفحات الأخيرة" الصفحات التي تم استعراضها مؤخرًا (سجل).

إعدادات الحماية

القائمة ٥-٦

إذا ضغط المستخدم على شهادات، فسيتم عرض معلومات الشهادة.

يمكن مسح جلسة المعلومات الآمنة بالضغط على مسح الجلسة.

وUnicode(UTF-16 BE) وUnicode(UTF-16 LE) وUnicode(UTF-8 Auto) وUnicode(UTF-8).

التحكم في التمرير (القائمة ٦-٦-٣)

يسمح بضبط سرعة التمرير عن طريق تحديد عدد الخطوط للتمرير. حدد من خط وخطان وثلاث خطوط.

عرض صورة (القائمة ٦-٦-٤)

يسمح بتمكين عرض صورة أثناء التصفح أو تعطيله.

ملاحظة

◀ يؤدي تمكين هذه الوظيفة إلى تأجيل عرض الصور حتى يكتمل الإرسال.
بينما يؤدي تعطيل هذه الوظيفة إلى منع المستعرض من تنزيل الصور من الخادم، بما يسمح بإرسال أسرع.

الذاكرة المؤقتة (قائمة ٦-٦-٥)

يسمح تمكين الذاكرة المؤقتة بتخزين الصفحات التي تم الوصول إليها في الهاتف. بمجرد تخزين صفحة في الذاكرة المؤقتة سيتم تحسين سرعة تحميل الصورة بشكل ملحوظ في الاستعراض التالي لنفس الصفحة.

الشهادات

إذا كانت الجلسة مخزنة، فيمكن العثور على الشهادات الأساسية/شهادات مرجع مصدق لـ TLS/WTLS هنا. يمكن عرض الشهادات من القائمة.

مسح الجلسة

يمكن مسح بيانات جلسة (TLS/WTLS) آمنة باستخدام هذا الخيار. يجب مسح بيانات الجلسة لإنشاء جلسة آمنة جديدة.

الإعدادات

القائمة ٦-٦

الأوضاع (القائمة ٦-٦-١)

حدد الوضع المناسب بالضغطة على المفتاح OK (موافق). سيؤدي ذلك إلى تنشيط الوضع لبدء تشغيل المستعرض.

تشفير الحروف (القائمة ٦-٦-٢)

لضبط مجموعة الحروف الافتراضية للمستعرض على أحد الخيارات التالية.

◀ تلقائي وEnglish(ISO) وEnglish(ASCII) وUnicode(UCS2 BE) وEnglish(LATIN) وUnicode(UCS2 LE) وUnicode(UCS2 Auto)

ملفات تعريف الارتباط (القائمة ٦-٦-٦)

تمكين ملفات تعريف الارتباط يسمح بتخزين ملفات تعريف الارتباط المرسلّة من الخادم. بينما يمنع تعطيل هذه الوظيفة ملفات تعريف الارتباط من التخزين في الهاتف.

مسح الذاكرة المؤقتة (القائمة ٦-٦-٧)

لحذف كل صفحات الويب المخزّنة مسبقاً في الذاكرة المؤقتة.

مسح ملفات التسجيل (القائمة ٦-٦-٨)

لحذف كل ملفات تعريف الارتباط المخزّنة مسبقاً.

ألبوم الوسائط

- إعادة التسمية: يمكنك من إعادة تسمية الصورة.
- معلومات الملف: يعرض معلومات ملف الصورة المحدد.
- ◀ **تحديد/إلغاء تحديد:** باستخدام وظيفة التحديد، يمكنك إرسال ملفات عديدة وحذفها ونقلها ونسخها.
- ◀ **إرسال:** يمكنك إرسال الصورة المحددة من خلال رسالة وسائط ورسالة المجموعة والبريد الإلكتروني وبلوتوث.
- ◀ **سمة الشاشة الرئيسية:** يمكنك ضبط صورة كسمة الشاشة (الشاشة الرئيسية ومكالمة صادرة والتشغيل وإيقاف التشغيل).
- ◀ **سمة الشاشة الأمامية:** يمكنك ضبط صورة كسمة الشاشة (الشاشة الرئيسية ومكالمة صادرة).
- ◀ **عرض الشرائح:** يمكنك بدء أو ضبط (عادي أو شاشة كاملة، بأي سرعة) عرض الشرائح.
- ◀ **إنشاء رسم متحرك بتنسيق GIF:** يمكنك باستخدام صور مختلفة إنشاء ملف متحرك بتنسيق GIF (حتى ١٠ ملفات بدقة صورة ١٧٦x٢٢٠ وحد حجم الملف هو ٢ ميجابايت للعرض).
- ◀ **ترتيب حسب:** يمكنك الترتيب حسب الاسم أو التاريخ أو نوع الملف.
- ◀ **عرض القائمة:** لعرض الصور كقائمة بسيطة أو مفصلة.

الصور

القائمة ١-٧

يشتمل ذلك على رابط داخلي لتنزيل الصور من الإنترنت ومجلدات الصور الافتراضية وصورتي.

يتم تخزين الصور التي يتم التقاطها باستخدام الكاميرا في مجلد الصور ويمكنك إنشاء مجلدات جديدة لإدارتها. كما يمكنك حفظ الملفات المحددة كملفات Gif متحركة وإرسال ملفات عديدة إلى أشخاص آخرين.

عند تحديد ملف، سيتم عرض الخيار التالي بالضغط على مفتاح الاختيار الأيسر [خيارات].

- ◀ **عرض:** يمكنك عرض الصورة المحددة.
- ◀ **مجلد جديد:** يمكنك إنشاء مجلد جديد داخل المجلد المحدد حاليًا.
- ◀ **الملفات**

- تعديل: يمكنك من تعديل الصورة.
- نقل: يمكنك من نقل الملفات إلى مجلد آخر.
- نسخ: يمكنك من نسخ الملفات إلى مجلد آخر.
- حذف: لحذف الصورة المحددة.
- حذف الكل: لحذف كل الصور.

◀ **حالة الذاكرة:** يمكنك عرض حالة الذاكرة (الهاتف أو بطاقة الذاكرة الخارجية).

اضغط على مفتاح الاختيار الأيمن لتنفيذ وظيفة [إرسال] على الفور.

حدد صورة مصغرة في شاشة قائمة الصور المصغرة ثم حدد [عرض] لعرض الصورة الكبيرة.

في شاشة الصور الكبيرة، يمكنك العرض في وضع التكبير/التصغير بالنقر فوق [التكبير] في المنتصف، ويمكنك تنفيذ وظيفة [إرسال] باستخدام مفتاح الاختيار الأيمن.

باستخدام قائمة الخيارات، يمكنك استخدام الوظائف التالية.

باستخدام قائمة [الملفات]، يمكنك حذف ملف وإعادة تسميته وتعديله ويمكنك عرض معلومات الملف. باستخدام قائمة تعديل، يمكنك تدوير صورة وتغيير حجمها وقصها ويمكنك إدراج نص أو تأثير.

حدد [الملفات] ثم حدد الخيار تعديل لدخول نافذة تعديل.

◀ **تدوير:** يمكنك تدوير الصورة بزاوية ٩٠ أو ١٨٠ أو ٢٧٠ درجة.

◀ **تغيير الحجم:** لتغيير حجم الصورة إلى حجم أصغر.

◀ **إدراج:** لإضافة نص أو إطار أو عنصر.

◀ **تعديل عنصر:** لاستخدام وظائف قص وعبوب الصورة.

◀ **تأثير:** لتطبيق التأثير المطلوب إلى الصورة.

◀ **معكوسة:** لقلبها كصورة معكوسة (يمين < يسار).

◀ **تراجع/إعادة:** حدد هذا للتراجع عن أو إعادة العملية الأخيرة في الصورة.

مقاطع الفيديو

القائمة ٧-٢

تتكون مقاطع فيديو المجلد من رابط داخلي لتنزيل مقاطع الفيديو عبر الإنترنت والفيديو الخاص بي كمجلد افتراضي لمقاطع الفيديو المنزلة أو المسجلة.

يمكنك من هنا إدارة مقاطع الفيديو الملتقطة أو المنزلة.

يتوفر ما يلي باستخدام مفتاح الاختيار الأيسر [خيارات] في قائمة الفيديو.

◀ **تشغيل:** لتشغيل الفيديو.

◀ **مجلد جديد:** يمكنك إنشاء مجلد جديد.

◀ **الملفات**

- نقل: لنقل الملف في مجلد الفيديو الخاص بي.

- نسخ: لنسخ الملف في مجلد الفيديو الخاص بي.

- حذف: لحذف الفيديو المحدد.
- حذف الكل: لحذف كل مقاطع الفيديو.
- إعادة التسمية: يمكنك من إعادة تسمية الفيديو.
- معلومات الملف: يعرض معلومات ملف الفيديو المحدد.
- ◀ **تحديد/إلغاء تحديد:** باستخدام وظيفة تحديد، يمكنك إرسال ملفات عديدة وحذفها ونقلها ونسخها.
- ◀ **إرسال:** يمكنك إرسال الصورة المحددة من خلال رسالة وسائط ورسالة المجموعة والبريد الإلكتروني وبلوتوث إذا لم تكن محمية من قبل إدارة الحقوق الرقمية (DRM).
- ◀ **سمة الصوت:** يمكنك ضبط فيديو كنغمة رنين الصوت أو نغمة رنين الفيديو.
- ◀ **ترتيب حسب:** يمكنك ترتيب الملفات حسب الاسم أو التاريخ أو نوع الملف.
- ◀ **عرض القائمة:** لعرض الصور كقائمة بسيطة أو مفصلة.
- ◀ **حالة الذاكرة:** يمكنك عرض حالة الذاكرة (الهاتف أو بطاقة الذاكرة الخارجية).
- يمكنك عرض مقطع فيديو باستخدام مشغل الفيديو. يتم عرض ملفات الفيديو في القائمة كصور مصغرة. يمكنك تحديد مقطع الفيديو المطلوب باستخدام المفاتيح لأعلى ولأسفل ولليمين ولليسار. حدد مقطع الفيديو المطلوب وحدد تشغيل لعرض الفيديو المسجل.
- حدد [إرسال] لإرفاق مقطع الفيديو المطلوب إلى رسالة وسائط أو رسالة مجموعة أو بلوتوث.
- عند تحديد الخيار ١. تشغيل، سيتم تشغيل مقطع الفيديو باستخدام مشغل الوسائط. لإيقاف التشغيل مؤقتًا، اضغط على المفتاح OK (موافق) أثناء التشغيل. لمتابعة التشغيل، اضغط على المفتاح OK (موافق) مرة أخرى.
- لالتقاط صورة للشاشة، اضغط على مفتاح الاختيار الأيمن عند توقف التشغيل مؤقتًا.
- لعرض التشغيل الحالي في شاشة كاملة، اضغط على مفتاح الاختيار الأيمن أثناء التشغيل.
- للعودة إلى حجم الشاشة السابقة، اضغط على مفتاح الاختيار الأيمن مرة أخرى في وضع الشاشة الكاملة.
- ◀ **تشغيل/إيقاف مؤقت:** يمكنك تشغيل ملف أو إيقافه مؤقتًا لمدة دقيقة.
- ◀ **إرسال:** يمكنك إرسال مقطع الفيديو من خلال رسالة وسائط أو رسالة المجموعة أو بريد الإلكتروني أو بلوتوث إذا كان الملف غير محمي من قبل إدارة الحقوق الرقمية (DRM).
- ◀ **ذهاب إلى القائمة:** للرجوع إلى القائمة.
- ◀ **سمة الصوت:** يمكنك ضبط فيديو كنغمة رنين الصوت أو نغمة رنين الفيديو.
- ◀ **عرض متسع:** يمكنك عرض الفيديو بشكل متسع.

◀ **التقاط:** يمكنك حفظ الموجود على شاشة التوقف المؤقت في ملف صورة (يتم التنشيط في وضع التوقف المؤقت فقط).

◀ **كتم/إلغاء كتم:** إذا تم ضبط مستوى الصوت على أعلى من ٠٠، فسيتم تنشيط وضع الكتم وإذا تم ضبط مستوى الصوت على ٠٠، فسيتم تنشيط وضع إلغاء الكتم.

◀ **ضبط التكرار:** يمكن ضبط خيار التكرار (بلا/الملف الحالي/ كل الملفات).

◀ **الشكل الخارجي للمشغل:** يمكنك تحديد الشكل الخارجي المطلوب للمشغل.

◀ **نقل إلى ملف**

- الملف السابق: لتشغيل ملف الفيديو السابق.

- الملف التالي: لتشغيل ملف الفيديو التالي.

الصوت

القائمة ٣-٧

يتكون مجلد الصوت من روابط داخلية لتنزيل ملفات الصوت/ الموسيقى من الإنترنت وملفات الصوت الافتراضية وملفات الصوت الخاصة بي ومسجل الصوت.

يمكنك هنا إدارة أو إرسال أو الضبط كأصوات نغمة رنين.

يتوفر ما يلي باستخدام مفتاح الاختيار الأسير [خيارات] في قائمة الصوت.

◀ **تشغيل:** لتشغيل الصوت.

◀ **مجلد جديد:** يمكنك إنشاء مجلد جديد.

◀ **الملفات**

- معلومات الملف: يعرض معلومات ملف الصوت المحدد.

◀ **إرسال:** يمكنك إرسال الصوت المحدد من خلال رسالة وسائط ورسالة المجموعة وبريد إلكتروني وبلوتوث إذا لم تكن محمية من قبل إدارة الحقوق الرقمية (DRM).

◀ **سمة الصوت:** يمكنك ضبط صوت كنغمة رنين صوت أو نغمة رنين فيديو أو نغمة رسالة أو صوت التشغيل/الإيقاف.

◀ **ترتيب حسب:** يمكنك ترتيب الملفات حسب الاسم أو التاريخ أو نوع الملف.

◀ **حالة الذاكرة:** يمكنك عرض حالة الذاكرة (الهاتف أو بطاقة الذاكرة الخارجية).

عند تحديد الخيار ١ تشغيل، سيتم تشغيل الصوت باستخدام مشغل الوسائط. لإيقاف التشغيل مؤقتاً، اضغط على المفتاح OK (موافق) أثناء التشغيل. لمتابعة التشغيل، اضغط على المفتاح OK (موافق) مرة أخرى.

يمكنك دخول القائمة خيار بالضغط على مفتاح الاختيار الأسير حيث تستخدم الوظائف المساعدة المتعددة باستخدام المفاتيح لأعلى ولأسفل.

٩. نقل إلى ملف

◀ الملف السابق: لتشغيل ملف الصوت السابق.

◀ الملف التالي: لتشغيل ملف الفيديو التالي.

٠. الموازن: يمكنك تحديد الموازن المطلوب أو ضبط معرف للمستخدم.

قائمة ٧-٤

التطبيقات

يتم تخزين ActionInLife افتراضياً. ويمكنك تنزيل المزيد من التطبيقات بالضغط على مفتاح الاختيار الأيسر [خيارات] وتحديد توصيل. لمزيد من المعلومات، برجاء الرجوع إلى الصفحة ٨٤.

القائمة ٧-٥

أخرى

يتم تخزين ملفات أخرى غير الصور ومقاطع الفيديو وملفات الصوت والتطبيقات في هذا المجلد. يتم استلامها عن طريق البريد الإلكتروني.

القائمة ٧-٦

بلوتوث

يتم حفظ الملفات التي يتم استلامها باستخدام بلوتوث في هذا المجلد. لا يمكنك إنشاء مجلد فرعي في مجلد بيانات بلوتوث.

انتقل إلى القائمة المطلوبة باستخدام المفاتيح لأعلى ولأسفل واضغط على المفتاح OK (موافق).

١. تشغيل/إيقاف مؤقت: يمكنك تشغيل ملف أو إيقافه مؤقتاً.

٢. إرسال: يمكنك إرسال ملف من خلال رسالة وسانط ورسالة المجموعة وبريد الإلكتروني وبلوتوث إذا لم يكن محمياً من قبل إدارة الحقوق الرقمية (DRM).

٣. الذهاب إلى القائمة: للرجوع إلى القائمة.

٤. معلومات الملف: يمكنك مراجعة المعلومات التي توجد في الملف قيد التشغيل (اسم الملف والحجم والتاريخ والنوع وحالة الحماية).

٥. كتم/إلغاء كتم: إذا تم ضبط مستوى الصوت على أعلى من ٠٠، فسيتم تنشيط وضع إلغاء الكتم وإذا تم ضبط مستوى الصوت على ٠٠، فسيتم تنشيط وضع الكتم.

٦. ضبط التكرار: يمكنك ضبط وضع التكرار.

◀ بلا: يمكنك تحرير وضع التكرار.

◀ الملف الحالي: يمكنك تكرار الملف الحالي.

◀ كل الملفات: يمكنك تشغيل كل الملفات في الدليل الحالي.

٧. تأثير مرني: يمكنك تغيير التأثير المرني للمشغل.

٨. الشكل الخارجي للمشغل: يمكنك تحديد الشكل الخارجي للمشغل المطلوب.

٦. إذا كان الأمر مرتبط، فقم بإنشاء صور مختلفة كملف متحرك بتنسيق GIF.
٧. يمكنك ترتيب الملفات حسب الاسم أو التاريخ أو امتداد الملف.
٨. اعرض الملف (الملفات) في قائمة بسيطة أو مفصلة أو في شبكة.
٩. معلومات الذاكرة (الهاتف أو بطاقة الذاكرة الخارجية).

الذاكرة الخارجية

القائمة ٧-٧

إذا اشتريت بطاقة ذاكرة microSD خارجية اختيارية، يمكنك إدارة المزيد من المحتويات. ارجع إلى القسم "كيفية استخدام بطاقات الذاكرة microSD" لتعلم طريقة تركيب بطاقة الذاكرة وإخراجها. يمكنك إدارة المحتوى باستخدام القوائم التالية كما تفعل في هاتفك.

الصور (القائمة ٧-٧-١)

يوفر نفس الوظائف كذلك الموجودة في قائمة الصور في الهاتف. إذا كانت لديك ذاكرة خارجية مثبتة في الهاتف، يمكنك حفظ صور تم التقاطها بالكاميرا مباشرة إلى الذاكرة الخارجية. بالرغم من أن كل الوظائف مماثلة لتلك الموجودة بالهاتف، فوظيفة صورة الخلفية

بالرغم من إمكانية حفظ كافة أنواع الملفات هنا، يمكنك فقط نسخ أو نقل الملفات التي تتم إدارتها من قبل الوسائط الخاصة بي. لضبط ملف كخلفية أو نغمة رنين، يجب نسخ أو نقل الملف في المجلد المناظر. على سبيل المثال، يمكنك نسخ ملفات *.jpg إلى مجلد صوري وملفات *.mp3 إلى ملفات الصوت الخاصة بي وملفات *.3gp إلى الفيديو الخاص بي. لا يمكنك نسخ الملفات التي لا تتم إدارتها من قبل الوسائط الخاصة بي أو نقلها.

تعتمد الخيارات المعروضة على نوع الملف المحدد. على سبيل المثال، في حالة صورة، يتم دعم الوظائف التالية.

١. عرض/تعديل/نقل/نسخ/حذف/حذف الكل/إعادة تسمية الملف (الملفات).

٢. تحديد/إلغاء تحديد ملف أو الملفات.

٣. يمكنك إرسال ملف من خلال رسالة وسائط وبريد إلكتروني وبلوتوث إذا لم يكن محمياً من قبل إدارة الحقوق الرقمية (DRM).

٤. إذا كان الأمر مرتبطاً، فاضبط صورة خلفية للشاشة الأمامية أو الرئيسية.

٥. إذا كان الأمر مرتبط، يمكنك بدء أو ضبط (عادي أو شاشة كاملة، بأي سرعة) عرض الشرائح.

غير مدعومة. لضبط صورة كخلفية يجب نسخ الصورة أو نقلها إلى الهاتف.

مقاطع الفيديو (القائمة ٧-٢)

يوفر نفس الوظائف كذلك الموجودة في قائمة الفيديو الخاص بي في الهاتف.

الأصوات (القائمة ٧-٣)

يوفر نفس الوظائف كذلك الموجودة في قائمة ملفات الصوت الخاصة بي في الهاتف.

ملفات أخرى (القائمة ٧-٤)

يوفر نفس الوظائف كذلك الموجودة في قائمة أخرى في الهاتف.

قوائم التشغيل

القائمة ٧-٨

يمكنك هذا الخيار من عرض قائمة ملفات الفيديو/الصوت المحفوظة. يمكنك إضافة ملف فيديو/صوت مخزن في الهاتف وبطاقة الذاكرة. اضغط على مفتاح الاختيار الأيسر [خيارات] لعرض عناصر القائمة المنبثقة التالية.

- ◀ **تشغيل:** لتشغيل ملف الفيديو/الصوت المحدد.
- ◀ **إضافة جديد:** يمكنك إضافة ملف جديد من قائمة الفيديو/الصوت.
- ◀ **ترتيب حسب:** يمكنك ترتيب الملفات حسب الاسم والتاريخ ونوع الملف.
- ◀ **حالة الذاكرة:** يمكنك عرض حالة الذاكرة (الهاتف أو بطاقة الذاكرة الخارجية).

ألعاب وتنزيلات

يدعم هذا الهاتف تطبيقات Java™ لذلك يمكنك تنزيل ألعاب وممارستها في الهاتف.

ملاحظة

◀ برجاء ملاحظة أن تنزيل بعض المواد (ألعاب، نغمات رنين، خلفيات وغير ذلك) يتطلب عادة مصاريف إضافية.

ألعاب وتطبيقات

القائمة ١-٨

تُستخدم هذه الذاكرة لتحديد موقع التطبيقات التي يتم تنزيلها وتشغيلها، على سبيل المثال الألعاب.

ألعاب إضافية

القائمة ٢-٨

للتوصيل بصفحة ويب بوابة الألعاب لكي تتمكن من تنزيل الألعاب.

تنزيلات

القائمة ٣-٨

للتوصيل بصفحة الويب لكي تتمكن من تنزيل التطبيقات.

٥. **تحديد الجرس:** حدد الجرس الذي سيرن في وقت المنبه، باستخدام مفاتيح الاتجاهات لليمين ولليسار أو بالضغط على مفتاح الوسط.
٦. **إدخال مذكرة:** أدخل اسم المنبه.
٧. عند اكتمال إعداد ساعة المنبه، اضغط على مفتاح الاختيار الأيمن [تم].

القائمة ٢-٩

الاتصال

بلوتوث (القائمة ٢-٩)

اتصال بلوتوث

- يشتمل الهاتف على تقنية بلوتوث لاسلكية، مما يمكنك من توصيل الهاتف لاسلكيًا بأجهزة أخرى تشتمل على تقنية بلوتوث مثل أجهزة التحدث اللايوي والكمبيوتر PDA والشاشة البعيدة أو هواتف أخرى.
- يمكنك، على سبيل المثال، إجراء محادثة من خلال الأجهزة اللايوية اللاسلكية التي تشتمل على بلوتوث أو تستعرض الإنترنت أو الاتصال لاسلكيًا عبر الهاتف المحمول. كما يمكنك تبادل، على سبيل المثال، بطاقات الأعمال وعناصر التقويم والصور.

ساعة المنبه

القائمة ١-٩

- إذا قمت بضبط ساعة المنبه، فسيظهر، "٢٢" على شريط المؤشر. يصدر المنبه المحدد أصواتًا في الوقت المحدد. اضغط على المفتاح [موافق] لإيقاف المنبه، ويتم تحرير المنبه. اضغط على مفتاح الاختيار الأيمن [غفوة] واختر الفترة الزمنية للغفوة. يتوقف صوت المنبه ثم يعود مجددًا بعد فترة الغفوة المحددة. بإمكانك تعيين حتى ٥ منبهات.
١. حدد المنبه المطلوب لتهيئة قائمة المنبه. في حالة عدم وجود منبه، اضغط على مفتاح الاختيار الأيمن [إضافة] لإضافة منبه جديد.
 ٢. **ضبط/إلغاء المنبه:** اضبط المنبه أو قم بإلغائه باستخدام الخيارات لتحديد إيقاف المنبه أو باختيار وقت المنبه.
 ٣. **إدخال وقت المنبه:** أدخل وقت المنبه المطلوب عن طريق تحديد الساعة والدقيقة. اختر إما صباحًا أو مساءً مرني إذا كان التنسيق ١٢ ساعة محددًا للهاتف.
 ٤. **تحديد وضع التكرار:** حدد وضع التكرار المطلوب باستخدام مفاتيح الاتجاهات لليسار ولليمين أو من القائمة بالضغط على مفتاح الوسط.

ملاحظة

◀ نوصي بأن يكون الهاتف وجهاز البلوتوث المتصل به في نطاق ١٠ أمتار. قد يتحسن الاتصال في حالة عدم وجود أشياء صلبة بين الهاتف والجهاز الآخر الذي يستخدم تقنية بلوتوث.

١. بدء التشغيل

• القائمة ← ٩. المزيد ← ٢. التوصيل

← ١. بلوتوث ← ١. أجهزة مقترنة

لاستخدام وظيفة بلوتوث، يجب أولاً ضبط البلوتوث على الوضع "تشغيل". أكمل الإجراءات الواردة أعلاه لضبط البلوتوث على "تشغيل".

٢. تهيئة إعدادات البلوتوث

• القائمة ← ٩. المزيد ← ٢. التوصيل

← ١. بلوتوث ← ٢. الإعدادات

- **بلوتوث:** لاستخدام وظيفة بلوتوث، اضبطها على وضع [تشغيل].
وإلا، فاضبطها على وضع [إيقاف].

- **رؤية هاتف:** اضبط [حالة رؤية هاتف] على [إظهار للكل] بحيث تستطيع الأجهزة الأخرى اكتشاف الهاتف عند قيامها بالبحث عن أجهزة تشتمل على تقنية بلوتوث. إذا حددت [مخفي]، فلن تتمكن الأجهزة الأخرى من اكتشاف هاتفك عند قيامهم بالبحث عن أجهزة تشتمل على تقنية بلوتوث.

- **اسم الهاتف:** يمكنك تسمية أو إعادة تسمية الهاتف حيث سيظهر الاسم للأجهزة الأخرى. سيظهر اسم هاتفك للأجهزة الأخرى فقط عند ضبط [رؤية هاتف] على [إظهار للكل].

٣. أجهزة مقترنة

أجهزة مقترنة (مقترنة بالهاتف)

في حالة وجود جهاز بلوتوث مقترن بالفعل،

• القائمة ← ٩. المزيد ← ٢. التوصيل

← ١. بلوتوث ← ١. أجهزة مقترنة

← خيارات ← إضافة جديد

في حالة عدم وجود أجهزة بلوتوث مقترنة،

• القائمة ← ٩. المزيد ← ٢. التوصيل

← ١. بلوتوث ← ١. أجهزة مقترنة ← إضافة

خيارات

١. **إضافة جديد:** باستخدام هذه القائمة، يمكنك إقران جهاز بلوتوث جديد بالهاتف.

٢. **تخصيص اسم قصير:** باستخدام هذه القائمة، يمكنك إعادة تسمية جهاز مقترن كما هو مطلوب.

٣. توصيل/فصل الجهاز

◀ يسمح تحديد خيار توصيل بتنشيط الاتصال باستخدام بلوتوث.

◀ إذا أردت إغلاق الاتصال بالجهاز المحدد، فحدد فصل.

٤. **حذف:** باستخدام هذه القائمة، يمكنك حذف جهاز بلوتوث المقترن.

٥. **حذف الكل:** باستخدام هذه القائمة، يمكنك حذف كل أجهزة بلوتوث المقترنة.

◀ للبحث عن جهاز بلوتوث للاتصال به، اضغط على المفتاح أعلاه.

◀ تظهر شاشة "جارِ البحث عن أجهزة".

سيتم العثور على أجهزة بلوتوث التي توجد في نطاق ١٠ أمتار.

◀ في حالة العثور على أجهزة بلوتوث، فسيتم عرض هذه الأجهزة على الشاشة. في حالة عدم العثور على أجهزة

بلوتوث، فسيتم سؤالك عما إذا كنت ترغب في البحث مرة أخرى.

◀ إجراء الاقتراح

- ضغط على المفتاح ربط. ستظهر نافذة على الشاشة تطلب إدخال كلمة المرور.

- بعد إنشاء كلمة المرور (مكونة من ١ إلى ١٦ رقمًا)، يجب أن يقوم مستخدم الجهاز الآخر بإدخال كلمة المرور ليتم الاقتراح. يجب أن يعرف مستخدم الجهاز الآخر كلمة المرور مسبقًا للتحقق من صحته.

- إذا صادق الطرف الآخر على صحة الاتصال، يتم عرض قائمة الأجهزة المقترنة على الشاشة ويمكنك استخدام الهاتف للاتصال بالأجهزة الأخرى.

> فصل الأجهزة<

١. حدد جهازًا للفصل من شاشة الأجهزة المقترنة.

٢. يمكنك فصل جهاز بالضغط على مفتاح حذف أو عن طريق تحديد خيارات — حذف. لفصل كافة الأجهزة المقترنة، حدد خيارات — حذف الكل.

<نقل البيانات عبر بلوتوث>

١. لنقل البيانات من الهاتف إلى جهاز بلوتوث آخر، قم أولاً بتحديد التطبيق الذي سيتم حفظ البيانات المطلوبة فيه. على سبيل المثال، لإرسال بيانات في اليوم الوسائط إلى جهاز آخر، حدد القائمة ← ٧. اليوم الوسائط ← ١. صور / ٢. مقاطع فيديو / ٣. ملفات صوت ← حدد البيانات لنقلها ← إرسال ← ٤. بلوتوث

٢. إرسال البيانات

- في حالة وجود جهاز بلوتوث مقترن،

- (١) حدد الجهاز المطلوب من الأجهزة المقترنة المعروضة على الشاشة.

- (٢) إذا حدد الطرف الآخر [نعم] - [طلب اتصال]، فسيتم نقل البيانات.

- في حالة عدم وجود أجهزة بلوتوث مقترنة،

- (١) حدد بحث للبحث عن أجهزة بلوتوث قريبة للتوصيل.

- (٢) حدد الجهاز الذي تريد نقل البيانات إليه من الأجهزة المعروضة على الشاشة واضغط على المفتاح دفع.

- (٣) إذا حدد الطرف الآخر [نعم] - [طلب اتصال]، فسيتم نقل البيانات.

<استلام البيانات عبر بلوتوث>

- القائمة ← ٩. المزيد ← ٢. التوصيل ← ١. بلوتوث ← ١. أجهزة مقترنة

١. إذا قمت بتمكين وظيفة بلوتوث كما هو موضح أعلاه، فيمكنك توصيل الهاتف بأجهزة بلوتوث أخرى.

٢. إذا حاول طرف آخر نقل البيانات، فسيظهر السؤال [طلب اتصال] على الشاشة. إذا حددت [نعم]، سيتم نقل البيانات إلى الهاتف. أثناء نقل البيانات، يومض رمز البلوتوث.

<مجلد تخزين بيانات بلوتوث>

- يمكنك التحقق من البيانات المستلمة عن طريق تحديد القائمة ← ٧. اليوم الوسائط ← ٦. بلوتوث.

٤. الجهاز

<توصيل هاتف>

١. حدد القائمة ← ٩. المزيد ← ٢. التوصيل ← ١. بلوتوث


٢. صل الهاتف حسب الإجراءات الموضحة في قسم الأجهزة المقترنة.

(القائمة ٩-٢-٢)

مزمنة الخادم

إذا كانت شبكة المشغل تدعم خدمة المزمنة، تقوم هذه وظيفة الخدمة هذه بمزمنة البيانات في الهاتف والبيانات الموجودة على الخادم، على سبيل المثال جهات الاتصال والتقويم والمهام، ويكون ذلك من خلال شبكة لاسلكية.


اتصال

١. حدد عنصر الاتصال ثم اضغط .
٢. اتصل بالخادم من خلال وضع الخادم وسيظهر الرسم المتحرك الخاص بالمزمنة أثناء إجراء المزمنة.

سجلات

حدد عنصر السجلات واضغط  لعرض السجل الخاص بأخر عملية مزمنة تمت.

مركز مزمنة الخادم

١. حدد عنصر مركز مزمنة الخادم واضغط .
 ٢. تتيح هذه القائمة تهيئة الوضع الخاص بخادم المزمنة.
- ◀ اسم الوضع: أدخل اسم الوضع.
- ◀ عنوان المضيف: اتصل بمزود الخدمة.

٣. لاستخدام الهاتف، حدد الهاتف من الأجهزة المسجلة، واضغط على المفتاح خيار ثم حدد ٣. توصيل.

٤. للتحقق من توصيل الهاتف المحدد بنجاح، اضغط على المفتاح خيار. في حالة التوصيل بشكل صحيح، فسيظهر ٣. فصل. في حالة عدم التوصيل، فسيظهر ٣. توصيل.

<توصيل الطقم اللايدي>

١. القائمة ← ٩. المزيد ← ٢. التوصيل ← ١. بلوتوث
٢. صل الطقم اللايدي حسب الإجراءات الموضحة في قسم الأجهزة المقترنة.

٣. لاستخدام الطقم اللايدي، حدد الهاتف من الأجهزة المسجلة، واضغط على المفتاح خيار ثم حدد ٣. توصيل.

٤. للتحقق من توصيل الطقم اللايدي المحدد بنجاح، اضغط على المفتاح خيار. في حالة التوصيل بشكل صحيح، فسيظهر ٣. فصل. في حالة عدم التوصيل، فسيظهر ٣. توصيل.

- النسخة الاحتياطية

يقوم الهاتف بإرسال كافة البيانات من قاعدة البيانات إلى الخادم. ومن المتوقع أن يقوم الخادم باستبدال كافة البيانات في قاعدة البيانات الهدف بالبيانات التي أرسلها الهاتف. ويعني ذلك أن الهاتف يستبدل كافة البيانات الموجودة في قاعدة بيانات الخادم.

- الاستعادة

يقوم الخادم بإرسال كافة البيانات الخاصة به من قاعدة بيانات إلى الهاتف. من المتوقع أن يقوم الهاتف باستبدال كافة البيانات الموجودة في قاعدة البيانات الهدف بالبيانات التي أرسلها الخادم. ويعني ذلك أن الخادم يستبدل كافة البيانات الموجودة في قاعدة بيانات الهاتف.

◀ **نقطة الوصول:** حدد نقطة وصول لاستخدامها لاتصال البيانات.

اتصال الطلب الهاتف (القائمة ٩,٢,٣)

تستطيع استخدام الهاتف مع العديد من تطبيقات اتصال الكمبيوتر واتصالات البيانات. حدد USB أو بلوتوث لاستخدامه في اتصال البيانات.

◀ **عنوان IP الخاص بالوكيل:** أدخل عنوان عبارة WAP ورقم المنفذ. اسم المستخدم: أدخل معرف المستخدم لخادم المزامنة.

◀ **كلمة المرور:** أدخل كلمة المرور الخاصة بك.

◀ **جهات الاتصال:** حدد ما إذا كانت ستتم مزامنة جهات الاتصال أم لا.

◀ **اسم جهة الاتصال:** أدخل اسم قاعدة بيانات جهات الاتصال للوصول للخادم.

◀ **التقويم:** حدد ما إذا كانت ستتم مزامنة التقويم أم لا.

◀ **اسم التقويم:** أدخل اسم قاعدة بيانات التقويم للوصول للخادم.

◀ **المهام:** حدد ما إذا كانت ستتم مزامنة المهام أم لا.

◀ **اسم المهمة:** أدخل اسم قاعدة بيانات المهام للوصول للخادم.

◀ **نوع المزامنة:** حدد نوع المزامنة مما يلي.

- عادية

يجب أن يتبادل الهاتف والخادم المعلومات حول البيانات المعدلة.

الحاسبة

القائمة ٣-٩

لديك حاسبة تقوم بأربع عمليات حسابية هي الجمع والطرح والضرب والقسمة بالإضافة إلى الوظائف العلمية.

١. اضغط على [الوظائف].

٢. حدد الوظيفة المناسبة.

٣. حدد OK (موافق).

يمكنك إدخال الأرقام باستخدام مفاتيح الأرقام والمعاملات باستخدام مفاتيح الاتجاهات لأعلى ولأسفل ولليمين ولليسار. يمكنك إدخال علامة عشرية بالضغطة على المفتاح #. عند الضغطة على المفتاح مسح، يتم مسح الحروف على الترتيب في اتجاه معاكس. عند الضغطة على المفتاح مسح لفترة طويلة، يتم مسح كل الحروف في اتجاه معاكس بضغطة واحدة.

عند اكتمال العملية الحسابية وعرض النتيجة على الشاشة، يؤدي الضغطة على رقم إلى مسح النتيجة السابقة وتنتظر الحاسبة لإدخال

جديد، حتى لو لم تضغط على المفتاح AC. عند اكتمال العملية الحسابية وعرض النتيجة على الشاشة، يؤدي الضغطة على رمز إلى حفظ النتيجة في الرموز ومتابعة العملية الحسابية.

التوقيت العالمي

القائمة ٤-٩

توفر وظيفة التوقيت العالمي معلومات وقت عن المدن الكبرى في العالم.

١. حدد التوقيت العالمي.

٢. يمكنك عرض الدولة المطلوبة أو المدينة باستخدام مفتاح الاختيار الأيمن أو الأيسر.

٣. يمكنك تحديد المدينة المطلوبة كأساس باستخدام [ضبط].

٤. المدينة محل الإقامة المحددة في التوقيت العالمي هي الأساس لحساب التوقيت الصيفي.

محول الوحدة

القائمة ٥-٩

باستخدام هذه القائمة، يستطيع المستخدمون تحويل العملة والسطح والطول والوزن ودرجة الحرارة، والكمية والسرعة.

العملة (القائمة ٩-٥-١)

١. حدد قائمة العملة.
٢. يستطيع المستخدمون ضبط سعر صرف العملة باستخدام [السعر].
٣. أدخل سعر صرف العملة لخمس عملات مساوية للجنيه الإسترليني ثم اضغط على [ثم]. ثم يمكن التحويل من عملة إلى أخرى.
٤. حدد الوحدات المطلوبة للتحويل ثم قم بالتحويل باستخدام المفتاح OK (موافق) [قائمة].
٥. أدخل الأرقام. يتم حساب التحويل تلقائيًا.
٦. اضغط على [إعادة الضبط] لمسح حقول الإدخال الحالي.

السطح (القائمة ٩-٥-٢)

١. حدد قائمة السطح.
٢. حدد الوحدة المطلوبة للتحويل باستخدام [الوحدة].
٣. أدخل الوحدة القياسية واعررض القيمة المحولة.
٤. اضغط على [إعادة الضبط] لمسح حقول الإدخال الحالي وضع المؤشر في حقول الإدخال.

الطول (القائمة ٩-٥-٣)

١. حدد قائمة الطول.
٢. حدد الوحدة المطلوبة للتحويل باستخدام [الوحدة].
٣. أدخل الوحدة القياسية واعررض القيمة المحولة.
٤. اضغط على [إعادة الضبط] لمسح حقول الإدخال الحالي وضع المؤشر في حقول الإدخال.

الوزن (القائمة ٩-٥-٤)

١. حدد قائمة الوزن.
٢. حدد الوحدة المطلوبة للتحويل باستخدام [الوحدة].
٣. أدخل الوحدة القياسية واعررض القيمة المحولة.
٤. اضغط على [إعادة الضبط] لمسح حقول الإدخال الحالي وضع المؤشر في حقول الإدخال.

درجة الحرارة (القائمة ٩-٥-٥)

١. حدد قائمة درجة الحرارة.
٢. ضع المؤشر في الوحدة المطلوبة باستخدام مفاتيح الأسهم لأعلى ولأسفل.

٣. أدخل الوحدة القياسية واعررض القيمة المحولة.

٤. اضغط على [إعادة الضبط] لمسح حقل الإدخال الحالي وضع المؤشر في حقل الإدخال.

الحجم (القائمة ٩-٥-٦)

١. حدد قائمة الكمية.

٢. حدد الوحدة المطلوبة للتحويل باستخدام [الوحدة].

٣. أدخل الوحدة القياسية واعررض القيمة المحولة.

٤. اضغط على [إعادة الضبط] لمسح حقل الإدخال الحالي وضع المؤشر في حقل الإدخال.

السرعة (القائمة ٩-٥-٧)

١. حدد قائمة السرعة.

٢. حدد الوحدة المطلوبة للتحويل باستخدام [الوحدة].

٣. أدخل الوحدة القياسية واعررض القيمة المحولة.

٤. اضغط على [إعادة الضبط] لمسح حقل الإدخال الحالي وضع المؤشر في حقل الإدخال.

شاشة العرض

تسمح هذه القائمة بتخصيص خيارات العرض الخاصة بالشاشة والواجهة الرسومية الكاملة للقائمة.

سمة الشاشة

القائمة ١-*

يمكنك ضبط سمة الشاشة للعرض على الشاشة الرئيسية.

الشاشة الرئيسية (القائمة ١-١)

◀ خلفية: يمكنك تحديد صورة لضبطها كخلفية.

◀ عناصر العرض: يمكنك تحديد العناصر التي يتم عرضها على الشاشة: التقويم + الشاشة، التقويم، الساعة، الساعة المزدوجة، لا تعرض.

عند تحديد عنصر تقويم للعرض، يمكنك ضبط نوع التقويم. عند تحديد عنصر ساعة للعرض، يمكنك ضبط نوع الساعة ولون خط الساعة.

المكالمات الصادرة (القائمة ١-٢)

يمكنك ضبط الصورة للعرض أثناء الاتصال برقم.

تشغيل (القائمة ١-٣)

يمكنك تحديد الصورة للعرض أثناء تشغيل الهاتف.

إيقاف التشغيل (القائمة ١-٤)

يمكنك تحديد صورة للعرض أثناء إيقاف تشغيل الهاتف.

سمة الشاشة الأمامية

القائمة ٢-*

يمكنك ضبط سمة الشاشة للعرض على الشاشة الأمامية.

الشاشة الرئيسية (القائمة ١-٢)

◀ خلفية: يمكنك تحديد صورة للعرض في الشاشة الأمامية.

◀ نوع الساعة: يمكنك ضبط نوع الساعة المطلوب من لا تعرض أو صغيرة أو كبيرة. عند تحديد نوع الساعة "صغيرة"، يمكنك ضبط لون خط الساعة.

◀ لون حروف الساعة: حدد لون خط الساعة المطلوب.

المكالمات الصادرة (القائمة *٢-٢)

يمكنك ضبط صورة للعرض أثناء الاتصال برقم.

الإضاءة الخلفية

قائمة *٣

يمكنك ضبط مدة الإضاءة الخلفية في الشاشة الرئيسية والشاشة الأمامية ولوحة المفاتيح.

الخط

القائمة *٤

يمكنك ضبط نمط الخط وحجم خط الاتصال ولون خط الاتصال باستخدام مفاتيح التنقل لليسار/اليمين.

نظام الهاتف

القائمة *٥

تحديد نظام الهاتف المطلوب بين البرتقالي والمعدني.

تنزيل المزيد

القائمة *٦

للاتصال بالإنترنت. ويمكنك تنزيل صور للعرض.

تسمح قائمة الأوضاع بتخصيص وضبط نغمات الاتصال ونغمات الرسائل ونغمات أحداث هاتف الفيديو.

يتم ضبط الوضع عام والوضع عالٍ من قبل الجهة المصنعة ولكن يمكنك تخصيصها.

يتم ضبط الوضع صامت واهتزاز ولا يمكن تخصيصهما من قبل المستخدم.

تتوفر القوائم المعرفة للمستخدم ١ و ٢ و ٣ بالكامل للمستخدمين لتلبية كل احتياجاتهم.

١. عادي

٢. صامت

٣. اهتزاز فقط

٤. بالخارج

٥. هاتف

٦. مخصص ١

٧. مخصص ٢

٨. مخصص ٣

قد يتم تخصيص الأوضاع في القوائم التالية:

◀ **تنبيه حسب:** يمكنك تخصيص نوع الإشارة التي يصدرها هاتف الفيديو، والاختيار بين رنين واهتزاز وصامت، رنين واهتزاز، ورنين بعد اهتزاز، أقصى رنين واهتزاز.

◀ **نغمة رنين الصوت:** يمكنك تحديد ملف من الملفات الشخصية أو من الملفات الافتراضية، ليتم تشغيله باستخدام هاتف الفيديو عند استلام مكالمات صوت.

◀ **نغمة رنين الفيديو:** يمكنك تحديد ملف من الملفات الشخصية أو من الملفات الافتراضية، ليتم تشغيله باستخدام هاتف الفيديو عند استلام مكالمات فيديو.

◀ **مستوى الصوت:** يمكنك ضبط مستوى صوت نغمة الرنين، والاختيار من بين ٧ مستويات متاحة.

◀ **تنبيه الرسالة:** يمكنك ضبط عدد المرات التي يخبرك فيها هاتف الفيديو عن استلام رسالة حتى يتم قراءتها.

◀ **نغمة الرسالة:** يمكنك تحديد ملف من الملفات الشخصية أو من الملفات الافتراضية، ليتم تشغيله باستخدام هاتف الفيديو عند استلام رسالة.

◀ **نغمة المفاتيح:** يمكنك ضبط التأثير ليتم تشغيله عند الضغط على المفاتيح.

- ◀ **مستوى صوت نغمة المفاتيح:** يمكنك ضبط مستوى صوت التأثير الذي تم اختياره، والاختيار من بين ٧ مستويات متاحة.
- ◀ **نغمة الغطاء:** يمكنك تحديد أحد الملفات المتاحة ليتم تشغيله باستخدام هاتف الفيديو عند فتح الغطاء.
- ◀ **نغمة التأكيد:** يمكنك ضبط نغمة التأكيد ليتم تشغيلها باستخدام هاتف الفيديو لتأكيد الأحداث.
- ◀ **تشغيل الصوت:** يمكنك ضبط التأثير الذي سيتم تشغيله عند تشغيل هاتف الفيديو.
- ◀ **تشغيل الملف:** يمكنك تحديد ملف ليتم تشغيله عند تشغيل هاتف الفيديو.
- ◀ **إيقاف تشغيل الصوت:** يمكنك ضبط التأثير الذي سيتم تشغيله عند إيقاف تشغيل هاتف الفيديو.
- ◀ **إيقاف تشغيل الملف:** يمكنك تحديد ملف ليتم تشغيله عند إيقاف تشغيل هاتف الفيديو.

التقويم

بحث واستعلام الجدول

١. المرجع بالشهور

يمكنك الرجوع إلى الجدول بالشهور. المؤشر موجود في التاريخ الحالي والتاريخ المسجل موضوع تحته خط.

يتم عرض الجدول المحفوظ للتاريخ حيث يوجد المؤشر باستخدام رمز. يؤدي الضغط على مفتاح الاختصار ١ إلى الانتقال إلى السنة السابقة وضغط المفتاح ٣ إلى الانتقال إلى السنة التالية والضغط على المفتاح ٥ إلى الانتقال إلى اليوم الحالي. يؤدي الضغط على المفتاح ٧ إلى الانتقال إلى الشهر السابق ويؤدي الضغط على المفتاح ٩ إلى الانتقال إلى الشهر التالي. يمكنك الانتقال إلى التاريخ باستخدام أسهم الاتجاهات لليمين ولليسار ولأعلى ولأسفل.

٢. المرجع بالأيام

يؤدي الضغط على المفتاح "عرض" في المرجع بالشهر إلى الانتقال إلى المرجع باليوم حيث يمكنك الرجوع إلى الجدول حسب الأيام. يمكنك الرجوع إلى علامة تبويب التاريخ المتنقلة باستخدام المفتاح لليمين ولليسار. وكنتيجة بحث، يتم عرض محتويات جدول مختصرة


وتهيئة إعداد التكرار وتهيئة إعداد المنبه. يمكنك إرسال الجدول إلى هاتف آخر أو موقع إنترنت خلال رسالة SMS (رسالة نصية) أو رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

٣. مرجع مفصل

يمكنك الرجوع إلى جدول مفصل، حيث تتم تهيئة كافة محتويات الجدول بواسطة المستخدم. يمكنك إرسال الجدول إلى هاتف آخر أو موقع إنترنت خلال رسالة SMS (رسالة نصية) أو رسالة وسائط أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

البحث في جدول

يمكنك إضافة جدول. كما يمكنك تهيئة تاريخ البدء ووقت البدء ووقت النهاية والموضوع ومنبه الجدول والتكرار وتاريخ انتهاء الصلاحية.

خيارات التكرار القابلة للتهيئة	
الرمز غير موجود	مرة واحدة
	يومياً
	أسبوعياً
	شهرياً
	سنوياً
	إعداد المستخدم

إخطار الجدول

إذا قام المستخدم بتهيئة إعداد المنبه، فسيصدر المنبه المحدد صوتاً. إذا كان وقت الإخطار قبل وقت بدء الجدول، فيمكنك إعداد التنبيه مرة أخرى.

المهام

قائمة #٢

يمكنك عرض وتعديل وإضافة وظائف إلى المهام. يتم عرض المهام المطلوب عملها بترتيب زمني. يتم عرض المهام المنتهية بالفعل والمهام غير المنتهية بطرق مختلفة.

إضافة


لإضافة مهمة، اضغط على المفتاح "إضافة" في شاشة إدارة قائمة المهام. ثم أدخل التاريخ والوصف والأولوية للمهمة.

عند اكتمال الإدخال، اضغط على المفتاح "تم" لحفظ المهمة الجديدة.

تعديل وعرض مفصل

لعرض المحتويات المفصلة لمهمة، ضع المؤشر على العنصر المطلوب في قائمة المهام ثم اضغط على المفتاح OK (موافق). يمكنك تعديل وحذف وظيفة باستخدام "خيار". يمكنك أيضاً حذف العديد من الوظائف أو كلها في وقت واحد باستخدام المفتاح تحديد/إلغاء تحديد في القائمة.

خيارات التنبيه القابلة للتهيئة

لا يوجد منبه	الرمز غير موجود
وقت التشغيل	
قبل ١٥ دقيقة	
قبل ٣٠ دقيقة	
قبل ساعة	
قبل يوم	
قبل ٣ أيام	
قبل أسبوع	

حذف جدول

١. الإدخالات السابقة

يمكنك حذف كل الإدخالات السابقة باستخدام هذه الوظيفة.

٢. كل الإدخالات

يمكنك حذف كل محتويات الجدول المحفوظة باستخدام هذه الوظيفة.

إعداد وتحرير العطلات

يمكنك إعداد عطلات المستخدم (في اليوم).


ضبط حالة المهمة

يتم عرض المهام المنتهية وعليها علامة خطأ أسفل المهام غير المنتهية في قائمة المهام. يمكنك ضبط المهام المنتهية إلى مهام غير منتهية عن طريق تحديد "خيار". حدد "إرسال ب" من "خيار" لإرسال المهام المحددة من خلال رسالة نصية أو رسالة وسائط متعددة أو رسالة مجموعة أو بريد إلكتروني أو بلوتوث.

المذكرة

باستخدام وظيفة إدارة المذكرة، يمكنك عرض وإدارة محتويات المذكرة المحفوظة وإضافة مذكرة جديدة.

إضافة مذكرة

لإضافة مذكرة جديدة، اضغط على "إضافة". يمكنك تحديد رقم أو حروف إنجليزية صغيرة أو حروف إنجليزية كبيرة باستخدام . يمكنك إدخال رموز أو عبارات مفيدة. يمكنك حفظ محتويات المذكرة الحالية وإضافتها إلى القائمة بالضغط على مفتاح "تم".

نقل إلى مذكرة سرية

يمكنك ضبط مذكرة كمذكرة سرية. ينبغي إدخال رمز الحماية.

تعديل مذكرة وحذفها

ضع المؤشر على المذكرة المطلوبة واضغط على المفتاح لعرض كل محتويات المذكرة. تعرض هذه الوظيفة كل محتويات المذكرة. يمكنك تعديل محتويات المذكرة أو حذفها باستخدام المفتاح "خيار". يمكنك الرجوع إلى شاشة إدارة المذكرة بالضغط على المفتاح "مسح". يمكنك تحديد كل المذكرات أو مذكرات متعددة باستخدام الخيار تحديد/إلغاء تحديد ثم حذف المذكرة بالضغط على المفتاح "حذف".

مذكرة سرية

القائمة # - ٤

يمكنك في هذه القائمة إنشاء مذكرة سرية. ينبغي إدخال رمز الحماية.

محدد التاريخ

القائمة # - ٥

يعرض محدد التاريخ عدد الأيام المتبقية أثناء تغيير التاريخ.

عداد التاريخ

القائمة # - ٦

١. اضغط على [إضافة] وأدخل التاريخ المطلوب في حقل التاريخ.

مسح الكل (القائمة #٧-٣)

يسمح بحذف كل العناصر المحفوظة، ينبغي إدخال رمز الحماية.

٢. أدخل نصًا في حقل [ملاحظات] واضغط على [تم].

٣. لعرض المحتويات المفصلة لمهمة، ضع المؤشر على العنصر المطلوب في قائمة عداد التاريخ ثم اضغط على المفتاح OK (موافق). يتم عرض تفاصيل العنصر المحدد مع يوم وقوع الحدث في صفحة "عرض تفاصيل".

٤. يمكنك تعديل عنصر عداد التاريخ وحذفه باستخدام "خيارات".

٥. يمكنك أيضًا حذف العديد من العناصر المحددة في عداد التاريخ وحذفها، بتحديد عناصر متعددة وحذف.

الإعدادات

القائمة #٧-٧

التقويم (القائمة #٧-١)

يمكنك تغيير عرض التقويم الافتراضي ووقت البدء الأسبوعي للخيارات المطلوبة. اضغط على مفتاح الاختيار الأيمن [تم] لحفظ الإعدادات في الهاتف.

معلومات الذاكرة (القائمة #٧-٢)

تسمح بعرض كل حالة ذاكرة لقائمة التقويم.

استكشاف الأخطاء وإصلاحها

الرجاء التحقق لمعرفة ما إذا كانت أية مشكلة تواجهها في هاتفك موصوفة هنا قبل أخذ الهاتف للصيانة أو الاتصال بمهندس صيانة.

- س** كيف يمكنني عرض قائمة المكالمات الصادرة والواردة والمكالمات التي لم يرد عليها؟
- ج** اضغط على .
- س** كيف يمكنني مسح كل سجل المكالمات؟
- ج** اضغط على المفتاح القائمة و  -  -  - خيارات - حذف الكل.
- س** لا يفتح الرمز  من الشاشة.
- ج** تحقق مما إذا كنت في منطقة خدمة. إذا استمر عرض الرمز ، فقم بإيقاف تشغيل الهاتف وانتظر لمدة دقيقتين تقريباً قبل تشغيله مرة أخرى. إذا لم يحدث أي تغيير، فقم بنقل الهاتف إلى مكان آخر والتحقق مرة أخرى.
- س** الاتصال رديء أو غير مسموع في مناطق معينة.
- ج** قد تختلف قوة الإشارة في بعض المناطق اختلافاً جذرياً. قم بتجربة الانتقال على موقع مختلف. قد تؤثر حركة المرور الكثيفة على الشبكة على القدرة على الاتصال أو على استقرار المكالمة.
- س** الاتصال رديء حتى عند إجرائه.
- ج** قد تختلف قوة الإشارة في بعض المناطق اختلافاً جذرياً. قم بتجربة الانتقال على موقع مختلف. قد تؤثر حركة المرور الكثيفة على الشبكة على القدرة على الاتصال أو على استقرار المكالمة.
- س** لا يتم تشغيل شاشة LCD.
- ج** أخرج البطارية وأعد وضعها ثم قم بتشغيل الهاتف. إذا استمر عدم تشغيل الهاتف، فقم بتغيير البطارية والمحاولة مرة أخرى.

س يتم سماع صدى صوت أثناء الاتصال باستخدام الهواتف في بعض المناطق.

ج يسمى ذلك (ظاهرة الصدى). وهي تحدث إذا كان الصوت مرتفعاً للغاية أو تم إصداره بواسطة خصائص خاصة (نصف سنترال هاتفي إلكتروني) في الجهاز الموجود في الطرف الآخر.

س يشحن الهاتف.

ج قد ترتفع درجة حرارة الهاتف أثناء المكالمات الطويلة، أو عند استخدام الألعاب/الإنترنت لفترة. يعتبر ذلك أمراً طبيعياً وليس له أي تأثير على عمر المنتج أو الأداء.

س الجرس لا يرن أو المصباح أو شاشة LCD تومض فقط.

ج الهاتف مضبوط على "اهتزاز" أو "صامت" في قائمة الأوضاع. يرجاء تحديد "عام" أو "بالخارج".

س تصبح فترة الانتظار أقصر تدريجياً.

ج البطاريات لها عمر محدود. عندما ينقضي نصف العمر الأصلي للبطارية، يجب تغييرها. استخدم الأجزاء البديلة المخصص بها فقط.


س يصبح وقت استخدام البطارية أقصر.

ج إذا كان وقت استخدام البطارية قصير، فقد يكون ذلك بسبب بيئة المستخدم أو إجراء عدد كبير من المكالمات أو ضعف الإشارة.

س لا يتم الاتصال بأي رقم عند إعادة الاتصال برقم في دفتر هاتف.

ج تحقق من حفظ الأرقام بشكل صحيح باستخدام ميزة البحث في دفتر الهاتف. قم بإعادة حفظها إذا لزم الأمر.

س لا يمكن لأحد الاتصال بك.

ج هل الهاتف في وضع التشغيل (تم الضغط على  لأكثر من 3 ثوان)؟ هل تتصل بالشبكة الخلوية الصحيحة؟ هل قمت بتعيين خيار حظر المكالمات الواردة؟

س لا يمكنني العثور على القفل أو رمز PUK أو PIN أو كلمة السر؟

ج رمز القفل الافتراضي هو "0000". إذا نسيت أو فقدت رمز القفل، فاتصل بموزع الهاتف. إذا نسيت PUK أو PIN أو إذا لم تتلق هذا الرمز، أو إذا لم تتلق هذا الرمز، فاتصل بموفر خدمة الشبكة.

يتوفر العديد من الملحقات للهاتف المحمول. يمكنك تحديد هذه الملحقات حسب متطلبات الاتصال الشخصي. استشر الوكيل المحلي حول توفر هذه الملحقات.



مجموعة البيانات (مرفقة في المجموعة الأساسية)

تتكون مجموعة البيانات من كابل بيانات USB ووحدة تشغيل الأقراص المضغوطة، وتسمح بتوصيل الهاتف بالكمبيوتر في القرص المضغوط، توجد برامج مثل:

- PC-Sync: لتزامن الكمبيوتر المحمول مع الكمبيوتر وتطبيق Outlook.

- Phone Manager: لتنزيل الخلفيات ونغمات الرنين ومقاطع الفيديو في الهاتف.

- Internet Kit: لاستخدام الهاتف كمودم للتوصيل بالكمبيوتر.

* عند التنصيب، تأكد من التوصيل بالكمبيوتر بعد توصيل الهاتف والكابل. وإلا، فقد تحدث مشكلة من الكمبيوتر.

ملاحظة

قد تختلف البرامج المعروضة أعلاه حسب إصدار القرص المضغوط والسوق.

ملاحظة

استخدم دائماً ملحقات LG الأصلية. قد يؤدي عدم القيام بذلك إلى إبطال صلاحية الضمان.

قد تختلف الملحقات في المناطق المختلفة: لذا يرجى مراجعة شركة الخدمة الإقليمية التابعة لنا أو وكيلنا في حالة وجود مزيد من التساؤلات.



شاحن التيار المتردد (مرفق في المجموعة الأساسية)

 
يسمح هذا المهامى بشحن الهاتف الجوال أثناء التواجد في المنزل أو المكتب.



بطارية قياسية

(مرفقة في المجموعة الأساسية)

تتوفر بطارية قياسية.



سماعة الرأس الاستريو

(مرفقة في المجموعة الأساسية)

تتيح التحدث في الوضع اللايدي. يتضمن سماعة الأذن وميكروفون.

MEMO

MEMO

MEMO

MEMO

| KU730 | USER GUIDE

This document is the user guide for the LG KU730 3G Video Mobile Phone. All rights for this document are reserved by LG Electronics. Copying, modifying and distributing this document without the consent of LG Electronics are prohibited.

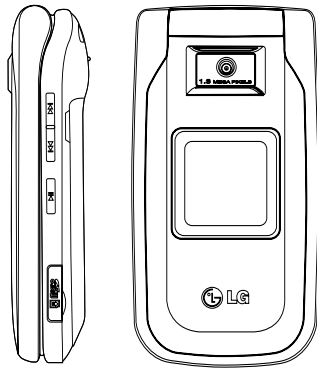 


Table of Contents

Guidelines for safe and efficient use	6
---------------------------------------	---

Parts of the phone	10
--------------------	----

Getting started	13
-----------------	----

General functions	25
-------------------	----

Main menu	30
-----------	----

Calls	33
-------	----

Video calls

Call history

Call duration	34
---------------	----

Call costs

Call divert	35
-------------	----

Call barring	38
--------------	----

Fixed dial numbers	39
--------------------	----

Call waiting	40
--------------	----

Settings

Address book	42
--------------	----

Contacts

New contact

Speed dials

Groups

Service dial numbers	43
----------------------	----

Own number

Settings

Settings	44
Date & time	
Network	45
Access points	
Security	46
Language	48
Memory status	
Handset info.	49
Reset settings	
Streaming settings	

Media	50
Video camera	
Camera	51
Voice recorder	52

Messaging	54
New message	
Inbox	64
Mailbox	65
Drafts	66
Outbox	67
Sent items	
Templates	68
Emoticon	
Settings	

Table of Contents

Browser	74
Home	
Bookmarks	
Saved pages	
Go to URL	
Security	
Settings	75

Media album	77
Images	
Videos	78
Sounds	80
Applications	81
Others	
Bluetooth	
External memory	82
Play lists	83

Games & Downloads	84
My games & apps	
More games	
Downloads	
More	85
Alarm clock	
Connectivity	
Calculator	91
World time	
Unit converter	

Display	94
Screen theme	
Front screen theme	
Backlight	95
Font	
Handset scheme	
Download more	

Profiles	96
Normal	
Silent	
Vibrate only	
Outdoor	
Headset	
Customised 1	
Customised 2	
Customised 3	

Calendar	98
Calendar	
To do	99
Memo	100
Secret memo	
Date finder	
Date counter	101
Settings	
Troubleshooting	102
Accessories	104

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KU730 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.81 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as a TV's, radios or personal computers.

- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.

- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (i.e. in your breast pocket.)
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- ▶ Do not use a hand-held phone while driving.

Guidelines for safe and efficient use

- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point. Don't use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

Parts of the phone

 
Front view



External camera lens

Front screen

Rear view

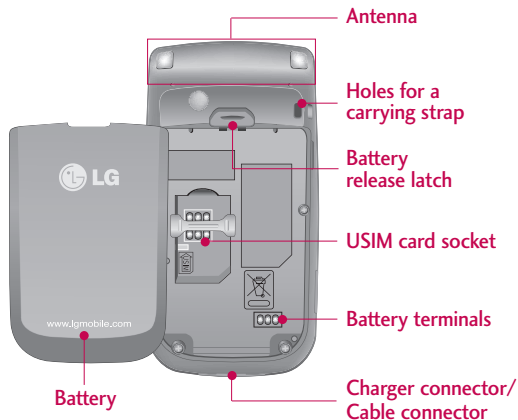

Antenna

Holes for a carrying strap

Battery release latch

USIM card socket

 
Battery terminals

Charger connector/
Cable connector

Note


- ▶ Never touch the antenna during a call or when using a Bluetooth connection. It may degrade speech quality.

Left side view

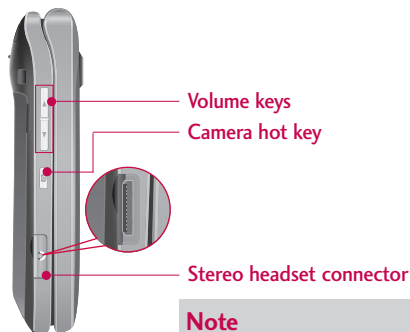**Note**


- Connect jack to fit the shape of terminal. Otherwise, product can be damaged.

 Right side view

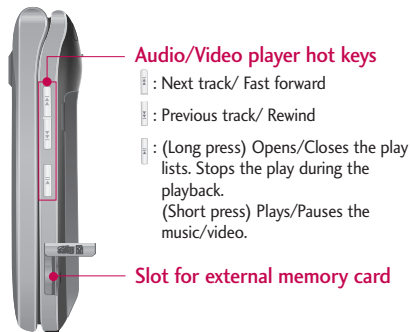

Parts of the phone

 Open view

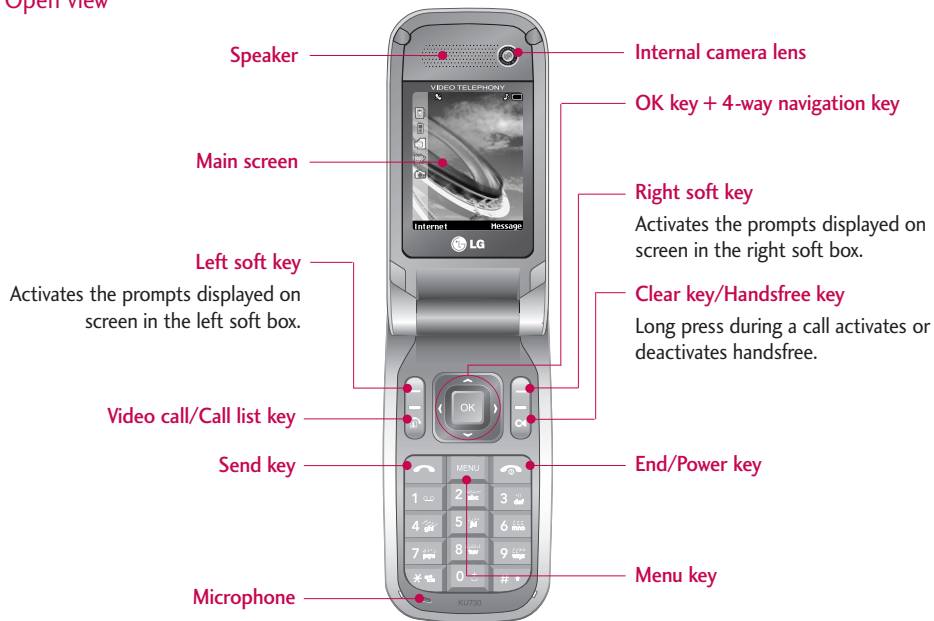

Getting started

 
Installing the USIM card and battery

1. Install the USIM card.

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset.

If your USIM card is removed then your handset becomes unusable (except emergency calls) until a valid USIM is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card.

Slide the USIM card into the USIM card holder. Make sure that the USIM card is properly inserted and the gold contact area on the card is facing downwards. To remove the USIM card, press down lightly and pull it in the reverse direction.

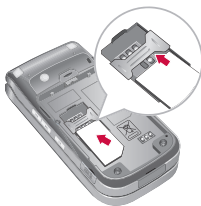

To insert the USIM card



To remove the USIM card

 
Notice

- ▶ Before installing always make sure that the phone is switched off and remove the battery. The metal contact of the USIM card can be easily damaged by scratches. Pay special attention to the USIM card while handling and installing. Follow the instructions supplied with the USIM card.

Getting started

2. Install the battery.

Insert the battery aligning the gold contacts on the battery with the battery terminals (gold contacts) in the battery compartment. Then push down the top of the battery until it snaps into space.

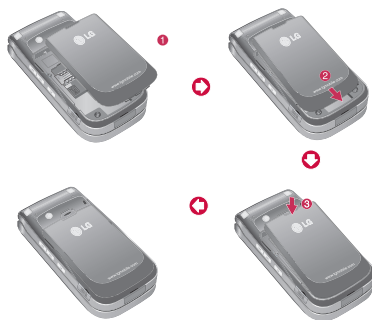

3. To remove the battery

Turn the power off. (If power is left on, there is a chance you could lose the stored telephone numbers and messages.) Press the battery release latches ① and lift the battery ②. Then remove the battery.



 
Charging the battery

To connect the travel adapter to the phone, you must first install the battery.

1. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the center of the phone until it clicks into place.



2. Connect the other end of the travel adapter to the mains socket. Use only the charger included in the box.

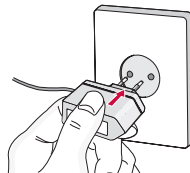

Warning!

- ▶ Do not force the connector as this may damage the phone and/or the travel adapter.

Please notice the unusual Start time that can take up to 35 seconds at a first power on or when removing the battery.

Disconnecting the charger

Disconnect the travel adapter from the phone by pressing its side buttons as shown in the diagram.



Note

- ▶ Ensure the battery is fully charged before using the phone.
- ▶ Do not remove your battery or the USIM card while charging.
- ▶ The moving bars of the battery icon will stop after charging is complete.
- ▶ If the battery is completely discharged, the charge could take some minutes before starting.

Note

If the battery does not charge,

- ▶ switch the phone off.
- ▶ ensure the battery is fitted correctly.

How to use a microSD* memory card



<MicroSD memory card>

<How to insert a microSD memory card>

1. Power off the phone. Inserting or removing the microSD when the phone is on may damage the files stored in the memory card.
2. Lift the plastic cover which protects the microSD slot.



3. Insert the memory card in the slot. The gold contacts must be kept on the back of the microSD. Don't push the microSD too much. If it cannot enter easily in the slot, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.



Getting started

4. Once inserted, push the memory card until you hear a “click”, meaning that the microSD has been correctly blocked.



5. Close the slot plastic protection.
6. To remove the memory card, power off the phone, open the slot protection and push the microSD to unlock it. Carefully extract the memory card.

Attention:

- ▶ Avoid using the Flash Memory Card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.


- ▶ The card is designed to fit easily into the system one way only.
- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any other kind of memory cards different from microSD.

For more information on the microSD, please refer to the instructions manual of the memory card.


Memory card formatting

Before start using memory card it's necessary to format it. After you insert memory card, select Menu-Settings - Reset settings - Clear memory - External memory, then press OK. This operation should be done only when you insert memory card for the first time. During formatting various folders will be created for different data types.

Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged. Press and hold the  key until power is on. Enter the USIM PIN code that was supplied with your USIM card if PIN code setting is on. After a few seconds you will be registered on the network.

Turning your handset off

Press and hold the  key until power is off. There may be a few seconds delay while the handset powers down.

Do not re-power the handset during this time.

Access codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the Change codes feature [Menu 3.4.3].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your USIM card against unauthorized use. The PIN code is usually supplied with the USIM card. When the PIN Code Request is set to Enable, your phone will request the PIN code every time it is switched on. When the PIN Code Request is set to Disable, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some USIM cards, is required to access functions such as Fixed Dial Number. These functions are only available if supported by your USIM card.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unlock a blocked PIN code. The PUK code may be supplied with the USIM card. If not, contact your network operator's customer service for the code. If you lose the code, contact your network operator's customer service.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some USIM cards, is required to unlock a blocked PIN2 code. If you lose the code, contact your network operator's customer service.

Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to factory setting.

Display information

No USIM idle screen

This is the initial screen of the phone that appears when there is no USIM card installed in the phone, or the installed USIM card is invalid. In this screen, users can only make emergency calls, and turn the phone off. To turn off the phone, press and hold the End key for a few seconds.

Screen structure

If there is no USIM card installed, an animation telling you to insert a USIM card appears. If the USIM card inserted into the phone is invalid, an animation telling you that the USIM card is locked appears.

Emergency call function

The right soft key is represented by "Emergency" on the screen. Press right soft key and then press the OK key to make an emergency call.

Idle screen

The idle screen appears when you have installed a proper USIM card and turned the phone on.

Screen structure

Idle screen consists of the operator's name, indicators, date and time on a background image. You can change the wallpaper in the display setting menu.



1 Icon indicator bar

Shows what operations are taking place and reminds you of battery and signal strength. This appears through all activities.

2 Short-cut menu bar

In idle mode, you can access the following menus.

- Address book: Contacts, New contact
- Calls: Call history, Missed calls, Received calls, Dialed calls
- Messages: Write message, Inbox, Mailbox
- Calendar: Today, No appointments, New appointment
- Camera: Take a picture, Media album, Background

Press the OK key to select the short-cut menu bar. Select the desired menu using the up/down navigation keys. Enter the submenus by pressing the OK key.

 
3 Prompt bar

The prompt bar displays in the soft boxes. These are activated by pressing the appropriate soft key under each one.

Getting started

Key functions

The functions of the keys in the idle screen status are described below.

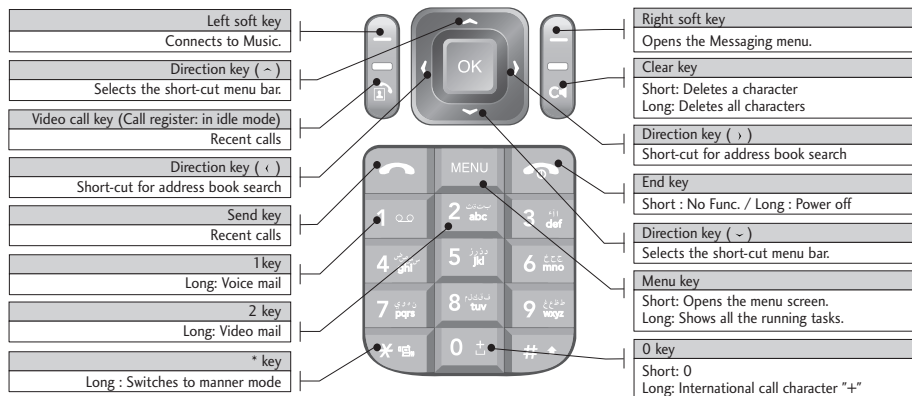

Numbering screen

The numbering screen appears when a number key is pressed in the idle screen.

Screen structure

The numbering screen consists of status indicators, dialled number, and soft menu. Status indicators are the same as that of the idle screen. You can change the size and colour of the dialling font in the display setting menu. You can make a call while dialling a phone number by pressing the Send or Video Call key.

Soft key

You can use the soft keys for several functions while dialling a number. Using the left soft key, you can save the current number to Contacts, you can send a message to the number, Using the right soft key, you can search for the number in Contacts and you can make a voice call/video call.

Handset lock screen

When the Handset Lock function is selected, you can only make an emergency call, release the lock, and turn off the phone in this screen. As always, you can turn the phone off by pressing and holding the End key for a few seconds.

Screen structure

The screen structure of the Handset Lock screen is the same as that of the idle screen, except that the lock message appears instead of the idle screen.

Emergency call function

You can make an emergency call using the Right soft key. As with the No USIM Idle screen, only emergency numbers can be dialled.

Getting started

Unlock function




If you press the OK key, a popup screen appears asking you to input the Security code to unlock the phone. The Security code is configured by selecting **Settings** → **Security** → **Change codes**. If you key in an incorrect Security code, the phone will remain in Handset Lock status. If you key in the correct Security code, the phone will be unlocked, and the idle screen will be displayed. If you have turned the phone off in the Handset Lock status, you will find the phone remains in Handset Lock status when you turn it on.

General functions

Making and answering calls

Making and answering a video call

You can make a video call in 3G covered service area. If called user has a 3G video phone in 3G covered service area, the call will be established. You can also answer a video call for video incoming call. To make / answer a video call, do the following.





1. Input the phone number using the keypad, or select the phone number from the calls made/ received lists.
 - ▶ To correct mistakes, press the  key briefly to delete the last number, or press and hold the  key to delete all numbers.
2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press .
 - ▶ You will be notified that you will need to close other applications to make the video call.

Note


- ▶ The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. After the other party has answered, their image will be displayed on screen.

4. Press the end key to finish the call, or close the handset.

Making a voice call

1. Enter the number including the full area code.
 - ▶ To delete a digit press the  key.
To delete all digits press and hold the .
2. Press the  key to make the call.
3. Press the  key to finish the call, or close the handset.




Note

- ▶ To activate the speakerphone during a call, press and hold the  key for at least 2 secs.



General functions

Making a voice/video call from Contacts

It is easy to call anyone whose number you have stored in your Contacts.

Press the down navigation key to access the contacts list. Scroll to your chosen contact. Press the  key to make a voice call, or  key to make a video call. Press the  key to finish the call.

Making international calls



1. Press and hold the  key for the international prefix. The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

Adjusting the volume


During a call, if you want to adjust the earpiece volume, use the side keys of the handset. In idle mode with the flip cover open, you can adjust the key volume using the side keys.


Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

1. Open the flip and press the  key to answer an incoming call. If the answer mode is set to Press any key, any key will answer a call except for the  key.

Note


- ▶ To reject an incoming call, press the  key or the right soft key twice.
- ▶ If you set "Answer mode" as "Open flip" (Menu 1.9.4), you can answer the call simply by opening the flip.

2. End the call by closing the handset or pressing the  key.

Note

- ▶ You can answer a call while using the Contacts or other menu features.

Signal strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator see the strength () on your handset's display screen.

Entering text

You can enter alphanumeric characters using the keypad.

For example, storing names in the Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text. Following text input methods are available in the handset.


T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three times or more until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press and hold the  key until 123 mode is displayed.

Changing the text input mode




1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. Short pressing the  key cycles between **T9ABC**, **T9Abc**, **T9abc**, **ABC**, **abc** and **123**.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are

General functions

added, the word changes to reflect the most likely candidate from the dictionary.


1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - ▶ If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.



Example

Press     to type **Good**.

Press the  key to get **Home**.




- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.

3. Complete each word with a space by pressing the  key.

To delete letters, press the  key. Press and hold down the  key to erase entire words.

Using the ABC Mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
 - ▶ Once for the first letter
 - ▶ Twice for the second letter
 - ▶ And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the display. Refer to the following table for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Lower case	Upper case
1	.,?!"1- ()@/ :_	.,?!"1- ()@/ :_
2	a b c 2 à á â ã ä å æ ç	A B C 2 Å Ä Å Æ Ç
3	d e f 3 è é ê ë	D E F 3 È É Ê Ë
4	g h i 4 ì í î ï	G H I 4 Ì Í Î Ï
5	j k l 5 £	J K L 5 £
6	m n o 6 ñ ò ó ô õ ö ø œ	M N O 6 Ñ Ò Ó Ô Õ Ö Ø Æ
7	p q r s 7 B \$	P Q R S 7 B \$
8	t u v 8 ù ú û ü	T U V 8 Ù Ú Û Ü
9	w x y z 9	W X Y Z 9
0	Space, 0	Space, 0

Using the 123 (Number) mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.


Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select [Options] → [Insert] → [Symbol]. Use the navigation and numeric keys to select the desired symbol and press the key.

Using the hands-free

During a call, press and hold down the key to activate or deactivate it.

Main menu

You can launch a menu by pressing the  key in the idle screen. Move to a desired item and press the OK key to go into the sub menu.

From main menu you can also go into a submenu by directly pressing the corresponding numeric key as follows. The main menu consists of the following top menus and sub menus.

1. Calls
1.1 Video calls
1.2 Call history
1.3 Call duration
1.4 Call costs
1.5 Call divert
1.6 Call barring
1.7 Fixed dial numbers
1.8 Call waiting
1.9 Settings

2. Address book
2.1 Contacts
2.2 New contact
2.3 Speed dials
2.4 Groups
2.5 Service dial numbers
2.6 Own number
2.7 Settings

3. Settings
3.1 Date & time
3.2 Network
3.3 Access points
3.4 Security
3.5 Language
3.6 Memory status
3.7 Handset info.
3.8 Reset settings
3.9 Streaming settings

4. Media
4.1 Video camera
4.2 Camera
4.3 Voice recorder
5. Messaging
5.1 New message
5.2 Inbox
5.3 Mailbox
5.4 Drafts
5.5 Outbox
5.6 Sent items
5.7 Templates
5.8 Emoticon
5.9 Settings

6. Browser
6.1 Home
6.2 Bookmarks
6.3 Saved pages
6.4 Go to URL
6.5 Security
6.6 Settings
7. Media album
7.1 Images
7.2 Videos
7.3 Sounds
7.4 Applications
7.5 Others
7.6 Bluetooth
7.7 External memory
7.8 Play lists

8. Games & Downloads
8.1 My games & apps
8.2 More games
8.3 Downloads
9. More
9.1 Alarm clock
9.2 Connectivity
9.3 Calculator
9.4 World time
9.5 Unit converter


Main menu



*. Display
*.1 Screen theme
*.2 Front screen theme
*.3 Backlight
*.4 Font
*.5 Handset scheme
*.6 Download more

0. Profiles
0.1 Normal
0.2 Silent
0.3 Vibrate only
0.4 Outdoor
0.5 Headset
0.6 Customised 1
0.7 Customised 2
0.8 Customised 3

#. Calendar
#.1 Calendar
#.2 To do
#.3 Memo
#.4 Secret memo
#.5 Date finder
#.6 Date counter
#.7 Settings

Multi tasking feature

KU730 supports multi-tasking feature. You can use multiple applications at the same time. During an application, you can access another application by long press of .

For instance, if you need to use the calculator while writing a message, press and hold down  and select **More** and **Calculator**. To go back to the message editor, press and hold the . A window which shows all the running tasks appears at the bottom of the screen. You can select the desired task using the left/right navigation keys and the OK key.

Note: To change the language, you need to close all the tasks.

Video calls

Menu 1.1

You can set the screen display when making / receiving a video call.

- ▶ **My picture size:** Select my picture size to be displayed.
- ▶ **My picture position:** Select the position where your picture will be displayed.
- ▶ **Hide my picture:** Determine whether to display my picture or not.
- ▶ **Mirror:** Select to activate the mirror effect or not.
 - On: Displays the image flipped side to side.
 - Off: Displays the image as it is.
- ▶ **Substitute picture:** Determine whether to send my image or a substitute picture during VT.
 - On: Displays the substitute picture instead of my picture. You can select the substitute picture in the Substitute file.
 - Off: Displays my picture.
- ▶ **Substitute file:** Select the desired substitute picture.

Call history

Menu 1.2

You can view missed, received, dialled and entire call records. Each call record menu provides the following functions.

- ▶ You can make a voice or video call to the number in the call record.
- ▶ You can save the number in the call record in the Contacts.
- ▶ You can send a message to the number in the call record.
- ▶ You can view detailed information of the call records such as the date, time and call time.
- ▶ You can clear call records.

Missed calls (Menu 1.2.1)

Allows you to view missed call records, make a call, send a message, and save the number in the Contacts.

Received calls (Menu 1.2.2)

Allows you to view received call records, make a call, send a message, and save the number in the Contacts.

Dialled calls (Menu 1.2.3)

Allows you to view dialled call records, make a call, send a message, and save the number in the Contacts.

All calls (Menu 1.2.4)

Allows you to view all of the missed, received, and dialled call records. You can make a call, or send a message to the number you have selected from the records. You can also save the number in the Contacts.

Call duration

Menu 1.3

You can view call time by types. Press Options key to choose whether partial initialization or entire initialization. Also press Clear key for initialization of selected duration type. Initialisation will require your Security code.

Last call (Menu 1.3.1)

Shows the latest call time in units of hour/minute /second.

Received calls (Menu 1.3.2)

Shows incoming call time.

Dialled calls (Menu 1.3.3)

Shows outgoing call time.

All calls (Menu 1.3.4)

Shows total call time.

Call costs

Menu 1.4

1. This function displays your call cost of the Last call and All calls.
2. To initialise, press 'Clear' button, and input PIN2 code.
3. You can select either Unit or Currency in Set call cost. According to your setting, call cost is displayed during a call.

4. In the Set limit configuration, select On to configure the cost limit. When cost limit is configured, and call cost reaches the limit, making a call will not be allowed.

Call divert

Menu 1.5

Call divert menus for voice and video calls are provided.

However, available menus are determined by the USIM supporting CPHS.

The menu consists of Voice calls, Video calls and Deactivate all.

Voice calls

All voice calls

1. When the off menu is selected – Deletes Call Divert Number registered to the network. While waiting for the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When the To voicemail centre is selected, it activates a Voicemail centre number as a diverted number. To register the VMS number, select Messages → Settings → Voice mail centre from the menu. If you select this menu when there is no registered number, the “VMS not activated” message appears. Selecting this menu when there is a registered number displays Requesting message and animation. When the network answers, the result of the operation is displayed.
3. When To other number is selected – A dialogue window appears allowing you to enter a phone number to divert to. Input a phone number to divert calls to, and press OK button. While waiting the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.
4. When Input dial number (DN) is selected – A menu appears, a user selects To other number, and inputs a number. Divert registration is performed with the selected number. Select the number, and press the OK button. While waiting for the result from the network, a Requesting message and animation appears. When the network answers, the result of the operation is displayed.

5. After activating All voice calls menu, selecting the Options menu at the bottom of the menus displays the Activate, Deactivate, Deactivate all, View status and clear list menus.
Activate: Move to Settings menu to activate call divert.
The View status menu shows the settings on the network. If you select this menu, Requesting message and animation appear. Then the network settings are displayed when the information is received from the network. Selecting Status in the right soft menu gives the same result. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation.
Clear list menu will delete all divert number list.

Video calls

All video calls

1. When the off menu is selected – Deletes Call Divert Number registered to the network. While waiting for the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When To other number is selected – A dialogue window appears allowing you to enter a phone number to divert to. Input a phone number to divert calls to, and press OK button. While waiting the result from the network, Requesting message and animation appears. When the network answers, the result of the operation is displayed.
3. When Input dial number (DN) is selected – A menu appears, a user selects To other number, and inputs a number. Divert registration is performed with the selected number. Select the number, and press the OK button. While waiting for the result from the network, a Requesting message and animation appears. When the network answers, the result of the operation is displayed.
4. Options menu – After activating the All video calls menu, selecting the Options menu at the bottom of the menus displays the Activate, Deactivate, Deactivate all, View status and clear list menus.
Activate: Move to Settings menu (above 1~4) to activate call divert. The View status menu shows the settings on the network. If you select this

menu, Requesting.. message and animation appear. Then the network settings are displayed when the information is received from the network. Selecting Status in the right soft menu gives the same result. If you select the Deactivate menu, the call divert numbers registered in the network are deleted after user confirmation. Selecting the Cancel all menu will display the operation result after showing the Requesting message and animation. Clear list menu will delete all divert number list.

If busy

1. When the off menu is selected – It operates the same to All voice calls menu.
2. To other number is selected – It operates the same to All voice calls menu.
3. When input dial number (DN) is selected – It operates the same to All voice calls menu.
4. When Options menu is selected – It activates and operates If busy menu. It operates the same to All voice calls menu.

If no answer

1. When the off menu is selected – It operates the same as All voice calls menu.
2. When To other number is selected – It operates the same as to All voice calls menu.
3. When input dial number (DN) is selected – It operates the same to All voice calls menu.
4. When Options menu is selected – Activates and operates If no reply menu. It operates the same to All voice calls menu except that users can configure delay time in the Set delay menu in the menu list.

If unreachable

1. When off menu is selected – It operates the same to All voice calls menu.
2. When To other number is selected – It operates the same to All voice calls menu.
3. When input dial number (DN) is selected – It operates the same to All voice calls menu.
4. When Options menu is selected – Activates and operates If out of reach menu. It operates the same to All voice calls menu.

Call barring

Menu 1.6

Call barring menus for Voice and Video calls are provided.

However, available menus are determined by the USIM supporting CPHS.

The menu consists of Voice calls, Video calls and Deactivate all. The Voice calls and Video calls menus have the following submenus.

The Call barring menu consists of All outgoing, Outgoing international, Outgoing international calls except home country, All incoming and Incoming when abroad submenus. However, the menus available depend on whether the USIM supports CPHS.

The All outgoing menu bars dialling all outgoing calls, the Outgoing international menu bars dialling outgoing international calls, and the Outgoing international calls except home country menu bars dialling outgoing international calls except for the Home PLMN country. All incoming rejects all incoming calls and the Incoming when abroad menu rejects incoming calls in roaming.

Voice calls

Video calls

All outgoing

1. When OK button is selected – Receives Barring password from user, and activates barring service on the network. Requesting message and animation appears. When the network answers, the result of the operation is displayed.
2. When Options menu is selected – It activates Outgoing calls menu. Select options menu from the soft menus on the lowest menu. Then, Deactivate, Activate, Deactivate all, View status, and Barring password menu appear. Select Activate menu to receive Barring Password from user and activates the barring service on the network. Deactivate menu deactivates barring service after Barring Password input of user. Deactivate all menu deactivates all barring service configured in the network after Barring Password input of user. View status menu enables users to view the current network configuration. Selecting View status menu displays Requesting message with animation and the result of the operation when the network

answers. Barring password menu enables users to change current barring password.

Outgoing international

1. When OK button is selected – It operates the same to Outgoing calls menu.
2. When Options menu is selected – It activates and operates International calls menu. It operates the same to Outgoing calls menu.

Outgoing international calls except home country

1. When OK button is selected – It operates the same to Outgoing calls menu.
2. When Options menu is selected – It activates and operates International except home country menu. It operates the same to Outgoing calls menu.

All incoming

1. When OK button is selected – It operates the same to Outgoing calls menu.
2. When Options menu is selected – It activates and operates Incoming calls menu. It operates the same to Outgoing calls menu.

Incoming calls when roaming

1. When OK button is selected – It operates the same to Outgoing calls menu.
2. When Options menu is selected – It activates and operates Incoming calls when abroad menu. It operates the same to Outgoing calls menu.

Fixed dial numbers

Menu 1.7

1. To enter the menu allowing FDN configuration, PIN2 authentication is required.
2. The first menu displays the activate status. Enter activation menu through OK key.
3. The second menu displays the current number.
4. For configuration, input name and phone number. The configuration information is saved in USIM.
5. The information saved in USIM is used when FDN restricts outgoing calls.

Call waiting

Menu 1.8

- ▶ **Activate:** Activates waiting service. Selecting this item, displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **Deactivate:** Deactivates Call waiting service. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.
- ▶ **View status:** Displays activated Call waiting service group item of the network. Selecting this item displays requesting message and animation. When the network answers, the result of the operation is displayed.

Settings

Menu 1.9

Call reject (Menu 1.9.1)

You can set whether to reject incoming calls.

1. Select "On" in Reject menu to activate call reject. The Reject list menu appears.

2. Set the desired call reject option in the Reject list menu.

- ▶ **Reject all calls:** Rejects all calls.
- ▶ **Contacts:** Rejects the calls from the number stored in Contacts.
- ▶ **Groups:** You can specify call rejects by group units stored in Contacts.
- ▶ **Unregistered:** Rejects calls from the number not stored in Contacts.

Send my number (Menu 1.9.2)

- ▶ **Set by network:** Configures with the default settings determined by the service provider.
- ▶ **On:** Configures to send my phone number when making an outgoing call.
- ▶ **Off:** Configures not to send my phone number when making an outgoing call.

Auto redial (Menu 1.9.3)

Allows you to set the auto redial function when a call attempt has failed.

Answer mode (Menu 1.9.4)

Allows you to set the answering method. You can choose between pressing the send key, opening the flip, and pressing any key.

Minute reminder (Menu 1.9.5)

Determines whether to sound a 1 minute tone every 1 minute when you are on the phone.

BT answer mode (Menu 1.9.6)

- ▶ **Hands-free:** You can answer a call using the Bluetooth headset, when the Bluetooth is connected.
- ▶ **Handset:** If you press the Send key on the handset to answer a call, you can talk on the handset. If you press the Bluetooth headset key to answer a call, you can talk using the Bluetooth headset.

This is the initial answer mode selection. And while talking, you can switch from handset to headset or from headset to handset.

Address book

This is an address book function to record and manage contact addresses. Using the Contacts management menu, you can register new contact addresses, or can search for desired addresses by name, phone number, or groups.

Contacts

Menu 2.1

Performs the contact address search function. The search operation is performed based on a name as a default. The current search method and results found are displayed in the Search window. On the right side of the screen, an image or avatar registered to the selected contact address appears. You can make a phone call or send a message to the selected phone number. Contacts search can be performed based on the phone number, or group information.

New contact

Menu 2.2

You can register a new contact address. You can input the name, phone numbers, e-mail addresses, assign it to groups, include memo, company / party, position / occupation, home address, office address, home page URL, ringtone, and avatar or image

(photograph) in the contact address information. You can input and manage contact addresses depending on the memory usage.

Speed dials

Menu 2.3

Using this menu you can manage speed dials. Speed dials are configured between 3~9. You can register speed dials for any number of 5 numbers for a specific contact address, and a contact address may have multiple speed dials.

Groups

Menu 2.4

Using this menu you can manage group information stored in Handset. In the handset memory, there are 4 default groups: Family, Friends, Colleagues and School. You can add, edit and delete groups. When a ringtone for a number is not specified, a call from the number sounds the group ringtone assigned to the number for the group.

Service dial numbers (USIM dependent)

Menu 2.5

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the USIM card). Such numbers include the emergency, directory enquiries and voice mail numbers. After selecting a service number, press the send key.

Own number

Menu 2.6

Allows you to display your phone number in the USIM card.

Settings

Menu 2.7

Display data (Menu 2.7.1)

Determines where address book data is stored. You can select handset memory USIM card, or both of them. "Handset & USIM" is the default setting. You can change the setting by using the up and down keys.

Show image/avatar (Menu 2.7.2)

Determine whether to show the image/avatar or not.

Copy all (Menu 2.7.3)

You can copy contact address information from the phone memory to the USIM or from USIM to the phone memory. You can copy just selected items or all of them.

Move all (Menu 2.7.4)

You can move contact address information from the phone memory to the USIM or from the USIM to the phone memory. You can move just selected items or all of them.

Clear contacts (Menu 2.7.5)

Clears all contact address information. You can delete all contact addresses saved in the mobile phone memory as well as in the USIM card.

Settings

Date & time

Menu 3.1

Although the current time is automatically configured when the phone is registered to the network, users can configure time and date directly using this menu. The time configured by user is valid only while the phone is turned on.

Time (Menu 3.1.1)

1. Select the 'Time' item from the Date & Time list, and then press [OK].
2. Move to your desired field, 'Hour', 'Minute', or am/pm field using the navigation keys. (when you have selected '12 hour' as 'Time format')
3. Input 'Hour', and 'Minutes' using the number keys.
4. Select time format using Left and Right navigation keys.
5. Scroll down to select the hour indicator format i.e. Off, Cuckoo clock or Chime bell.
6. Press the Done key to set the time with the specified value.

Date (Menu 3.1.2)

1. Select 'Date' item from the Date & Time list, and then press [OK].
2. Input 'Day', 'Month' and 'Year' using the number keys.
3. Select date format using Left and Right navigation keys.
4. Press the Done key to set the date with the specified value.

Auto update date/time (Menu 3.1.3)

When Auto Update is configured to **On**, the time and date are automatically updated according to the current time zone. If **Confirm first** is selected, time and date update is confirmed before the automatic update.

Daylight saving (Menu 3.1.4)

Select whether to activate the daylight saving function or not. If the home city does not support daylight saving, Daylight saving can not be set to **On**.

Network

Menu 3.2

Select network (Menu 3.2.1)

Select between **Automatic** and **Manual**.

- ▶ **Automatic:** Automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
- ▶ **Manual:** All the currently 2G(GSM) and 3G(UMTS) available networks are shown and you can select one of them for registration. If the registration of the network has failed, all the currently available networks are listed again and you can select any other one for registration.

Network mode (Menu 3.2.2)

You can set a type of network to search for when networks are searched in the "Select network" menu.

- ▶ **Automatic:** Searches all the networks connectable.
- ▶ **3G only:** Searches only networks supporting 3G.
- ▶ **GSM only:** Searches only networks supporting GSM/GPRS.

Preferred list (Menu 3.2.3)

If the network is searching automatically, you can add a preferable network to be connected to. And the following options are available.

- ▶ **Add new:** You can add a new network using the followings.
 - Search: You can select one from the network list stored in the phone.
 - Enter new network: You can enter the country code (MCC) and the network code (MNC) to add. After setting, press "Done" key.
- ▶ **Delete:** Deletes the selected network.
- ▶ **Move up:** Moves the selected network upward.
- ▶ **Move down:** Moves the selected network downward.

Access points

Menu 3.3

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations.

You can edit the following configuration items by selecting the right soft key.

Connection title	Access Point profile name.
Bearer	Choose the bearer from the list. (Default is "UMTS/GPRS")
Authentication	Choose the authentication from the list. (Default is "No auth")
User name	Information provided by service provider.
Password	Information provided by service provider.
APN	APN name to access network. Information provided by service provider.

- ▶ Press **"Done"** key to save any configuration changes.

Security

Menu 3.4

You can set the security related settings.

Various passwords are used to prevent unauthorised use of your phone. Refer to page 19-20.

PIN code request (Menu 3.4.1)

When this is set to **On**, you are requested to enter your PIN each time you switch the phone on.

Note

- ▶ Press the C key in the PIN code input window to return to the previous step.
- ▶ 3 incorrect PIN code entries would invalidate the PIN code. And you have to input the PUK (PIN Unblock Key) code to configure the PIN code again.
- ▶ The maximum allowed number of attempts of PUK input is 10 times. (Attention: After having entered 10 times an incorrect PUK code, the USIM card will be blocked and must be replaced.)
- ▶ If the PIN code request cannot be disabled by operator settings, you will not be able to choose this menu item.

Handset lock (Menu 3.4.2)

You can lock your phone. The following 4 lock functions are available.

When switching one: Locks the handset whenever the handset is switched on.

If USIM changed: Locks the handset when the phone's USIM card has been changed.

Immediate: Locks the handset immediately.

You are requested to the security code to confirm the selection.

- ▶ To unlock the handset, you need to enter the security code.

Change codes (Menu 3.4.3)

You can change PIN, PIN2, the mobile phone password and the call barring password.

PIN code

PIN is the abbreviation of Personal Identification Number, and is used to restrict the use of an unauthenticated user.

PIN code change procedure

1. Select 'PIN code' from the 'Change password' list and then press [OK].
2. Input the current PIN code, and press [OK].

3. Input the new PIN code, and press [OK].

4. Input the new PIN code once again, and press [OK].

- If the PIN code is different from that of step 3, the procedure is restarted from step 3.

5. When the PIN code is properly changed, a "PIN changed" message is displayed. With an incorrect PIN code input in step 2, the procedure is restarted from step 2, and the remaining allowed number of input attempts is decreased by 1.

6. Press the C key in the PIN code input window to return to the previous step.

Note

- ▶ Three incorrect PIN code entries in the PIN code input window would invalidate the PIN code. In this case, you have to input the PUK (PIN Unblock Key) code to configure the PIN code again. The maximum allowed number of attempts of PUK code input is 10 times. ATTENTION: after having entered 10 times an incorrect PUK code, the USIM card will be blocked and must be replaced.

PIN2 code

PIN2 is the abbreviation of Personal Identification Number 2, and is used to restrict the use of unauthenticated users like PIN. The PIN2 code change procedure is the same as the one for the PIN code. 3 incorrect PIN2 code entries would invalidate the PIN2 code. In this case, you have to input the PUK2 code in order to use the PIN2 code again. The maximum allowed number of attempts of PUK2 code input is 10 times, like PUK1. 10 incorrect PUK2 code entries would invalidate the PIN2 code.

Security code

The security code is used to change the mobile phone password. The maximum allowed number of attempts of security code input is not limited like PIN and PIN2.

Language

Menu 3.5

You can select the display language. When the language option is set to Automatic, the language is automatically selected according to the language of the USIM card used. English will be set if the language on the USIM card is not supported by the phone.

Memory status

Menu 3.6

Common memory (Menu 3.6.1)

This function shows the status of the user memory of the mobile phone. Since this function scans the overall file system for statistics, a few seconds are required.

Reserved memory (Menu 3.6.2)

This function shows the status of the reserved memory. The usual contents are Text messages, Contacts, Calendar, To do, and Memo. And it gives a clear illustration of the actual number to the total number of count of each item.

USIM memory (Menu 3.6.3)

This function shows the status of the USIM card user memory.

External memory (Menu 3.6.4)

This function shows the status of the External card user memory. This function displays the In-use and free memory usage statistics.

Format external memory (Menu 3.6.5)

Select this to format the external memory.

Handset info.

Menu 3.7

This functions shows the USIM card telephone number, model name and software version of the mobile phone.

Reset settings

Menu 3.8

Clear memory (Menu 3.8.1)

Select this to clear the memory. You are requested to enter the security code.

Default setting (Menu 3.8.2)

Select this to reset your phone to its default configuration. You are requested to enter the security code.

Streaming settings

Menu 3.9

If you want to set different network setting to play streaming content, you can set different network settings.

Video camera

Menu 4.1

This application enables you to record a video clip. You can play and watch a saved video file in this menu. Once recorded, a video clip can be sent by a picture message, group message, Email or Bluetooth.

1. Press the left soft key [Options] to set the desired environment as follows.

- ▶ **Quality:** You can select the desired quality of video by selecting either Super fine, Fine or Normal.
- ▶ **Zoom:** You can select the zoom level.
- ▶ **Brightness:** You can select a level from -2.0 to 2.0 with step size 0.5. The higher the level, the more brighter screen.
- ▶ **White balance:** You can adjust the tone of the background photo according to the weather by selecting one from Auto, Daylight, Cloudy, Illuminate and Indoors.
- ▶ **Night mode:** You can take better photos at night by selecting "On".
- ▶ **Effect:** You can select a special camera effect from None, Black & White, Negative, and Sepia.

- ▶ **Duration:** Select the desired recording time from MMS size(around 25 seconds), 30 seconds, 1 minute, 2 minutes, 5 minutes, and 60 minutes.
- ▶ **Memory:** Select the desired memory between Handset and External.
- ▶ **Mirror:** You can activate the mirror effect by selecting "On".
- ▶ **Sound:** Select whether to record the sound or not.
- ▶ **Switch camera:** You can switch the camera to activate between Internal one and External one.

After finishing all the settings, press the right soft key [Close].

2. Focus the camera on where you want to record and press the OK key [Record] to start recording. Press the OK key [Stop] to stop recording.
3. You can save the video clip by pressing the OK key. It is saved in the Videos of Media album. Or you can send the video clip via Picture message, Group message, Email or Bluetooth by pressing the right soft key [Send].

4. To view existing videos, press the right soft key [Player]. The Videos is launched and displays existing videos as thumbnails. Move to a desired video to view, and press the OK key [Play]. You can also send the selected video to other party via Picture message, Group message, Email or Bluetooth.

Note

- ▶ You can easily switch the video camera and camera using the left/right navigation keys in preview mode.

Camera

Menu 4.2

This application enables you to take a still picture. You can take a picture in your desired size, and use it for the address book photo, home screen and other more general purposes. Once taken, a still image can be sent by a picture message, group message, Email or Bluetooth.

1. Press the left soft key [Options] to set the desired environment as follows.
 - ▶ **Size:** You can select the desired size from 1280x960, 640x480, 320x240, Home screen, Front screen, and Contact.

- ▶ **Quality:** You can select the desired quality of photo from super fine, fine or normal.
- ▶ **Multishot:** You can take 3/6/9 photos consecutively. (The available number of multi-shots depends on the size.)
- ▶ **Zoom:** You can select the zoom level.
- ▶ **Brightness:** You can select a level from -2.0 to 2.0 with step size 0.5. The higher the level, the more brighter screen.
- ▶ **White balance:** You can adjust the tone of the background photo according to the weather by selecting one from Auto, Daylight, Cloudy, Illuminate and Indoors.
- ▶ **Night mode:** You can take better photos at night by selecting "On".
- ▶ **Delay timer:** Using this function, you can delay the camera shutter time for 3, 5 or 10 seconds.
- ▶ **Effect:** You can select a special camera effect from None, Black & White, Negative, and Sepia.
- ▶ **Shutter sound:** Select the desired shutter sound.

- ▶ **Memory:** Select the desired memory between Handset and External.
- ▶ **Mirror:** You can activate the mirror effect by selecting "On".
- ▶ **Switch camera:** You can switch the camera to activate between Internal one and External one.

After finishing all the settings, press the right soft key [Close].

2. Focus the camera on where you want to capture and press the OK key [Take].
3. You can save the photo by pressing the OK key. It is saved in the Images of Media album. Or you can send the photo via Picture message, Group message, Email or Bluetooth by pressing the right soft key [Send].
4. To view existing taken photos, press the right soft key [Viewer]. The Images is launched and displays existing photos as thumbnails. Move to a desired photo to view, and press the OK key [View] to view the photo. You can also send the selected photo to other party via Picture message, Group message, Email or Bluetooth.

Note

- ▶ You can easily switch the video camera and camera using the left/right navigation keys in preview mode.

Voice recorder

Menu 4.3

You can record a voice and use it for diverse ring tones. Once recorded, a voice memo can be sent by a picture message, group message, Email or Bluetooth.

1. Press the left soft key [Options] to set the following options.
 - ▶ **Quality:** You can select a recording quality from Super Fine, Fine and Normal.
 - ▶ **Duration:** You can set the recording duration to MMS msg. size, 30 secs, or 1 min.
 - ▶ **New Recording:** Select this menu to start recording to a new file.
 - ▶ **My stuff:** Shows the voice files.

2. Pressing the OK key starts recording. When a recording is started, the recording time is displayed on the LCD. To cancel the recording, press the right soft key.
3. When you finish the recording, press the OK key to exit. The recorded file is automatically saved in the Voice recorder folder in Media album (Media album - Sounds - Voice recorder).
4. You can send the voice memo via Picture message, Group message, Email or Bluetooth by pressing the right soft key [Send].
5. After the voice recording, you can access various options as following by pressing the left soft key [Options].
 - ▶ **Delete:** Deletes the voice memo.
 - ▶ **New recording:** Select this to start a new voice recording.
 - ▶ **Send:** Using this menu, you can send the voice memo via Picture message, Group message, Email and Bluetooth.
 - ▶ **Sound theme:** You can set it as a voice ringtone, video ringtone, message tone, or switch on/off sound.
 - ▶ **My stuff:** Shows the voice files.

Messaging

New message


Menu 5.1

Text message (Menu 5.1.1)

You can write and edit a single text message up to 160 characters. You can write and edit up to 7 concatenated messages.

1. Press the Menu key in idle mode and select Messaging.
2. Select New message and press the OK key.
3. Select Text message and press the OK key.

Note

- ▶ You can use the short-cut menu in idle mode. In idle mode, press the OK key and select  → Write message.

4. Enter a number in the To field directly or search for a number from the Contacts.
5. Pressing the Down key shows another To field in which you can enter a number.
(You can enter up to 10 numbers)
6. If you press the Down key, the focus is moved to the Message field.

7. Enter your message in the Message field.
8. Press the right soft key [Send] to send the message. And it will be saved in the Sent items automatically. If the message has not been sent, it will stay in the Outbox with fail status.

Option menus in To field

- ▶ **Contacts:** You can search for a number from the Contacts.
- ▶ **Send message:** Select this to send the message.
- ▶ **Save to drafts:** Saves the message to drafts.
- ▶ **Cancel:** Cancels the message writing and goes back to New message menu.

Option menus in Message field

- ▶ **Insert:** You can insert the followings.
 1. **New slide:** Select this to add a new slide.
 2. **Symbol:** You can insert diverse symbols. After entering the corresponding number keys, press the OK key.
 3. **Template:** You can insert a text template saved on the phone. After selecting one, press the OK key. The selected template is inserted into the Message window.

4. **Emoticon:** To add an emoticon.
5. **Contacts:** You can add name or/and number stored in the address book. After selecting one from Name, Number and Name & Number, press the OK key. The address book opens and you can search the desired contact to be inserted.
6. **Image:** You can insert an image. (One image per slide)
7. **Video:** You can insert a video clip. (One video clip per slide)
8. **Sound:** You can insert a sound file. (One sound per slide)
9. **New image:** Camera module opens and you can take a photo. The taken image is inserted in the message window. (One image per slide)
10. **New video:** Video camera module opens and you can record a video. The recorded video is inserted in the message. (One video clip per slide)
- *. **New sound:** Voice recorder module opens and you can record a voice. The recorded voice is inserted in the message. (One sound per slide)

#. **Cc/Title:** Select this to insert Cc or title.

Note

▶ **In Text Message,** if you insert a new slide, an image, a sound, a video clip, CC or title, the screen is changed to Picture message screen.

- ▶ **Send message:** Select this to send the created message.
- ▶ **Save to drafts:** Saves the message to drafts.
- ▶ **Dictionary:** Select the desired dictionary mode.
- ▶ **Add to dictionary:** You can add a word in the dictionary.
- ▶ **Cancel:** Cancels the message writing and goes back to New message menu.

Picture message (Menu 5.1.2)

To send a video you have stored on your phone:

1. Press the Menu key from idle and select Messaging.
2. Select New message and press the OK key.
3. Select Picture message and press the OK key.

4. Enter phone numbers in the To and Cc fields. Select Options → Contacts or press OK in the TO or CC fields to select a phone number from the Contacts.
5. Enter the title of the message in the Title field.
6. Enter your message in the Message field.
7. Select Insert.
 1. **New slide:** Select this to add a new slide.
 2. **Symbol:** You can insert diverse symbols. After entering the corresponding number keys, press the OK key.
 3. **Template:** You can insert a text template saved on the phone. After selecting one, press the OK key. The selected template is inserted into the Message window.
 4. **Emoticon:** To add an emoticon.
 5. **Contacts:** You can add name or/and number stored in the address book. After selecting one from Name, Number and Name & Number, press the OK key. The address book opens and you can search the desired contact to be inserted.
 6. **Image:** You can insert an image. (One image per slide)
 7. **Video:** You can insert a video clip. (One video clip per slide)
 8. **Sound:** You can insert a sound file. (One sound per slide)
 9. **New image:** Camera module opens and you can take a photo. The taken image is inserted in the message window. (One image per slide)
 10. **New video:** Video camera module opens and you can record a video. The recorded video is inserted in the message. (One video clip per slide)
 - *. **New sound:** Voice recorder module opens and you can record a voice. The recorded voice is inserted in the message. (One sound per slide)
8. Select Send Message from the Options Menu or press the right soft key. The message is transmitted.

< Option Menus >

► **Insert:** You can insert the followings.

1. **New slide:** Select this to add a new slide.
2. **Symbol:** You can insert diverse symbols. After entering the corresponding number keys, press the OK key.
3. **Template:** You can insert a text template saved on the phone. After selecting one, press the OK key. The selected template is inserted into the Message window.
4. **Emoticon:** To add an emoticon.
5. **Contacts:** You can add name or/and number stored in the address book. After selecting one from Name, Number and Name & Number, press the OK key. The address book opens and you can search the desired contact to be inserted.
6. **Image:** You can insert an image. (One image per slide)
7. **Video:** You can insert a video clip. (One video clip per slide)

8. **Sound:** You can insert a sound file. (One sound per slide)

9. **New image:** Camera module opens and you can take a photo. The taken image is inserted in the message window. (One image per slide)

10. **New video:** Video camera module opens and you can record a video. The recorded video is inserted in the message. (One video clip per slide)

* **New sound:** Voice recorder module opens and you can record a voice. The recorded voice is inserted in the message. (One sound per slide)

► **Send message:** Select this to send the created message.

► **Save to drafts:** Saves the message to drafts.

► **Preview:** Select this menu to preview the created message before transmission.

► **View objects:** Select this menu to view all the files attached to all slides of the current message.

► **Set slide:** Select this menu to configure the play time and the background colour of each of the slides.

- ▶ **Remove:** Select this menu to remove the current slide or an object included in the current slide.
- ▶ **Move to Slide:** Select this menu to move to the previous or the next slide.
- ▶ **Dictionary:** Select the desired dictionary mode.
- ▶ **Add to dictionary:** You can add a word in the dictionary.
- ▶ **Cancel:** Cancels the message writing and goes back to New message menu.

Note

- ▶ You can send a picture message straight from your camera, camcorder or sound recorder.
 1. After taking a picture with the camera, recording a video with the camcorder or recording sound with the Sound Recorder.
 2. Select Send.
 3. Select Send via Picture msg.
 4. The selected image, video, or sound is inserted into the Picture msg.
 5. Select Send Message from the Options Menu or press the right soft key → The message is transmitted.

Viewing picture messages

To preview picture message

1. Select Preview from the Options Menu to preview a created picture message.
2. Press up, down or OK [Pause] key to pause playback of the message, and press the OK [Play] key to resume playing the message.
3. When the message has finished playing, the detailed view screen appears. If you want to play the message again, click Play soft key.

You can use the following functions using the Options key from the Play screen.

- ▶ **Play/Pause:** Plays the message or pauses message playback.
- ▶ **Edit:** Displays the Message edit screen.
- ▶ **Send message:** Sends the message.
- ▶ **Save to draft:** Saves the message in the Draft box.
- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message. You can also save those files in different names to the specified location.

- ▶ **Mute(or Unmute):** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.
- ▶ **Move to Slide:** Move to the selected Slide.
- ▶ **View detail:** Displays the Detailed View screen. It shows you detailed information of messages.

Viewing picture messages in the Inbox, Outbox and Sentbox

1. Select an picture message to view its contents.
2. Press up, down or OK [Pause] key to pause playback of the message, and press the OK [Play] key to resume playing the message.

If you play an picture message, detailed view screen appears after message playing.

- Press the Play key to play the message.
- You can use the following functions using the Options key.

[Inbox / Detailed View Screen Menus]

- ▶ **Play:** Plays the message or pauses message playback.
- ▶ **Reply Sender/All:** Creates a reply to sender or all recipients of the selected message.

- ▶ **Forward:** Forwards the selected message.
- ▶ **Call:** Call back to the originator.
- ▶ **Save address:** Saves the sender's number to the address book.
- ▶ **New message:** Displays the Edit screen where you can create a new message.
- ▶ **Use:** Displays a screen (Get number/e-mail address/web address screen) that shows the number/e-mail address/web address included in the message.
- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message.
- ▶ **Mute/Unmute:** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.
- ▶ **Delete:** Deletes the selected message.

[Inbox / Play Screen Menus]

- ▶ **Play/Pause:** Plays the message or pauses message playback.
- ▶ **Reply Sender/All:** Creates a reply to sender or all recipients of the selected message.

- ▶ **Forward:** Forwards the selected message.
- ▶ **Call:** Call back to the originator.
- ▶ **Save address:** Saves the sender's number to the address book.
- ▶ **New message:** Displays the Edit screen in which you can create a new message.
- ▶ **Use:** Displays a screen (Get number/e-mail address/web address screen) that shows the number/e-mail address/web address included in the message.
- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message. You can also save those files in different names to the specified location.
- ▶ **Mute/Unmute:** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Move to slide:** Move to the selected Slide.
- ▶ **View detail:** Displays the Detailed View screen. It shows you detailed information of messages.

[Outbox / Detailed View Screen Menus]

- ▶ **Resend:** Resends the message.
- ▶ **Edit:** Edits the selected message.
- ▶ **Play/Pause:** Plays the message or pauses message playback.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Save address:** Saves the recipient's number to the address book.
- ▶ **New message:** Displays the Edit screen in which you can create a new message.
- ▶ **Use:** Displays a screen (Get number/e-mail address/web address screen) that shows the number/e-mail address/web address included in the message.
- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message.
- ▶ **Mute/Unmute:** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.
- ▶ **Delete:** Deletes the selected message.

[Outbox / Play Screen Menus]

- ▶ **Resend:** Resends the message.
- ▶ **Edit:** Edits the selected message.
- ▶ **Play/Pause:** Plays the message or pauses message playback.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Save address:** Saves the recipient's number to the address book.
- ▶ **New message:** Displays the Edit screen in which you can create a new message.
- ▶ **Use:** Displays a screen (Get number/e-mail address/web address screen) that shows the number/e-mail address/web address included in the message.
- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message. You can also save those files in different names to the specified location.
- ▶ **Mute/Unmute:** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.

- ▶ **Delete:** Deletes the selected message.
- ▶ **Move to slide:** Move to the selected Slide.
- ▶ **View detail:** Displays the Detailed View screen. It shows you detailed information of messages.

[Sent / Detailed View Screen Menus]

- ▶ **Play:** Plays the message or pauses message playback.
- ▶ **Edit:** Edits the selected message.
- ▶ **Reply Sender/All:** Creates a reply to sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Save address:** Saves the recipient's number to the address book.
- ▶ **New message:** Displays the Edit screen in which you can create a new message.
- ▶ **Use:** Displays a screen (Get number/e-mail address/web address screen) that shows the number/e-mail address/web address included in the message.

- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message.
- ▶ **Mute/Unmute:** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.
- ▶ **Delete:** Deletes the selected message.

[Sent / play screen menus]

- ▶ **Edit:** Edits the selected message.
- ▶ **Reply Sender/All:** Creates a reply to sender or all recipients of the selected message.
- ▶ **Play/Pause:** Plays the message or pauses message playback.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Save address:** Saves the recipient's number to the address book.
- ▶ **New message:** Displays the Edit screen where you can create a new message.
- ▶ **Use:** Displays a screen (Get number/e-mail address/web address screen) that shows the number/e-mail address/web address included in the message.

- ▶ **View objects:** Displays the screen (Object View Screen) in which you can view the audio, image, and video files included in the message. You can also save those files in different names to the specified location.
- ▶ **Mute/Unmute:** This menu allows you to determine whether to mute the sound when there is an audio or a video file included in the message.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Move to slide:** Move to the selected Slide.
- ▶ **View detail:** Displays the Detailed View screen. It shows you detailed information of messages.

Group message (Menu 5.1.3)

You can send a message to a group of people stored in your address book.

1. Press the left soft key [Options] in the To field.
2. Select Contacts and the group list of the contacts is displayed.
3. Mark the desired group(s) using the OK key and press the right soft key [Done].
4. Enter the title and create a message. Refer to the Picture message on p.55-58

E-mail (Menu 5.1.4)

Create e-mail

You can create a new e-mail (Electronic mail).

1. Select E-mail from New message, and press the OK key.
2. You can edit the items necessary to create an e-mail message by using the cursor.
3. Move the cursor to To field, and enter the e-mail address of the recipient of the e-mail.
4. Move the cursor to CC (Carbon Copy) field, and enter the reference e-mail address to forward the e-mail.
5. Move the cursor to BCC (Blind Carbon Copy), and enter a hidden reference e-mail address to forward the e-mail without forwarding information.
6. For the recipient (To), reference address (CC) and hidden reference address (BCC) fields only valid email addresses are allowed. When an e-mail address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for To and CC address fields and 10 recipients for BCC address field.
7. To enter data in the recipient (To), reference address (CC) and hidden reference address (BCC) fields, you can search the Contacts by using the Contacts key and use the following functions by using the [Option] key.
 - ▶ **Add contacts:** Select this menu to insert the name saved in Contacts.
 - ▶ **Send message:** Send the created e-mail.
 - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
 - ▶ **View object:** Show the attached file.
 - ▶ **Remove:** Remove the attached file.
 - ▶ **Cancel:** Exit the e-mail composer.
8. Move the cursor to the Subject field and create the subject. Use the following functions by using the [Option] key.
 - ▶ **Insert:** Select this menu to insert the symbol, templates and contacts.
 - ▶ **Dictionary:** Select this menu to use dictionary.
 - ▶ **Send message:** Send the created e-mail.

- ▶ **Save to drafts:** Select this menu to save the message in the draftbox.
 - ▶ **View object:** Show the attached file.
 - ▶ **Remove:** Remove the attached file.
 - ▶ **Cancel:** Exit the e-mail composer.
9. You can enter the message contents by moving the cursor to the Message field. Use the following functions by using the [Option] key.
- ▶ **Insert:** Select this menu to insert special characters, templates, and contacts. It's also possible to attach multimedia files.
 - ▶ **Preview:** You can preview the created e-mail before sending it.
 - ▶ **Dictionary:** Select this menu to use dictionary.
 - ▶ **Send message:** Send the created e-mail.
 - ▶ **Set mail priority:** You can configure the priority of the e-mail you wish to send.
 - ▶ **Save to drafts:** Select this menu to save the message in Drafts.
 - ▶ **View object:** Show the attached file.

- ▶ **Remove:** Remove the attached file.
- ▶ **Cancel:** Exit the e-mail composer.

10. When you have finished writing an e-mail, press the Send key to send the e-mail.

Inbox

Menu 5.2

1. You can view saved messages. Select a message and then press the OK key to view the message.
2. You can view the previous or next message by using the left and right keys.
3. To view a picture message(Notification), select Retrieve in the message view screen. Then the file is transmitted, and you can view the file when the transmission is complete.
4. You can use the following functions by using [Options] key.
 - ▶ **Reply Sender/All:** Creates a reply to sender or all recipients of the selected message.
 - ▶ **Forward:** Forwards the selected message. (Not supported for picture message(Notification) and WAP push messages.)

- ▶ **View:** You can view current message.
- ▶ **New message:** You can write a new message.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Delete:** Deletes the current message.
- ▶ **Message info.:** Shows the detailed information of the message.

Mailbox

Menu 5.3

Viewing e-mail message list

1. Select an e-mail account and then press the OK key to view the received e-mail list.
2. Using the Retrieve key, you can retrieve a new email list from the e-mail server of the selected account.
3. In e-mail list, you can use the following functions by using the [Options] key.
 - ▶ **Reply:** Creates a reply to the selected e-mail. You can write a reply using E-mail.

- ▶ **Reply all:** Creates a reply to all the recipients.
- ▶ **Forward:** Forwards the selected e-mail message to another e-mail address.
- ▶ **Open:** Opens selected e-mail.
- ▶ **Retrieve:** Retrieves new e-mail messages.
- ▶ **New message:** Creates new message.
- ▶ **Mark/Unmark:** Use mark/unmark option.
- ▶ **Delete:** Deletes an e-mail. Deleted e-mails are temporarily saved in Trash.
- ▶ **Delete from phone and server:** Delete a selected e-mail from phone and server.

Viewing an e-mail message

1. Select one of the received e-mails and press the Open key to receive the contents of the e-mail.
2. The contents of the received e-mail are automatically displayed in the View screen.
3. You can view the contents of the previous or next email by using the left/right soft keys.
4. In the e-mail View screen, you can select the following functions by using the [Option] key.

- ▶ **Reply:** Creates a reply to the selected e-mail message.
- ▶ **Reply all:** Creates a reply to all the recipients.
- ▶ **Forward:** Forwards the selected e-mail message to another e-mail address.
- ▶ **Save address:** Save or update the address of sender.
- ▶ **New message:** Write a new Text message, Picture message, Group message or Email.
- ▶ **Use:** Extract the number, email address or URL from e-mail message.
- ▶ **View objects:** Show the attached file.
- ▶ **Delete:** Deletes the selected e-mail message.

Trash

1. You can restore or permanently delete deleted e-mails in Trash.
2. Select Trash in the mailbox and press the OK key to view the deleted e-mail list.
3. Press the Delete key to delete a deleted e-mail permanently.

4. Press the Restore key to restore a deleted e-mail.
5. Using the Option key, you can select the following functions.
 - ▶ **Restore:** Restores a deleted e-mail.
 - ▶ **Delete:** Deletes an e-mail permanently.
 - ▶ **Mark/Unmark:** uses mark/unmark option.

Note

- ▶ The e-mails in Trash will not be received again.

Drafts

Menu 5.4

1. You can view saved messages. Select a message and then press the OK key to edit the message.
2. You can use the following functions by using the [Options] key.
 - ▶ **Edit:** You can edit messages.
 - ▶ **New message:** You can write a new message.
 - ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
 - ▶ **Filter:** Displays messages by desired message types.

- ▶ **Delete:** Deletes the current message.

Outbox

Menu 5.5

Outbox is a temporary storage place for messages waiting to be sent.

1. Select a message and then press the OK key to view the message.
2. You can use the following functions by using [Options] key.

[For sending / waiting messages]

- ▶ **New message:** You can write a new message.
- ▶ **View error status:** Shows the reason for transmission failure for waiting messages.
- ▶ **Cancel:** You can stop sending/waiting status.

[For sending a failed message]

- ▶ **Resend:** Resends the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **Edit:** You can edit messages.
- ▶ **New message:** You can write a new message.

- ▶ **View status:** Shows the reason for transmission failure.

- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.

- ▶ **Filter:** Displays messages by desired message types.

- ▶ **Delete:** Deletes the current message.

- ▶ **Message info.:** You can check the message type, date and time and where it's saved.

Sent items

Menu 5.6

Shows the messages you sent (Text message / Picture message / E-mail).

[Options]

- ▶ **Reply Sender/All:** Creates a reply to sender or all recipients of the selected message.
- ▶ **Forward:** Forwards the selected message.
- ▶ **View:** Opens the selected message.
- ▶ **Edit:** You can edit messages.
- ▶ **New message:** You can write a new message.

- ▶ **Save address:** Saves the recipient's number to the address book.
- ▶ **Mark/Unmark:** You can select one or more messages for multiple deletion.
- ▶ **Filter:** Displays messages by desired message types.
- ▶ **Delete:** Deletes the current message.
- ▶ **Message info.:** Shows the detailed information of the message.

Templates

Menu 5.7

You can add, edit, and delete frequently-used useful phrases.

You can save frequently-used phrases in the input window in advance. You can save these useful phrases using the Options menu.

- ▶ Depending on your service provider, the useful phrases are saved as a default.

Emoticon

Menu 5.8

You can add, edit and delete frequently-used emoticons. 18 emoticons are saved as a default.

Settings

Menu 5.9

Text message (Menu 5.9.1)

Message centre

- Input the address of Text message centre.

Delivery report

- On / Off

Validity period

- 1 hour / 6 hours / 12 hours / 1 day / 2 days / 1 week / Maximum

Character encoding

- Unicode detection / Default alphabet

Picture message (Menu 5.9.2)

You can configure picture message related options.

1. **Delivery report:** Allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending delivery confirmation mail to a sender.

- ▶ **Request report:** Determines whether to request a delivery confirmation mail for a Multimedia message.
 - ▶ **Allow report:** Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.
2. **Read reply:** Allows you to determine whether to request a read confirmation mail to a recipient, and whether to allow sending read confirmation mail to a sender.
 - ▶ **Request reply:** Determines whether to request a read confirmation mail for a Multimedia message.
 - ▶ **Allow reply:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
 3. **Auto retrieve:** Allows you to determine whether to automatically download a picture message when a picture message notification arrives.
 4. **Priority:** You can select the priority level of the messages (Low, Normal and High).
 5. **Validity period:** Allows you to configure the term of validity for a message when transmitting a picture message. The message would be saved in the picture message server only for the configured term.
 6. **Slide duration:** Allows you to configure the duration of each page when writing the message.
 7. **Message size:** Configures the size of a message for picture message transmission. You can make a message up to message size.
 8. **Delivery time:** Configures the delivery time of message to the recipient. Picture message centre will deliver the message after delivery time.
 9. **Picture msg. centre**

This menu allows you to configure network information such as MMSC, and WAP gateway, to send a picture message.

In the Option menu, you can add or delete a profile by using the left soft key. You can finish the configuration by pressing “Done” key.

A profile name selected by a checkmark is the current configured value. You can view and edit

the contents of the profile in the edit mode by pressing the Edit key. The edit screen also appears when creating a new profile under Options. The meanings of the items are given below.

- ▶ **Title:** Profile name.
- ▶ **MMSC URL:** Enter the picture message centre URL.
- ▶ **MMS Proxy:** Enter the WAP gateway port number.
- ▶ **Connection mode:** Specify the UDP(CO/CL), the TCP with proxy, the TCP without proxy.
- ▶ **Access points:** Specify the access point name (see WAP connection settings.)

Press the Done key(Options) to save the changes and complete Picture msg. centre setting.

If you have made changes, press the Done key to save the changes and exit.

Email (Menu 5.9.3)

You can configure settings for receiving and transmitting e-mails.

1. **Allow reply email:** Determines whether to allow sending a read confirmation mail for a read confirmation mail request.
2. **Request reply email:** Determines whether to request a read confirmation mail.

3. Auto retrieve

You can configure Auto retrieve to retrieve e-mails automatically from the incoming mail server. When a new mail arrives, an icon appears at the top of the screen. You can select that auto receiving time slot have Off, 15 minutes, 1 hour, 4 hours, 1 day. Please note that additional charges may occur using [Auto retrieve] feature.

4. Signature

You can configure a text signature to be attached to the end of an e-mail. The configured signature text is automatically or manually attached to the end of the e-mail when it is sent and can be attached differently according to the account which is using as a default.

5. Email accounts

1. You can create or configure an e-mail account including the e-mail server and user ID.
2. You can edit a selected e-mail account by pressing the Edit key.
3. You can select an e-mail account to be used to send an e-mail using the OK key.
4. You can select the following functions using the Option key.
 - ▶ **Add new:** Create a new e-mail account.
 - ▶ **Delete:** Deletes a selected e-mail account.

Creating a new e-mail account

1. Select Add new from the E-mail account menu options.
2. By moving the cursor to a desired item, you can edit the item to create an e-mail account.
3. Move the cursor to the Title field and enter a title.
4. Move the cursor to the User name field and enter the user name of the e-mail account.
5. Move the cursor to the Password field and configure e-mail account password.
6. Move the cursor to the E-mail address field and configure the e-mail address for outgoing mail.
7. Move the cursor to the Reply e-mail address field and configure the e-mail address to reply to your email.
8. Move the cursor to the Outgoing mail server field and configure the outgoing e-mail server.
9. Move the cursor to the Incoming mail server field and configure the incoming e-mail server.
10. Move the cursor to the SMTP port number field and configure the mail server port number. In general, the SMTP(Outgoing mail server port number) is 25.
11. Move the cursor to the Incoming server port field and configure the mail server port number. In general, the incoming mail server port number is 110(POP3) or 143(IMAP4).
12. Move the cursor to Maximum receive size and configure the maximum e-mail size. The permissible maximum receive size is no more than 300KB.

13. Move the cursor to the Mailbox type and select the email inbox type. You can select one between POP3 and IMAP4.
14. Move the cursor to Save to server and determine whether to leave a copy of messages on the incoming server or not. You can select On or Off using the List key.
15. Move the cursor to the Save sent mail into field and select where to save the sent mails.
16. Move the cursor to the Access point field to select an access point to connect to the Internet. You can select a configured access point using the List key.
17. Move the cursor to the Auto retrieve item and decide a auto receiving E-mail message as a fixed time slot, You can select on/off using the List key. If you want to utilize this function, there is selected auto retrieve in E-mail setting. But auto retrieve is not selected, you can select auto retrieve in Option.
18. Move the cursor to the SMTP authentication field and decide whether the outgoing mail server requires authentication. You can select On or Off using the List key. When the SMTP authentication is set to On, you can enter the SMTP Username and SMTP Password for SMTP authentication.
19. Move the cursor to the APOP secure login field and decide whether to activate APOP secure login or not.
20. Press the Done key to complete the e-mail account configuration.

Editing an e-mail account

1. Select a desired e-mail account from the e-mail account list and press the Edit key.
2. You can edit desired fields by moving the cursor up and down.
3. When configuration is complete, press the Done key to complete the e-mail account configuration.

Video mail (Menu 5.9.4)

You can add or modify the video mail centre.

Voice mail (Menu 5.9.5)

You can add or modify voice mail centre.

Service message (Menu 5.9.6)

You can configure service message receipt option.

- ▶ **Never:** Your phone will not receive any service message.
- ▶ **With confirmation:** You can receive service message when you confirm it.
- ▶ **Without confirmation:** Your phone will receive service messages.

Browser

Home

Menu 6.1

You can launch the web browser and access the homepage of the web service provided by service provider.

- ▶ You can also directly access to the Internet by pressing the left soft key [Internet] in idle mode.

Bookmarks

Menu 6.2

To store the frequently access or favourite URLs/Pages. Connect, Send, Add new, Edit, or Delete operations can be performed on Bookmarks.

- ▶ To add a new bookmark, press the right soft key [Add]. Enter "Title" and associated "URL" information and press "Done" key to save.
- ▶ To connect to a desired bookmark select "Connect" from "Options" menu.
- ▶ To send the bookmark to others, select "Send" from "Options" menu. You can send it via text message/ picture message/ group message.
- ▶ To delete a bookmark, select "Delete" from "Options" menu.

Saved pages

Menu 6.3

The phone can save the page on display as an off-line file. Up to 20 pages can be saved.

Go to URL

Menu 6.4

Enter address

User can edit a URL to directly connect to the page and connect to a edited URL.

To enter a symbol, press the Asterisk ("*") key to display symbol table and to switch input mode, press the POUND ("#") key.

Recent pages

"Recent pages" shows the recently-browsed pages. (History)

Security

Menu 6.5

If user presses Certificates, certification information is shown.

User can clear secure session information by pressing Session clear.

Certificates

If stored, a list of root/ca certificates required for WTLS/TLS can be found here. Certificates can be viewed from the list.

Session clear

Secure (WTLS/ TLS) session data can be cleared using this option. Session data should be cleared to establish a new secure session.

Settings

Menu 6.6

Profiles (Menu 6.6.1)

Select the appropriate profile by pressing the OK key. This will activate the profile to initiate browser launch.

Character encoding (Menu 6.6.2)

Sets the browser default character set to one of the following.

- Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).

Scrolling control (Menu 6.6.3)

Allows you to set the scroll speed by selecting the number of lines to scroll. Select from 1 line, 2 lines and 3 lines.

Show Image (Menu 6.6.4)

Allows you to enable or disable image display during browsing.

Note

- Enabling this function will delay displaying of images until transmission is completed. Disabling this function will prevent the browser from downloading images from the server, thus allowing faster transmission.

Cache (Menu 6.6.5)

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies (Menu 6.6.6)

Enabling Cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Clear cache (Menu 6.6.7)

Deletes all web pages previously stored in cache.

Clear cookie (Menu 6.6.8)

Deletes all previously stored cookies.

Images

Menu 7.1

This consists of an embedded link for downloading images through the Internet, Default images, and My Images folders.

The photos taken using the camera are stored in the Images folder and you can create new folders to manage them. You can also save selected files as animated Gifs and send multiple files to other people.

When a file is selected, the following Option will be displayed by pressing the left soft key [Options].

- ▶ **View:** You can view the selected image.
- ▶ **New folder:** You can create a new folder within the folder currently selected.
- ▶ **Files**
 - Edit: Enables the image to be edited.
 - Move: Enables the file to be moved to other folder.
 - Copy: Enables the file to be copied to other folder.
 - Delete: Deletes the selected image.
 - Delete all: Deletes all the images.


- Rename: You can rename the image.
- File info.: Shows information of the selected image file.

- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
- ▶ **Send:** You can send the selected image via Picture message, Group message, Email or Bluetooth.
- ▶ **Main screen theme:** You can set an image as the screen theme (Home screen, Outgoing call, Switch on, Switch off).
- ▶ **Front screen theme:** You can set an image as the screen theme (Home screen, Outgoing call)
- ▶ **Slide show:** You can start or set (normal or full screen, at what pace) a slide show.
- ▶ **Make GIF animation:** You can create with different photos an animated GIF file (Up to 10 files of 176X220 resolution and the limitation of file size is 2Mbyte for displaying).
- ▶ **Sort by:** You can sort the files by name, date, or file type.
- ▶ **List view:** To view the images as simple or detailed list.

- ▶ **Memory status:** You can view the memory status (handset or external memory card).

Press the right soft key to execute [Send] function immediately.

Select a thumbnail in the Thumbnail list screen, and select [View] to view the image enlarged.

In the large image screen, you can view in zoom mode by clicking [] at the centre, and you can execute the [Send] function using the right soft key.

Using the Options menu, you can use the following functions.

Using [Files] menu, you can delete, rename and edit a file and you can view the file information. Using the Edit menu, you can rotate, resize and crop an image and you can insert text or an effect.

Select [Files] and select Edit option to enter the Edit window.

- ▶ **Rotate:** You can rotate the image by 90°, 180° or 270°.
- ▶ **Resize:** To resize the image to smaller size.
- ▶ **Insert:** To add Text, Frame, Element.

- ▶ **Edit object:** To use the Image Defect & Clipping functions.
- ▶ **Effect:** To apply the desired effect to the image.
- ▶ **Mirror:** To reverse it as a mirror image (right<left).
- ▶ **Undo/Redo:** Select this to undo or redo the last operation on the image.

Videos

Menu 7.2

The folder Videos consists of an embedded link for downloading videos through the Internet, and My videos as default folder for recorded or downloaded video clips.

You can here manage or send downloaded or captured videos clips.

The followings are available using the left soft key [Options] in the Video list.

- ▶ **Play:** Plays the video.
- ▶ **New folder:** You can create a new folder.
- ▶ **Files**

- Move: To move the file into My Videos folder.
- Copy: To copy the file in My Videos folder.

- Delete: Deletes the selected video.
 - Delete all: Deletes all the videos.
 - Rename: You can rename the video.
 - File info.: Shows information of the selected video file.
- ▶ **Mark/Unmark:** Using the Mark function, you can send, delete, move and copy multiple files.
 - ▶ **Send:** You can send the selected image via Picture message, Group message, Email or Bluetooth if not protected by Digital Rights Management (DRM).
 - ▶ **Sound theme:** You can set a video as the voice ringtone or video ringtone.
 - ▶ **Sort by:** You can sort the files by name, date, or file type.
 - ▶ **List view:** To view the images as simple or detailed list.
 - ▶ **Memory status:** You can view the memory status (handset or external memory card).

You can view a video using the video player. Video files are displayed in the list as thumbnails. You can select a desired video by using the Up, Down, Left, and Right keys. Select a desired video and select Play to view the recorded video.

Select [Send] to attach the selected video to a picture message, group message, Email, or Bluetooth.

When option 1. Play is selected, the video clip will be played with the Media Player. To pause the playback, press the OK key during the playback. To resume the paused playback, press the OK key once again.

To capture the screen shot, press the right soft key when the playback is paused.

To view the current playback in full screen, press the right soft key during the playback.

To return to the previous screen size, press the right soft key once again in the full screen mode.

- ▶ **Pause/Play:** You can play or pause playing a file for a moment.
- ▶ **Send:** You can send the video via Picture message, Group message, Email or Bluetooth if the file is not protected by Digital Rights Management (DRM).
- ▶ **Go to list:** Goes back to the list.
- ▶ **Sound theme:** You can set a video as the voice ringtone or video ringtone.
- ▶ **Wide view:** You can wide view the video.

- ▶ **Capture:** You can save what is on the paused screen in an image file (activating only in the Pause mode).
- ▶ **Mute/Unmute:** If the Volume is set to more than 0, the Mute mode goes active and if the Volume is set to 0, the Unmute mode goes active.
- ▶ **Set repeat:** You can set the repeat option (None/Current file/All files).
- ▶ **Player skin:** You can select the desired player skin.
- ▶ **Move to file**
 - Previous file: Plays the previous video file.
 - Next file: Plays the next video file.

Sounds

Menu 7.3

The folder Sounds consists of embedded links for downloading sounds/music through the Internet, Default sounds, My Sounds, and Voice recorder.

You can here manage, send or set as ringtones sounds.

The followings are available using the left soft key [Options] in the Sound list.

- ▶ **Play:** Plays the sound.
- ▶ **New folder:** You can create a new folder.
- ▶ **Files**
 - File info.: Shows information of the selected sound file.
- ▶ **Send:** You can send the selected sound via Picture message, Group message, Email or Bluetooth if not protected by Digital Rights Management (DRM).
- ▶ **Sound theme:** You can set a sound as the voice ringtone or video ringtone, Message tone, Switch on/off sound.
- ▶ **Sort by:** You can sort the files by name, date, or file type.
- ▶ **Memory status:** You can view the memory status (handset or external memory card).

When option 1. Play is selected, the sound will be played with the Media Player. To pause playback, press the OK key during the playback. To resume the paused playback, press the OK key once again.

You can enter the Option menu by pressing the left soft key where you use the various utility functions using the up and down keys.

Move to the desired menu using the up and down key and press the OK key.

1. **Play/Pause:** You can play, or pause playing a file.
2. **Send:** You can send a file via Picture message, Group message, Email or Bluetooth if not protected by Digital Rights Management (DRM).
3. **Go to list:** Goes back to the list.
4. **File Info:** You can check Information on a file being played (File name, Size, Date, Type, Protection status).
5. **Mute/Unmute:** If the Volume is set at more than 0, the Unmute mode goes active, and if the Volume is at 0, the Mute mode is activated.
6. **Set repeat:** You can set the Repeat mode.
 - ▶ **None:** You can release the Repeat mode.
 - ▶ **Current file:** You can repeat the current file.
 - ▶ **All files:** You can play all files in the current directory.
7. **Visual effect:** You can change the visual effect of the player.
8. **Player skin:** You can select the desired player skin.

9. Move to file

- ▶ Previous file: Plays the previous sound file.
- ▶ Next file: Plays the next video file.

0. **Equalizer:** You can select the desired equalizer or set an user defined equalizer.

Applications

Menu 7.4

ActionInLife is stored as default. And you can download more applications by pressing the left key [Options] and selecting Connect. For further information, please refer to page 84.

Others

Menu 7.5

Other files but for images, videos, sounds, and applications are stored in this folder. They are received by e-mail.

Bluetooth

Menu 7.6

The files received using Bluetooth are saved in this folder. You cannot create a sub-folder within the Bluetooth data folder.

Although all types of files can be saved here, you can only copy or move files managed by My Media. To set a file as your wallpaper or ringtone, you must copy or move the file into the corresponding folder. For example, you can copy *.jpg files to My Pictures folder, *.mp3 files to My Sounds and *.3gp files to My Videos. You cannot copy or move files that are not managed by My Media.

The options displayed depend on the type of file selected. For instance, in case of an image, the following functions are supported.

1. View/Edit/Move/Copy/Delete/Delete all/Rename file(s).
2. Mark/Unmark one or all file(s).
3. Send a file via picture message, E-mail or Bluetooth if not protected by Digital Rights Management (DRM).
4. If relevant, set an image as wallpaper for the main or front display.
5. If relevant, start or set (normal or full screen, at what pace) a slide show.

6. If relevant, create with different pictures an animated GIF file.
7. Sort the files by name, date or file extension.
8. View the files(s) in a simple or detailed list, or in a grid.
9. Memory info (handset or external memory card).

External memory

Menu 7.7

If you purchase an optional external microSD memory card, you can manage more content. Refer to the section “How to use a microSD memory card” to learn how to insert and remove the memory card. You can manage content using the following menus as you do on your phone.

Images (Menu 7.7.1)

Provides the same functions as those in the Images menu on your phone. If you have external memory installed on your phone, you can save pictures taken by the camera directly to the external memory. Although all the functions are the same as those on your phone, the wallpaper function is not supported.

To set a picture as your wallpaper, you must copy or move the picture to the phone.

Videos (Menu 7.7.2)

Provides the same functions as those in the My Videos menu on your phone.

Sounds (Menu 7.7.3)

Provides the same functions as those in the My Sounds menu on your phone.

Other files (Menu 7.7.4)

Provides the same functions as those in the Others menu on your phone.

Play lists

Menu 7.8

This option enables you to view a list of saved audio/video files.

You can add an audio/video file stored in your phone and memory card.

Press the left soft key [Options] to display the following popup menu items.

- ▶ **Play:** Plays the selected audio/video file.
- ▶ **Add new:** You can add a new file from the audio/video list.
- ▶ **Sort by:** You can sort the files by name, date or file type.
- ▶ **Memory status:** You can view the memory status (handset or external memory card).

Games & Downloads

This phone supports Java™ so that you can download games, and play them on your handset.

Note

- Please note that downloading a stuff (game, ringtone, wallpaper, etc.) usually requires additional charge.

My games & apps

Menu 8.1

This menu is used to locate and run downloaded applications, e.g. games.

More games

Menu 8.2

It connects to the game portal web page so that you can download games.

Downloads

Menu 8.3

It connects to a web page so that you can download applications.

Alarm clock

Menu 9.1

If you set the alarm, "🕒" appears on the Indicator bar. The specified alarm sounds at the scheduled time. Press the [OK] key to stop the alarm, and the alarm is released. Press the the right soft key [Snooze] and choose the snooze interval. The alarm sound is stopped and resumed after selected Snooze duration. You can configure up to 5 alarms.

1. Select your desired alarm to configure in the alarm list. If there is no alarm, press the right soft key [Add] to add a new alarm.
2. **Set/Cancel alarm:** Set or cancel the alarm using the options for specifying the alarm off or by choosing the alarm time.
3. **Input alarm time:** Input your desired alarm time by specifying Hour and Minute. Choose either 'AM' or 'PM' visible if 12 hour format is specified for the phone.
4. **Select repeat mode:** Select desired repeat mode using the left and right direction keys or from the list pressing the centre key.

5. **Select bell:** Select the bell to ring at the alarm time, using the left add right direction keys or from the pressing the centre key.

6. **Input memo:** Input alarm name.

7. When you have completed alarm clock setting, press the right soft key [Done].

Connectivity

Menu 9.2

Bluetooth (Menu 9.2.1)

Bluetooth connection

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, PDA, a remote screen, or other phones.

You can, for example, have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

Note

- ▶ We recommend that your phone and the Bluetooth device you are communicating with be within a range of 10 meters. The connection may be improved if there are no solid objects in between your phone and the other Bluetooth device.

1. Getting started

- **Menu → 9. More → 2. Connectivity**
→ **1. Bluetooth → 1. Paired devices**

To use the Bluetooth function, you must first set Bluetooth to "On". Complete the above procedures to set Bluetooth to "On".

2. Configuring Bluetooth settings

- **Menu → 9. More → 2. Connectivity**
→ **1. Bluetooth → 2. Settings**
- **Bluetooth:** To use the Bluetooth function, set it to [On]. Otherwise, set it to [Off].

- **My handset's visibility:** Set [My handset's visibility status] to [Shown to all] so that other devices can detect your phone when they are searching for a Bluetooth device. If you select [Hidden], other devices will not be able to detect your phone when they are searching for a Bluetooth device.

- **My handset's name:** You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when [My handset's visibility] is set to [Shown to all].

3. Paired device

Pairing Devices(Pairing with a device)

If a paired Bluetooth device already exists,

- **Menu → 9. More → 2. Connectivity**
→ **1. Bluetooth → 1. Paired devices**
→ **Options → Add new**

If there is no paired Bluetooth device,

- **Menu → 9. More → 2. Connectivity**
→ **1. Bluetooth → 1. Paired devices → Add**

Options

1. **Add new:** Using this menu, you can pair a new Bluetooth device with your phone.
2. **Assign short name:** Using this menu, you can rename a paired phone as required.
3. **Connecting/Disconnecting the device**
 - ▶ Select the Connect, allows you to active to the bluetooth connection.
 - ▶ If you want to close the connection to the selected device, select the Disconnect.
4. **Delete:** Using this menu, you can delete the paired Bluetooth device.
5. **Delete all:** Using this menu, you can delete all of the paired Bluetooth devices.
 - ▶ To search for a Bluetooth device to connect, press the above key.
 - ▶ Screen shows "Searching for devices". Bluetooth devices within a range of 10m will be found.
 - ▶ If Bluetooth devices are found, these devices are listed on the screen. If no Bluetooth device is

found, you will be asked if you want to search again.

▶ Pairing procedure

- Press the Bond key. A window will appear on the screen asking you to enter your password.
- After creating a password (of 1 to 16 digits), the user of the other device must enter the password for pairing. The user of the other device must know the password in advance for authentication.
- If the other party authenticates the connection, the Paired device list is displayed on the screen and you can use your phone to communicate with the other device.

<Disconnecting devices>

1. Select a device to disconnect from the Paired devices screen.
2. You can disconnect a device by pressing the Delete key or by selecting Options → Delete. To disconnect all paired devices, select Options → Delete All.

<Transmitting data using Bluetooth>

1. To transmit data from your phone to another Bluetooth device, first select the application where the target data is saved. For example, to send data in the Media album to another device, select
 - Menu → 7. Media album → 1. Images /2. Videos / 3. Sounds → Select data to transmit → Send → 4. Bluetooth
2. Transmitting data
 - If a paired Bluetooth device exists,
 - 1) Select the desired device from the paired devices listed on the screen.
 - 2) If the other party selects [Yes] for [Connection request], the data is transmitted.
 - If there is no paired Bluetooth device,
 - 1) Select Search to search for nearby Bluetooth devices to connect.
 - 2) Select the device to which you want to transmit data from the devices on the screen and press the Push key.
 - 3) If the other party selects [Yes] for [Connection request], the data is transmitted.

<Receiving data using Bluetooth>

Menu → 9. More → 2. Connectivity →

1. Bluetooth → 1. Paired devices
 1. If you enable Bluetooth function as described above, you can connect your phone to other Bluetooth devices.
 2. If another party attempts to transmit data, the [Connection request] question will appear on the screen. If you select [Yes], the data will be transmitted to your phone. During data transmission, the Bluetooth icon flashes.

<Bluetooth data storage folder>

You can check the received data by selecting Menu → 7. Media album → 6. Bluetooth.

4. Device

<Connecting a headset>

1. Select Menu → 9. More → 2. Connectivity → 1. Bluetooth
2. Connect the headset according to the procedures described in the Pairing Devices section.

3. To use the headset, select the headset from the registered devices, press the Option key and then select 3.Connect.
4. To check that the selected headset has been connected successfully, press the Option key. If it is properly connected, 3.Disconnect will appear. If it is not connected, 3.Connect will appear.


<Connecting a handsfree kit>

1. Menu → 9. More → 2. Connectivity → 1. Bluetooth
2. Connect the handsfree kit according to the procedures described in the Pairing Devices section.
3. To use the handsfree kit, select the handsfree kit from the registered devices, press the Option key and then select 3.Connect.
4. To check that the selected handsfree kit has been connected successfully, press the Option key. If it is properly connected, 3.Disconnect will appear. If it is not connected, 3.Connect will appear.


Server synchronisation (Menu 9.2.2)

If Sync service is supported by your network operator, this service function synchronizes the data in a phone and the data on a server such as Contacts, Calendar, and Tasks via a wireless network.


Connect

1. Select the Connect item and then press .
2. Connect to the server with the selected server profile and the synchronization animation is displayed while the synchronization is performed.

Logs

Select the Logs item and then press  to view the log for the last synchronization operation performed.

Server synch. centre

1. Select the Server synch. centre item and then press .
2. This menu allows you to configure the profile for a synchronization server.
 - ▶ **Profile name:** Input the name for the profile.
 - ▶ **Host address:** Contact your service provider.

- ▶ **Proxy IP address:** Enter the WAP gateway address and port number.] User name: Enter your user ID for synchronization server.
- ▶ **Password:** Input your password.
- ▶ **Contacts:** Select whether to synchronise Contacts or not.
- ▶ **Contact name:** Input the contacts database name for server access.
- ▶ **Calendar:** Select whether to synchronise Calendar or not.
- ▶ **Calendar name:** Input the calendar database name for server access.
- ▶ **Tasks:** Select whether to synchronise Tasks or not.
- ▶ **Tasks name:** Input the Tasks database name for server access.
- ▶ **Sync type:** Select the synchronization type below.

- Normal

The phone and the server are required to exchange information about the modified data.

- Backup

The phone sends all the data from a database to the server. The server is expected to replace all data in the target database with the data sent by the phone. This means the phone overwrites all the data in the server database.

- Restore

The server sends all its data from a database to the phone. The phone is expected to replace all data in the target database with the server sent by the server. This means the server overwrites all data in the phone database.

- ▶ **Access point:** Select an access point to use for the data connection.

Dial-up network (Menu 9.2.3)

You can use your phone with a variety of PC connectivity and data communications applications. Select USB or Bluetooth to use for the data connection.

Calculator

Menu 9.3

You have a calculator that provides 4 calculations of addition, subtraction, multiplication and division as well as scientific functions.

1. Press [Func].
2. Select appropriate function.
3. Select OK.

You can input numbers using the number keys, and operators using the up, down, left, and right direction key. You can input a decimal point by pressing the # key. Whenever you press the Clear key, characters are sequentially deleted in reverse direction. Whenever you long press the clear key, all the characters are deleted in reverse in one shot.

When calculation is completed and the result is displayed on the screen, pressing a number clears the previous result and the calculator waits for new input, even if you did not press AC key. When calculation is completed and the result is displayed on the screen, pressing a symbol saves the result into the symbol, and continues calculation.

World time

Menu 9.4

The World time function provides time information of major cities worldwide.

1. Select world time.
2. You can view the time of desired country or city using the left and right key.
3. You can select a desired city as a base using [Set].
4. The home city selected in world time is the base for daylight saving calculation for time.

Unit converter

Menu 9.5

Using this menu, users can convert Currency, Surface, Length, Weight, Temperature, Volume & Velocity.

Currency (Menu 9.5.1)

1. Select the Currency menu.
2. Users can set a currency exchange rate using [Rate].

3. Input currency rates for up to 5 currencies equivalent to GBP and then press [Done]. Then you can convert one currency to another.
4. Select the desired units to convert and convert to using the OK key [List].
5. Input numbers. Conversion is automatically calculated.
6. Press [Reset] to clear the current input Field.

Surface (Menu 9.5.2)

1. Select Surface menu.
2. Select desired unit to convert using [Unit].
3. Input standard unit and view converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.

Length (Menu 9.5.3)

1. Select length menu.
2. Select the desired unit to convert using [Unit].
3. Input the standard unit and view your converted value.

4. Press [Reset] to clear the current input field and locate the cursor in the input field.

Weight (Menu 9.5.4)

1. Select Weight menu.
2. Select desired unit to convert using [Unit].
3. Input standard unit and view converted value.
4. Press [Reset] to clear the current input Field, and locate the cursor in the input field.

Temperature (Menu 9.5.5)

1. Select Temperature menu.
2. Position the cursor in desired unit by using up or down arrow key.
3. Input standard unit and view converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.

Volume (Menu 9.5.6)

1. Select Volume menu.
2. Select desired unit to convert using [Unit].
3. Input standard unit and view converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.

Velocity (Menu 9.5.7)

1. Select Velocity menu.
2. Select desired unit to convert using [Unit].
3. Input standard unit and view converted value.
4. Press [Reset] to clear the current input field and locate the cursor in the input field.

Display

This menu allows you to personalise the display options of the screens and of the menus' entire graphic interface.

Screen theme

Menu *.1

You can set the screen theme to be displayed on the main screen.

Home screen (Menu *.1.1)

- ▶ **Wallpaper:** You can select an image to set up as a background.
- ▶ **Display items:** You can select which items to display on the screen: Calendar+Clock, Calendar, Clock, Dual clock or Do not show.

When a Calendar item is selected to be displayed, you can set the calendar type. When a clock item is selected to be displayed, you can set the clock type and clock font color.

Outgoing call (Menu *.1.2)

You can select the image to be displayed while dialling a number.

Switch on (Menu *.1.3)

You can select the image to be displayed while the phone is being switched on.

Switch off (Menu *.1.4)

You can select the image to be displayed while the phone is being switched off.

Front screen theme

Menu *.2

You can set the screen theme to be displayed on the front screen.

Home screen (Menu *.2.1)

- ▶ **Wallpaper:** You can select an image to be displayed on the front screen.
- ▶ **Clock type:** You can set the desired clock type from Do not show, Small, and Large. When "Small" clock type is selected, you can set the clock font color.
- ▶ **Colour of clock's chars:** Select the desired clock font colour.

Outgoing call (Menu *.2.2)

You can select the image to be displayed while dialling a number.

Backlight Menu *.3

You can set the backlight duration on the Main screen, Front screen and Keypad each.

Font Menu *.4

You can set the font style, dialing font size, and dialing font color using the left/right navigation keys.

Handset scheme Menu *.5

Select the desired handset scheme between Orange and Metal.

Download more Menu *.6

Connects to the Internet. And you can download display images.

Profiles

The profiles menu allows you to personalise and set call tones, message tones, and videophone event tones.

The General and Loud profiles are preset by the manufacturer, but may be personalized.

The Silent and Vibration profiles are preset and CANNOT be personalized by the User.

User define menus 1, 2, and 3 are completely available to users for all their needs.

1. Normal
2. Silent
3. Vibrate only
4. Outdoor
5. Headset
6. Customised 1
7. Customised 2
8. Customised 3

The profiles may be personalized in the following menus:

- ▶ **Alert by:** You can personalize the type of signal made by the Videophone, choosing between Ring, Vibration, Silent, Ring & Vibration, Ring after vibration and Max Ring & Vibration.
- ▶ **Voice ringtone:** You can select a file from among your own personal files or from the default files, to be played by the videophone when receiving a voice call.
- ▶ **Video ringtone:** You can select a file from among your own personal files or from the default files, to be played by the videophone when receiving a video call.
- ▶ **Volume:** You can set the ring tone volume, choosing from 7 available levels.
- ▶ **Message alert:** You can set how often the videophone is to inform you of a received message until it is read.
- ▶ **Message tone:** You can select a file from among your own personal files or from the default files, to be played by the videophone upon receiving a message.
- ▶ **Key tone:** You can set the effect to be played when pressing the keys.

- ▶ **Key tone Volume:** You can set the volume of the chosen effect, choosing from 7 available levels.
- ▶ **Flip tone:** You can select one of the available files, to be played by the videophone when flipped open.
- ▶ **Confirmation tone:** You can set the confirmation tone to be played by the videophone to confirm actions.
- ▶ **Switch on sound:** You can set the effect to be played when the videophone is switched on.
- ▶ **Switch on file:** You can select which file will be played when the videophone is switched on.
- ▶ **Switch off sound:** You can set the effect to be played when the videophone is switched off.
- ▶ **Switch off file:** You can select which file will be played when the videophone is switched off.

Calendar

Calendar

Menu #.1

Schedule inquiry and search

1. Reference by Months

You can refer to your schedule by months. The cursor is on the current date, and the registered date is underlined.

The schedule saved for the date where the cursor is located is represented by an icon. Pressing the shortcut key 1 moves to the previous year and pressing key 3 move to the next year and pressing key 5 moves to today. Pressing key 7 moves to the previous month, and key 9 moves to the next month. You can move the date using the up, down, left, and right direction keys.

2. Reference by Days

Pressing the 'View' key in the reference by month moves to reference by day where you can refer to your schedule by days. You can refer to the moving date tab using the left and right key. As a search result, brief schedule contents, repetition set up configuration, and alarm set up configuration are displayed. You can send the


schedule to another phone or an Internet site through SMS(Text message) or Picture message or Group message or E-mail or Bluetooth.


3. Detailed reference

You can refer to a detailed schedule, that is the whole contents of the schedule configured by user. You can send the schedule to another phone or an Internet site through SMS(Text message) or Picture message or Group message or E-mail or Bluetooth.

Search schedule

You can add a schedule. You can configure the start date, start time, end time, subject, alarm of the schedule, repetition, expiration date.

Configurable repetition options	
Once	Icon does not exist.
Daily	
Weekly	
Monthly	
Annually	
User setting	

Configurable alarm options	
No alarm	Icon does not exist.
On time	
15 mins before	
30 mins before	
1 hour before	
1 day before	
3 days before	
1 week before	

Delete schedule

1. Previous entries

You can delete all previous entries using this function.

2. All entries

You can delete all saved schedule contents using this function.

Set up and release holiday

You can set up user holiday(On the day).

Schedule notification

If the user has configured the alarm setting, the specified alarm sound will ring. If the notification time is before the schedule start time, you can set up the alarm again.

To do

Menu #.2

You can view, edit and add jobs to do. Jobs to do are displayed in time order. The jobs already finished and unfinished are displayed in different ways.

Add

To add a job, press the 'Add' key in the To do list management screen. Then input date, description and priority for the job.

When input has been completed, press the 'Done' key to save the new job.

Detailed view and Edit

To view detailed job contents, locate the cursor on the desired item in the To do list, and then press the 'OK' key. You can edit and delete a job using 'Option'. You can also delete multiple or all jobs at a time using the Mark/Unmark key in the menu.

Set job status


The jobs set as finished are displayed as cross-out below the unfinished jobs in the To do list. You can set Finished jobs to Not finished by selecting 'Option'. Select 'Send via' from the 'Option' to send the selected jobs through Text message, Multimedia message, Group message, Email or Bluetooth.

Memo

Menu #.3

Using the memo management function, you can view and manage saved memo contents, and add new memo.

Add memo

To add a new memo, press the 'Add'. You can select, number, lower case English, or upper case English using the . You can input useful phrases or symbols. You can save and add the contents of the current memo to the list by pressing the 'Done' key.

Move to secret memo

You can set a memo as a secret memo. The security code is required.

Edit and delete memo

Locate the cursor on your desired memo, and press the key to view all the contents of the memo. This function shows all the memo contents. You can edit or delete the contents of a memo using the 'Option' key. You can return to the memo management screen by pressing the 'Clear' key. You can select Multiple or All memos using Mark/Unmark option and then delete a memo by pressing the 'Delete' key.

Secret memo

Menu #.4

In this menu, you can take a secret memo. The security code is required.

Date finder

Menu #.5

The date finder shows the number of remaining days while changing the day.

Date counter

Menu #.6

1. Press [Add] and input desired date in the date field.
2. Input text in [Notes] field and press [Done].
3. To view detailed job contents, locate the cursor on the desired item in the Date counter List and press the OK key. Details of the selected item With day on which the event occurs is displayed in View detail page.
4. You can edit and delete a Date counter item using Options.
5. You can also delete multiple Date counter item Marking multiple items and Delete.

Settings

Menu #.7

Calendar (Menu #.7.1)

You can change Calendar Default view and Weekly start time to desired options. Press right soft key [Done] to save settings in phone.

Memory info. (Menu #.7.2)

Allows you to view each memory status of the Calendar menu.

Clear all (Menu #.7.3)

Allows you to delete all the saved items, you need to input the security code.




Troubleshooting

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.


Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .

Q How do I clear all call history?

A Press the MENU key and then  -  -  - Options - Delete all.

Q  does not disappear from the screen.

A Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically.
Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically.
Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q The phone gets warm.

A During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

Q The bell does not ring, or lamp or LCD blinks only.

A The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'General' or 'outdoor'

Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.


Q Usage time of battery becomes shorter.

A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.

Q No number is dialled when you recall a phonebook entry.

A Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.

Q You cannot be contacted.

A Is your phone switched on ( pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

Q I cannot find the lock, PIN, or PUK code, or password?

A The default lock code is '**0000**'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

Accessories

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.

AC Adapter (supplied in basic kit)

This adapter lets you charge the mobile phone while at home or in the office.



 
Battery (supplied in basic kit)

Standard battery is available.



Stereo Headset (supplied in basic kit)

Allows hands-free operation. Includes earpiece and microphone.



Data Kit (supplied in basic kit)

The Data Kit consists in a USB Data Cable and a CD-ROM, it allows you to connect your phone to a PC. On the CD-Rom, there are programs like:



- PC-Sync: to synchronise phonebook with PC and Outlook.
- Phone Manager: to download wallpapers, ringtones and video clips on the phone.
- Internet Kit: to use the phone as a modem to be connected to a PC.

* When installing, make sure to connect to the PC after your phone and the cable have been connected. Otherwise, your PC may cause a problem.

Note

The programs listed above may vary depending on the version of the CD and the market.

Note

- ▶ Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / GSM 1800 / GSM 1900 / W-CDMA Terminal Equipment

Model Name

KU730

Trade Name

LG

C E 0889

Applicable Standards Details

R&TTE Directive 1999/5/EC

ETSI EN 301 489-01 V1.5.1, ETSI EN 301 489-07 V1.2.1
ETSI EN 301 489-17 V1.2.1, ETSI EN 301 489-24 V1.2.1
ETSI TS 151 010-1 V5.9.0 specified by ETSI EN 301 511 V9.0.2
ETSI TS 134 121 V5.5.0 specified by ETSI EN 301 908-2 V2.2.1
ETSI EN 301 908-1 V2.2.1, ETSI EN 300 328 V1.5.1
EN 50360:2001; EN 50361:2001
EN 60950-1 : 2001 + Amd.11 : 2004

Supplementary Information

The conformity to above standards is verified by RFI NB

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

Name

Jin Seog, Kim / Director

Issued Date

5. May, 2006

LG Electronics Inc., Amsterdam Office
Valuwezoom15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seekim @ lge.com

Signature of representative

MEMO

MEMO

MEMO