



MOTOROLA

User's Guide

MBP28, MBP28/2, MBP28/3,
MBP28/4
MBP28 Twin, MBP28 Triple,
MBP28 Quad

Baby Monitor

The features described in this user's
guide are subject to modifications
without prior notice.

Welcome...

to your new Motorola Baby Monitor!

Thank you for purchasing the MBP28. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their play room.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

France : +33 1 81 93 02 00

Email : info@babysun.com

Europe : +49 (0) 1805 938 802

Email : motorola-mbp@tdm.de

This User's Guide provides you with all the information you need to get the most from your product.

 
Before you use the baby monitor, we recommend you insert and fully charge the battery in the parent unit, so that it continues to work if you disconnect it from the mains power to carry it to another location. Please read the Safety Instructions on page 9 before you install the units.

Got everything?

- Parent unit
- Camera unit(s)
- Rechargeable Ni-MH battery pack for the Parent unit
- Battery door for Parent unit
- Belt clip for Parent unit
- Power adapter for the Parent unit
- Power adapter(s) for the Camera unit(s)

In multi-camera packs, you will find one or more additional camera units with power adapters.

Overview of your Parent unit

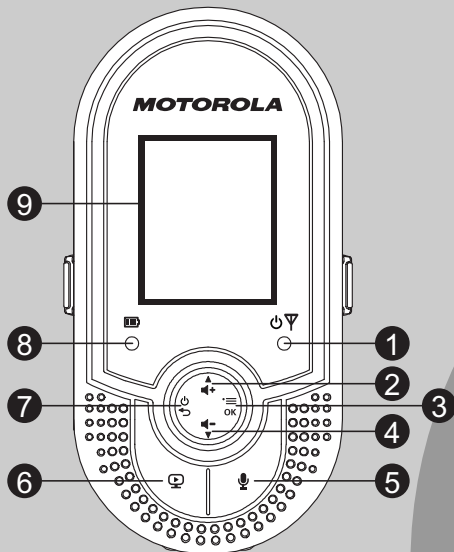

1 Power Indicator

On when the parent unit is powered on.
Flashes when the parent unit is searching for a camera unit.
Off when the parent unit is powered off.

2 UP / Volume +

In idle mode: Press to increase the speaker volume.
In menu mode: Press to move up the menu list.

3 Menu / OK

In idle mode: Press to access the main menu.
In menu mode: Press to access a sub-menu, or confirm the settings.

4 DOWN / Volume -

In idle mode: Press to decrease the speaker volume.
In menu mode: Press to move down the menu list.

5 Talk

In idle or menu mode: Press and hold to talk back through the camera unit. Release to quit the talk mode.
When LCD is off: Press to turn on the LCD.

6 LCD On / Off

In monitoring mode: Press to turn on/off the LCD.
In menu mode: Press to go back to idle mode.

7 Power / Back

In power off mode: Press to power on the parent unit.
In monitoring mode: Press to switch to the next camera unit.
In idle or menu mode: Press and hold to power off the parent unit.
In menu mode: Press to cancel settings and go back to the previous level.

8 Battery/Charging Indicator






On steadily when in charging mode.
Flashes when low battery is detected.








NOTE

On when connected with power adapter even if without battery pack installed.

9 Colour Display Screen (LCD)

Parent Unit Display


Icons	Function
	Indicates the signal strength between the camera unit and parent unit. The more blocks, the stronger the connection signal. Disappears when no connection between the camera unit and parent unit.
	Indicates when the speaker of the parent unit is muted.
	Indicates the speaker volume level of the parent unit, from 1 (quiet) to 5 (loud).
	Indicates when the camera unit is playing a lullaby.
	Indicates the current camera unit that is being previewed on the screen.
24°C	Indicates the temperature detected at the current camera unit, between 14°C (57°F) and 39°C (102°F).

	Indicates the timer alarm is activated.
	Indicates the sound alert is set to on.
	Indicates when the parent unit is connected with the power adapter but no battery pack installed.
	Low battery, needs charging.
	1/2 battery level. More bars inside mean higher battery charge.
	Full battery level.
	Internal bars cycling indicates the battery is charging.


Menu Structure of the Parent Unit

MAIN MENU	BU SELECTION	LANGUAGE	TIMER	BRIGHTNESS	SOUND ALERT	ALERT TONES	REGISTER RESET
SUB MENU	Baby Unit 1 Baby Unit 2 Baby Unit 3 Baby Unit 4 All Baby Units		Activation Set Timer	Level 1 ~ 5	On Off	Low Battery No Link	

 Note: Only Baby Units registered will be shown in the list.

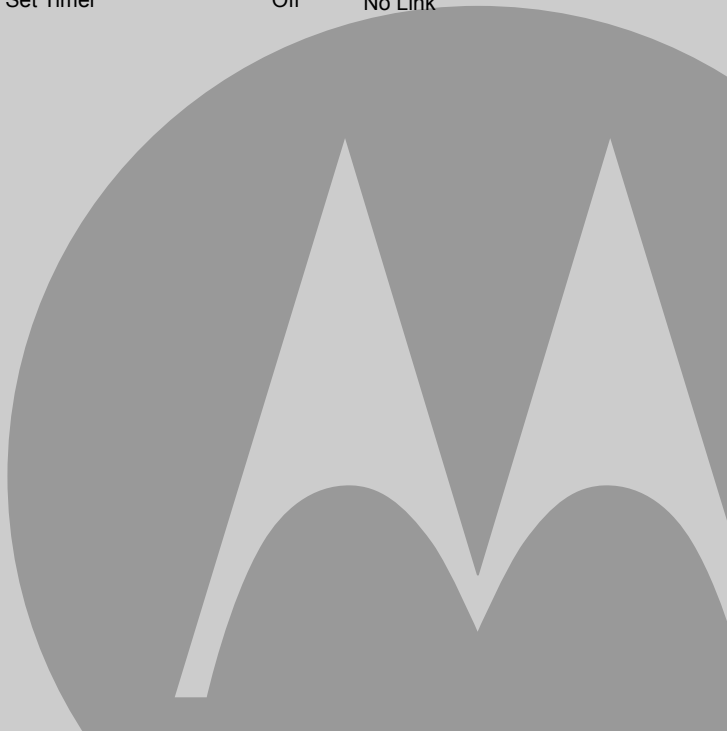

Overview of your Camera unit

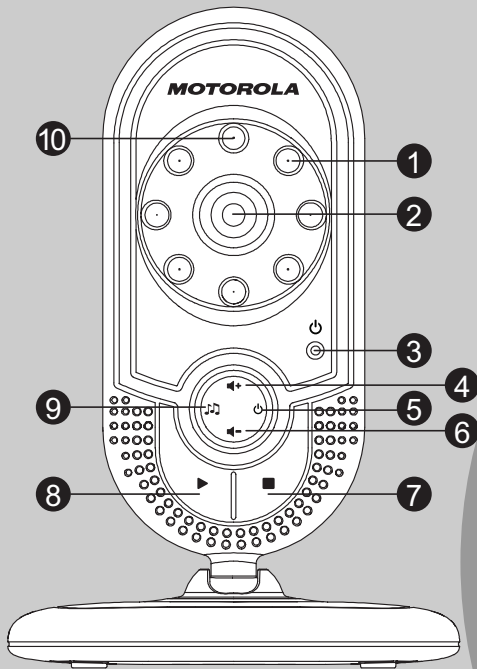 

1 Infrared Lights

4 x infra-red LEDs for night vision illumination.

2 Camera Lens

3 Power/Link Indicator

On steadily when the camera unit is switched on and linked to the parent unit.

Flashes quickly when the camera unit is in registration mode.

Flashes slowly when the camera unit is out of range or not registered to a parent unit.

Off when the camera unit is switched off.

4 UP / Volume +

Press to increase the speaker volume.

5 Power

Press to power on the camera unit.

Press and hold to power off the camera unit.

6 DOWN / Volume -

Press to decrease the speaker volume.

7 Stop

Press to stop the lullaby playing.

8 Play

Press to start playing the selected lullaby.

9 Lullaby

Press to start playing the selected lullaby when the camera unit is linked with the parent unit.

 
During lullaby playing, press to select and play the other lullabies.

10 Photo sensor

Light sensor to detect when night vision is required.

Important guidelines for installing your Baby Monitor

- To use your camera unit and parent unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the camera and parent unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- If the signal is poor, try moving the parent and/or the camera unit to different positions in the rooms.

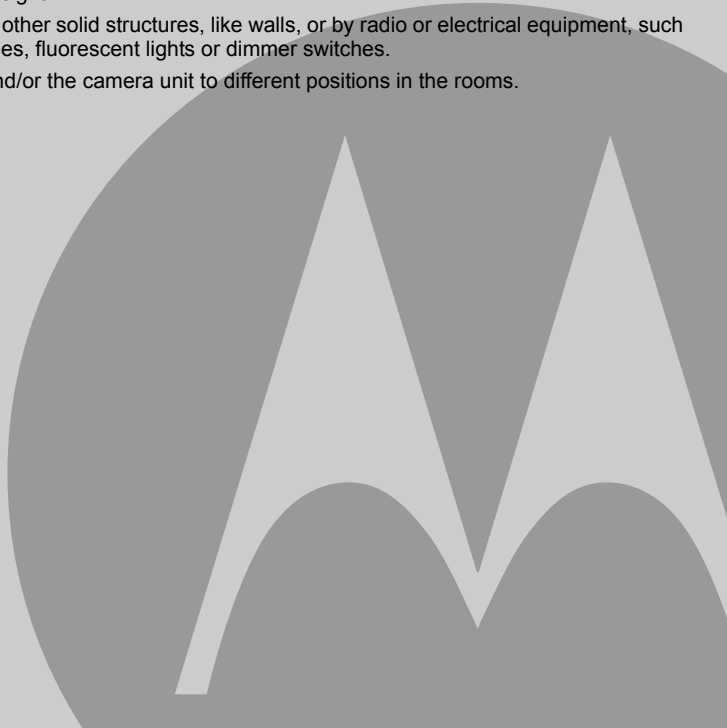



1. SAFETY INSTRUCTIONS	9	4.6 Select camera unit.....	16
2. GETTING STARTED	10	4.7 Register a camera unit	17
2.1 Camera unit power supply.....	10	4.8 Reset	17
2.2 Parent unit battery installation	11	5. DISPOSAL OF THE DEVICE	
2.3 Belt clip/stand on parent unit	12	(ENVIRONMENT)	18
3. USING YOUR BABY MONITOR	12	6. CLEANING	18
3.1 Power on/off the parent unit	12	7. TROUBLESHOOTING	19
3.2 Power on/off the camera unit.....	12	8. GENERAL INFORMATION	20
3.3 Adjust speaker volume of parent unit and camera unit.....	13	9. TECHNICAL SPECIFICATIONS	24
3.4 Talk Back.....	13	EC DECLARATION OF CONFORMITY	25
3.4.1 Adjust talk back volume	13		
3.5 Temperature	13		
3.6 Lullaby	14		
3.7 Switch monitoring camera unit	14		
4. PARENT UNIT SETTINGS	15		
4.1 Set the language	15		
4.2 Timer	15		
4.2.1 Turn on the timer	15		
4.2.2 Set the timer	15		
4.3 Set the brightness.....	15		
4.4 Sound alert	16		
4.5 Alert tones	16		

1. SAFETY INSTRUCTIONS



WARNING:

STRANGULATION HAZARD - Keep the adapter cord out of the baby's reach.

NEVER place the camera unit or its cord within the cot.

Secure the cord well away from the baby's reach.

Never use extension cords with AC Adapters. Only use the AC Adapters provided.

This baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Determine a location for the baby monitor that will provide the best view of your baby in the cot.
- Place the baby monitor on a flat surface, such as a dresser, bureau, or shelf, or wall-mount it securely using the keyhole slots in the base.
- NEVER place the baby monitor or its cord inside the cot or playpen.
- Never immerse any part of the baby monitor in water or any other liquid.

- Make sure the camera unit and the cord are always out of reach of the baby.
- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Children should be supervised to ensure that they do not play with the baby monitor.
- This baby monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Never cover the baby monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Never use the baby monitor in moist places or close to water.
- Do not expose the baby monitor to extreme cold or heat or to direct sunlight. Do not put the baby monitor close to a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.

- To avoid the risk of electric shock, do not open the housing of the camera or parent units, other than the battery compartment.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

 
CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Use only battery pack with rating: 2.4V 750mAh.

2. GETTING STARTED

2.1 Camera unit power supply

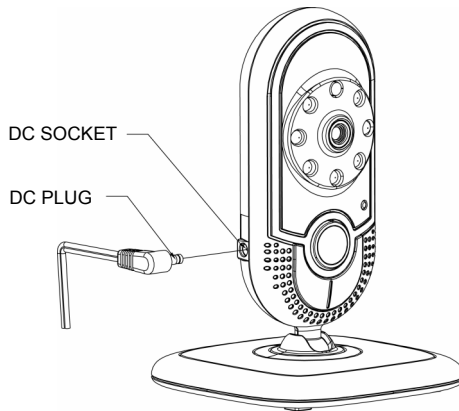


1. Insert the DC plug of the power adapter with the smaller DC plug into the DC socket in the side of the camera unit.
2. Connect the other end of the power adapter to a suitable mains power socket.

NOTE

Only use the provided power adapter.

2.2 Parent unit battery installation

 A rechargeable battery pack is supplied and should be fitted, so that the parent unit can be moved without losing the link and picture from the camera unit(s). Charge the parent unit before you use it for the first time or when the parent unit indicates that the battery is low.

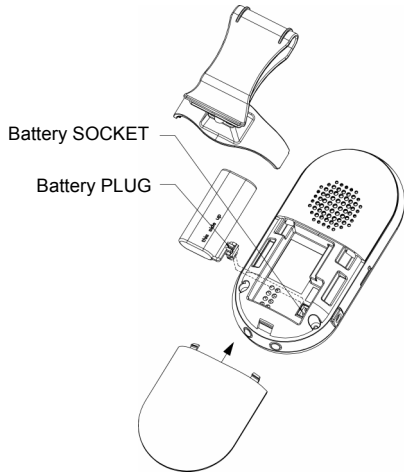


1. Take off the belt clip/stand.
2. Slide off the battery compartment cover.
3. Insert the plug of the battery pack into the socket inside the battery compartment, and fit the battery pack into the compartment.
4. Replace the battery compartment cover, and reinstall the belt clip/stand (refer to section 2.3).
5. Insert the DC plug of the power adapter with the bigger DC plug into the DC socket in the side of the parent unit.
6. Connect the other end of the power adapter to a suitable mains power socket.
7. The **Charging Indicator** comes on.

NOTE

Only use the provided power adapter and battery pack.

The parent unit can work with the power adapter connected but without a battery pack installed.

 2.3 Belt clip/stand on parent unit

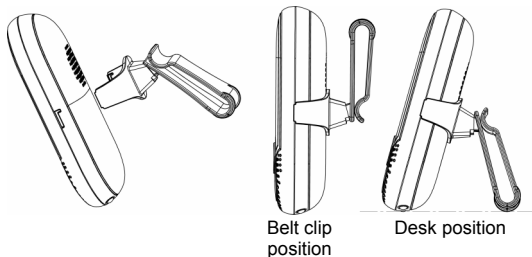

1. The belt clip/stand attaches to the back of the parent unit and clips into the locking slots on each side.

NOTE



It will only fit one way, as indicated by UP and the arrows on the inside of the clip.

2. The unit comes with the accessory fitted in the belt clip mode.
3. You can convert it into the stand mode, by simply pulling the back part of the clip out slightly and then rotating it by half a turn, as shown above.



3. USING YOUR BABY MONITOR

Please read these instructions carefully, and be aware that this baby monitor is only intended as an aid. It is not a substitute for responsible, correct parental supervision.

3.1 Power on/off the parent unit

1. When the parent unit is off, press  until you hear a beep and the **Power Indicator** starts to flash. The parent unit will search for and link itself to the registered camera units.
2. When the parent unit is on, press and hold  until the **Power Indicator** turns off. The parent unit is now powered off, although the display may take a few seconds to go off fully.

3.2 Power on/off the camera unit






1. When the camera unit is off, press  to power it on. The **Power/Link Indicator** will flash for a few seconds until it links with the parent unit and stays steadily on.
2. When the camera unit is on, press and hold  until the **Power/Link Indicator** turns off. The camera unit is now powered off.

NOTE

If you place the parent and camera units too close together, you may hear a high pitched noise. This is not a fault. The units are designed to be operated at some distance apart, e.g. in separate rooms, so move the units further apart.

3.3 Adjust speaker volume of parent unit and camera unit


There are 5 volume levels on the camera unit, and 6 levels on the parent unit, including **VOLUME OFF**. The volume level of parent unit will be shown on the status bar when you adjust the volume.


1. Press  or  on the parent unit or  or  on the camera unit to adjust the respective volume level.
2. The  will be displayed if the volume is turned off on the parent unit.
An audible alert will emit when you reach the highest or lowest volume level.

Changing the volume setting on the camera unit affects the volume when you use the Talk Back feature and when playing a lullaby.

3.4 Talk Back



You can use the Talk Back feature to comfort and reassure your baby.

During Talk Back, you will not be able to hear your baby until you release .

1. Press and hold  on the parent unit to speak to your baby. **Talk** will be displayed on the parent unit.
2. Release the button to hear your baby again.

3.4.1 Adjust talk back volume

The camera unit has 5 volume levels from Level 1 to Level 5.

Press  or  on the camera unit to increase or decrease the volume respectively.

NOTE

If a lullaby is playing, it will stop during Talk Back, but will restart from the beginning when the Talk Back ends.

3.5 Temperature

The camera unit constantly monitors the temperature in your baby's room and alerts you if it gets lower than 14°C (or 57°F), by emitting a warning beep and showing the alert message "**Too cold! from Baby Unit x**" on the parent unit screen, or if it gets higher than 39°C (or 102°F), it will show "**Too hot! from Baby Unit x**". Although this is for reference only, and there may be a small difference between the baby monitor reading and the actual temperature, please check your baby immediately if such an alert message is triggered.







Note

The current temperature at the camera unit is shown on the parent unit status bar whenever it is displayed.

3.6 Lullaby

There are 3 lullabies available to play for your baby, either repeating one lullaby or repeating through all three lullabies.

1. Press  on the camera unit to select the lullaby and start playing when the camera is linked with the parent unit.
2. During playback, press  to step through the different lullabies.
OR
Press  on the camera unit to start playing the selected lullaby.
3. During playback, press  to stop playing.



NOTE

Once the camera unit loses the link with the parent unit, the lullaby playing will be stopped and will not be resumed automatically even if the link is set up again.

3.7 Switch monitoring camera unit

The system allows registering up to four camera units. You can switch the monitoring camera unit by one-touch key or by menu settings.

By one-touch key:








Press  on the parent unit when it is in video monitoring mode. The parent unit will switch to the next registered camera unit to monitor your baby. You can switch to other registered camera units by further pressing  if necessary, with each registered camera unit being selected in turn.

By menu settings:

The system also allows the parent unit to be set to automatically switch between all the camera units, with each registered camera unit being selected in turn at about 30 second intervals. Refer to section 4.6 for the instructions of how to set the parent unit to scan through all camera units automatically.

4. PARENT UNIT SETTINGS











 
4.1 Set the language

1. Press  to access the main menu.
2. Press  or  to select LANGUAGE.
3. Press  and  or  to select the desired language.
4. Press  to confirm.










4.2 Timer

The timer function serves as an alarm to remind you of things-to-do for the baby such as feeding or medication, and it can be set as a one off or a repeated time period.

4.2.1 Turn on the timer

1. Press  to access the main menu.
2. Press  or  to select TIMER.
3. Press  and  or  to select ACTIVATION.
4. Press  or  to select ON or OFF.
5. If you select ON, press  or  to select the timer mode from ONCE or REPEATED.
6. Press  to confirm.








4.2.2 Set the timer

1. Repeat steps 1 to 2 in section 4.2.1.
2. Press  or  to select SET TIMER.
3. Press  and then set the number of hours (00 to 12) using the  or  keys.
4. Press  and then set the number of minutes (00 to 59) using the  or  keys.
5. Press  to confirm the timer interval set.

NOTE

When the timer period is reached, the unit will emit an alert beep for 30 seconds and show 00:00 on the screen. You can press any button to stop the beeps. If the timer mode was set to ONCE, the timer will be cancelled, but if set to REPEATED it will reset and start another timer period.

4.3 Set the brightness






 

1. Press  to access the main menu.
2. Press  or  to select BRIGHTNESS.
3. Press  to enter to show the list of levels.
4. Press  or  to select from LEVEL 1 to LEVEL 5. The screen brightness changes as the options are selected.
5. Press  to confirm.

NOTE

A lower brightness level will reduce the power consumption.

4.4 Sound alert











When the sound alert is set ON, and the parent unit speaker volume is off, it will cause the parent unit to beep and flash "Sound alert from Baby Unit x" on the display, whenever the sound at the baby unit goes above a preset threshold.

1. Press  to access the main menu.
2. Press + or  to select SOUND ALERT.
3. Press  and + or  to turn on or off the sound alert.
4. Press  to confirm.

**The parent unit beeps only if the sound level at the camera reaches a preset sensitivity level.*

4.5 Alert tones

You can set the parent unit to give a warning when the battery is low and/or if the radio link to the camera unit is lost. When activated, an alert screen will be displayed on the parent unit with an alert tone emitted simultaneously.





 



1. Press  to access the main menu.
2. Press + or  to select ALERT TONES.
3. Press  and + or  to select LOW BATTERY or NO LINK.
4. Press  and + or  to turn on or off the alert tone.
5. Press  to confirm.

NOTE

When LCD is off, any alert message will turn on the LCD.

4.6 Select camera unit

The system supports up to four camera units. You can select any registered camera unit and view the picture from that camera.

1. Press  to access the main menu.
2. Press + or  to select BU SELECTION.
3. Press  and + or  to select the desired baby unit or ALL BABY UNITS.
4. Press  to confirm. The parent unit will start to connect with the selected camera unit, while the other unit(s) will be in shutdown mode. The CAM x icon (e.g. ) will be shown on the status bar, when displayed, where x is the baby unit number of the selected camera unit.

When ALL BABY UNITS is selected, the screen of the parent unit will automatically switch between all the registered camera units, with each camera unit being selected in turn at about 30 second intervals.

NOTE

Only registered camera unit(s) will be shown in the selection list.



4.7 Register a camera unit






 
IMPORTANT

When you purchase your baby monitor system, all cameras are already registered to the parent unit, so you do not need to register them.

Camera registration is only necessary if one has become faulty or if you buy a new one.






You can register up to 4 cameras to the parent unit.

To register a camera unit:

1. Press  to access the main menu.
2. Press  or  to select REGISTER.
3. Press  to confirm. The parent unit will display **Registration mode**, and then display **Registering...** which indicates it has entered the registration mode.
4. Press and hold   on the camera unit until it emits a beep tone.
5. There will be a beep and the display will show **Registered** when the registration is successfully completed, and the camera will be assigned a baby unit number, which can be checked from the parent unit.

4.8 Reset

You can restore all the adjustable settings of the registered camera units and parent unit to the original factory settings.

1. Press  to access the main menu.
2. Press  or  to select RESET.
3. Press  to confirm. The display will show CONFIRM?.
4. Press  to confirm again. The parent unit and the registered camera units will be reset.

5. DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

6. CLEANING

Clean your MBP28 with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- Keep your MBP28 away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability for your MBP28. However, if something does go wrong, do not try to repair it yourself - contact Customer Service for assistance.

7. TROUBLESHOOTING

Power Indicator on the parent unit does not come on

- Check whether the parent unit is powered on.
- Check whether the supplied battery pack is correctly installed and that they are not drained.
- Recharge the parent unit by connecting it to the power supply.


Power/Link Indicator on the camera unit flashes

- The camera unit may be not registered to the parent unit. Refer to section 4.7 to register the camera unit.
- The parent unit and monitoring camera unit may be out of range with each other. Reduce the distance between the units, but not closer than 1.5 metre.

Battery/Charging Indicator or on the parent unit screen flashes


- Battery pack in the parent unit is running low. Connect the parent unit to the mains power with the supplied power adaptor for recharging.

The parent unit beeps

- The parent unit may have lost connection with the monitoring camera unit. Reduce the distance between the parent unit and the camera unit, but not closer than 1.5 metre.
- The camera unit may be switched off. Press  key to switch on the camera unit.

- Battery pack in parent unit is running low. Connect the parent unit to the mains power with the supplied power adaptor for recharging.
- Check whether there is any event triggered, e.g. low battery, sound alert or timer.

Cannot view the video image of baby from the parent unit

- LCD may be turned off. Activate the video feed by pressing .
- The parent unit and the monitoring camera unit may be out of range with each other. Reduce the distance between the units, but not closer than 1.5 metre.
- Battery pack in parent unit may be drained. Connect the parent unit to the mains power with the supplied power adaptor for recharging.

Cannot hear sound or baby cry from the parent unit

- The volume level in the parent unit may be set too low, increase the volume level of the parent unit. Refer to section 3.3 for volume level settings.
- The parent unit and the monitoring camera unit may be out of range with each other. Reduce the distance between the units, but not closer than 1.5 metre.



The baby monitor system produces a high-pitched noise

- The parent unit and the camera unit may be too close to each other. Make sure the parent unit and camera unit is at least 1.5 metre away from each other.
- The speaker volume of the parent unit maybe set too high. Decrease the volume of the parent unit.

Battery pack in the parent unit is running low quickly

- The LCD brightness may be set too high. Try to decrease the brightness level. Refer to section 4.3 for details.
- The volume level of the parent unit may be set too high which consumes power. Decrease the volume level of the parent unit. Refer to section 3.3 for volume level settings.

Talk back feature does not work

- Make sure the camera unit is powered on, and link between parent unit and camera unit is normal.
- Check that the volume is loud enough at the camera unit, refer to section 3.4.

8. GENERAL INFORMATION

If your product is not working properly...

1. Read this User's Guide.
2. Visit our website: www.motorola.com
3. Contact Customer Service:
France: +33 1 81 93 02 00
Email: info@babysun.com
Europe: +49 (0) 1805 938 802
Email: motorola-mbp@tdm.de

To order a replacement battery pack for parent unit, contact customer service.

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER

FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and

Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

France : +33 1 81 93 02 00

Email : info@babysun.com

Europe : +49 (0) 1805 938 802

Email : motorola-mbp@tdm.de

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorised Repair Centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and,

most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.



9. TECHNICAL SPECIFICATIONS

Camera Unit:

Frequency	1881.792 - 1897.344 MHz
Channels	10
Operating temperature	5°C - 45°C
Image sensor	Color CMOS 0.3M Pixels
Lens	f 3.6mm, F 2.4
IR LED	4 pcs
Power supply adapter rating	Input 100-240VAC, 50/60Hz, 150mA. Output 6VDC, 600mA. <Tenpao S004LB0600060 / S004LV0600060 EU / UK>

Parent Unit :

Frequency	1881.792 - 1897.344 MHz
Channels	10
Operating temperature	5°C - 45°C
Display	1.8" diagonal TFT LCD
Display colour	65K colour LCD
Brightness control	5 steps
Battery rating	2.4V 750mAh Ni-MH battery pack <BYD:H-AAA750BX2-LI30-2 / GPI:VTRHCH73N001 / SHIDA:TFL2X44AAA750EU-CD58-01A>
Power supply adapter rating	Input 100-240VAC, 50/60Hz, 150mA. Output 6VDC, 600mA. <Tenpao S004LB0600060 / S004LV0600060 EU / UK>

BINATONE TELECOM PLC
1 Apsley Way London NW2 7HF, United Kingdom,
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8877
e-mail: binatoneuk@binatonelecom.co.uk

The logo for Binatone, featuring the word "Binatone" in a stylized purple font with a green swoosh above the letters "a" and "t".

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment: Digital Baby Monitor
Model Name: MBP 28

Country of Origin: China
Brand: Motorola

complex with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**.

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

Radio Spectrum: EN301406 v2.1.1 (2009-07)
RF safety: EN50360: 2001
EN50385: 2002
EMC: EN301489-6 V1.3.1 (2008-08)
EN301489-1 V1.8.1 (2008-04)
Electrical Safety: EN60950-1:2006+A11:2009

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.



Manufacturer / Importer
(Signature of authorized person)

A handwritten signature in black ink, appearing to be "Paul Tsui".

London, 28 Nov 11

Signature: (Paul Tsui/ Product Operation
Director)

Place & Date :



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2012 Motorola Mobility LLC. All rights reserved.



Version 1.0

Printed in China

