



motorola

MODELS:  
MBP622  
MBP622-2  
MBP622-3  
MBP622-4

 
# QUICK START GUIDE

UK EN

For a full explanation of all features and instructions, please refer to the User's Guide.

## 1. Setting up your Digital Video Baby Monitor

### A. Connecting the Power Supply for the Baby Unit

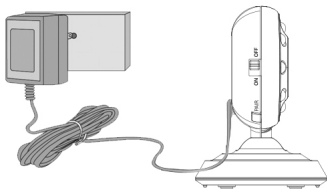


- Insert the small plug of the Power Adapter into the socket in the back of the Baby Unit and the other end into a suitable mains power socket.
- Only use the enclosed adapter (6V DC / 500mA).
- Slide the ON/OFF switch to the ON position.



### **WARNING:**

 
Strangulation hazard. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 1 metre away). Do not remove this tag. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

## B. Installing the battery pack for the Parent Unit

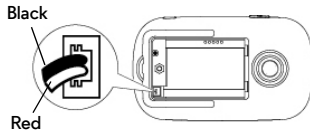


- A rechargeable battery pack is supplied and should be installed and charged, so that the Parent Unit can be moved without losing the link and picture from the Baby Unit(s).
- Insert the wire tab of the rechargeable battery pack into the contact slot as shown and fit the battery pack into the compartment.

### C. Fastening the cover of the Parent Unit

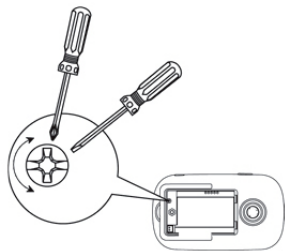 





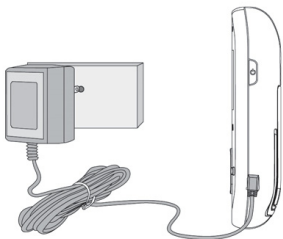 


- Place the battery compartment cover over the battery, making sure the battery wires are carefully pushed down and the cover fits properly.
- Gently tighten the screw using a small cross-head or flat-head screwdriver.

### D. Connecting the Power Supply for the Parent Unit



- Power Adapter into the socket in the side of the Parent Unit and plug the other end into a suitable mains power socket.
- Only use the enclosed adapter (6V DC/ 500mA).
- Press and hold the ON/OFF button on the side of the Parent Unit to turn it ON.

## 2. Basic Operation of the Keys

Parent Unit		
	<b>Power / Video ON/OFF button</b>	Press and hold to switch the Parent Unit ON/OFF. In monitor mode, press to turn the LCD screen ON/OFF.
	<b>UP/VOL+ button</b>	Press to increase sound volume. Press to scroll up menu options/settings. Press to tilt up in zoom mode.
	<b>DOWN/VOL- button</b>	Press to decrease sound volume. Press to scroll down menu options/settings. Press to tilt down in zoom mode.
	<b>MENU/OK button</b>	Press to open menu options. Press to confirm a selection.
	<b>Return button</b>	Press to return to previous menu level. Press to pan left in zoom mode.
	<b>Switch Camera</b>	Press to switch between Camera Units. (If paired with more than one Camera) Press to pan right in zoom mode.
	<b>ZOOM button</b>	Press once to switch to 2X Zoom mode. Press again to return to normal mode (1X).
Baby Unit		
	<b>ON/OFF switch</b>	Slide the ON/OFF switch to the ON position to switch ON the Baby Unit. Slide the ON/OFF switch to the OFF position to switch OFF the Baby Unit.

### 3. General Information

If your product is not working properly, read this Quick Start Guide or the User's Guide of one of the models listed on page 1.

Contact Customer Service:

**+44 (0) 844 557 0890 (UK only)**

**+44 (0) 8187 62092 (ROI)**

#### **Consumer Products and Accessories Limited Warranty ("Warranty")**

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

#### **What Does this Warranty Cover?**

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

#### **Who is covered?**

This Warranty extends only to the first consumer purchaser, and is not transferable.

#### **What will BINATONE do?**

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

#### **What Other Limitations Are There?**

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO

THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	<b>One (1) year</b> from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	<b>The balance of the original warranty or for Ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

## How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

**+44 (0) 844 557 0890 (UK only)**

**+44 (0) 8187 62092 (ROI)**

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center. To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

## CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

Download User Guide from website: [www.motorolahome.com](http://www.motorolahome.com)



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylised M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.  
© 2015 Motorola Mobility LLC. All rights reserved.



Printed in China  
UK\_EN Version 1