

Hitachi Projector Accessories

Reference Guide



Lenses

For CPX10000/CPWX11000/CPSX12000



For CPX505/X605/X608/X615/WX625/SX635/X705/X807/X809



Lamps: Business Projectors

■ Portable
 ■ Multi Purpose
 ■ Installation

<p>DT01141</p> <ul style="list-style-type: none"> • CPX7 • CPX8 • CPX4 • CPWX8 	<p>DT00821</p> <ul style="list-style-type: none"> • CPX3 • CPX5 • CPX264 	<p>DT00781</p> <ul style="list-style-type: none"> • CPX1 • CPX2 • CPX4 • CPRX70 	<p>DT00701</p> <ul style="list-style-type: none"> • CPRS55 • CPRS56 • CPRX60 • CPRX61 • CPRS57
<p>DT01181</p> <ul style="list-style-type: none"> • CPAW250NM • CPA300NM • EDA220NM 	<p>DT01171</p> <ul style="list-style-type: none"> • CPX4021N • CPX5021N • CPWX4021N 	<p>DT01151</p> <ul style="list-style-type: none"> • CPRX79 • EDX26 	<p>DT01141</p> <ul style="list-style-type: none"> • CPX2520 • CPX3020 • EDX50 • EDX52

DT01091

- CPD10 • CPDW10N
- CPAW100N • EDAW100N
- EDAW110N • EDD10N • EDD11N

DT01081

- CPRX78

DT01051

- CPX4020

DT01022

- CPRX80

DT01021

- CPX2510E • CPX2510EN • CPX3010E
- CPX3010EN • CPX2511N • CPX3011N
- CPX4011N • CPWX3011N • EDX40
- EDX42 • EDX45N

DT00911

- CPX301 • CPX306 • CPX401
- CPX450 • EDX31 • EDX33
- CPWX410 • CPX467

DT00893

- EDA101 • EDA111 • CPA200

DT00891

- CPA100 • EDA100 • EDA110

DT00841

- CPX205 • CPX400 • CPX300
- CPX305 • CPX308 • CPX417
- EDX30 • EDX32

DT00781

- EDX20 • EDX22
- MPJ1 • CPX253

DT00757

- EDX10 • EDX12 • EDX15

DT00751

- CPX260 • CPX265 • CPX268

DT00731

- CPS240 • CPX250 • CPX255
- EDX8250 • EDX8255

DT00691

- CPX445 • CPX440 • CPX444

DT00671

- CPS335 • CPX340 • CPX345
- CPX3350 • CPX3400 • CPX3450

DT00621

- CPS235

DT00581

- CPS210

DT00471

- CPX430

DT00461

- CPX275 • CPX327
- EDX3250 • EDX3270

DT00431

- CPX380 • CPX385 • CPS370

DT00401

- CPS225(A) • CPS317 • CPS318
- CPX328 • EDS3170 • EDX3280

DT00331

- CPX325 • CPS310 • CPX320

DT00301

- CPS220 • CPS220(A) • CPX270

DT00236

- CPX940B • CPX938B
- CPS840B • CPS845

DT00205

- CPX940 • CPX938
- CPS840 • CPS40A

DT01001

- CPX10000 • CPWX11000
- CPSX12000

DT00873

- CPWX625 • CPSX635 • CPWUX645N

DT00871

- CPX807 • CPX705
- CPX809 • CPX615

DT00771

- CPX505 • CPX605 • CPX608

DT00601

- CPX1250 • CPSX1350

DT00591

- CPX1200A

DT00571

- CPX870

DT00531

- CPX880 • CPX885

DT00491

- CPX990 • CPX995

DT00421

- CPSX5500 • CPSX5600

DT00341

- CPX930 • CPX985

Lamps: Home Projectors

■ Installation ■ Home

<p>DT00231</p> <ul style="list-style-type: none"> • CPS860 • CPX958 • CPX960 • CPX970 	<p>DT00707</p> <ul style="list-style-type: none"> • PJLC9 • EDPJ32 	<p>DT00701</p> <ul style="list-style-type: none"> • PJLC7 	<p>DT00665</p> <ul style="list-style-type: none"> • PJTX200 • PJTX300
<p>DT00661</p> <ul style="list-style-type: none"> • PJTX100 	<p>DT00611</p> <ul style="list-style-type: none"> • PJTX10 	<p>DT00581</p> <ul style="list-style-type: none"> • PJLC5 	<p>DT00301</p> <ul style="list-style-type: none"> • PJLC2001 <i>(replaced DT00381)</i>

Remote Controls

■ Portable ■ Multi Purpose ■ Professional ■ Installation ■ Home

 <p>HL02771</p> <ul style="list-style-type: none"> • CPX7 • CPX8 • CPX9 • CPWX8 	 <p>HL02483</p> <ul style="list-style-type: none"> • CPX3 	 <p>HL02228</p> <ul style="list-style-type: none"> • CPRX70 	 <p>HL02224</p> <ul style="list-style-type: none"> • CPX1 • CPX2 • CPX4 • CPX5
 <p>HL02151</p> <ul style="list-style-type: none"> • CPRS55 • CPRS56 • CPRX60 • CPRX61 • CPRS57 	 <p>HL02771</p> <ul style="list-style-type: none"> • CPRX79 • EDX26 • CPX2520 • CPX3020 • EDX50 • EDX52 	 <p>HL02772</p> <ul style="list-style-type: none"> • EDA220NM • CPAW250NM • CPA300NM 	 <p>HL02488</p> <ul style="list-style-type: none"> • EDA101 • EDA111 • CPA200
 <p>HL02483</p> <ul style="list-style-type: none"> • CPX301 • CPX306 • CPX401 • CPX450 • CPX467 • CPWX410 • CPRX78 • CPRX80 • CPX2510E • CPX2510EN • CPX3010E • CPX3010EN • CPX4020 • EDX31 • EDX33 • EDX40 • EDX42 • CPX2511N • CPX3011N • CPX4011N • CPWX3011N • CPX4021N • CPX5021N • CPWX4021N • CPD10 • CPD20 • CPDW10N • CPAW100N • EDAW100N • EDAW110N • EDD10 • EDD11N 	 <p>HL02482</p> <ul style="list-style-type: none"> • CPA100 • EDA100 • EDA110 	 <p>HL02227</p> <ul style="list-style-type: none"> • CPX205 • CPX300 • CPX305 • CPX308 • CPX400 • CPX417 • EDX30 • EDX32 	
 <p>HL02224</p> <ul style="list-style-type: none"> • CPX253 • EDX20 • EDX22 • MPJ1 	 <p>HL02221</p> <ul style="list-style-type: none"> • CPX260 • CPX265 • CPX268 • EDX10 • EDX12 • EDX15 	 <p>HL02208</p> <ul style="list-style-type: none"> • CPS240 • CPX250 • CPX255 • EDX8250 	 <p>HL02204</p> <ul style="list-style-type: none"> • CPX440 • CPX444

Remote Controls

Portable
 Multi Purpose
 Professional
 Installation
 Home

 <p>HL01898</p> <ul style="list-style-type: none"> • CPS235 • CPS335 • CPX340 • CPX345 • EDS3350 • EDX3400 • EDX3450 	 <p>HL01894</p> <ul style="list-style-type: none"> • CPS210 	 <p>HL01891</p> <ul style="list-style-type: none"> • CPS317 • CPS318 • CPX327 • CPX328 • EDS3170 • EDX3250 • EDX3270 • EDX3280 	 <p>HL01883</p> <ul style="list-style-type: none"> • CPX445 <p>LASER</p>
 <p>HL01841</p> <ul style="list-style-type: none"> • CPX430W • CPSX5500 • CPSX5600 <p>LASER</p>	 <p>HL01791</p> <ul style="list-style-type: none"> • CPX380 • CPX385 <p>LASER</p>	 <p>HL01451</p> <ul style="list-style-type: none"> • CPX320 • CPX325 <p>LASER</p>	 <p>HL01441</p> <ul style="list-style-type: none"> • CPS220 • CPS225 • CPX270 • CPX275 • CPS310 • CPS370
 <p>HL02198</p> <ul style="list-style-type: none"> • CX10000 • CPWX11000 • CPSX12000 <p>LASER</p>	 <p>HL02197</p> <ul style="list-style-type: none"> • CPSX635 • CPX809 <p>LASER</p>	 <p>HL02196</p> <ul style="list-style-type: none"> • CPWX625 • CPWUX645N <p>LASER</p>	 <p>HL02194</p> <ul style="list-style-type: none"> • CPX505 • CPX605 • CPX608 • CPX807 • CPX705 • CPX615 <p>LASER</p>
 <p>HL02003</p> <ul style="list-style-type: none"> • CPSX1350 • CPX1200 • CPX1250 <p><i>(replaced HL02001)</i></p> <p>LASER</p>	 <p>HL01881</p> <ul style="list-style-type: none"> • CPX880 • CPX885 • CPX870 <p>LASER</p>	 <p>HL01811</p> <ul style="list-style-type: none"> • CPX990 • CPX995 <p>LASER</p>	 <p>HL01453</p> <ul style="list-style-type: none"> • CPX980 • CPX985 <p>LASER</p>
 <p>HL02151</p> <ul style="list-style-type: none"> • PJLC7 • PJLC9 	 <p>HL02104</p> <ul style="list-style-type: none"> • PJTX200 • PJTX300 	 <p>HL02101</p> <ul style="list-style-type: none"> • PJTX100 	 <p>HL01981</p> <ul style="list-style-type: none"> • PJTX10
 <p>HL01894</p> <ul style="list-style-type: none"> • PJLC5 	 <p>HL01441</p> <ul style="list-style-type: none"> • PJLC2001 		

Carrying Cases

SC400 - Soft Case



Int. Dimensions:
390 x 280 x 130mm

Ext. Dimensions:
410 x 305 x 160mm
Includes outer pockets

Projector Cable Cover

CC10000



• CPX10000 • CPWX11000 • CPSX12000

Table Top Kit

TT100



• CPA100 • EDA100 • EDA110

Wall Mounting Kit

HAS-K250



• CPAW250NM • CPA300NM • EDA220NM • iPJAW250NM

Lens Adapter

KU00041



• CPX10000 • CPWX11000
• CPSX12000

Wireless SDIO Card

VA08331



• CPX417 • CPX807

M1-D Cable

EZ01661



Connects M1 socket on Projector to
DVI and USB on PC for Video signal
and Mouse control

Smoke Filters

SF200

Spare filters for the SFUS200 (12 pieces)
For CPS225/CPX275

SF101

Spare filter for the SRC101 (1 piece)
For CPX880/CPX885

SFC10S

Spare filter for the SFUC10 (1 piece)
For CPS210



Touchboards
205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Design and specifications are subject to change without notice.

HITACHI
Inspire the Next