 


USER'S MANUAL

SRP-770

LABEL PRINTER

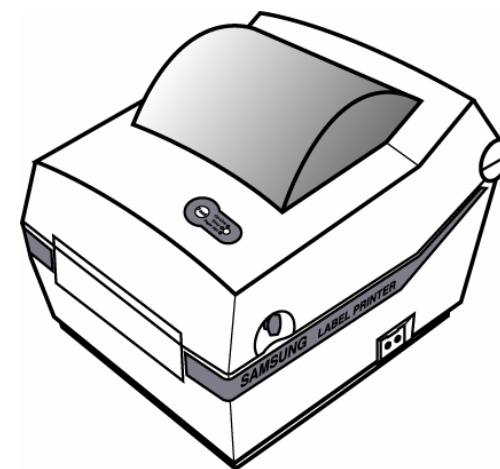



 











All specifications are subjected to change without notice

JE68-00131B
Rev. 1.05

www.samsungminiprinters.com

Safety Precautions

In using the present appliance, please keep the following safety regulations in order to prevent any hazard or material damage.

 WARNING Violating following instructions can cause serious injury or death.	
<p>Do not plug several products in one multi-outlet.</p> <ul style="list-style-type: none"> This can provoke over-heating and a fire. If the plug is wet or dirty, dry or wipe it before usage. If the plug does not fit perfectly with the outlet, do not plug in. Be sure to use only standardized multi-outlets. 	<p>You must use only the supplied adapter.</p> <ul style="list-style-type: none"> It is dangerous to use other adapters.
<p>PROHIBITED</p>  	<p>!</p> 
<p>Do not pull the cable to unplug.</p> <ul style="list-style-type: none"> This can damage the cable, which is the origin of a fire or a breakdown of the printer. 	<p>Keep the plastic bag out of children's reach.</p> <ul style="list-style-type: none"> If not, a child may put the bag on his head.
<p>PROHIBITED</p>  	<p>PROHIBITED</p>  
<p>Do not plug in or unplug with your hands wet.</p> <ul style="list-style-type: none"> You can be electrocuted. 	<p>If you observe a strange smoke, odor or noise from the printer, unplug it before taking following measures.</p> <ul style="list-style-type: none"> Switch off the printer and unplug the set from the mains. After the disappearance of the smoke, call your dealer to repair it.
<p>PROHIBITED</p>  	<p>TO UNPLUG</p>  
<p>Do not bend the cable by force or leave it under any heavy object.</p> <ul style="list-style-type: none"> A damaged cable can cause a fire. 	
<p>PROHIBITED</p>  	












 WARNING Violating following instructions can cause slight wound or damage the appliance.	
<p>Keep the desiccant out of children's reach.</p> <ul style="list-style-type: none"> If not, they may eat it. 	<p>Install the printer on the stable surface.</p> <ul style="list-style-type: none"> If the printer falls down, it can be broken and you can hurt yourself.
<p>PROHIBITED</p>  	<p>PROHIBITED</p>  
<p>Use only approved accessories and do not try to disassemble, repair or remodel it for yourself.</p> <ul style="list-style-type: none"> Call your dealer when you need these services. 	<p>Do not use the printer when it is out of order. This can cause a fire or an electrocution.</p> <ul style="list-style-type: none"> Switch off and unplug the printer before calling your dealer.
<p>DISASSEMBLING PROHIBITED</p>  	<p>TO UNPLUG</p>  
<p>Do not let water or other foreign objects in the printer.</p> <ul style="list-style-type: none"> If this happened, switch off and unplug the printer before calling your dealer. 	
<p>PROHIBITED</p>  	

 
Table of Contents

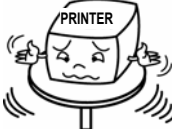1. Unpacking & Repacking	5
2. Samsung Label Printer	6
3. Connecting the Power Supply	7
4. Connecting the Interface Cable	8
5. Installing or Replacing the Paper Roll	9
6. Setting the Dip Switches	10
7. The Self Test	11
8. The Peel-off	12
9. Using Fan Fold Paper	13
10. Auto Cutter (Option)	14
11. Cleaning Head	15
12. Install and Uninstall Windows Driver	16

1. Unpacking & Repacking


Your printer box should include these items. If any items are damaged or missing, please contact your dealer for assistance.

 Note : Please keep the packing materials(①,②,④,⑥) for future repacking to send a printer for repairs.

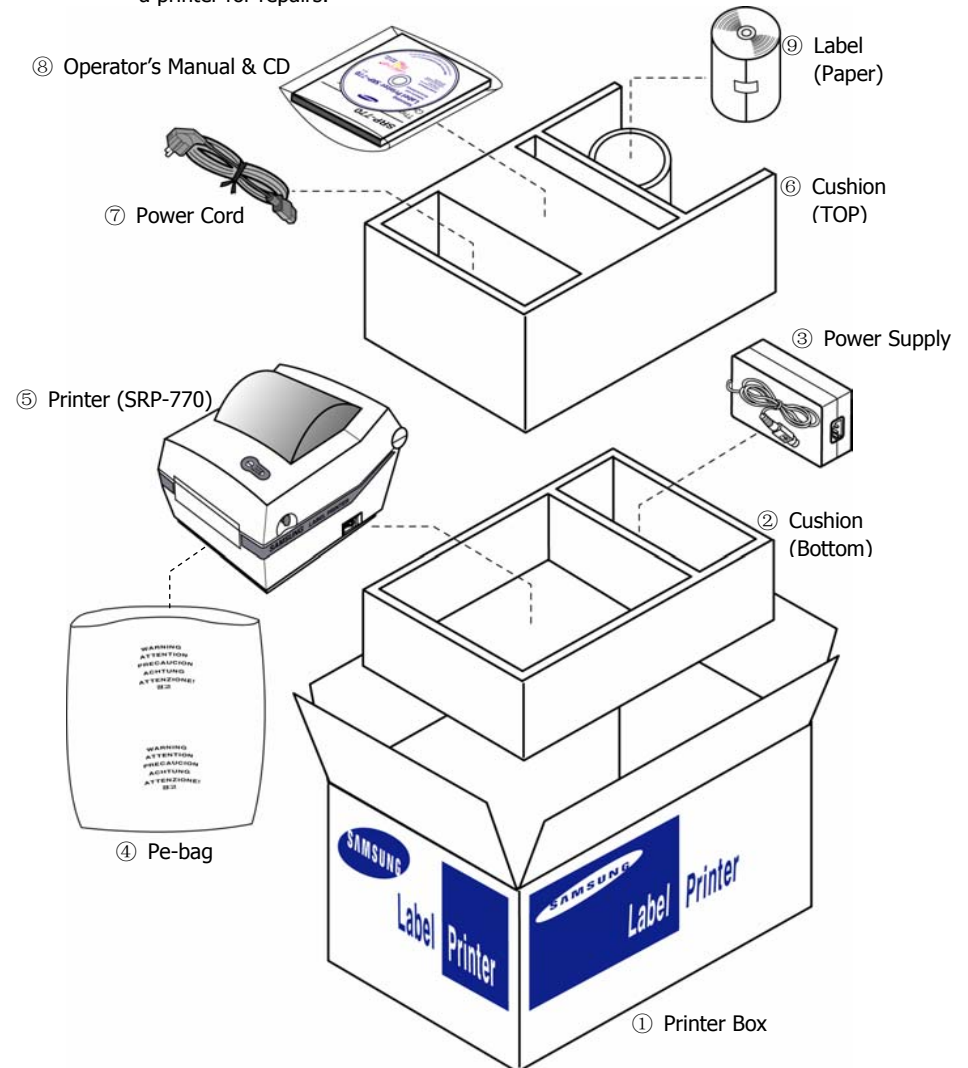

※ You can repack the printer package in above numeric order(①~⑨)

 2. Samsung Label Printer

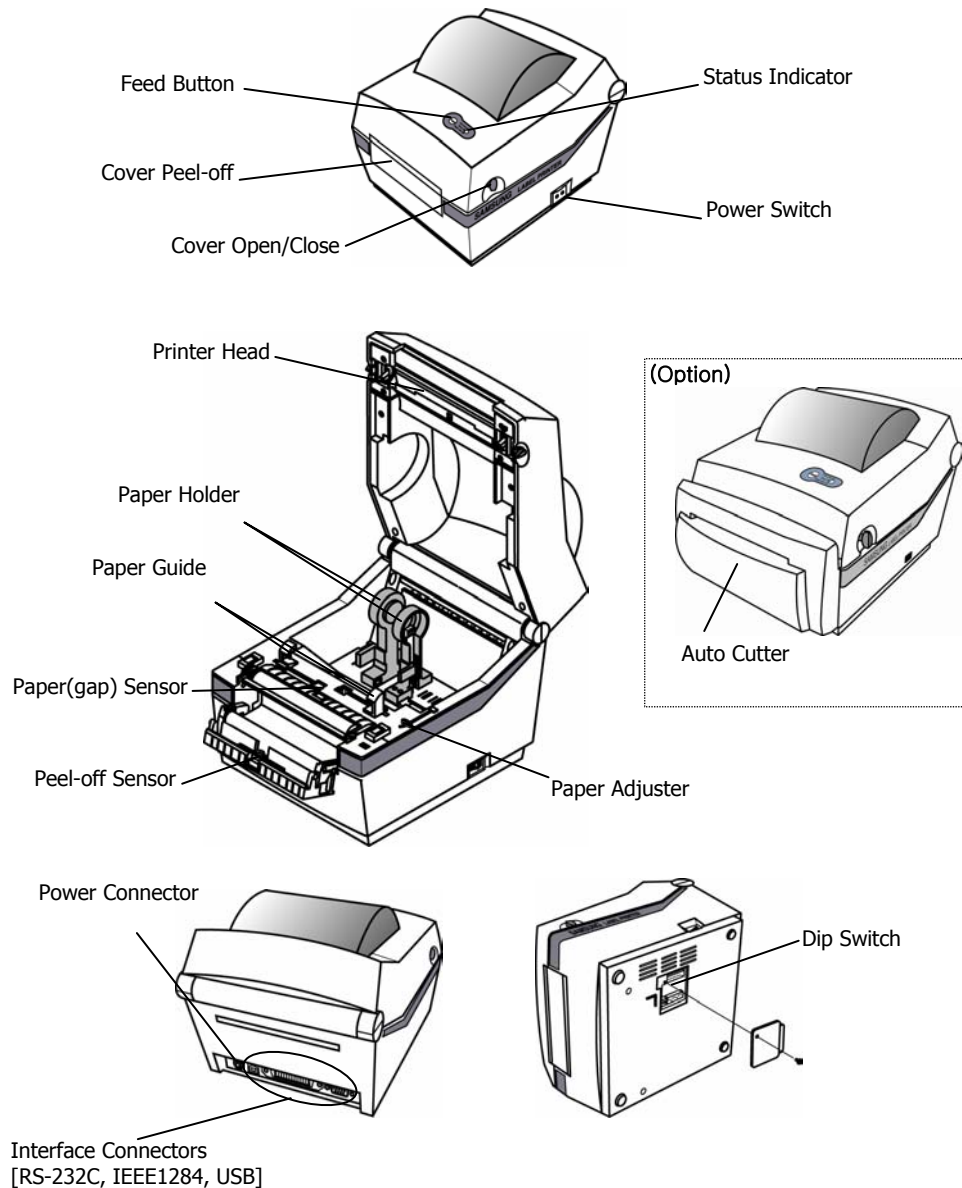


3. Connecting the Power Supply


CAUTIONS:

When connecting or disconnecting the power supply from the printer, make sure that the power supply is not plugged into an electrical outlet. And the power supply's rated voltage and your outlet's voltage do not match, contact your dealer for assistance. Then do not plug in the power cord. Otherwise, you may damage the power supply or the printer.

 1. Make sure that the printer's power switch is turned off, and the power supply's power cord is unplugged from the electrical outlet.
2. Check the label on the power supply to make sure that the voltage required by the power supply matches that of your electrical outlet.
3. Plug in the power supply's cable as shown below. Notice that the flat side of the plug faces down.

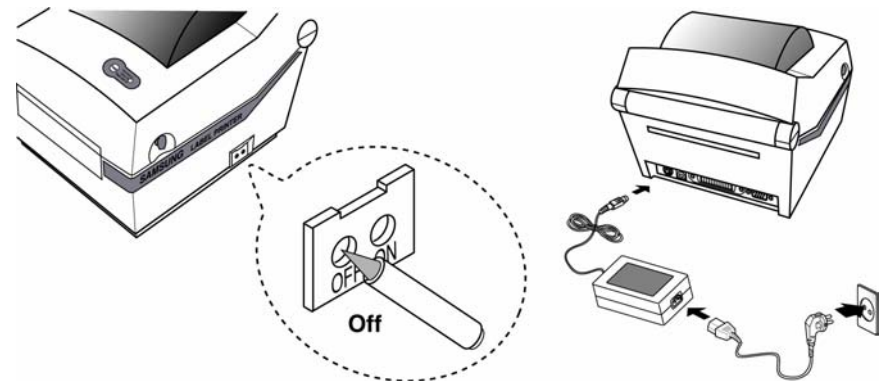


 4. Connecting the Interface Cable

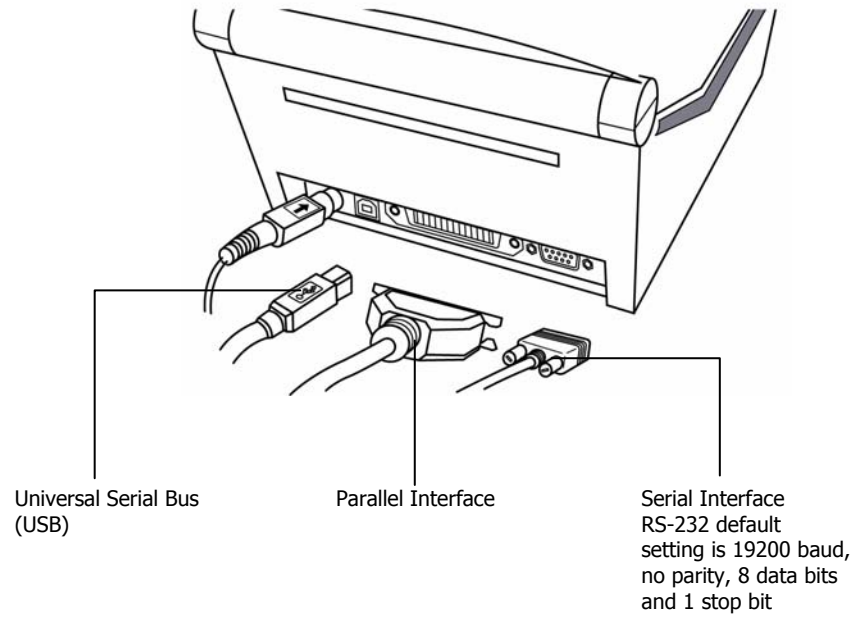


5. Installing or Replacing the Paper Roll


 
① Open Cover

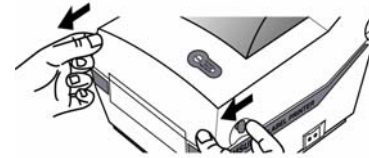


② Open Guides

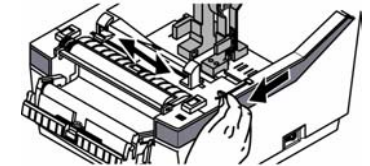 

③ Install Roll

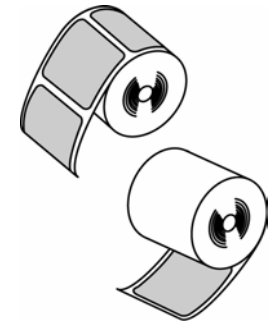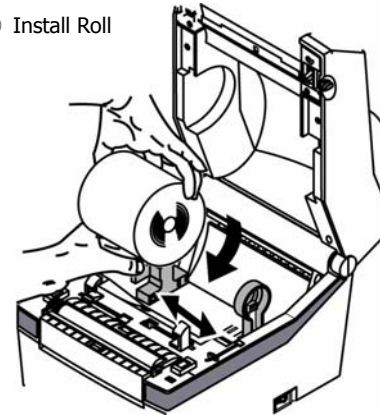  

 ④ Close Guides to the Width of the paper

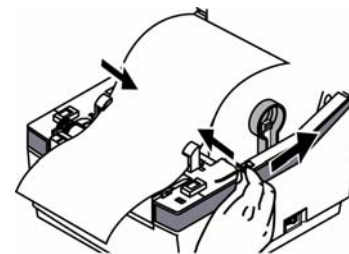

⑤ Close Cover

 


6. Setting The Dip Switches

6-1. Setting the Dip Switches

The Dip Switches are located on the bottom of the printer. The Dip Switches are used to set the Printer to perform various functions. Follow these steps when changing Dip Switches setting :

1. Turn the printer power switch off.
2. Remove the screw on the bottom of the printer and open the bracket.
3. Flip the Dip Switches using tweezers or another narrow-ended tool. Switches are **off** when up and **on** when down in the Figure below.
4. The new setting takes effect when you turn on the printer.

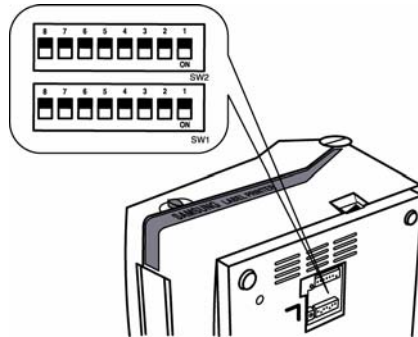

Note : Always change Dip Switch settings only when the printer is turned off.

6-2. Functions of Dip Switches

6-2-1. Dip S/W 1

No	Functions	Details		
1,2	Speed Selection	2	1	Speed
		Off	Off	2.5 ips
		Off	On	3.0 ips
		On	Off	4.0 ips
		On	On	5.0 ips
3,4	Density Selection	4	3	Density
		Off	Off	0(Low)
		Off	On	7
		On	Off	13
		On	On	20(High)
5	Exhibition Selection	Off	Normal mode	
		On	Demo mode	
6	Media Selection	Off	Label Paper	
		On	Normal Paper	
7	Auto Cutter	Off	Without Auto Cutter	
		On	With Auto Cutter	
8	Position Selection	Off	Move to Cutting Position	
		On	Move to top of next page	
	With AutoCutter	Off	Back Feeding printing	
		On	Continuous printing	



6-2-2. Dip S/W 2

No	Functions	Details		
1,2	Baud Rate	2	1	Baud Rate
		Off	Off	9,600 bps
		Off	On	19,200 bps
		On	Off	57,600 bps
		On	On	115,200 bps
3	Media Detection	Off	Detect Gap only	
		On	Detect Gap and Black-mark	
4	Memory Selection for Image Store	Off	SRAM	
		On	Flash Rom	
5	Emulation	Off	SAMSUNG command	
		On	Emulation	
6~8	Developer Mode	Default --- off		

7. The Self Test

The self-test checks whether the printer has any problems. (You cannot perform this procedure if using the printer's label peel-off option) If the printer does not function properly, contact your dealer. The self-test checks the following;

  
1. Make sure that paper roll has been installed properly.
2. Turn on the power while holding(2sec) down the FEED button. The self-test begins.
3. The self-test prints the current printer status, which provides the control ROM version and the DIP switch setting.

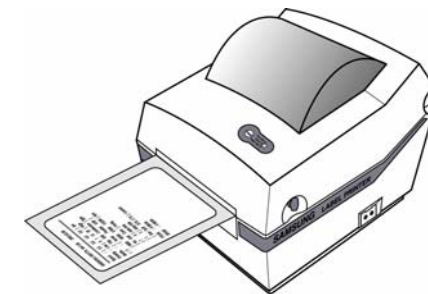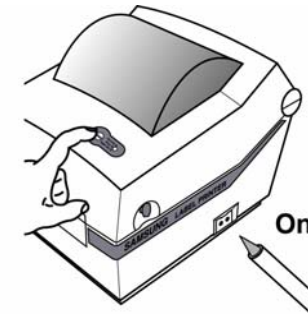


8. The Peel-off

Printers can Peel-off a single label.
You must remove the label before the printer prints the next label.

 - ① Open the peel-off cover and turn on peeler switch.

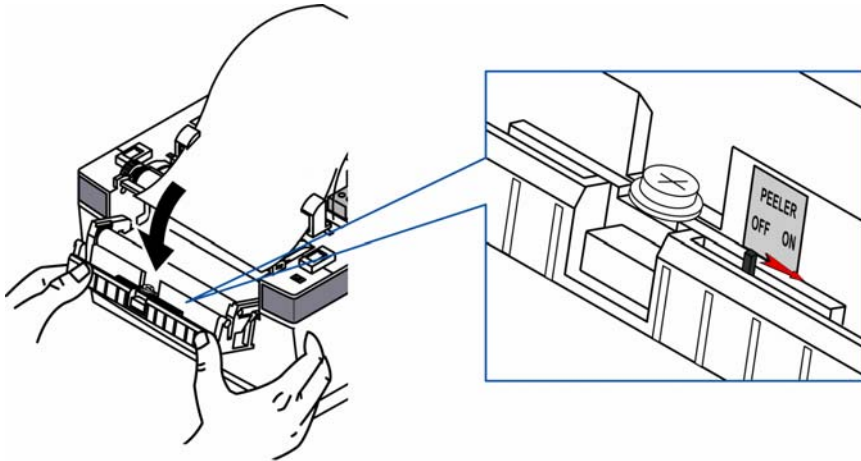


 - ② Remove the one a paper and insert the paper through slot.
- ③ Adjust the paper guides and close the cover.

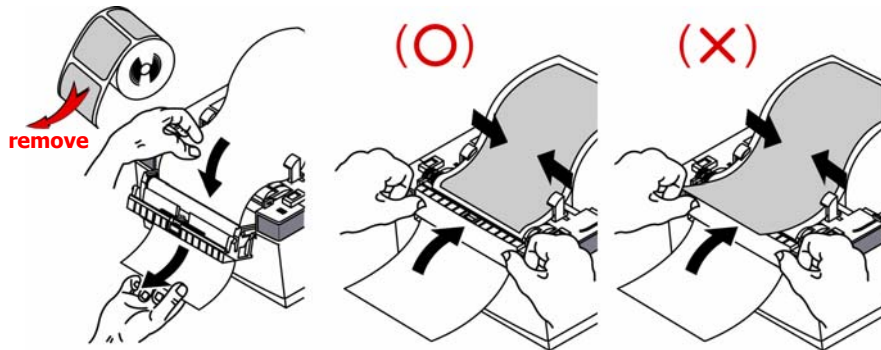


9. Using Fan Fold Paper

 Insert paper through both the rear slot and guides.
Adjust holders and guides to the width of the paper.

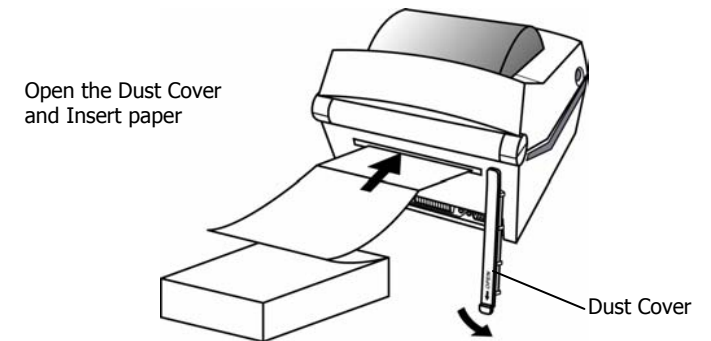

Adjust holders papers and paper Fixed

 
Adjust Guides

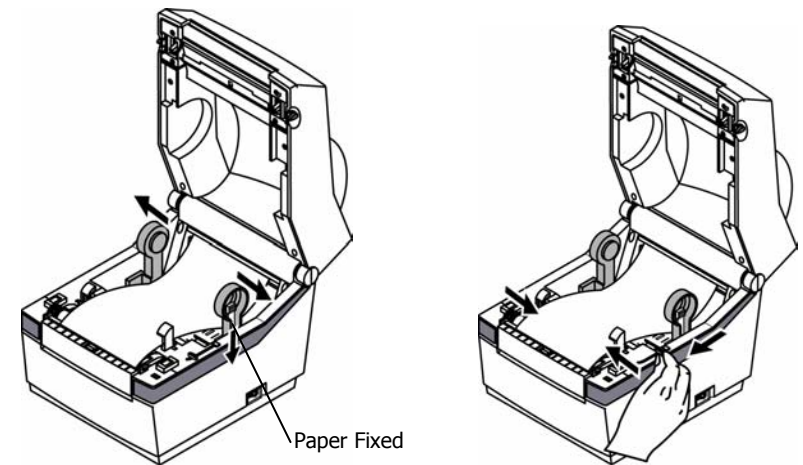

10. Auto Cutter (Option)


Auto cutter should be used for continuous paper only. (i.e. roll paper)

 1. Open the Dip switch cover, and make the switch 1 number 7 "On".
(Refer to printer mode setting at Chapter 6.)
2. Put a paper roll into the printer and close the cover.

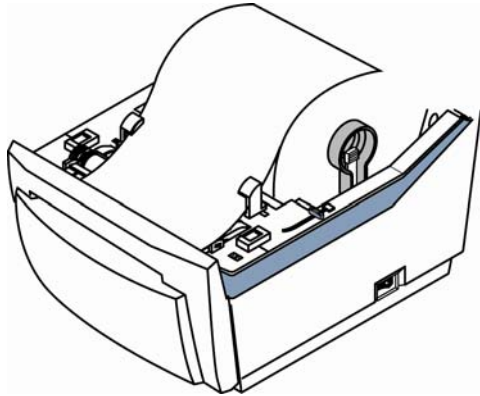

Caution (Partial cut)

 : Once the printer cut the paper, remove the receipt in order for next printing. Otherwise the receipt could be back into the printer and the cutter would cut it again.

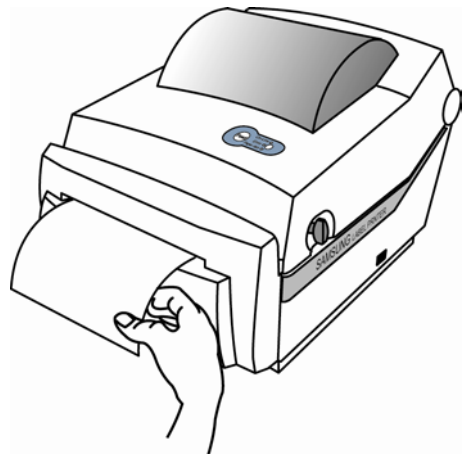


11. Cleaning Head

Paper dust on the heating elements may lower the printer quality. In this case, clean the print head as follows :

- Cautions**
1. Turn Off the printer power before cleaning.
 2. Note that the thermal head becomes very hot during normal operation, creating the danger of burn injury. Be sure to wait for about 2~3 minutes after turning printer power off before beginning the cleaning.

1. Open the printer cover.
2. Clean the thermal element (the area which is marked a thin black line) of the thermal head with a cotton swab moistened with an alcohol solvent (ethanol, methanol, or IPA).
3. After confirming that the alcohol solvent has been dried up completely, close the cover-open.

 - Note 1. Never touch the thermal element with your hand, then the thermal element can be damaged.**
2. Don't scratch the printer head.

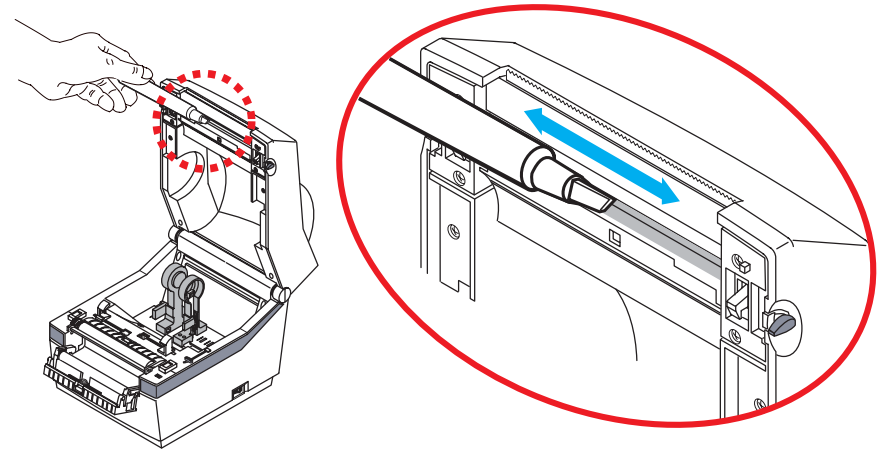

※ Clean it up when you replace every roll of paper to prevent the quality deterioration.

12. Install and Uninstall Windows Driver

 
12.1 Download install-program from Website

- (1) Execute web-browser.(Ex: Internet Explorer)
- (2) Type <http://www.samsungminiprinters.com>
- (3) Connect website.
- (4) In "Quick menu", click download button.
- (5) Download "SRP-770_V3.X.X.exe" in SRP-770 section.


12.2 Install Windows Driver

12.2.1 Serial Parallel interface


- (1) Double click "SRP-770_V3.X.X.exe" file.
- (2) Click "Next" Button.

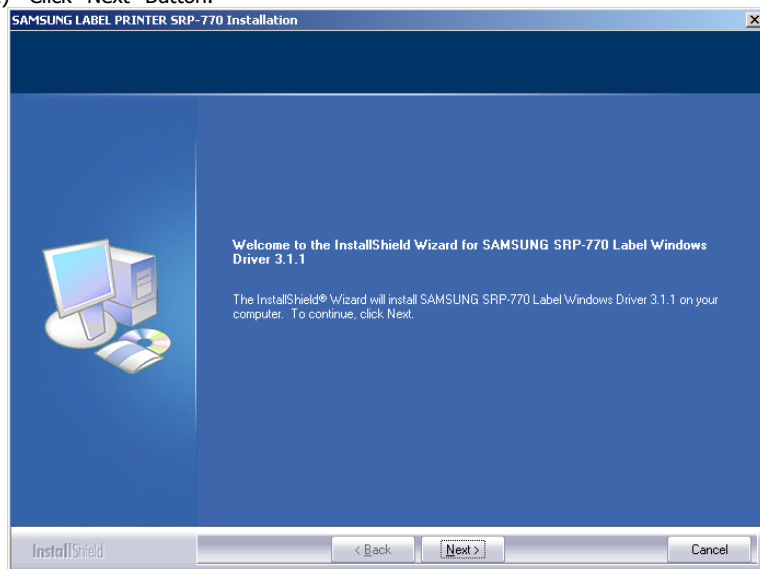

 
- (3) Click "Install" Button.

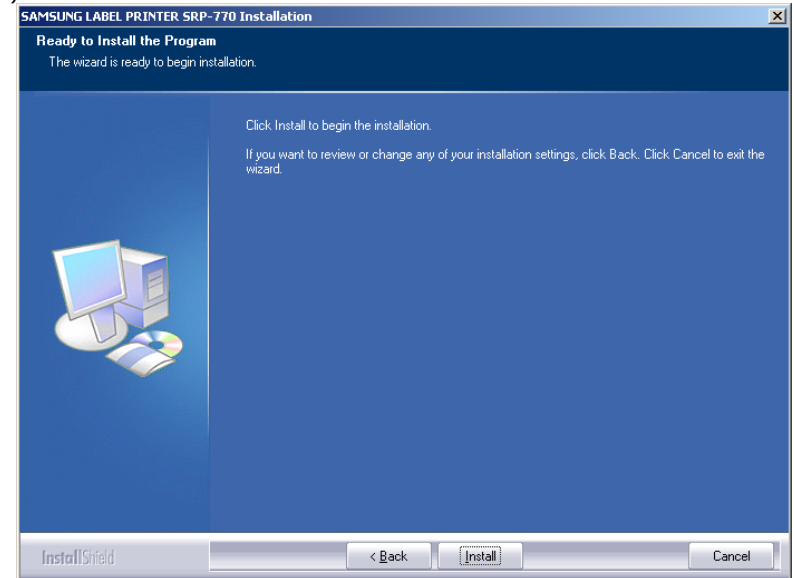

 
- (4) Select operating system type.

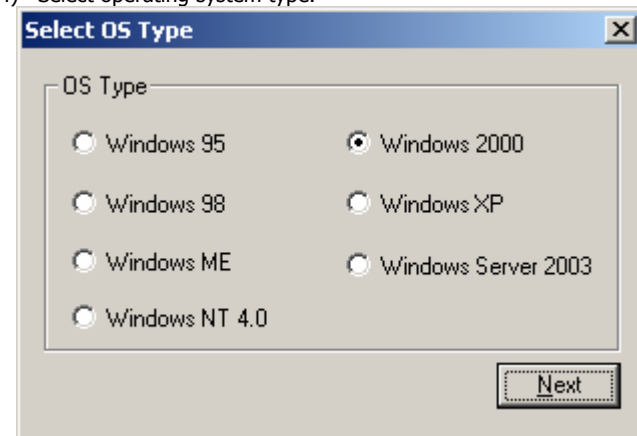

 (5) Select interface (port) type.

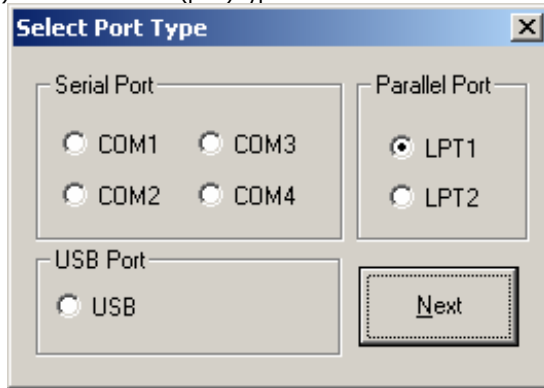

 (6) Please reboot computer.

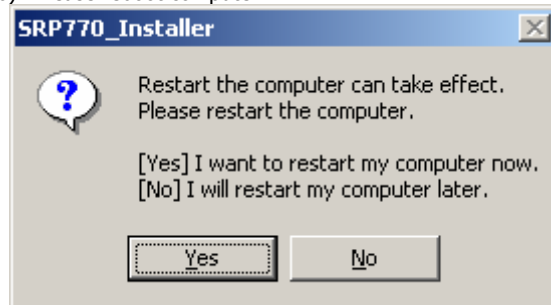


12.2.2 USB interface


A. Windows 95/98/ME

(1) Double click "SRP-770_V3.X.X.exe" file.

 
(2) Click "Next" Button.

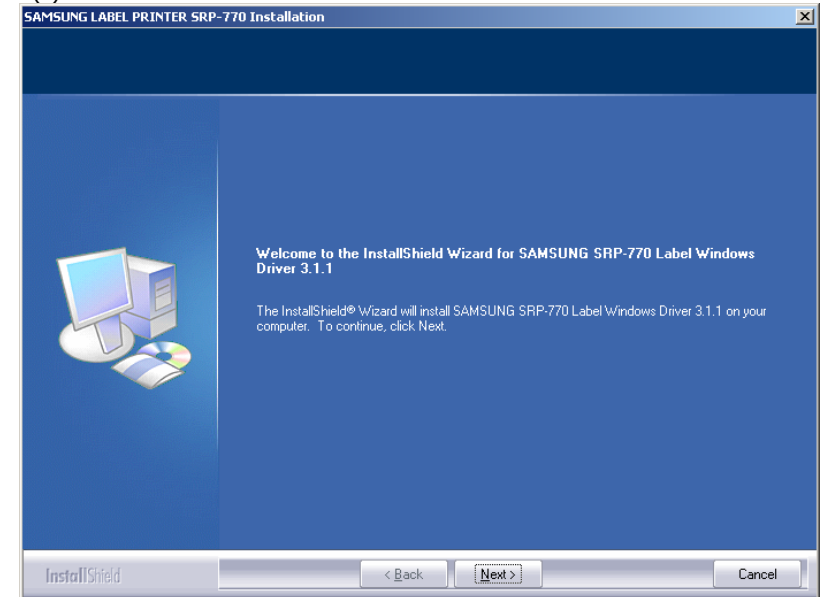

 
(3) Click "Install" Button.

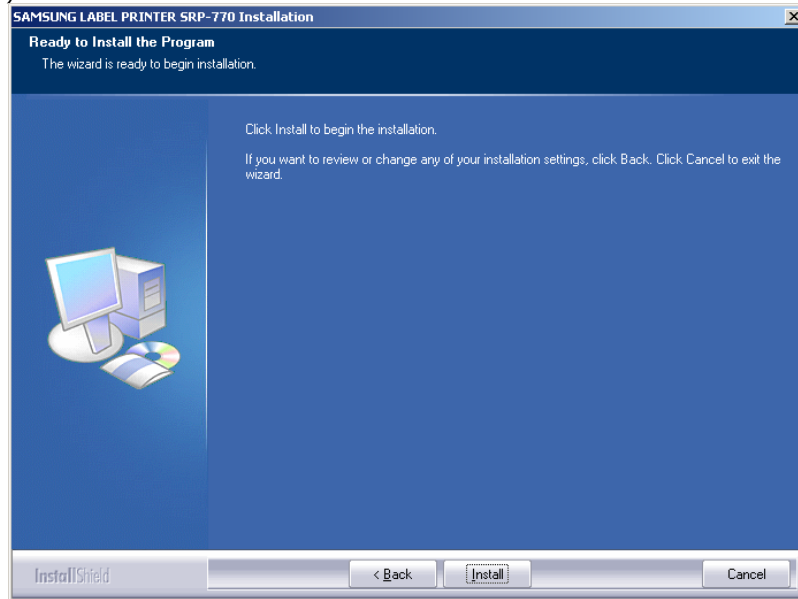

 (4) Select operating system type.

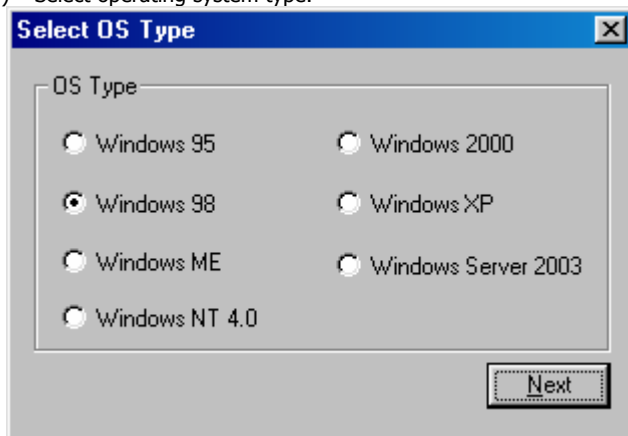

 (5) Select "USB" interface (port) type.

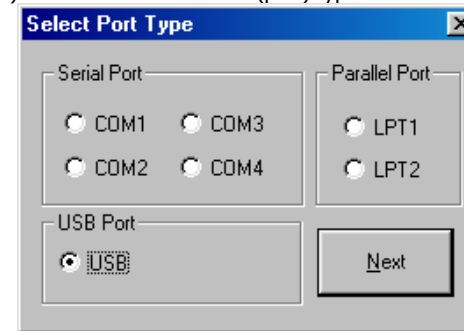


(6) Please turn-off printer and turn-on printer.



(7) When "Add new hardware wizard" for install "USB print support" driver pops up, click "Next" button.



 
- (8) Please click "Next" button three times.
- (9) When "USB print support" driver is installed, your system automatically restart after 10 seconds.

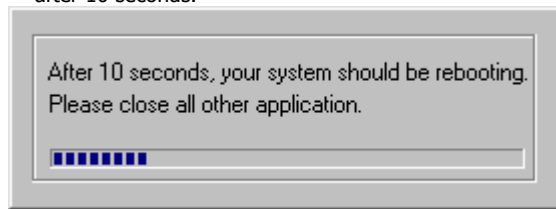


- (10) After the system restart, please turn-on printer.

B. Windows NT/2000

 
- (1) Double click "SRP-770_V3.X.X.exe" file.
- (2) Click "Next" Button.

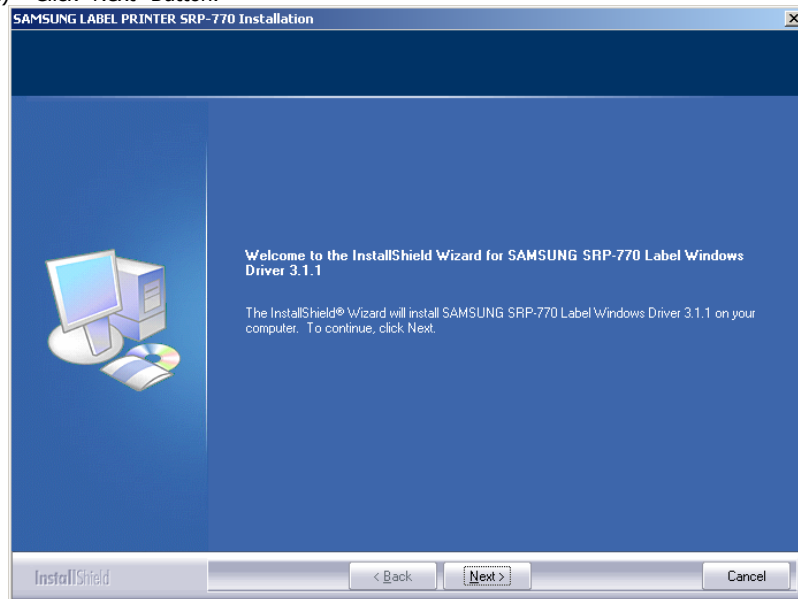

 
- (3) Click "Install" Button.

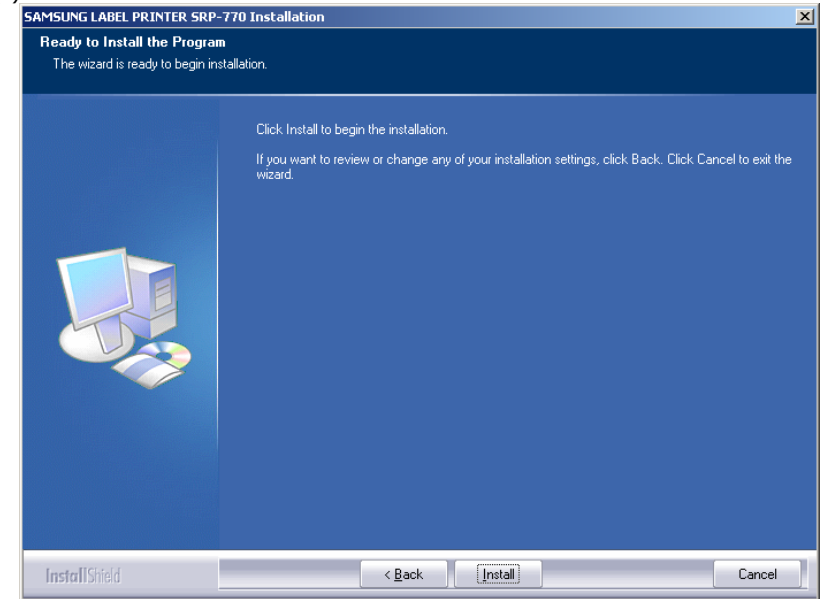

 
- (4) Select operating system type.

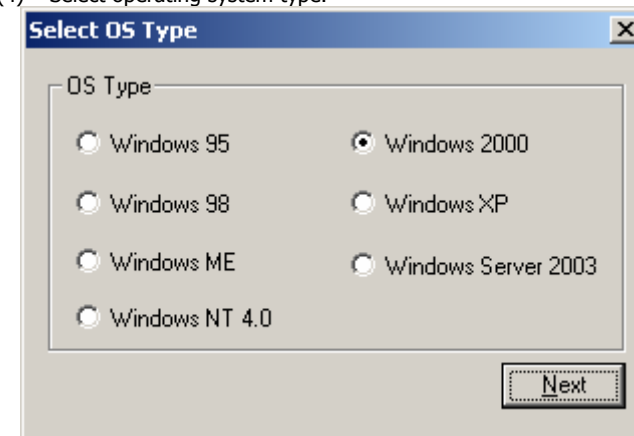

 
(5) Select "USB" interface (port) type.

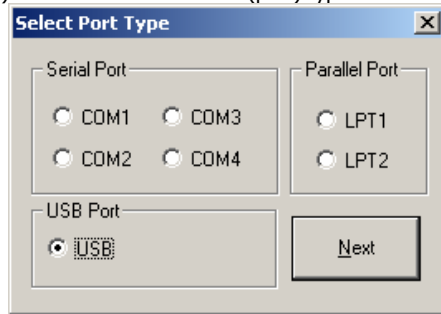

 (6) Please turn-off printer and turn-on printer.

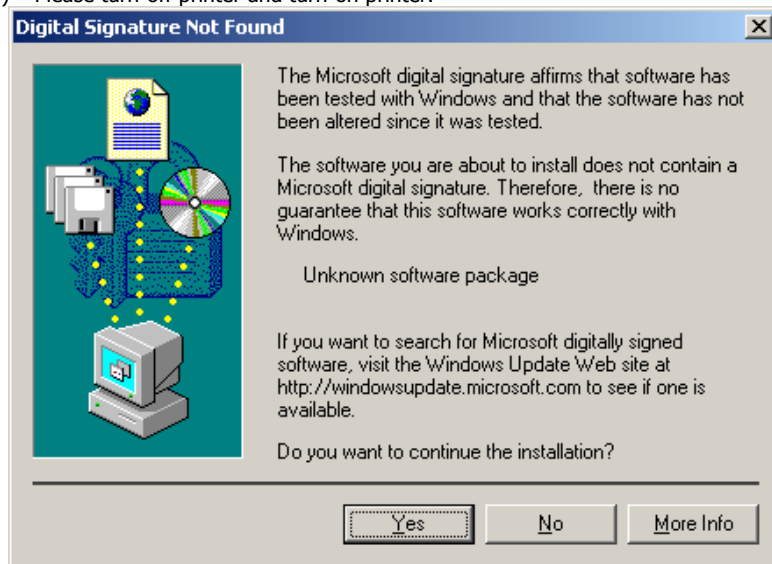


*** If you can see this dialog, don't worry comment in dialog. Printer and driver work well. Please click "Yes" button.**

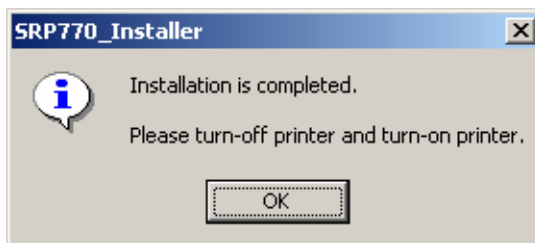 


C. Windows XP/2003 Server

(1) Double click "SRP-770_V3.X.X.exe" file.

 
(2) Click "Next" Button.

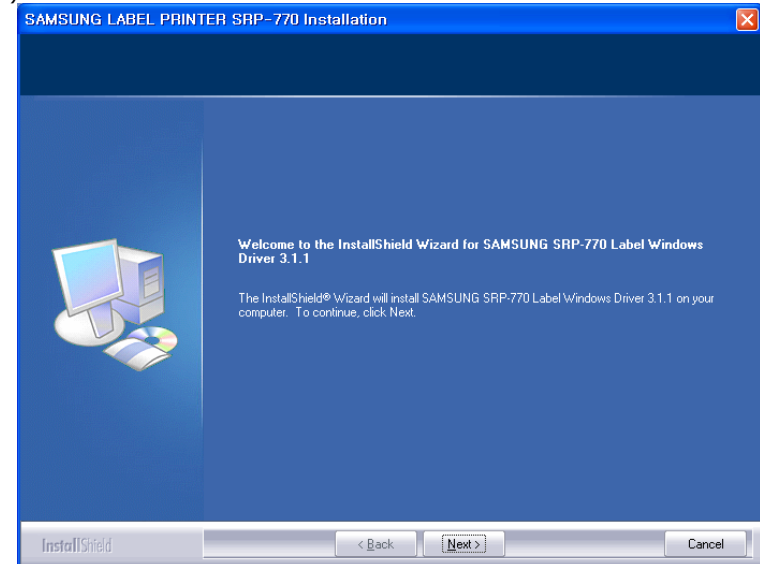

 
(3) Click "Install" Button.

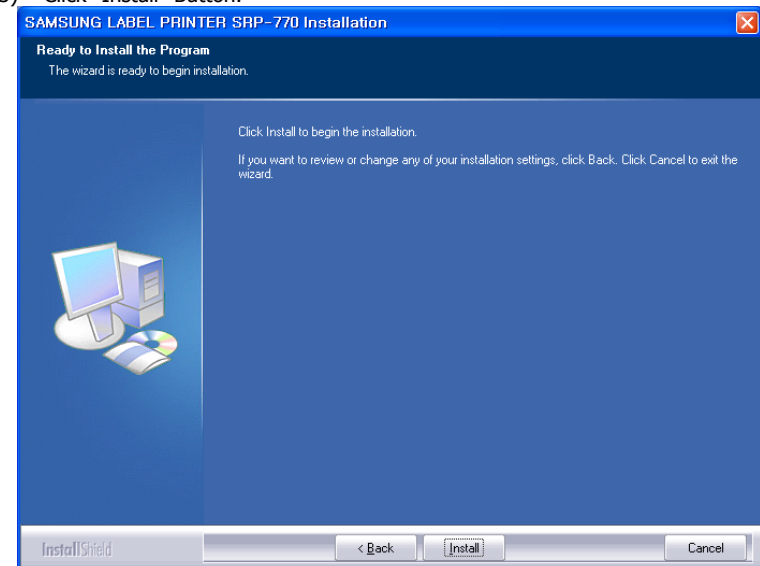

 (4) Select operating system type.

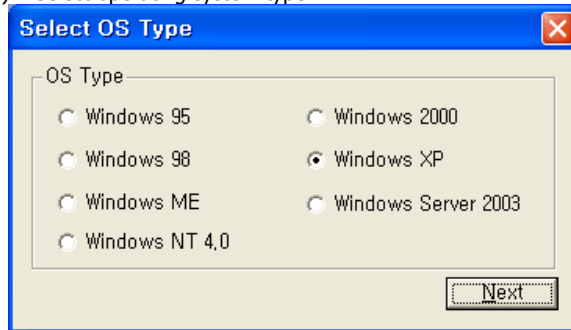

 (5) Select "USB" interface (port) type.

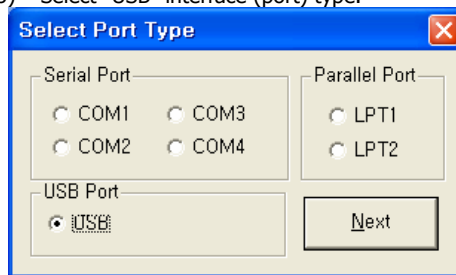

(6) Please turn-off printer and turn-on printer.



 
* If you can see this dialog, don't worry comment in dialog. Printer and driver work well. Please click "Continue Anyway" button.




(7) If "Add new hardware wizard" for install "SAMSUNGSRP-770" driver pops up, click "Next" button.



(8) Please click "Next" button until you can see "Finish" button.

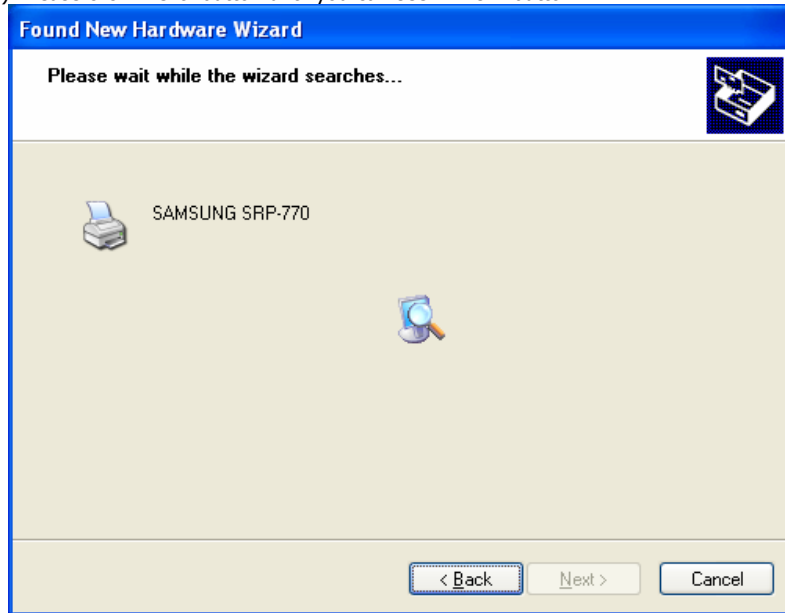

 (9) Please click "Finish" button.

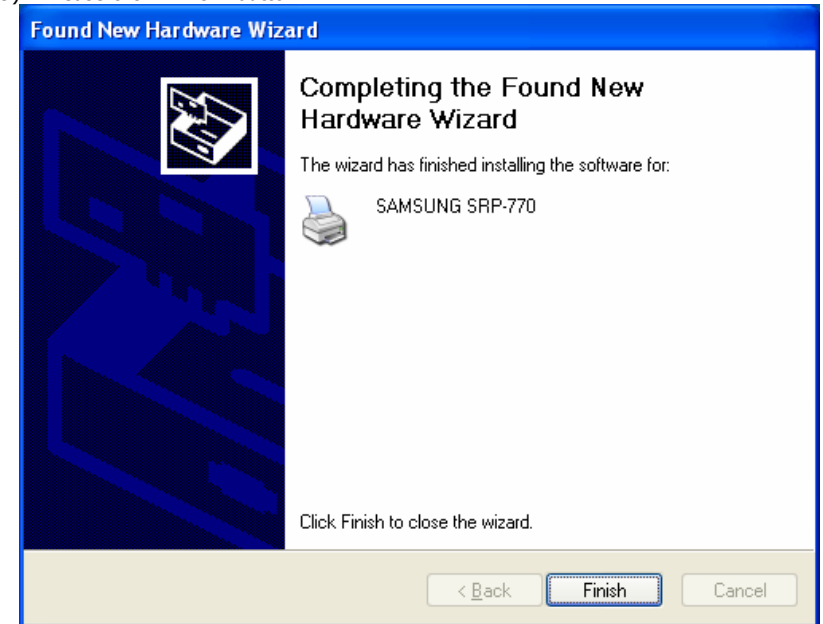


***If you can see this dialog, don't worry comment in dialog. Printer and driver work well. Please click "Continue Anyway" button.**

12.3 Uninstall Windows Driver


- (1) Click on the Start button, and then click on Settings > Control Panel.
- (2) Double click "Add/Remove Programs" icon.
- (3) Select "SAMSUNG SRP-770 LABEL Windows Driver 3.X.X".
- (4) Click "Change/Remove" button.

 (5) Select printer to remove.

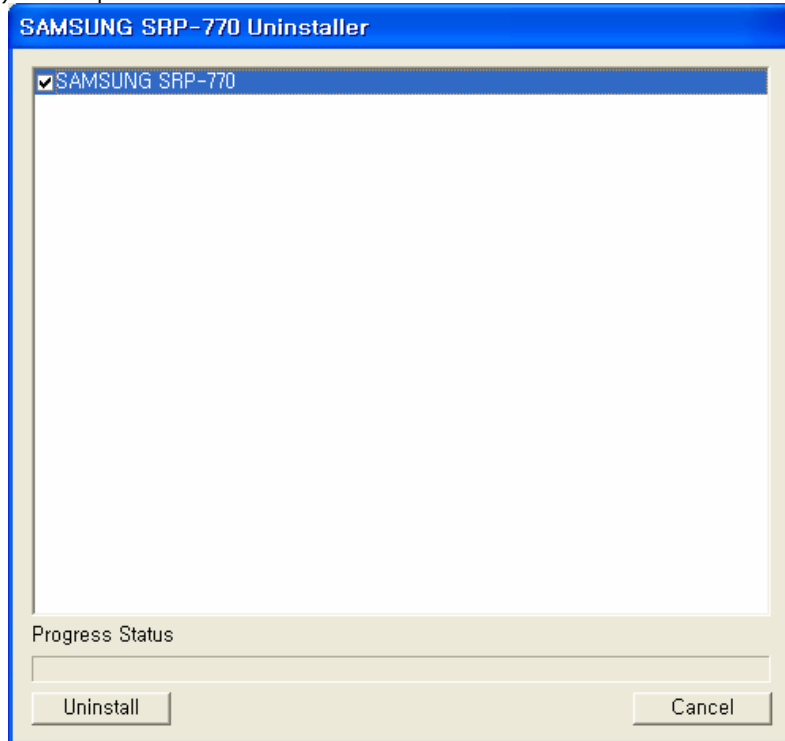


(6) Click "Uninstall" Button.

 (7) Please reboot computer.

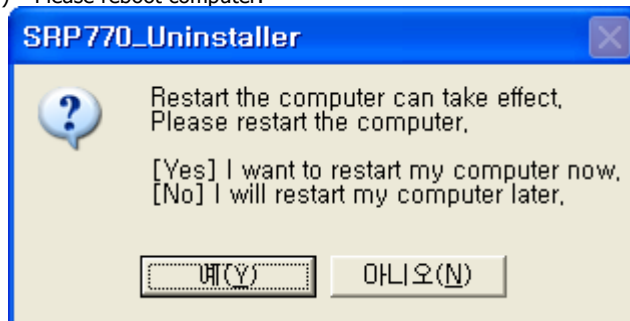


 12.4 Printer Settings

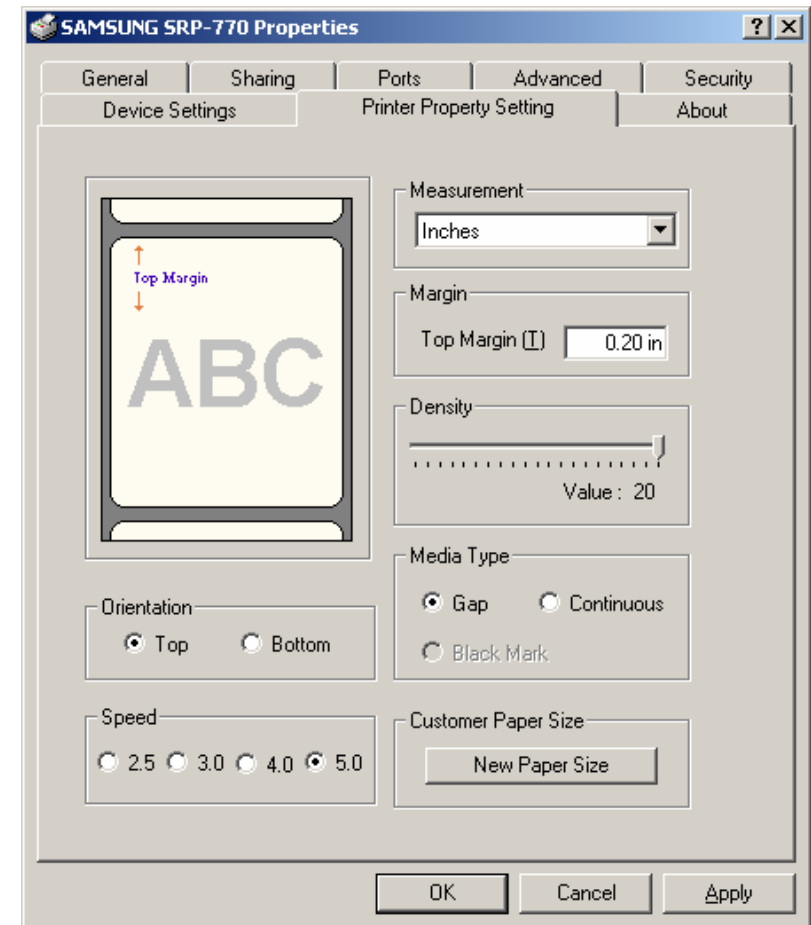

- 1) Measurement: Select measurement of "Top Margin". (Inch or millimeters)
- 2) Top Margin: top margin value of paper
- 3) Density: Select density of printing quality. (0 ~ 20)
- 4) Media Type: Select paper media type. ("Black Mark" is under development)
- 5) Orientation: Set printing direction.
- 6) Speed: Set printing speed. (2.5 ~ 3.0)

 7) Customer Paper Size

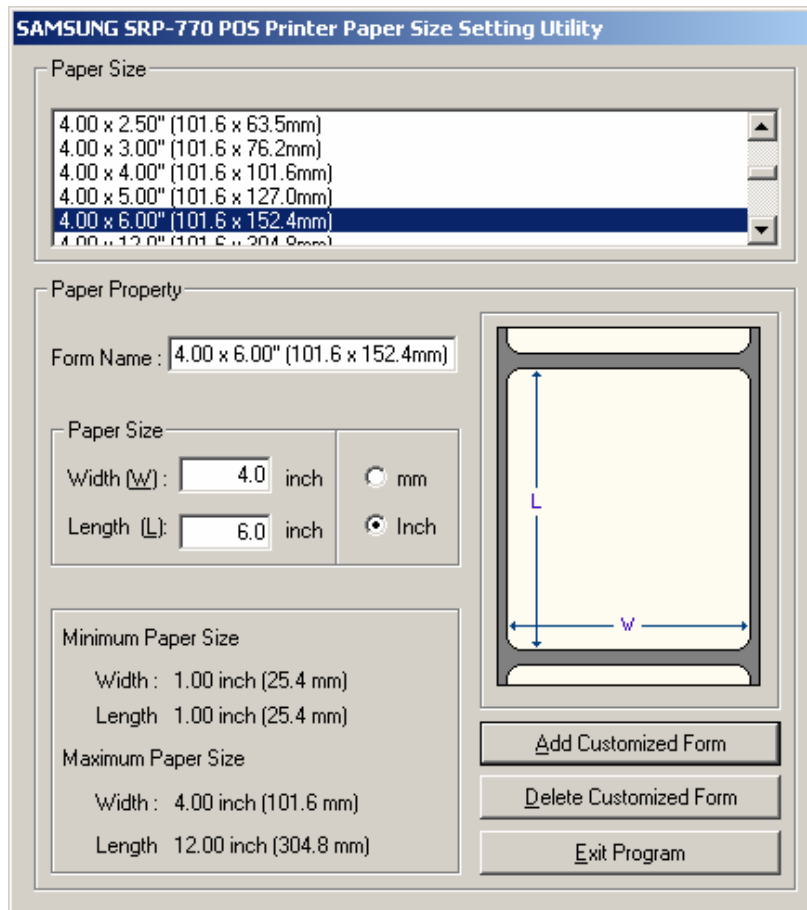

- a) Add Customized Form: Create new customized form. Customer must type "Form Name", "Width" and "Length". Width and Length in customized form must be the number in the range from Minimum to Maximum size.
- b) Delete Customized Form: You can delete customized form but default form may not be deleted.

Exit Program: Exit utility program.

【 Specification 】

Printing method	Thermal line printing	
Dot density	203 dpi (8 dot/mm)	
Printing width	25.4 ~ 101.6 mm	
Paper width	38.1 ~ 104 mm	
Printing speed	127 mm/sec	
Receive Buffer Size	4K Byte	
* Note : Printing speed may be slower, depending on the data transmission speed and the combination of control commands.		
Supply voltage	Input voltage	100~240V AC
	Frequency	50/60 Hz
	Output voltage	DC 24V
Environmental conditions	Temperature	5 ~ 45 °C (Operating) -25 ~ 70 °C (Storage)
	Humidity	30 ~ 80 % RH (Operating) 10 ~ 90 % RH (Storage) ; Except for paper
LIFE	Mechanism Head	10,000,000 lines 5×10 ⁷ pulse (50km)
MCBF	Mechanism	20,000,000 lines