

# REMINGTON®

EST. NEW YORK 1937




## Battery Operated Ladyshaver WSF5060

 [remington-europe.com](http://remington-europe.com)

Register online for an **EXTRA** year guarantee

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

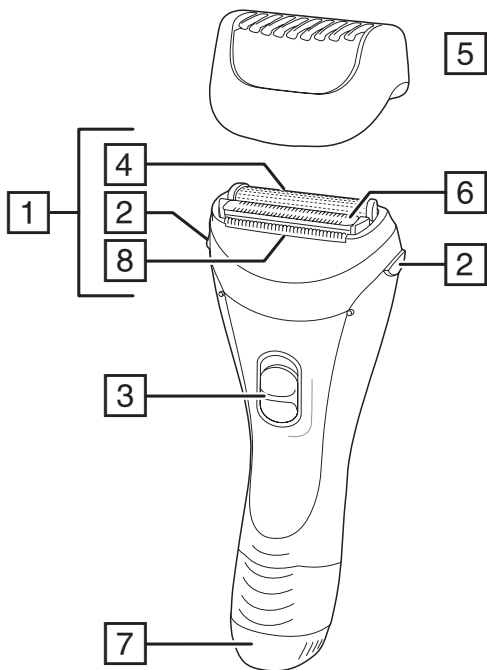

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- This appliance is battery operated only.
- This product uses alkaline batteries. At the end of their life the batteries must be removed from the appliance and be recycled or disposed of properly in accordance with your state and local requirements.
- Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials.
- Do not short circuit as it may cause burns.
- Turn off when cleaning or applying oil.

---

## PARTS

---

- |                                       |                               |
|---------------------------------------|-------------------------------|
| 1. Head assembly                      | 6. Flexible trimmer           |
| 2. Head release button                | 7. Battery compartment        |
| 3. On/off switch                      | 8. Massage strip              |
| 4. Hypoallergenic flexing shaver foil | 9. Cleaning brush (not shown) |
| 5. Bikini trimmer comb guard          |                               |

---

## GETTING STARTED

---

Be patient when first using your lady shaver, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your shaver, as we are confident you will receive years of enjoyable use and complete satisfaction.

---

## **INSERTING BATTERIES**

---

- Your shaver requires 'AAA' alkaline batteries (first set included).
- Make sure the product is turned off.
- Rotate the battery compartment cap approximately ¼ turn anti-clockwise then pull off.
- Insert 'AAA' alkaline batteries, so that the (+) and (-) marks on the battery face the same mark in the battery compartment.
- Place cap back on unit using the alignment marks and rotate clockwise until the cap snaps into place
- NOTE: Your shaver will not work if the batteries are inserted incorrectly
- NOTE: Remove the batteries if the unit is not in use for long periods.

---

## **INSTRUCTIONS FOR USE**

---

Your lady shaver is suitable for legs, underarms and the bikini area. It can be used dry or in the shower.

### **FOR REGULAR SHAVING**

- Switch the shaver on.
- Hold the shaver at a right angle to your skin and move the shaver against the direction of the hair growth.
- After shaving, turn the shaver off.
- NOTE: Before dry shaving, ensure the area is clean, dry and free from creams or oils.

### **TRIMMING AND SHAPING**

- Attach the bikini trimmer attachment.
- Hold the shaver at a right angle to your skin and press down gently.
- Edge and shape the areas as desired.

### **FOR BEST SHAVING PERFORMANCE**

- We recommend that you use your new shaver daily for -3 weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

### **CAUTION**

- If your skin is easily irritated by shaving or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.

---

## **CARE FOR YOUR SHAVER**

---

To ensure long lasting performance of your shaver, clean the head assembly regularly. The easiest and the most hygienic way to clean the shaver is by rinsing the shaving head after use with warm water.

## **AFTER EACH USE**

- Ensure the shaver is turned off.
- Press the side release button to slip open the head assembly.
- Blow any loose debris from the foil.
- Brush or rinse any accumulated hair from the main body of the shaver, head assembly and cutter assembly.
- Leave the head assembly open to allow the shaver to dry completely.

## **NOTE**

- The lady shaver is suitable for use in the bath or shower.
- Do not rinse with water hotter than 70°C.
- Do not completely submerge the lady shaver in water.
- Ensure that the lady shaver is turned off when cleaning.
- Do not clean the shaving foils with the brush.
- At regular intervals, put a drop of sewing machine oil onto the foils and cutter heads.

## **REPLACING YOUR FOIL AND CUTTERS**

- To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced every 6 months. These can be obtained from our nearest Remington® Service Centre.
- Signs that your foils and cutters need replacing.
- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

## **TO REPLACE THE FOIL**

- Ensure the lady shaver is switched off.
- Remove the foil assembly by pressing the release buttons on either side of the head and lifting the foil assembly upwards.
- Replace the foil assembly by aligning it with the body of the shaver then clicking it into place.

## **CAUTION**

- Only hold the plastic to prevent damage to the foil.
- Do not press on the foil when replacing.

## **TO REPLACE THE CUTTERS**

- Ensure the shaver is switched off and open the head assembly (as above).
- To remove cutter, grasp cutter between the thumb and forefinger and pull upwards.
- To reassemble cutter, place cutter onto the oscillator tip. Gently push down clicking into position.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any

economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### United Kingdom

☎ 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

### Ireland

☎ 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

**Ref. No. WSF5060**

**Type No. F01A**

21/UK/ WSF5060 T22-7002032 Version 02 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.  
Spectrum Brands (UK) Ltd

Fir Street,  
Failsworth,  
Manchester

M35 0HS  
remington-europe.com

© 2021 Spectrum Brands, Inc.