

REMINGTON®

EST. NEW YORK 1937

BIKINI TRIM

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

BKT4000AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP THE POWER ADAPTOR AWAY FROM WATER

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS:

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired. Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.
- Although this appliance is designed to be used around and with water, do not fully submerge the appliance or any of its attachments in water or any other liquid.
- Switch off this appliance before changing attachments.
- Do not wrap the cord of the power adaptor around the unit.
- Do not use this appliance with damaged or broken attachments, as injury may occur.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children should be supervised to ensure they do not play with this appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not plug or unplug the appliance with wet hands.
- This appliance is not intended for commercial or salon use.
- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance with type SA050035D (AUS) or HK28AA-5.0-350 (AUS).



SAVE THESE INSTRUCTIONS

BKT4000AU BIKINI TRIM

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Bikini Trim. Inside this manual you will find tips on using and caring for your trimmer.



KEY PARTS

1. On/Off switch

2. Main blade

3. Detail blade

4. Fixed combs (2 & 4mm)

5. Hang loop

6. Washout port

7. Charging indicator

Also includes:

- Premium storage bag
- Lubricating oil
- Cleaning brush
- Adaptor

ABOUT YOUR TRIMMER

BKT4000AU SPECIFICATIONS	
Power System	Cordless (rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	4 Hours
Run Time	60 Minutes
Indicators	LED Charging Indicator
Voltage Type	AC Adaptor - 220-240V

CHARGING

Always ensure that your hands, trimmer and mains adaptor are dry before charging. Before using your REMINGTON® trimmer for the first time charge for 24 hours. For subsequent uses, charge for 4 hours before use. One full charge allows 60 minutes.

- Ensure the product is switched off and attach the mains adaptor to the trimmer.
- Connect the mains adaptor to the mains. The charging indicator will illuminate.
- Charge for the time indicated above.
- Use the product until the battery is low. This is indicated by the trimmer running distinctly slower.

Note: This product is for cordless use only. Do not use your trimmer whilst it is plugged into the mains.

Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.

To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.

Charging Cautions:

- Do not attach the mains adaptor to the mains with wet hands.
- Always charge the trimmer in a cool, dry place.
- Do not charge the trimmer in close proximity to water.
- The trimmer can be attached to an electrical outlet voltage of 220V – 240V.

ATTACHING THE ATTACHMENTS

Note: Before attaching or removing the combs please ensure the unit is Off.

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer blade. Slide the comb down the grooves until it clicks into place.
- To remove the comb, unclick the sides of the comb where it connects to the trimmer and lift the comb away from the trimmer.

Note: Using the detail blade side of trimmer with no combs attached will trim down to 0.2mm.

Using the main trimmer blade with no combs attached will trim hair to 1mm.

HOW TO USE

Delicates Trimming

- Choose and attach the desired fixed comb.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- For hair around your delicates, lift your delicate parts to get a clear view of the area you are trimming. Trim from any direction which feels comfortable, however it is recommended to go against the direction of the hair growth.
- Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- For close and more precise shaping, remove the fixed comb and trim the hairs.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.

Note: Take your time when trimming the delicates area by using slow and even strokes.

Body Trimming

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- For a closer more precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edges.

Edging and Shaping or Close Trim

- Remove the trimmer comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.

TIPS FOR BEST RESULTS

- For an even closer and smoother close to skin trim use the main trimmer blade without an attachment comb and then use the detail trimmer blade to trim hairs back further. This will give you a clean shaven look without the irritation shaving can cause.
- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting until you are familiar with your body trimmer and how it works.

Note: This trimmer has been designed so that it can be used in the shower for greater ease and convenience. Do not store the trimmer in an area that constantly gets wet and make sure you dry the trimmer after use in the shower. Do not submerge the trimmer in water.

CLEANING, CARE & MAINTENANCE

Clean Your Trimmer Regularly

Cleaning Cautions:

- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- There are no user serviceable parts.
- The handheld unit should be turned off before cleaning.

Cleaning With Water

Your trimmer attachments have rust-resistant, stainless-steel cutting blades that permit the cutting assemblies to be rinsed under running water if you choose.

- Remove all attachments by rotating them counter-clockwise to the unlock position and pulling the attachment off.
- Rinse the attachments under warm running water. Do NOT use hot water, which may cause damage to components.
- Rinsing the trimmer under water or using when in the shower may require lubricating the cutter blades periodically. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with a fingertip. Wipe away all excess.

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The BKT4000AU trimmer contains an lithium-ion battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.



Suitable for use in the bath and shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON[®]
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2021 Spectrum Brands Inc.

Rev. 01/21

Part No. T22-7001818

Type: RG026A

