

Audiodesign

AirSpeaker ID




35041002

Bedienungsanleitung, Operating instructions, Mode d'emploi
Istruzioni per l'uso, Instrucciones de manejo, Gebruiksaanwijzing
Manual de instruções, Kezelési útmutató, Instrukcja obsługi, Návod k obsluze

LOEWE.



- ① +/- Set volume;
- ② S - Set audio source
- ③ ⏻ - Switch ON / OFF - to Standby mode
- ④ AC-IN - Mains socket
- ⑤ LAN - Socket
- ⑥ USB - Socket
- ⑦ RESET - Button
- ⑧ AUX - Stereo input 3.5 mm jack

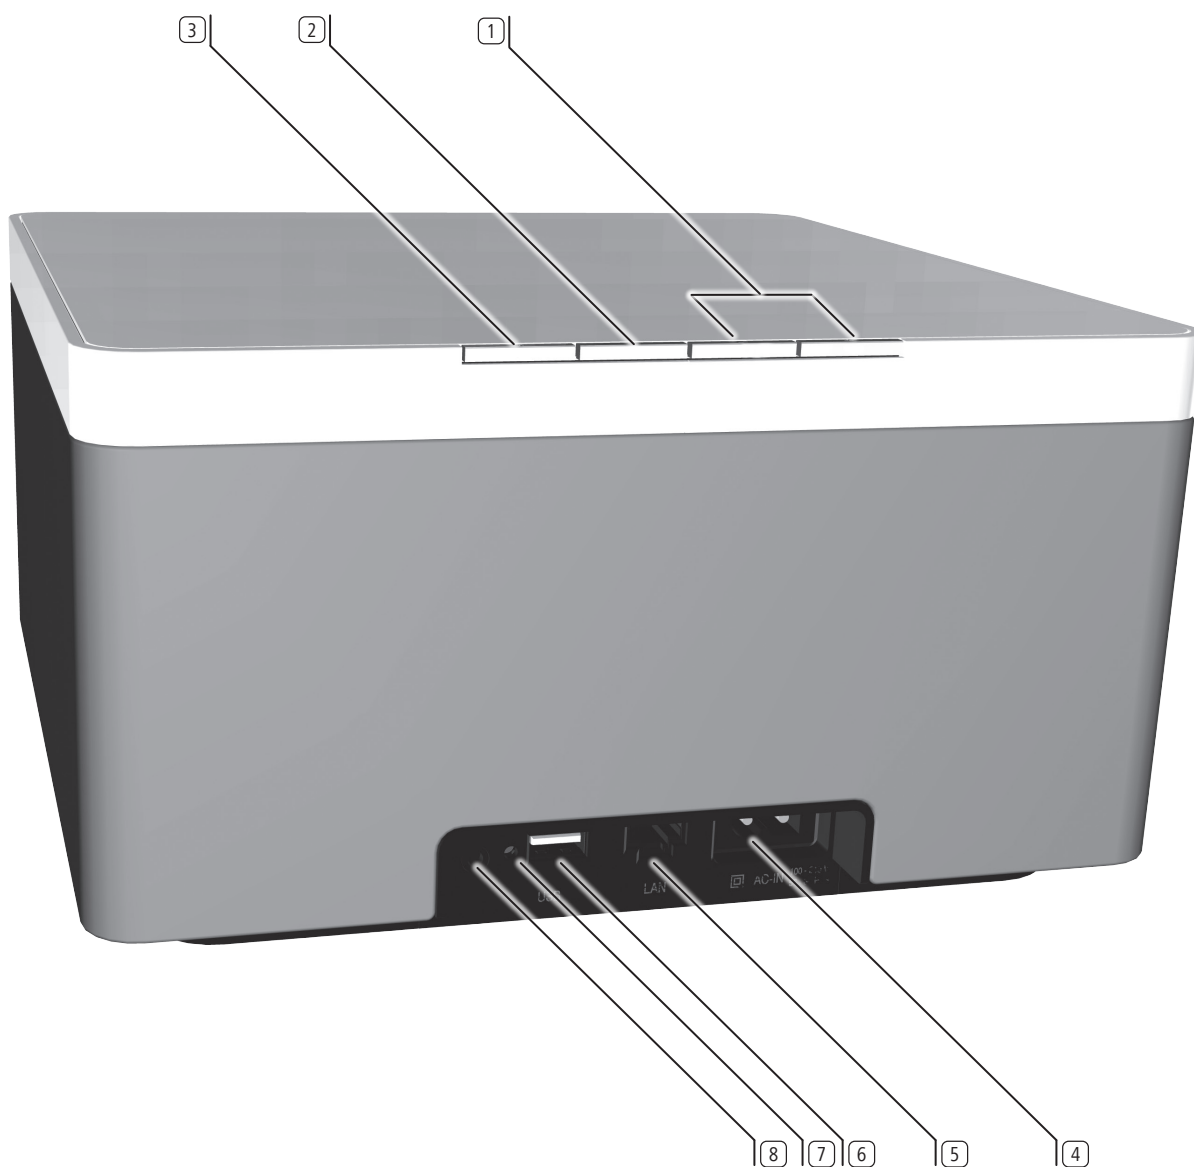

Contents

- Control elements.....13**
- Contents14**
- Welcome.....15**
 - Scope of supply 15
 - Accessories 15
 - Cleaning 15
 - For your safety 15
 - Set-up 16
 - Example configurations..... 16
 - Connection..... 16
 - Switching on/off 16
 - Network 17
 - Wired network..... 17
 - Wireless network - Configuration page 17
- Start-up18**
 - Network settings 18
 - Indicators..... 18
 - Software update 18
- Control.....19**
 - Airplay playback..... 19
 - Playing from external audio sources 19
 - iPod operation 19
- Troubleshooting20**
 - Troubleshooting..... 20
- Technical Data.....21**
 - Environmental protection..... 21
 - Legal information 21
- Trademarks.....22**
 - Trademarks..... 22
 - Declaration of conformity 22

Thank you

for choosing a Loewe product. We are happy to have you as a customer.

At Loewe we combine the highest requirements regarding technology, design and ease of use. This applies equally for TV, DVD, video, audio and accessories.

Neither technology nor design is an end in itself, but both are intended to provide our customers with the best possible audio and visual experience.

Our design is not influenced by short-term, fashionable trends. You have, after all, purchased a high-quality piece of equipment which you do not want to tire of tomorrow or the day after.

Scope of supply

Loewe AirSpeaker ID

Art. no. 51205-B/L00

- Mains cable
- Network cable
- Instructions for Use

Accessories

- Inlays in various colours - please contact your dealer

Cleaning

Only clean the aluminium surface with a slightly damp clean, soft cloth (without using any abrasive cleaning fluid).

You can remove any dust on the speaker surface by carefully using a vacuum cleaner if needs be.

For your safety

For your safety, and to avoid unnecessary damage to your unit, please read and follow the safety advice below.

Use for the intended purpose and ambient conditions

- The unit is intended exclusively for the playback of audio signals.
- Always switch off the unit before connecting or disconnecting other devices.
- Do not operate the unit unattended. Pull out the mains plug if you are away for a longer period.

Protect the unit from ...

- Water, dampness, dripping or sprayed water or steam
- Impacts and mechanical stresses
- Magnetic and electric fields
- Higher electrical powers than specified
- Cold, heat, direct sunlight and high temperature fluctuations
- Dust
- Covering which obstructs air circulation
- Interference with the internal workings of the unit



Do not place objects containing liquids or other items on top of the unit.

Candles and other open flames must be kept away from the unit at all times to prevent the spread of fire.

This device has been built exclusively for private use in domestic environments. Warranty services cover this intended use. The terms of the warranty only cover the intended use of the unit.

WARNING: To prevent electrical shock, do not open the unit. There are no parts inside the unit that can be repaired by the user. Repairs should only be carried out by a Loewe dealer.

If you have moved the unit out of the cold into a warm environment, leave it switched off for about an hour to avoid condensation forming. Do not switch the unit on until it has reached room temperature. This prevents serious damage to the components.

The power plug of the unit must be easily accessible so that the unit can be disconnected from the power supply at all times.

For IT power distribution system with phase to phase voltage 230V.

Volume

Loud music can lead to ear damage. Avoid extreme volumes, especially over longer periods.

About these Instructions for Use

The information in these instructions refers to the product Loewe **AirSpeaker ID**. Unless stated otherwise, the instructions refer to the operating elements on the device.


Paragraphs beginning with the **■** symbol indicate important hints, tips or conditions for perfect operation.

Terms which you will find in the menu or printed on the unit are printed in **bold** type. In the functional descriptions, the necessary operating elements are arranged to the left of the text containing the handling instructions.

Set-up


- Place the unit on an even, firm, horizontal surface.
- Do not set up the unit near strong heat sources or in direct sunlight.
- If setting up in a shelf or a closed cupboard: Leave at least 2.5 cm clearance around the unit, so that the air can circulate unhindered and there is no heat backup.
- Incorrect voltages can damage the unit. This device may only be connected to a power supply with the voltage and frequency indicated on the type plate using the mains cable.
- Pull out the power cable during thunderstorms. A voltage surge caused by lightning conducted through the mains could damage the unit.
- If the unit is not to be used for an extended period, the plug should also be disconnected from the mains.
- Position the mains cable in such a way that it can not be damaged. The power cable may not be kinked or laid over sharp edges, stood on or exposed to chemicals; the latter also applies to the unit as a whole. A power cable with damaged insulation can cause electric shocks and poses a fire risk.
- When you want to unplug from the mains, pull on the plug housing rather than on the cable. The cables in the mains plug could otherwise be damaged and could cause a short-circuit when plugged in again.

Example configurations

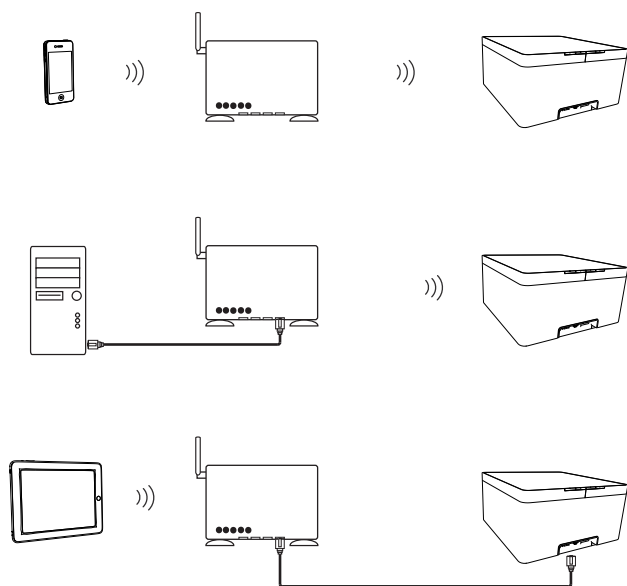

Connection

Use the network cable provided to connect the network socket **LAN** (5) to a network connection (e.g. switch or DSL router) of your home network with a connection to the Internet. You can connect an external audio source to the socket **AUX** (8). Use an audio cable with 3.5 mm jack (available from your dealer). Plug the network cable into the network socket **AC-IN** (4) and connect it to a 220-240V 50/60 Hz socket.

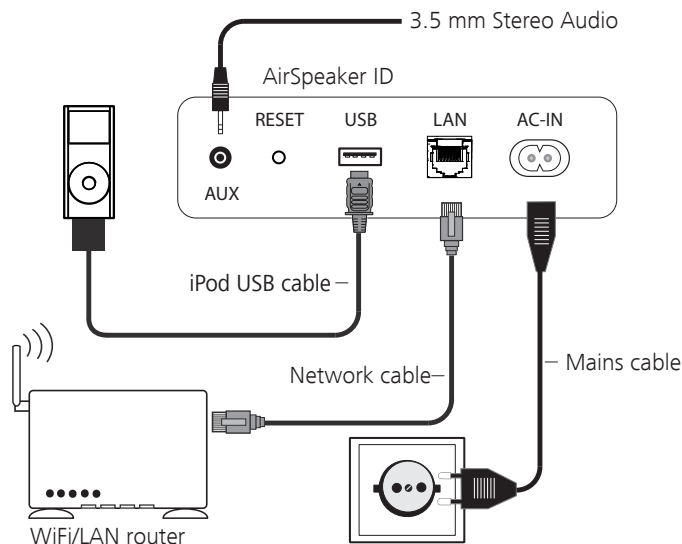


Switching on/off


- First establish all cable connections, as described under „Connection“. In particular, the **AirSpeaker ID** must be connected to the cable-based network before switching on, as it would otherwise search for a connection in WLAN mode.

Press the on/off button  (3) briefly on the unit. The unit switches on.


The LED indicator light in the ON/OFF button  lights up green.

To switch the device to Network Stand-by mode, press the ON/OFF button  (3) on the device for 3 seconds. The LED indicator light in the ON/OFF button lights up orange.

- In Network Standby mode the **AirSpeaker ID** is still "visible" as an AirPlay speaker, but consumes very little power (page 21). After 30 minutes without playback, the **AirSpeaker ID** automatically switches to Network Standby mode.

To switch the device to Stand-by mode, press the ON/OFF button  (3) on the device for 5 seconds. The LED indicator light in the ON/OFF button lights up red.

- In Stand-by mode the **AirSpeaker ID** cannot be activated by other devices, instead the ON/OFF button  (3) has to be pressed again. The power consumption is very low here (page 21).

If you will be absent for some time, first switch off the unit with the ON/OFF button  (3) and then pull out the mains plug. You can thus save energy and protect the environment.

Network

Depending on whether the device is connected by wire (Ethernet, Powerline) or wirelessly (WiFi) to your home network, different settings have to be made.

- ➡ Loewe recommends use of a wired network (Ethernet, Powerline) to ensure a high stability and quality of the data link. Use a wireless connection only if there is no option. Wireless connections can basically get disturbed due to external influences (e.g. microwave devices) and mostly provide a lower data transmission rate.
- ➡ The device must be registered in the same logical network as the audio source (such as iPad)

Once you have carried out the relevant steps described in the chapters "Set-up" and "Connection", switch on the unit.

Wired network

If your home network has a DHCP server (e.g. a DSL router), the setup of the network parameters is done automatically. You do not need to set up anything manually.

Wireless network - Configuration page

If you wish to set up a wireless network or if there is no DHCP server in your home network, the **AirSpeaker ID** must be configured via a direct connection between a PC and the **AirSpeaker ID**. Please use the network cable provided to connect the **AirSpeaker ID** to the network connection of the PC.

- ➡ It takes about 2 to 3 minutes from switching on the **AirSpeaker ID** until a connection to the PC can be established.
- ➡ It takes about 2 to 3 minutes from switching on the **AirSpeaker ID** until the device is „visible“ in the WLAN.
- ➡ A message might appear on the PC, stating that only a limited network is available.

After the **AirSpeaker ID** has completely started, enter this address in the Internet browser to call up the Configuration page: 169.254.111.222.


If the **AirSpeaker ID** is connected to a home network with DHCP server, you can also access the Configuration page via a PC on which Apple iTunes is installed:

Enter the address line in the PC Internet browser:

[http://AirSpeaker ID-\[xxxxxx\].local/index.asp](http://AirSpeaker ID-[xxxxxx].local/index.asp)

where [xxxxxx] stands for the last six characters of the MAC address. You can find the MAC address on the product label on the bottom of the unit

- ➡ If you change the „Device Name“ manually, the address (see above) via which you can call up the Configuration page of the AirSpeaker ID will also change correspondingly. Please note the altered „Device Name“. The new address is then : [http://\[newname\].local/index.asp](http://[newname].local/index.asp)

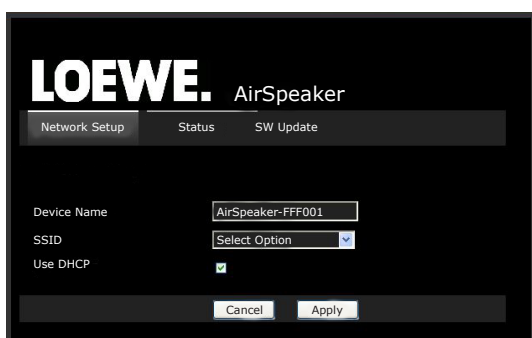

Example of a configuration page.

Then continue with the network settings as described on page 18.

Network settings


The following network settings can be made:

- Device Name** The name that is used to identify the unit in the network can be set individually.
- SSID** Selection of an available wireless network or the option **Configure Manually**
- Configure Manually** Manual configuration of the WiFi network
- Manual SSID** Enter the network name of the desired WiFi network
- WPA Key** Enter the network key of the selected WiFi network
- Use DHCP** Select this option (box is ticked) to let the WiFi router set the network parameters automatically.

If this option is disabled you can manually set the network parameters.
- Select Encryption Type** Select the encryption method.
 - No Encryption** The connection is not encrypted (not recommended)
 - WEP** The connection is encrypted with the WEP protocol (not recommended)
 - WPA** The connection is encrypted with the WPA protocol
 - WPA2** The connection is encrypted with the WPA2 protocol (recommended)
- IP Address** Fixed IP address assigned to the device
- Subnet Mask** Subnet mask of the home network (usually 255.255.255.0)
- Gateway** IP-address of the gateways
- Primary DNS** IP-address of the primary DNS server
- Secondary DNS** IP-address of the secondary DNS server

► Encryption using the WEP standard is no longer considered safe. If possible, use the standards WPA or WPA2. Please make the appropriate settings in your WiFi router.

You can find an overview of the network parameters, connections and other technical details on the page **Status**.

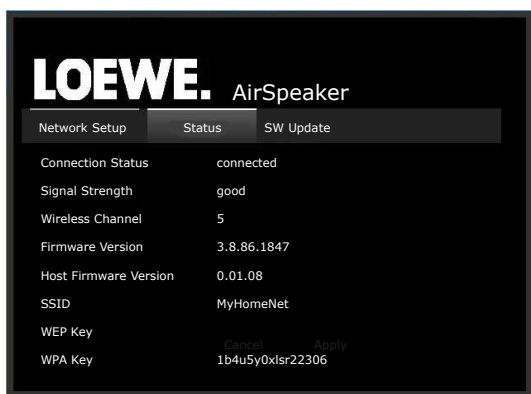

Indicators

The indicators in the buttons on the unit show the different operating states.

Function	Button	Button S	Button -	Button +
Standby	red			
Network Standby	orange			
ON	green			
Network initialising /Network problem	green	flashing yellow		
AirPlay search		flashing violet		
AirPlay mode	green	violet		
AUX mode	green	green		
USB mode	green	blue		
Volume up/down			white	white
Mute			flashing white	flashing white
Initialize Software update	flashing white or orange		flashing white	flashing white
WiFi Software update	orange	flashing white	flashing white	flashing white
Contoller Software update	green	flashing white	flashing white	flashing white
Error during software update		flashing orange		
Device error		flashing red		

Software update

You can download a software update suitable for your unit from the Internet, if required.

- **AirSpeaker ID** must be connected by cable to the network for a software update.
- The power supply must never be disconnected from the device during the updating process!

Open the **Configuration Page** as described on page 17.

Chose the tab **SW update**.

Use the **Update** function to start the update process. The display in the **S** button lights up orange. The process takes up to 30 minutes, depending on the speed of the internet connection.

The device restarts after a successful update.

- You can download a current version of the instructions for use as a PDF file from the Loewe web page: <http://support.loewe.tv/de> – [Library Instructions for Use](#) This is especially recommended after a software update.


Airplay playback

The Loewe **AirSpeaker ID** allows you to play audio signals wirelessly from a compatible Apple device. A list of which Apple models are compatible with the Loewe **AirSpeaker ID** can be found on page 21.

- ➡ An operating system with version 4.2.1 or later must be installed in the Apple device.

Press the **S** button repeatedly until the corresponding LED lights up violet.

Start the audio playback on the Apple device.


Press the symbol  (usually located next to the volume control of the application currently playing on the touch screen of the Apple device) and select the Loewe **AirSpeaker ID** for playback.

Set volume - Application on the Apple device

Set volume - +/-  buttons on the **AirSpeaker ID**.

Playing from external audio sources

 

You can play an external analogue stereo audio source with the Loewe **AirSpeaker ID**.

The source must be connected to the 3.5 mm jack socket **AUX**  on the rear of the unit.

Press the **S** button repeatedly until the corresponding LED lights up green.

Start playing the connected audio source.


Set volume - +/-  buttons on the **AirSpeaker ID**.

- ➡ Set the volume of your audio source to a high setting and use the +/- buttons  on the **AirSpeaker ID** to select the desired volume, so as to avoid static noises.
- ➡ Disconnect your Apple device from the USB connection of the **AirSpeaker ID** while using the **AUX**  connection as an audio source, so as to avoid static noises.

iPod operation

You can connect your Apple device to the **AirSpeaker ID** allowing you to listen to your music in the very best quality. If the **AirSpeaker ID** is switched on, the accumulator of the connected Apple device is charged. A list of which Apple models are compatible with the **AirSpeaker ID** can be found on page 21.

Connecting the iPod

Connect your Apple device via the iPod USB cable to the **USB** socket  on the unit.

iPod audio play

Press the **S** button repeatedly until the corresponding LED lights up blue.

Start the audio playback on the Apple device.



If you use the optionally available remote control Assist AirSpeaker ID, you can also control some basic functions of your Apple device via this. Please refer to the user manual of the remote control.

Set volume - Application on the Apple device

Set volume - +/-  buttons on the **AirSpeaker ID**.

- ➡ Depending on the software version, your Apple device might not be able to be operated via the **AirSpeaker ID**. We recommend updating the software of your Apple device to the latest version.
- ➡ The compatibility with your Apple device can vary depending on the model. For Apple devices supported see page 21.
- ➡ Faults can occur depending on the Apple device.
- ➡ Only disconnect your Apple device from the **AirSpeaker ID** when there is no access to it.

Troubleshooting

Problem	Possible cause	Remedy
Not working at all.	Mains cable not plugged in.	Plug the mains cable into a socket 230V 50 Hz.
No sound.	Defective connections at the input cable.	Connect the cable correctly (page 16). If the problem continues, the cable might be defective.
	The volume is set at minimum.	Turn up the volume.
	The sound is set to mute.	Press  or V+ on the remote control to reactivate the audio output and then set the volume level.
The unit is not working properly.		Unplug the mains plug from the mains socket and then try plugging it in again after 90 seconds.
		Press the Reset  button for > 10 seconds to restore the default settings. Disconnect the device from the power supply for 90 seconds. After this, please carry out the basis settings again.
Sound interruptions during AirPlay playback	Other devices in your environment might be transmitting on the same radio channel.	Connect the AirSpeaker ID to a wired network or set a free radio channel at your WiFi router.
The remote control is not working properly.	The batteries in the remote control are dead.	Replace the batteries with new ones.
The PC cannot establish a connection to the AirSpeaker ID .		Check whether Apple iTunes is installed on the PC.
The iPod playback stops and another title is played.	The iPod function "Shake to Shuffle" is activated.	Deactivate this function in your iPod.

Technical Data

General

Loewe AirSpeaker ID	Art. no. 51205-B/L00
Operating temperature [°C]	5 ... 40
Humidity [%] (no condensation)	30 ... 90
Dimensions [W x H x D in cm]	24 x 13 x 24
Weight [kg]	3.8

Electrical data

Mains voltage [Volt 50 Hz]	230
Power consumption [Watt]	19
Power consumption in network standby [Watt]	< 3.5
Power consumption on standby [Watt]	< 0.5
Output stages	2
Amplifier nominal power [Watt] (sine)	4x 20

Interfaces

AUX	Jack socket 3.5 mm
USB	1x V 2.0, type A
LAN	Wired network RJ-45

Wireless Interfaces

Supported standards	801.11b/g
Frequency range	2400-2483,5 MHz
Encryption	WEP, WPA

Wired network

Supported standards	10 Mbit/s Ethernet (10Base-T) 100 Mbit/s Fast Ethernet (100Base-T)
---------------------	---

Home networking standard

Audio	Apple AirPlay
-------	---------------

Supported Apple devices - Made for

(AirPlay Audio playback)

iPod touch (2nd generation)
iPhone 4S, iPhone 4, iPhone 3GS
iPad

(USB Audio playback)

iPod touch (4th generation), iPod touch (3rd generation)
iPod touch (2nd generation), iPod touch (1st generation)
iPod classic
iPod nano (6th generation)
iPod nano (5th generation), iPod nano (4th generation)
iPod nano (3rd generation), iPod nano (2nd generation)
iPhone 4, iPhone 3GS, iPhone 3G, iPhone

Environmental protection

Cardboard box and packaging

In line with national regulations regarding the disposal of packaging materials, we pay a fee to authorised recyclers who collect packaging from dealers.

The unit



Attention: The EU Directive 2002/96/EC governs the proper return, handling and recycling of used electronic appliances.

Old electronic appliances must therefore be disposed of separately. Never dispose of this unit in normal domestic waste! You can hand in your old unit free of charge at identified collection points or to your dealer if you buy a similar new unit. Additional details about return (also for non EU countries) are available from your local municipal authorities.

Remote control batteries



The batteries provided contain no harmful materials such as cadmium, lead or mercury.

Used batteries should no longer be disposed of in the domestic waste according to the Battery Ordinance. You can dispose of used batteries free of charge at the collection points in commercial outlets. Your dealer will also have a collection point for used batteries.

Legal information

Loewe Opta GmbH is a public limited company of German law with its Head Office in Kronach.

Industriestrasse 11, 96317 Kronach

Telephone: +49 9261 99-500

Fax: +49 9261 99-515

Email: ccc@loewe.de

Commercial Register: Municipal Court Coburg, No. HRB 42243

VAT ID-No.: DE 193216550

WEEE registration number: DE 41359413

Editorial date 12.12. 5th edition

© Loewe Opta GmbH, Kronach

All rights reserved including translation.

Design and technical specifications are subject to change without notice.

Trademarks



“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPod and iPhone is a registered trademark of Apple Inc. in the USA and other countries.

The set is CE marked and complies with EU directives. The complete declaration of conformity is included in the detailed operating manual, which you can download from our homepage.

Declaration of conformity



This equipment is in compliance with the essential requirements and other relevant provisions of **Directive 1999/5/EC**. It may be operated in all countries in the **EU** and also in **Iceland, Norway and Switzerland**. In **France** and **Italy** it may only be used **indoors**.

(A) Loewe Austria GmbH
Parking 12
1010 Wien, Österreich
Tel +43 - 810 0810 24
Fax +43 - 1 22 88 633 - 90
E-mail: loewe@loewe.co.at

(AUS) Audio Products Group Pty Ltd
67 O'Riordan St
Alexandria NSW 2015, Australia
Tel +61 - 1300 130 492
Fax +61 - 02 9578 0140
E-mail: help@audioproducts.com.au

(B NL L) Loewe Opta Benelux NV/SA
Uilenbaan 84
2160 Wommelgem, België
Tel +32 - 3 - 2 70 99 30
Fax +32 - 3 - 2 71 01 08
E-mail: ccc@loewe.be

(BG) Darlington Service
193 Kn. Klementina St.
1612 Sofia, Bulgaria
Tel +359 - 2 9556399
E-mail: darlington@psp-bg.com

(CH) Telion AG
Rütistrasse 26
8952 Schlieren, Schweiz
Tel +41 - 44 732 15 11
Fax +41 - 44 732 15 02
E-mail: infoKD@telion.ch

(CY) Hadjikyriakos & Sons Ltd.
121 Prodomos Str., P.O. Box 21587
1511 Nicosia, Cyprus
Tel +357 - 22 87 21 11
Fax +357 - 22 66 33 91
E-mail: savvas@hadjikyriakos.com.cy

(CZ) BaSys CS s.r.o.
Sodomkova 1478/8
10200 Praha 10 - Hostivar,
Česká republika
Tel +420 234 706 700
Fax +420 234 706 701
E-mail: office@basys.cz

(D) Loewe Opta GmbH,
Customer Care Center
Industriestraße 11
96317 Kronach, Deutschland
Tel +49 9261 99-500
Fax +49 9261 99-515
E-mail: ccc@loewe.de

(DK) Kjaerulff1 Development A/S
C.F. Tietgens Boulevard 19
5220 Odense SØ, Denmark
Tel +45 - 66 13 54 80
Fax +45 - 66 13 54 10
E-mail: info@loewe.dk

(E) Gaplasa S.A.
Conde de Torroja, 25
28022 Madrid, España
Tel +34 - 917 48 29 60
Fax +34 - 913 29 16 75
E-mail: loewe@maygap.com

(F) Loewe France SAS
Rue du Dépôt,
13 Parc de l'Europe, BP 10010
67014 Strasbourg Cédex, France
Tel +33 - 3 - 88 79 72 50
Fax +33 - 3 - 88 79 72 59
E-mail: loewe.france@loewe-fr.com

(FIN) Karevox Oy
Museokatu 36
00100 Helsinki, Finland
Tel +358 - 9 44 56 33
E-mail: kare@haloradio.fi

(GB IRL) Loewe UK Limited
1st Floor, 237A Kensington High St
London
W8 6SA, UK
Tel +44 - (0) 207 368 1100
Fax +44 - (0) 207 368 1101
E-mail: enquiries@loewe-uk.com

(GR RO) Issagogiki Emboriki Ellados S.A.
321 Mesogion Av.
152 31 Chalandri-Athens, Hellas
Tel +30 - 210 672 12 00
Fax +30 - 210 674 02 04
E-mail: christina_argyropoulou@isemmel.gr

(H) Basys Magyarorszag KFT
Tó park u.9.
2045 Törökbálint, Magyar
Tel +36 - 2341 56 37 (121)
Fax +36 - 23 41 51 82
E-mail: ertekesites@basys.hu

(HK CN) Galerien Und PartnerPlus
King's Tower 28/F, 111 King Lam Street
Kowloon, Hong Kong
Tel +852 - 27 77 89 88
Fax +852 - 23 10 08 08
E-mail: service@loewe-cn.com

(HR) Plug&Play Ltd.
Bednjanska 8, 10000 Zagreb
Hrvatska (Kroatia)
Tel +385 1 4929 683
Fax +385 1 4929 682
E-mail: info@loewe.hr

(I) Loewe Italiana S.r.l.
Via Monte Baldo, 14/P - 14/N
37069 Dossobuono di Villafranca di Verona
Tel +39 - 045 82 51 690
Fax +39 - 045 82 51 622
E-mail: info@loewe.it

(IL) Clear electronic entertainment Ltd
13 Noah Mozes St.
Agish Ravad Building
Tel Aviv 67442, Israel
Tel +972 - 3 - 6091100
Fax +972 - 3 - 6092200
E-mail: info@loewe.co.il

(IND) Navshiv Retail Pvt. Ltd.
Block D, Plot No. 7 Shanti Kunj
Vasant Kunj
New Delhi - 110070, India
Tel +91 11 47 65 55 00
Fax +91 11 47 67 67 15
E-Mail: admin@navshiv.com

(IR) MiMoRa HOLDING CO.
N0 1001, Afra Tower
Parsa St. Fereshteh
Tehran, Iran
Tel + 98 921 344 0521
E-Mail: s.zarandooz@gmail.com

(KSA) Salem Agencies & Services Co.
Hamad Al Haqueel Street, Rawdah, Jeddah
21413
Kingdom of Saudi Arabia
Tel +966 (2) 665 4616
Fax +966 (2) 660 7864
E-mail: hkurkjian@aol.com

(LV EST) Kpartners, SIA
A.Čaka iela 80
Rīga, LV-1011, Latvia
Tel +3 71 - 67 29 29 59
Fax +3 71 - 67 31 05 68
E-mail: olga@dom332.lv

(LT) A Cappella Ltd.
Ausros Vartu 5, Pasazo skg.
01129 Vilnius, Lithuania
Tel +370 - 52 12 22 96
Fax +370 - 52 62 66 81
E-mail: info@loewe.lt

(M) Doneo Co. Ltd
34/36 Danny Cremona Street
Hamrun, HMR1514, Malta
Tel +356 - 21 - 22 53 81
Fax +356 - 21 - 23 07 35
E-mail: service@doneo.com.mt

(MA) Somara S.A.
377, Rue Mustapha El Maani
20000 Casablanca, Morocco
Tel +212 - 22 22 03 08
Fax +212 - 22 26 00 06
E-mail: somara@somara.ma

(N) Premium Consumer Electronics as
Østre Kullerød 5
3241 Sandefjord, Norge
Tel +47 - 33 29 30 40
Fax +47 - 33 44 60 44
E-mail: loewe@loewe.no

(NZ) Audio Products Group Pty Ltd
67 O'Riordan St
Alexandria NSW 2015, Australia
Tel 0800 174 781
Fax +61 - 02 9578 0140
E-mail: help@audioproducts.com.au

(P) Mayro Magnetics Portugal, Lda.
Rua Professor Henrique de Barros
Edificio Sagres, 2º. C
2685-338 Prior Velho, Portugal
Tel +351 - 21 942 78 30
Fax +351 - 21 940 00 78
E-mail: geral.loewe@mayro.pt

(PL) Tele Radio Video
Ul. Boh. Getta Warszawskiego 18
81-609 Gdynia
Tel. 58 624-50-09
E-Mail: loewe@trv.com.pl

(RUS) Service Center Loewe
Aptekarsky per.4 podjezd 5A
105005 Moscow, Russia
Tel +7 - 499 940 42 32 (ext. 454)
Fax +7 - 495 730 78 01
E-mail: service@loewe-cis.ru

 
(S) Kjaerulff 1 AB
Ridbanegatan 4, Box 9076
200 39 Malma, Sverige
Tel +46 - 4 06 79 74 00
Fax +46 - 4 06 79 74 01
E-mail: loewe@loewe.se

(SG) Atlas Sound & Vision Pte Ltd
10 Winstedt Road #01-18
Singapore 227977
Tel +65 - 6334 9320
Fax +65 - 6339 1615
E-mail: service@atlas-sv.com

(SK) BaSys SK, s.r.o.
Stará Vajnorská 37/C
83104 Bratislava, Slovakia
Tel + 421 2 49 10 66 18
Fax + 421 2 49 10 66 33
E-mail: loewe@basys.sk

(TR) SERVISPLUS GENEL MERKEZ
ÖRNEK MAH. ATEŞ SOK. NO:1
34704 ATAŞEHİR, İSTANBUL, TÜRKİYE
Tel +90 - 216 315 39 00
Fax +90 - 216 315 49 50
E-mail: info@servisplus.com.tr

(UAE) Dubai Audio Center
P.O. Box 32836, Sheikh Zayed Road
Dubai, UAE
Tel +971 - 4 343 14 41
Fax +971 - 4 343 77 48
E-mail: service@dubaiaudio.com



LOEWE.