# Appendix – Additional Settings required for Swisscom (Switzerland) ISDN BRI

This appendix includes additional settings required for connecting Mediatrix 4400 and UC320W to Swisscom (Switzerland) ISDN BRI lines. These settings are in addition to those mentioned in the Application Note Deploying Mediatrix 4400 ISDN Digital Gateways with Cisco Unified Communications UC 320W.

## Configuring ISDN additional settings

- 1. Click **ISDN** in the menu bar, and then click **Basic Rate Interface.** The Basic Rate Interface page appears.
- 2. Enter the following settings:
  - Link Establishment: Select Permanent
  - Calling Name Max Length: Select 0
- 3. In the **Apply to the Following interfaces** area. Click **Check All** to ensure that these settings are applied to all of the BRI interfaces of this gateway.

		Status	Basic Rate I	Interface	Interop	Timer	Serv		
8.1	Basic Rate Interface								
ala	elect Interface: Bril 🔻								
	Interface Configuration								
	Endpoint Type:	Т	E 🔻						
	Clock Mode:	A	uto 🔻						
	Monitor Link State:	E	nable 💌						
	Connection Type:	P	oint To Multip	oint 🔻					
	Signaling Protocol:	D	SS1 🔻						
	Network Location:	U	ser ·	•					
	Preferred Encoding Scheme:	G	.711 a-Law •	·					
	Fallback Encoding Scheme:	G	.711 u-Law -	•					
	Channel Allocation Strategy:	A	scending	-					
	Maximum Active Calls:	0							
	Signal Information Element:	D	isable 🔻						
	Inband Tone Generation:	E	nable 🔻						
	Inband DTMF Dialing:	E	nable 💌						
	Overlap Dialing:	E	nable 💌						
	Calling Name Max Length:	0							
	Exclusive B-Channel Selection	1: D	isable 🔻						
	Sending Complete:	E	nable 🔻						
	Send Restart On Startup:	E	nable 🔻						
	Link Establishment:	P	ermanent 🔻						
	Hook-Flash Keypad:								

### **Application Note**

- 4. Click Submit
- 5. In the ISDN menu bar, click on Services. Then Services Page appears.
- 6. Enter the following settings:
  - Facility Services: Select Enable
  - Calling Line Information Presentation: Select Enable
- 7. In the **Apply to the Following interfaces** area. Click **Check All** to ensure that these settings are applied to all of the BRI interfaces of this gateway.

Servio	es Configur	ation					
Facility	Services:				Enable	•	
Calling	g Line Infor	mation Prese	entation:	l	Enable	-	
Calling	g Line Infor	mation Rest	riction:		Disable	•	
Calling	g Line Infor	mation Rest	riction Over	rride:	Disable	•	
Conne	cted Line Io	dentification	Presentatio	on:	Disable	•	
Conne	ected Line Io	dentification	Restriction		Disable	•	
Conne	ected Line Io	dentification	Restriction	Override:	Disable	•	
Outgo	ing Notify:				Disable	•	
Mainte	enance Serv	ice Call Tern	nination:		Graceful	•	
AOC-E	Support				No	•	
MSN:							

#### 8. Click Submit

## Configuring SIP additional settings

- 1. Click **SIP** in the menu bar, and then click **Registrations**. The Registrations window appears.
- 2. Enter the following settings for all Endpoints (BRI ports)
  - Register: Set to **Disable**
  - Messaging: Set to **Disable**
- 3. Click Submit
- 4. Restart all services (ISDN and SIP) as indicated in the Application Note.

Endpoint	User Nan	s ne Gateway Name	Re	gistrar	Sta
Endpoints Endpoint	Messaging Subscri	ption Status Gateway Name	Messaging Host	MWT	Stati
Unit Regis	tration Status e	Gateway Name	Registrar	St	atus
Endpoints	Registration	Friendly Name	Register	Messaging	atev
Endpoints Endpoint Bri1	Registration User Name	Friendly Name	Register Disab	Messaging G Disable 💙 a	atev