 


Sandstrøm

Quick Start Guide

Wired Illuminated Keyboard
SGKBW10

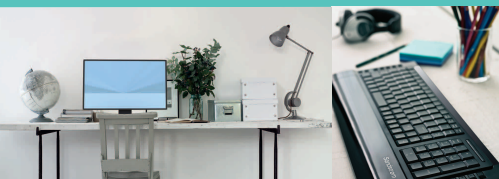

Congratulations on the purchase of your new Sandstrøm Wired Illuminated Keyboard.

Before commencing the installation and set up, please check that you have all the items and familiarise yourself with this Quick Start Guide.


UNPACKING

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main unit

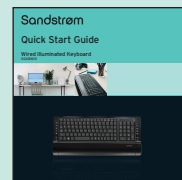

Quick Start Guide
(P.N.:SGKBW10-001)

If items are missing, or damaged please contact Partmaster (UK only). Tel: 0844 800 3456 for assistance.

SYSTEM REQUIREMENTS:

Operating Systems: Microsoft® Windows®2000/ XP/ Vista™ & Windows®7
Hardware: 1 available USB port

GB-1


BEFORE USE

Step 1

Turn your computer off.

Step 2


Plug the rectangular USB connector into your computer's USB port.

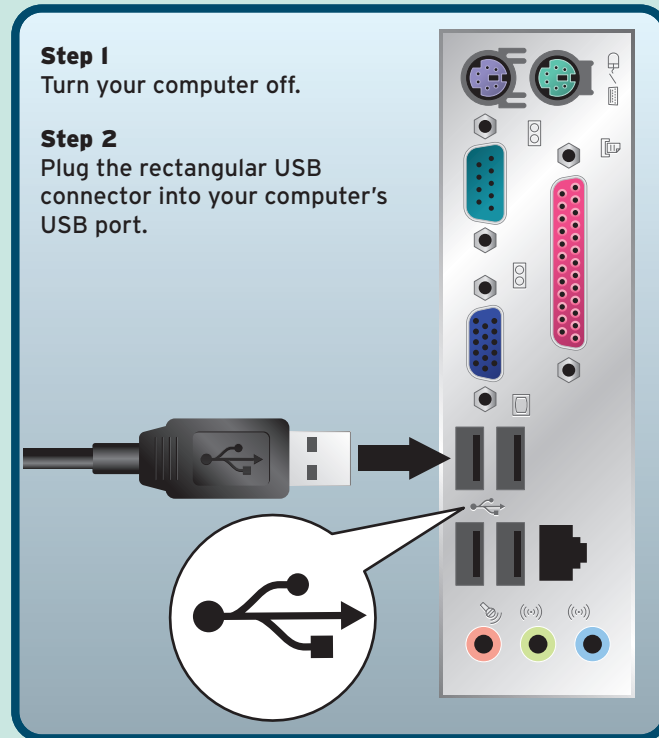

GB-2

Step 3

Adjust the angle.

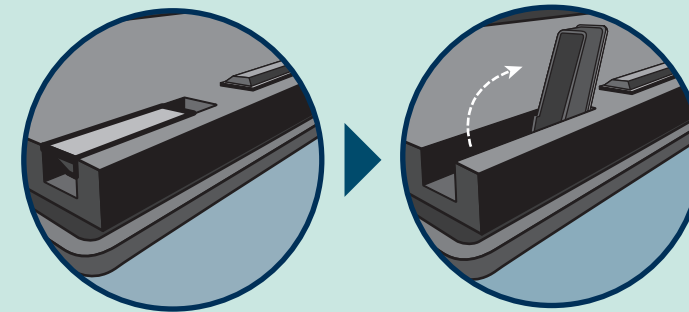








NOTE:

Due to the backlight feature, this keyboard is a high-powered USB device that will only work if plugged directly into the computer or a powered USB hub.


GB-3








FUNCTION KEYS

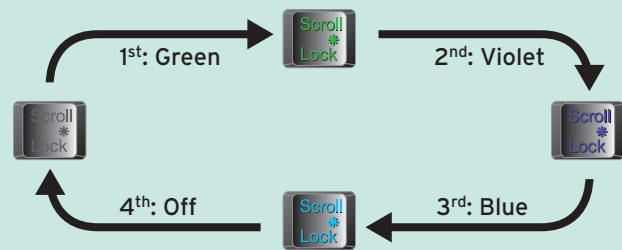The Multimedia Keyboard has 14 hotkeys:

-  **E-mail:**
Calls the E-mail application.
-  **Web Home:**
Goes to web home page.
-  **Web Favorites:**
Opens my favorites.
-  **Search:**
Launches your search function.
-  **Web Refresh:**
Updates and refreshes the web page.
-  **Page Back:**
Backs to the previous web page.
-  **Page Forward:**
Forwards to the next web page.

Press the Scroll * Lock button to change the colour of illumination:



-  **Play/Pause:**
Plays and pause the media.
-  **Media Stop:**
Stops the media playing.
-  **Previous:**
Changes to the previous media track.
-  **Next:**
Changes to the next media track.
-  **Mute:**
Disables the sound.
-  **Volume Up:**
Increases the volume.
-  **Volume Down:**
Decreases the volume.

WARNINGS

1. Don't disassemble the keyboard or remove any parts.
2. Don't put the keyboard into water or any liquid.
3. Don't use the keyboard close to heat sources or expose to high temperatures.
4. Don't use the keyboard where strong electromagnetic waves are present. Strong electromagnetic waves will cause damage to the keyboard.
5. Keep the keyboard away from direct sunlight, moisture, dirt or abrasive chemical products (cleaning products etc).

Features and specifications are subject to change without prior notice. Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only) Calls charged at National Rate.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.