

DORO PhoneEasy® 626

QUICK TIP GUIDE



Consumer Cellular®

Thank you for choosing Consumer Cellular!

We know you're excited to use your new cellphone and this short guide will help you get familiar with it, so you can start using it as soon as possible. Each section includes instructions and pictures to make it easy to start using your phone. If you would like to learn even more, we offer a wide variety of customer support options at the back of this guide, including information on our **HOW-TO VIDEOS** and ways to **CONTACT US**. We're always happy to help you!

We hope you enjoy your new Doro PhoneEasy® 626.

Need More Information?

Visit our website at ConsumerCellular.com/Support

Call us at **(800) 686-4460**

TABLE OF CONTENTS

Introduction	2–3
Power and Charging	4
Making and Ending Calls	5
Entering Text and Symbols	6
Camera and Photos	7
Contacts	8–9
Text and Picture Messages	10–11
Bluetooth Settings	12–13
Emergency Assistance Button	14–15
Phone Settings & Startup Wizard	16–17
How-To Videos	18
Contact Us	19



BEFORE YOU GET STARTED

Take a moment to familiarize yourself with your new cellphone's buttons and icons. You can refer back to this diagram as you read through this Quick Tip guide.

THE POWER BUTTON

To turn your phone on or off, press and hold the red **Power On/Off key** on the top, right side of the phone's keypad. Then press **Yes** to confirm.



CHARGING THE BATTERY

When the battery icon displayed on the screen appears completely full, or the charging light stops blinking, the battery is fully charged. If the battery has not been used for a long time or if the battery power is completely depleted, the charging icon may take several minutes to appear after you plug your phone into the charger.



MAKING A CALL

If you would like to make a call, enter the phone number including the area code by pressing the numbers on the keypad and then press the green **Call key** to dial the number.

RECEIVING A CALL

When a call comes in, all you need to do to answer is simply open the flip cover. If the phone is already open, just press the green **Call/Answer key** to answer it, or the red **End Call key** to reject it.

ENDING A CALL

When you are finished with your conversation, press the red **End Call key** or close the flip cover to end the call.



ENTERING TEXT

To enter text into your phone, press a numerical key repeatedly until the desired character is shown. For instance, the letters “A, B and C” can be accessed by pressing the number 2 button on the keypad. You will need to wait a few seconds before entering the next character.



ENTERING SYMBOLS

You can enter a symbol in any input mode—just press the **Star key** to display a list of symbols. Press the **Navigation keys** to scroll to the desired symbol, and then press OK using the **Left Soft key** to enter the symbol.

Alternatively, you can press the **number 1 key** multiple times to choose from a variety of symbols.



USING THE CAMERA

To take a photo using your phone's camera, you will need to place your phone into camera mode. You can do this by pressing the **Camera key** on the keypad. You can zoom in or out using the **Navigation keys**. When you are ready to capture an image, simply press the **Camera key** again.





VIEWING YOUR PHOTOS

To view a picture that you've taken, select **Menu** from the home screen using the **Left Soft key**, then scroll to Camera and select **OK**. Next, scroll to Picture Gallery and select **OK**. You can now view and manage your photos.



ADDING A CONTACT

It's easy to add someone as a contact into your phone. Simply select **Name** on the home screen using the **Right Soft key. New Contact** will be highlighted automatically. Simply select **Add** and enter the person's name using the keypad, then use the **Navigation keys** to scroll down and enter either a mobile, home or office number. When you're finished, select **Save** and your contact will be added.

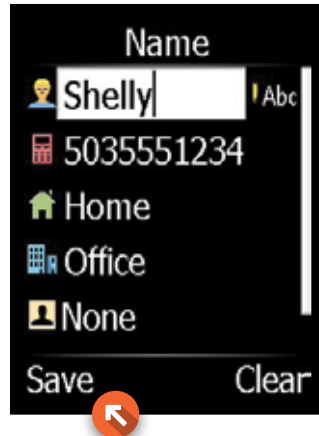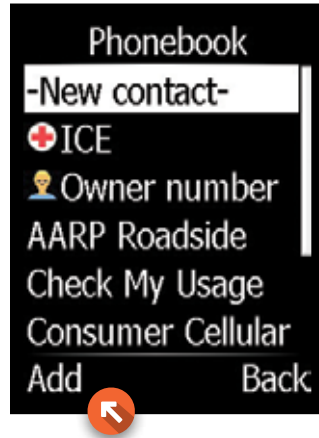

SEARCHING FOR A CONTACT

To search for a name from the home screen, select **Name** using the **Right Soft key**. Scroll through the list of Contacts until you find the name you're looking for. Once you locate that person, press the green **Call key** to make a call.



CREATING AND SENDING TEXT & PICTURE MESSAGES

To create and send a text message, select the **Messaging key** on the keypad—it's the key with the white envelope on it. Select Create New by pressing **OK** with the **Left Soft key**, then select Text Message by pressing **OK** again.


Now you can enter your message using the alphanumeric keypad. When you're finished, you'll need to select a recipient for your message. Select **To** using the **Left Soft key**, then select a contact from the phone book, or enter a phone number.

If you are sending to a contact, scroll down to the person's name and press **Add** using the **Left Soft key**. Then select **OK** to send the text message.



You can also send a picture message directly from the Camera app. After you snap a photo, preview it on the screen. Then select **Options** and **Send**. Next, select **Send by Picture Message** to send your photo via text message.

You can compose a message to go with your photo. Select **Options** with the **Left Soft key** and **To** to choose a recipient. From there, select a recipient and send the message the same way you would for a text message as shown on the previous page.

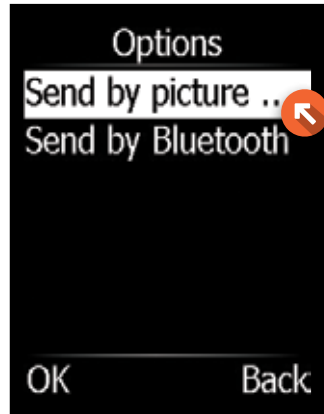

BLUETOOTH SETTINGS

Using a Bluetooth headset is a great way to keep your hands free while talking on your Doro cellphone.

The first step is to “pair” your Bluetooth device with your cellphone. To do this, turn your Bluetooth headset or earpiece on.

Then you’ll need to set up your phone by following the steps on page 13.




FOR MORE DETAILS:



Consult the manual for your specific Bluetooth device to learn how to turn pairing mode on.


From the home screen, select **Menu** using the **Left Soft key**. Then scroll down to **Settings** and select **OK** with the **Left Soft key**. Scroll to **Bluetooth** and select **OK**. Select **Function On/Off** by selecting **OK**, then select **ON**.

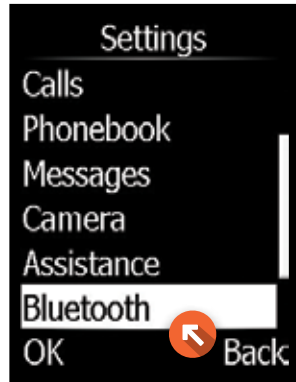

Use the **Right Soft key** to go **Back**, then select **Search Device**. The phone will begin to search for Bluetooth devices. When you see your Bluetooth device on the screen, select it. You may need to enter a password for pairing. Enter the password and select **OK**.



Your Bluetooth device should now be connected to your phone—just press the red **End Call key** to exit and return to the **Home Screen**.

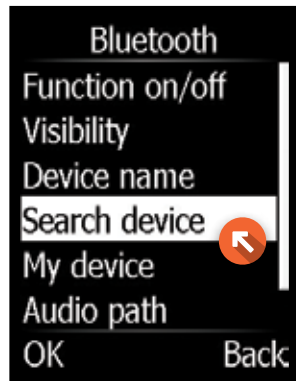

EMERGENCY ASSISTANCE BUTTON


If you need help, the Emergency Assistance button located on the back of your phone allows you to easily contact a family member or friend. To use this feature, you'll need to start by programming the button.



Emergency Assistance Button

To program the button, first select **Menu** using the **Left Soft key**. Scroll to **Settings** and select **OK**. Then scroll to **Assistance** and select **OK**.

Next, scroll to **Activation** and select **OK** with the **Left Soft key**. Select **On**, then select **OK**.

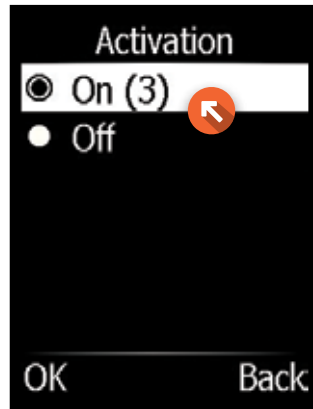

NOTE:




The **On** selection will have the number 3 beside it. This means that the Emergency Assistance button must be pressed 3 times in order to activate it. This prevents an accidental activation if the button is pressed by mistake.

The next step is to save a phone number that will be called in the event of an emergency when the button is pressed 3 times.

To save a phone number select **Back** with the **Right Soft key**, then scroll down to **Number List** and select **OK**.

Next, select **Add**. You can either select a number from your phone book or add a number manually. For this example, select **phone book** and then select **OK**. Locate the name of the contact you want automatically called, and press **OK**.

Press the red **End key** to return to the home screen.

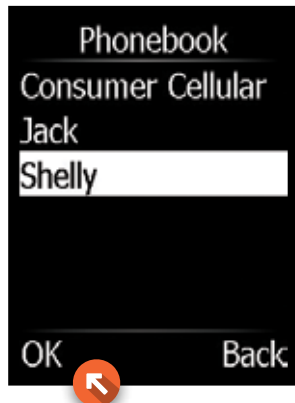


CHANGE PHONE SETTINGS

You have the ability to customize settings on your phone so it fits your needs even better. Below are just a few of the settings that can be adjusted.

BRIGHTNESS

You can adjust the brightness of the phone's display by choosing a level.

1. Select **Menu**, then **Settings** and **Display**
2. Select **Brightness** and scroll to choose a brightness level
3. Press the **Left Soft key** to select **OK**

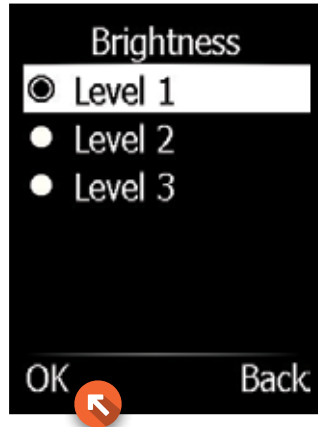

TIP:




When using the phone for the first time, you can use the Startup Wizard to create some basic settings. Press Yes to change or No if you do not want to change the settings at this time.

WALLPAPER

You can change the wall paper that is displayed on your screen:



1. Select **Menu**, then **Settings, Display**, and **Wallpaper**
2. Use the **Navigational keys** to scroll through wallpapers in the **System** or **User** categories
3. Press the **Left Soft key** to select **OK**

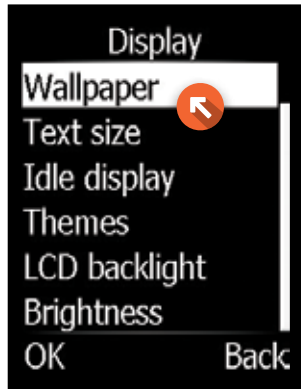

RINGTONE VOLUME

You can adjust the ringtone volume to be louder or softer:

1. Select **Menu**, then **Settings**, and **Sound**
2. From there, select **Volume**
3. Use the **Navigational keys** to change the ringtone volume
4. Press the **Left Soft key** to select

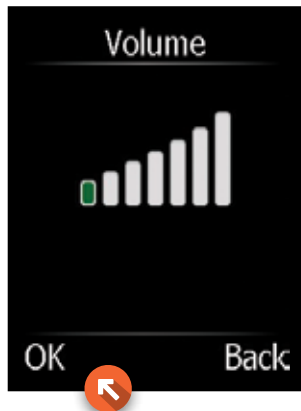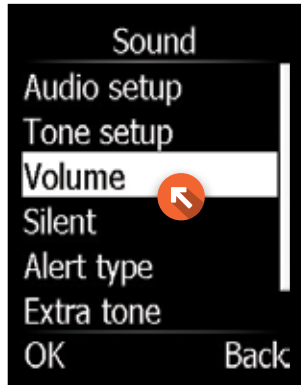



HOW-TO VIDEOS

Get to know your Doro PhoneEasy® 626 with our How-To videos, located on our website at [ConsumerCellular.com/Doro626](https://www.ConsumerCellular.com/Doro626)

Here you will find simple, easy-to-follow videos that cover topics such as making and receiving calls, using the contacts feature, sending and receiving text messages and much more. You will also find complete phone manuals that you can download on this web page.



CONTACT US

If you have any questions, our friendly U.S. based customer support representatives will be happy to help you.

You will be connected to a representative for free by contacting us the following ways:

1. Dialing **6-1-1** from your cellphone
2. Choosing **Consumer Cellular** from your cellphone's contact list
3. Calling **(800) 686-4460** from any phone

If you're calling for assistance with your cellphone, it is best that you call us from a different phone using the toll-free phone number listed above. You can also go online to find answers to frequently asked questions by visiting **[ConsumerCellular.com/Support](https://www.ConsumerCellular.com/Support)**

Or, you can view your cellphone's manual at **[ConsumerCellular.com/Doro626](https://www.ConsumerCellular.com/Doro626)**

Consumer Cellular®

ConsumerCellular.com

© 2017 Consumer Cellular, Inc. Consumer Cellular and the Consumer Cellular logo are trademarks of Consumer Cellular, Inc.

Other company names, product names, and marks mentioned herein are property of their respective owners and may be trademarks or registered trademarks.