
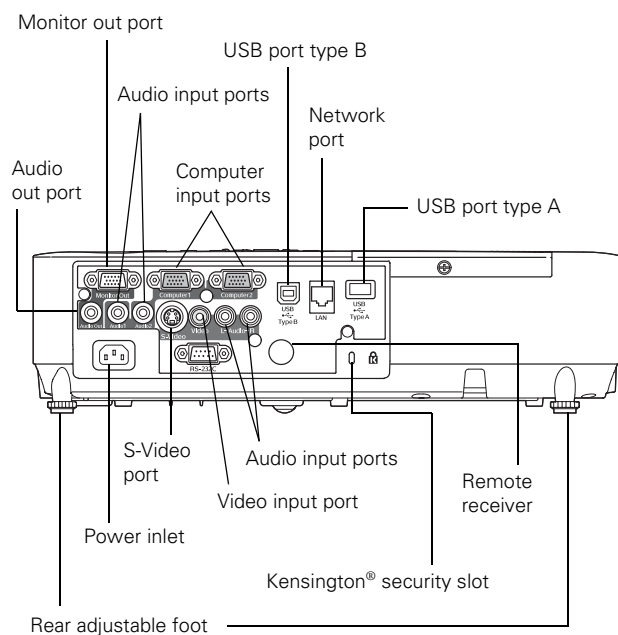


Projector Parts

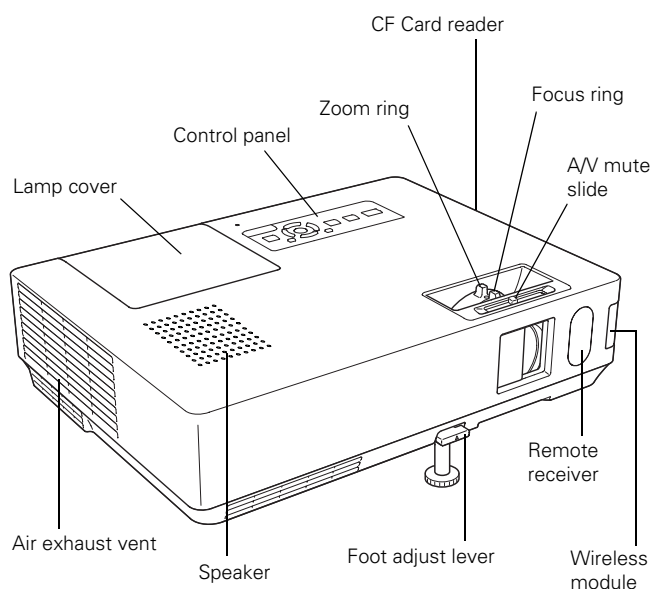

Specifications

General

Type of display	Poly-silicon TFT active matrix
Resolution (native format)	1024 × 768 pixels (XGA)
Color reproduction	Full color, 16.8 million colors
Brightness	3500 lumens (high brightness) 2700 lumens (low brightness)
Contrast ratio	500:1
Image size (diagonal)	30 to 300 inches (76.2 to 762 centimeters)
Projection distance	2.7 to 48.2 feet (0.8 to 14.7 meters)
Projection methods	Front, rear, front ceiling, rear ceiling
Internal sound system	5 W monaural
Optical aspect ratio	4:3 (horizontal:vertical) (supports 16:9)
Zoom ratio	1:1.6
Noise level	32 dB (low brightness) 37 dB (high brightness)
Keystone correction	±45° vertical (automatic/manual) ±30° horizontal (manual)
Mouse compatibility	Supports USB (type B)

Projection Lamp

Type	UHE (Ultra High Efficiency)
Power consumption	210 W
Lamp life	Approx. 2,500 hours (high brightness) Approx. 3,000 hours (low brightness)
Part number	V13H010L40

Remote Control

Range	20 feet (6 meters)
Batteries (2)	Alkaline AAA

Dimensions

Height	3.4 inches (86 mm), feet retracted
Width	13.6 inches (345 mm)
Depth	10.1 inches (257 mm)
Weight	6.9 lb (3.1 kg)

Electrical

Rated frequency	50/60 Hz AC
Power supply	100 to 120 VAC, 3.4A 200 to 240 VAC, 1.5 A
Power consumption	
Operating	100 to 120 VAC, 306 W 220 to 240 VAC, 286 W
Standby	100 to 120 VAC, 2.6 W (network off); 12 W (network on) 220 to 240 VAC, 4.6 W (network off); 12 W (network on)

Environmental

Temperature	Operating: 41 to 95 °F (5 to 35 °C) Storage: 14 to 140 °F (-10 to 60 °C)
Humidity	Operating: 20 to 80% RH (non-condensing) Storage: 10 to 90% RH
Operating altitude	Up to 7,500 feet (2,286 meters)

Safety and Approvals

United States	FCC 47CFR Part15B Class B (DoC) UL60950 Third Edition
Canada	ICES-003 Class B CSA C22.2 No. 60950
CE Marking	Directive 73/23/EEC Directive 89/336/EEC IEC 60950 Third Edition EN 55022, EN 55024

Compatible Video Formats


The projector supports the high definition video and computer display formats listed below, as well as traditional NTSC, PAL, and SECAM video standards. To project images output from a computer, the computer's video card must be set at a refresh rate (vertical frequency) that is compatible with the projector. Some images are automatically resized using Epson's SizeWize™ technology to display in the projector's native format (XGA). The frequencies of some computers may not allow images to display correctly; see your computer's documentation for details.

Mode	Refresh Rate (Hz)	Resolution
VGA EGA	70	640 × 350
VGA—60	60	640 × 480
VESA—72	72	640 × 480
VESA—75	75	640 × 480
VESA—85	85	640 × 480
VGA—120	120	640 × 480
SVGA—56	56	800 × 600
SVGA—60	60	800 × 600
SVGA—72	72	800 × 600
SVGA—75	75	800 × 600
SVGA—85	85	800 × 600
SVGA—120	120	800 × 600
XGA—60	60	1024 × 768
XGA—70	70	1024 × 768
XGA—75	75	1024 × 768
XGA—85	85	1024 × 768
XGA—120	120	1024 × 768
SXGA1—70	70	1152 × 864
SXGA1—75	75	1152 × 864
SXGA1—85	85	1152 × 864
SXGA1—100	100	1152 × 864
SXGA2—60	60	1280 × 960
SXGA2—75	75	1280 × 960
SXGA2—85	85	1280 × 960
SXGA+60	60	1400 × 1050
SXGA+75	75	1400 × 1050
SXGA+85	85	1400 × 1050
SXGA3—60	60	1280 × 1024
SXGA3—75	75	1280 × 1024
SXGA3—85	85	1280 × 1024
UXGA—60	60	1600 × 1200
iMAC VGA	117	640 × 480
iMAC SVGA	95	800 × 600
iMAC XGA	75	1024 × 768
MAC13	67	640 × 480
MAC16	75	832 × 624
MAC19	75	1024 × 768
MAC19—60	59	1024 × 768
MAC21	75	1152 × 870
NTSC	60	
NTSC 4:43	60	
PAL	50	
N—PAL	50	
M—PAL	60	
PAL—60	60	
SECAM	50	
HDTV (720p)	60	
HDTV (720p)	50	
HDTV (1080i)	60	
HDTV (1080i)	50	
SDTV (480p)	60	
SDTV (576p)	50	
TV480i	60	
TV576i	50	

Positioning the Projector

If the projector isn't already installed in the room you're using, you'll probably want to place it on a table in front of the screen. This lets you stand in the front of the room, face the audience, and remain close enough to the equipment to be able to control it. Try to leave as much space as possible between the projector and the screen to get a good-size image.


Use the figure below to help you determine placement. Image size increases with distance, but can vary depending on how you position the zoom ring and whether you've adjusted the image with other settings.

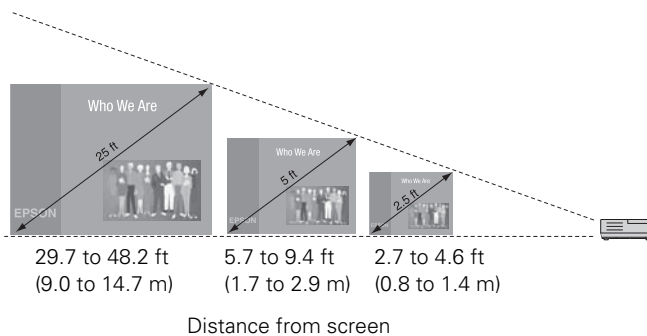

Also keep these considerations in mind:

- Place the projector on a sturdy, level surface.
- Make sure there is plenty of space for ventilation around and under the projector. Do not set the projector on top of anything that could block the vents under the projector.
- Make sure the projector is within 10 feet (3 meters) of a grounded electrical outlet or extension cord.

Ideally, you should place the projector directly in front of the center of the screen, facing it toward the screen squarely. The base of the lens should be at about the level of the bottom of the screen.

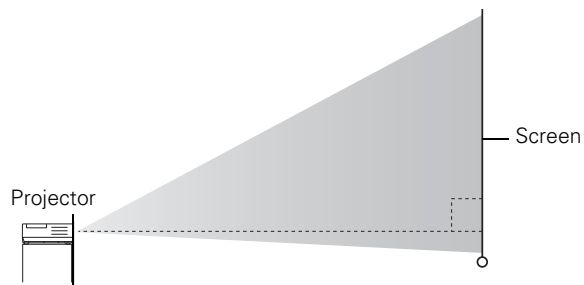


If you place the projector below screen level, you'll have to tilt it up by extending the front adjustable foot. This causes the image to become "keystone" shaped, but you can correct the distortion. (See "Adjusting the Image Shape" on page 6.)

Turning On and Off the Projector


Turn on any connected computer or video equipment before starting the projector so it can automatically detect and display the image source. If you turn on the projector first or have multiple pieces of connected equipment, you may have to select the image source manually (see page 5).

Follow these steps to turn on the projector:


1. Open the A/V mute slide (lens cover).

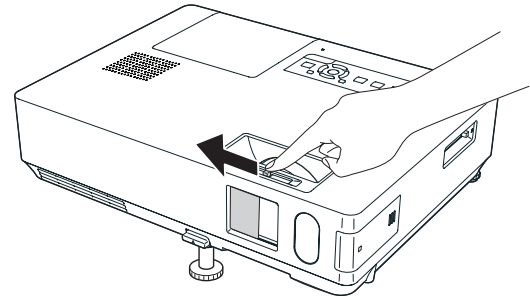


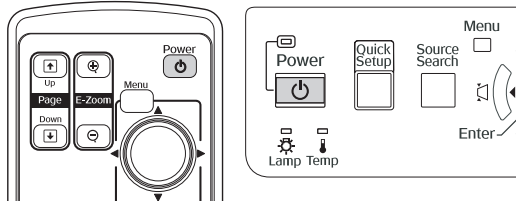
2. Plug one end of the power cable into the projector, and the other end into an electrical outlet.

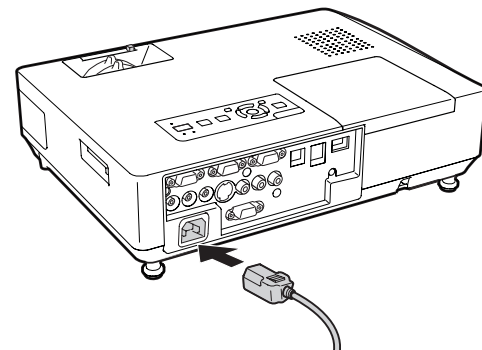

The Power light turns orange.

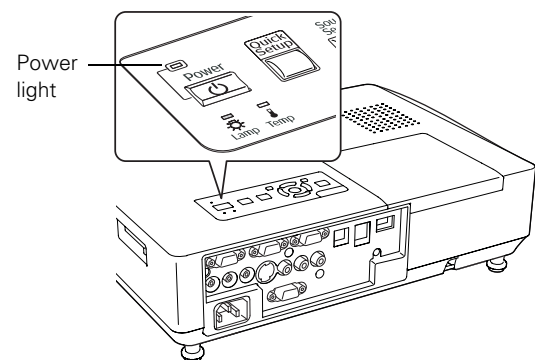

3. Press the  Power button on the remote control or on top of the projector.




The projector beeps once and the Power light flashes green as the projector warms up, then an image begins to appear. When the Power light stops flashing and remains green, the projector is ready for use.

4. If you are prompted to enter a password, see page 9.


Warning: Never look into the lens when the lamp is on. This can damage your eyes and is especially dangerous for children.

Using the Direct Power On Function

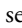The Direct Power On function enables faster setup. The projector starts up automatically when you plug it in or turn it on with a wall switch. You don't have to press the  Power button.

Follow these steps to enable Direct Power On:


1. Press the Menu button on the remote control or projector and select the Extended menu.
2. Choose Operation and press Enter.
3. Choose Direct Power On and press Enter.

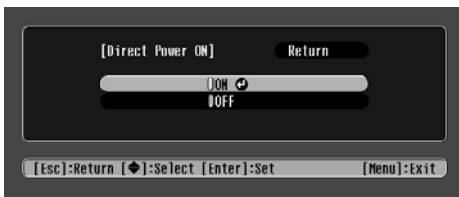


4. Highlight On and press Enter.
5. Press Menu to exit. The setting will take effect the next time you plug in the projector.


Note: If a power outage occurs when Direct Power On is enabled and the projector is plugged in, the projector will restart when the power is restored.


Shutting Down the Projector

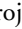This projector incorporates Instant Off technology. To turn it off, you can press the  Power button, unplug it, or turn off a power switch that supplies power to the projector. You don't have to wait for the projector to cool off first.

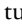1. To turn off the projector, press the  Power button on the remote control or projector. You see a confirmation message. (If you don't want to turn it off, press any other button.)




2. Press the  Power button again. The projection lamp turns off and you can unplug the power cord.

If you want to turn the projector on again, make sure the orange Power light is not flashing, then press the  Power button.

Note: Turn off this product when not in use to prolong the life of the projector. Lamp life results vary depending on the mode selected, environmental conditions, and usage.

Sleep Mode

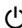You can set the projector to automatically turn off the lamp and enter "sleep mode" when it has not received any signals for up to 30 minutes. This conserves electricity, cools the projector, and extends the life of the lamp. You can enable sleep mode in the Extended menu under Operation. If you are done using the projector, unplug the power cord. If you want to start projecting again, press the  Power button.

Troubleshooting Display Problems

You Can't Project an Image


If you don't see the image you are trying to project, try the following:

- Make sure the cables are connected correctly.
- Make sure the Power light is green and not flashing and the A/V mute slide (lens cover) is open.
- If you've connected more than one computer and/or video source, you may need to press the Source Search button on the projector's control panel or the Search button on the remote control to select the correct source. (Allow a few seconds for the projector to sync up after pressing the button.)
- If you're using a PC notebook, see the next section.

The Projector and Notebook Don't Display the Same Image

If you're projecting from a notebook, and you can't see your image on the projection screen and on your computer at the same time, follow these guidelines:

If you're using a PC notebook:

- ❑ On most systems, there's a function key that lets you toggle between the LCD screen and the projector, or display on both at the same time. It may be labeled CRT/LCD or have an icon such as . You may have to hold down the Fn key while pressing it. Allow a few seconds for the projector to sync up after changing the setting.
- ❑ If the function key doesn't permit you to display simultaneously on both screens, you should check your monitor settings to make sure both the LCD screen and the external monitor port are enabled.

From the Control Panel, open the **Display** utility. In the Display Properties dialog box, click the **Settings** tab, then click **Advanced**. The method for adjusting the settings varies by brand; you may need to click a **Monitor** tab, then make sure the external Monitor port is set as your primary display and/or enabled. See your computer's documentation or online help for details.

If you're using Mac OS X:

You may need to set up your system to display on the projector screen as well as the LCD screen. Follow these steps:

1. From the Apple® menu, select **System Preferences**, then click **Displays**.
2. Select **VGA Display** or **Color LCD**, click **Arrange** or **Arrangement**, and make sure **Mirror Displays** is checked.


Adjusting the Image

Once you see your image, you may need to make certain adjustments, as described in this section.


Adjusting the Height of the Image

If the image is too low on the screen, you can use the front adjustable foot to raise it.

1. Stand behind the projector. Press the foot release lever and lift the front of the projector.

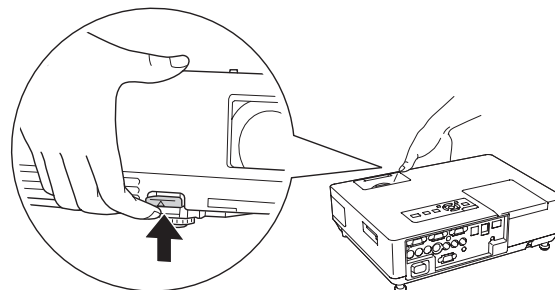


2. Once the image is positioned where you want it, release the lever to lock the foot in position.
3. If necessary, you can fine-tune the height or level the image by turning any of the projector's adjustable feet.

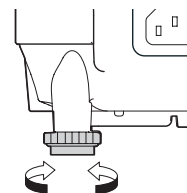

Raising the projector causes the image to distort or "keystone," but you can correct the shape as described on page 6.

Focusing and Zooming the Image

To sharpen the image, turn the focus ring on the projector. To reduce or enlarge the image, turn the zoom ring on the projector.

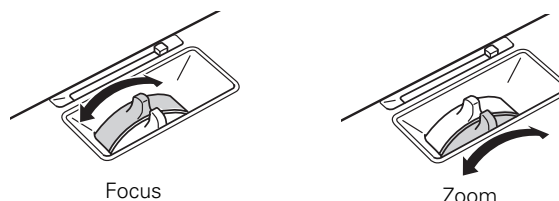

If the image still isn't large enough, you may need to move the projector farther away from the screen. You can also use the **E-Zoom** buttons on the remote control to zoom in on a portion of the image. See page 8 for instructions.


Adjusting the Image Shape

You can maintain a square or rectangular image by placing the projector directly in front of the screen and keeping it level. This also produces the best picture quality. If the projector is tilted up or placed at an angle, you'll need to correct the image shape by using one of the functions described below.


Automatic Image Adjustment

Use the projector's Quick Setup feature to set up quickly for a presentation. This function automatically corrects the shape and position of the image to fit on a screen with a 4:3 aspect ratio. It can correct image distortion when the projector is placed up to a 45° angle to the screen (vertically) and 20° (horizontally).

1. Press the **Quick Setup** button on the projector's control panel.

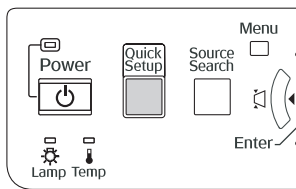

You see this message projected:

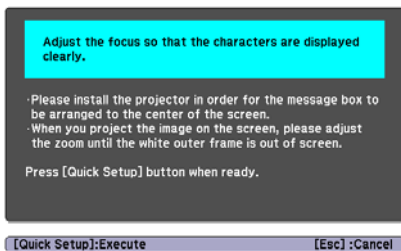

2. Aim the projector so the message appears near the middle of the screen. Then use the zoom ring to enlarge the image so the white frame (not shown above) extends beyond the edges of the screen on all sides.
3. Press the **Quick Setup** button again. Two white boxes flash momentarily onto the screen, and the adjustment is complete. Your projected image now fits on the screen (some slight overlap is normal).


The Quick Setup adjustment is retained when the projector is turned off. If the projector is installed in a fixed location, you won't need to repeat the adjustment each time you turn it on. To fine-tune the Quick Setup adjustment, use Quick Corner®.

Using Quick Corner

Use Quick Corner to adjust the shape and size of the image when it's uneven on all sides, or to finely adjust the image after performing Quick Setup. If you just used Quick Setup, you can use the projector's arrow buttons to make the Quick Corner adjustment. If not, you'll have to select Quick Corner as follows:

1. Press the **Menu** button on the remote control or on the projector's control panel.
2. Select the **Settings** menu and press **Enter**.
3. Select **Keystone** and press **Enter**.
4. Select **Quick Corner** and press **Enter**.

You see this screen:

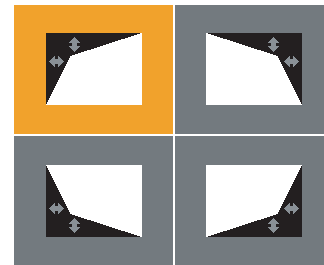


5. Use the **⊙** pointer button on the remote control (or the arrow buttons on the projector) to select the corner you want to adjust, and press **Enter**.
6. Use the **⊙** pointer button on the remote control (or the arrow buttons on the projector) to adjust the shape.
7. Repeat steps 5 and 6 as needed to adjust any remaining corners.

When done, press **Menu** to exit the menu system.

Using Keystone Correction


The projector automatically corrects vertical keystone distortion when it is tilted within a range of 45° up or down.

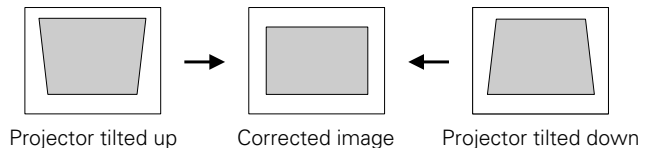

It takes about one second after projection starts for the image to be corrected. During this time, a vertical keystone correction gauge appears on the screen. If keystone correction isn't automatically performed, you may need to turn on the **Auto V-Keystone** setting in the projector's Settings menu.

You can manually adjust the shape of the image to compensate for vertical and horizontal keystone distortion. First make sure the Keystone setting in the projector's Settings menu is set to H-Keystone or V-Keystone:

1. Press the **Menu** button on the remote control (or on the projector's control panel).
2. Select the **Settings** menu and press **Enter**.
3. Select **Keystone** and press **Enter**.
4. Select **H/V-Keystone** and press **Enter**.
5. Select **H-Keystone** (for horizontal adjustment) or **V-Keystone** (for vertical adjustment) and use the **◀** and **▶** arrow buttons to adjust the shape of the image.

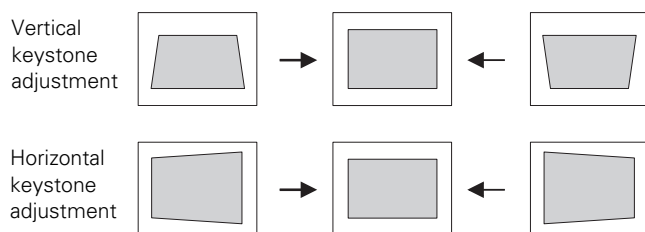


Note: The vertical keystone values increase or decrease in .5° increments; so 30=15°, 60=30°, etc.

If the image becomes smaller, use the zoom ring to enlarge the image so it fits the screen. If the image contains faint lines or a gridlike pattern, decrease the sharpness setting.

Resizing Video images

You can use the **Resize** button on the remote control to adjust how an image fits into the display area. Press **Resize** to switch the aspect ratio between 4:3 and 16:9. This lets you play certain digital video images or movies recorded on certain DVDs in 16:9 widescreen format. You can also select **16:9 (Up)** or **16:9 (Down)** to reposition videos to accommodate subtitles or supertitles.

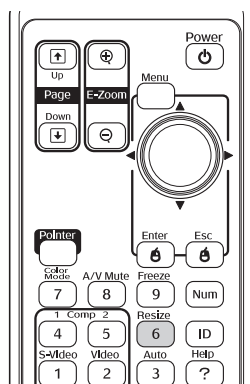

For computer images, select **Normal** to automatically resize the image and make the best use of the display area.


Adjusting the Brightness

The brightness of an image depends on the source you are projecting and the amount of light in the room. If the image is too bright or not bright enough, do one of the following:

- Change the **Brightness** setting in the Image menu.
- Select **Low** or **High** for the **Brightness Control** option in the Setting menu. Low Brightness mode extends the life of the lamp and decreases the fan noise.

Selecting the Color Mode

The Color Mode adjusts the brightness, contrast, and color for various common viewing environments. Use this setting to quickly obtain a good picture.

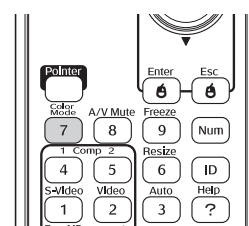

Press the **Color Mode** button on the remote control, and then select from one of these options:

- Presentation:** For giving color presentations in a bright room.
- Text:** For giving black-and-white presentations in a bright room.
- Theatre:** For watching movies in a darkened room; gives images a natural tone.
- Photo:** For vivid, high-contrast still images in a bright room.
- Sports:** For vivid TV images projected in a bright room (video, S-video, or composite video only).
- sRGB:** Matches the color palette of standard sRGB computer displays.
- Blackboard:** Projects accurate colors on a green chalkboard (adjusts the white point).
- Customized:** For manual color adjustment.
- Game:** Increases brightness when playing video games or watching TV in a bright room. Emphasizes dark gradations.


Using the Remote Control

When using the remote control, stand within 20 feet (6 meters) of the projector. Point the remote control either at the projector or at the screen (the projector's front sensor can detect signals bounced off the screen). Press the button for the function you want to use. Avoid using the remote under bright fluorescent lamps or in direct sunlight, or the projector may not respond properly.

Switching Between Picture Sources

If your projector is connected to more than one computer and/or video source, you can switch between the different sources:

- ❑ The easiest way to select your source is to press the **Search** button on the remote control (or the **Source Search** button on the projector) repeatedly until you see the image you want on the screen.

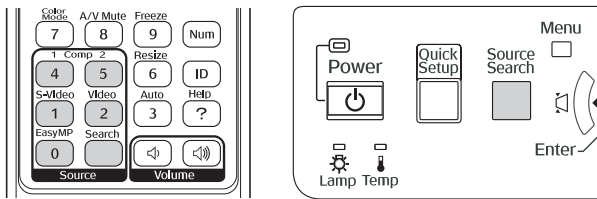


- ❑ On the remote control, there are several **Source** buttons. Use them to switch between equipment connected to the port identified on each button, or to use EasyMP.

After you select a source, the screen goes dark for a moment before the image appears.


Turning Off the Picture and Sound

You can temporarily turn off the image and sound when you want to redirect your audience's attention. There are two ways to do this:

- ❑ Press the **A/V Mute** button on the remote control. This turns the image off and stops the sound. To turn the image and sound back on, press the button again.

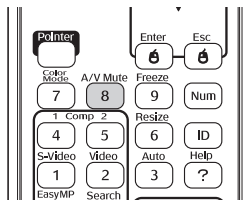

- ❑ Close the A/V mute slide, as shown below:

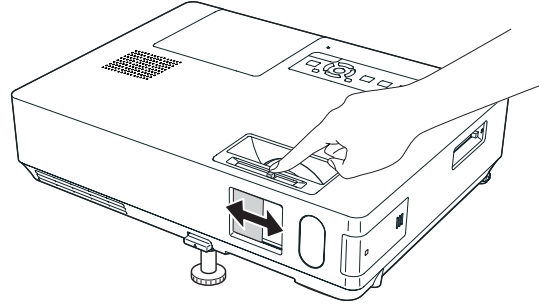


Stopping Action

To stop the action and keep the current image on the screen, press the **Freeze** button. The sound continues.

Note: This function pauses the image, not the sound. Because the source continues to transmit signals, when you resume the action, it won't be at the point you stopped it.


To restart it, press the **Freeze** button again.

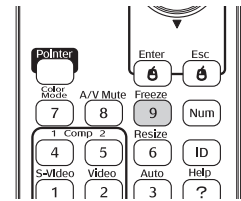

Zooming Part of Your Image

You can zoom in on a portion of the image using the **E-Zoom** buttons on the remote control.

1. Press the **E-Zoom** \oplus button on the remote control.

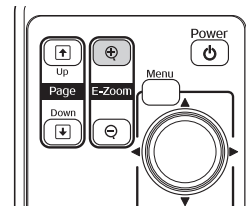

You see a crosshair indicating the center of the zoom-in area.

2. Use the \odot pointer button to position the crosshair.
3. Continue pressing the **E-Zoom** \oplus button to enlarge the selected area up to 4 times.
4. While the image is enlarged, you can:
 - ❑ Use the \odot pointer button to move around the screen.
 - ❑ Press the **E-Zoom** \ominus button to zoom out.
5. When done, press the **ESC** button to return the image to its original size.


Controlling the Volume

To change the volume, press the or button on the remote control. You can also adjust the volume using the projector's Settings menu.

Operating Your Computer with the Remote Control

If you connect a computer to the projector with a USB cable (and select **Wireless Mouse** for the USB Type B setting in the Extended menu), you can use the remote control in place of your computer's mouse. This gives you more flexibility when delivering slideshow-style presentations, since you won't have to stand next to the computer to change slides.

- ❑ Use the Up and Down buttons to move through a Microsoft® PowerPoint® slideshow.

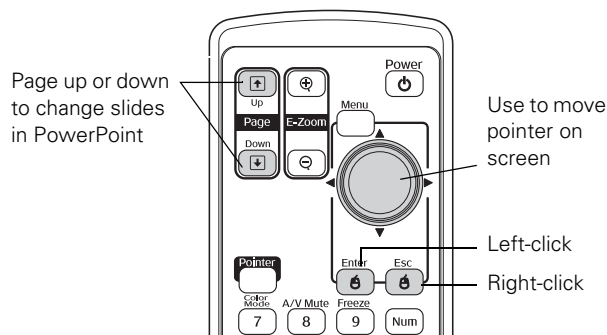

- ❑ Use the pointer button to move the pointer on the screen.
- ❑ Press the **Enter** button once to left-click, or press it twice to double-click. Press the **Esc** button to right-click.
- ❑ To drag-and-drop, hold down the **Enter** button. Then use the pointer button to drag the object. When it's where you want it, release the **Enter** button.


Using the Projector Security Features

To prevent unauthorized use of the projector, you can assign a password to prevent the projector from being turned on, create a custom screen that is displayed at startup and/or when the A/V Mute button is pressed, or disable the projector's buttons. You can also attach a security cable to the projector to prevent theft.

Enabling Password Protection

The default setting for the password is 0000. Follow these steps to create a new password:

1. Press the **Freeze** button on the remote control for about five seconds. You see this screen:

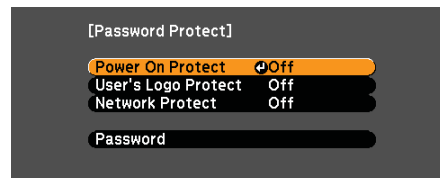

2. Use the pointer button to select **Password** and press **Enter**.
3. When you see a message asking if you want to change the password, select **Yes** and press **Enter**.
4. Hold down the **Num** button on the remote control and use the numeric keypad to enter a four digit password.
5. When you see a confirmation message, reenter the password. Then press the **Menu** button to exit the screen.


To set security options, access the Password Protect screen as described above, and then turn on any of the following options:

- ❑ **Power On Protect** to prevent unauthorized use of the projector. After the projector is plugged in and turned on, you must enter a password to use the projector.
- ❑ **User's Logo Protect** to prevent your custom screen and display settings from being changed. None of the User's Logo features in the Extended menu can be changed when the User's Logo Protect function is enabled.
- ❑ **Network Protect** to lock the Network settings in the menu system.


Caution: If you lose the remote control, you will not be able to enter the password. Keep the remote control in a safe place at all times. Also, it's a good idea to write down your password.

Starting the Projector with a Password

If the password function is enabled, you see this screen when you plug in and turn on the projector:

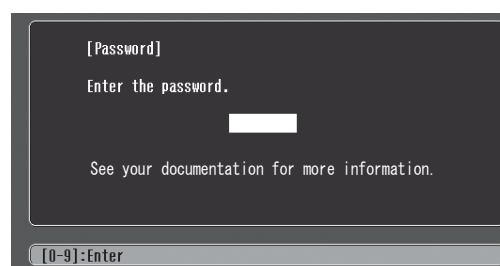

Hold down the Num button on the remote control and use the numeric keypad to enter the four-digit password. The password screen closes and projection begins.

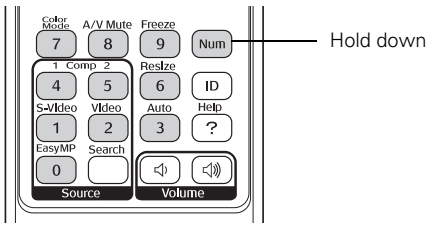

If the password is not correct, you see a message prompting you to re-enter it. If you enter an incorrect password three times in succession, you see the message **The projector's operation will be locked** and the projector switches to standby mode. Disconnect the projector's power cord from the electrical outlet, reconnect it, and turn the projector back on.

When you see the Password screen again, you can try to enter the correct password.

If you enter an incorrect password 30 times in succession, the projector remains locked and you must contact Epson to unlock it. If you have forgotten the password, contact Epson with the request code number that appears in the Password screen for assistance.

Note: If you leave the projector plugged in, the Password Protect Release screen will not appear. It appears only if you unplug and reconnect the power cable.

Disabling the Projector's Buttons

When you enable the Operation Lock function, you can lock all the projector's buttons, or all buttons except the **Power** button. The remote control can still be used to operate the projector.

1. Press the **Menu** button, highlight the **Settings** menu, and press **Enter**.
2. Select **Operation Lock** and press **Enter**.
3. Select **Full Lock** (to lock all projector buttons) or **Partial Lock** (to lock all buttons except the **Power** button) and press **Enter**.
4. Select **Yes** and press **Enter** to confirm the setting.
5. Press the **Menu** button to exit.


To disable the Operation Lock function, select **Off** in the Operation Lock menu. Or press and hold the **Enter** button on the projector's control panel for 7 seconds. A message is displayed and the lock is released.

Checking Projector Status

If your projector isn't working correctly, first turn it off, wait for it to cool (the **Power** light stops flashing orange), and unplug it. Then plug the power cord back in and turn on the projector. If this doesn't solve the problem, check the lights on top of the projector.

What To Do When the Lights Flash

The lights on top of the projector indicate the projector's status.

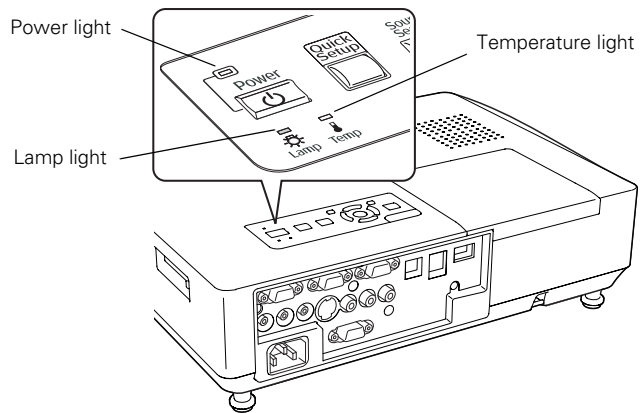






The following table describes the projector's status lights.

Status lights

Light	Status	Description
	Orange	The projector is in sleep or standby mode. You can unplug it or press the Power button to turn it on.
	Flashing green	The projector is warming up. Wait for the image to appear.
	Green	The projector is operating normally.
	Flashing orange	The projector is cooling down. You can't turn it back on until the light stops flashing and remains orange.
	Red	There is a problem with the projector. Check the other two lights and the information on this page to diagnose the problem.
	Flashing orange	Rapid cooling is in progress. Although this is not an abnormal condition, projection will stop automatically if the temperature rises higher. Make sure there is plenty of space around and under the projector for ventilation, and that the air filters and vents are clear.

Status lights (continued)

Light	Status	Description
	Red	<p>The projector is overheating, which turns the lamp off automatically. Wait until the cooling fan stops, then unplug the power cord. Plug the cord back in and press the Power button. Make sure the room temperature is not above 95 °F (35 °C), and there is plenty of space around and under the projector for ventilation.</p> <p>If you're using the projector above an altitude of 5,000 feet (1,500 meters), turn on High Altitude Mode in the Operation menu. Do not use the projector above 7,500 feet (2,286 meters).</p> <p>The air filter or vents may be clogged. Clean them or replace the air filter.</p> <p>If the projector continues to overheat after you clean the air filter, the problem may be caused by damage to the cooling fan or temperature sensor. Contact Epson for help.</p>
	Flashing red	<p>There is a problem with the fan or temperature sensor. The air filter or vents may be clogged. Clean them or replace the air filter.</p> <p>If this does not resolve the problem, stop using the projector, disconnect the power cable, and contact Epson for help.</p>
	Flashing orange	<p>It's time to replace the lamp. See page 12 for instructions. If you continue to use the lamp after the replacement warning, there is an increased possibility that the lamp may break.</p>
	Flashing red	<p>The lamp may be burnt out. First make sure the lamp cover is securely installed. If that's not the problem, let the lamp cool, then replace it as described on page 12.</p> <p>The air filter or vents may be clogged. Clean them or replace the air filter. If this does not resolve the problem, contact Epson.</p>
	Flashing red	<p>Power is cut off because of an internal problem. Unplug the power cord and contact Epson for help.</p>

Maintaining the Projector

Warning: Before you clean any part of the projector, turn it off and unplug the cord. Never open any cover on the projector, except the lamp cover. Dangerous electrical voltages in the projector can injure you severely. Do not try to service this product yourself, except as specifically explained here or in the *User's Guide*. Refer all other servicing to qualified service personnel.

Cleaning the Lens

Clean the lens whenever you notice dirt or dust on the surface.

- Use a canister of compressed air to remove dust.
- To remove dirt or smears on the lens, use a commercially available cloth for cleaning glasses.

Caution: Do not spray liquid or glass cleaner directly on the lens.

Cleaning the Projector Case

Before you clean the case, turn off the projector and unplug the power cord.

- To remove dirt or dust, wipe the case with a soft, dry, lint-free cloth.
- To remove stubborn dirt or stains, wipe the case with a soft cloth moistened with water and a mild detergent.

Caution: Do not use wax, alcohol, benzene, paint thinner, or other chemical detergents. These can damage the case.


Cleaning the Air Filter and Vent

Your projector includes an air filter to ensure the best performance and protect your investment. If dust collects on the air filter (on the bottom of the projector) or vent (on the front of the projector), clean them as described below. Dust clogs prevent proper ventilation and can cause overheating, which can damage the projector.

Follow these steps:

1. Turn off the projector and unplug the power cord.
2. To clean the intake vent and filter, use a small vacuum cleaner designed for computers and other office equipment. If you don't have one, gently clean the vent with a soft brush (such as an artist's paintbrush).

You can remove the air filter to clean both sides even if the projector is mounted on the ceiling (see below).

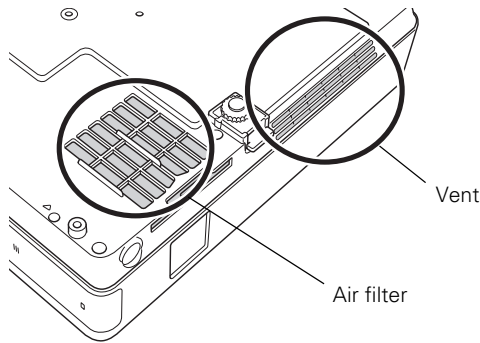



3. If the dirt is difficult to remove or the filter is broken, replace the filter as described below. Contact your dealer or call Epson at 800-GO-EPSON (800-463-7766) to obtain a new filter (part number V13H134A08).


Replacing the Lamp and Air Filter

The life span of the projection lamp is about 2,500 hours if **Brightness Control** in the Settings menu is set to **High** (default), and 3,000 hours if **Brightness Control** is set to **Low**.

Note: When you get a replacement lamp for your projector, you should replace the filter. Turn off this product when not in use to prolong the life of the projector.

It is time to replace the lamp when:

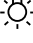- The projected image gets darker or starts to deteriorate.
- The message **Replace the lamp** appears on the screen when the lamp comes on and the lamp warning light  flashes orange. To maintain projector brightness and image quality, replace the lamp as soon as possible.
- The lamp warning light  flashes red (the lamp is burnt out).

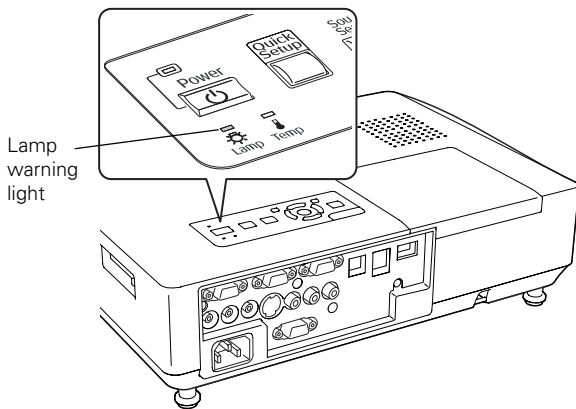


To obtain a new lamp, contact your dealer or call Epson at 800-GO-EPSON (800-463-7766). Request part number V13H010L40.

Follow these steps to replace the lamp and air filter:


1. Turn off the projector and unplug the power cord.
2. Let the projector cool for at least an hour (if it has been on). The lamp is extremely hot immediately after use.

Warning: Let the lamp cool fully before replacing it. In the unlikely event that the lamp has broken, small glass fragments may be present and should be removed carefully to avoid injury. If the lamp is used after the replacement period has passed, the possibility that the lamp may break increases. When a lamp replacement message appears, replace the lamp with a new one as soon as possible, even if it is still working.


3. Loosen (but don't remove) the lamp cover screw. Then slide the lamp cover to the side and lift it off the projector.

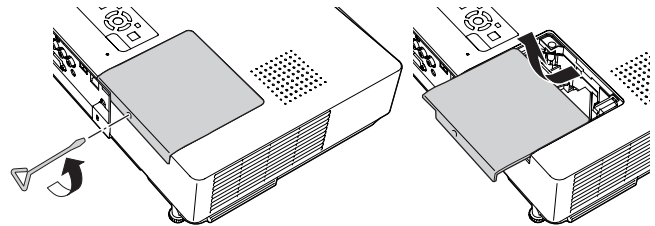


4. Loosen the two screws holding the lamp in place.

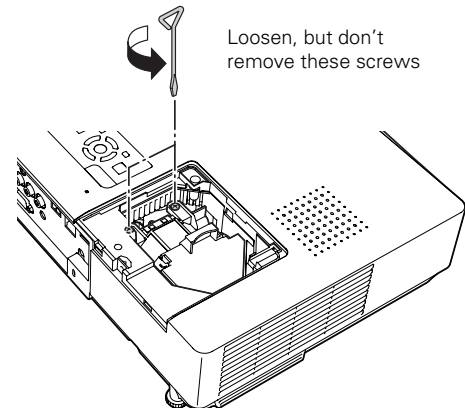


5. Hold the lamp as shown and pull it straight out.

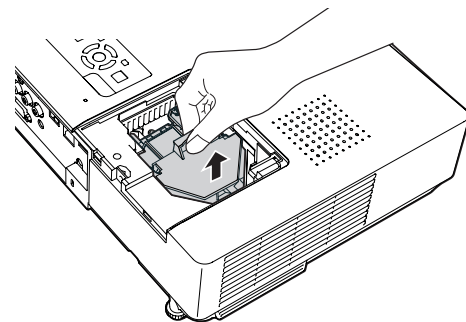

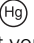Note:  The lamp(s) in this product contain mercury. Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.


6. Gently insert the new lamp. (If it doesn't fit easily, make sure it is facing the right way.)
7. Once the lamp is fully inserted, tighten its screws.
8. Replace the lamp cover, then tighten its screw.
9. Slide the air filter out and remove it.

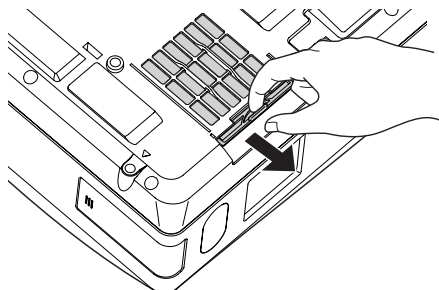

10. Slide in the new air filter until it clicks in place.
11. Reset the lamp timer as described in the next section.

Resetting the Lamp Timer

After you replace the lamp, you need to reset the lamp timer using the projector's menus.

1. Press the **Menu** button on the remote control or on the projector's control panel. You see the main menu.
2. Use the  pointer button on the remote control (or the arrow buttons on the projector) to highlight **Reset**, then press **Enter**. You see this screen:



3. Select **Reset Lamp Hours** and press **Enter**.
4. When you see the prompt, select **Yes** and press **Enter**.
5. When you're finished, press **Menu** to exit the menu system.

Optional Accessories

Product	Part number
Replacement lamp	V13H010L40
Air filter replacement set (2 filters)	V13H134A08
Universal ceiling mount	ELPMBPJF
Advanced ceiling mount with precision gear	ELPMBPRG
High security projector ceiling mount	ELPMBATA
Adjustable suspended ceiling channel kit	ELPMBP01
False ceiling plate	ELPMBP02
Structural round ceiling plate	ELPMBP03
Adjustable extension column (pipe) 6 to 9 inches	ELPMBC01
Security flex foot kit	ELPMBF01
Kensington security lock	ELPSL01
50-inch portable screen (4:3 aspect ratio)	ELPSC06
60-inch portable pop-up screen (4:3 aspect ratio)	ELPSC07
80-inch portable pop-up screen (4:3 aspect ratio)	ELPSC08
83.6-inch hanging pull-down screen (4:3 aspect ratio)	ELPSC09
DUET portable projector screen (4:3/16:9 combination)	ELPSC80
HD-15 to Component video cable	ELPKC19
S-Video cable	ELPSV01
Distribution amplifier	ELPDA01
Image presentation camera (ELPDC05)	V12H162020

You can purchase these accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at www.epsonstore.com (U.S. sales) or www.epson.ca (Canadian sales).

Related Documentation

CPD-24799	<i>PowerLite 1825 Quick Setup Poster</i>
CPD-24800	<i>PowerLite 1825 Installation rapide (French)</i>
CPD-24801	<i>PowerLite 1825 Guide de installation (Spanish)</i>
CPD-24802	<i>PowerLite 1825 Guia de instalaçãõ (Portuguese)</i>
CPD-24803	CD-ROM containing the <i>PowerLite 1825 User's Guide</i> , in English, French, Spanish, and Portuguese
CPD-24870	<i>Declaration of Conformity/Warranty Statement</i> in English and French