

Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

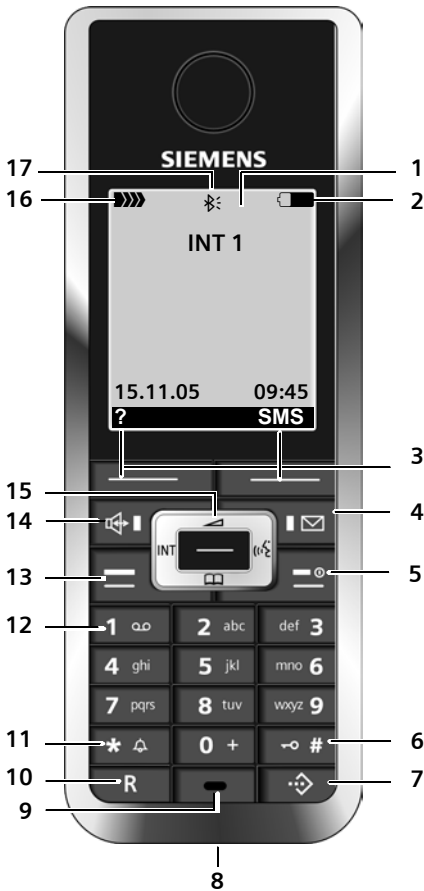
© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com



 


 
 
Gigaset
SL56

Handset at a glance



Note:

Illustration of a handset on a base station with SMS functionality.

- 1 **Display** in idle status (example)
- 2 **Charge status of the battery pack**
 (flat to full)
 flashes: battery pack almost flat
 flashes: battery pack charging
- 3 **Display keys** (page 10)
- 4 **Message key**
 Access to calls and message lists;
 Flashes: new message or new call.
- 5 **End call key, On/Off key**
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
 Keypad lock on/off (press and hold in idle status),
 Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**
 Open call-by-call list
- 8 **Connection socket** for headset and PC interface
- 9 **Microphone**
- 10 **Recall key**
 - Confer (flash)
 - Insert a dialling pause (press and hold)
- 11 **Star key**
 Ringtones on/off (press and hold),
 With an open connection: Switch between dial pulsing/touch tone dialling (press briefly)
 Open special characters table
- 12 **Key 1**
 Select answering machine (depending on the base station)/network mailbox (press and hold)
- 13 **Talk key**
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)
 When writing an SMS (depending on the base station): Send SMS
- 14 **Handsfree key**
 Switch between earpiece and handsfree mode;
 Lights up: handsfree activated
 Flashes: incoming call
- 15 **Control key** (page 9)
- 16 **Signal strength**
 (high to low)
 flashes: no reception
- 17 Bluetooth activated (page 24)

Contents

Handset at a glance	1
Safety precautions	3
Gigaset SL56 – a handset with many extras	5
First steps	5
Pack contents	5
Setting up the charging cradle	5
Setting up the handset for use	5
Making calls	8
Making an external call	8
Ending a call	8
Answering a call	8
Handsfree mode	8
Muting	9
Making internal calls	9
Operating the handset	9
Control key	9
Display keys	10
Returning to idle status	10
Menu guidance	10
Main menu (first menu level)	11
Correcting incorrect entries	11
ECO DECT	11
Using the directory and lists ...	11
Directory/call-by-call list	11
Last number redial list	16
Opening lists with the message key .	16
Handset settings	16
Shortcuts for functions and numbers	16
Setting the emergency number	17
Changing the display language	17
Setting the display	17
Setting the screensaver	18
Setting backlight	18
Activating/deactivating auto answer .	18
Adjusting the loudspeaker volume ..	19
Changing ringtones	19
Setting your own dialling code	20
My stuff	20

Activating/deactivating advisory tones	22
Setting the alarm clock	22
Setting an appointment (calendar) ..	23
Display missed appointments, anniversaries	24
Using Bluetooth devices	24
Restoring the handset default settings	26
Appendix	26
Care	26
Contact with liquid	26
Questions and answers	26
Service (Customer Care)	27
Authorisation	27
Specifications	27
Notes on user guide	28
Symbols used	28
Example: menu input	28
Example: multiple line input	29
PC Interface	29
Writing and editing a text message ..	29
Accessories	31
Index	32

Safety precautions

Caution:

Read the safety precautions and the user guide before use.

Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Fit only the **approved rechargeable battery pack**! Never use a conventional (non-rechargeable) battery pack as this could damage your health and cause injury. Use the battery pack as directed in this user guide (page 27).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. This can cause severe, permanent hearing damage.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or shower rooms. The charging cradle is not splashproof (page 26).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

Safety precautions



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Note:

Not all of the functions described in this manual are available in all countries.

Gigaset SL56 – a handset with many extras

Your Gigaset SL56, which has a clearly laid out colour display (65K colours), offers you much more than just the possibility of storing up to 250 phone numbers and E-mail addresses (page 11):

- ◆ You can assign important numbers or frequently used functions to the keys. The number is then dialled or the function started by simply pressing a key (page 16).
- ◆ You can designate important people as VIPs so you can tell important calls from the ringtone (page 12).
- ◆ You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display. This feature requires Calling Line Identification (CLI).
- ◆ You can save a voice pattern for important directory entries – the handset dials when you speak the appropriate command (page 15).
- ◆ You can store appointments (page 23) and anniversaries (page 14) on your handset and it will remind you of them in advance.

Have fun using your new handset!

First steps

Pack contents

- ◆ one Gigaset SL56 handset,
- ◆ one charging cradle with mains adapter,
- ◆ one battery pack,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

Setting up the charging cradle

The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

Please note:

- ◆ Never expose the handset to the following influences: heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Range and reception strength

Range:

- ◆ Up to 300 m in the open
- ◆ Up to 50 m in buildings

Reception strength:

The display shows the quality of the radio contact between the base station and handset:

- ◆ Good to poor: ▄▄▄ ▄▄▄ ▄▄▄ ▄▄▄
- ◆ No reception: ▄▄▄ flashes

Setting up the handset for use



The display is protected by a plastic film. **Please remove the protective film!**

Fitting the battery pack

Caution:

Only use the rechargeable Gigaset Communications GmbH * original battery pack (page 27)! This means that you should never use a conventional (non-rechargeable) battery pack, as this may cause significant damage to health and property. For example, the outer casing of the battery pack could be destroyed or the battery pack could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

First steps

- ▶ With the pins to the front, insert the battery pack into the cavity at an angle from the right.
- ▶ Then press it into the housing from above until the bracket on the side of the battery back snaps securely into the housing.

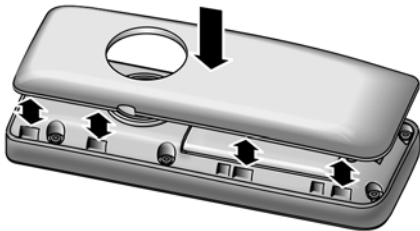


Please note:

To remove the battery pack, you must first press the bracket on the side.

Closing the battery cover

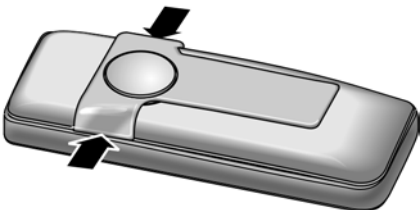
- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.
- ▶ Then press the cover until it clicks into place.



Attaching the belt clip

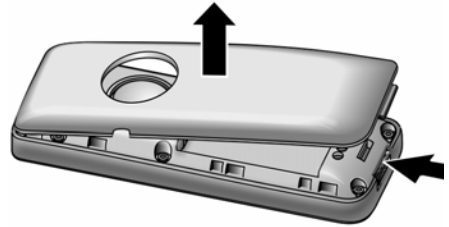
There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.



Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Lift the device with the keypad in the palm of your hand.
- ▶ Insert your index finger into the notch on the lower edge.
- ▶ Carefully lift the cover upwards out of the notches.



Registering the handset

A Gigaset SL56 handset can be registered to up to four base stations.

You must initiate handset registration on the handset and on the base station.

After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. If it does not, repeat the procedure.

On the base station

To find out how to register the handset on the base station, see the user guide for the base station.

On the handset

 →  → Handset → Register H/Set



Select base station, e.g. Base 1, and press **OK**.



Enter the system PIN for the base station and press **OK** (depending on the base station). The following flashes in the display, e.g. Base 1.

Placing the handset in the charging cradle

- ▶ Plug the charging cradle mains adapter into a mains power socket.
- ▶ Place the handset in the charging cradle with the **display facing forward**.


To charge the battery pack, leave the handset in the charging cradle.

Notes:

- If the handset has switched itself off because the battery pack is flat and is then placed in the charging cradle, it will switch itself on automatically.
- Only place the handset in the charging cradle that is intended for it.

For questions and problems see page 26.

Initial charging and discharging of the battery pack

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the battery pack is being charged.

During handset operation, the battery icon indicates the charge status of the battery pack (page 1). The correct charge status can only be displayed if the battery pack is first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **continuously** for **ten** hours. Your handset need not be switched on for it to charge.
- ▶ Afterwards, remove the handset from the charging cradle and do not put it back again until the battery pack is fully discharged.

Note:

After the first battery charge **and** discharge, you may replace your handset in the charging cradle after every call.

Please note:

 

- ◆ Always repeat the charging and discharging procedure if you remove the battery pack from the handset and insert it again.
- ◆ The battery pack may warm up as it is charging. This is not dangerous.
- ◆ After a time the charge capacity of the battery pack will decrease for technical reasons.

Setting the date and time

The date and time must be set in order to, e.g. have the correct time for incoming calls and be able to use the alarm clock and calendar.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field via:

 →  → Date/Time

- ▶ Change multiple line input:

Date:

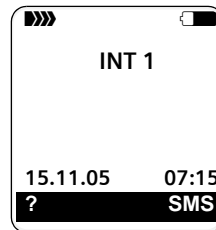
Enter the day, month and year as 8 digits.

Time:

Enter hours and minutes as 4 digits (e.g.     for 07:15 a.m.

Save Press the display key

If the handset is registered and the time has been set, the idle display is as follows, depending on the base station (example):



Your handset is now ready for operation!

Making calls

Making an external call

 
External calls are calls using the public telephone network.

 


Enter the number and press the talk key.

Or:



Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

Notes:

Dialling using the directory, call-by-call list (page 1, page 11) or last number redial list (page 16) saves time re-entering numbers and network provider access codes ("call-by-call numbers").

With voice dialling, you can dial numbers simply by saying the name (page 15).

Continuing a call on a Bluetooth headset

Precondition: Bluetooth is activated; connection has been established between Bluetooth headset and the handset (see page 24).

Press the talk key on the headset; it can take up to 5 seconds to establish a connection to the handset.


For further details on your headset, see the user guide issued with it.

Ending a call

 



Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can answer the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the display key **Accept** (depending on the base station).
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 18), the handset will take a call automatically when you lift it out of the cradle.

If the ringtone is intrusive, press the display key **Silence**. You can take the call as long as it is displayed on the screen.

Answering a call on a Bluetooth headset

Precondition: Bluetooth is activated; connection has been established between Bluetooth headset and the handset (see page 24).

Press the talk key on the headset.

For further details on your headset, see the user guide issued with it.

Handsfree mode

In handsfree mode, instead of holding the handset to your ear you can put it down e.g. on the table in front of you to allow others to participate in the call.

Activating/deactivating handsfree operation


Activating while dialling



Enter the number and press the handsfree key.



- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

 Press the handsfree key.

During a call and when listening to the answering machine (depending on the base station), switch handsfree on or off.


If you wish to place the handset in the charging cradle during a call:


- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the loudspeaker volume, see page 19.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears a hold music.


 Press the control key on the left to mute the handset.


 Press the display key to reactivate the microphone.

Making internal calls

Internal calls to other handsets registered to the same base station are free.

Calling a specific handset

 Initiate internal call.

 Enter the number of the handset.


Or:


 Initiate internal call.

 Select handset.


 Press the talk key.

Calling all handsets ("group call")

 Initiate internal call.


 Press the star key. All handsets are called.

Ending a call

 
 Press the end call key.

 
Operating the handset

Switching the handset on/off

 Press and **hold** the end call key in idle status (confirmation tone).

Activating/deactivating the keypad lock

 Press and **hold** the hash key.


You will hear the confirmation tone. The  icon appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

With the keypad lock activated, only the emergency number can be dialled, see page 17.

Control key








Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.  for "press right on the control key".





The control key has a number of different functions:

Operating the handset





When the handset is in idle status

-  Open directory.
-  Open main menu.
-  Open list of handsets.
-  Set handset ringtone (page 19).
-  Start voice dialling, press and **hold** (page 15); Main menu, press briefly.




In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

In lists and submenus

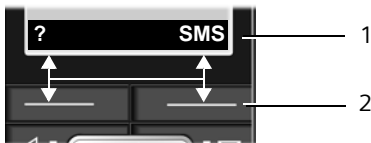
-  /  Scroll up/down line by line.
-  Open submenu or confirm selection.
-  Go back one menu level, or cancel.

During an external call

-  Open the directory.
-  Initiate internal enquiry call and mute
-  Adjust loudspeaker volume for earpiece and handsfree mode.










Display keys

The function of the display keys changes depending on the particular operating situation. Example (depending on base station):



 
- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

The most important display symbols are:

-  Left display key, as long as it has not been assigned a function (page 16).
-  Open the main menu.
-  Open a context-dependent menu.
-  Delete key: deletes one character at a time from right to left.
-  Go back one menu level or cancel operation.
-  Fetch E-mail address from the directory.
-  Copy number into directory.
-  On base stations with built-in answering machines: forward external call to answering machine.
-  Open the last number redial list.

Returning to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.


Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance




Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ When the handset is in idle status, press  to open the main menu.

The main menu functions are shown in the display as a list with colour icons and names.

To access a function, i.e. open the corresponding submenu (next menu level):


- ▶ navigate to the function using the control key /. The name of the function is displayed in the display header. Press the display key .

Submenus

The functions in the submenus are displayed as lists.


To access a function:

- ▶ Scroll to the function with the control key  and press .

Press **briefly** once on the end call key  to return to the previous menu level / cancel the operation.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press  to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the character (flashing) when entering the time and date etc.

You will find examples of symbols used, menu entries and multiple line input in the appendix to this user guide, page 28.

ECO DECT

ECO DECT reduces power consumption by using an energy efficient power supply.

Your handset also reduces the transmission power depending on the distance to the base station.

Using the directory and lists

You can store a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 13).

 
Directory/call-by-call list

Note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

Directory

In the **directory** you can store

- ◆ Up to three numbers and associated first names and surnames,
- ◆ VIP designation and VIP ringtone (optional),
- ◆ E-mail address (optional),
- ◆ CLIP pictures (optional),
- ◆ Anniversaries with reminder.
- ▶ With the handset in idle status, open the directory by pressing the  key.

Length of the entries (directory)


3 numbers: each max. 32 digits

First name and surname: each max. 16 characters

E-mail address: max. 60 characters

Call-by-call list

The **call-by-call list** is used to store the access codes for network providers (so-called "Call-by-call numbers").


- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Storing a number in the directory

 → New Entry

- ▶ Change multiple line input:

First Name/Surname:

Enter a name in at least one of the fields.

Phone (Home)/Phone (Mobile)/Phone (Office)

Enter a number in at least one of the fields.

Annivers.:

Select On or Off.

With setting On:

enter Anniversary (Date) and Annivers. (Time) (page 14) and select reminder type: Annivers. (Signal).

E-mail

Enter E-mail address.

Caller Picture

If required, select a picture to be displayed when the contact calls (page 20). Precondition: Calling Line Identification (CLIP)

- ▶ Save changes: see page 29.

Storing a number in the call-by-call list

 → New Entry

- ▶ Change multiple line input:



Name:

Enter name.



Number:

Enter number.

Selecting entries in the directory and call-by-call list

 
 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

Dialling with the directory/call-by-call list

 /  →  (select entry)

 Press the talk key. The number is dialled.

Managing entries in the directory/call-by-call lists

 /  →  (select entry)

Viewing an entry

View Press the display key. The entry is displayed.
Back with **OK**.


Editing entries

View **Edit** Press display keys one after the other.


- ▶ Carry out changes and save.

Using other functions

 /  →  (select entry)
→ **Options** (open menu)

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringtone to it. You can then tell important calls from the ringtone.

This feature requires caller display (CLI).

Record Pattern (directory only)

Speak the name of the selected entry and store as a voice pattern (page 15).

Play Pattern (directory only)

Play voice patterns (page 15).

Delete Pattern (directory only)

Delete voice patterns (page 15).

Copy Entry

Send a single entry to a handset (page 13).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset (page 13).

Available Memory

Display the available entries in the directory and call-by-call list (page 11).




Using quick dial keys

- ▶ Press and **hold** the required quick dial key (page 16).

Sending the directory/call-by-call list to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and base station can send and receive directory entries.

 /  →  (Select entry)
→ **Options** (Open menu) → Copy
Entry / Copy List → to Internal



Enter the internal number of the receiving handset. You see Copying entry.

Yes / No Press the display key.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Note:

You can also send the complete **directory** via data transfer, without opening the directory:



 →  → Directory.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (see page 24) you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile.

 →  (Select entry) →
Options (Open menu) → Copy Entry /
Copy List → vCard via Bluetooth

The list of "Known Devices" (see page 25) is displayed.



Select device and press **OK**.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (see page 25) sends a vCard to your handset, this occurs automatically and you are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:



Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

Adding a displayed number to the directory

You can copy numbers that are displayed in a list, e.g. the calls list or last number redial list, in an SMS (depending on the base station) or during a call.

If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line.

A number is displayed:

Options → Copy to Directory

▶ Complete the entry, see page 12.

While the number is being transferred from the answering machine list (depending on the base station), the message playback is interrupted.

Copying a number or E-mail address from the directory

In many operating situations, you can open the directory to copy a number or E-mail address, for example. Your handset need not be in idle status.

▶ Depending on the operating situation, open the directory with or Directory.



Select an entry (page 12).

Saving anniversaries in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: **Annivers.: Off**).

Anniversaries are automatically recorded in the calendar (page 23).



(Select entry; page 12)

View **Edit**

Press display keys one after the other.



Scroll to the **Annivers.:** line.



Select **On**.

▶ Change multiple line input:

Anniversary (Date)

Enter day/month/year as 8 digits.

Annivers. (Time)

Enter the hour/minute for the reminder call in 4-digit format.

Annivers. (Signal)

Select the type of signal for the reminder.

▶ Save changes: see page 29.

Note:

Reminder calls require a time stamp. If you select a visual signal, then a time stamp is not required and is automatically set to 00.00.

Deactivating anniversaries



(Select entry; page 12)

View **Edit**

Press display keys one after the other.



Scroll to the **Annivers.:** line.



Select **Off**.

Save

Press the display key.

Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringtone.

Silence

Press the display key to acknowledge and end the reminder call.

Viewing missed anniversaries


In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

► View appointment:

Appoint. Press the display key.

You now have the following options:

SMS Write an SMS (depending on base station).


Delete Delete reminder.
After deleting, press the  or **Go Back** display key:
Back to idle status, **Appoint.** is no longer displayed.

You can also view missed anniversaries afterwards (see page 24).

Voice dialling

You can dial numbers from the directory by speaking the name. In order for your handset to "recognise" you, you must record a voice pattern for each name, i.e. loudly say the name into the handset and store it.

In addition, (depending on the base station), you can set your handset so that it announces the caller's name when an external call is received, instead of playing a ringtone.

You can store voice patterns for a **total** of 30 directory entries. Entries with voice patterns are marked with .

You can also perform voice dialling functions via an activated Bluetooth headset.

Recording voice patterns

Record your voice pattern in quiet surroundings. Your mouth should be around 25 cm away from the handset. The voice pattern can be 1.5 seconds long.

 →  (Select entry; page 12)

Options Open menu.

Record Pattern

Select.

OK

Press the display key to start the recording.

(On the Bluetooth headset: instead of pressing the headset's talk key; it can take up to 5 seconds to establish a connection to the handset)

You will hear a short beep. The display will prompt you accordingly. Speak the name. Repeat the name after being prompted to do so by the display and by a further beep.

In the list,  is shown next to the name.

Note:

If the memory cannot accommodate a new voice pattern, a message will appear on the display. The handset will automatically return to the directory. Delete a voice pattern and select Record Pattern again.

To **change** a voice pattern, you must record over it.

Using voice dialling

 Press and **hold**.

Speak the name after the beep. If the name matches the recorded voice pattern, it is repeated. The number is dialled.

Playing voice patterns

 →  (Select entry with )

Options Open menu.

Play Pattern

Select and press **OK**. The voice pattern will be played in handsfree mode.



Press and **hold** (idle status).

Deleting voice patterns

 →  (Select entry with )

Options Open the menu.

Delete Pattern

Select and press **OK**.





 
Press and **hold** (idle status).

The directory entry is retained.

Last number redial list

 

The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.


Manual last number redial

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again. The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

 
Managing entries in the last number redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

The following functions can be selected with :

Automatic Redial

The selected number is automatically dialled in fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.


- Subscriber answers: press the Talk key . The function is ended.
- Subscriber does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or ten unsuccessful attempts.

Display Number (as in the directory, page 12)

Delete Entry (as in the directory, page 13)

Delete List (as in the directory, page 13)

Opening lists with the message key

 
 

An advisory tone sounds as soon as a new entry appears on a list. The  key flashes (it goes off when the key is pressed). In idle status, the displays shows an icon for the new message.

If you press the  key, you access the lists which contain new messages.

Handset settings

Your handset is preconfigured, but you can change these settings to suit your individual requirements.


Shortcuts for functions and numbers

You can assign the left display key and each of the digit keys  and  to  a number or a function.

The number is then dialled or the function started by simply pressing a key.

Assigning a digit key/left display key

Precondition: The digit key or the left display key has not yet been assigned a number or a function.

- ▶ Press the display key  or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call


Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

Alarm Clock



Assign the key with the menu for setting and activating the alarm clock (page 23):  Alarm Clock .

Calendar

Open calendar/enter new appointment.

Bluetooth

Assign the Bluetooth menu to a key:

 →  → Bluetooth .

Depending on your base station, further key assignments are also possible.

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line.

Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

Changing key assignments

Display key

- ▶ Press and **hold** the left display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 16).

Digit key





- ▶ Press the digit key **briefly**.

Change Press the display key. The list of possible key assignments is displayed.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 16).

Setting the emergency number

With the keypad lock activated, only the emergency number can be dialled. You can set the emergency number.


 →  → Handset → Add. Emerg. No
 Enter emergency number.
 Save number.

 
Changing the display language

You can view the display texts in different languages.

 →  → Handset → Language


The current language is indicated by .

 Select language and press **OK**.

 Press and **hold** (idle status).



If you accidentally choose a language you do not understand:

   
 Press keys one after the other.



 Select the right language and press **OK**.

Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → Display

Colour Scheme Select and press **OK**.


 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.

Save Press the display key.

 Press and **hold** (idle status).

Setting the screensaver

You can set a picture from the Resource Dir. (page 20) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screen Saver menu option is marked with .

 →  → Display → Screen Saver

The current setting is displayed.

▶ Change multiple line input:

Activation:

Select On (screensaver is displayed) or Off (no screensaver).

Selection:


If required, change the screensaver (see below).

▶ Save changes: see page 29.


If the screensaver is covering the display, **briefly** press on any key to display the idle display with the time and date.

Changing the screensaver

 →  → Display → Screen Saver

 Scroll to the Selection line.

View Press the display key. The active screensaver is displayed.

 Select screensaver and press **Change**.

▶ Save changes: see page 29.

Setting backlight

Regardless of whether or not the handset is in the charging cradle, you can activate or deactivate the backlighting. If the charging cradle is switched on, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select On or Off.

Without Charger

Select On or Off.

Note:

With the On setting, the standby time of the handset can be significantly reduced.

 
Save



Press the display key.



Press and **hold** (idle status).

Activating/deactivating auto answer

If you have activated this function, when you get a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → Handset

Auto Answer

Select and press **OK** (= on).



Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during an external call.

The handsfree volume can only be adjusted when this function is set.

You are conducting an external call.



Press the control key.



Select volume.



Press display key if necessary to save the setting permanently.

If is assigned with another function, e.g. when toggling :



Open menu.

Volume Select and press **OK**.

Configure setting (see above).

Changing ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 =) and the "Crescendo" ring (6; volume increases with each ring =).

◆ Ringtones:

You can select various ringtones, melodies or any sound from My stuff (page 20).

You can configure the following functions with different ringtones:

- ◆ Ext. Calls: for external calls
- ◆ Internal Calls: for internal calls
- ◆ Appointments: for set appointments (page 23)
- ◆ All: the same for all functions

Settings for individual functions

Set the volume and melody depending on the type of signalling required. For external calls, you can also make a setting so that the caller's name is announced after the first ringtone. To do this, however, the corresponding voice pattern must first have been recorded (page 15).



→ → Audio Settings →

Ringer Settings



Select setting, e.g. Ext. Calls and press **OK**.



Set volume (1–6).



Scroll to the next line.



Select melody.



Only with setting
Ext. Calls: skip to next line.



Activate or deactivate
Announce.

This feature requires caller display (CLI).



Press the display key to save the setting.

In idle status, you can also open the menu Ringer Settings by pressing briefly.

Settings for all functions to ring the same



→ → Audio Settings →

Ringer Settings → All

- ▶ Set volume and ringtone (see "Settings for individual functions").



Press the display key to confirm the prompt.



Press and **hold** (idle status).

Activating/deactivating the ringtone

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

Handset settings

Deactivating the ringtone permanently



Press the star key and hold until you can no longer hear the ringtone.

The icon appears in the display.

Re-activating the ringtone



Press and **hold** the star key.

Deactivating the ringtone for the current call



Press the display key.

Activating/deactivating the alert tone

In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringtone.



Press and **hold** the star key and **within 3 seconds:**



Press the display key. A call is now signalled by **one** brief alert tone. You will now see in the display.

Vibration alarm

Incoming calls and other messages are indicated by vibration.



→ → Audio Settings

Silent Alert Select and press **OK** (= on).

Setting your own dialling code

In order to transfer phone numbers between Bluetooth connections and phone, it is essential that your dialling code (country and area code) is stored on the phone.

Some of these numbers are already pre-set.



→ → Handset → Area Codes

Check that the (pre)set dialling code is correct.

▶ Change multiple line input:



Select/change input field.



Navigate in the input field.



If necessary, delete number: press the display key.



Enter number.



Press the display key.

Example:

Area Codes

International code:
00 - 7

Local area code:
0 - [495]

<C Save

My stuff

My stuff on the handset manages sounds, which you can use as ringtones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers; Precondition: Calling line identification (CLIP). My stuff can manage the following media types:

Icon	Sound	Format
	Ringtones; monophonic	Standard
	Polyphonic	Standard
	Polyphonic	.mid
	Picture (CLIP picture, screensaver)	BMP (128 x 100 or 128 x 160 pixels)


The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset. The pre-configured sounds and pictures are labelled with . You cannot rename or delete these or send them by SMS.


You can download sounds in .mid format and pictures from a PC (page 29).


You can listen to the existing sounds and, in My stuff, you can rename and delete sounds that you have downloaded onto your handset via a data cable (max. 32 KB).


Playing back sound/viewing CLIP pictures


 →  → Screensavers/Caller Pictures/Sounds (Select entry)

Play / View Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.

End /  Press the display key. Playback of the sound or the display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.

 Press and **hold** (idle status).

If you have saved a sound or picture in an invalid file format, an error message will be displayed after you make your selection. Cancel the operation with . You can delete the sound or picture with


Delete.

Sounds: setting the volume

During playback:

Options /  Open the menu.

Volume Select and press **OK**.


 Set volume.

Save Press the display key.

Renaming/deleting a sound/picture

You have selected an entry.

Options Open menu.

If a sound/picture cannot be deleted (, these options are not available. Depending on the situation, you can select the following functions:

Rename

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

Delete Entry

The selected entry is deleted.



Delete List


All deletable entries in the list are deleted.

A deleted ringtone is automatically replaced.

Checking memory

You can check the remaining available memory and the share of memory used for screensavers, CLIP pictures and sounds.

 →  → Capacity

 Back: press display key.

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key click:** every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of making an entry/setting and upon receipt of an SMS (depending on base station) or a new entry in the answering machine list (depending on base station) or the calls list
 - **Error beep** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling at the end of a menu
- ◆ **Battery low beep:** the battery pack requires charging.

 →  → Audio Settings → Advisory Tones

▶ Change multiple line input:

Key Tones:

Select On or Off.

Confirm.:

Select On or Off.

Battery:

Select On, Off or In Call. The battery warning tone is activated/deactivated or only sounds during a call.

 
▶ Save changes: see page 29.

You cannot deactivate the confirmation tone for placing the handset in the base station.

Setting the alarm clock

Precondition: The date and time have already been set (page 7).

Activating/deactivating the alarm clock and setting the wake-up time



Change multiple line input:

Appoint.:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Occurance:

Select Daily or Monday-Friday.


Volume:


Set the volume (1-6).

Melody:

Select melody.

▶ Save changes: see page 29.

You will see the  icon.

A wake-up call with selected ringtone (page 19) is signalled on the handset. The wake up call sounds for 60 seconds.  is shown in the display. If no key is pressed the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (slumber mode)

Precondition: A wake-up call is sounding.

OFF

Press the display key. The wake-up call is deactivated.

or

Snooze

 
Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.


Setting an appointment (calendar)

You can have your handset remind you of up to 30 appointments (volume and melody, see page 19).

Saving an appointment.

Precondition: The date and time have already been set (page 7).



Select the day in the graphical calendar and press **OK** or . (Days on which appointments have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

► Change multiple line input:

Appoint.:

Select On or Off.

Date:

Enter the day/month in 4-digit format.

Time:

Enter hours/minutes in 4-digit format.

Notes:


Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Save

Press the display key.



Press and **hold** (idle status).

 
The appointment is marked with  in the appointments list. The appointments are sorted according to the date in the list.


An appointment reminder is signalled with the selected ringtone (page 19). The appointment reminder sounds for

60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

Managing appointments




Select the day in the graphical calendar and press **OK** or . (Days on which appointments have already been saved are highlighted in black in the calendar.)



Select appointment for the day.

Options

Open menu
Back with .

You have the following options:

View Entry

View selected appointment,
Options Open the menu for editing, deleting and activating/deactivating.

Edit Entry

Edit selected appointment.

Delete Entry

Delete selected appointment.

Activate/Deactivate

Activate/deactivate the selected appointment.

Delete List

Delete **all** appointments.

Switching off or answering an appointment reminder

Precondition: An appointment reminder is sounding.

Off

Press the display key to switch off the appointment reminder.

Or:

SMS

Press the display key to answer the appointment reminder with an SMS (depending on base station).

Display missed appointments, anniversaries

Missed appointments/anniversaries (page 14) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 16).

The most recent entry is at the start of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.** Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:

 →  → **Missed Alarms**

Select appointment/anniversary. Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete

Delete appointment

SMS

Write SMS (depending on base station).



Press and **hold** (idle status).

If 10 entries are saved in the list, the oldest entry is deleted at the time of the next appointment reminder.

Using Bluetooth devices

Your Gigaset SL56 handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

 
You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

 
Note:

If the handset is in Bluetooth mode, any connection via the data cable (page 29) that is already connected will be interrupted. Bluetooth must be deactivated in order for you to be able to use a connected data cable.

Activating Bluetooth mode

 →  → **Bluetooth** → **Activation**

In idle status, the  symbol on the handset shows that Bluetooth mode is activated:



Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Note:

If you register a headset, any headset that is already registered will be overwritten.

 →  → **Bluetooth** → **Search Headset / Search Data Device**

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

Options

Press the display key.

Trust Device

Select and press **OK**.



Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

The device is saved in the list of known devices.

Cancelling/repeating current search

To cancel search:

Cancel Press the display key.

Repeat search if necessary:

Options Select and press **OK**.

Repeat Search

Select and press **OK**.

Editing the list of known (trusted) devices

Open list

→ → Bluetooth → Known Devices

A corresponding symbol appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

Viewing entries

Open list → (select entry)

Options Press the display key.

View Entry

Select and press **OK**.
Device name and address are displayed.
Back with **OK**.

Changing the name of a Bluetooth device

Open list → (select entry)

Options Press the display key.

Rename Select and press **OK**.



Change name.

Save

Press the display key



Back: Press and **hold** key.

Deregistering a Bluetooth device

Open list → (select entry)

Options Press the display key.

Delete Entry

Select and press **OK**.



Back: Press and **hold** key.

Note:

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

◆ Reject

Go Back Press the display key.

◆ Accept



Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.

If you have accepted the device, you can use it temporarily (i.e. for as long as it is in the receiving range or until you switch off the handset) or you can include it in the list of known devices.

Once the PIN has been confirmed, save to the list of known devices:

- Press the display key **Yes**.
- Press the display key **No**: use temporarily.

Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.



→ → Bluetooth → Own Device Name

Change

Press the display key



Change name.



Press the display key



Back: Press and **hold** key.

Restoring the handset default settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the calls list, the SMS lists (depending on base station) and the handset's registration to the base station as well as the content of My stuff are retained.



→ → Handset → Reset Handset



Press the display key.



Press and **hold** (idle status).

Appendix

Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any questions about using your handset, visit us at any time at www.gigaset.com/customer-care. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The battery pack is flat.
 - ▶ Charge/replace the battery pack (page 5).

The handset does not respond to a key press.

The keypad lock is activated.

- ▶ Press and **hold** the hash key (page 9).

"Base station x" is flashing in the display.

1. The handset is outside the range of the base station.
 - ▶ Reduce the distance between handset/base station.
2. The handset has been de-registered.
 - ▶ Register the handset (page 6).
3. The base station is not switched on.
 - ▶ Check the base station mains adapter.

Base Search is flashing in the display.

The handset is set for Best Base and no base station is switched on or within range.

- ▶ Reduce the distance between handset/base station.
- ▶ Check the base station mains adapter.

Handset does not ring.

The ringtone is switched off.

- ▶ Activate the ringtone (page 19).

The other party cannot hear you.

You have pressed the (INT) key. The handset is "muted".

- ▶ Switch on the microphone again (page 9).

You hear an error tone when keying an input (a descending sequence of tones).

Action has failed/invalid input.

- ▶ Repeat the operation.
Watch the display and refer to the instructions if necessary.

Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

www.gigaset.com/customercare

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

For fast and dependable assistance with any repairs or guarantee/warranty claims, contact our Service Centre.

Russia 8 (495) 228 1312

Please have your proof of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

www.gigaset.com/docs.

CE 0682

Certificate N°
POCC DE.МЛ05.В00160
valid to 29.03.09

Bluetooth * Qualified Design Identity

The Bluetooth QD ID for your Gigaset SL56 is: B011264.

Specifications

Recommended battery pack

(Valid at the time of going to press)

Lithium-Ion (Li-Ion):

700 mAh

V30145-K1310-X250

The handset is supplied with the recommended battery pack. Only the original battery pack may be used.

Handset operating times/charging times

Capacity	700 mAh
Standby time	approx. 250 hours (10 days)
Calling time	Approx. 10 hours
Charging time	approx. 3.5 hours

Note:

Reduced handset standby time when Bluetooth is activated: approx. 180 hours.

Reduced talk time via Bluetooth headset: approx. 7 hours.

The operating and charging times apply only when using the recommended battery pack.

General specifications

Dimensions	approx. 47 x 131 x 23 mm, excl. belt clip (W x H x L)
Weight	approx. 111 g
Dimensions of charging cradle	Diameter: approx. 67 mm Height (to upper edge of socket): approx. 24 mm
Weight charging cradle	approx. 138 g

Notes on user guide

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

Symbols used

Copy Entry / Copy List (example)

Select one of the two menu functions specified.



Save

Enter digits or letters.

The display keys' current functions are shown reverse highlighted in the bottom display line. Press the display key below to launch the function.




 

Press the top or the bottom of the control key: scroll up or down.



Press the right or left of the control key: e.g. select setting.





Press the centre of the control key: call up the main menu in idle status.
During configuration: confirm selection.




 
 /  /  etc.

Press the illustrated key on the handset.


Example: menu input

In the user guides, the steps you need to perform are shown in abbreviated form. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.



 →  → Display

- ▶ When the handset is in idle status, press the control key **in the centre** () to open the main menu.
- ▶ With the / control key, select the  icon – press top or bottom of control key.



In the display header, **Settings** is displayed.

- ▶ Press  or press the display key **OK** to confirm the **Settings** function.


The **Settings** submenu is displayed.


- ▶ Press on the bottom of control key  until the **Display** menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast Select and press **OK**.

- ▶ Press on the bottom of control key  until the **Contrast** menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.



Select contrast and press  or press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press  or press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide symbols are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):



Date:


Enter the day, month and year as 8 digits.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

 
Enter hours/minutes in 4-digit format.

- ▶ Press the  key.

The fourth line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

- ▶ Save changes.

- ▶ Press the display key **Save**.
- ▶ Then press and **hold** the  key.

The handset switches to idle status.

PC Interface

You can connect the handset to your computer using a data cable (page 31). Your handset can communicate with a computer via a program (free download at www.gigaset.com/gigasetSL560).

You can access your handset's directory and download sounds (.mid) and pictures (.bmp) for the screensaver from your computer to the handset.





 
During the transfer of data between handset and PC, you will see **Data Transfer** on the display. During this time, it is not possible to use the keypad and incoming calls will be ignored.

 
Note:

If the handset is in Bluetooth mode (page 24), any connection via the data cable that is already connected will be interrupted. Bluetooth must be deactivated in order for you to be able to use a connected data cable.

Writing and editing a text message

 
 
The following rules apply when writing a text message:

- ◆ Control the cursor with    .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key  to show the table of special characters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

You can call up the table of special characters when writing an SMS (depending on base station) using the  key. Select the required character and insert it with **Insert**.

Writing an SMS/name (without predictive text)

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

 

Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

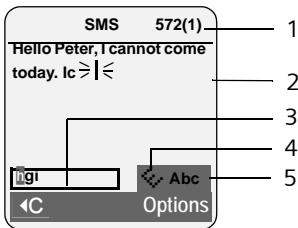
You can see in the display whether upper case, lower case or digits is selected.

Writing an SMS (with predictive text)

 
Your base station **must** support SMS for this.

 
EATONI predictive text helps you when you are writing text messages.

Each key between  and  is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.



- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the hash key  repeatedly until the required letter is reverse-highlighted on the display line and copied into the text panel.


If you press and **hold** the hash key  you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

Deactivating/activating predictive text

Precondition: You are writing a text message.

Options Press the display key.

Predictive Text

Select and press **OK** ( = on).



Press the end call key **briefly** to return to the text panel.

Enter the text.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Accessories

Data Cable DCA-500

For connecting your phone to the serial RS232 interface of your computer.

Data Cable USB DCA-510

For connecting your phone to the USB interface of your computer.

All accessories and battery packs are available from your mobile phone retailer.



Only use original accessories. This will avoid possible health risks and damage, and also ensure that all the relevant regulations are complied with.

Index

A

Accessories	31
Acknowledge tones	22
Activating	
advisory tones	22
appointment	23
auto answer	18
handset	9
keypad lock	9
Activating Bluetooth mode	24
Adjusting	
loudspeaker volume	19
Advisory tones	22
Alarm clock	22
Alert tone	20
Anniversaries	14
activating/deactivating	23
deactivating	14
deleting	23
do not accept	24
managing	23
storing in directory	14
Appointment/anniversary	
displaying missed	24
Appointments	23
activating/deactivating	23
deleting	23
managing	23
Assign digit key	16
Assign key	16
Authorisation	27
Auto answer	8, 18
Automatic redial	16

B

Backlight	18
Battery pack	
charging	1, 7
display	1, 7
icon	1, 7
inserting	5
recommended battery pack	27
tone	22
Birthday, see anniversary	
Bluetooth	
answering a call	8
changing device name	25

deregistering devices	25
list of known devices	25
registering devices	24
transferring directory (vCard)	13
voice dialling	15
Bluetooth connection	
setting own dialling code	20

C

Calendar	23
Call	
answering	8
answering (Bluetooth)	8
ending	8
external	8
internal	9
Call acceptance	18
Call duration	8
Call-by-call list	11
key	1
numbers	12
Calling	
external	8
Care of the telephone	26
Changing	
display language	17
ringtone	19
Changing device name	
(Bluetooth)	25
Charge status display	7
Charging cradle	
setting up	5
CLIP picture	12, 20
Confirmation tone	22
Control key	1, 9
Correcting incorrect input	11
Customer Care	27

D

Deactivating	
advisory tones	22
appointment	23
appointment reminder	23
auto answer	18
handset	9
keypad lock	9
Delete key	10
Deleting	
characters	11
voice pattern	15

- Deregistering devices (Bluetooth) 25
- Dialling
 - call-by-call list 12
 - directory 12
 - Quick dial 16
 - voice dialling 15
 - with quick dial 13
- Dialling code
 - setting own dialling code 20
- Dialling pause
 - entering 1
- Directory 11
 - copying number from text 14
 - managing entries 12
 - opening 10
 - order of entries 30
 - saving entry 12
 - sending entry/list to handset 13
 - storing anniversary 14
 - transferring a vCard (Bluetooth) . . . 13
 - using to enter numbers 14
- Display
 - backlight 18
 - changing display language 17
 - contrast 17
 - in idle status 10
 - memory (directory/call-by-call) 13
 - memory (My stuff) 21
 - missed appointments/anniversaries 24
 - screensaver 18
 - setting 17
 - wrong language 17
- Display keys 1, 10
 - assign 16
- E**
- Earpiece mode 9
- Earpiece volume 19
- EATONI (predictive text) 30
- ECO DECT 11
- Eco mode 11
- E-mail address
 - copying from the directory 14
- End call key 1, 8
- Ending, call 8
- Ending, see deactivate
- Entry
 - selecting (menu) 28
 - selecting from directory 12
- Error tone 22
- Example
 - menu input 28
 - multiple line entry 29
- G**
- Group call 9
- H**
- Handset
 - activating/deactivating 9
 - advisory tones 22
 - backlight 18
 - contact with liquid 26
 - display language 17
 - idle status 10
 - list 10
 - loudspeaker volume 19
 - muting 9
 - operating and charging times 27
 - registering 6
 - restoring to factory settings 26
 - screensaver 18
 - setup 5
 - signal strength 5
- Handset charging times 27
- Handset operating time 27
- Handset settings 16
- Handsfree
 - key 1
- Handsfree talking 8
- Hash key 1, 9
- Hearing aids 3
- Hold music 9
- I**
- Icon
 - alarm clock 22
 - battery pack 7
 - display 10
 - keypad lock 9
 - ringtone 20
- Idle status (display) 10
- Idle status, returning to 10
- Incorrect input (correction) 11
- Internal
 - making calls 9
- Internal call 9

K

Key 1 (fast access) 1
 Keypad lock. 9
 Keys
 call-by-call key 1
 control key. 1, 9
 delete key 10
 display keys 1, 10
 end call key 1, 8
 fast access 1
 handsfree key 1
 hash key 1, 9
 message key 1
 On/Off key. 1
 quick dial. 13
 recall key 1
 star key 1, 20
 talk key 1, 8

L

Language, display 17
 Last number redial 16
 Liquid 26
 List 11
 Call-by-call list 11
 handsets 10
 known devices (Bluetooth) 25
 last number redial 16
 Lock
 activating/deactivating keypad lock. . 9
 Loudspeaker volume 19

M

Mains adapter 3
 Making calls
 answering a call 8
 external. 8
 internal 9
 Manual last number redial 16
 Medical appliances 3
 Memory
 directory/call-by-call 13
 My stuff. 21
 Menu
 end tone 22
 menu guidance 10
 menu input 28
 opening. 10
 Message key 1
 opening lists 16

Microphone 1
 Missed
 anniversary. 24
 appointment. 24
 Multiple line entry 29
 Muting handset 9
 My stuff 20

N

Network provider (number list) 12
 Number
 adding to directory 14
 copying from the directory 14
 entry using directory. 14
 saving in directory. 12
 Number list
 network provider. 12

O

On/Off key 1
 Opening lists 16
 Order of entries in directory 30

P

Pack contents. 5
 Picture
 deleting 21
 renaming 21
 Playing back
 voice pattern. 15
 Predictive text 30

Q

Questions and answers. 26
 Quick dial. 11, 16

R

Range 5
 Recall key. 1
 Recording
 voice pattern. 15
 Registering (handset) 6
 Registering devices (Bluetooth) 24
 Reminder call 14
 Ringtone
 changing 19
 setting 10
 setting melody 19
 setting volume 19

- S**
- Screensaver 18
 - Searching in directory 12
 - Sending
 - directory entry to handset 13
 - Service 27
 - Setting
 - screensaver 18
 - Setting date 7
 - Setting melody 19
 - Setting time 7
 - Setting up, charging cradle 5
 - Setup
 - handset 5
 - Signal beep, see Advisory tones
 - Signal strength 5
 - SIM card
 - setting own dialling code 20
 - Slumber mode 22
 - Sound
 - deleting 21
 - renaming 21
 - Sound see ringtone
 - Specifications 27
 - Star key 1, 20
- T**
- Talk key 1, 8
 - Troubleshooting 26
- V**
- Vibrating alarm 20
 - VIP (directory entry) 13
 - Voice dialling 15
 - Bluetooth 15
 - Voice pattern (for voice dialling)
 - deleting 15
 - playing back 15
 - recording 15
 - Volume
 - earpiece 19
 - handset loudspeaker 19
 - loudspeaker 19
 - ringtone 19
 - setting 19
- W**
- Warning beep, see Advisory tones
 - Writing, editing text 29