

# SIEMENS



## Gigaset S67H

Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.

[www.gigaset.com](http://www.gigaset.com)

# Gigaset

# The handset at a glance



- 1 **Display (screen)** in idle status
- 2 **Charge status of the batteries**  
 [Battery icon] (flat to full)  
 [Battery icon] flashes: batteries almost flat  
 [Battery icon] flashes: batteries charging
- 3 **Display keys** (page 9)
- 4 **Message key**  
 Access to calls and message lists;  
 Flashes: new message or new call
- 5 **End call key, On/Off key**  
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
 Keypad lock on/off (press and hold in idle status);  
 Toggle between upper/lower case and digits (press and hold)
- 7 **Call-by-call list key**  
 Open call-by-call list
- 8 **Microphone**
- 9 **Recall key**  
 - Confer (flash)  
 - Insert a dialling pause (press and hold)
- 10 **Star key**  
 Ringer tones on/off (press and hold);  
 With an open connection: switch between dial pulsing/touch tone dialling (press briefly)  
 Open special characters table
- 11 **Key 1**  
 Dial network mailbox (press and hold)
- 12 **Connection socket** for headset
- 13 **Talk key**  
 Answer a call, open last number redial list (press briefly), start dialling (press and hold);  
 When writing an SMS: send SMS
- 14 **Handsfree key**  
 Switch between earpiece and handsfree mode;  
 Lights up: handsfree activated;  
 Flashes: incoming call
- 15 **Control key** (page 9)
- 16 **Signal strength**  
 [Signal strength icons] (high to low)  
 [Signal strength icon] flashes: no reception

# Contents

<b>The handset at a glance</b>	<b>1</b>
<b>Safety precautions</b>	<b>3</b>
<b>Gigaset S67H – More than just a telephone</b>	<b>5</b>
<b>First steps</b>	<b>5</b>
Pack contents	5
Installing the base station and charging cradle	5
Setting up the handset for use	6
<b>Operating the handset</b>	<b>9</b>
Control key	9
Display keys	9
Reverting to idle status	10
Menu guidance	10
Correcting incorrect entries	11
<b>ECO DECT</b>	<b>11</b>
<b>Making calls</b>	<b>11</b>
Making an external call	11
Ending a call	11
Accepting a call	11
Handsfree talking	11
Muting	12
Making internal calls	12
<b>Using the directory and lists</b>	<b>12</b>
Directory/call-by-call list	12
Last number redial list	16
Opening lists with the message key	16
<b>Using a handset as a room monitor</b>	<b>16</b>
<b>Handset settings</b>	<b>18</b>
Shortcuts for functions and numbers	18
Changing the display language	19
Setting the display	19
Setting the screensaver	19
Setting the display backlight	19
Activating/deactivating auto answer	20

Changing the handsfree/ earpiece volume	20
Changing ringer tones	20
My stuff	21
Activating/deactivating advisory tones	22
Setting the alarm clock	23
Setting an appointment (calendar)	23
Displaying missed appointments and anniversaries	24
Setting your own area code	25
Restoring the handset to the factory settings	25
<b>Appendix</b>	<b>25</b>
Care	25
Contact with liquid	25
Questions and answers	26
Service (Customer Care)	27
Authorisation	28
Specifications	28
<b>Notes on the user guide</b>	<b>29</b>
Example of a menu input	29
Example of multiple line input	29
Writing and editing text	30
<b>Accessories</b>	<b>31</b>
<b>Index</b>	<b>32</b>

# Safety precautions

---

## Warning:

Read the safety precautions and the user guide before use.

Explain their contents and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station or charging cradle.



Only use the **recommended, rechargeable batteries** (page 28), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, which you can find out about by contacting your local authority or the dealer you purchased the product from.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (page 25).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please take defective base stations out of operation or have them repaired by Service, as they could interfere with other radio services.

## Safety precautions



All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

**Please note:**

Not all of the functions described in this manual are available in all countries.

## Gigaset S67H – More than just a telephone

---

Your phone, which has a clearly laid out colour display (65K colours), doesn't just offer you the option of saving up to 250 phone numbers and e-mail addresses (page 12) – it can do much more besides:

- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 18).
- ◆ You can designate important people as VIPs so you can tell important calls from the ringer tone (page 13).
- ◆ You can assign pictures to your contacts. You can then tell who is calling you from the picture on your handset's display.  
Precondition: Calling Line Identification
- ◆ You can save appointments (page 23) and anniversaries (page 15) in your phone and it will remind you of them in advance.

**Enjoy using your new telephone!**

## First steps

---

### Pack contents

---

- ◆ one Gigaset S67H handset,
- ◆ one charging cradle with mains adapter,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

### Installing the base station and charging cradle

---

The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

**Please note:**

- ◆ Never expose the handset to the following influences: heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

### Range and reception strength

---

**Range:**

- ◆ Outdoors: up to 300 m
- ◆ Indoors: up to 50 m

**Reception strength:**

The display shows the quality of the radio contact between the base station and handset:

- ◆ Good to poor:    
- ◆ No reception:  flashes

## Setting up the handset for use



The display is protected by a plastic film. **Please remove the protective film!**

Instructions on how to connect the charging cradle and mount it on the wall (if required) can be found at the end of this user guide.

## Inserting the batteries

### Warning:

Use only the rechargeable batteries recommended by Gigaset Communications GmbH\* (page 28). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. For example, the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

\*Gigaset Communications GmbH is a trademark licensee of Siemens AG.


- ▶ Insert the batteries the right way round (see figure).  
The polarity is indicated in/on the battery compartment.



## Closing the battery cover

- ▶ First, align the notches on the side of the battery cover with the protrusions on the inside of the housing.


- ▶ Then press the cover until it clicks into place.

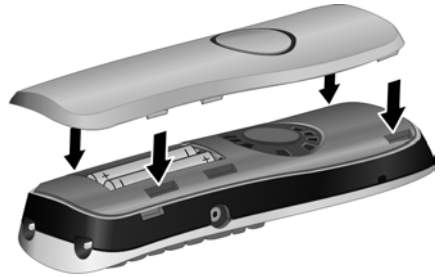

## Attaching the belt clip


There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.

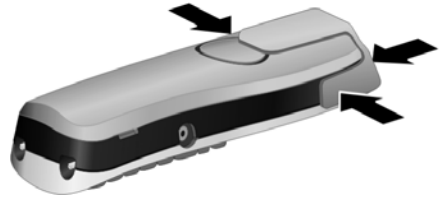

## Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Place your fingertip in the cavity on the casing and pull the battery cover upwards.

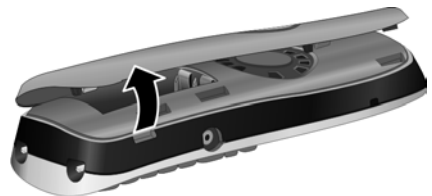

## Registration

---

Before you can use your Gigaset S67H you must register it to a base station. It can be registered to a maximum of four base stations. The actual registration procedure will depend on the type of base station.

### Automatic registration of Gigaset S67H to Gigaset S670/675

**Precondition:** The handset must not yet have been registered to a base station.

The handset is automatically registered to the Gigaset S670/675 base station.

- ▶ Place the handset in the base station with its **display facing forward**.

Registration can take up to 5 minutes. During this process, **Regstr.Procedure** appears in the display and the name of the base station flashes, e.g. **Base 1**. When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset is assigned the lowest available internal number (1–6). If all internal numbers 1–6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

#### Please note:

- Automatic registration is not possible when the base station to which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.

### Manual registration Gigaset S67H


If the handset does not activate automatically when the batteries are fitted, you must first charge the batteries.


You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number appears in the display, e.g. **INT 1**. If it does not appear, repeat the procedure.

#### On the handset

 →  → **Handset** → **Register H/Set**

 Select base station, e.g. **Base 1** and press **OK**.

 Enter the system PIN of the base station (the default is 0000) and press **OK**. You will, for example, see **Base 1** flashing in the display.

#### On the base station

Within 60 sec. press and **hold** the registration/paging key on the base station (approx. 3 sec.).

### Headset socket

---


You can connect various headset types (with 2.5 mm jack connector), including: HAMA Plantronics M40, MX100 and MX150.

A compatibility list of tested headsets can be found on the Internet at [www.plantronics.com/productfinder](http://www.plantronics.com/productfinder).



## Charging batteries

- ▶ Plug the mains adapter of the charging cradle into a mains power socket.
- ▶ Place the handset in the cradle with the display facing forward.

To charge the batteries, leave the handset in the charging cradle. If the handset is activated, the flashing battery icon  in the top right of the display indicates that the batteries are being charged. During handset operation, the battery icon indicates the charge status of the batteries (page 1).

### Initial charging and discharging of batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **without interruption** for **nine** hours. Your handset need not be turned on for it to charge.
- ▶ Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged.

#### Please note:

- The handset should only be placed in a base station or charging cradle that is designed for it.
- If the handset has turned itself off because the batteries are flat and if it is then placed in the charging cradle, it will turn itself on automatically.
- After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.

#### Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.



- ◆ After a while the charge capacity of the batteries will decrease for technical reasons.

## Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm and the calendar can be used.

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field with:

 →  → Date/Time

- ▶ Change multiple line input:

Date:

Enter the day, month and year in 8-digit format.

Time:


Enter hours and minutes as 4 digits (e.g.     for 07:15 a.m.

**Save**

Press the display key

## Display in idle status

If the phone is registered and the time has been set, the idle display is as follows, depending on the base station (example):

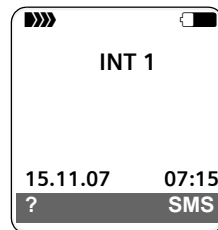


### Your phone is now ready for use.


 
If you have any queries about using your phone, please read the tips on troubleshooting ("Questions and Answers", page 26) or contact our customer service department (Customer Care, page 27).

# Operating the handset

## Activating/deactivating the handset


-  In idle status, press and **hold** the end call key (confirmation tone).

## Activating/deactivating the keypad lock

-  Press and **hold** the hash key. You will hear the confirmation tone. The  icon appears in the display when the keypad lock is activated. The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.





## Control key






 
In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:





### When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (page 20), ringer tones (page 20) and advisory tones (page 22).




### In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

### In lists and submenus


-  /  Scroll up/down line by line.
-  Open the submenu or confirm the selection.
-  Go back one menu level or cancel.

### During an external call

-  Open the directory.
-  Initiate internal consultation call and mute.
-  Change the earpiece volume or handsfree volume.



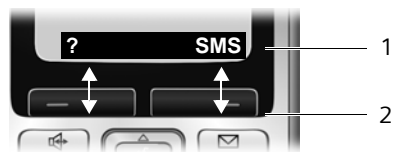


## Display keys

The function of the display keys changes depending on the particular operating situation. Example:

 





- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

The most important display icons are:


-  Left display key, as long as it has not been assigned a function (page 18).
-  Open the main menu.
-  Open a context-dependent menu.
-  Delete key: deletes one character at a time from right to left.
-  Go back one menu level or cancel operation.

## Operating the handset

-  Fetch e-mail address from the directory.
-  Copy number into directory.
-  On base stations with integrated answer machines: divert external call to answer machine.
-  Open the last number redial list.

## Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.


Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

## Menu guidance


Your telephone's functions are accessed using a menu that has a number of levels.

### Main menu (first menu level)

- ▶ Press  with the handset in idle status to open the main menu.

The main menu functions are shown in the display with colour icons and names.


To access a function, i.e. to open the corresponding submenu (next menu level):


- ▶ Navigate to the function using the control key . The name of the function is displayed in the display header. Press the **OK** display key.

## Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.



**Briefly** press the end call key  once to return to the previous menu level / cancel the operation.

## Illustration in the user guide


The operating steps are shown in abbreviated form.



### Example


The illustration:

 →  → Date/Time


 
means:

 Press the key to display the main menu.

 Use the control key  to scroll through submenu **Settings** and press **OK**.

**Date/Time** Scroll to the function with the control key  and press **OK**.

### Other types of illustrations:

 /  /  etc.

Press the matching key on the handset.



Enter digits or letters.

You will find detailed examples of menu entries and multiple line input in the appendix to this user guide, page 29.

## Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **<C>** to delete the character to the left of the cursor
- ◆ insert characters to the left of the cursor
- ◆ overwrite the character (flashing) when entering the time and date etc.

## ECO DECT


 
ECO DECT reduces power consumption by using an energy efficient power supply .

Your handset also reduces the transmission power depending on the distance to the base station.




## Making calls


### Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.


You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.


#### Please note:

Dialling using the directory, call-by-call list (page 1, page 12) or last number redial list (page 16) saves time re-entering numbers and network provider access codes ("call-by-call numbers").


 
## Ending a call

 Press the end call key.

## Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 20), the handset will take a call automatically when you lift it out of the cradle.



If the ringer tone is intrusive, press the **Silence** display key. You can take the call as long as it is displayed on the screen.

## Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you, to allow others to participate in the call.


### Activating/deactivating handsfree mode

#### Activating while dialling

  Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.



#### Switching between earpiece and handsfree mode

 Press the handsfree key.

Activate/deactivate handsfree during a call.

## Using the directory and lists



If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base station. If the handsfree key  does not light up, press the key again.

For how to adjust the handsfree volume see page 20.

## Muting



You can deactivate the microphone in your handset during an external call. The other party hears hold music.

-  Press the control key on the left to mute the handset.
-  Press the display key to reactivate the microphone.




## Making internal calls

Internal calls to other handsets registered on the same base station are free.


 
### Calling a specific handset

-  Initiate internal call.
-  Enter the number of the handset.


Or:

-  Initiate internal call.
-  Select handset.
-  Press the talk key.

### Calling all handsets ("group call")

-  Initiate internal call.
-  Press the star key. All handsets are called.

### Ending a call

-  Press the end call key.

## Using the directory and lists

You can save a total of 250 entries in the directory and call-by-call list.

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 14).

 
## Directory/call-by-call list

### Please note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

## Directory

In the **directory** you can save

- ◆ Up to three numbers and associated first names and surnames,
  - ◆ VIP designation and VIP ringer tone (optional),
  - ◆ E-mail address (optional),
  - ◆ CLIP pictures (optional),
  - ◆ Anniversaries with reminder.
- ▶ With the handset in idle status, open the directory by pressing the  key.

### Length of the entries (directory)

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 60 characters

## Call-by-call list

---

The **call-by-call list** is used to store the access codes for network providers ("Call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

### Length of entries

Number: max. 32 digits  
Name: max. 16 characters

## Saving a number in the directory

---

 → New Entry

- ▶ Change multiple line input:

First Name / Surname:

Enter a name in at least one of the fields.

Phone (Home) / Phone (Office) / Phone (Mobile)

Enter a number in at least one of the fields.

E-mail

Enter e-mail address.

Annivers.:

Select On or Off.

With setting On:

Enter Anniversary (Date) and Annivers. (Time) (page 15) and select reminder type: Annivers. (Signal).

Caller Picture

If required, select a picture to be displayed when the caller calls (page 21).

Precondition: Calling Line Identification (CLIP).

### Please note:

Please visit our website at [www.gigaset.com/customercare](http://www.gigaset.com/customercare) to find out if your handset supports this feature.

- ▶ Save changes: (page 30).

## Saving a number in the call-by-call list

---

 → New Entry

- ▶ Change multiple line input:

Name:

Enter name.

Number:

Enter number.

## Order of directory/call-by-call list entries

---

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.



The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters



To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

## Selecting entries in the directory and call-by-call list

---





 /  Open the directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name (in the directory: first character of the surname or of the first name if **only** the first name has been entered), or scroll to the entry using .

## Dialling with the directory/call-by-call list

---

-  /  →  (select entry)
-  Press the talk key. The number is dialled.

## Managing entries in the directory/call-by-call lists

---

-  /  →  (select entry)

### Viewing entries

- View** Press the display key. The entry is displayed. Back with **OK**.


### Editing entries

- View** **Edit** Press display keys one after the other.



- ▶ Carry out changes and save.

### Using other functions

-  /  →  (select entry)
- **Options** (open menu)

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press  →  after the number is displayed.

#### Edit Entry

Edit selected entry.

#### Delete Entry

Delete selected entry.

#### VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringer tone to it. You can then recognise important calls from the ringer tone.

**Precondition:** Calling Line Identification.

#### Copy Entry

Send a single entry to a handset (page 14).

#### Delete List

Delete **all** entries in the directory/call-by-call list.

#### Copy List

Send complete list to a handset (page 14).

#### Available Memory

Display the available entries in the directory and call-by-call list (page 12).

## Using quick dial keys

---




- ▶ Press and **hold** the required quick dial key (page 18).


## Sending the directory/call-by-call list to another handset

---

### Preconditions:

- ◆ The sending and receiving handsets must both be registered on the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

-  /  →  (select entry)
- **Options** (open menu) → Copy Entry / Copy List → to Internal

-  Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the Copy next entry? prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

### Please note:

You can also send the complete **directory** via data transfer, without opening the directory:

-  →  → Data Transfer → Directory

**Please note:**

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

**Copying a displayed number to the directory**

You can copy numbers displayed in a list, e.g. the call history or the last number redial list, in an SMS (depending on the base station) or during a call to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the Name line.

A number is displayed:




**Options** → Copy to Directory


- ▶ Complete the entry, see page 13.

While the number is being transferred from the answer machine list (depending on the base station), the message playback is interrupted.

**Copying a number or e-mail address from the directory**

In many operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



- ▶ Depending on the operating situation, open the directory with  or  or  Directory.

 Select an entry (page 13).


**Saving an anniversary in the directory**


For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (delivery status: Annivers.: Off).

Anniversaries are automatically recorded in the calendar (page 23).

 →  (select entry; page 13)

**View** **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

 Select On.

- ▶ Change multiple line input:

**Anniversary (Date)**

Enter day/month/year in 8-digit format.

**Annivers. (Time)**



Enter the hour/minute for the reminder call in 4-digit format.

**Annivers. (Signal)**


Select the type of signal for the reminder.


- ▶ Save changes: (page 30).

**Deactivating anniversaries**

 →  (select entry; page 13)

**View** **Edit** Press the display keys one after the other.

 Scroll to the Annivers.: line.

 Select Off.

**Save** Press the display key.

**Reminder call on an anniversary**

A reminder call is signalled on the handset using the selected ringer tone.

You now have the following options:

**SMS** Write an SMS

**OFF** Press the display key to acknowledge and end the reminder call.



## Using a handset as a room monitor

### Viewing missed anniversaries


In idle status, you are reminded of an elapsed and unacknowledged anniversary by the **one-off** display of **Appoint.**

► View appointment:

**Appoint.** Press the display key.

You now have the following options:

**SMS** Write an SMS (depending on base station).

**Delete** Delete reminder.  
After deleting, press the display key  or **Go Back:**  
Back in idle status, **Appoint.** is no longer displayed.

You can also view missed anniversaries afterwards (see page 24).

 


### Last number redial list

---

The last number redial list contains the 20 numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory or in the call-by-call list, the corresponding name will be displayed.

#### Manual last number redial

 

---


-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again.  
The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the **View** display key.

#### Managing entries in the last number redial list

---

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

 
The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 12).

#### Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.

- Called party answers: press the Talk key . The function is ended.
- Called party does not answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.


Display Number (as in the directory, page 14)


Delete Entry (as in the directory, page 14)

Delete List (as in the directory, page 14)

### Opening lists with the message key

---

An advisory tone sounds as soon as a **new message** arrives in a list. The message key  flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message.

If you press the message key , you access the lists that contain new messages.

## Using a handset as a room monitor

---

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor mode remains activated.

### Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answer machine.

## Activating the room monitor and entering the number to be called


 →  → Room Monitor


- ▶ Change multiple line input:

Room M.:

Select On to activate.

Call to:

**External number:** Select the number from the directory (press display key ) or enter it directly. Only **the last 4 digits** are displayed.



**Internal number:** **Options** → INT → **OK** →  (select handset or Call All if all registered handsets are to be called) → **OK**.


Level:

Set noise level sensitivity (Low or High).

- ▶ Press **Save** to save the settings.

## Changing the set destination number

 →  → Room Monitor

 Scroll to the Call to: line.

 
 or **Delete**

Delete existing number.

- ▶ Enter and save number as described in "Activating the room monitor and entering the number to be called" (page 17).

## Deactivating the room monitor remotely

**Preconditions:** The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer tone) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save**.

## Handset settings

---

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

### Shortcuts for functions and numbers

---

You can assign the left display key and each of the digit keys **0+** and **2 abc** to **9 wxyz** a number or a function. The right display key has a function pre-selected by default. You can change the function assigned.

The number is then dialled or the function started by simply pressing a key.

#### Assigning a digit key/left display key

---

**Precondition:** The digit key or the left display key has not yet been assigned a number or a function.

- ▶ Press the **?** display key or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

##### Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

##### Room Monitor

Assign key to the menu for setting and activating the room monitor.

##### Alarm Clock

Assign key to the menu for setting and activating the alarm clock (see page 23).

##### Calendar

Open calendar/enter new appointment.

##### More Features...

Depending on your base station, further key assignments are also possible.

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.

#### Starting the function, dialling the number

---

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

#### Changing key assignments

---

##### Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 18).

##### Digit key

- ▶ Press the digit key **briefly**.

 
**Change** Press the display key. The list of possible key assignments is displayed.


- ▶ Proceed as is described when first assigning the key with a shortcut (page 18).


## Changing the display language

You can view the display texts in different languages.





 →  → Handset → Language


The current language is indicated by .

 Select a language and press **OK**.

 Press and **hold** (idle status).



If you accidentally choose a language you do not understand:

     
Press keys in sequence.

 Select the correct language and press **OK**.


 
## Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → Display

Colour Scheme

Select and press **OK**.


 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.

 
**Save** Press the display key.

 Press and **hold** (idle status).

## Setting the screensaver

You can set a picture from the Resource Dir. (page 21) to be displayed as a screensaver when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screen Saver menu option is marked with .

 →  → Display → Screen Saver

The current setting is displayed.

▶ Change multiple line input:

 
Activation:

Select **On** (screensaver is displayed) or **Off** (no screensaver).

Selection:


If required, change the screensaver (see below).

▶ Save changes: (page 30).

If the screensaver conceals the display, **briefly** press  to show the idle display with time and date.


## Changing the screensaver

 →  → Display → Screen Saver

 Scroll to the Selection line.

**View** Press the display key.

The active screensaver is displayed.

 Select screensaver and press **Change**.

▶ Save changes: (page 30).

## Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If the base station is turned on, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select **On** or **Off**.

Without Charger

Select **On** or **Off**.

**Please note:**

With the **On** setting, the standby time of the handset can be significantly reduced.

## Handset settings

**Save**

Press the display key.



Press and **hold** (idle status).

## Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key



→ → Handset

Auto Answer

Select and press **OK** ( = on).



Press and **hold** (idle status).

## Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels.

In idle status:



→ Handset Volume



Set the earpiece volume.



Scroll to the Handsfree Volume line.



Set the handsfree volume.

**Save**

Press display key if necessary to save the setting.

Setting the volume during a call:



Press the control key.



Set the volume.

The setting will automatically be saved after approx. 3 seconds or press the display key **Save**.

If is assigned to another function, e.g. toggling:

**Options**

Open menu.

Volume

Select and press **OK**.

Configure setting (see above).

 
**Please note:**

You can also set the call volume, ringer tones and advisory tones using the menu.

## Changing ringer tones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring =



◆ Ringer tones:

You can select various ringer tones, melodies or any sound from My stuff (page 21).

You can set different ringer tones for the following functions:

◆ Ext. Calls: for external calls

◆ Internal Calls: for internal calls

◆ Appointments: for set appointments (page 23)

◆ All: the same ringer tone for all functions

## Settings for individual functions

Set the volume and melody depending on the type of signalling required.

In idle status:



→ Ringer Settings



Select setting, e.g. Ext. Calls and press **OK**.



Set volume (1–6).



Scroll to the next line.



Select melody.

**Save**

Press the display key to save the setting.

In idle status, you can also open the menu Ringer Settings by pressing **briefly**.

## Same ringer tone for all functions

In idle status:

 → Ringer Settings → All

▶ Set volume and ringer tone (see "Settings for individual functions").

**Save** Press the display key to confirm the prompt.

 Press and **hold** (idle status).

### Please note:

You can also set the call volume, ringer tones and advisory tones using the menu.

## Activating/deactivating the ringer tone


You can deactivate the ringer tone on your handset before you answer a call or when the handset is in idle status; the ringer tone can be deactivated permanently or just for the current call. The ringer tone cannot be re-activated while an external call is in progress.

### Deactivating the ringer tone permanently

 Press and **hold** the star key.

The  icon appears in the display.

### Re-activating the ringer tone


 Press and **hold** the star key.

 
### Deactivating the ringer tone for the current call

**Silence** Press the display key.

## Activating/deactivating the alert tone





In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer tone.

 Press and **hold** the star key and **within 3 seconds**:

**Beep** Press the display key. A call will now be signalled by **one** short alert tone. You will now see  in the display.


## My stuff

My stuff on the handset manages sounds, which you can use as ringer tones, and pictures (CLIP pictures and screensavers), which you can use as caller pictures or as screensavers. Precondition: Calling line identification (CLIP). My stuff can manage the following media types:



Icon	Sound	Format
	Ringer tones	Standard
	Monophonic	Standard
	Polyphonic	.mid
	Picture (CLIP picture, screensaver)	BMP (128 x 100 or 128 x 160 pixels)


The icon is displayed in front of the name in My stuff. Various mono- and polyphonic sounds and pictures are preconfigured on your handset.


You can listen to the available sounds and view the pictures.


The pre-configured pictures are labelled with . You cannot rename or delete them.

## Playing back sounds/viewing CLIP pictures

 →  → Screensavers / Caller Pictures / Sounds (select entry)


**Play / View** Press the display key. Sounds are played back or pictures are displayed. Press the  key to switch between entries.

**End /**  Press the display key. Playback of the sound or the display of the picture ends.

While you are playing back sounds, you can also interrupt playback with the  key.

 Press and **hold** (idle status).

## Handset settings

If you have saved a picture in an invalid data format, you will see an error message after selecting the entry. Cancel the operation with . Delete the picture with **Delete**.

### Sounds: Setting the volume

During playback:

**Volume** Press the display key.



Set volume.


**Save** Press the display key.

### Renaming/deleting a picture

---

You have selected an entry.

**Options** Open menu.

If a picture cannot be deleted () , these options are not available. Depending on the situation, you can select the following functions:

#### Delete Entry

The selected entry is deleted.

#### Delete List

All entries in the list that can be deleted are deleted.

#### Rename

Change the name (max. 16 characters) and press **Save**. The entry is saved with the new name.

## Activating/deactivating advisory tones

---

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

◆ **Key click:** Every key press is confirmed.

◆ **Acknowledge tones:**

- **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS (depending on the base station) or a new entry arrives in the call history
- **Error tone** (descending tone sequence): when you make an incorrect entry
- **Menu end tone:** when scrolling at the end of a menu

◆ **Battery tone:** The batteries need to be charged.

In idle status:



→ Advisory Tones

▶ Change multiple line input:

Key Tones:

Select On or Off.

Confirm.:

Select On or Off.

Battery:

Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call.

▶ Save changes: (page 30).

You cannot deactivate the confirmation tone for placing the handset in the base station.

#### Please note:

You can also set the call volume, ringer tones and advisory tones using the menu.

## Setting the alarm clock

---

**Precondition:** The date and time have already been set (page 8).

### Activating/deactivating the alarm clock and setting the wake-up time

---



► Change multiple line input:

Activation:

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Occurance:

Select Daily or Monday-Friday.

Volume:

Set the volume (1-6).

Melody:

Select melody.

► Save changes: (page 30).

You will see the icon.

A wake-up call with selected ringer tone (page 20) is signalled on the handset. The wake-up call sounds for 60 seconds. is shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone.

### Deactivating the wake-up call/ repeating after a pause (snooze mode)

---

**Precondition:** A wake-up call is sounding.

**OFF** Press the display key. The wake-up call is deactivated.

or

**Snooze** Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Setting an appointment (calendar)

---

You can have your handset remind you of up to 30 appointments (volume and melody, see page 20).

### Saving an appointment

---

**Precondition:** The date and time have already been set (page 8).



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are highlighted in black.)

The list of saved appointments for the day is displayed. If you have already saved 30 appointments, you must first delete an existing appointment.

<New Entry>

Select and press **OK**.

► Change multiple line input:

Appoint.:

Select On or Off.

Date:

Enter day/month/year in 8-digit format.

Time:

Enter hours/minutes in 4-digit format.

Notes:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

**Save** Press the display key.



Press and **hold** (idle status).

The appointment is marked with in the appointments list. The list of appointments is sorted by date.



## Handset settings

An appointment reminder is signalled with the selected ringer tone (page 20). The appointment reminder sounds for 60 seconds. The entered text, date and time are displayed.

During a call, the appointment reminder is signalled by a short tone.

## Managing appointments

---



Select the day in the graphical calendar and press **OK**. (Days on which appointments have already been saved are high-lighted in black in the calendar.)



Select appointment for the day.

### Options

Open menu  
Back with **↶**.

You have the following options:

### View Entry

View selected appointment.  
Open the **Options** menu for editing, deleting and activating/deactivating.

### Edit Entry

Edit selected appointment.

### Delete Entry

Delete selected appointment.

### Activate / Deactivate

Activate/deactivate the selected appointment.

### Delete List

Delete **all** appointments.

## Deactivating or accepting an appointment reminder

---

**Precondition:** An appointment reminder is sounding.

### OFF

Press the display key to deactivate the appointment reminder.

Or:

### SMS

Press the display key to answer the appointment reminder with an SMS (depending on base station).

## Displaying missed appointments and anniversaries

---

Missed appointments/anniversaries (page 15) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (page 16).

The most recent entry is at the head of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.**. Pressing the display key will also open the **Missed Alarms** list.

To open the list from the menu:

→ **Missed Alarms**

Select appointment/anniversary.  
Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

### Delete

Delete appointment.

### SMS

Write an SMS



Press and **hold** (idle status).

If 10 entries are already saved in the list, the next appointment reminder will delete the oldest entry.

## Setting your own area code

In order to transfer phone numbers (e.g. vCard), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already pre-set.

 →  → Handset → Area Codes

Check that the (pre)set area code is correct.

▶ Change multiple line input:



Select/change input field.



Navigate in the input field.



If necessary, delete number: press the display key.




Enter number.



Press the display key.

**Example:**

Area Codes	
International code:	
0000 - 49	
Local area code:	
0 - [ 89 ]	
	Save

## Restoring the handset to the factory settings

You can reset any individual settings and changes that you have made. Entries in the directory, the call-by-call list, the call history, the SMS lists (depending on base station) and the handset's registration to the base station as well as the content of My stuff are retained.

 →  → Handset → Reset Handset



Press the display key.



Press and **hold** (idle status).

## Appendix

### Care

▶ Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause a build up of static.

### Contact with liquid

If the handset has come into contact with liquid:


 

1. **Turn the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not turn on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Questions and answers

---

If you have any questions about using your handset, visit us at any time at [www.gigaset.com/customercare](http://www.gigaset.com/customercare). The table below contains a list of common problems and possible solutions.

<p><b>The display is blank.</b></p> <ol style="list-style-type: none"><li>1. The handset is not turned on.<ul style="list-style-type: none"><li>▶ Press <b>and hold</b> the end call key .</li></ul></li><li>2. The battery is flat.<ul style="list-style-type: none"><li>▶ Charge or replace the batteries (page 6).</li></ul></li></ol>
<p><b>The keys of a handset do not respond when pressed.</b></p> <p>The keypad lock is activated.</p> <ul style="list-style-type: none"><li>▶ Press and <b>hold</b> the hash key  (page 9).</li></ul>
<p><b>"Base station x" flashes on the display.</b></p> <ol style="list-style-type: none"><li>1. The handset is outside the range of the base station.<ul style="list-style-type: none"><li>▶ Move the handset closer to the base station.</li></ul></li><li>2. The handset has been deregistered.<ul style="list-style-type: none"><li>▶ Register the handset (page 7).</li></ul></li><li>3. The base station is not turned on.<ul style="list-style-type: none"><li>▶ Check the base station mains adapter.</li></ul></li></ol>
<p><b>Base Search flashes in the display.</b></p> <p>The handset is set to Best Base and no base station is turned on or within range.</p> <ul style="list-style-type: none"><li>▶ Move the handset closer to the base station.</li><li>▶ Check the base station mains adapter.</li></ul>
<p><b>Handset does not ring.</b></p> <p>The ringer tone is deactivated.</p> <ul style="list-style-type: none"><li>▶ Activate the ringer tone (page 21).</li></ul>
<p><b>The other party cannot hear you.</b></p> <p>You have pressed the  (INT) key. The handset is "muted".</p> <ul style="list-style-type: none"><li>▶ Switch on the microphone again (page 12).</li></ul>
<p><b>You hear an error tone when keying an input</b> (a descending tone sequence).</p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"><li>▶ Repeat the operation.<ul style="list-style-type: none"><li>Watch the display and refer to the user guide if necessary.</li></ul></li></ul>

## Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

<http://www.gigaset.com/customer-care>

This site can be accessed at any time wherever you are. It will give you 24/7 support for all our products. It also a list of FAQs and answers plus user guides for you to download. You will also find frequently asked questions and answers in the **Questions and Answers** section of this user guide in the appendix.

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi.....	97 12 62 23 800	Malaysia.....	603 77124304
Argentina.....	0800-888-9878	Malta.....	+353 21 4940 632
Australia.....	1300 665 366	Mexico.....	01 80 07 11 00 03
Austria .05 17 07 50 04 (0,065 Euro/Min.)		Netherlands	
Bahrain.....	97 31 73 11 173	.....	.0900-3333102 (0,25 Euro/min.)
Belgium.....	0 78 15 66 79	New Zealand.....	08 00 27 43 63
Bosnia Herzegovina.....	033 276 649	Norway.....	22 70 84 00
Brazil.....		Oman.....	96 82 47 09 281
Grande Capitais e Regiões Metropolitanas:		Poland.....	0 801 140 160
.....	4003 3020	Portugal.....	808781223
.....	(US\$ 0,59)	Romania.....	02 12 04 60 00
Demais localidades:.....	0800 707 1248	Russia.....	8 (495) 228 1312
.....	(US\$ 0,59)	Serbia.....	01 13 07 00 80
Bulgaria.....	02 873 94 88	Singapore.....	62 27 11 18
Canada.....	701-355-3984	Slovak Republic	
China.....	0 21 400 670 6007	.....	02 59 68 22 66
Croatia.....	016 10 53 81 (0,23 Kun)	Slovenija.....	0 14 74 63 36 (6,30 Tolar)
Czech Republic.....	233 032 727	South Africa.....	08 60 10 11 57
Denmark.....	35 25 86 00	Spain.....	902 103935
Dubai.....	97 14 39 69 944	Sweden.....	08 750 99 11
Egypt.....	202 7623441	Switzerland	
Finland.....	09 23 11 34 25	.....	0848 212 000 (0,08 SFr./Min.)
France.....	01 56 38 42 00	Taiwan.....	02 23 96 10 06
Germany.01805 333 222 (0,14 Euro/Min.)		Thailand.....	02 722 1118
Greece.....	801 11 11 11 6 (0,026 Euro)	Turkey.....	0 21 64 59 98 59
Hungary.....	06 14 71 24 44 (27 Ft)	Ukraine.....	+380-44-451-71-72
Ireland.....	18 50 77 72 77	United Arab Emirates.....	0 43 66 03 86
Italy.....	199 15 11 15	United Kingdom.....	0 84 53 67 08 12
Kuwait.....	96 52 44 4200	USA.....	1-866 247-8758
Latvia.....	7 50 11 18	.....	(toll free)
Luxembourg.....	40 66 61 56 40		

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Authorisation

---

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved by the country in question.

Country-specific conditions have been taken into consideration.

Gigaset Communications GmbH declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).

**CE 0682**

## Specifications

---

### Recommended batteries

---

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600–1200 mAh

We recommend the following battery types, because these are the only ones that guarantee the specified operating times, full functionality and long service life:

- ◆ Sanyo NiMH 800
- ◆ GP 850 mAh
- ◆ Yuasa Technologies AAA 800

The device is supplied with two recommended batteries.

## Handset operating times/charging times

---

The operating time of your Gigaset depends on the age of the batteries and the way they are used. (All times are maximum possible times and apply when the display backlight is switched off.)

	Capacity (mAh) approx.			
	600	800	1000	1200
Standby time (hours)	130	180	220	265
Talktime (hours)	7	10	12	14
Operating time for 1.5 hrs calling per day (hours)	70	90	115	135
Charging time, charging cradle (hours)	6	9	11	13
Charging time, base station (hours)	5	7	8	10

At the time of going to print, batteries up to 900 mAh were available and had been tested in the system. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:



[www.gigaset.com/customercare](http://www.gigaset.com/customercare)

 


 
## Notes on the user guide

This section explains the meaning of certain typographical conventions that are used in this user guide.

### Example of a menu input

The steps you need to perform are shown in abbreviated form in the user guide. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.



 →  → Display

- ▶ With the handset in idle status, press on the **right** of the control key () to open the main menu.
- ▶ Use the control keys  and  to select the .



Settings appears in the display header.


- ▶ Press the **OK** display key to confirm the Settings function.

The Settings submenu is displayed.

- ▶ Press on the bottom of control key  until the Display menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

Contrast    Select and press **OK**.

- ▶ Press on the bottom of control key  until the Contrast menu function is selected.
- ▶ Press  or press the display key **OK** to confirm the selection.

    Select contrast and press the display key **Save**.

- ▶ Press on the right or left of the control key to set the contrast.
- ▶ Press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

### Example of multiple line input

In many situations you can change settings or enter data in several lines of a display.

In this user guide icons are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):

**Date/Time**

---

**Date:**  
[15.11.2007]

**Time:**  
11:11

 **Save**

Date:


Enter the day, month and year in 8-digit format.

The second line is marked with [ ] to show it is active.

- ▶ Enter the date using the digit keys.

Time:


Enter hours/minutes in 4-digit format.

- ▶ Press the  key.

The fourth line is marked with [ ] to show it is active.






- ▶ Enter the date using the digit keys.

 
- ▶ Save the changes.

- ▶ Pressing the display key **Save**.
- ▶ Then press and **hold** the  key. The handset switches to idle status.

## Writing and editing text

The following rules apply when writing a text:

 
 
 
 
 
 
 
 
 
 
 
 
- ◆ Control the cursor with    .
- ◆ Characters are inserted on the left of the cursor.
- ◆ Press the star key  to show the table of special characters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

You can call up the table of special characters when writing an SMS using the  key. Select the required character and insert it with **Insert**.

## Writing an SMS/name (without predictive text)

Press the relevant key several times to enter letters/characters.



### Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
	 <sup>1)</sup>	 <sup>2)</sup>	1							
	a	b	c	2	ä	á	à	â	ã	ç
	d	e	f	3	ë	é	è	ê		
	g	h	i	4	ï	í	ì	î		
	j	k	l	5						
	m	n	o	6	ö	ñ	ó	ò	ô	õ
	p	q	r	s	7	ß				
	t	u	v	8	ü	ú	ù	û		
	w	x	y	z	9	ÿ	ý	æ	ø	å
	.	,	?	!	0					

- 1) Space
- 2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

### Setting upper/lower case or digits


Press the hash key  **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

## Writing SMS (with predictive text)

EATONI predictive text helps you when you are writing SMS messages.

Each key between **[0+]** and **[9www]** is assigned several letters and characters. These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.

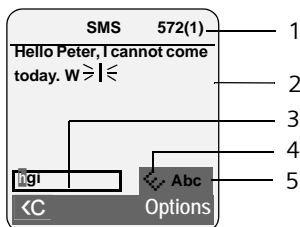

- 1 Remaining number of characters, in brackets: SMS part 1-n
- 2 SMS text
- 3 Selection line
- 4 EATONI is activated
- 5 Upper/lower case or digits

If this letter is the one you want, confirm it by pressing the next key. If it does not match the one you want, press the hash key **[#+]** **briefly** until the letter you are looking for is reverse highlighted in the display line and then transferred to the text field.

If you press and **hold** the hash key **[#+]** you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

### Activating/deactivating predictive text

**Precondition:** You are writing an SMS.

**Options** Press the display key.

Predictive Text

Select and press **OK** (**[√]** = on).



Press the end call key **briefly** to return to the text field.  
Enter the text.

## Accessories

All accessories and batteries are available from your phone retailer.



Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.



# Index

---

## A

- Accessories . . . . . 31
- Acknowledge tones . . . . . 22
- Activating
  - advisory tones . . . . . 22
  - appointment . . . . . 23
  - call acceptance . . . . . 20
  - handset . . . . . 9
  - keypad lock . . . . . 9
  - room monitor . . . . . 17
- Advisory tones . . . . . 22
- Alarm clock . . . . . 23
- Alert tone . . . . . 21
- Anniversary . . . . . 15
  - deactivating . . . . . 15
  - missed . . . . . 16, 24
  - saving in directory . . . . . 15
- Appointment . . . . . 23, 24
- Appointment/anniversary
  - display missed . . . . . 24
- Appointments
  - activating/deactivating . . . . . 24
  - deleting . . . . . 24
  - managing . . . . . 24
- Area code
  - setting own dialling code . . . . . 25
- Assigning a key . . . . . 18
- Assigning numerical keys . . . . . 18
- Authorisation . . . . . 28
- Automatic
  - call acceptance . . . . . 11, 20
  - last number redial . . . . . 16

## B

- Base station
  - connecting and installing . . . . . 5
  - range . . . . . 5
- Battery
  - charging . . . . . 1
  - display . . . . . 1
  - fitting . . . . . 6
  - icon . . . . . 1
  - recommended batteries . . . . . 28
  - tone . . . . . 22
- Beep, see Advisory tones
- Birthday, see Anniversary

## C

- Calendar . . . . . 23
- Call
  - accepting . . . . . 11
  - ending . . . . . 11
  - external . . . . . 11
  - internal . . . . . 12
- Call acceptance . . . . . 20
- Call duration . . . . . 11
- Call-by-call . . . . . 12
  - numbers . . . . . 13
- Call-by-call list
  - key . . . . . 1
- Calling, external . . . . . 11
- Care of the telephone . . . . . 25
- Changing
  - destination number . . . . . 17
  - display language . . . . . 19
  - earpiece volume . . . . . 20
  - handsfree volume . . . . . 20
  - ringer tone . . . . . 20
- Charge status display . . . . . 1
- CLIP picture . . . . . 13, 21
- Confirmation tone . . . . . 22
- Control key . . . . . 1, 9
- Correcting incorrect entries . . . . . 11
- Customer Care . . . . . 27

## D

- Deactivating
  - advisory tones . . . . . 22
  - appointment . . . . . 23
  - appointment reminder . . . . . 24
  - call acceptance . . . . . 20
  - handset . . . . . 9
  - keypad lock . . . . . 9
  - room monitor . . . . . 17
- Delete key . . . . . 9
- Deleting
  - characters . . . . . 11
- Destination number (room monitor) . . . . . 17
- Dialling
  - call-by-call list . . . . . 14
  - directory . . . . . 14
  - quick dial . . . . . 18
  - with quick dial . . . . . 14
- Dialling pause
  - entering . . . . . 1

- Directory . . . . . 12
  - copying number from text. . . . . 15
  - managing entries . . . . . 14
  - opening . . . . . 9
  - order of entries. . . . . 13
  - saving anniversary . . . . . 15
  - saving entry . . . . . 13
  - sending entry/list to handset. . . . . 14
  - using to enter numbers. . . . . 15
- Display
  - backlight . . . . . 19
  - changing display language . . . . . 19
  - contrast . . . . . 19
  - in idle status. . . . . 10
  - memory (directory/call-by-call) . . . . . 14
  - missed appointments/
    - anniversaries . . . . . 24
  - screensaver . . . . . 19
  - setting . . . . . 19
  - wrong language . . . . . 19
- Display keys . . . . . 1, 9
  - assigning . . . . . 18
- E**
  - Earpiece mode. . . . . 11
  - Earpiece volume . . . . . 20
  - EATONI (predictive text) . . . . . 31
  - ECO DECT . . . . . 11
  - Eco mode . . . . . 11
  - E-mail address
    - copying from the directory . . . . . 15
  - End call key . . . . . 1, 11
  - Ending, call . . . . . 11
  - Ending, see deactivate
  - Entry
    - selecting (menu) . . . . . 29
    - selecting from directory . . . . . 13
  - Error tone . . . . . 22
  - Example
    - menu input . . . . . 29
    - multiple line input . . . . . 29
- G**
  - Group call . . . . . 12
- H**
  - Handset
    - activating/deactivating . . . . . 9
    - advisory tones . . . . . 22
    - contact with liquid . . . . . 25
    - display backlight . . . . . 19
    - display language . . . . . 19
    - earpiece volume . . . . . 20
    - handsfree volume . . . . . 20
    - idle status . . . . . 10
    - list . . . . . 9
    - muting . . . . . 12
    - registering. . . . . 7
    - restoring to factory settings . . . . . 25
    - screensaver . . . . . 19
    - setting . . . . . 18
    - setting up . . . . . 6
    - signal strength. . . . . 5
    - using room monitor. . . . . 16
  - Handset operating time
    - in room monitor mode. . . . . 17
  - Handsfree key. . . . . 1
  - Handsfree talking . . . . . 11
  - Handsfree volume. . . . . 20
  - Hash key. . . . . 1, 9
  - Headset socket . . . . . 7
  - Hearing aids . . . . . 3
  - Hold music . . . . . 12
- I**
  - Icon
    - alarm clock . . . . . 23
    - display . . . . . 9
    - for new messages . . . . . 16
    - keypad lock . . . . . 9
    - ringer tone . . . . . 21
  - Idle status (display) . . . . . 10
  - Idle status, returning to . . . . . 10
  - Incorrect input (correction) . . . . . 11
  - Installation, base station . . . . . 5
  - Internal
    - making calls . . . . . 12
    - Internal call. . . . . 12
- K**
  - Key 1 (fast access). . . . . 1
  - Keypad lock . . . . . 9
  - Keys
    - call-by-call list . . . . . 1
    - control key . . . . . 1, 9
    - delete key . . . . . 9
    - display keys . . . . . 1, 9
    - end call key . . . . . 1, 11
    - fast access. . . . . 1
    - handsfree key . . . . . 1

## Index

hash key . . . . .	1, 9
message key . . . . .	1
on/off key . . . . .	1
quick dial . . . . .	14
recall key . . . . .	1
star key . . . . .	1
talk key . . . . .	1, 11

## L

Language, display . . . . .	19
Last number redial . . . . .	16
Liquid . . . . .	25
List . . . . .	12
call-by-call list . . . . .	12
handsets . . . . .	9
Lock	
activating/deactivating keypad protection . . . . .	9

## M

Mains adapter . . . . .	3
Making calls	
accepting a call . . . . .	11
external . . . . .	11
internal . . . . .	12
Manual last number redial . . . . .	16
Medical appliances . . . . .	3
Memory	
directory/call-by-call . . . . .	14
Menu	
end tone . . . . .	22
menu guidance . . . . .	10
menu input . . . . .	29
opening . . . . .	9
Message key . . . . .	1
opening lists . . . . .	16
Microphone . . . . .	1
Missed	
anniversary . . . . .	24
appointment . . . . .	24
Multiple line input . . . . .	29
Muting the handset . . . . .	12
My stuff . . . . .	21

## N

Network provider (numbers list) . . . . .	13
Number	
as destination for room monitor . . . . .	17
copying from directory . . . . .	15
copying to directory . . . . .	15

entering with directory . . . . .	15
saving in the directory . . . . .	13
Numbers list	
network provider . . . . .	13

## O

On/Off key . . . . .	1
Order in directory . . . . .	13

## P

Pack contents . . . . .	5
Picture	
deleting . . . . .	22
renaming . . . . .	22
Predictive text . . . . .	31

## Q

Questions and answers . . . . .	26
Quick dial . . . . .	12, 13, 18

## R

Range . . . . .	5
Recall key . . . . .	1
Registering (handset) . . . . .	7
Reminder call . . . . .	15
Ringer tone	
changing . . . . .	20
setting melody . . . . .	20
setting volume . . . . .	20
Room monitor . . . . .	16

## S

Screensaver . . . . .	19
Searching in directory . . . . .	13
Sending	
directory entry to handset . . . . .	14
sensitivity (room monitor) . . . . .	17
Service . . . . .	27
Setting	
date . . . . .	8
melody . . . . .	20
screensaver . . . . .	19
time . . . . .	8
Setting up	
handset . . . . .	6
Signal strength . . . . .	5
Snooze mode . . . . .	23
Sound, see Ringer tone	
Specifications . . . . .	28
Star key . . . . .	1

**T**

- Talk key . . . . . 1, 11
- Troubleshooting . . . . . 26

**V**

- VIP (directory entry) . . . . . 14
- Volume
  - earpiece . . . . . 20
  - earpiece volume . . . . . 20
  - handset handsfree volume . . . . . 20
  - loudspeaker . . . . . 20
  - ringer tone . . . . . 20
  - setting . . . . . 20

**W**

- Warning tone, see Advisory tones
- Writing, editing text . . . . . 30

