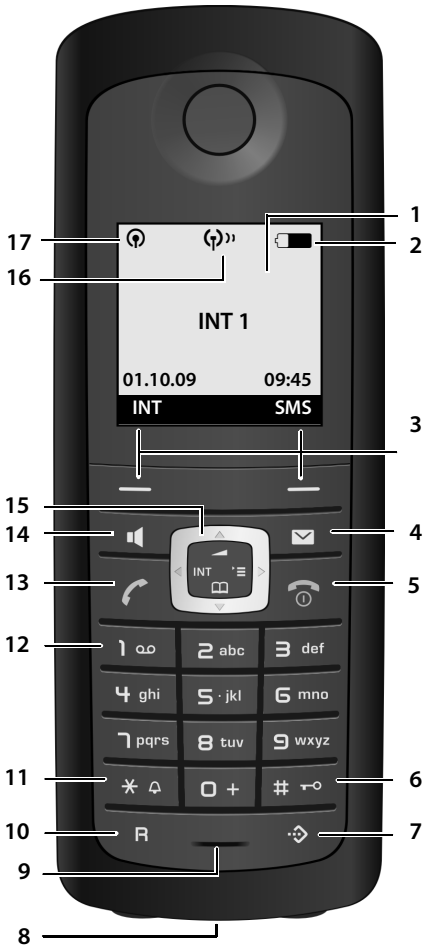


Gigaset

E49H

The handset at a glance



- 1 **Display** in idle status
- 2 **Charge status of the batteries**
 - ☐ (flat to full)
 - ☐ flashes: batteries almost flat
 - ☐ flashes: batteries charging
- 3 **Display keys** (→ page 16)
- 4 **Message key**
 - Access to calls and message lists;
 - Flashes: new message or new call
- 5 **End call key, On/Off key**
 - End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
 - Keypad lock on/off (press and hold in idle status);
 - Toggle between upper/lower case and digits
- 7 **Call-by-call list key**
 - Open call-by-call list
- 8 **Connection socket** for headset (→ page 13)
- 9 **Microphone**
- 10 **Recall key**
 - Consultation call (flash)
 - Insert a dialling pause (press and hold)
- 11 **Star key**
 - Ringer on/off (press and hold),
 - With an open connection: switch between dial pulsing/touch tone dialling (press briefly);
 - Text input: Open table of special characters
- 12 **Key 1**
 - Dial network mailbox (press and hold)
- 13 **Talk key**
 - Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 14 **Handsfree key**
 - Switch between handset and handsfree mode;
 - Lights up: handsfree activated;
 - Flashes: incoming call
- 15 **Control key** (→ page 15)
- 16 **Eco Mode** enabled (→ page 26)
- 17 **Eco Mode +** enabled (→ page 26)

Contents

The handset at a glance	2
Safety precautions	5
First steps	6
Check the pack contents	6
Setting up the charging cradle	7
Connecting the charging cradle	7
Setting up the handset for use	8
Connecting the headset	13
What would you like to do next?	14
Using the phone	15
Control key	15
Display keys	16
Keys on the keypad	16
Correcting incorrect entries	16
Menu guidance	16
Activating/deactivating the handset	17
Activating/deactivating the keypad lock	17
Illustration in the user guide	18
Menu tree	19
Making calls	20
Making an external call	20
Ending a call	20
Accepting a call	20
Handsfree talking	20
Switch to mute	20
Making internal calls	21
Using the directory and lists	22
Directory/call-by-call list	22
Last number redial list	24
Opening lists with the message key	24
Using the network mailbox	25
Configuring fast access for the network mailbox	25
Viewing the network mailbox message	25
ECO DECT	26
Setting the alarm clock	26
Using a handset as a room monitor	26

Contents

Handset settings	28
Quick access to functions	28
Changing the display language	28
Setting the display	28
Setting the screen picture	29
Setting the display lighting	29
Activating/deactivating auto answer	29
Changing the handsfree/handset volume	30
Changing the ringer	30
Activating/deactivating advisory tones	31
Restoring the handset default settings	31
Customer service & product warranty – Australia and New Zealand ..	32
Questions and answers	33
Environment	33
Appendix	34
Care	34
Contact with liquid	34
Specifications	34
Writing and editing text	35
Mounting the charging cradle to the wall	36
Index	37

Safety precautions

Warning

Read the safety precautions and the user guide before use.
Explain their content and the potential hazards associated with using the telephone to your children.



Only use the supplied charging cradle with the mains adapter.



Only use the **recommended, rechargeable batteries** (→ page 34), i.e. never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the hands-free function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (→ page 34).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

Please note

Not all of the functions described in this user guide are available in all countries.

First steps

Check the pack contents



- 1 one Gigaset E49H handset
- 2 one charging cradle
- 3 one mains adapter for the charging cradle
- 4 two batteries
- 5 one battery cover
- 6 one belt clip
- 7 one lock ring
- 8 one rubber cover for the headset socket
- 9 one user guide

Setting up the charging cradle

The charging cradle is designed to be operated in enclosed, dry areas at temperatures ranging from +5°C to +45°C.

- ▶ Place the charging cradle on a level, non-slip surface or mount it on the wall
→ page 36.

Please

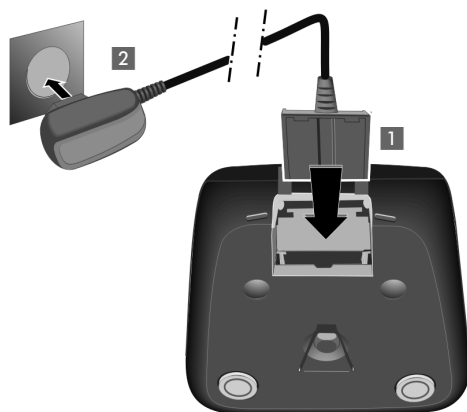
Pay attention to the range of the base station.
This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when eco mode is activated (→ page 26).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

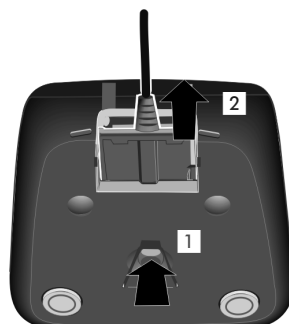
- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Connecting the charging cradle



- ▶ Connect the flat plug of the mains adapter **1**.
- ▶ Plug the mains adapter into the plug socket **2**.

If you need to disconnect the plug from the charging cradle, press the release button **1** and disconnect the plug **2**.



Setting up the handset for use

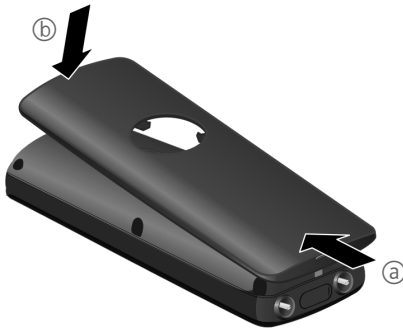
The display and control key are protected by a plastic film.
Please remove the protective film!

Inserting the batteries and closing the battery cover

Warning

Only use the rechargeable batteries (→ page 34) recommended by Gigaset Communications GmbH. Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries the right way round. The polarity is indicated in/on the battery compartment.

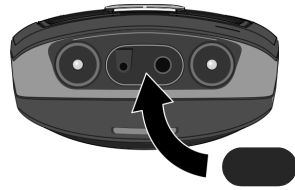


- ▶ Hold the battery cover at a slight angle and push it onto the casing, bottom first (a).
- ▶ Then press the cover (b) until it clicks into place.

- ▶ Insert the lock ring or belt clip into the battery cover as illustrated (rotated by approx. 20°). In the case of the lock ring, pay attention to the arrow markings.
- ▶ Turn the lock ring or belt clip clockwise to the end stop. When the markings on the ring and cover are aligned, the lock ring is closed.



- ▶ Insert the rubber cover supplied for the headset socket to guarantee the unit is still splashproof.



If you need to re-open the battery cover, for instance to replace the batteries, proceed as follows:

- ▶ Turn the lock ring or belt clip anti-clockwise to the end stop (approx. 20°) and remove. To remove the lock ring, place your thumb and index finger on the two notches on the lock ring.
- ▶ Insert a suitable tool (e.g. a small coin) into the cavity at the top of the battery cover and twist until the cover opens.



Placing the handset in the charging cradle

- ▶ Insert the mains adapter of the charging cradle into the mains socket.
- ▶ Place the handset in the charging cradle with its **display facing forward**.

To charge the battery, leave the handset in the charging cradle.

 
Please

Only place the handset in the charging cradle that is intended for it.

Registering the handset

You must initiate handset registration on the **handset (1)** and on the **base station (2)**.

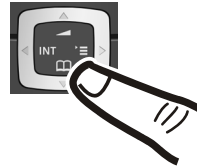
1) On the handset



Please register flashes on the display.



- ▶ Press on the right side of the control key to display the main menu.



- ▶ Press the bottom of the control key until **Settings** is highlighted by the bar.

- ▶ Press the display key **OK** to open the submenu.

- ▶ Press the bottom of the control key until **Handset** is highlighted by the bar.
- ▶ Press the display key **OK** to open the submenu.
- ▶ Press the bottom of the control key until **Register H/Set** is highlighted by the bar.
- ▶ Press the display key **OK** to open the submenu.
- ▶ Enter the system PIN of the base station (the default is **0000**) and press **OK**.



A message appears in the display to indicate that the registration procedure has started.

2) On the base station

- ▶ Within 60 seconds, press and **hold** the registration/paging key on the base station (approx. 3 seconds).

Following successful registration, the internal number of the handset is displayed, e.g. **INT 1**.

If registration was unsuccessful, repeat the process.

First battery charge and discharge

The correct charge status can only be displayed once the battery is first fully charged **and** discharged.



▶ Place the handset in the charging cradle for **six** hours.

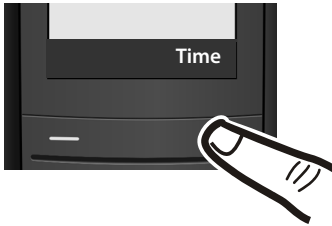
▶ Once the battery is fully charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged.

Please

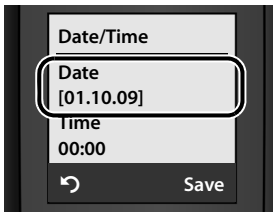
- ◆ After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert it.
- ◆ The battery may warm up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.


Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.



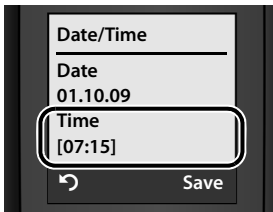
- ▶ If you have not yet set the date and time, press the key below **Time** on the display screen to open the input field.

 


- ▶ The active line is marked [...]. Enter day, month and year as a 6-digit number via the keypad, e.g.  for 01/10/2009.



- ▶ Press the bottom of the control key to scroll down to enter the time.



- ▶ Enter the hours and minutes as a 4-digit number via the keypad, e.g.  for 07:15 AM.




- ▶ Press the key below **Save** on the display screen to save the settings.

Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example.

Displays

 Eco Mode + activated (→ page 26)

 Eco Mode activated (→ page 26)

Charge status of the batteries:

 (flat to full)

 
 flashes: batteries almost flat

INT 1 Internal name of the handset



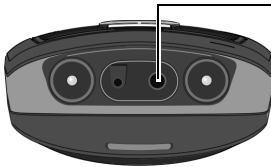
If **Eco Mode +** (→ page 26) is **not** activated, the top left of the display shows the strength of the radio contact between the base station and the handset:

◆ Good to poor: 

◆ No reception:  flashes

Your phone is now ready for use!

Connecting the headset



After removing the rubber cover, you can connect a headset to the underside of your telephone with the 2.5 mm jack connector. See the relevant product page at www.gigaset.com for information on recommended headsets.

After using the headset, always replace the rubber cover.

What would you like to do next?

Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.


If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone" → page 15.

Information on is located here.
Eco Mode / Eco Mode +	→ page 26
Setting the ringer and volume	→ page 30
Setting the handset volume	→ page 30
Transferring directory entries from existing Gigaset handsets to the new handset(s)	→ page 23

If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and Answers" → page 33) or contact our customer service department (Customer Care → page 32).

Using the phone





Control key

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".





The control key has a number of different functions:







When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 30), ringers (→ page 30) and advisory tones (→ page 31).




In the main menu, in submenus and lists

-  /  Scroll up/down line by line.
-  Open the submenu or confirm the selection.
-  Go back one menu level or cancel.

In input fields

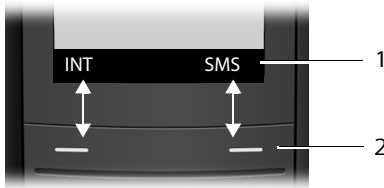
You can use the control key to move the cursor up , down , right  or left .

During an external call

-  Open the directory.
-  Initiate internal consultation call and mute.
-  Adjust the loudspeaker volume for handset and handsfree mode.





 
Display keys

The functions of the display keys change depending on the particular operating situation. Example:

 





- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

The most important display keys are:

-  **Options** Open a context-dependent menu.
-  **<C** Delete key: delete one character at a time from right to left.
-  **↶** Go back one menu level or cancel operation.
-  **+□** Copy number into directory.
-  **→→** Open the last number redial list.

Keys on the keypad

-  /  /  etc.
Press the matching key on the handset.
-  Enter digits or letters.

Correcting incorrect entries


You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ Press **<C** to delete the character to the left of the cursor
- ◆ Insert a character next to the cursor
- ◆ Overwrite the (flashing) character when entering the time and date etc.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ When the handset is in idle status, press  to open the main menu.

The main menu functions are shown in the display as a list with colour icons and names.


To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key . Press the display key **OK**.

Submenus


The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

 
Or:

- ▶ Enter the corresponding digit combination (→ page 19).

Briefly press the end call key  once to return to the previous menu level/cancel the operation.

Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 13.

Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

 
Press and **hold** the end call key again to switch the handset on.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the  icon in the display and a message when you press a key.


The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Illustration in the user guide

The operating steps are shown in abbreviated form.

Example

The illustration:

 
 →  → **Date/Time**

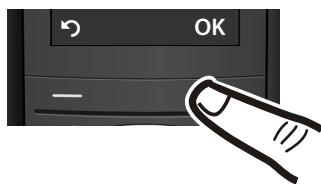
means:



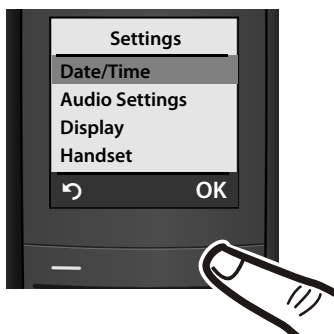
- ▶ In idle status, press on the right side of the control key to display the main menu.



- ▶ Press the bottom of the control key until  **Settings** is highlighted by the bar.



- ▶ Press the display key **OK** to open the submenu.



Date/Time is already highlighted.


- ▶ Press the display key **OK** to open the function menu.

To enter the date and time, proceed as described on page 12.

Menu tree

Instead of scrolling to locate a menu function, you can select a function more quickly by opening the menu and keying in a digit combination (or shortcut).

Example:      for "Set ringer for external calls".

With the telephone in **idle status**, press  (open main menu):

1 SMS  (Menu dependent on base station)

2 Sel. Services  (Menu dependent on base station)

3 Alarm Clock  → page 26

4 Add. Features 

4-3	Room Monitor	→ page 26
-----	--------------	-----------



5 Settings 

5-1	Date/Time	→ page 12
5-2	Audio Settings	5-2-1 Handset Volume → page 30
		5-2-2 Ringer Settings → page 30
		5-2-3 Advisory Tones → page 31
		5-2-4 Silent Alert → page 31
5-3	Display	5-3-1 Screen Picture → page 29
		5-3-2 Colour Scheme → page 28
		5-3-3 Contrast → page 28
		5-3-4 Lighting → page 29
5-4	Handset	5-4-1 Language → page 28
		5-4-2 Auto Answer → page 29
		5-4-3 Register H/Set → page 10
		5-4-4 Reset Handset → page 31
5-5	Base	(Submenu dependent on base station)




Making calls

 
Making an external call

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.


You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

 
Please

Dialling using the directory, the call-by-call list (→ page 2/ → page 22) or the calls and last number redial list (→ page 24/ → page 24) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

 

Ending a call

 Press the end call key.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 29), the handset will automatically accept a call when you lift it out of the cradle.



To deactivate the ringer, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.

Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

 
Activating/deactivating handsfree mode

Activating while dialling

  Enter the number and press the handsfree key.


- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between handset and handsfree mode

 Press the handsfree key.

Activate/deactivate handsfree during a call.


If you wish to place the handset in the charging cradle during a call:


- ▶ Press and hold the handsfree key  while placing the handset in the base station. If handsfree key  does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume, → page 30.

Switch to mute

You can deactivate the microphone in your handset during an external call. The other party then hears hold music (depending on the base station).

 Press the control key on the left to mute the handset.

 Press the display key to switch the microphone back on.

You can turn the hold music on and off.

Making internal calls

Internal calls to other handsets registered to the same base station are free of charge.

Calling a specific handset



Initiate internal call.



Enter the number of the handset.

Or:



Initiate internal call.



Select handset.



Press the talk key.

Calling all handsets ("group call")



Initiate internal call.



Press the star key. All handsets are called.

Ending a call



Press the end call key.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Last number redial list
- ◆ SMS list
- ◆ Calls list

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (→ page 23).


Directory/call-by-call list

You can save a total of 150 entries in the directory and call-by-call list.


Please

For quick access to a number from the directory (shortcut), you can assign the number to a key.

In the **directory** you can save numbers and corresponding names.

- ▶ With the handset in idle status, open the directory by pressing the  key.

In the **call-by-call list**, you can save network provider prefixes ("call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of the entries

Number: max. 32 digits

Name: max. 16 characters

Storing a number in the directory

 → New Entry

- ▶ Change multiple line input:

Number

Enter the number.

Name

Enter name.

Shortcut

Select key for shortcut.

- ▶ Save the changes.

Storing a number in the call-by-call list

 → New Entry

- ▶ Change multiple line input:

Number

Enter the number.

Name

Enter name.



Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:


 
1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To work round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Selecting entries in the directory and call-by-call list

 
 /  Open the directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name and scroll to the entry using  if required.

Dialling with the directory/call-by-call list

 /  →  (select entry)

 Press the talk key. The number is dialled.

Managing directory/call-by-call entries

 /  →  (select entry)

Viewing entries

View Press the display key. The entry is displayed.
Back with **OK**.


Editing an entry

View **Edit** Press the display keys one after the other.



- ▶ Carry out changes and save.

Using other functions

Options Press the display key.

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press   after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as a **VIP** (Very Important Person) and assign a specific ringtone to it. You can then recognise important calls from the ringtone.

Precondition: Calling Line Identification.

Copy Entry

Send a single entry to a handset
(→ page 23).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset
(→ page 23).

Available Memory

Display the available entries in the directory and call-by-call list (→ page 22).




Using shortcut keys


- ▶ Press and **hold** the required shortcut key
(→ page 22).

Sending the directory/call-by-call list to another handset

Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (select entry) → **Options**
(open menu) → **Copy Entry / Copy List**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the **Copy next entry?** prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Copying a displayed number to the directory

Numbers displayed in a list, e.g. the calls list or the last number redial list, or during a call can be copied to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the **Name** line.




A number is displayed:


Options → **Copy to Directory**

▶ Complete the entry (→ page 22).

Copying a number from the directory

There are many operating situations in which you can open the directory, e.g. to copy a number. Your handset need not be in idle status.


▶ Depending on the operating situation, open the directory with  or  or  **Directory**.

 Select entry (→ page 22).


Last number redial list

The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the directory or the call-by-call list, then the corresponding name will be displayed.

Manual last number redial


 Press the key **briefly**.

 Select entry.

 Press the talk key again.
The number is dialled.


When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the last number redial list

 Press the key **briefly**.

 Select entry.

Options Open menu.

The following functions can be selected with :

Display Number

(as in the directory → page 23)

Copy to Directory

Copy an entry to the directory
(→ page 22).


Delete Entry


(as in the directory → page 23)

Delete List

(as in the directory → page 23)

Opening lists with the message key

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message.

If you press the message key , you access the lists that contain new messages.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox


With fast access, you can dial the network mailbox directly.

Fast access is set for the network mailbox. You only need to enter the number of the network mailbox.

Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK** ( = on).



Enter the number for the network mailbox.

Save

Press the display key.



Press and **hold** (idle status).


The setting for fast access applies to all Gigaset E49H handsets.

Calling the network mailbox



Press and **hold**. You are connected directly to the network mailbox.



Press handsfree key  if required. You will hear the network mailbox announcement.

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number will be saved in the missed calls list and the message key flashes (→ page 24).

ECO DECT

You are helping to protect the environment with your Gigaset.

Reducing energy consumption

By using a power-saving adapter plug, your telephone consumes less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

 
The transmission power of your telephone is **automatically** reduced depending on the distance to the base.

You can reduce the radiation of the handset and base even further by using Eco Mode or Eco Mode+. **For further information, please refer to your base user guide.**

Setting the alarm clock

Precondition: The date and time have already been set (→ page 12).

Activating/deactivating the alarm clock and setting the wake-up time



► Change multiple line input:

Activation

Select **On** or **Off**.

Time

Enter the wake-up time in 4-digit format.


Melody:


Select melody.

Volume:

Set the volume (1–6).

► Save the changes.

You will see the  icon.

A wake-up call with selected ringer (→ page 30) is signalled on the handset. The wake-up call sounds for 60 seconds.  is

shown in the display. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Precondition: A wake-up call is sounding.

OFF

Press the display key. The wake-up call is deactivated.

or

Snooze

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Using a handset as a room monitor

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number is terminated after approximately 90 seconds. The room monitor call to an internal number (handset) is terminated after approximately 3 minutes (depending on the base station). When the room monitor is activated, all keys except the end call key are locked. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringer** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

Warning

- ◆ **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number.**
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the destination number

 →  → **Room Monitor**

- ▶ Change multiple line input:


Room M.

Select **On** to activate.

Call to

Press the display key **Edit** and enter destination number.

External number: Select number from the directory or enter directly. Only the **last 4 digits** are displayed.

Internal number: **INT** →  (Select handset or **Call All** if all registered handsets are to be called) → **OK**.

Store number with **Save**.


Level

Set noise level sensitivity (**Low** or **High**).

- ▶ Press **Save** to save the settings.

Changing a set external destination number

 →  → **Room Monitor**

 Scroll to the **Call to** line.


Edit Press the display key.

<C Delete existing number.

- ▶ Enter number as described in "Activating the room monitor and entering the destination number" (→ page 27).
- ▶ Press **Save** to save the settings.

Changing a set internal destination number

 →  → **Room Monitor**

 Scroll to the **Call to** line.

 
 
Delete Press the display key.

Edit Press the display key.

- ▶ Enter number as described in "Activating the room monitor and entering the destination number" (→ page 27).
- ▶ Press **Save** to save the settings.

Deactivating the room monitor remotely

Preconditions: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ringer) on the handset will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 27).

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Quick access to functions

The display keys have a function preset by default.

Depending on your base station, you can change the assignment.

To start the function, you then simply need to press the button.

Changing display key assignments

- ▶ Press and **hold** the left or right display key.

The list of **possible** key assignments is opened. The following can be selected (example):

INT

Internal calls (→ page 21).

SMS

Assign menu for SMS functions to a key.

SMS Service

Assign key with the menu for ordering info services.

SMS Notific.

Assign key with the menu for activating SMS notification.

Withhold No.

Withhold phone number identification for next call.

If a function or number has already been assigned to the left display key, the selected function (or its abbreviation) will be displayed in the lowest display line above the display key.

Starting a function

 
With the handset in idle status, press the display key **briefly**.


The function menu is opened.


Changing the display language

You can view the display texts in different languages.

 →  → **Handset** → **Language**

The current language is indicated by .


 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:



   

Press keys in sequence.

 Select the correct language and press **OK**.



Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → **Display**

Colour Scheme

 
Select and press **OK**.


 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.


 Press the display key.

 Press and **hold** (idle status).

Setting the screen picture

You can display a screen picture (picture or digital clock) when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been de-registered.

If a screen picture has been activated, the menu item **Screen Picture** is marked with .

 →  → **Display** → **Screen Picture**

The current setting is displayed.

▶ Change multiple line input:


Activation

Select **On** (screen picture is displayed) or **Off** (no screen picture).

Selection:


Change screen picture if necessary (see below).

▶ Save the changes.

If the screen picture conceals the display, briefly press  to show the idle display with time and date.

Changing the screen picture

 →  → **Display** → **Screen Picture**

 Scroll to the **Selection** line.

View Press the display key. The active screen picture is displayed.

 Select screen picture and press **Save**.

▶ Save the changes.

Setting the display lighting

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the lighting. If it is activated, the display is permanently dimmed.

 →  → **Display** → **Lighting**

The current setting is displayed.

▶ Change multiple line input:

In Charger

Select **On** or **Off**.

Outside Charger

Select **On** or **Off**.

Please

With the **On** setting, the standby time of the handset can be significantly reduced.


Save


Press the display key.




Press and **hold** (idle status).

Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → **Handset**

Auto Answer

Select and press **OK** ( = on).





Press and **hold** (idle status).


Changing the handsfree/ handset volume


You can set the loudspeaker volume for handsfree talking to five different levels and the handset volume to three different levels.

→ Handset Volume


 Set the handset volume.

 Scroll to the **Speaker** line.


 Set the handsfree volume.


 Press display key if necessary to save the setting permanently.


Setting the volume during a call:


 Press the control key.

 Select volume.

 Press display key if necessary to save the setting permanently.

The setting will automatically be saved after approximately 3 seconds, if not then press the display key .

If  is assigned with another function, e.g. toggling:

 Open menu.

Volume Select and press .

 

Configure setting (see above).

Please

You can also change this setting via the menu (→ page 19).

Changing the ringer

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "crescendo" ring (6; volume increases with each ring = .

◆ Ringers:

You can select various ringers.

You can set different ringers for the following functions:

◆ **Ext. Calls:** for external calls



◆ **Internal Calls:** for internal calls


◆ **All:** the same ringer for all functions


Settings for individual functions


Set the volume and melody depending on the type of signalling required.


→ Ringer Settings

 Select setting, e.g. **Ext. Calls** and press .

 Set volume (1–6).

 Scroll to the next line.



 Select melody.


 Press the display key to save the setting.

Same ringer for all functions

→ Ringer Settings → All

▶ Set volume and ringer (see "Settings for individual functions").

 Press the display key and confirm the security prompt with  to save the setting.

 Press and **hold** (idle status).


Please

You can also change this setting via the menu (→ page 19).

Activating/deactivating the ringer


You can deactivate the ringer on your handset before you answer a call or when the handset is in idle status; the ringer can be deactivated permanently or just for the current call. The ringer cannot be re-activated while an external call is in progress.

Deactivating the ringer permanently

 Press and **hold** the star key.

The  icon appears in the display.

Reactivating the ringer

 Press and **hold** the star key.

Deactivating the ringer for the current call

Silence Press the display key.

Activating/deactivating the alert tone

In place of the ringer you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringer.

*** * *** Press and **hold** the star key and **within 3 seconds**:

Beep Press the display key. A call will now be signalled by **one** short alert tone. $\Delta \square$ appears in the display.

Silent alert

Incoming calls and other messages are indicated by a vibration.

In idle status:

 → **Silent Alert**

Press **OK** to activate or deactivate (= on).

Please

You can also change this setting via the menu (→ page 19).

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key tones:** every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when a new entry arrives in the calls list
 - **Error tone** (descending tone sequence): when you make an incorrect entry

- **Menu end tone:** when scrolling to the end of a menu

- ◆ **Battery tone:** the batteries need to be charged.

 → **Advisory Tones**

- ▶ Change multiple line input:

Key Tones

Select **On** or **Off**.

Confirm.

Select **On** or **Off**.

Battery

Select **On**, **Off** or **In Call**. The battery warning tone is only activated/deactivated and only sounds during a call.

- ▶ Save the changes.

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

Please


You can also change this setting via the menu (→ page 19).

Restoring the handset default settings

You can reset individual settings and changes that you have made. This will not affect entries in the directory, call-by-call list or calls list, nor the handset's registration to the base station.

 →  → **Handset** → **Reset Handset**

Yes Press the display key.

 Press and **hold** (idle status).

Customer service & product warranty – Australia and New Zealand

IMPORTANT

Please retain your sales receipt as proof of the date of purchase.

Customer Service

If you require assistance in operating this product please contact us

AUS: 1300 780 878 or by e-mail at the Customer Care section of our website at www.gigaset.com/au

NZ: 0800 780 878 or by e-mail at the Customer Care section of our website at www.gigaset.com/au

If you are trying to access a Network Service and require assistance specifically related to the network service or would like to subscribe to the service, contact your service provider.

Product Warranty

Subject to the conditions below, this product, excluding battery and accessory devices, is guaranteed against any defect in materials or workmanship under conditions of normal use for a period of 24 months from date of purchase.

The benefits conferred by this warranty are in addition to other warranties and remedies that are implied under the Australian Trade Practices Act and similar Country, State and Territory laws (Statutory Rights).

Subject to your Statutory Rights, the goods will not be eligible for service under this warranty if:

1. Proof of purchase cannot be provided;
2. The defect was caused by an accident, misuse, abuse, improper installation or operation, vermin infestation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by Gigaset; or
3. The product has been damaged by lightning or a mains power surge.
4. The Phone was not imported into Australia by Gigaset Communications GmbH.

To obtain service during the terms of this warranty call the Information Line on

AUS: 1300 780 878 or by e-mail at the Customer Care section of our website at www.gigaset.com/au

NZ: 0800 780 878

If it is necessary to have the product serviced, the Customer Service Representative will inform you of the product return process.

Please ensure that:

1. You provide proof of purchase;
2. Your product is suitably packaged; and
3. You have included all components from the original purchase.

Subject to your Statutory Rights:

1. Any claim under this warranty is limited to the cost of repair or replacement of the product; and
2. If the goods are found to be in sound working order by the authorised service centre, you may be charged a fee for service and for any other direct costs associated with having the product delivered for service.

Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear Gigaset Communications GmbH local registered N Number and Telepermit markings.




Please have your proof of purchase ready when calling.

Questions and answers

If you have any questions about the use of your phone, visit us at any time at www.gigaset.com/customercare. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The batteries are flat.
 - ▶ Charge or replace the batteries (→ page 8).

"Base x" flashes on the display.

1. The handset is outside the range of the base station.
 - ▶ Move the handset closer to the base station.

The base station's range is reduced because eco mode is activated.

 - ▶ Deactivate eco mode (→ page 26) or reduce the distance between the handset and the base station.
2. The base station is not switched on.
 - ▶ Check the base station mains adapter.


Please register flashes on the display.

- Handset has not been registered with the base station or has been deregistered.
- ▶ Register the handset (→ page 10).

Handset does not ring.

- The ringer is deactivated.
- ▶ Activate the ringer (→ page 30).

The other caller cannot hear you.

- You have pressed the  (INT) key. The handset is "muted".
- ▶ Activate the microphone again (→ page 20).

You hear an error tone when keying an input (a descending tone sequence).

- Action has failed/invalid input.
- ▶ Repeat the operation.
 - Watch the display and refer to the user guide if necessary.

Environment

Our environmental mission statement

We, Gigaset Communications GmbH, carry social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet under www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/1994 by TÜV Süd Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 26) saves energy and is an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from. All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Appendix

Care

- ▶ Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth as this can cause static.

Contact with liquid

If the handset should come into contact with liquid:

1. **Switch the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

In rare cases, contact with chemicals may lead to changes in the surface of the phone. Due to the large number of chemicals available on the market, it has not been possible to test all substances.

Specifications

Recommended batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 600 - 1200 mAh

We recommend the following battery types, because these are the only ones that guar-

antee the specified operating times, full functionality and long service life:

- ◆ GP 700 mAh
- ◆ Yuasa Phone 700 mAh
- ◆ Yuasa AAA 800 mAh
- ◆ Peacebay 650 mAh

The device is supplied with two recommended batteries.

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times and apply when the display lighting is switched off).






	Capacity (mAh) approx.			
	500	700	900	1100
Standby time (hours)	180	250	320	395
Talktime (hours)	9	12	16	19
Operating time for 1.5 hrs of calls per day (hours)	80	115	150	180
Charging time (hours)	5	7	9	11

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/customercare

Writing and editing text

 
 
 
 
 
 
 
 
 
 
The following rules apply when writing text:

- ◆ Control the cursor with    .
- ◆ Characters are inserted next to the cursor.
- ◆ Press the star key  to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing names

Press the relevant key several times to enter letters/characters.

Standard characters

 
	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
 	 ¹⁾	 ²⁾	1							
	a	b	c	2	ä	á	à	â	ã	ç
	d	e	f	3	ë	é	è	ê		
	g	h	i	4	ï	í	ì	î		
	j	k	l	5						
	m	n	o	6	ö	ñ	ó	ò	ô	õ
	p	q	r	s	7	ß				
	t	u	v	8	ü	ú	ù	û		
	w	x	y	z	9	ÿ	ý	æ	ø	å
	.	,	?	!	0					

1) Space


2) Line break

When you press and **hold** a key, the characters of that key appear in the display and are highlighted one after the other. When you release the key, the highlighted character is inserted into the input field.

Setting upper/lower case or digits

Press the hash key  briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case):

1st letter upper case, all others lower case).

Press the hash key  before entering the letter.

You can see briefly in the display whether upper case, lower case or digits is selected.

Accessories

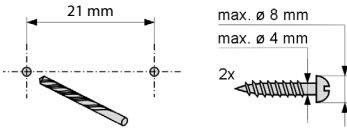
Ordering Gigaset products

You can order Gigaset products from your specialist retailer.

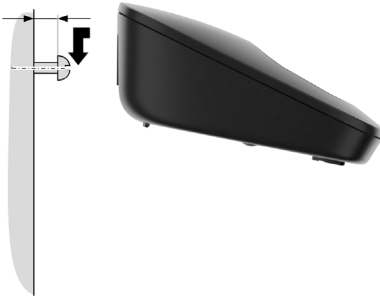


Only use original accessories. This will avoid possible health risks and damage to property, and also ensure that all the relevant regulations are complied with.

Mounting the charging cradle to the wall



approx. 2.5 mm



Index

A

- Accepting a call 20
- Accessories 36
- Acknowledge tones 31
- Activating
 - advisory tones 31
 - call acceptance 29
 - handset 17
 - keypad lock 17
 - room monitor 27
- Advisory tones 31
- Alarm clock 26
- Alert tone 31
- Answering machine, see also
 - Network mailbox
- Approval 33
- Assigning
 - key 28
 - numerical keys 28
- Auto answer 20, 29

B

- Base station
 - setting up 7
- Battery
 - charging 2, 11
 - display 2
 - icon 2
 - inserting 8
 - recommended batteries 34
 - tone 31

C

- Call
 - ending 20
 - external 20
 - internal 21
- Call acceptance 29
- Call duration 20
- Call-by-call
 - key 2
 - list 22
 - numbers 22
- Calling
 - external 20
 - internal 21
- Care of the telephone 34

- Changing
 - destination number 27
 - display language 28
 - handset volume 30
 - handsfree volume 30
 - ringer 30
- Charge status display 2
- Confirmation tone 31
- Connecting the headset 13
- Control key 2, 15
- Correcting incorrect entries 16
- Customer service & product warranty – Australia and New Zealand 32

D

- Deactivating
 - advisory tones 31
 - call acceptance 29
 - handset 17
 - keypad lock 17
 - room monitor 27
- Delete key 16
- Deleting characters 16
- Destination number (room monitor) 27
- Dialling
 - call-by-call list 23
 - directory 23
 - using shortcuts 23
- Dialling pause
 - entering 2
- Directory 22
 - copying number from text 24
 - managing entries 23
 - opening 15
 - order of entries 22
 - saving entry 22
 - sending entry/list to handset 23
 - using to enter numbers 24
- Display
 - changing display language 28
 - contrast 28
 - in idle status 17
 - lighting 29
 - memory (directory/call-by-call) 23
 - network mailbox message 25
 - screen picture 29
 - setting 28
 - wrong language 28
- Display keys 2, 16
 - assigning 28

Index

Disposal	34
E	
ECO DECT	26
End call key	2, 20
Ending, call	20
Ending, see Deactivate	
Entry, selecting from directory	22
Environment	33
Error tone	31
F	
Fast access	
network mailbox	25
G	
Group call	21
H	
Handset	
activating/deactivating	17
advisory tones	31
contact with liquid	34
display language	28
display lighting	29
handset volume	30
handsfree volume	30
idle status	17
list	15
mode	20
muting	20
restoring to factory settings	31
screen picture	29
setting	28
setting up	8
using room monitor	26
volume	30
Handset operating time	
in room monitor mode	27
Handsfree	
key	2, 13
talking	20
Hash key	2, 17

Headset socket	13
Hearing aids	5

I

Icon	
alarm clock	26
for new messages	24
keypad lock	17
ringer	30
Idle status (display)	17
Idle status, returning to	17
Incorrect input (correction)	16
Installing, base station	7
Internal call	21

K

Key 1 (fast access)	2
Keypad lock	17
Keys	
assigning directory entry	22
call-by-call	2
control key	2, 15
delete key	16
display keys	2, 16
end call key	2, 20
fast access	2
handsfree key	2, 13
hash key	2, 17
message key	2
on/off key	2
recall key	2
shortcuts	22, 23
star key	2
talk key	2, 20

L

Language, display	28
Last number redial	24
Liquid	34
List	
call-by-call list	22
handsets	15

- Lock
 - activating/deactivating keypad lock . . . 17
- M**
- Mains adapter 5
- Making calls
 - accepting a call 20
 - external 20
 - internal 21
- Manual last number redial 24
- Medical appliances 5
- Memory
 - directory/call-by-call 23
- Menu
 - end tone 31
 - opening 15
 - overview 19
 - prompting 16
- Message key 2
 - opening lists 24
- Microphone 2
- Music on hold 20
- Muting the handset 20
- N**
- Network mailbox 25
- Network provider (numbers list) 22
- Number
 - as destination for room monitor 27
 - copying from directory 24
 - copying to directory 24
 - entering with directory 24
 - saving in the directory 22
- Numbers list
 - network provider 22
- O**
- On/Off key 2
- Order in directory 22
- P**
- Pack contents 6
- Q**
- Questions and answers 33
- R**
- Recall key 2
- Ringer
 - changing 30
 - setting volume 30
- Room monitor 26
- S**
- Screen picture 29
- Searching in directory 22
- Sending directory entry to handset 23
- Sensitivity (room monitor) 27
- Setting
 - date 12
 - time 12
- Setting up
 - handset 8
- Shortcut 19
- Shortcuts 22
- Signal tone, see Advisory tones
- Silent alert 31
- Snooze mode 26
- Sound, see Ringer
- Specifications 34
- Star key 2
- T**
- Talk key 2, 20
- Troubleshooting 33
- V**
- Viewing the network mailbox
 - message 25
- VIP (directory entry) 23
- Volume
 - handset handsfree volume 30
 - handset volume 30
 - ringer 30
 - setting 30
- W**
- Warning tone, see Advisory tones
- Writing, editing text 35

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt
Manufactured by Gigaset Communications GmbH
under trademark license of Siemens AG.
As of 1 Oct. 2011 Gigaset products bearing the
trademark 'Siemens' will exclusively use the trademark 'Gigaset'.

© Gigaset Communications GmbH 2010
All rights reserved. Subject to availability.
Rights of modification reserved.
www.gigaset.com

This user guide is made from 100% recycled paper.

Version: 20-05-2010



A3 1008 - M2 154 - C4 01 - 1 - 7619