

# UNDOK

## Android remote control application

---

End-User Manual



## End-User Manual

---

# Contents

1	Introduction .....	3
2	Getting Started .....	4
2.1	Network Connection Setup .....	4
3	How to .....	5
4	Operation .....	6
4.1	Menu options .....	6
5	Crear Groups .....	7
6	Now Playing .....	8
6.1	Multiroom Group volume controls .....	9
6.2	Preset .....	10
7	Browse .....	11
8	Source .....	12
9	UNDOK Setting .....	13
10	Settings .....	14
10.1	Equaliser .....	15
10.2	Setup new speaker .....	16

---

# 1 Introduction

Frontier Silicon's UNDOK App is an application, for Android Smart Devices, that allows users to control Venice 6.5 - based audio units running, IR2.8 or later, software. Using UNDOK you can navigate between the speaker's listening modes, browse and play content remotely as well as manage Wi-Fi Multiroom groups of speakers.

The App also provides a convenient way to display RadioVIS content, on your connected Smart Device, for DAB/DAB+/FM digital radio units without a suitable display.

Connection is via a network (Ethernet and Wi-Fi) to the audio device being controlled.

**Note:** Control of Multiroom groups is not available via Ethernet.

The UNDOK App runs on any Android Smartphone or tablet running Android 2.2 or later. An Apple iOS version is also available.

**Note:** For brevity, "Smart Device" is used in this guide to mean any Smartphone or tablet running a suitable version of the Android operating system.

## 2 Getting Started

UNDOK can control an audio device via a WiFi Network connection. Before UNDOK can be used to control an audio device you must first establish a connection between the Smart Device running UNDOK and the audio unit(s) you wish to control by ensuring they are both connected to the same Wi-Fi network.

### 2.1 Network Connection Setup


Ensure your smart device is connected to the required Wi-Fi network (see the documentation for your device for details). The audio devices to be controlled should also be set up to use the same Wi-Fi network. To connect your audio devices to the appropriate network either consult the documentation for your audio device or alternatively audio devices based on Frontier Silicon's Venice 6.5 module can be connected to your chosen network remotely via the UNDOK app. The 'Set up audio system' option on the UNDOK Navigation Menu walks you through the various setup stages via a series of screens. Once a stage is completed, to proceed to the next screen, swipe from right to left. Alternatively to go back a stage swipe from left to right.

You can abort the wizard at any stage by pressing the back button or exiting the App.

### 3 How to...



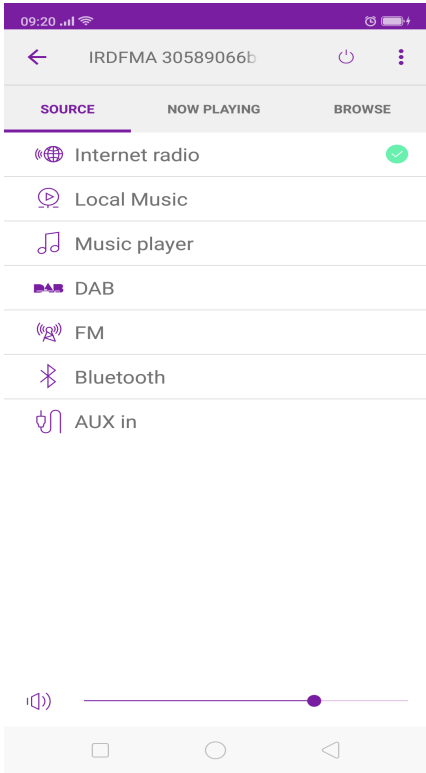
How to	Page number
To add or remove devices to/from a multi-room group	Page 7
To browse and play available audio sources	Page 11
To control group individual speaker volumes	Page 9
To create a group	Page 7
To edit the My EQ profile	Page 15
To control sound volume	Page 8
To play/pause	Page 8
To refresh the screen	Page 7
To select a group	Page 7
To select a source	Page 12
To select an EQ profile	Page 15
To set up new audio devices Note: When UNDOK detects an unconfigured audio device you are automatically prompted to set up the device.	Page 16
To shuffle the current playlist	Page 8
To skip/fast forward/back tracks	Page 8
To ungroup or remove a group	Page 7
To store a preset	Page 10
To select a preset	Page 10

# 4 Operation

This section describes the functionality available with UNDOK organized by the Navigation Menu options. The primary navigation tool is the Navigation Menu that can be accessed at any time either by tapping on the  icon in the top right-hand corne


## 4.1 Menu options:

The menu options and the functionality available are described in greater detail in the following sections.

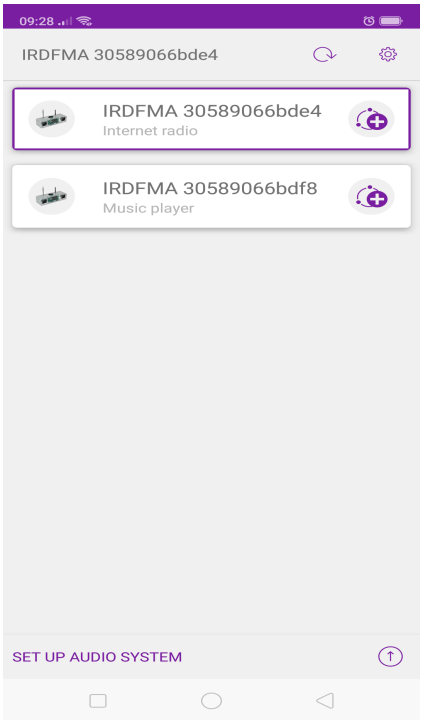My Home	This is where you manage the speaker devices used to output the audio. Presents options for selecting available audio devices and organizing into synchronized groups.	
Now Playing	Shows the Now Playing screen for the current mode.	
Browse	Allows you to browse for appropriate audio sources dependent on the current audio mode. (Browse is not available in Aux In).	
Source	The mode screen enables you to switch between available listening modes dependent on the capabilities of the connected audio device. (Internet Radio, Music Player, DAB, FM, iPod, Aux in). The current mode is indicated with the relevant mode icon.	
Settings	Presents options to define settings for the currently controlled audio device.	
Power Off	Turns the connected audio device into Standby mode (or if battery powered, OFF). By pressing the  button	

# 5 Create Groups


To create a group

Create a group by tapping  the app will suggest a default name for the group which you can overwrite as required.  
Note: the group name can be up to 32 characters and contain letters, numbers, spaces and most characters available on a standard qwerty keyboard.

To add devices to the group

Check the device to share with the main device  
After each change in the group structure, the My Home list info is refreshed.

To refresh the screen

Tap the  arrow circle in the header.

To ungroup or remove a group

Tap the delete group button  
If the group is empty the group is deleted.








To select a group

Tap on a group title to select the group.

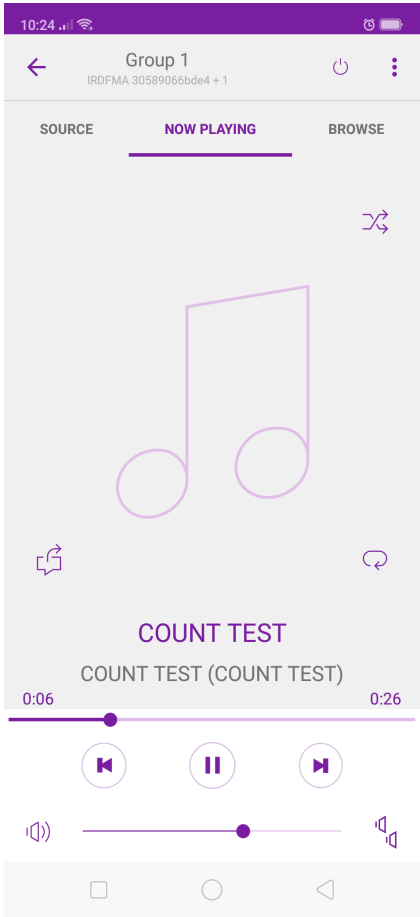

## 6 Now Playing Screen


Once an audio source has been selected, the now playing screen show details of the current track in the chosen audio mode. The display will vary dependent on the functionality available in the audio mode and the images and information associated with the audio file or broadcast currently playing.

<p>To control speaker volumes</p>	<p>Controlling a single audio device: the slider at the bottom of the screen adjusts the volume</p> <p>Tap the  speaker icon on the left of the volume slide to mute the speaker (when muted the icon has a diagonal line through it).</p> <p>Controlling a multiroom group of devices: the slider controls the master volume for the group.</p> <p>Tapping the  Multiple speaker icon provides access to the Volume control screen, see section 6.1 below.</p>	 <p>Multiroom group </p> <p>Single audio device </p>
<p>To change the master volume</p>	<p>Drag the volume slider up or down</p>	
<p>To control group individual speaker volumes</p>	<p>Tap the multiple speaker icon on the right of the volume slider</p>	
<p>To shuffle the current playlist</p>	<p>Tap the  shuffle icon to toggle shuffle mode on and off</p>	
<p>To save or select a preset</p>	<p>Tap the  icon to the left of the track/service title. See section 6.2 below</p>	
<p>To play/pause</p>	<p>Tap the play or pause icon</p>	
<p>To tune/search in FM mode</p>	<p>Options to tune and/or search up or down the radio frequencies are presented in FM mode</p>	
<p>To skip/fast forward/back tracks</p>	<p>Drag the track slider to fast forward or backward</p>	






# 6.1    Multiroom Group volume controls

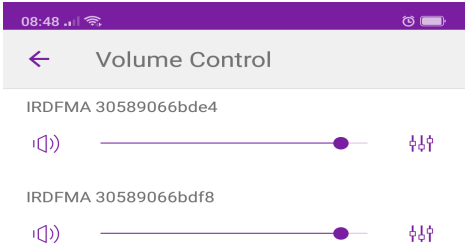Tapping on the  multiple speaker icon gives access to the Multiroom volume control screen:




Multiroom - Volume control screen

Provides access to the Equaliser , Mute  and volume controls for each individual speaker in a group and the master volume for adjusting the entire group

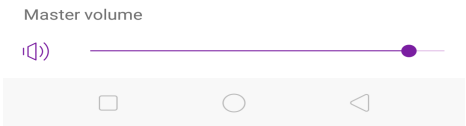


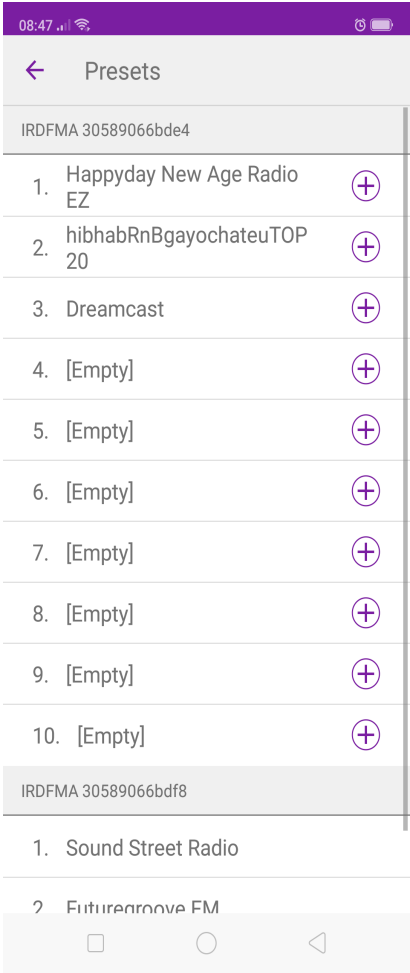
## 6.2 Preset

The preset menu is accessed from the Now Playing screen of those modes that offer the preset function by tapping on the  icon.

The Preset option displays the available preset stores in which your favourite radio stations and playlists can be saved. Available in Internet radio, DAB or FM modes, only the presets stores of the currently selected mode are shown within each listening mode.

To choose a preset      Tap on the appropriate preset listed

To store a preset      Tap on the  icon for the required preset to store the current audio source in that location.  
Note: this will overwrite any previously stored value in that particular preset store location.




# 7 Browse

The availability and list options presented for browsing audio content will depend on the mode and available stations/audio libraries.

To browse and play available audio sources

Use the presented menu tree to navigate to and select the required audio source. The options and depth of the tree depend on the mode and available audio sources.


Menu options with a right facing chevron give access to further menu branches.

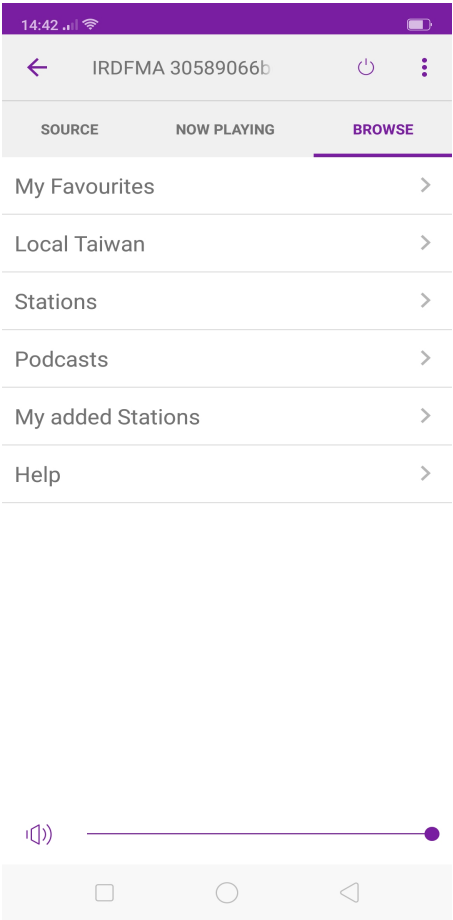


## 8 Source

Presents the available audio source modes. The list presented will depend on the capabilities of the audio devices or, in the case of a group, the capabilities of the group device.


Internet Radio	Provides access to a wide variety of internet radio stations available on the controlled audio device.
Local Music	Enables you to select and play local music from your smart phone
Music Player	Enables you to select and play music from any available shared music library on the network or on a storage device attached to the USB socket of the audio device currently being controlled.
DAB	Allows control of the DAB radio capabilities of the controlled audio device.
FM	Allows control of the FM radio capabilities of the controlled audio device.
Bluetooth	Allows connect to bluetooth devices
Aux in	Allows playback of audio from a device physically plugged into the Aux In socket of the controlled audio device.

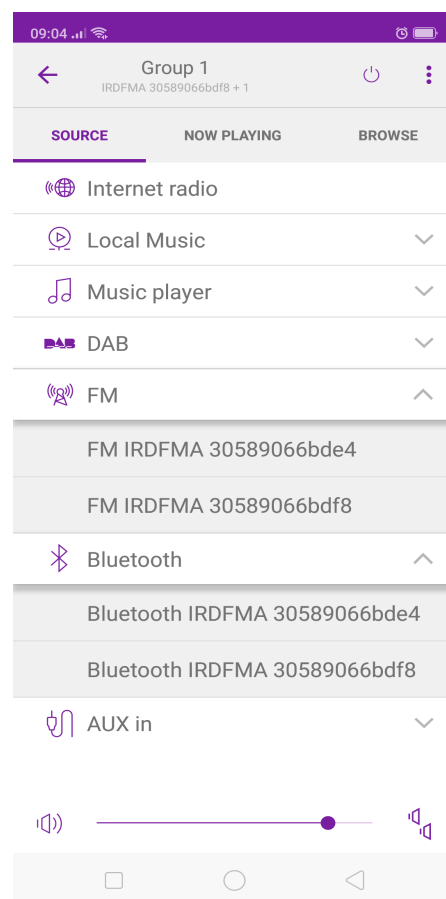


# 9    UNDOK Settings

Access from the top menu by tap  icon, the Settings menu provides general settings for the audio device


Option	Function
Audio Systems	Setting the audio device
Themes	Customize the app interface
Internet Radio station suggestion	Link to a website to suggest station
Logging enabled	Logging facilities understanding of any problems or errors caused by the UNDOK app or the device
Privacy Notice	Showing the product privacy policy
About	Showing app's information

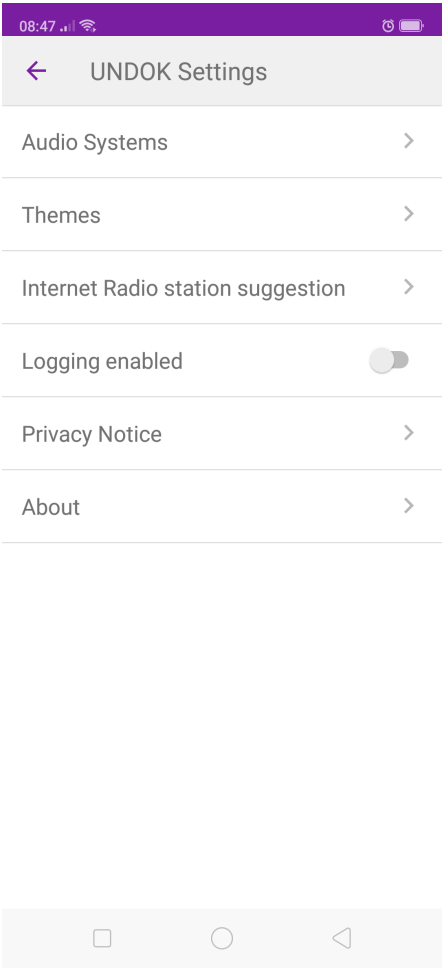

# 10 Settings

Access from the top menu by tap  icon, the Settings menu provides general settings for the audio device

Option	Function
Network Optimisation	Optimize the network
Sleep Timer	Allows you to set up a sleep interval in minutes, after which the connected audio devices will be put into standby mode.
Set Language	Up to 13 languages can be choose
Equalizer	Choose equaliser settings for the current device see section 9.1 below
Set date & time	Customize the date and time
Factory Reset	Reset the device

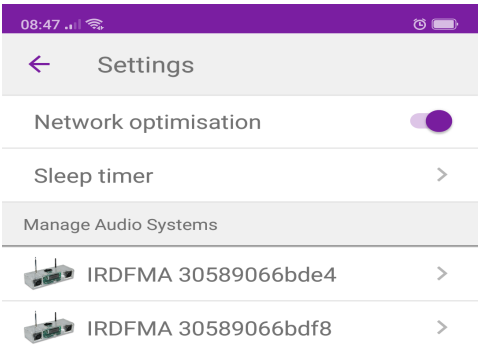


# 10.1 Equaliser

Accessed from the Settings Menu or via the EQ icon (available on the multi-room volume control screen) the EQ options allow you to choose from a menu of preset values and the user definable My EQ.


To select an EQ profile

Tap on the EQ option you require.  
The current selection is indicated with a tick.

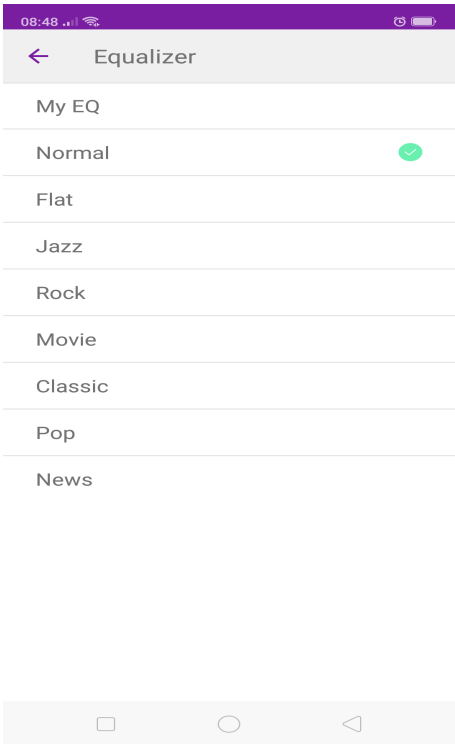

Editing the My EQ option presents a further window which allows you to define the 'My EQ' settings:

Drag the sliders to adjust

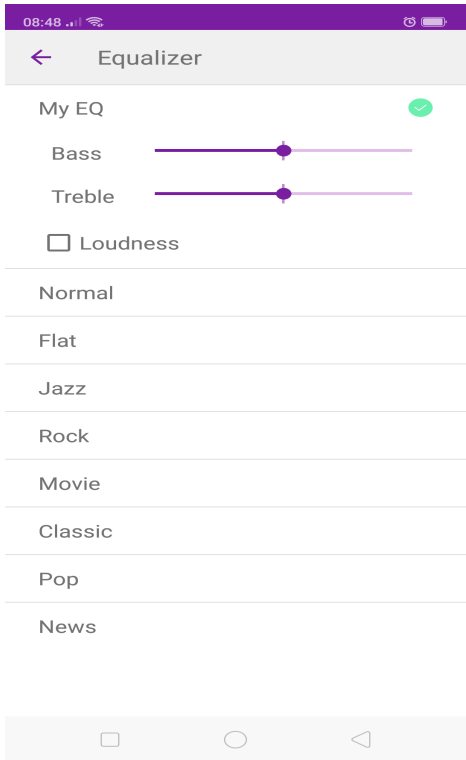


10.2 Setup new speaker

The UNDOK speaker setup wizard helps configure a suitable audio device to connect to the user’s Wi-Fi network. The wizard is accessible from the Navigation Menu and Settings screen.

A series of screens walks you through the various stages. To proceed to the next screen swipe from right to left. Alternatively to go back a stage swipe from left to right.

You can abort the wizard at any stage by pressing the back button or exiting the App.


The Slow blinking LED on your audio device should indicate that the device is in WPS or Connect mode, see the User Guide for your device for details.

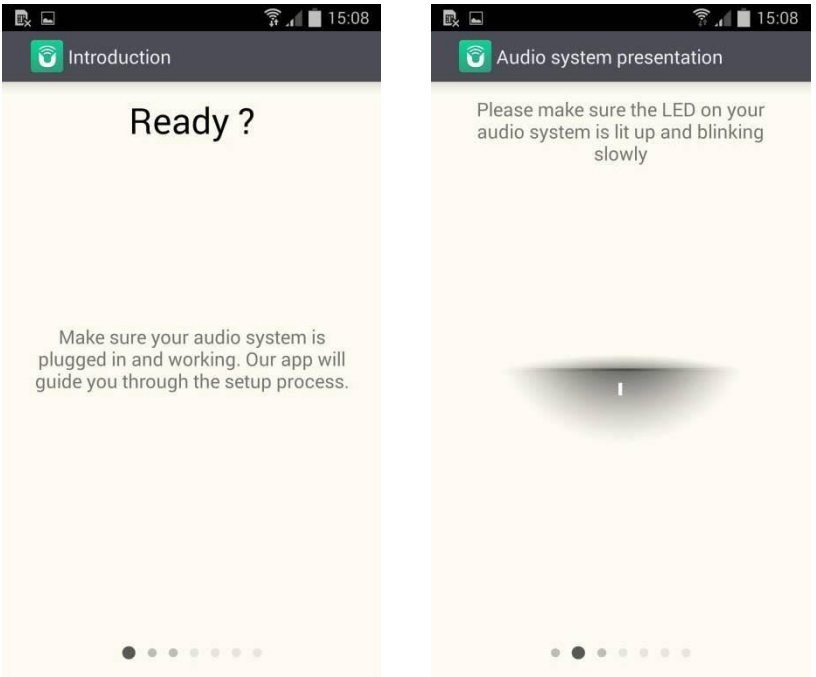

Your audio device (in WPS or Connect mode) should appear under Suggested Audio Systems. Listed under Other will be available Wi-Fi networks as well as potential audio devices.

If your device does not appear in either list; check it is switched on and in the correct connection mode.



To rescan for potential devices/networks the Rescan option is available at the bottom of the Other list.

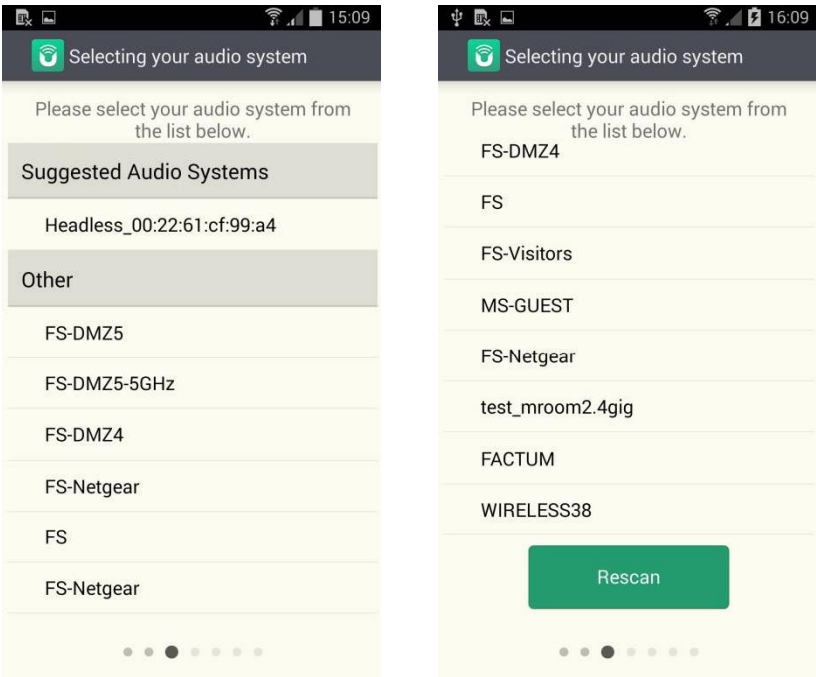





Once you have selected the desired audio device, you are presented with the opportunity to rename the device. When you are happy with the new name tap the Done option.


Note: the user name can be up to 32 characters and contain letters, numbers, spaces and most characters available on a standard qwerty keyboard.

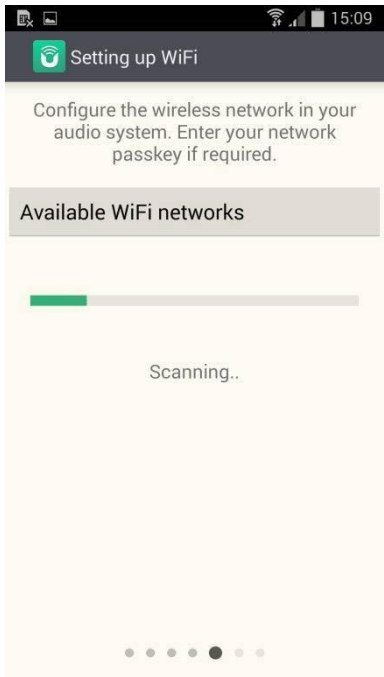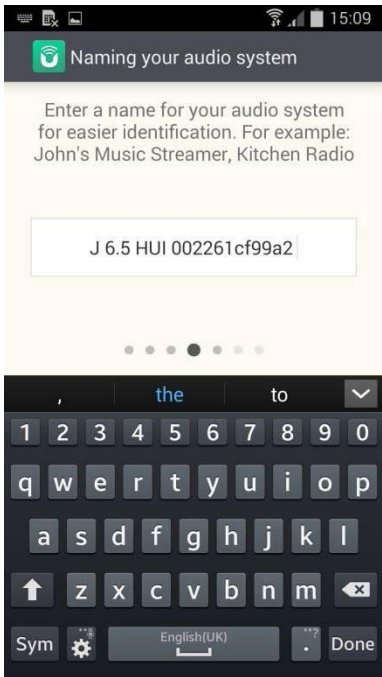

The next stage enables you to select the Wi-Fi network to which you wish to add the audio device. You will need to enter the network password if required.

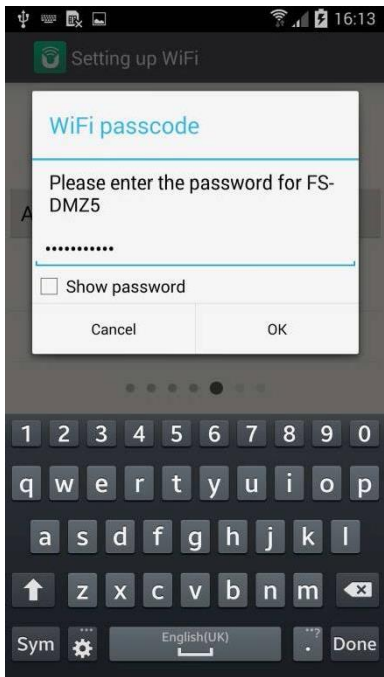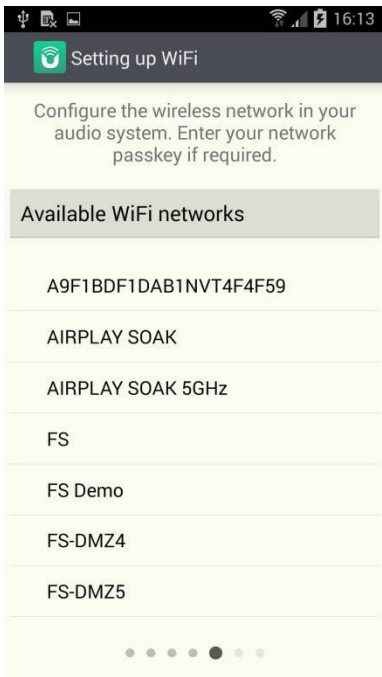

Note: If the password is incorrect or mistyped the connection will fail and you will need to start again by selecting 'Set up new Speaker'.

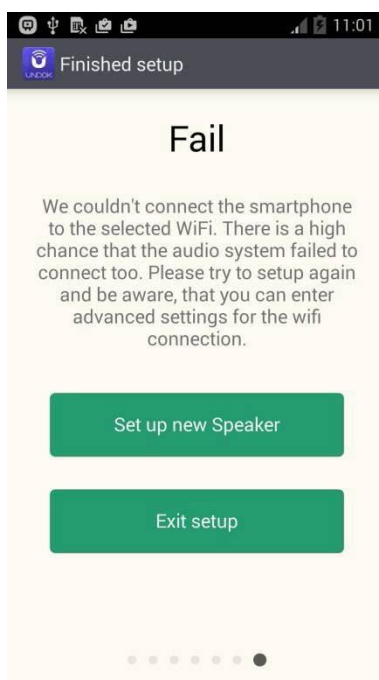

Once the network is selected and correct password entered the App configures the audio device, switches the audio device and the App smart device to the selected network and checks to ensure the setup has been successful. Once completed you can either exit the setup wizard or set up another suitable speaker device.

