

# Using the Enhanced Printer Accessory / for Kodak i800 Series Scanners

---

This guide provides instructions for installing and using the Enhanced Printer Accessory / for the *Kodak i800 Series Scanners*.

The Enhanced Printer Accessory provides an effective way to apply information to the scanned document and utilize document management systems such as batching and time-stamping. It also provides a print capability that is programmed to support alphanumeric characters as defined by the host. All print information is captured in a document header record. All printer controls and functions are accessible via the ISIS and TWAIN drivers.

The Enhanced Printer Accessory uses an HP C6602 ink cartridge. This cartridge is available in Black and Red from Kodak. Blue (HP C6602B) and Green (HP C6602G) ink cartridges can also be used; however, these cartridges need to be purchased from an office supplies store.

## Printed information


The information printed by the Enhanced Printer Accessory is defined during application setup by your system administrator or integrator.

Any combination of the following items can be printed, provided the total length does not exceed 40 characters.

- Document image address (any, all or none of the four image address fields, in any order)
- Date
- Time
- Document count
- Messages - up to 6 fields can be defined to build a print string





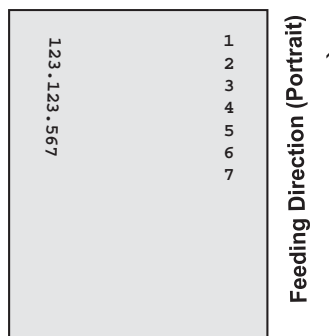



The Enhanced Printer Accessory can print one line per document and appears in a single column perpendicular to the leading edge of the document(s) as shown:

### Printing Results



**Font size:** two different character sizes, referred to as Large and Small, are available. The way the characters appear on the document will be dependent on the way your application is set up.


**Character orientation:** information is printed on each document in one of following orientations.

Large Comic	
Large Cinema	
Small Comic	
Small Cinema	
Large Comic 180	
Large Cinema 180	
Small Comic 180	
Small Cinema 180	

### Changing print positions

The horizontal print position can be changed manually using one of the 11 print positions.

1. Open the swing out door.

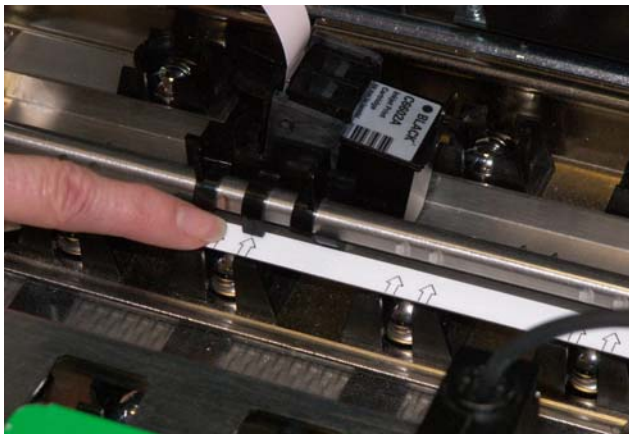

2. Slide the ink cartridge to the desired position matching the arrows with the detent position. Be sure the ink cartridge is securely in place.
3. Close the swing out door.


**NOTE:** Printing automatically stops approximately ½-inch (1.27 cm) from the trailing edge of the document, even if the information has not been completely printed.

## Replacing the ink cartridge


1. Open the swing out door.
2. Holding the ink cartridge as shown, rotate the ink cartridge to the left and remove it from the slot.



3. Slightly angle a new ink cartridge in position and push it into place.

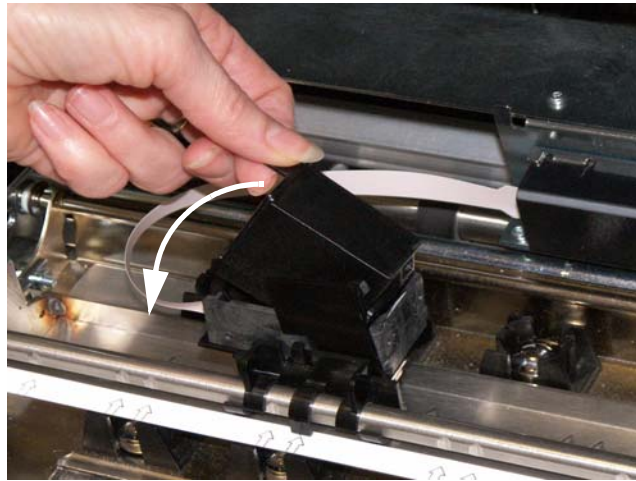

4. Push on the tab on the bottom of the ink cartridge holder to rotate the ink cartridge back into position.

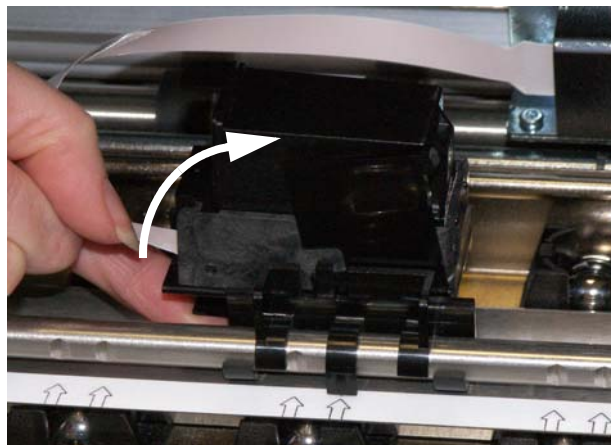

5. Slide the ink cartridge to the desired position matching the arrows with the detent position. Be sure the ink cartridge is securely in place.
6. Close the swing out door.

**IMPORTANT:**

- *Dispose of ink cartridges properly. Do not incinerate ink cartridges.*
- *When you are replacing the ink cartridge, if the ink cartridge carrier comes off the rail, it can easily be put back into position by angling the tabs on the bottom of the carrier at a 45 degree angle and snapping it back into place.*
- *If the flat ribbon cable should become disconnected, snap it back into position.*




## Replacing the ink blotter strips

Ink blotter strips collect ink overflow. They should be replaced when there is a build-up of ink. Replacement blotter strips may be purchased through your supplier.


1. Open the swing out door.
2. Lift the horizontal transport plate.




3. Remove the horizontal belt module.

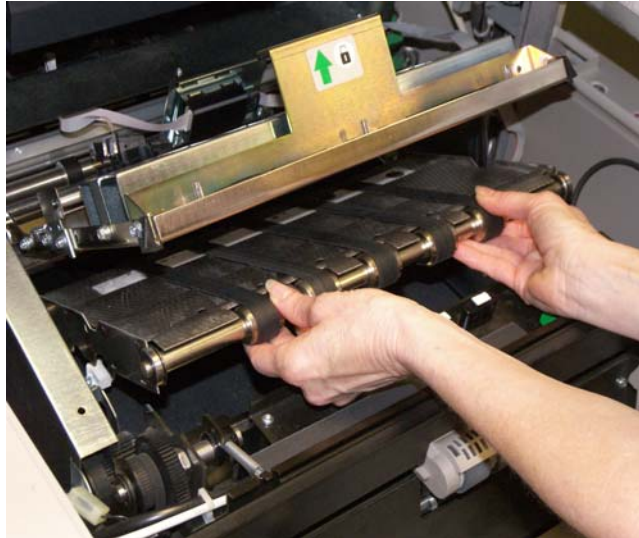

4. Locate the blotter strips. You can replace one, some or all of the strips as necessary.
5. Grasp a blotter strip and carefully pull it off the transport. Discard the soiled strips.

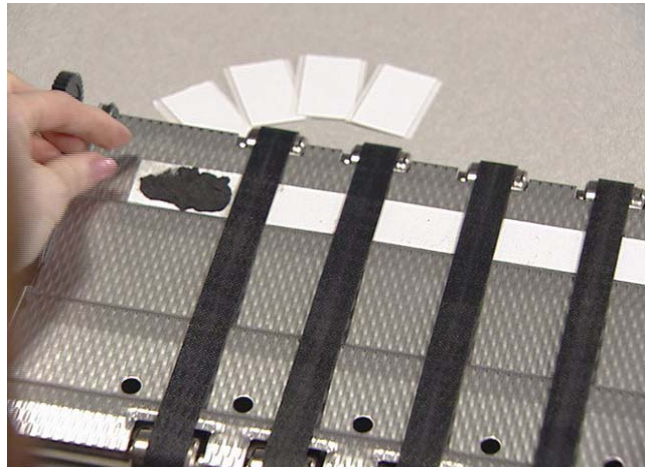

6. Install the new blotter strip. Make sure that you align it in the transport channel before pressing the adhesive side into the channel.

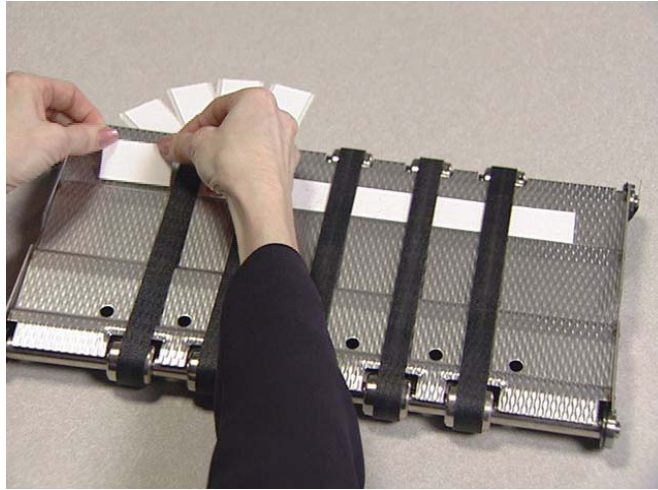

7. Re-insert the horizontal belt module.
8. Lower the horizontal transport plate.
9. Close the swing out door.

## Supplies

The following supplies are available:

Description	CAT No.
Enhanced Printer Black Ink Cartridge (HP C6602A)	818 3386
Enhanced Printer Red Ink Cartridge (HP C6602R)	159 6832
Ink Blotter Kit (Qty 60)	140 1728

EASTMAN KODAK COMPANY  
Document Imaging  
Rochester, New York 14650  
Kodak is a trademark of Eastman  
Kodak Company

