



Configuring external audio source with the DJ Console Mk4.

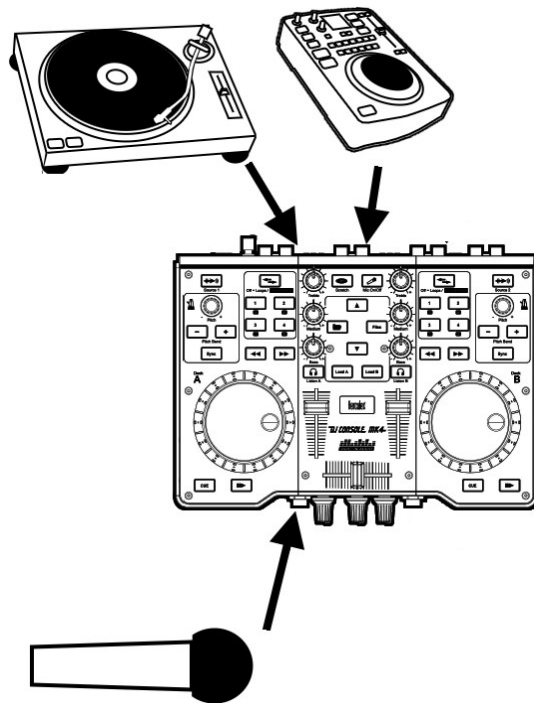

Many types of audio sources devices can be connected to your DJ Console MK4. Whether you want to use the songs from your MP3 player or a Timecoded CD, it is important to define your audio source type (i.e. the correct output level for the device you are connecting) in the control panel **before** connecting your audio source. Doing so will avoid possible audio issues such as distorted sound and preserve your ears.

From the DJ Control Panel, under INPUTS, 2 menus allow you to independently select the input type for **Deck A (Input 1-2)** or **Deck B (Input 3-4)**.

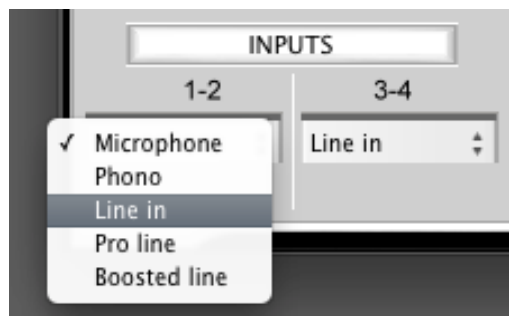

LEDs on the back of the Mk4 indicate the input type selected in the control panel for each deck.

Phono Level (Orange)

Used for:

- Turntables with a **Phono level** signal.



If necessary, connect the ground between the DJ Console your the turntable.

Note that this setting should not be used if your turntable produces a **Line Level** output (Check the user manual for more details). The same applies if you are using a Phono/Line level converter.

Line level (Red)

Used for:

- Consumer CD players
- MP3 players.
- Musical instruments (keyboard, Effects)
- Turntables with a **Line level** signal.
- Phono/Line level converter



Pro and Boosted Line level (Blue)

Used for:

- CDJ players
- Professional samplers.



You can select between **Pro level (+4dBu)** and **Boosted level (+8dBu)**, depending on your device output level (Check the user manual for more details).

Microphone level (LEDs off)

We recommend using **dynamic** microphones with an **impedance** rating of **1 to 64 ohms**. If you wish to use a **condenser** microphone, please note that an external power source will be required as the Console doesn't provide phantom power (+48 V).




Note that when a microphone is used as input, Input 1-2 is not available.

Please note that this doesn't pertain to the **Talk Over mode (Mic On-Off)** since this function acts directly on the hardware of Mk4 by sending the signal of the microphone input to the main output.

Once our device is connected, some additional configuration may be necessary in your software's settings in order to enable and use the DJ Console's inputs.

Note regarding ASIO (PC only)

When the DJ Console Mk4 operates in **ASIO 24Bit**, **Input 3-4** is automatically disabled, indicated as follow in the control panel:

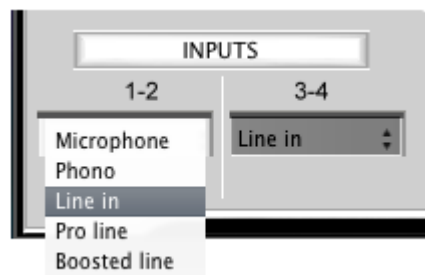

Consequently, **Input 3-4** cannot be used with an external source.