



Configuring external audio source with the DJ Console 4-Mx.

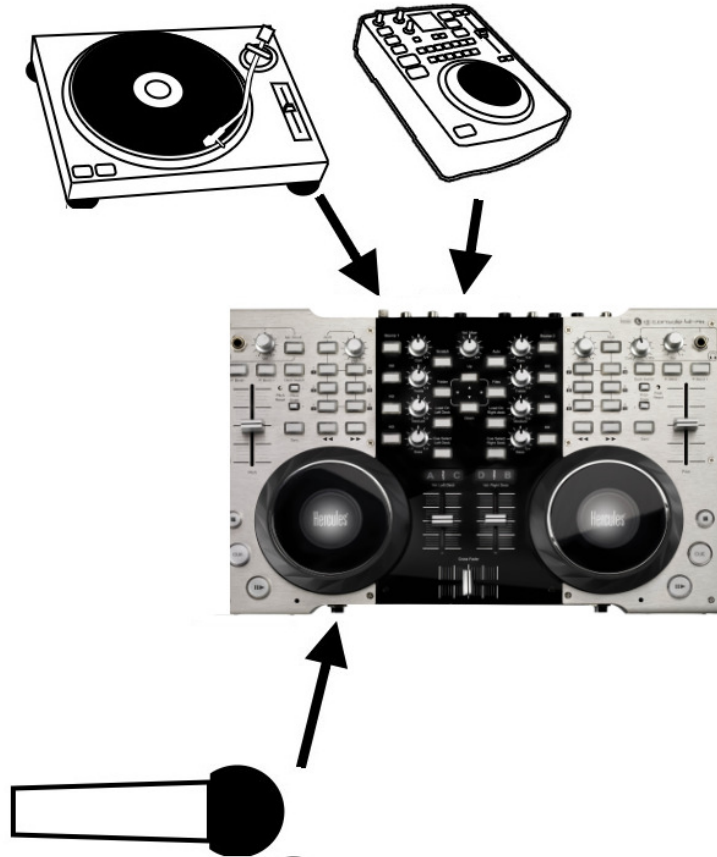

Many types of audio sources devices can be connected to your DJ Console 4-MX. Whether you want to use the songs from your MP3 player or a Timecoded CD, it is important to define your audio source type (i.e. the correct output level for the device you are connecting) in the control panel **before** connecting your audio source. Doing so will avoid possible audio issues such as distorted sound and preserve your ears.

From the DJ Control Panel, under **INPUTS Channels**, 2 menus allow you to independently select the input type for **Deck A (Input 1-2)** or **Deck B (Input 3-4)**.

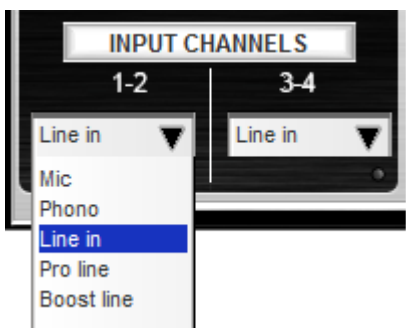

Microphone level (MIC)

- When selecting the microphone as Input or recording source, keep in mind that it will not be possible to use Input 1-2 at the same time.

- It is not necessary to select MIC if you simply wish to use the **Talk Over** mode (**Mic On-Off**) since this function acts directly on the hardware of 4-Mx by sending the signal of the microphone input to the main output.

We recommend using **dynamic** microphones with an **impedance** rating of **1 to 64 ohms**. If you wish to use a **condenser** microphone, please note that an external power source will be required as the Console doesn't provide phantom power (+48 V).

Phono Level

Used for:

- Turntables with a **Phono level** signal.

If necessary, connect the ground between the DJ Console your the turntable.

Note that this setting should not be used if your turntable produces a **Line Level** output (Consult the user manual for more details). The same applies if you are using a Phono/Line level converter.

Line level

Used for:

- Consumer CD players
- MP3 players.
- Musical instruments (keyboard, Effects)
- Turntables with a **Line level** signal.
- Phono/Line level converter

Pro and Boosted Line level

Used for:


- CDJ players
- Professional samplers.

You can select between **Pro level (+4dBu)** and **Boosted level (+8dBu)**, depending on your device output level (Consult the device user manual for more details).

Once our device is connected, some additional configuration may be necessary in your software's settings in order to enable and use the DJ Console's inputs.

Note regarding ASIO (PC only)

When the DJ Console 4-Mx operates in **ASIO 24Bit**, **Input 3-4** is automatically disabled, indicated as follow in the control panel:

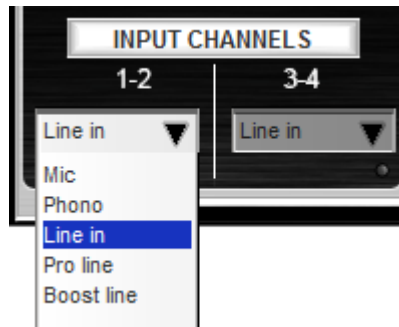

Consequently, **Input 3-4** cannot be used with an external source.