



OpenStage 60 SIP, OpenStage 60 G SIP  
OpenStage 80 SIP, OpenStage 80 G SIP  
OpenStage Key Module  
OpenScape Voice

**User Guide**

Our Quality and Environmental Management Systems are implemented according to the requirements of the ISO9001 and ISO14001 standards and are certified by an external certification company.

Copyright © Unify GmbH & Co. KG 12/2013  
Hofmannstr. 51, 81379 Munich/Germany

All rights reserved.




Reference No.: A31003-S2030-U107-2-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.



Availability and technical specifications are subject to change without notice.

Unify, OpenScape, OpenStage and HiPath are registered trademarks of Unify GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.

## Important information

	<p>For safety reasons, the telephone should only be supplied with power:</p> <ul style="list-style-type: none"> <li>• using the original power supply unit. Part number: L30250-F600-C14x (x: 1=EU, 2=UK, 3=US) or</li> <li>• in a LAN with PoE (Power over Ethernet) which complies with the IEEE 802.3af standard.</li> </ul>
	<p>Never open the telephone or a key module. Should you encounter any problems, contact the administrator.</p>
	<p>Use only original accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.</p>

## Trademarks


	<p>The device conforms to the EU directive 1999/5/EC as attested by the CE marking.</p>
	<p>All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.</p> <p>Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.</p> <p>For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.</p> <p>The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.</p>

## Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments, such as bathrooms.

## Software update

---

 During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

---

## Product support on the Internet

Information and support for our products can be found on the Internet at:

<http://www.unify.com/>.

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at:

<http://wiki.unify.com/>.

# Contents

<b>Important information . . . . .</b>	<b>3</b>
Trademarks . . . . .	3
Location of the telephone . . . . .	4
Software update . . . . .	4
Product support on the Internet. . . . .	4
<b>General information . . . . .</b>	<b>13</b>
About this manual . . . . .	13
Symbols used in the manual . . . . .	13
Service . . . . .	14
Intended use . . . . .	14
Telephone type . . . . .	14
Speakerphone quality and display legibility . . . . .	14
Single-line telephone/multi-line telephone . . . . .	14
<b>Getting to know your OpenStage phone . . . . .</b>	<b>15</b>
The user interface of your OpenStage . . . . .	15
Ports on the underside of the phone . . . . .	16
Using network ports more efficiently . . . . .	17
OpenStage Key Module . . . . .	17
OpenStage Manager . . . . .	18
Features . . . . .	18
Keys and controls . . . . .	19
Function keys . . . . .	19
Audio controls . . . . .	19
Mode keys . . . . .	20
TouchGuide . . . . .	21
Programmable sensor keys . . . . .	23
Trunk keys (on multi-line phones only) . . . . .	24
Keypad . . . . .	26
Graphic display . . . . .	27
Appearance . . . . .	27
Display keyboard . . . . .	28
Context-dependent displays . . . . .	29
Idle mode . . . . .	29
Telephony dialogs . . . . .	30
Messages . . . . .	30
Context menus . . . . .	31
Pop-up window . . . . .	32
Application tab . . . . .	33
Video link display . . . . .	34
Camera test with "Self view" . . . . .	35
Disabled video function . . . . .	35
<b>Applications available on your OpenStage phone . . . . .</b>	<b>36</b>
Application navigation . . . . .	36
Telephony interface . . . . .	37
Single-line view . . . . .	37
Multi-line view . . . . .	38

Phonebooks . . . . .	40
Personal phonebook . . . . .	41
Corporate directory . . . . .	42
Call lists . . . . .	43
Additional notes on call lists . . . . .	43
Managing call lists . . . . .	44
Entry details . . . . .	45
Using an entry . . . . .	45
Voicemail (answering machine) . . . . .	46
Program/Service menu/Applications menu . . . . .	47
User settings . . . . .	47
Administration . . . . .	49
Applications . . . . .	49
Help function . . . . .	49
Control and monitoring function . . . . .	50
<b>Basic functions . . . . .</b>	<b>51</b>
Secure voice transmission . . . . .	51
Emergency mode . . . . .	51
Incoming calls . . . . .	52
Answering a call via the handset . . . . .	52
Answering a call via the loudspeaker (speakerphone mode) . . . . .	52
Answering a call with a headset . . . . .	53
Directed pickup . . . . .	54
Picking up call . . . . .	54
Picking up a held call . . . . .	55
Switching to speakerphone mode . . . . .	56
Switching to the handset . . . . .	56
Switching from headset to speakerphone mode . . . . .	57
In standard mode . . . . .	57
In US mode . . . . .	57
Open listening . . . . .	57
Ending a call . . . . .	58
Group call . . . . .	59
Listening to voicemail . . . . .	61
Call control (2nd alert) . . . . .	62
Two calls simultaneously . . . . .	62
While dialling . . . . .	63
Making calls . . . . .	64
Off-hook dialling . . . . .	64
On-hook dialling . . . . .	64
Immediate dialling . . . . .	66
Dialling using the hot or warm line function . . . . .	67
Redial . . . . .	68
Activating/deactivating the microphone . . . . .	69
Consulting a second party . . . . .	70
Ending a consultation call . . . . .	71
Canceling a consultation call . . . . .	71
Switching to the held party (alternating) . . . . .	72
Putting on hold and retrieving successively or simultaneously . . . . .	72
Connecting parties . . . . .	73
Callback . . . . .	74
Requesting callback . . . . .	74
Responding to a callback . . . . .	74
Permitting a callback . . . . .	75
Calling back missed calls . . . . .	76

<b>Call forwarding</b> .....	<b>77</b>
Standard call forwarding .....	77
Using call forwarding .....	78
Activate or deactivate immediate forwarding .....	78
Saving destination phone numbers for call forwarding .....	79
Copy and insert destination phone numbers .....	80
Assign a destination phone number for call forwarding .....	80
Activate/deactivate call forwarding .....	81
Defining the ring duration before call forwarding on no reply .....	82
Call forwarding by call type .....	83
Forwarding menu .....	83
Using call forwarding .....	84
Activating or deactivating immediate call forwarding .....	84
Saving destination phone numbers for call forwarding .....	85
Preconfiguring or changing destination phone numbers .....	87
Copying and pasting destination phone numbers .....	87
Assigning a destination phone number to a call type .....	89
Activating/deactivating call forwarding .....	89
Call forwarding chain .....	91
<b>Programmable sensor keys</b> .....	<b>92</b>
List of available functions .....	92
Programming sensor keys .....	93
Starting programming .....	93
Beginning programming .....	94
Programming enhanced functions .....	94
Repertory dial .....	94
Feature toggle .....	95
Configuring a fixed forwarding key .....	95
Using sensor keys .....	97
Example 1: Calling saved number .....	97
Example 2: Call Waiting toggle Activating/deactivating .....	97
Example 3: Immediate ring .....	97
Resetting sensor keys .....	98
<b>Enhanced phone functions</b> .....	<b>99</b>
Incoming calls .....	99
Rejecting a call .....	99
Deflecting a call .....	99
Configuring call forwarding .....	101
Placing a call on hold .....	102
Call waiting (second call) .....	108
Transferring a call .....	111
CTI calls .....	114
Making calls .....	116
Dialling with the DDS key .....	116
Dialling from the local phonebook .....	116
Dialling from the corporate directory .....	116
Dialling a phone number from a list .....	117
Calling a contact from a group .....	117
Using autodial delay .....	118
Conference .....	120
Local conference .....	120
System-supported conference .....	123

<b>Making calls with multiple lines</b> . . . . .	<b>125</b>
Incoming calls . . . . .	125
Accepting calls for the primary line . . . . .	125
Accepting calls for secondary lines . . . . .	125
Making calls . . . . .	126
Manual trunk seizure . . . . .	126
Automatic trunk seizure . . . . .	126
Dialling the last dialled number . . . . .	127
Forwarding calls on primary line . . . . .	127
During calls . . . . .	128
Making and receiving calls on a single line . . . . .	128
Making and receiving calls with multiple lines . . . . .	128
Putting a line on hold . . . . .	129
Lines with hot or warm line function . . . . .	129
Busy override . . . . .	131
Direct station selection keys . . . . .	132
Calling a station directly . . . . .	132
Call pickup . . . . .	133
Deflecting a call to a DSS station . . . . .	134
LED display on DSS keys . . . . .	134
Making calls in an executive-secretary team . . . . .	135
Sample scenarios . . . . .	135
Accepting a call . . . . .	136
Connecting a call . . . . .	137
DSS keys . . . . .	139
Using line overview . . . . .	139
"Executive-secretary" with Executive/Assistant Cockpit . . . . .	140
Sample scenarios . . . . .	140
Function overview . . . . .	141
Launching the E/A Cockpit from the secretary . . . . .	142
Managing call forwarding . . . . .	143
Managing secretary statuses . . . . .	145
Making calls in the E/A Cockpit team . . . . .	147
Settings for multi-line phones (keyset) . . . . .	148
Displaying the line in the "Overview" tab . . . . .	148
Setting the time for a delayed ringer . . . . .	149
Setting the ringtone for lines . . . . .	150
Configuring the "Overview" tab display . . . . .	152
Line preview . . . . .	153
Rollover for a line . . . . .	154
 <b>Phonebooks and call lists</b> . . . . .	 <b>155</b>
Personal phonebook . . . . .	155
Creating a new contact . . . . .	155
Editing a contact . . . . .	155
Selecting a preferred phone number . . . . .	155
Deleting all phonebook entries . . . . .	156
Managing contact groups . . . . .	157
Deleting a group . . . . .	158
Saving a picture for a contact . . . . .	158
Quick search in the phonebook . . . . .	159
Changing the display format for contacts . . . . .	160



Corporate directory . . . . .	161
Searching for a contact . . . . .	161
Quick search . . . . .	163
Copying entries to the local phonebook . . . . .	163
Call lists . . . . .	164
Viewing details . . . . .	164
Deleting entries . . . . .	164
Copying entries from the call lists into the personal phonebook . . . . .	165
Call logging . . . . .	166
<b>Privacy/security . . . . .</b>	<b>168</b>
Deactivating the ringtone . . . . .	168
Deactivating the ringer temporarily for incoming calls and reactivating it . . . . .	169
Do not disturb . . . . .	169
Enabling do not disturb via a key . . . . .	169
Enabling "Do not disturb" via the idle menu . . . . .	170
Allowing "Do not disturb" . . . . .	170
Security . . . . .	171
User password . . . . .	171
Locking the phone . . . . .	174
<b>Mobility function . . . . .</b>	<b>176</b>
Mobility scenarios . . . . .	176
Logging on and off at the same phone . . . . .	176
Logging on and off at different phones . . . . .	176
Logging on and off at the same phone . . . . .	177
Logging on to the phone . . . . .	177
Logging off from the phone . . . . .	178
Logging on at different telephones . . . . .	179
Logging on with forced logoff at a remote phone . . . . .	179
Logging on with forced, delayed logoff at a remote phone . . . . .	180
<b>Video function . . . . .</b>	<b>181</b>
Activating and deactivating the function temporarily . . . . .	181
Activating and deactivating a function with a key . . . . .	181
Self view . . . . .	182
Video link . . . . .	182
Consultation . . . . .	183
Holding a call . . . . .	184
Installing a USB camera . . . . .	184
Connecting a USB camera . . . . .	184
Activating and deactivating the video function . . . . .	184
<b>OpenScape Voice functions . . . . .</b>	<b>185</b>
Feature toggle key for hunt group . . . . .	185
Making anonymous calls . . . . .	186
Deactivating . . . . .	186
Activating . . . . .	186
Temporarily activate anonymous calling for the next call . . . . .	187
Temporarily deactivate anonymous calling for the next call . . . . .	187
Creating a list for selective calls . . . . .	188
For call acceptance . . . . .	188
For call rejection . . . . .	188

Anonymous calls . . . . .	189
Rejecting . . . . .	189
Accepting . . . . .	189
Using abbreviated dialling . . . . .	190
Call tracing . . . . .	190
Hunt group functions . . . . .	191
Making a line busy . . . . .	191
Marking the last line in the hunt group chain . . . . .	192
Reachability . . . . .	193
Serial call . . . . .	193
Parallel call . . . . .	193
Parking a call . . . . .	195
Park a call . . . . .	195
Unparking . . . . .	195
Silent Monitoring . . . . .	196
Active silent monitoring . . . . .	196
Muted silent monitoring . . . . .	197
One-way Intercom and Two-way Intercom function . . . . .	198
One-way Intercom . . . . .	199
Two-way Intercom . . . . .	199
Announcing the local phone number . . . . .	200
Dialling the last caller . . . . .	200
Retrieving and dialling the last answered caller . . . . .	200
Retrieving and dialling the phone number of the last caller dialled . . . . .	200
Picking up out-of-hours calls . . . . .	201
Table of codes for OpenScape Voice functions . . . . .	202

## Impact Levels . . . . . 203

Answering a call with a lower Impact Level . . . . .	203
Answering a call . . . . .	203
Answering forwarded calls . . . . .	203
Answering a second call . . . . .	203
Calls to a lower Impact Level . . . . .	205
Offhook dialling . . . . .	205
Forwarding a call with a lower IL . . . . .	205
Conducting a call with a lower Impact Level . . . . .	206
Conducting a call . . . . .	206
Placing a call on hold . . . . .	206
Conference . . . . .	206
Reconnecting . . . . .	206
IL alarm . . . . .	206

## Individual phone configuration . . . . . 207

Display . . . . .	207
Adjusting the display to a comfortable reading angle . . . . .	207
Appearance . . . . .	207
Lamp brightness for TouchSlider . . . . .	208
Set the sensitivity of the TouchGuide . . . . .	209
Contrast for the OpenStage Key Module . . . . .	210
Screensaver . . . . .	211
Activating the screensaver . . . . .	211
Automatic screensaver activation . . . . .	212
Setting the fade time for the screensaver . . . . .	213

Date and time . . . . .	214
Setting the time . . . . .	214
Setting the date . . . . .	214
Time display format . . . . .	215
Date display format . . . . .	215
Setting daylight saving time . . . . .	216
Automatic daylight saving time . . . . .	217
Audio . . . . .	218
Volumes . . . . .	218
Settings . . . . .	219
Special ringtones . . . . .	223
Activating/deactivating the ringer . . . . .	224
Adjusting the volume during a call . . . . .	224
Nonsecure voice communication tone and message . . . . .	225
Key click . . . . .	226
Setting the language and country . . . . .	227
Display language . . . . .	227
Country-specific setting . . . . .	229
Context menu . . . . .	230
Activating/deactivating automatic menu display . . . . .	230
Setting the display time . . . . .	230
Alarm on changing the Impact Level . . . . .	231
Bluetooth . . . . .	232
Activating and deactivating Bluetooth . . . . .	232
Open Bluetooth discoverability . . . . .	233
Bluetooth name for your OpenStage . . . . .	234
Configuring pairing settings . . . . .	235
Entering the pairing PIN . . . . .	236
Managing Bluetooth devices . . . . .	237
Blacklist for Bluetooth devices . . . . .	241
Network information . . . . .	242
Resetting user data . . . . .	243
Initiating the reset . . . . .	243

## Bluetooth . . . . . 244

Discoverability . . . . .	244
Pairing . . . . .	244
Transferring contacts . . . . .	245
Receiving a vCard . . . . .	245
Sending a vCard . . . . .	245
Using a Bluetooth headset . . . . .	247
Connecting the Bluetooth headset . . . . .	247
Testing a Bluetooth headset . . . . .	248
Using a Bluetooth Conference Phone . . . . .	249
Connecting a "Konftel 60W" Bluetooth conference phone . . . . .	249
Testing the "Konftel 60W" Bluetooth conference phone . . . . .	250

## Backup/restore . . . . . 251

Saving user data . . . . .	252
Restoring user data . . . . .	253
Deleting a user backup on a storage medium . . . . .	254
Displaying and checking backups on USB media . . . . .	255

<b>Call recording</b> . . . . .	<b>256</b>
Recording modes . . . . .	256
Explanations of recording . . . . .	257
Recordable calls . . . . .	257
Non-recordable calls . . . . .	257
Enhanced functions: . . . . .	257
The following features are not supported: . . . . .	257
Recording tips . . . . .	257
Multiline . . . . .	258
Recording calls . . . . .	258
Automatic call recording. . . . .	258
Manual call recording. . . . .	258
Call recording with AutoStart . . . . .	258
Controlling call recording . . . . .	259
Consultation during call recording . . . . .	260
Second call during call recording . . . . .	260
Call recording while alternating . . . . .	261
Your call is paused and reconnected during the recording. . . . .	261
Setting up a conference during recording . . . . .	261
Adding conference participants during the recording. . . . .	261
Your call is included in a conference during the recording. . . . .	262
Putting a line on hold manually during the recording . . . . .	262
Diagnostic information. . . . .	263
 <b>Web interface (WBM)</b> . . . . .	 <b>265</b>
Calling up the WBM interface . . . . .	265
Administrator Pages. . . . .	265
User pages. . . . .	265
User menu . . . . .	266
 <b>Fixing problems</b> . . . . .	 <b>270</b>
Caring for your telephone . . . . .	270
Troubleshooting . . . . .	270
Contact partner in the case of problems . . . . .	270
 <b>Local user menu</b> . . . . .	 <b>271</b>
Opening the user menu on the phone. . . . .	271
User menu display . . . . .	271
Key functions . . . . .	281
 <b>Index</b> . . . . .	 <b>283</b>
 <b>Display icons</b> . . . . .	 <b>287</b>

## General information

### About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.


If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your sales partner for information on how to upgrade.

This user guide is intended to help you familiarise yourself with OpenStage and all of its functions. It contains important information on the safe and proper operation of your OpenStage phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

These instructions should be read and followed by every person installing, operating or programming an OpenStage phone.

---

 For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

---

This user guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating your OpenStage phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

### Symbols used in the manual

Operations and settings that can be made both at the phone and over the WBM interface are indicated by an icon and page reference.




is a reference to an operation or setting performed directly on the phone



is a reference to an operation or setting performed via the WBM interface

## Service

- 
-  Our service department can only help you if you experience problems or defects with the phone.  
Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.  
For queries regarding connection of the telephone, please contact your network provider.
- 

If you experience problems or defects with the phone, please dial the service number for your country.

## Intended use

The OpenStage phone is a desktop unit designed for voice transmission and for connection to the LAN. It can also be used as a workstation device. Any other use is regarded as unauthorised.

## Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communications platform can be obtained from your service technician.

Please have this information ready when you contact our service department regarding faults or problems with the product.

## Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.  
The optimum handsfree distance is 20 in. (50 cm).
- Proceed as follows to optimise display legibility:
  - Turn the phone to tilt the display. This ensures you have a frontal view of the display while eliminating light reflexes.
  - Adjust the contrast as required → Page 207.

## Single-line telephone/multi-line telephone

Your OpenStage is a "multi-line telephone". This means that multiple lines can be configured, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls.

The programmable sensor keys function as line keys on multi-line phones → Page 24.

The "Overview" tab on the telephony interface provides information about the lines configured on your phone and the current status of each line → Page 38.

When using a multi-line phone to make and receive calls, certain particularities must be taken into account → Page 125.

## Getting to know your OpenStage phone

The following sections describe the most frequently used operating elements and the displays on your OpenStage phone.


### The user interface of your OpenStage

The diagram shows an OpenStage 60/60 G SIP, the description applies to both product variants.



1	You can make and receive calls as normal using the <b>handset</b> .
2	The large <b>graphic display</b> permits intuitive operation of the phone → Page 27.
3	The <b>mode keys</b> allow easy operation of the applications featured on your telephone. To select a tab within a function press the relevant key repeatedly until the required tab is displayed → Page 20.
4	Use the <b>TouchGuide</b> to navigate conveniently through the applications on your telephone → Page 21.
5	You can customise your telephone by assigning phone numbers and functions to the <b>programmable sensor keys</b> → Page 23.
6	The <b>function keys</b> allow you to call up the most frequently used functions during a call (e.g. Disconnect) → Page 19.
7	<b>Audio keys</b> are also available, allowing you to optimally configure the audio features on your telephone → Page 19.
8	The <b>TouchSlider</b> allows you to adjust the current volume (e.g. telephone rings - ringer volume) → Page 19.
9	Incoming calls and new voice messages are visually signalled via the <b>alert bar</b> .
10	The <b>keypad</b> can be used to enter phone numbers and text → Page 26.

## Ports on the underside of the phone

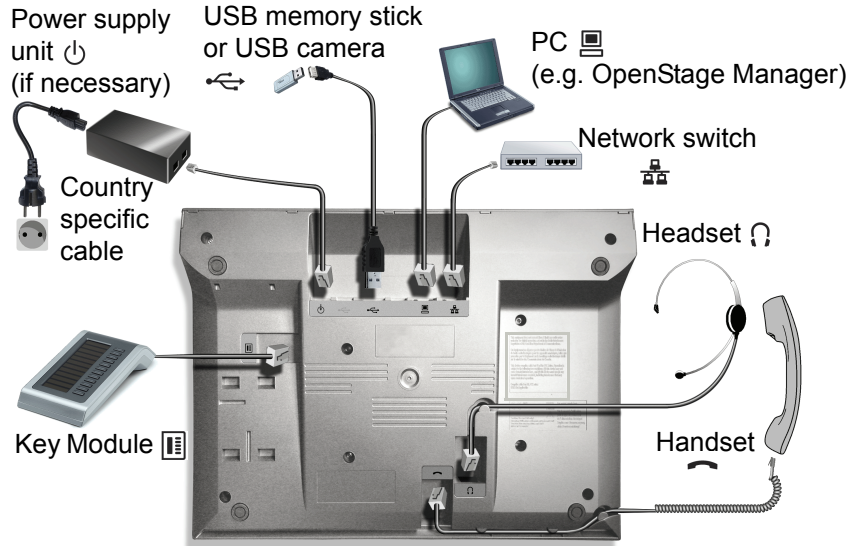

## OpenStage operating features

OpenStage	80	80 G	60	60 G
Display type	Colour TFT 640x480	Colour TFT 640x480	Colour TFT 320x240	Colour TFT 320x240
Illuminated display	✓	✓	✓	✓
Programmable sensor keys	9	9	8	8
Full-duplex speakerphone function	✓	✓	✓	✓
Headset	✓	✓	✓	✓
USB master	✓	✓	✓	✓
Interface for key modules	✓	✓	✓	✓
Bluetooth	✓	✓	✓	✓
10/100 Mbps switch → Page 17	✓		✓	
1000 Mbps switch → Page 17		✓		✓
Web-Based Management (WBM)	✓	✓	✓	✓


➡ To avoid damaging your OpenStage phone, make sure you use the adapter cable C39195-Z7704-A5 when connecting a USB stick.

➡ Do not connect a USB hub to the USB master as this can cause stability problems.



## Using network ports more efficiently

OpenStage 60/80 SIP has a built-in 10/100 Mbps Ethernet switch. OpenStage 60 G/80 G SIP has a 1000 Mbps Ethernet switch. This means that you can also connect a PC with a Gigabit LAN connection to the LAN directly via the phone. The telephone-PC connection option must first be activated on the telephone by administrator.

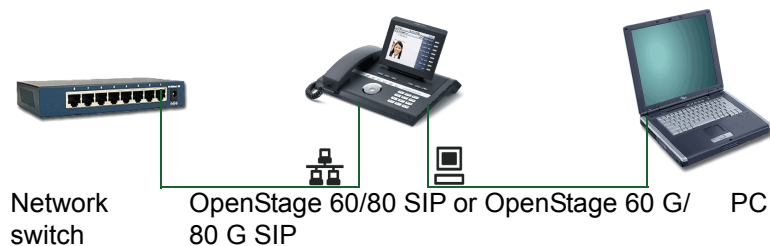

Using this connection option saves one network port for each switch used and requires fewer or shorter network cables when arranged correctly.

## OpenStage Key Module

The OpenStage Key Module is a key module attached to the side of the phone that provides 12 additional illuminated, programmed keys.

Like keys on the phone, these keys can be programmed and used according to your needs  
→ Page 23.

You can attach up to two OpenStage Key Modules to your OpenStage 60/80 SIP.



The diagram shows an OpenStage Key Module for OpenStage 80 SIP.

## OpenStage Manager

This program offers an additional option for tailoring your OpenStage to your personal needs.


OpenStage Manager is suitable for the following models:

- OpenStage 60 (SIP/HFA)
- OpenStage 60 T
- OpenStage 80 (SIP/HFA)
- OpenStage 80 T
- OpenStage 60 G / 80 G (SIP/HFA)

## Features

- Phonebook management
- Assignment of images to contacts
- Synchronisation of contacts
- Save and restore
- Key programming
- Screensaver
- Ringtones

---

 
 
 
 Contact your administrator for the latest version of OpenStage Manager.

---

## Keys and controls


### Function keys






Key	Function when key is pressed
	End (disconnect) call → Page 58.
	Activating/deactivating call forwarding → Page 77.
	Key currently has no function

### Audio controls

    
#### Audio keys



Key	Function when key is pressed
	Activate/deactivate the loudspeaker → Page 52.
	Activate/deactivate headset → Page 53.
	Activate/deactivate microphone (also for speakerphone mode) → Page 69.

#### TouchSlider

 Similar to the TouchGuide → Page 21, you can set properties for your telephone, such as the volume, by sliding your finger over the TouchSlider.








 
The blue illuminated slider control displays the volume setting for the current tone (ringtone, handset tone and loudspeaker tone). You can adjust the volume by moving the slider left or right.

Set the lamp brightness of the TouchSlider → Page 208.

## Mode keys


These sensor keys allow you to switch to the required application with the simple stroke of a key. To select a tab within an application press the relevant key repeatedly until the required tab is displayed.















Key	Function when key is pressed	LED display
	Display telephony interface → Page 37	Blue: The function is active.
	Display phonebooks → Page 40	Blue: The function is active.
	Display call lists → Page 43	Blue: The function is active. White: New entry in call list
	Display voicemails → Page 46	Blue: The function is active. White: New voicemail
	Display Program/Service menu/Applications menu → Page 47	Blue: The function is active.
	Display Help function → Page 49	Blue: The function is active.

The icons for the mode keys also appear on the display → Page 33.


 
## TouchGuide

 Before using the telephone, remove the protective covering from the TouchGuide ring surface.






With this control, you can manipulate most of your phone's functions as well as its displays.


Operation	Functions when key is pressed
 Press the  key.	In idle mode: <ul style="list-style-type: none"> <li>• Open the idle menu → Page 29</li> </ul> In lists and menus: <ul style="list-style-type: none"> <li>• Go to next level</li> </ul> Entry selected: <ul style="list-style-type: none"> <li>• Perform action</li> </ul> You can now access a context menu: <ul style="list-style-type: none"> <li>• Open the context menu</li> </ul>
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> <li>• One level back</li> </ul> Entry selected: <ul style="list-style-type: none"> <li>• cancel action</li> </ul> In input fields: <ul style="list-style-type: none"> <li>• Delete character to the left of the cursor</li> </ul>
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll down</li> <li>• Hold down: Jump to the end of the list/menu</li> </ul>
 Press the  key.	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll up</li> <li>• Hold down: Jump to the start of the list/menu</li> </ul>
 Move your finger around the inner wheel  .	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll up or down</li> </ul> In input fields: <ul style="list-style-type: none"> <li>• Select a character in the display keyboard → Page 28</li> <li>• Set the sensitivity → Page 209</li> </ul>
 Press the  key.	Entry selected: <ul style="list-style-type: none"> <li>• Perform action</li> <li>• Initiate call</li> </ul>

### Browsing in the call list and phonebook tabs

If you are in the phonebook, you normally navigate between the "Personal" and "Corporate" tabs using the  key or if you are in the call lists you navigate between the "Missed", "Received", "Dialled" and "Forwarded" tabs using the  key,

Alternatively you can use the TouchGuide to navigate between the tabs.

Firstly use the  key to enter the tab row and move left or right using the  and  keys. Once you have reached the required tab, click the  or  to change to the associated selection list.


If you are in one of the phonebook or caller lists or in one of the settings menu, you go back to the telephony interface by repeatedly pressing the  key.

 
## Programmable sensor keys

Your OpenStage 80 SIP has nine (OpenStage 60 SIP: eight) illuminated sensor keys. You can assign functions or numbers to them.

To open the programming menu, press and hold down the relevant sensor key → Page 93.

To activate the programmed function, briefly press the relevant key → Page 97.

 Increase the number of programmable sensor keys by connecting a key module → Page 17.




Depending on how they are programmed, you can use the sensor keys as:

- Function keys → Page 92
- Redial keys → Page 92
- Direct station selection keys → Page 132

Touch the key briefly to activate the programmed function or dial the stored number → Page 97.

If you hold the key pressed, you are prompted as to whether to start programming this function key.


 
 
 If the prompt is not displayed or a programmed function is not executed, then you can only launch key programming via the user menu (ask your administrator about the current setting).

A label indicating the key's function is displayed to the left of the key; it cannot be changed. You can change the labels for redial keys according to your requirements.

The status of a function is shown by the LED on the corresponding sensor key.

 Line and DDS keys can only be programmed by administrator via the service menu.

## Meaning of LED displays on function keys

LED	Meaning of function key
 Off	The function is deactivated.
 Flashing <sup>1</sup>	Indicates the function status.
 On	The function is activated.

<sup>1</sup> In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

## Trunk keys (on multi-line phones only)

Some of the programmable keys on multi-line phones can be set up as trunk keys by administrator. Each key programmed with the "Line" function is handled as a line. This means up to 9 line keys can be configured on OpenStage 80 SIP and up to 8 on OpenStage 60 SIP.

A distinction is drawn here between primary, secondary and phantom lines. Each of these line types can be used on a private or shared basis → Page 24.

### Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signalled on this line.



To avoid conflict between individual multi-line phones, the functions "Do not disturb" and "Call forwarding" can only be used for the primary line.

---

### Secondary line

The secondary line on your phone is used as a primary line by another subscriber of the line trunk group. Your primary line, which is configured on another telephone in the line trunk group, simultaneously functions as the secondary line on that telephone.

### Phantom line

Phantom lines are not used as primary lines by any telephones in the line trunk group. Phantom lines are established when the number of lines provided by a communications system exceeds the number of available telephones.



 
### Line utilisation

- **Private line:** A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.
- **Shared line:** A line that is configured on multiple telephones. The line status (if configured) is displayed in the "Overview" tab for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.
- **Direct call line:** A line with a direct connection to another telephone.

The line status is indicated by the LED in addition to the display in the "Overview" tab → Page 38.




## LED display


LED	Explanation
	<b>Off:</b> The phone is in idle mode.
	<b>Flashing:</b> <ul style="list-style-type: none"><li>• Incoming call on the line → Page 125</li><li>• Hold reminder is activated → Page 104</li></ul>
	<b>Flickering:</b> <ul style="list-style-type: none"><li>• Outgoing call on the line</li><li>• The incoming call was prioritised and selected in accordance with the "Automatic line selection for incoming calls" option</li></ul>
	<b>Fast blinking:</b> The line is on "Hold".
	<b>Blinking:</b> Call forwarding is activated.
	<b>Illuminated:</b> The line is busy.

## Keypad
 
### Text input










 
 
 
In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "h", press the number  key on the keypad twice. When entering the text, all available characters for this key are displayed. After a short while, the character in focus is displayed in the input field.

-  To speed up the input, you can confirm your entry by pressing "OK" on the navigator after you have selected the required character.
- To enter a digit in an alphanumerical input field, press the relevant key and hold it down. You no longer need to scroll through the entire list of possible characters.

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).

### Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
 <sup>1</sup>	1	<sup>2</sup>	;	=	\$	\	&	[	]	{	}	%		
	a	b	c	2	ä									
	d	e	f	3										
	g	h	i	4										
	j	k	l	5										
	m	n	o	6	ö									
	p	q	r	s	7	ß								
	t	u	v	8	ü									
	w	x	y	z	9									
	0	+												
 <sup>3</sup>	.	*	1	#	,	?	!	'	"	+	-	(	)	@
	4													

 
 

1 Additional special characters (not in 123 mode)

2 Space

3 Additional special characters are available on the display keyboard

4 Switch between upper and lower case text and number entry

## Multi-function keys

Key	Function during text input	Function when held down
	Write special characters	Deactivate the ringtone → Page 168
	Switch between upper and lower case	Activate the telephone lock → Page 174
	Write special characters (not in 123 mode)	

 You can also input text using the display keypad → Page 28.


## Graphic display

Your OpenStage 60/80 SIP is equipped with a tilt-and-swivel colour display → Page 16.


## Appearance

You can customise your display to suit your personal requirements:

- Angle the display as required → Page 14
- Set the contrast (OpenStage 80 SIP only) → Page 207
- Select your preferred display design → Page 207

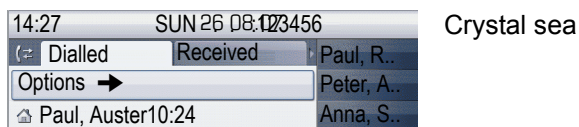

Crystal sea

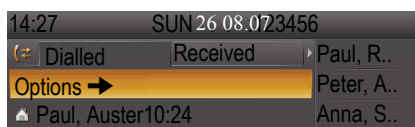






Warm grey

## Status bar

The time, weekday, date, and your phone number are displayed in the status bar.

 
In addition, different icons represent different situations and switches:

Icon	Explanation
	The ringtone is deactivated → Page 168
	The "Do not disturb" function is activated → Page 169
	The phone lock is activated → Page 174
	The Bluetooth function is activated → Page 232
	A mobile user is logged on to the telephone





## Display keyboard

 Simple text and characters can also be entered at any time using the keypad → Page 26.

 
 





 



Depending on the context, the display keyboard is displayed with different elements.



Use the TouchGuide to operate the display keyboard → Page 21.

Operation	Function
Move your finger around the wheel	Set the focus on the next/previous element
Press 	Select the element in focus (enters the character or performs the function)
Press 	Delete character to the left
Press 	Set focus to 

You can select the following functions from the function bar:


Element	Explanation
	Switch to upper/lower case characters for first letter of words (initial letter upper case, all subsequent letters lower case)
	Switch to lower case characters
	Switch to upper case characters
	Switch to numeric characters
	Switch to punctuation and special characters
	Move cursor one character to the right/left
	
	Copy entire content of the active field to the clipboard
	Insert clipboard content at cursor position. Existing content is not overwritten
	Canceling an action without saving
	Confirm changes

## Context-dependent displays



Depending on the situation at hand, the graphic display on your OpenStage phone displays different content, to which you can respond intuitively.

### Idle mode

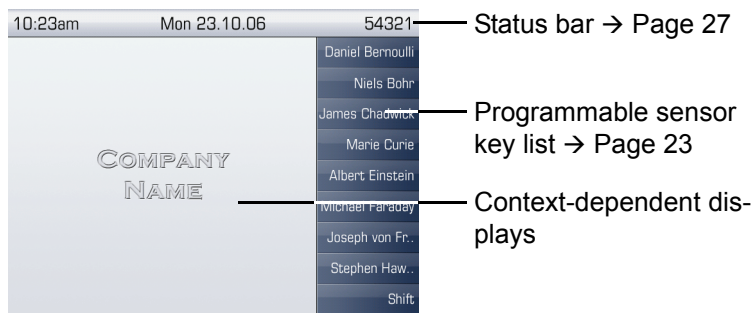In addition to the status bar and the programmable sensor key list, the graphic display offers a wide range of context-dependent displays.



### Idle menu

In idle mode, press  or  on the TouchGuide → Page 21 to display the idle menu. You can call up various functions here. Entries may vary.


The idle menu may contain the following entries:

- Ringer off
- Do not disturb on
- Directed pickup

## Telephony dialogs

The dialogs in the lower area of the display prompt you to input data or provide you with information about the call states.

Example: In idle state, enter a phone number using the dialpad.

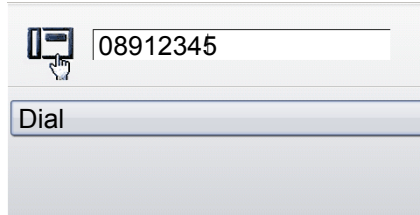


Once you have entered the first digit, several options corresponding to the situation are displayed in a dialog menu (pop-up menu) which you can select and confirm using the TouchGuide → Page 21.


## Messages

The messages displayed in the upper left area of the display advise you of current settings or events.




Example:

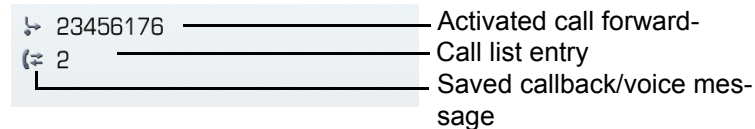- Call forwarding is activated for all calls. All calls are forwarded to the number "220870"
- You received a callback request/voice message in your absence
- A call list contains a new entry




The calls were saved in the missed calls list. Press  to view these calls. Missed calls are not saved and displayed if the call journal is disabled → Page 166.

Explanation of all message icons:

Icon	Explanation
	You have received one or more new messages
	One or more new entries have been added to the call lists
	Local call forwarding is activated for all calls

## Context menu

If the arrow icon ➔ appears next to a selected entry, additional menu levels or selection options are available in the form of a context menu. Navigate through these options using the TouchGuide → Page 21.

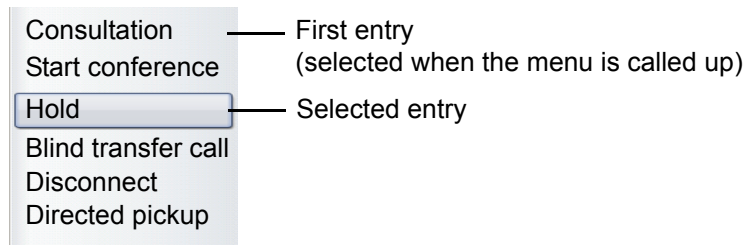


You can select and confirm the required functions using the TouchGuide → Page 21.

After a connection is set up – you are called or you make call – the context menu appears automatically under the current connection for the configured time (e.g. 20 seconds).

You can define how long the context menu should be displayed. You can deactivate the automatic display so that the ➔ key must be pressed to see the context menu of the connection → Page 230.

## Idle display context menu

When you press ➔ on the TouchGuide in idle state, the following functions are available (if activated):

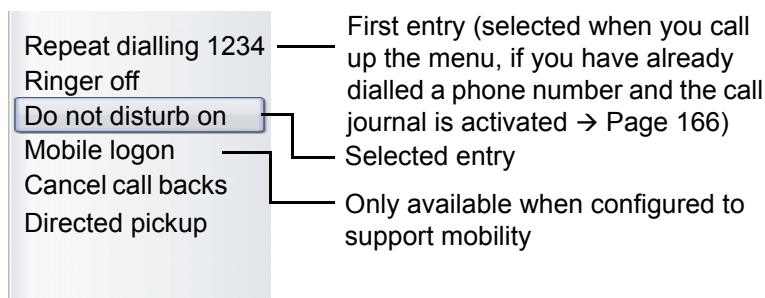

## Pop-up window


In certain situations, a pop-up window opens automatically in the lower third of the display.


## Pop-up menu

You will be prompted to use a pop-up menu to select situation-dependant functions and to confirm them or to make entries.

You can use the TouchGuide to navigate within the pop-up menu → Page 21.

Example:

The following pop-up menu opens after you change a setting and press the  key on your Touch-Guide.

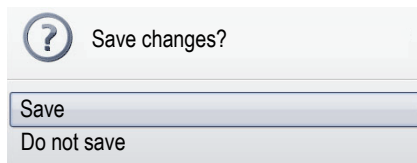


## Pop-up message

Pop-up messages only indicate actions or states for which further action is not required.

Example:

  
The following pop-up message appears briefly when you change a setting.








 



## Application tab

In many cases you can select further content within an application using tabs.



Example: Press the  mode key to open the call lists → Page 20. Press this key repeatedly to switch between the various tabs.

The icon displayed to the left of the tab indicates the application you are currently working in.

Icon	Explanation
	Telephony interface <sup>1</sup> → Page 37
	Phonebooks → Page 40
	Call lists → Page 43
	Voicemail → Page 46
	Program/Service menu/Applications menu → Page 47
	Help function → Page 49


<sup>1</sup> Platform-dependent; please contact the responsible administrator.

## Video link display


If you are using a USB camera on your OpenStage 60/80 SIP for video links, different information will appear on the display when the video function is enabled (→ Page 182).

### Video link with context menu opened

A video link is established. The call partners each have cameras connected and have enabled the video function. The video images of both the calling and called partners appear on the left-hand side in preview mode.

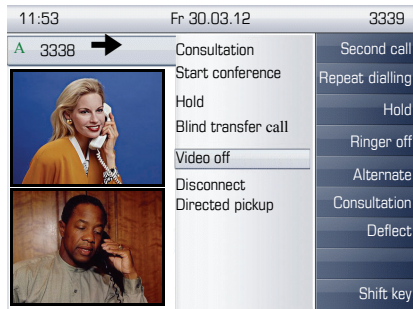

A video link is established. The caller has a camera installed but the called partner does not. The call partners have both enabled the video function. The video image of the caller appears on the left-hand side in preview mode and a crossed-out camera appears instead of the video image of the called partner. The situation can also be reversed.

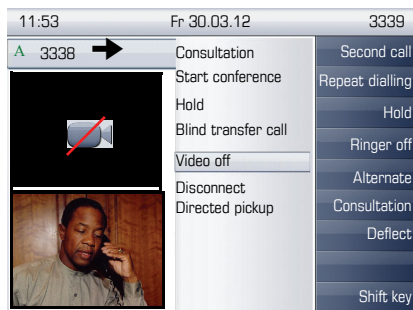


### Video link with context menu not opened

A video link is established. The call partners each have cameras connected and have enabled the video function. The video image of the called partner is shown on the display in single-screen mode.




A video link is established. The caller has a camera installed but the called partner does not. The call partners have both enabled the video function. A crossed-out camera is shown instead of the video image of the called partner.

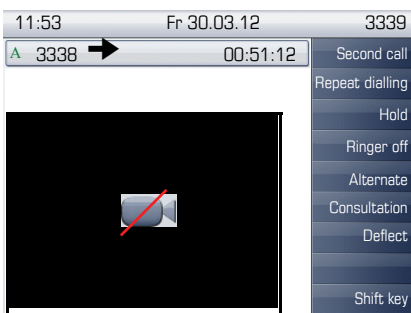

### Camera test with "Self view"

A video image of the operator is shown for a few seconds in single-screen mode with the Self view function (→ Page 182).

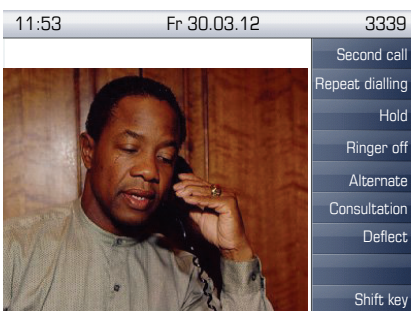

### Disabled video function

If the called partner or the caller disabled the video function temporarily (→ Page 181) or completely (→ Page 184), a normal call connection is established or the call is switched to a normal call connection.

# Applications available on your OpenStage phone

The following descriptions provide an overview of the various applications available on your OpenStage phone.

## Application navigation

### Activating an application

You can switch to the relevant application using the mode keys → Page 20.

### Scrolling through application tabs

If an application has more than one tab, you can select the tab you want by pressing the mode key repeatedly → Page 33.

### Scrolling through lists

You can use the TouchGuide to scroll through entries and confirm the functions you want → Page 21.


### Opening context menus

If the arrow ➔ appears beside an entry, a context menu is available for this entry → Page 31.

## Telephony interface


### Single-line view

Additional information is displayed in the telephony interface when your phone rings, when you dial a number or during a call, for instance.





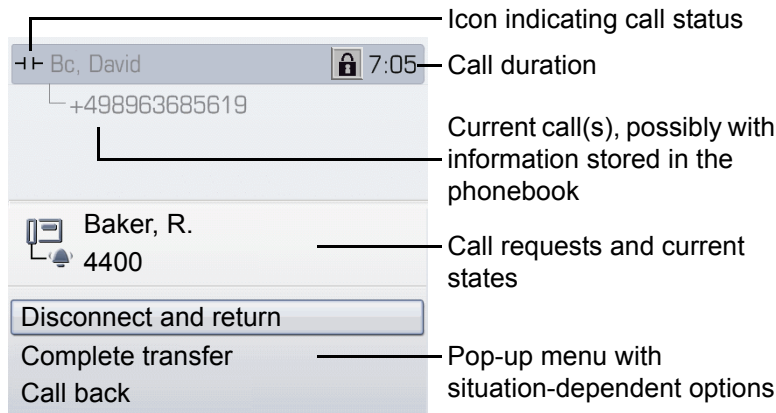

 
 

 
 The same information is available on multi-line telephones for the selected line in the line overview.


Press  to open this interface.

Example:



### Icons for frequent call statuses

Icon	Explanation
	You receive a call
	After dialling, the other subscriber's phone rings.
	The call is active.
 or 	High-quality voice connection (G.722).
	The call has been disconnected.
	You have placed the call on hold (e.g. consultation hold).
	Your call partner has placed the call on hold.
	The voice connection is secure.
	The voice connection is not secure.

 Detailed descriptions of the various functions can be found in the sections "Basic phone functions" → Page 51 and "Enhanced phone functions" → Page 99.


## Multi-line view

Two tabs are displayed on the telephony interface:






 

- "[My phone]" tab - represents the primary line or the line view of a selected line → Page 37
- "Overview" tab - configurable overview of the secondary lines → Page 24

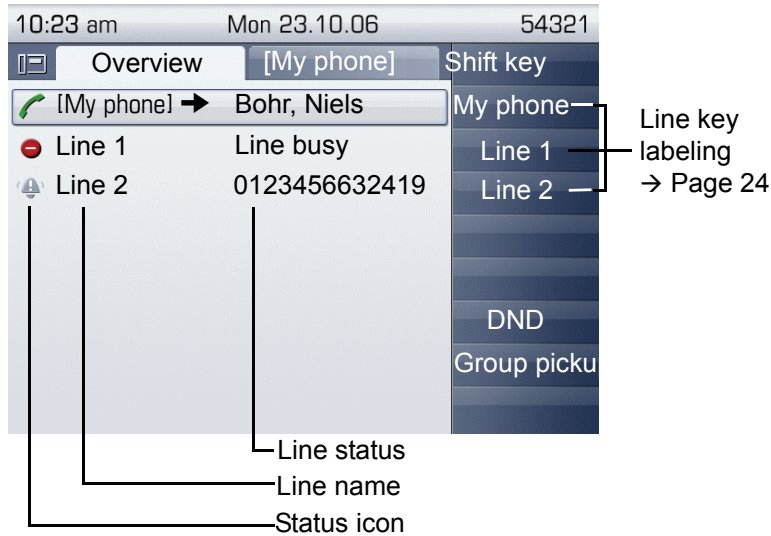Press  to open this interface.

Example:



The status icons provide information about the state of the relevant line.

Icon	Explanation
	Call for the corresponding line.
	Call for a line with suppressed ringtone → Page 154.
	"Hold reminder" is activated → Page 104.
	The line is currently not available.
	The line is busy.
	You are holding the line.
	The line is free.

 Please note the LED displays for the line keys → Page 25.

## Context in the line overview

In the context menu of a selected line you have the following options with:


- Own free line
  - Select
  - View<sup>[1]</sup>
- Own line with active call
  - Hold
  - Clear (replace handset)
  - View<sup>[1]</sup>
- Own line with held call
  - Retrieve
  - View<sup>[1]</sup>
- Other free line
  - Select
  - View<sup>[1]</sup>
- Other line with active call
  - Hold
  - Clear (replace handset)
  - View<sup>[1]</sup>
- Other line with held call
  - Retrieve
  - View<sup>[1]</sup>
- Other line busy
  - View<sup>[1]</sup>
  - Connecting<sup>[2]</sup>

1. After a period of time set by administrator the tab of the selected line is displayed as a preview.


2. The "connect" function must be activated by the administrator.

## Phonebooks





In addition to the local phonebook, this application also contains entries from other directory services, such as a corporate directory.

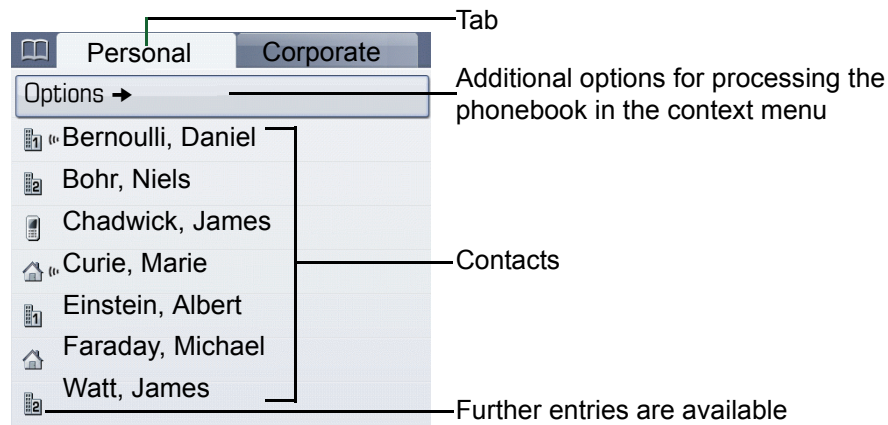To activate a specific tab, press  repeatedly until the required tab is displayed.

Example:




### Phonebook icons

 Icon	Explanation
	Primary business number
	Secondary business number
	Mobile phone number
	Private phone number

### Search contacts

When in the phonebook or directory list view, press the keypad key that corresponds to the first letter of your search term.

A field opens for you to enter the search term:



Enter your search term using the keypad → Page 26.

The cursor jumps to the first entry in the list that matches the character you entered in the search field.



## Personal phonebook

The "Personal" tab contains your local phonebook. You can store up to 1000 personal contacts in this phonebook. The entries are sorted in alphabetical order in the phonebook list and displayed with the icon for the specified default phone number.

There are two ways of creating new contacts:

- Via the phonebook list context menu → Page 155
- Accept entry from LDAP search → Page 161

## Contact details

The type of data displayed for a call in the telephony interface → Page 37 is dependent on the information you have stored for the contact in your local phonebook.

A contact consists of the entry in the "First name" or "Last name" fields and at least one phone number → Page 155.

In addition, you can store non-telephony-specific data (e.g. address, function, etc.) for each entry.

You can store several phone numbers for each contact. In this case, however, you should define a preferred number → Page 155.

Classify your contacts into groups → Page 157.

Store a picture of the contact → Page 158.


## Managing contacts

All saved contacts are listed in alphabetical order in the "Personal" tab.

You can use the "Options" context menu to

- create new contacts → Page 155
- define contact display format → Page 160
- Quick search in the phonebook → Page 159
- sort contacts into groups → Page 157
- delete the entire phonebook list → Page 156

---

 We recommend OpenStage Manager software for the professional management of your contact data and synchronizing your data with Outlook/Notes. For more information, refer to the OpenStage Manager User Manual → Page 18.

---

## Using contacts

The following functions are available via the context menu of a selected contact:

- Calling a contact → Page 116
- Editing a contact → Page 155
- Deleting a contact

## Corporate directory

If you have access to a corporate directory (LDAP directory), you can search for contacts in it (consult administrator).

A user-friendly, advanced search function is available for this. You can transfer any entries found to your local phonebook.

### Searching for a contact


 
- Simple search → Page 161
- Quick search → Page 163

### Using a contact

- Calling a contact → Page 116
- Transfer entry to local phonebook → Page 163

## Call lists

---

 The call journal function must be activated in order to display call lists → Page 166. The call journal must also be activated for the customary last number redial function. If the call journal is not activated, the message "Call Log is disabled" is shown on the display when you press the  key.

---

All calls and numbers dialled on your phone are logged in chronological order in call lists.

---

 Callers with suppressed numbers cannot be saved in the call lists.

 
---

The following call lists are displayed individually on separate tabs:

- "Missed" tab: missed calls
  - "Received" tab: answered calls
  - "Dialled" tab: dialled numbers
  - "Forwarded" tab: forwarded calls
- 



 Only calls to the primary line are received on multi-line phones (→ Page 14).

---

When new entries are added to the call lists, a message appears (→ Page 30) on the idle display and the LED of the mode key  (→ Page 20) lights up white.

To call up a call list, press  repeatedly until the required tab is activated.

The administrator may have made special settings for missed calls. The following keys illuminate, depending on the setting, to indicate new missed calls:

- Only the LED on the  key
- The LED on the  key and the alert bar
- Only the alert bar
- Or neither

## Additional notes on call lists


- Note the setting options for voicemail → Page 46 and have the possible combinations explained to you by administrator if necessary.
- Missed calls are not signalled if the call journal is disabled → Page 166.
- If missed calls for this connection were answered by other subscribers, these calls are not listed in the Missed list or are marked with a green checkmark in accordance with the setting in the call logging → Page 166.
- Logging for call forwarding was also changed in the framework of the new call logging. All types of forwarded calls are now only logged under "Forwarded" and no longer as before partly also as "Missed". This is regardless of how the new parameter for missed calls is defined.

## Managing call lists

Each call list may contain up to 30 entries. Once this limit is reached, the oldest entry in the log is deleted.

Multiple calls from the same number are only listed once. The number of call attempts is logged in the "Details" context menu.

Example: "Received" tab

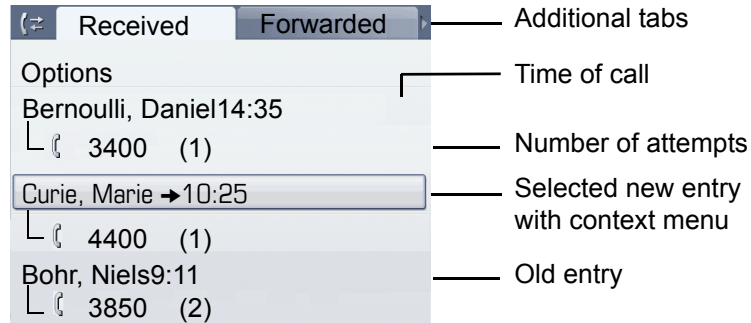

You can select the following function in the "Options" context menu:

Delete All → Page 164

Example: "Dialled" tab




The following functions are available via the context menu of a selected entry:

- Dial → Page 68
- Details → Page 45
- Delete → Page 164


## Entry details

Up to ten call attempts can be stored for each entry in the details list.

Example: entry in the "Missed" tab

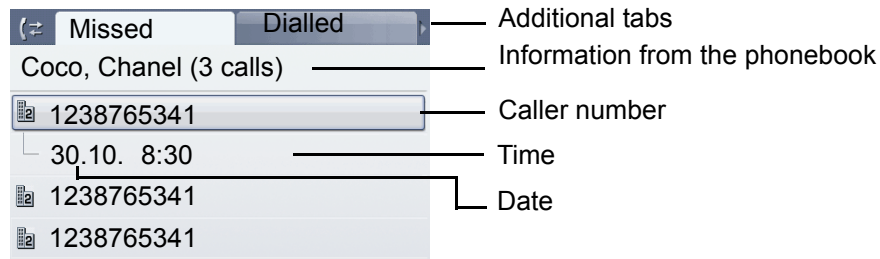


Example: entry in the "Dialled" tab

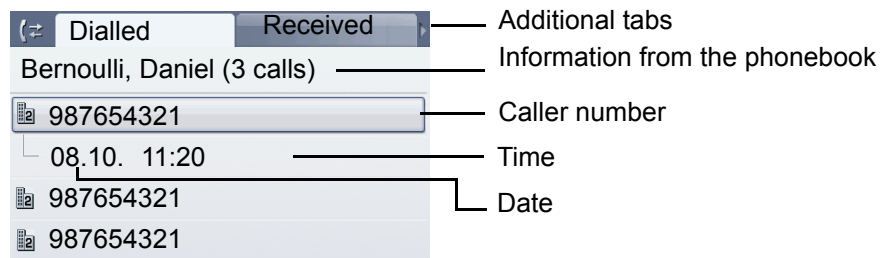

In this view, the context menu contains the following entry: Dial

---

 If a caller is already entered as a contact in the local phonebook, the stored data is displayed.

---

## Using an entry

The following functions are available via the context menu of a selected entry:



- Establish a call to a preferred number → Page 117
- View details → Page 164
- Delete the entry → Page 164
- Transfer entry to personal phonebook → Page 163

## Voicemail (answering machine)

Depending on the type and configuration of your communications platform (contact the relevant administrator), messages from services, such as HiPath Xpressions, can be displayed in this application.


### Listening to messages

The following keys illuminate, depending on the setting made by the administrator, to indicate new messages:

- Only the LED on the  key
- The LED on the  key and the alert bar
- Only the alert bar.


Note also the setting options for missed calls → Page 43 and have the possible combinations explained to you by the administrator if necessary.

Press this key to open the menu for the mailbox (→ Page 61). You will be shown the following for example:

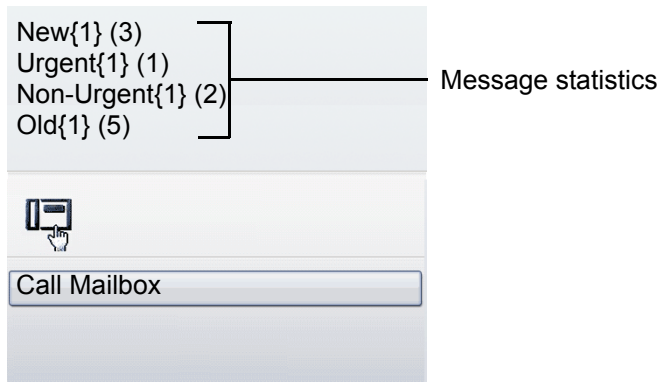

(The labels displayed here for the message status may have been altered individually by administrator).


---

 Only messages for the primary line are received on a multi-line phone → Page 14.

---

## Program/Service menu/Applications menu

This menu includes a configuration area for users and administrators, as well as an area for any available applications (contact administrator).

Press  repeatedly until the "Settings" tab is active.


Select and confirm the "User" entry using the TouchGuide → Page 21.


If necessary, enter the user password → Page 171.

## User settings

You can adjust local settings for your OpenStage using the "User" menu.

The menu structure comprises several levels.

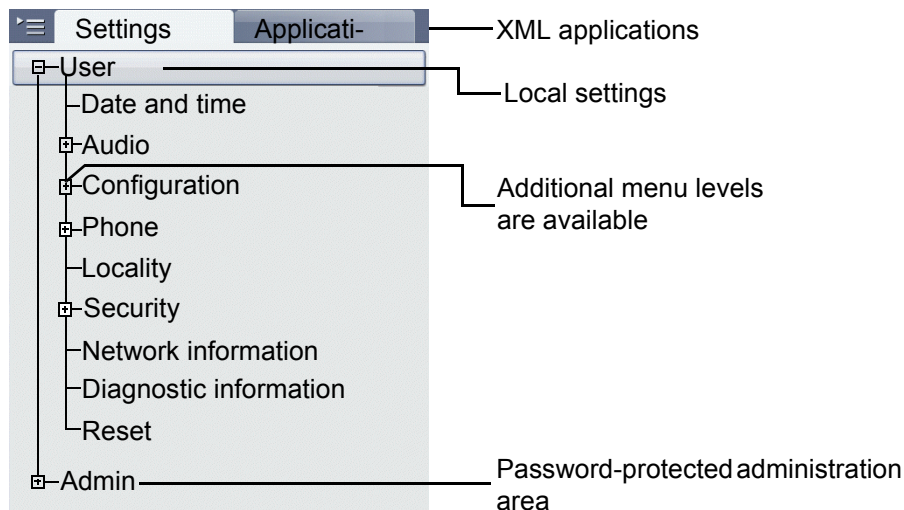

 You can also configure all of the settings using your OpenStage's WBM interface → Page 265.

Open the menu → Page 47.

### Date and time



Adjust the settings on your telephone → Page 214.

### Audio

Optimise the audio settings on your OpenStage for your work environment and according to your personal requirements.

#### Volumes



Adjust the settings on your telephone → Page 218.

#### Settings



Adjust the settings on your telephone → Page 219

#### Special ringtones



Adjust the settings on your telephone → Page 223

## Configuration

### Call forwarding

Set up call forwarding for your telephone.



Adjust the settings on your telephone → Page 77.

### Enhanced phone functions

Use the enhanced phone functions on your telephone.



Adjust the settings on your telephone → Page 99.

### Keypad

Manage your trunk keys.



Adjust the settings on your telephone → Page 148.

### Bluetooth

Prepare your phone for Bluetooth operation.



Adjust the settings on your telephone → Page 232.

## Phone

Adjust the display design settings and program the sensor keys on your OpenStage. Save your settings.

### Backup/restore

Back up the current user settings or restore the saved settings.



Adjust the settings on your telephone → Page 251.

### Screensaver

Adjust the settings on your telephone → Page 207.



### Display

Adjust the settings on your telephone → Page 207.



### Programmable keys

Program sensor keys with frequently used functions or phone numbers.



Adjust the settings on your telephone → Page 92.

## Locality

Enter your country-specific settings.



Adjust the settings on your telephone → Page 227.

## Security

Protect your settings and data by assigning a password.



Adjust the settings on your telephone → Page 171.

## Network information

Information about the IP address of the phone and HTML address of the WBM interface.



View information on the phone → Page 242.





## Diagnostic information

Provides information on all of the important settings of the telephone. Can provide valuable help in support situations → Page 263.

## Reset

Personal settings made via the telephone menu or the WBM interface can be reset to factory settings. → Page 243.

## Administration

You can access the administration area via the "Admin" function and by entering the administration password.

Refer to the administration manual for your phone for more detailed information on this topic.



---

During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

---

## Applications

E/A Cockpit → Page 140

## Help function

You can call up the "Help" function at any time, even during a call.

### Calling up the "Help" function

Press . The "Help" function is activated.

## Control and monitoring function


A control or monitoring function can be activated on your phone for service purposes by remote maintenance.

### Control function

Administrator has the option to activate and deactivate features of the phone via remote maintenance. During maintenance the handset, microphone, loudspeaker and headset are deactivated. You are additionally informed on the display that the control function is active.

### Monitoring function

In order to detect malfunctioning of a phone for example, the administrator installs a monitoring function. You can use your phone as normal during monitoring. However you will first be informed about the operation with a message on the display and prompted to allow monitoring.


If administrator has activated a function on your phone, which continuously transmits operating data to a server, you will see the flashing icon  in the upper display line.

### Activating a diagnostic call

In the event of connection problems with a specific destination, the administrator may ask you to enter an activation code before the number of the subscriber, which can be used to initiate tracing of the call data on the phone. This activation code, which must be provided to you by the administrator and which comprises a leading asterisk, followed by three digits and the hash sign as the terminating character, must be entered before the actual phone number. At the end of the call, the call-related data is sent for further analysis to the DLS server, which then passes it to the "Open-Scape Voice Trace Manager".

## Basic functions

---

 Please read the introductory chapters "Getting to know your OpenStage phone" → Page 15 and "Applications available on your OpenStage phone" → Page 36 carefully before performing any of the steps described here on your phone.

---

## Secure voice transmission

**Prerequisite:** The secure voice communication option must be activated by your administrator.

If you call a party or receive a call from a party over a secure connection, a pad-lock icon<sup>1</sup> appears on the other party's row on your graphic display. You can opt to have voice connections that are no longer secure indicated by a brief alerting tone and a window with the message "Unencrypted call" (see → Page 225).

## Emergency mode

If a failover system has been set up for your OpenScape Voice, you can still make calls and use the functions of the failover system, for example, despite network faults.

If it happens that your telephone is no longer connected to OpenScape Voice, it is registered automatically on the configured failover system. The message "Emergency mode (B8)" then appears on the display.

Some functions may not be accessible while in emergency mode, for example:

- Call forwarding (→ Page 77)
- Voicemail (→ Page 61)
- Callback (→ Page 74)
- Group functions (→ Page 59)
- Multiline (→ Page 125)
- OpenScape Voice functions (→ Page 185)


1. Closed for secure or open for nonsecure voice communication

## Incoming calls

Your OpenStage phone rings with the tone signal set when an incoming call is received. The call is also visually signalled on the alert bar.

If transmitted, calling party information (name, phone number) appears on the graphic display.

➡ If you have set a pattern melody → Page 221 or a ringtone → Page 219 on your phone, it is possible that administrator preset a different ringtone or deactivates the ringtone, regardless of the call type (e.g. an external or internal call).

An incoming call will interrupt any ongoing telephone setting operations. As soon as the call ends, press  to return to the point in the menu structure where you were interrupted.

## Answering a call via the handset

The phone rings. The caller is displayed.

➡ If the phone number is stored in the local telephone, the associated name is shown on the display (must be activated by administrator).


Lift the handset.

Set the call volume.

## Answering a call via the loudspeaker (speakerphone mode)


The phone rings. The caller is displayed.

The pop-up menu opens:

Select and confirm the option shown. The  key lights up.

Press the key shown. The key lights up. The speakerphone function is activated.

Set the call volume.

if nec. 

Accept

or



if nec. 

### Suggestions for using speakerphone mode:

- Tell the other party that speakerphone mode is active.
- Adjust the call volume while speakerphone mode is active.
- The ideal distance between the user and the phone in speakerphone mode is about 50 cm.

### Answering a call with a headset

 
**Prerequisite:** A headset is connected.

---



 Make sure your headset port is set up properly → Page 222.

---

### Answering calls via the headset

The phone rings. The  key flashes.

 Press the key shown.

  
if nec. 

Set the call volume → Page 19.

### Answering calls automatically via the headset

**Prerequisite:** The administrator has additionally configured a key with the "Auto-Headset" function (AICS Zip tone) (→ Page 92).

Press the "Auto-Headset" sensor key to activate automatic call answering. This key and the headset key illuminate.

A short acoustic signal is heard on the headset for a call and the connection is established.

If you want to manually answer calls again, deactivate the automatic answering function using the "Auto-Headset" key. Both keys are off.

## Directed pickup


You can pick up a call signalled at an absent coworker's phone. If a colleague has placed a call on hold on their multi-line phone you can also pick up this call.

### Picking up call

**Prerequisite:** You know the coworker's internal phone number and the function is configured for you in OpenScape Voice.

A coworker's phone rings.

Select and confirm the option shown in the idle phone's context menu.



or




Lift the handset.

or



Press the key shown.

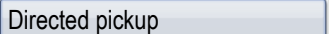

Select and confirm the option shown.



Enter and confirm the relevant phone's internal number. You are connected to the calling party either via the handset or in speakerphone mode.

## Picking up a held call

**Prerequisite:** Your colleague has placed a call on hold on their multi-line phone → Page 129. You know the coworker's internal phone number and the function is configured for you in OpenScape Voice.

Select and confirm the option shown in the idle phone's context menu.

Directed pickup

or.



Lift the handset.

or



Press the key shown.


Directed pickup

Select and confirm the option shown.



 
Enter and confirm the relevant phone's internal number. You are connected to your colleague's held call either via the handset or in speakerphone mode.

## Switching to speakerphone mode

 Make note of the two different processes and activate, if necessary, your preferred setting → Page 221.

**Prerequisite:** You are conducting a call via the handset and the microphone and loudspeaker functions have been activated by administrator.

### Standard mode



Hold down the key and replace the handset. Then release the key and proceed with your call.

### US mode

If the country setting is set to US, you do not have to hold down the loudspeaker key when replacing the handset to switch to speakerphone mode.




Press the key shown.



Replace the handset. Proceed with your call.



 A secure voice communication is indicated by a closed padlock icon on the graphic display; a nonsecure voice communication is indicated by an open padlock icon on the graphic display (see also → Page 51).

## Switching to the handset

**Prerequisite:** You are conducting a call in speakerphone mode.



Lift the handset.



The key shown goes out.



## Switching from headset to speakerphone mode

### In standard mode



Press and hold the key (open listening ist activated),



Press the key. Speakerphone mode is activated.

### In US mode



Press the key



Press the key. Speakerphone mode is activated.

## Open listening

People present in the room can silently monitor your call. Let the other party know that you have turned on the loudspeaker.



It is not recommended to activate the open listening feature in connection with a Bluetooth headset → Page 247 because this can lead to reduced quality depending on headset an environment.

**Prerequisite:** You are conducting a call via the handset.

### Activating



Press the key shown.

### Deactivating



Press the lit key.

### Switching to speakerphone mode



Hold down the lit key and replace the handset.

## Ending a call



Press the key shown.

or




Press the key shown. The key LED goes out.

or



Press the lit key.

or

A rectangular button with a light blue gradient background and a thin black border, containing the text "Disconnect" in a dark blue font.

Disconnect

Select and confirm the option shown in the connections's context menu.

## Group call

Your administrator can incorporate multiple telephones in a call pickup group. If your telephone belongs to a pickup group, you can also accept calls intended for other members of the group.

A group call is displayed on the phone. Administrator may have made the following settings for signalling:

Telephone status			Ring on group call = Yes	Ring on group call = No
Ringtone on	Silent		Ringtone Loudspeaker	Beep Loudspeaker
	in Connection	Handset	Ringtone Loudspeaker	Beep Handset
		Handset Open listening	Beep Handset and loudspeaker	Beep Handset and loudspeaker
		Headset	Ringtone Loudspeaker	Beep Headset
		Headset Open listening	Beep Headset and loudspeaker	Beep Headset and loudspeaker
		Speakerphone mode	Beep Loudspeaker	Beep Loudspeaker
Ringtone off	Silent		Nothing	Nothing
	in Connection	Handset	Nothing	Beep Handset
		Handset Open listening	Beep Handset and loudspeaker	Beep Handset and loudspeaker
		Headset	Nothing	Beep Headset
		Headset open listening	Beep Headset and loudspeaker	Beep Headset and loudspeaker
		Speakerphone mode	Beep Loudspeaker	Beep Loudspeaker

The volume settings can be found from → Page 218.

Further administrator settings for group calls:

- The group call can be picked up both by lifting the handset and via the "Pickup call" menu option..
- The group call be picked up via the "Pickup call" menu option but **not** by just lifting the handset.
- A key is programmed for call pickup.
- Open a pop-up menu with the Call pickup key when a group call is waiting.

### Picking up a group call with the call pickup key

**Prerequisite:** The Call pickup key is configured. Your administrator has set up the group call such that it is only displayed through flashing of the Call pickup key. The phone can also ring when idle.

A group call is waiting. The Call pickup key flashes. The group call is not shown on the display.



Press the sensor key with the "Call pickup" function.

The group call is now shown on the display with

**Pickup:** *Caller*

**for:** *Party*

The pop-up menu opens:

### Picking up a group call immediately via the pop-up menu

**Prerequisite:** Your administrator has set up the group call such that it will be shown immediately on the display and the pop-up menu will open.

A group call is waiting and is shown on the display with

**Pickup:** *Caller*

**for:** *Party*

### Picking up a group call

The pop-up menu opens:

Confirm the option shown.

Pickup call

or



Lift the handset (only if the appropriate function is set by your administrator).

or



Press the sensor key programmed with the "Call pickup" function (if configured). The speakerphone function is activated.


### Ignoring a group call

Select and confirm the option shown. The phone stops signalling the group call.

Ignore

## Listening to voicemail

To use this function, you need to have a voice mailbox set up on your communication platform for voicemails (see → Page 46).

The message key  and/or the alert bar illuminate, depending on the setting made by the administrator, to indicate new messages. They only extinguish again when all new messages have been picked up.

### Picking up messages



Press this key when the phone is in idle mode. The menu for the mailbox opens.

If messages are waiting, you will be shown a list with the new messages and the messages you have already listened to, sorted by status (see → Page 46). The number of the respective messages is indicated.

Confirm the option shown to call the mailbox. Follow the voice instructions. You may need to enter a password.

Call Mailbox

### Calling the mailbox directly

You can also call the mailbox directly without using the menu. The mailbox answers even if there are no messages waiting.



Lift the handset.




Press this key. The mailbox answers. Follow the voice instructions. You may need to enter a password.



You can call the mailbox any time you see the "Please dial" prompt on the display.

## Call control (2nd alert)

To ensure that you do not miss any important calls, administrator can configure a key that blinks when a call is waiting, for instance, when you are dialling a number or when two calls come in simultaneously.

 Call control does **not** work with multi-line phones

## Two calls simultaneously

**Prerequisite:** The "2nd alert" key is set up and "call waiting" is permitted (→ Page 110).

two calls ring at the same time.

Caller information from the first caller is displayed and you have the following options:

- Accept
- Reject
- Deflect

The "2nd alert" key is blinking and you hear a notification tone.

### Display second caller

Pressing the blinking "2nd alert!" key will display the second caller's information and you again have three options to choose from.

### Return to first caller

Press the blinking "2nd alert" key again to return to the first caller's displayed information.

### Accept a call

If you accept one of the calls, the other call is treated as a second call (see → Page 108)



## While dialling



Please note that the "Busy when dialling" → Page 119 function is disabled after 2nd alert is configured. The exception is if you dial a number during a Consult → Page 70.

**Prerequisite:** The "2nd alert" key is configured and call waiting is allowed (→ Page 110).


You receive a call while you are dialling. The "2nd alert" key is blinking and you hear a notification tone.

Press the blinking "2nd alert" key. Dialling is interrupted. The caller's information is displayed and you have the following options:

- Accept
- Reject
- Deflect



## Making calls

 If you selected the option "Busy When Dialling" → Page 119, you will not be interrupted by an incoming call. In this case, the caller hears the busy signal.

You can also use enhanced functions, such as call lists or the personal or corporate directory, in order to call a subscriber → Page 116.

## Off-hook dialling

Lift the handset.

Enter the station number.


In the pop-up menu:


Confirm or wait until the dial delay expires (see → Page 118).

In the pop-up menu:

Confirm the option shown<sup>1</sup>.

The connection is set up.

 If you are using a dial plan and Immediate dialling is set (see → Page 66), dialling is automatically performed as soon as the character string entered matches an entry in the dial plan.

 If a connection is temporarily unreachable, you will hear a special information tone (short tone sequence). The fault can be rectified quickly, so try again to dial this phone number after an appropriate time.

## On-hook dialling

The connection is set up with on-hook dialling via the loudspeaker (speakerphone mode) or via a connected headset. The line is seized before dialling.

Press the key shown.

Press the key if a headset is connected.

Enter the station number.

Press or wait until the dial delay expires (see → Page 118).

In the pop-up menu:

Confirm the option shown<sup>2</sup>.


## First enter the number

First enter the number. The loudspeaker or headset key illuminate when you enter the first digit.

Enter the station number. Use the TouchGuide → Page 21 to correct entries as necessary.

1. Please note the information in relation to the call journal on → Page 68

2. Please note the information in relation to the call journal on → Page 68

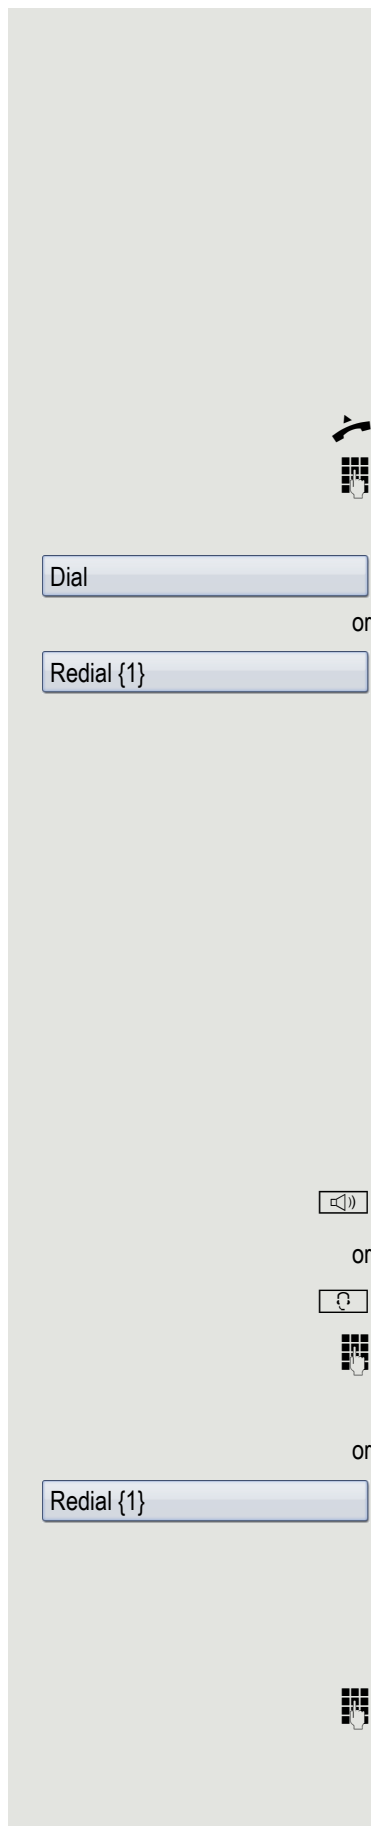





Dial

In the pop-up menu:

Confirm or wait until the dial delay expires (see → Page 118).

The connection is set up.



If you are using a dial plan and Immediate dialing is set (see → Page 66), dialling is automatically performed as soon as the character string entered matches an entry in the dial plan.

---

## Immediate dialling

Immediate dialling should only be activated if administrator has configured and approved a dial plan.

Immediate dialling is deactivated by default. For this reason after entering the number you must either confirm the "Dial" option or wait until the dial delay expires to set up the connection. If **Immediate dialling** is configured, your call is automatically dialled as soon as the string entered matches an entry in the dial plan.

### Activating or deactivating immediate dialling

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

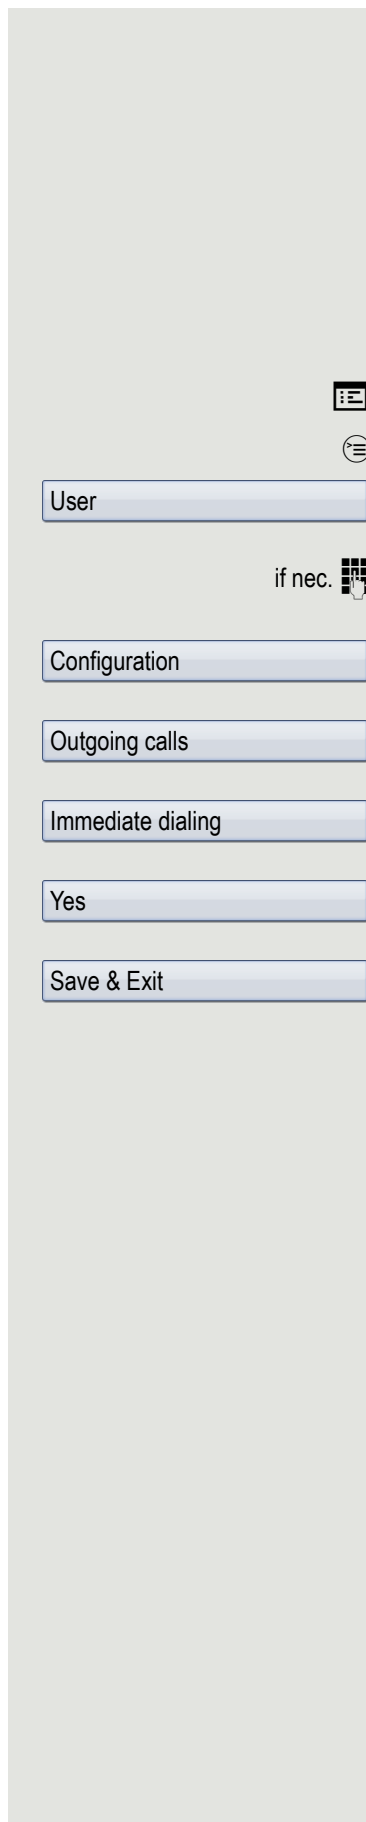

## Dialling using the hot or warm line function

Your administrator can configure a hot or warm line for your phone.

If you lift the handset of the phone or press the loudspeaker key


 
- with a hot line immediately or
- with a warm line after a defined period of time,

a number specified by administrator is dialled.

Examples:


- The phone in the lift immediately dials the reception number.
- The phone at a patient's bed dials the ward number e.g. after a minute if no other number is dialled.

## Redial

 You must have activated the call journal in order to use the call list. This also applies for redialling the last number dialled → Page 166. If the call journal is not activated, the message "Call Log is disabled" is shown on the display when you press the  key. If you try to perform a last number redial using a programmed function key, the message "Key function unavailable" is shown on the display in this case.

If you still want to access the function for redialling the last number dialled despite having disabled the call journal, you can alternatively use the OpenScape Voice "last caller redial" function, assuming this function has been activated by the administrator → Page 200.

### Redialling from the call list

 Only calls to the primary line are received on multi-line phones (→ Page 14).

Press the key repeatedly until the application's "Dialled" tab appears.

Select and confirm the entry you want. The phone number associated with the list entry is dialled.

### Redialling from the pop-up menu

Lift the handset.


Press the key shown.

Select and confirm the option shown.

The last phone number entered is dialled.

### Redialling from the idle menu

Select and confirm the option shown in the idle display (→ Page 31) context menu. The last phone number entered is dialled.

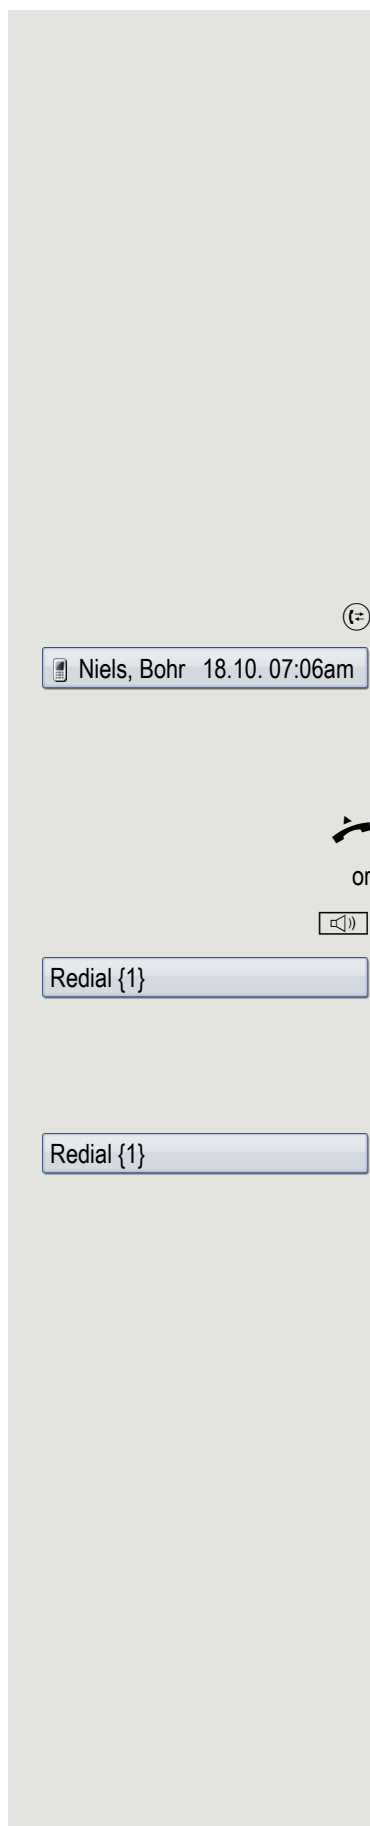

## Activating/deactivating the microphone

You can temporarily switch off the handset microphone to prevent the other party from listening in while you consult with someone in your office.

**Prerequisite:** You are conducting a call.

### Deactivating the microphone



Press the key shown.

### Activating the microphone



Press the lit key.

## Consulting a second party

You can call a second party while a call is in progress. The connection to the first party is placed on hold.

**Prerequisite:** You are conducting a call.


Select and confirm the option shown in the connections's context menu.

### Start conference

Select and confirm the option shown in the context menu for the call connection when you intend to set up a conference with the new participant. You can also use an already configured **Conference** key in this instance.

Enter and confirm the second party's phone number.

---


 If you are using a dial plan and **Immediate dialing** is set (see → Page 66, dialling is automatically performed as soon as the character string entered matches an entry in the dial plan.

---

In the pop-up menu:

Confirm the option shown<sup>1</sup>.

---

 If you want to use one of the **phonebooks** or a **call list** for the consultation call or the new conference parties, select **Hold** instead of Consult and/or Start conference in the context menu or press the **Hold** key and then open a phonebook or a required call list (→ Page 155).

Alternatively you can also open a phonebook or call list without using the **Hold** functions – the active call is automatically placed on **Hold**.

---

### Ending a consultation call

Select and confirm the option shown in the context menu.

The consultation call is disconnected. The call with the first party is resumed.

Consultation

or

Start Conference




or


Redial {1}

Disconnect & return



1. Please note the information in relation to the call journal on → Page 68




Disconnect & return

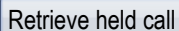

Retrieve held call

 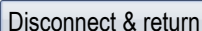Disconnect & return

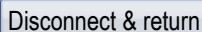

Disconnect & return

## Ending a consultation call

### You end the consultation

Select and confirm the option shown in the context menu.

The consultation call is disconnected. The call with the first party is resumed.

### The second party hangs up

If the second call partner hangs up, you will be prompted to retrieve the first call again if. "Hold and hang-up" is disabled (→ Page 106). Otherwise, the first call will remain on hold until you receive this prompt after a defined time interval.

Confirm the option shown. You are reconnected with the first partner.



If the call is kept on hold, you can retrieve the call via the context menu before the set time expires.

## Ending the consultation with an active headset

**Prerequisite:** The administrator has additionally configured a key with the "Auto-Headset" function (AICS Zip tone) (→ Page 92).

Press the "Auto-Headset" sensor key to activate automatic call answering. This key and the headset key illuminate.

You make a consultation call and the second party hangs up. You are automatically reconnected with the waiting first party. The prompt "Retrieve held call" does not appear.

## Canceling a consultation call

### If the called party does not answer

In the pop-up menu:

Select and confirm the option shown.


The call with the first party is resumed.

### If the called party does answer

Select and confirm the option shown in the context menu for the connection to the second station.

The call with the first party is resumed.






## Switching to the held party (alternating)

**Prerequisite:** You are conducting a consultation call → Page 70 or have accepted a second call → Page 108.

Select and confirm the option shown in the connection's context menu.

 It does not matter which context menu is open when alternating. The "Alternate" function appears in both menus (active and passive connection).

You can switch back and forth between two subscribers by repeatedly selecting and confirming "Alternate".

## Ending an alternate operation

### Disconnecting the held call:

Select and confirm the option shown in the held connection's context menu. The held call is disconnected. The active call continues.

### Disconnecting the active call:

Select and confirm the option shown in the active connection's context menu. The active call is disconnected. The held call remains on hold and can be managed via the context menu.

## Putting on hold and retrieving successively or simultaneously

**Prerequisite:** You have a single-line phone and are conducting a consultation call → Page 70 or have answered a second call → Page 108. The sensor key "Hold" is configured → Page 92.

The "Hold" function can also be initiated from the context menu.

### Putting an active call on hold

Press the "Hold" key. The key flashes. The consultation or second call **and** the first call are put on hold.

### Retrieving the first call

Switch to the first call.

Press the flashing "Hold" key. You are connected with the other partner. The consultation or second call continues on hold.

### Retrieving the second call

Switch to the held consultation or second call.

Press the flashing "Hold" key. You are connected with the other partner. The first called was put on "Hold" again.



## Connecting parties

You can join the first party with the party you consulted, clearing down your connection to both parties in the process.

**Prerequisite:** You are conducting a consultation call → Page 70 and call joining must be allowed → Page 73.

Select and confirm the option shown in the active connection's context menu. The other two parties are now connected to one another. You can now hang up.

### Connect by hanging up

Replace the handset or, if you are in speakerphone mode, press the loudspeaker key. The other two parties are now connected to one another.

### Allowing call joining

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

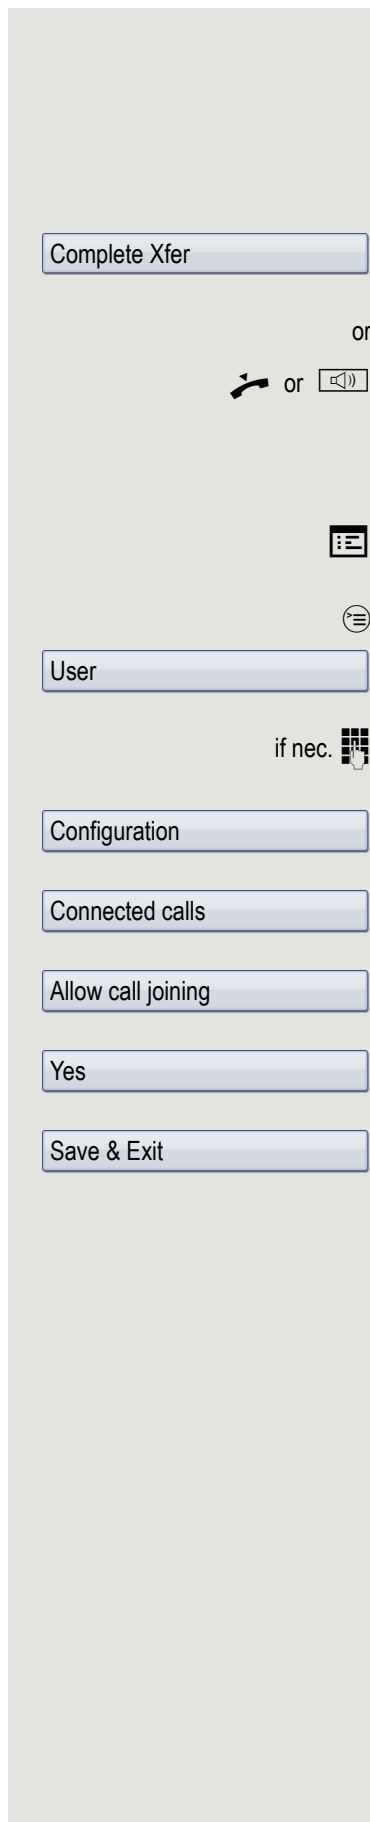

## Callback

You can request a callback if the station called is busy or if nobody answers. You receive the callback as soon as the other party's line becomes free.

---

➡ This option is only available if both you and your administrator have activated the function (→ Page 75).

---

➡ Only the callback requests for your primary line are logged on multi-line telephones → Page 14.

---

## Requesting callback

**Prerequisite:** The station called is busy or nobody answers.

In the pop-up menu:

Call back

Select and confirm the option shown.

## Deleting callback requests

You can delete scheduled callback requests if you no longer need to return a call, for example because you have met the other party in person.

**Prerequisite:** A callback was requested.

Cancel call backs

Select and confirm the option shown in the idle display (→ Page 31) of the context menu.

Confirm in the pop-up menu. **All** callback requests are deleted.

## Responding to a callback

**Prerequisite:** A callback was requested. Your phone rings and station information appears on the graphic display.

The pop-up menu opens:

Accept

Select and confirm the option shown.

## Accepting a callback

## Rejecting a callback

**Prerequisite:** The Reject function has been activated by administrator.

Reject

Select and confirm the option shown.

The callback request is deleted. The caller's phone number is added to the missed calls list.

## Permitting a callback

**Prerequisite:** The Callback function has been activated by administrator.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

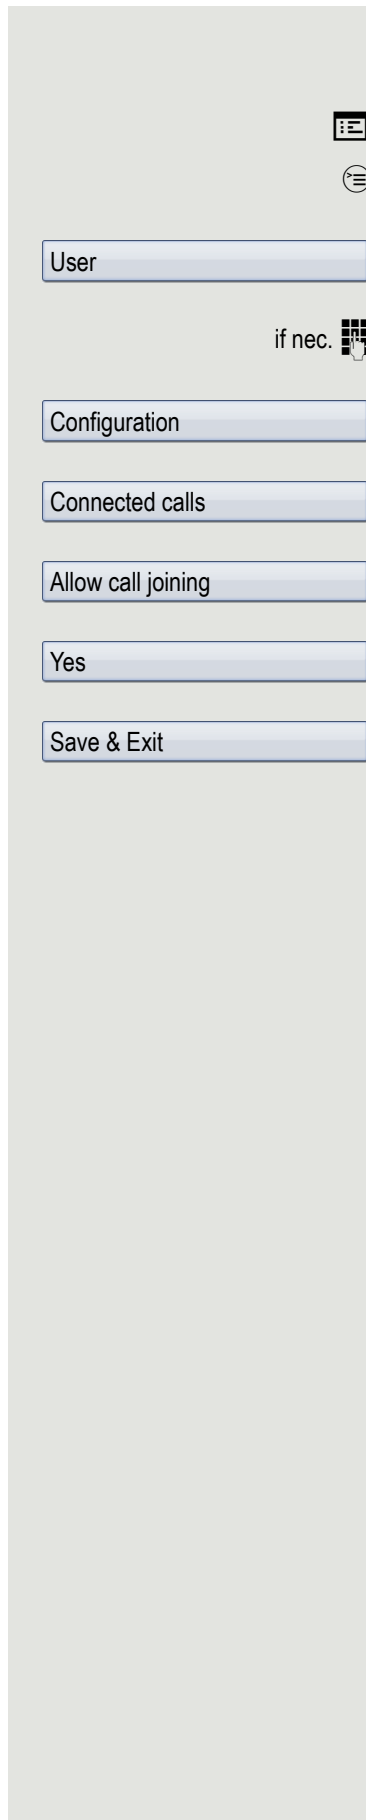

## Calling back missed calls

Calls received while you are absent are indicated by a message → Page 30 on the idle display. Moreover, the message key (Ⓜ) and/or the call display illuminate depending on the setting made by administrator. They only extinguish again when all new list entries have been queried.

Missed calls are logged in the missed calls list. This list provides information on the missed call and lets you call back the number directly. Missed calls are not saved and displayed if the call journal is disabled → Page 166.



Only the calls missed on your primary line are logged on multi-line telephones → Page 14.




Press the key until the application's "Missed" tab appears.

Select and confirm the appropriate list entry. The phone number is dialed.



For a detailed description of the call lists, refer to → Page 43.

 Karl, Gross20.05. 10:06

## Call forwarding

Depending on the settings made by administrator, standard call forwarding may be configured for the phone or alternatively a call forwarding by type option that is supported by OpenScape Voice → Page 83.

### Standard call forwarding

You can forward calls for your phone to another phone. You can also change, activate and deactivate call forwarding during a call. The function **Forwarding** must be authorised by administrator.



On multi-line telephones (→ Page 14), you can only configure call forwarding for the primary line.

---

Three forwarding conditions can be programmed in the forwarding menu:

- Unconditional
- Busy
- No reply (after {1}s)

Because of its direct impact, "Unconditional" call forwarding has the highest priority followed by "No reply" and "Busy".

If active, "Unconditional" call forwarding is indicated on the graphic display when the phone is idle.

Forwarded calls can be logged in a call list → Page 43.

The menu **Forwarding** offers you three types of call forwarding:

- Unconditional →  
Destination phone number
- Busy →  
Destination phone number
- No reply (after {1}s) →  
Destination phone number

A phone number may already be assigned to each call forwarding type. For example, one Destination could be Destination 12345.



Alternatively, call forwarding can be programmed on one or more keys with a fixed destination and a predefined forwarding or call type → Page 95.

---

## Using call forwarding

The following functions are available for activating and deactivating call forwarding and configuring it in accordance with your requirements:

- "Activate or deactivate immediate forwarding" → Page 78
- "Saving destination phone numbers for call forwarding" → Page 85
- "Edit favorites" → Page 79
- "Copy and insert destination phone numbers" → Page 80
- "Assign a destination phone number for call forwarding" → Page 80
- "Activate/deactivate call forwarding" → Page 81
- "Defining the ring duration before call forwarding on no reply" → Page 82

## Activate or deactivate immediate forwarding



Press the key shown.

### Deactivating call forwarding

If call forwarding was activated for Unconditional, it will now be automatically deactivated.

or

### Activate forwarding to last destination.

The pop-up menu opens:

 
The message:

"**Set forward on to**" is displayed with the number of the last forwarding destination and you have the following options:

- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Accept

### Use last forwarding destination

Select and confirm the option to use the last saved destination for Unconditional again. Call forwarding to this destination is immediately activated for Unconditional and the key  illuminates.

or

### Activate with variable destination phone numbers

If you want to use a new forwarding destination:

Set a forwarding destination

 
Select and confirm the option shown.




Enter and confirm the new destination phone number.

or

Confirm the last destination phone number saved (it will be displayed).

Call forwarding to this destination is immediately activated for Unconditional and the key  illuminates.

## Saving destination phone numbers for call forwarding

 You can also enter the call forwarding settings via the user menu (→ Page 101) or via the WBM interface → Page 265.

Press the key shown.

The pop-up menu opens:

The message:


"**Set forward on to**" is displayed with the number of the last forwarding destination and you have the following options:

- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Select and confirm the option shown.

Three types of call forwarding are offered in the settings menu:

- Unconditional
- Busy
- No reply (after {1}s)

 You can check whether **Busy** or **No reply** call forwarding is activated.

### Save destination phone number

Select forwarding type (here for instance Unconditional)

Select forwarding type in context menu.

Enter/edit and confirm the destination phone number.

### Edit favorites

You can configure up to five destination phone numbers for call forwarding. These destination phone numbers can then be assigned different forwarding conditions.


Select forwarding type (here for instance Unconditional)

Select and confirm forwarding type in context menu.

Select and confirm the option shown.

Enter/edit and confirm the destination phone number.  
If necessary, define additional destination phone numbers.

Select and confirm the option shown

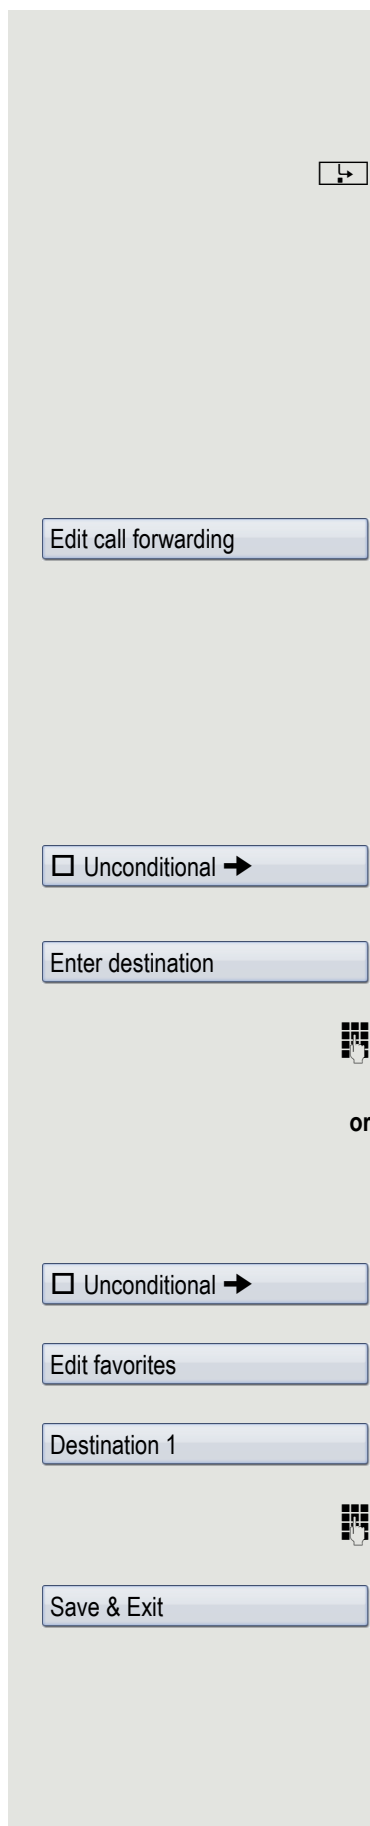

## Copy and insert destination phone numbers

The current destination phone number for a call forwarding type is copied. For example, the current destination phone number for All calls should also become the current destination phone number for No reply.

Press the key shown.

The pop-up menu opens:

Select and confirm the option shown.

Three types of call forwarding are offered in the settings menu:

- Unconditional
- Busy
- No reply (after {1}s)

### 1. Copy

Select forwarding type (here for instance Unconditional)

Select and confirm forwarding type in context menu.

### 2. Insert

Select target forwarding type (here for instance No reply (after {1}s))

Select and confirm target forwarding type in context menu.

Both types of call forwarding now have the same destination phone number.

## Assign a destination phone number for call forwarding

**Prerequisite:** At least one destination phone number has already been saved.

Press the key shown.

The pop-up menu opens:

The message:

"**Set forward on to**" is displayed with the last forwarding destination used and you are offered the following options:


- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Select and confirm the option shown.


Select forwarding type (here for instance Unconditional)

Select and confirm a saved destination in the context menu of the relevant forwarding type.

The forwarding type is activated and the new destination is displayed.

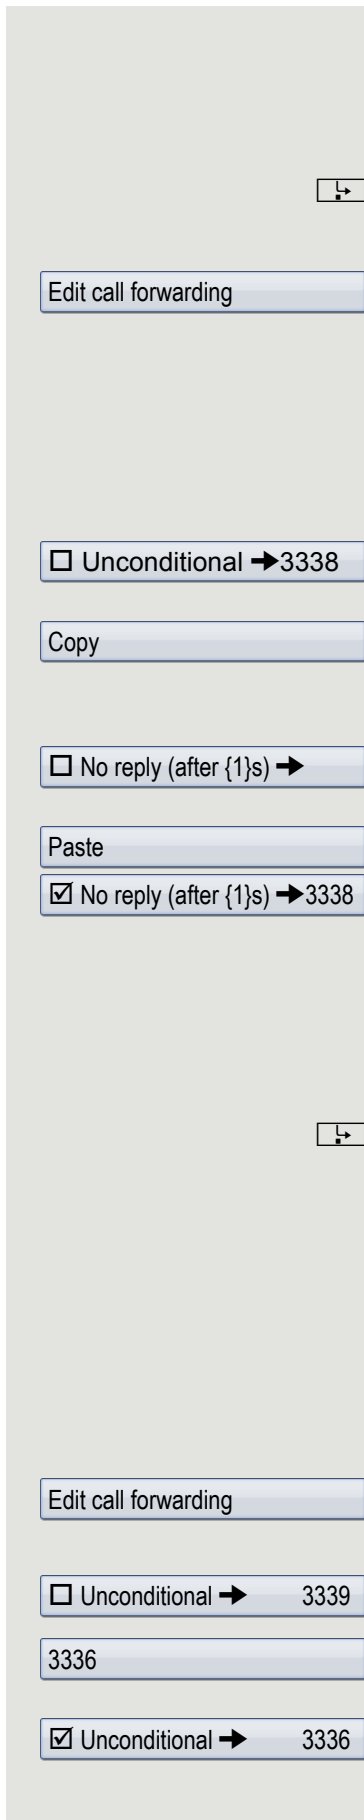



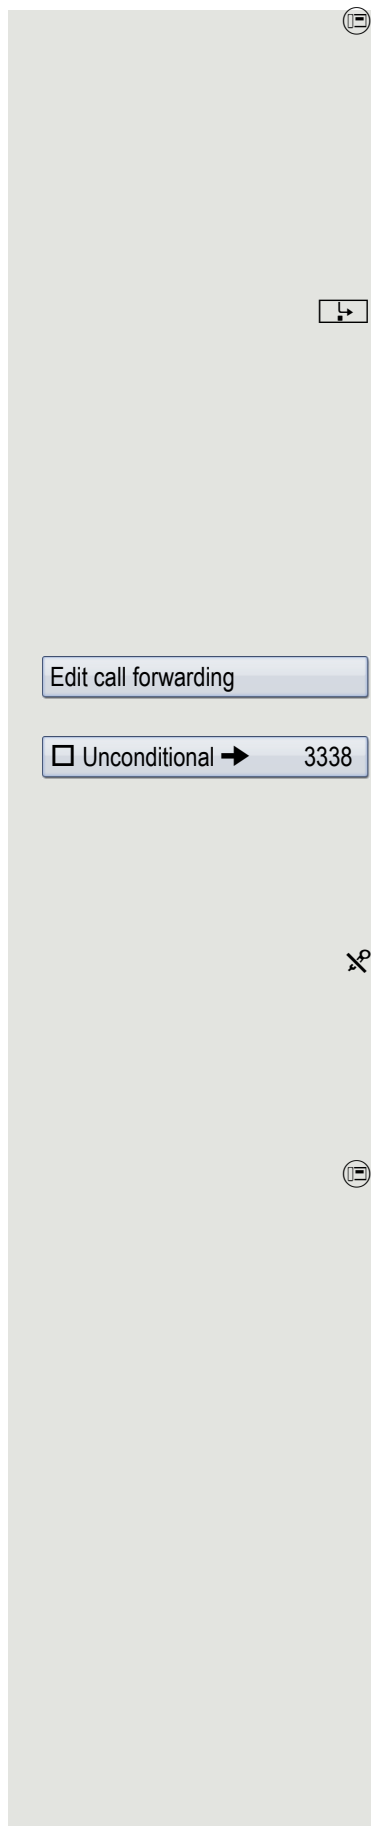

Press to open the call display If All calls was activated, the forwarding destination is displayed with the forwarding symbol. The **Busy** and **No reply (after {1}s)** types of call forwarding are not displayed.

## Activate/deactivate call forwarding

**Prerequisite:** A forwarding destination is already configured for the relevant forwarding type.

Press the key shown.

The pop-up menu opens:

The message:

"**Set forward on to**" is displayed with the number of the last forwarding destination and you have the following options:

- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Select and confirm the option shown.

Choose one of the forwarding types offered

- Unconditional (default setting is off)
- Busy
- No reply (after {1}s)

Here e.g. Unconditional.

Confirm your selection. The forwarding type is activated or deactivated.

Call forwarding settings can appear as follows:

- Unconditional (default setting is off)
- Busy
- No reply (after {1}s)

Press to open the call display If Unconditional was activated, the forwarding destination is displayed with the forwarding symbol and the key illuminates. The **Busy** and **No reply (after {1}s)** types of call forwarding are not displayed.

## Defining the ring duration before call forwarding on no reply

You can define how often the phone should ring before the "No reply (after {1}s)" call forwarding is activated.



This setting is only available if the "Server features" function was deactivated by the administrator.



You can also configure this setting via the WBM interface → Page 265.



**Prerequisite:** The phone is idle.

Press the key shown.

The pop-up menu opens:

Edit call forwarding

Select and confirm the option shown.

No reply (after {1}s) → 3335

Select forwarding type

Set delay

Select and confirm forwarding type No reply (after {1}s) in context menu. Default is 16 seconds.



Enter the desired time in seconds and confirm your entry. The set time is displayed with the option.

 


Press to open the call display

## Call forwarding by call type

If Server features has been enabled by administrator and the **Ext/int Forwarding** function activated, call forwarding by call type functionality will be available to you. Forwarding in this case is dependent on the forwarding type and additionally on the call type. The menu layout therefore deviates from that for standard forwarding → Page 77. You can also change, activate, and deactivate call forwarding during a call.

### Forwarding menu

The Forwarding menu is opened either using the  key or via the user menu (→ Page 101) and contains the three forwarding types:

- Unconditional
- Busy
- No reply

Because of its direct impact, "**Unconditional**" call forwarding has the highest priority followed by "**No reply**" and "**Busy**".

If active, "**Unconditional**" call forwarding is indicated on the display when the phone is idle. Forwarded calls are logged in a call list if allowed (see → Page 43).

The three forwarding types are each assigned three call types in the **Forwarding** menu:

#### Unconditional

- Any call
- External
- Internal

#### Busy

- Any call
- External
- Internal

#### No reply

- Any call
- External
- Internal

## Using call forwarding

The following functions are available for activating and deactivating call forwarding and configuring it in advance in accordance with your requirements:

- "Activating or deactivating immediate call forwarding" → Page 84
- "Saving destination phone numbers for call forwarding" → Page 85
- "Preconfiguring or changing destination phone numbers" → Page 87
- "Copying and pasting destination phone numbers" → Page 87
- "Assigning a destination phone number to a call type" → Page 89
- "Activating/deactivating call forwarding" → Page 89

## Activating or deactivating immediate call forwarding

You can also configure the settings for call forwarding via the user menu (→ Page 101). It is recommended to use the call forwarding key however so that you can use the following enhanced functions.



Press the key shown.

### Deactivating call forwarding

If call forwarding was activated for Unconditional, it is now automatically deactivated.

or

### Activating forwarding to last destination

 
The pop-up menu opens. The message:

"**Set forward on to**" is displayed with the last forwarding destination used and you are offered the following additional options:

- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Accept

### Using last forwarding destination

Select and confirm within three seconds to reuse the last forwarding destination saved for Unconditional. Call forwarding to this destination is immediately activated for **Any call** and the  key illuminates.

If you do not confirm **Accept** immediately, call forwarding is activated automatically after a short time.

or

### Activating with variable destination phone numbers

If you want to use a new forwarding destination:

 
Select and confirm within three seconds.

Enter and confirm the new destination phone number.




or

Confirm the last destination phone number saved (it will be displayed).

Call forwarding to the defined destination is immediately activated for **Unconditional** and **Any call** and the  key illuminates.

Set a forwarding destination

## Saving destination phone numbers for call forwarding

 You can alternatively enter the call forwarding settings via the user menu (→ Page 101) or also using the WBM interface → Page 265.



Press the key shown.

The pop-up menu opens. The message:

**"Set forward on to"** is displayed with the last forwarding destination used and you are offered the following options:

- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Select and confirm within three seconds.

You are then offered three forwarding types in the Forwarding menu with three call types each and with frequently used destination numbers preassigned by default:

- Unconditional
  - Any call
  - External
  - Internal
- Busy
  - Any call
  - External
  - Internal
- No reply
  - Any call
  - External
  - Internal
- Edit favorites

### Saving a destination phone number

Select the forwarding type and confirm (here for instance Unconditional).

Select the call type.

Select the option shown.

Select the option shown.

Select and confirm the option shown in the context menu for the call type.

Enter/edit and confirm the destination phone number.

You can now select another call type additionally and enter a destination phone number. If you assign destination phone numbers for External and Internal for example, both external and internal calls will be forwarded to the respective destinations.

If the destination phone numbers for **Any call** are assigned or changed, this call forwarding has priority and both external and internal calls are forwarded to this destination phone number.

Edit call forwarding

Unconditional

Any call →

or

 
External →

or

Internal →

Enter destination





Press to open the call view. Call forwarding for the selected call type is activated.

## Preconfiguring or changing destination phone numbers

You can preconfigure up to five destination phone numbers for call forwarding. These destination phone numbers can then be assigned to the different call types.

Press the key shown.

Select and confirm within three seconds.

Select and confirm the option shown.

For instance, select and confirm the first destination.

Enter/edit and confirm the destination phone number.  
If necessary, define additional destination phone numbers.

Select and confirm the option shown.

Press to open the call view.

## Copying and pasting destination phone numbers

The current destination phone number for a call type is copied. For example, the current destination phone number for All calls should also become the current destination phone number for **Internal**.

Press the key shown.

Select and confirm within three seconds.

The three forwarding types and associated call types are offered to you in the Settings menu:


- Unconditional
  - Any call
  - External
  - Internal
- Busy
  - Any call
  - External
  - Internal
- No reply
  - Any call
  - External
  - Internal

### 1. Copy

Select the forwarding type and confirm (here for instance Unconditional).

Select the call type (here for instance Any call).

Select and confirm the option shown in the context menu.

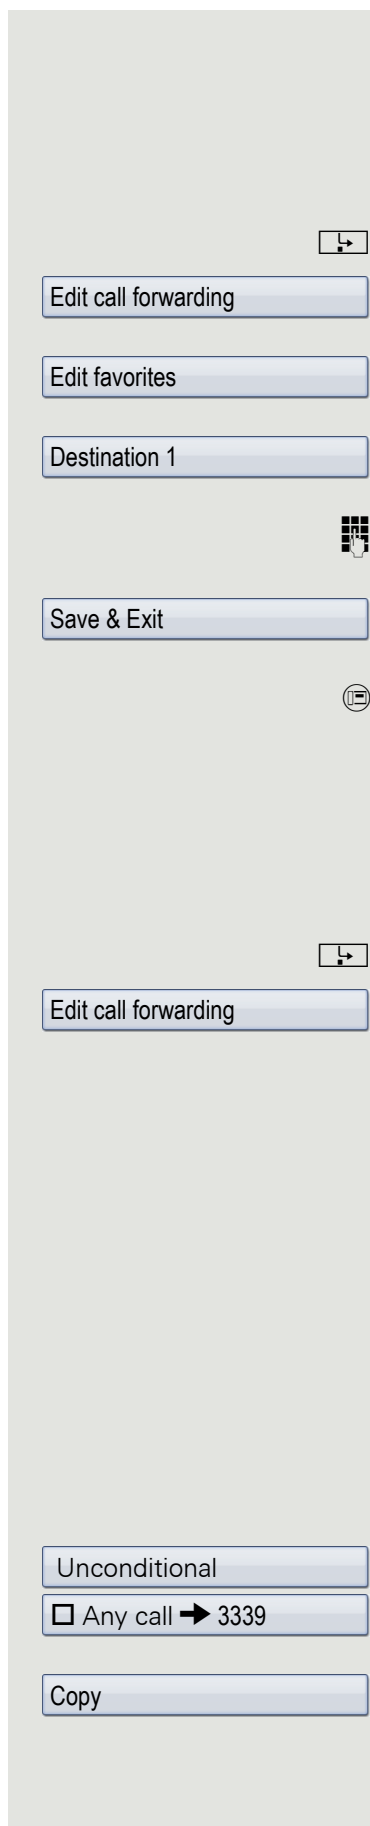

External →

Paste

 External → 3339

Busy

 Internal →

Paste

 Internal → 3339


## 2. Paste to a call type of the same forwarding type

Select the destination call type (here for instance External).

Select and confirm the option shown in the context menu.

Both call types now have the same destination phone number. The call type External is activated automatically.

## 3. Paste to a call type of a different forwarding type

Select the forwarding type and confirm (here for instance Busy).


Select the destination call type (here for instance Internal).

Select and confirm the option shown in the context menu.

Both call types now have the same destination phone number. The call type Internal for Busy is activated automatically.

Press to open the call view.



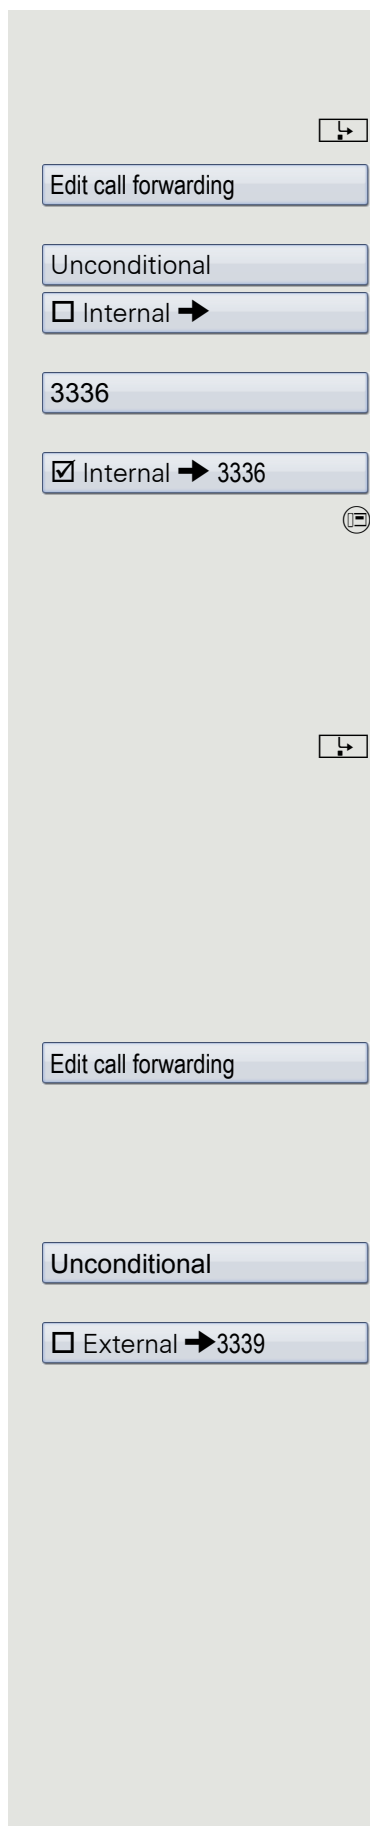

## Assigning a destination phone number to a call type

**Prerequisite:** At least one destination phone number has already been saved.

Press the key shown.

Select and confirm within three seconds.

Select the forwarding type and confirm (here for instance Unconditional).

Select the destination call type (here for instance Internal).

Select and confirm a previously saved destination in the context menu.

The call type is activated and the new destination is displayed.

Press to open the call view.

## Activating/deactivating call forwarding

**Prerequisite:** One or more forwarding destinations are already configured for the relevant call type(s).

Press the key shown.

The pop-up menu opens. The message:

"**Set forward on to**" is displayed with the last forwarding destination used and you are offered the following options:

- Accept
- Set a forwarding destination
- Edit call forwarding
- Cancel

Select and confirm within three seconds.

The list of forwarding types is displayed:

- Unconditional
- Busy
- No reply

Select and confirm the option shown, for instance Unconditional

Choose one of the call types offered

- Any call 3339 (default setting is off)
- External 3335
- Internal 3336


and confirm your selection, for instance **External**. The call type is activated. Press once more to deactivate this call type again.

You can also activate all three call types. The call type **Any call** has priority in this case and all calls are forwarded to the defined destination phone number. Call forwarding for the call types **External** and **Internal** can be activated at the same time. **INT/EXT** is then shown on the display for the forwarding type **Unconditional**.

The call forwarding settings can appear as follows:

 
- Any call 3339 (default setting is off)
- External 3335
- Internal 3336

---

 All call types are deactivated automatically for the forwarding type **Unconditional**. Previously activated call forwarding for all call types remains activated with the forwarding types **Busy** and **No reply** until deactivated manually by you. Activated call forwarding for **Busy** and **No reply** is indicated in the list by the call forwarding icon.

---



Press to open the call view. If you selected the forwarding type **Unconditional** and activated a call type here, the call type is shown on the display with the call forwarding icon and the  key illuminates. Nothing is shown on the display for the forwarding types **Busy** and **No reply**.

## Call forwarding chain

Sometimes calls to a station are forwarded to another station that also has call forwarding or DND activated. This can create a call forwarding chain consisting of several telephones where the last member of the chain is your phone.

A popup window opens on your phone's display with the following information:

- Who is calling.
- Who forwarded first or last.
- The reason for the forwarding is displayed by an icon.

You can set whether the station that forwarded first or last is displayed (see → Page 101).

## Programmable sensor keys

The phone features a range of functions that can, if required, be programmed on programmable sensor keys. The phone comes with nine (OpenStage 80) or eight (OpenStage 60) sensor keys, all of which can be programmed on two separate levels.

The "Shift" sensor key for switching between the two sensor key levels is preassigned. This sensor key should be maintained where possible so you can switch between the two sensor key levels. The labels for the sensor keys are displayed on the right edge of the display. The sensor keys can also be programmed via the WBM interface → Page 265.

### List of available functions


- |                            |                         |
|----------------------------|-------------------------|
| 1. Unallocated             | 24. Headset             |
| 2. Selected dialing        | 25. Do not disturb      |
| 3. Repeat dialing          | 26. Group pickup        |
| 4. CF unconditional        | 27. Repertory dial      |
| 5. CF busy                 | 28. Feature toggle      |
| 6. CF no reply             | 29. Mobility            |
| 7. CF unconditional - any  | 30. Directed pickup     |
| 8. CF unconditional – int. | 31. Trennen             |
| 9. CF unconditional – ext. | 32. Callback            |
| 10. CF busy - any          | 33. Cancel callbacks    |
| 11. CF busy – int.         | 34. Consultation        |
| 12. CF busy – ext.         | 35. Call Waiting toggle |
| 13. CF no reply - any      | 36. Immediate ring      |
| 14. CF no reply – int.     | 37. PreView             |
| 15. CF no reply – ext.     | 38. Start application   |
| 16. Ringer off             | 39. Call recording      |
| 17. Hold                   | 40. Built in fwd        |
| 18. Alternate              | 41. Personal directory  |
| 19. Blind transfer call    | 42. Pause callbacks     |
| 20. Transfer call          | 43. Resume callbacks    |
| 21. Deflecting             | 44. Video on            |
| 22. Shift                  | 45. Corporate directory |
| 23. Conference             |                         |

## Programming sensor keys

### Starting programming

#### Directly via a sensor key

Hold down the sensor key to which a function should be assigned until the programming prompt is displayed.

 If the prompt is not displayed or a programmed function is not executed, then you can only launch key programming via the user menu (ask your administrator about the current setting).

Confirm to begin programming. The sensor key illuminates continuously.

#### Via the user menu

You can also program keys via the user menu.

Press the key shown until the "Settings" tab is active.


Confirm the option shown.


Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown. You are prompted to press the key you wish to program.

Press the sensor key you want to program with a function. The sensor key illuminates continuously.

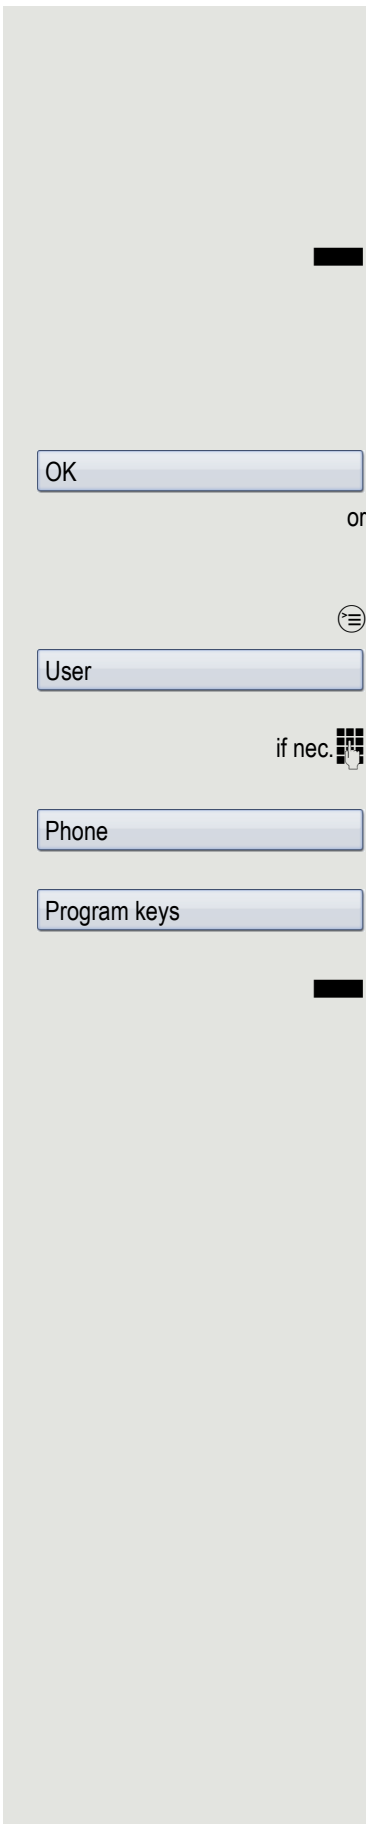

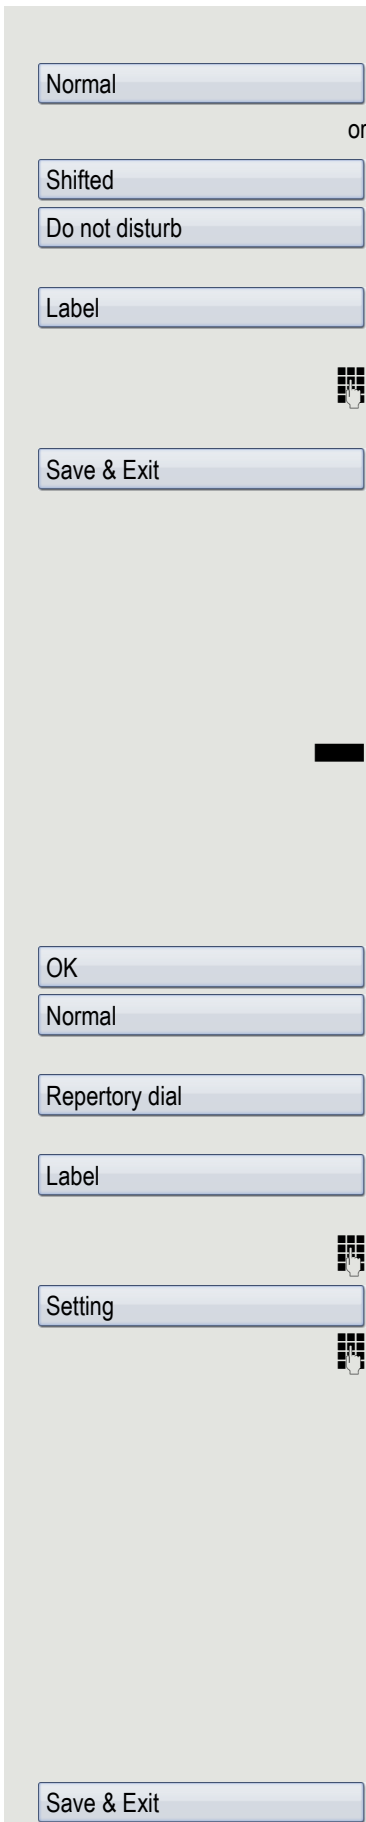

## Beginning programming

Select and confirm the option shown to program the first level.

Select and confirm the option shown to program the second level.

In the context menu select and confirm the required function (e. g. Do not disturb).

Select and confirm the option shown if you want to change the label on the graphic display.


Enter and confirm the label you want.

Select and confirm the option shown.

## Programming enhanced functions

### Repertory dial

Hold down the sensor key to which a function should be assigned until the programming prompt is displayed.

 If the prompt is not displayed or a programmed function is not executed, then you can only launch key programming via the user menu (ask your administrator about the current setting).

Confirm to begin programming. The sensor key illuminates continuously.

Select and confirm the option shown.

Select and confirm the function in the context menu.




 

Select and confirm the option shown if you want to change the label on the graphic display.

Enter and confirm the label you want (for example, the destination station).


Select and confirm this option to enter a destination phone number.

Enter and confirm the stations's destination phone number.

You can select and insert special characters in the dialling sequence:

Icon	Function
	Calls up the special characters menu
	Disconnects the call
	Activates a consultation hold
	Enables a normal call
	Enters a pause, for example, for international dialling

Select and confirm the option shown.

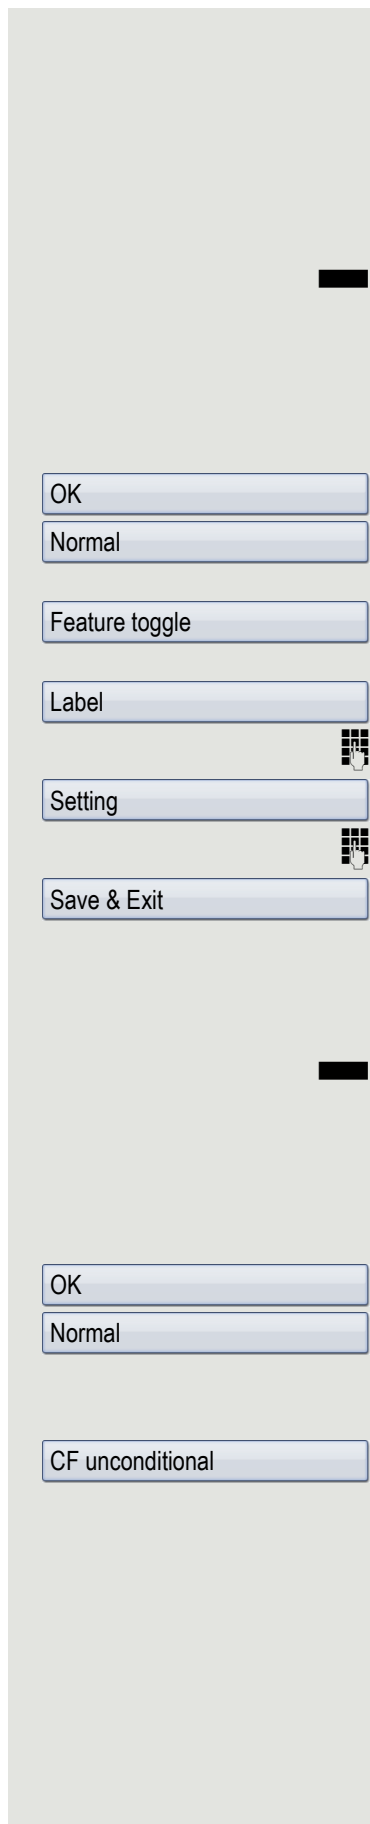

➡ The repertory dial can be up to 40 characters long.

## Feature toggle

Only available for Hunt group functions (→ Page 191).

Hold down the sensor key to which a function should be assigned until the programming prompt is displayed.

➡ If the prompt is not displayed or a programmed function is not executed, then you can only launch key programming via the user menu (ask your administrator about the current setting).

Confirm to begin programming. The sensor key illuminates continuously.

Select and confirm the option shown.

Select and confirm the function in the context menu.

Select and confirm to change the key labeling.

Enter and confirm the label you want (for example, "busy/free").

Select and confirm this option to enter a code.

Enter the code (see Code list table → Page 202) and confirm.

Select and confirm the option shown.

## Configuring a fixed forwarding key

Hold down the sensor key to which a function should be assigned until the programming prompt is displayed.

➡ If the prompt is not displayed or a programmed function is not executed, then you can only launch key programming via the user menu (ask your administrator about the current setting).

Confirm to begin programming. The sensor key illuminates continuously.

Select and confirm the option shown.

## Call forwarding depending on the forwarding type

Select a forwarding type:

- Unconditional
- No reply
- Busy

Select and confirm the function in the context menu.

### Call forwarding depending on the call type

If use of system-assisted functions has been enabled by administrator and the **Ext/int Forwarding** function activated, call forwarding by call type functionality will be available to you. Forwarding in this case is dependent on the forwarding type and additionally on the call type.

Select one of the forwarding types:

- CF unconditional - any
- CF unconditional – int.
- CF unconditional – ext.
- CF busy - any
- CF busy – int.
- CF busy – ext.
- CF no reply - any
- CF no reply – int.
- CF no reply – ext.

Select and confirm the option shown if you want to change the label on the graphic display.

Accept or edit the label and confirm.

Select and confirm this option to enter the forwarding destination.

Enter and confirm the phone number of the forwarding destination.

Select and confirm the option shown.

CF unconditional - any

Label



Setting



Save & Exit



## Using sensor keys

The use of programmed functions depends on the phone's status. The relevant display appears once you have pressed a sensor key.

### Example 1: Calling saved number

**Prerequisite:** The idle menu is displayed on the display.

Press the sensor key for a saved number . The connection is set up.

### Example 2: Call Waiting toggle Activating/deactivating

You can press a key to activate or deactivate call waiting functionality, even during a call. The prerequisite for this is that a second call is permitted (→ Page 110). By default a second call is permitted.

Press the "Call Waiting toggle" sensor key. The sensor key goes out. The second call function is deactivated. The call is rejected or forwarded.

### Example 3: Immediate ring

This function allows you to switch the preset delay (→ Page 149) on and off for all line keys. By default the delay is set, the key does not illuminate.

Press the "Immediate ring" sensor key. The sensor key illuminates. The delay ringtone is disabled. An incoming call rings immediately regardless of what delay time is configured.

## Resetting sensor keys

You can reset sensor keys you configured to factory settings (see also → Page 243).

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown to switch to the **Reset user data** menu.

Select.

Select and confirm the option shown in the context menu to delete the content of the sensor keys.


Select.

Select and confirm "Reset selected user data" in the context menu. The contents of the sensor keys you configured are deleted.

---

 Keys which can only be configured by administrator remain unchanged.

---

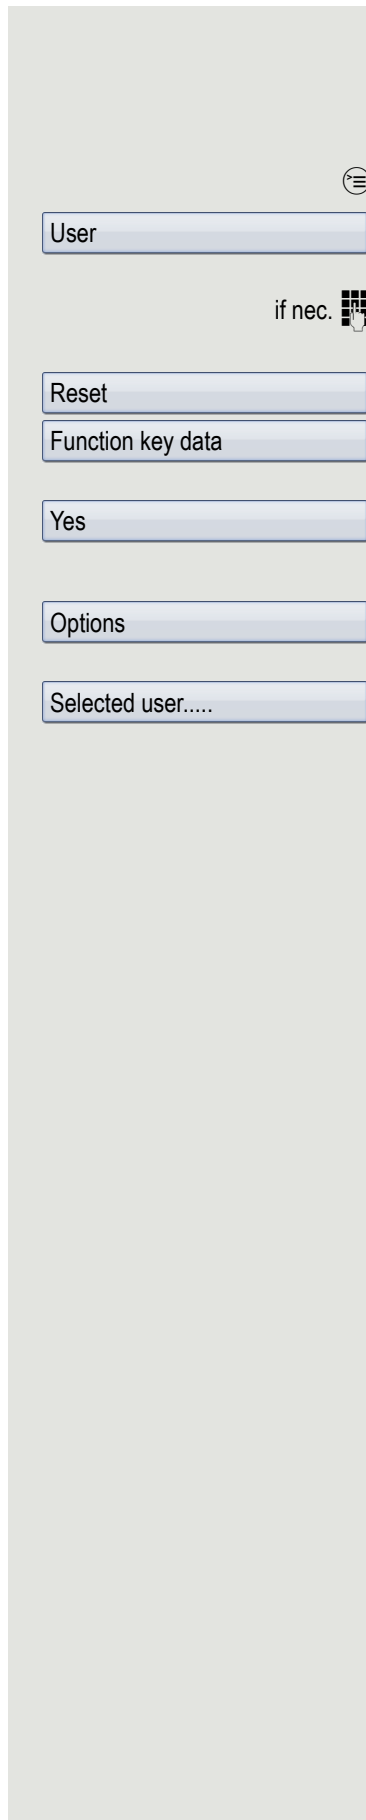

# Enhanced phone functions

## Incoming calls

### Rejecting a call

You can reject an incoming call.

**Prerequisite:** An incoming call is displayed or signalled. The function is authorised by administrator.

In the pop-up menu:

Select and confirm the option shown.  
The caller hears a busy signal.




If the rejected caller's phone number is transmitted, it is saved in the call list. You can then call this party back at a later time.

### Deflecting a call

#### Using call deflection

**Prerequisite:** An incoming call is displayed or signalled. The function is authorised by administrator.

In the pop-up menu:

Select and confirm the option shown.  
The call is immediately deflected if a destination phone number (→ Page 100) is programmed.



If you did not set a phone number when programming call deflection, a pop-up menu appears prompting you to enter a destination phone number for call deflection.

Enter and confirm the destination phone number.  
The call is deflected.



User

if nec.

Configuration

Incoming calls

Deflect

Allow deflection

Yes

Default destination

or

Deflect to DSS Yes

### Permitting call deflection

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

Enter and confirm the phone number to which the station should be deflected.




Entering a destination phone number is not mandatory when call deflection is active. If you want to deflect a call, you are prompted to enter a destination phone number if there is none stored.


### Deflecting to a DSS number

A call can be deflected to a direct station selection (DSS) subscriber using the DSS key, if the key is configured and the deflect function is activated by your administrator → Page 134.

Information only, as set by administrator: Yes or No.

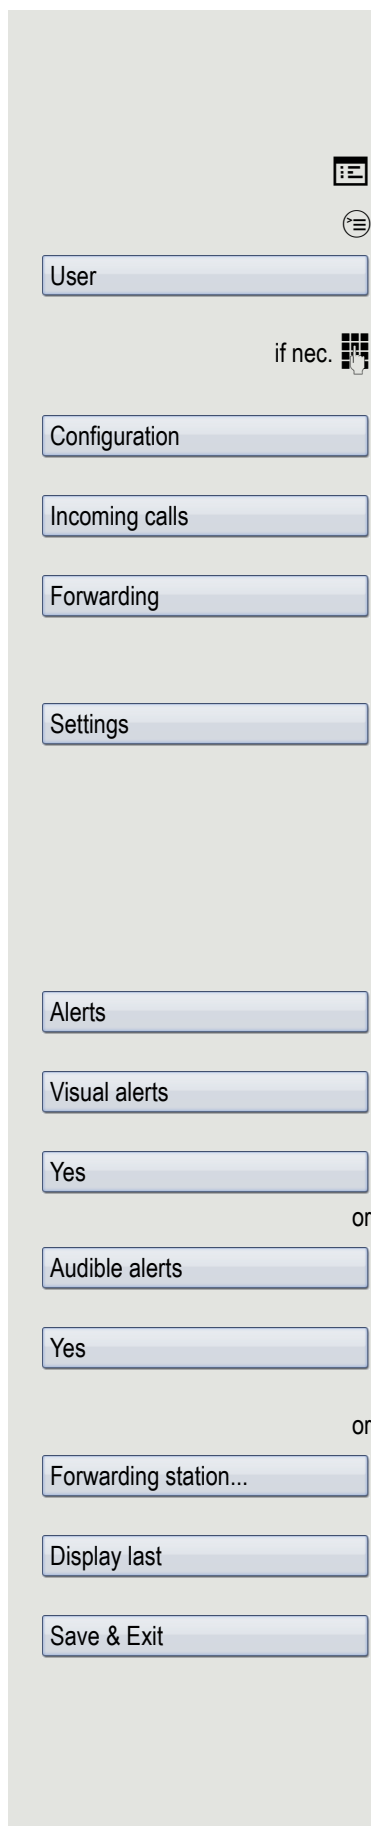

## Configuring call forwarding

 You can also enter the call forwarding settings via the Forwarding key (→ Page 78).

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until "Settings" is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

## Configuring call forwarding

Select and confirm the option shown.

For a description of the settings, refer to section "Standard call forwarding" → Page 77 or "Call forwarding by call type" → Page 83.

## Setting alerts

Use the Call forward alerts menu to enable and disable visual and audible alerts for call forwarding (not possible with the Forwarding key).

Select and confirm the option shown.

Select the option shown.

Select and confirm the option shown in the Yes/No context menu.

Select the option shown.

Select and confirm the option shown in the Yes/No context menu.

Select the option shown.

Select and confirm **Display last/Display first**

Select and confirm the option shown.

## Placing a call on hold

You can use this function to place an ongoing call on hold, for instance, to prevent the other party overhearing a conversation with a colleague in the same room. The held party hears music on hold if **Music on hold** is active on this party's phone (→ Page 107).

**Prerequisite:** You are conducting a call.

Select and confirm the option shown in the connections's context menu.

Hold

or



Press the "Hold" key. The key flashes. (The "Hold" sensor key must be configured → Page 92.)



If you do not retrieve the held call after a defined time interval, a reminder beep sounds three times and a prompt to retrieve the call or disconnect appears on the display. The settings for this can be found on → Page 104 and → Page 105.

### Retrieving a held call

Select and confirm the option shown in the connections context menu.

Reconnect

or



Press the illuminated "Hold" key. (The "Hold" sensor key must be configured → Page 92.)

## Using line keys

On multi-line telephones you can use the line keys to place ongoing calls on hold.



Press the corresponding trunk key. The line key LED starts flickering. The call is now on hold.

### Retrieving a held call

Press the corresponding trunk key. The line key LED lights up. The call is retrieved.



The LED display → Page 25 or status display on the "Overview" tab → Page 38 indicates that the call is on hold to other multi-line telephones where this line is also configured. These phones can then pick up the call.

## Held call wait status

After placing a call on hold, you can replace the handset and then decide whether to retrieve the call or disconnect.

**Prerequisite:** You placed a call on hold and replaced the **handset** or pressed the loudspeaker key in speakerphone mode.

A recall follows immediately and a pop-up menu appears on the display:


Retrieve held call

or

Disconnect


Select and confirm the option shown to disconnect the held call.

---

 If you enabled "Hold and hang-up" (→ Page 106), the call is placed on hold for a defined time interval (→ Page 105) before the prompt is displayed with a recall to retrieve the call or disconnect. You can however retrieve the call or disconnect via the context menu before the defined time expires.

This function is **not** considered on multi-line phones.

---

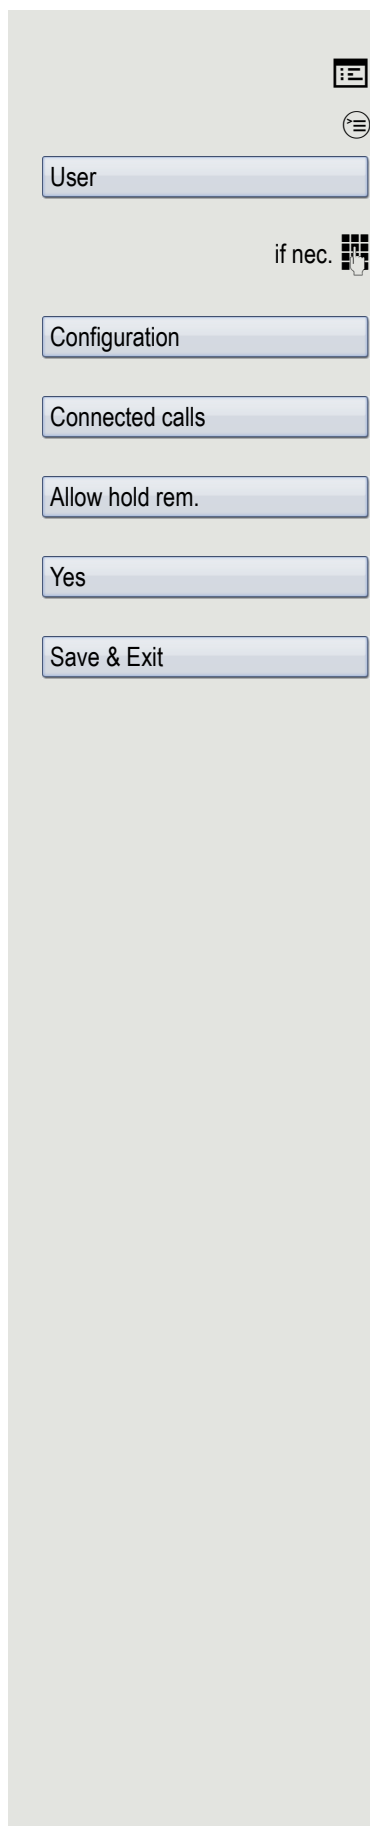

### Activating/deactivating the hold reminder tone

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.



### Setting the hold reminder time

Use "Hold reminder" to specify when you want to receive an automatic reminder about a held call. The minimum time value is 3, that is, the reminder is output after three minutes. The maximum value is 15 minutes.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until "Settings" is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter a value between 3 and 15 and confirm.

Select and confirm the option shown.

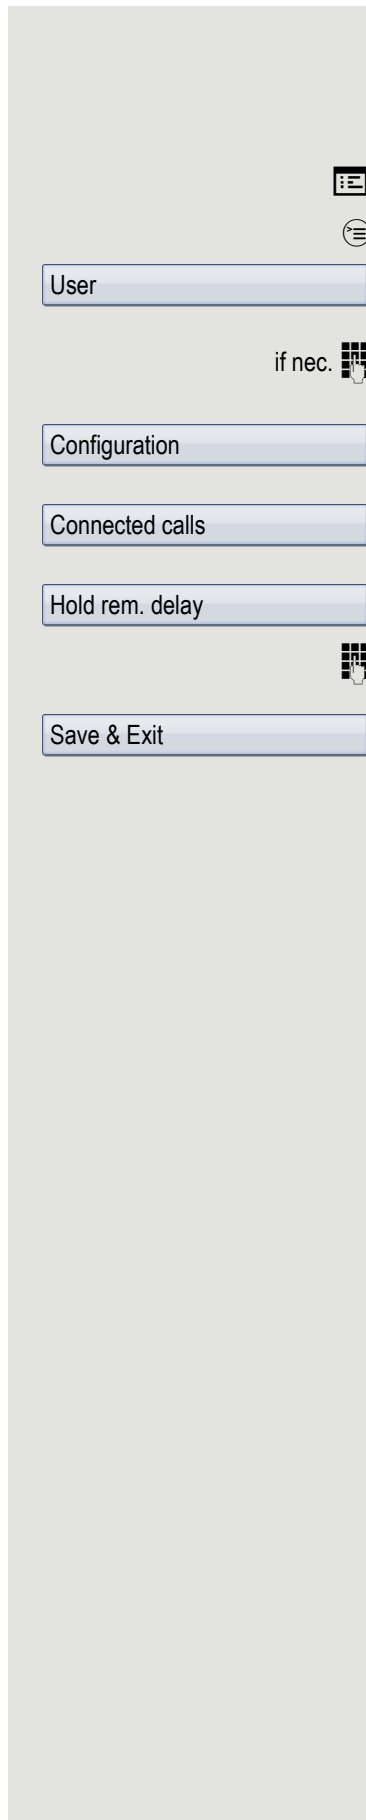


## Activating/deactivating Hold and hang-up

This function works in the following call scenarios:

- You have placed a call on hold and hang up.
- You are conducting a consultation call and the second call partner hangs up.
- You accepted a second call, and you or the second participant hang up.

You can use "hold and hang up" to determine whether you will be prompted immediately or after a defined time to retrieve the held call.

 This function **cannot** be used on multi-line phones.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until "Settings" is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.


Select and confirm the option shown.

In the context menu select and confirm the option shown to activate the function or

Select and confirm the option shown to deactivate the function again. The function is always deactivated by default.

Select and confirm the option shown.

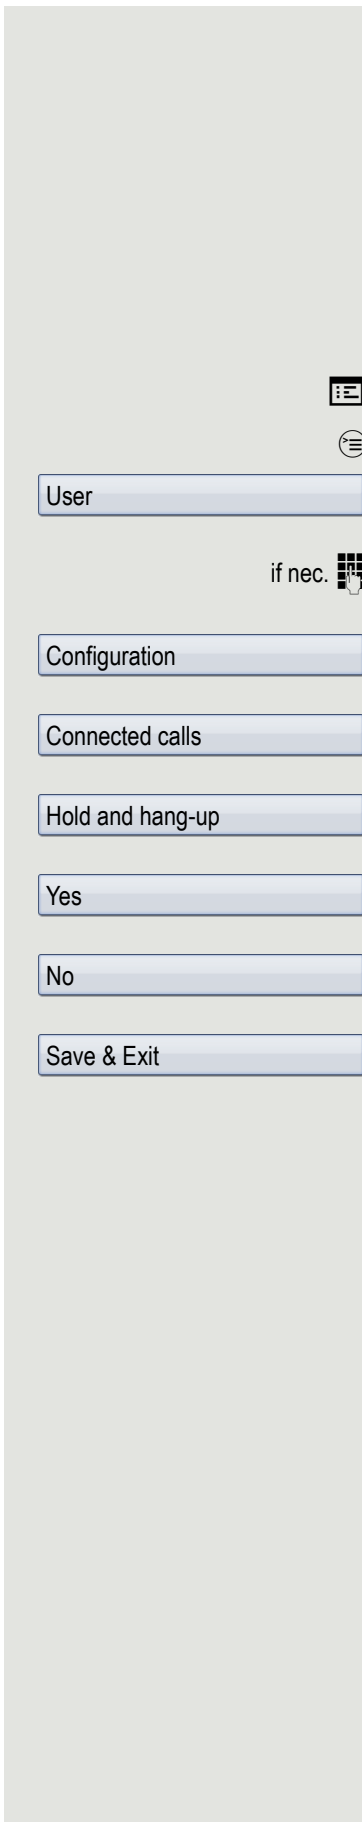

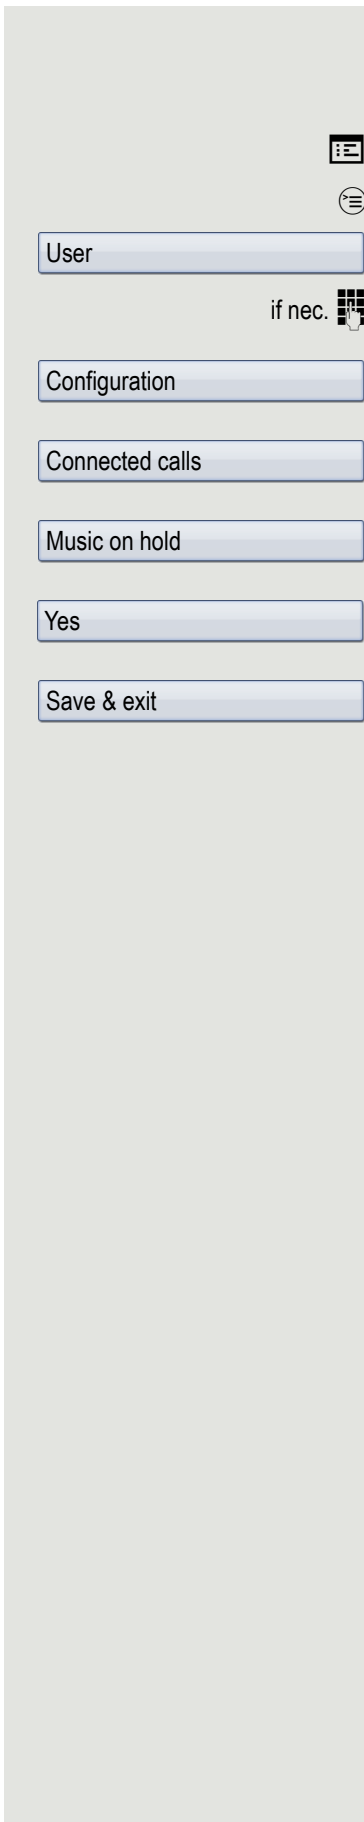

## Music on hold

Music on hold is played back when you are placed on hold by another party, providing this option is active.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until "Settings" is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

## Call waiting (second call)

You can accept a second incoming call in the course of an ongoing call. The caller hears the on-hook signal while you hear a call waiting signal tone.

You can reject or accept the second call. Before you accept the second call, you can end the first call or place it on hold for subsequent retrieval.

You can block the second call or the signal tone (→ Page 110).

### Accepting a second call

**Prerequisite:** You are conducting a call and call waiting is allowed (→ Page 110).

In the pop-up menu:

Select and confirm the option shown.

You can talk to the second party.

The connection to the first party is on hold.

You can still

- toggle between an initial and second call or
- put on hold and retrieve second and first call successively → Page 72  
or
- initiate a conference

### Consultation call from second call

If the second call is your active call you can initiate a consultation call from it.

**Prerequisite:** The administrator must have approved the consultation in the second call.

From a consultation call in the second call you can

- initiate a conference
- toggle between the second call and a consultation call
- put on hold and retrieve second and consultation call successively → Page 72
- transfer a call
- disconnect the calls again

During a consultation in the second call, the first call is parked and can only be unparked when the consultation or second call ends or these calls were connected.

### Disconnect second call

Select and confirm the option shown in the second call's context menu. The call to this station is disconnected and the call to the first station is reconnected.

### Ending the second call by hanging up

If you or the second call partner hangs up, you will be prompted to retrieve the first call again if "Hold and hang-up" is disabled (→ Page 106). Otherwise, the first call will remain on hold until you receive this prompt after a defined time interval.

Accept

Disconnect & return



### Ignoring second call

**Prerequisite:** You are conducting a call and call waiting is allowed (→ Page 110).

In the pop-up menu:

Select and confirm the option shown.

The caller still hears the on-hook signal. You can subsequently Accept, Reject or Deflect the second call.

While the ignored second call continues to wait, from the active call you can:

- make a consultation call
- initiate a conference
- toggle between the consultation call and your call party
- transfer a call

A third call would be rejected with the busy signal

If you have disconnected the first call, the ignored second call rings like a normal call.



### Rejecting a second call

**Prerequisite:** You are conducting a call and call waiting is allowed (→ Page 110).

In the pop-up menu:

Select and confirm the option shown.

The second call is rejected. The caller hears the busy signal. The caller's phone number is added to the missed calls list.



### Deflecting a second call


**Prerequisite:** You are conducting a call and call waiting is allowed (→ Page 110).

In the pop-up menu:

Select and confirm the option shown.

Enter and confirm the phone number.

The second call is deflected to the destination specified.

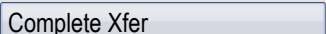

### Connecting parties


 
**Prerequisite:** You have accepted the second call.


Select and confirm the option shown in the active connections context menu. The other two parties are now connected to one another. You can now hang up or dial another number for instance.

### Connect by hanging up

**Prerequisite:** Connecting by hanging up is activated (ask your administrator) and "Toggle associate" must be set to "Yes" (→ Page 110).


Replace the handset or, if you are in speakerphone mode, press the loudspeaker key. The other two parties are now connected to one another.

 or 

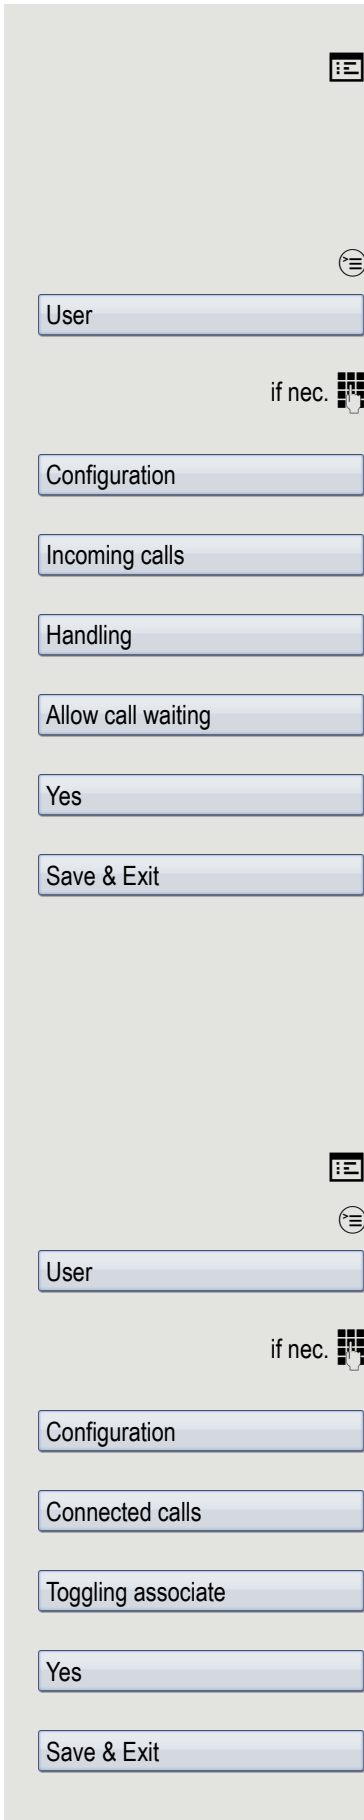

### Allowing call waiting

You can also configure this setting via the WBM interface → Page 265.

 If the Call waiting (second call) function is deactivated, a caller hears the busy signal if you are already conducting a call.

**Prerequisite:** The option was programmed by your administrator.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

When **Allow call waiting** is activated, you can toggle the configured sensor key to switch call waiting on/off (→ Page 97).

### Toggling associate

Set the "Toggle associate" function to Yes if you want to connect to a second or pickup call by hanging up.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

## Transferring a call


You can transfer your current call to another party with or without consultation.

### Blind transfer

**Prerequisite:** You are conducting a call. The options "Allow call transfer" and "Transfer on ring" were selected (→ Page 111).

Select and confirm the option shown in the connections's context menu.

Enter and confirm the phone number of the second party to whom you want to transfer the call. You can also select and call a subscriber here from a call list or from one of the two phonebooks → Page 155.

 The graphic display returns to idle following successful transfer.

### Transferring with consultation

You can announce a call to a recipient before transferring it.

**Prerequisite:** You are conducting a call. The options "Allow call transfer" and "Transfer on ring" were selected (→ Page 111).

Select and confirm the option shown in the connections's context menu. The call is placed on hold.

Enter the phone number of the party to whom you want to transfer the call. You can also select and call a subscriber here from a call list or from one of the two phonebooks → Page 155.

Confirm the option shown.

#### If the party answers:

 
Announce the call you want to transfer.

Select and confirm the option shown in the connections's context menu.

#### If the party does not answer:

You do not have to wait for the second party to answer before you can transfer the call.

Select and confirm the option shown in the connections's context menu.

Replace the handset or, if speakerphone mode is active, press the lit  key to transfer the call.

If the party does not answer, you will be called back by the first party.

### Allowing call transfer

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Blind transfer



Consultation



Dial

Complete Xfer

Complete transfer

or



User

if nec.



Configuration

Connected calls

Select and confirm the option shown.

Allow call transfer

Select and confirm the option shown.

Yes

Select and confirm the option shown in the context menu.

Save & Exit

Select and confirm the option shown.



### Allowing "Transfer on Ring"

If this option is allowed, you can activate call transfer by replacing the handset even before the called party answers.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

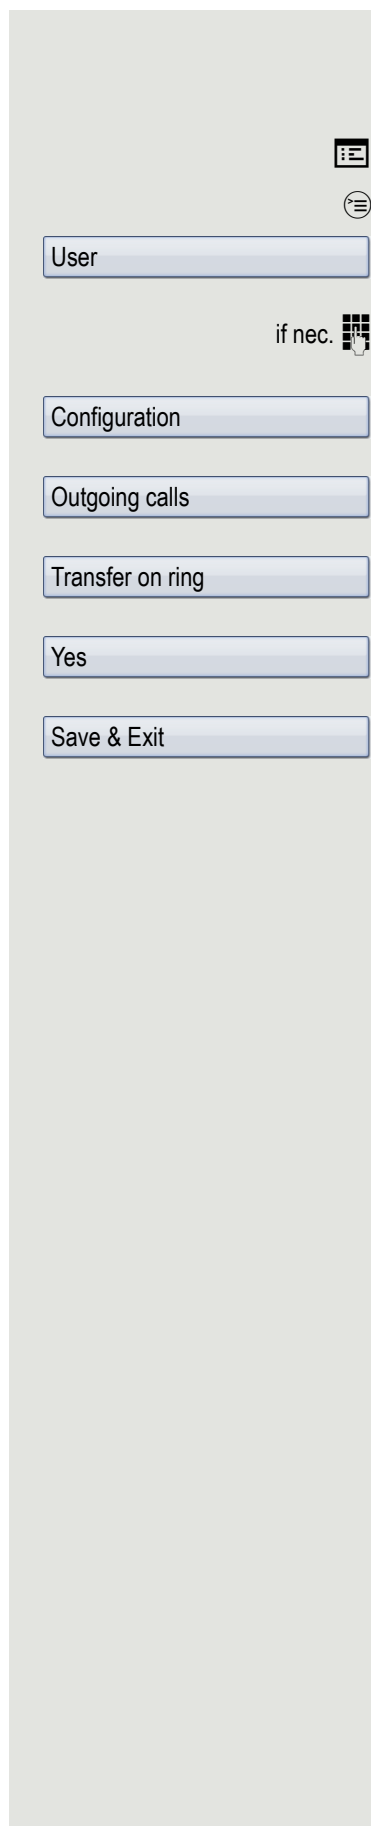

## CTI calls

### Beep on auto-answer

Speakerphone mode activates automatically on your phone if you use a CTI application (such as Outlook) to dial a number when Auto Answer is active. If Auto Answer is not active, the phone rings first and you have to press the loudspeaker key or lift the handset to set up the call. This setting also defines whether or not incoming calls are automatically accepted. If the function is active, an alert beep sounds when a call is automatically accepted. Details regarding special application are provided on → Page 133.

Information on the operation of the configured CTI application can be found in the corresponding user guide.

You can also configure this setting via the WBM interface → Page 265.

**Prerequisite:** The option was programmed by your administrator.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

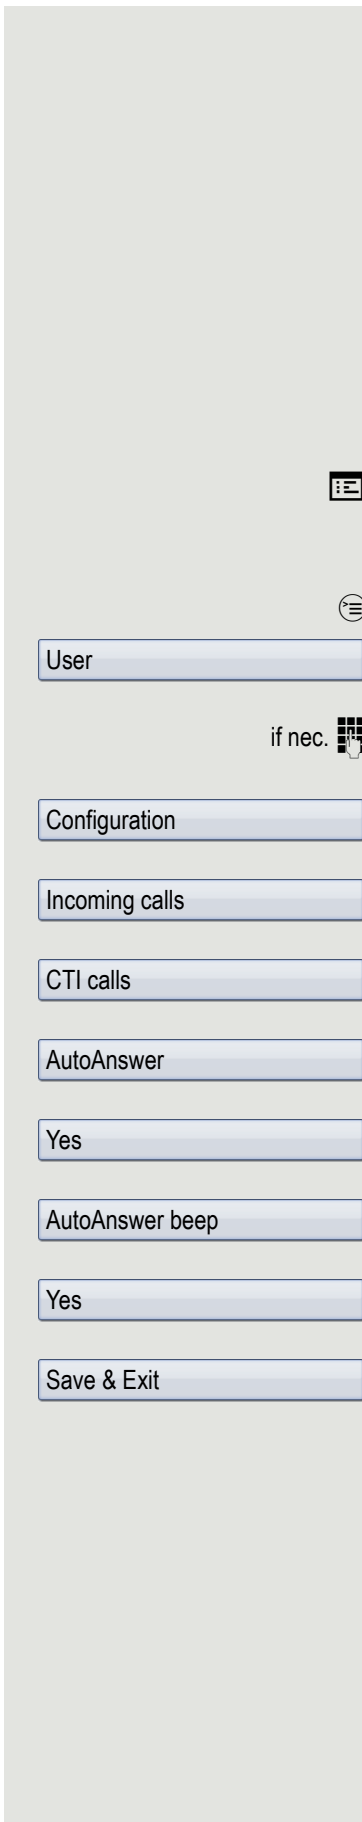

### Beep on auto-reconnect

You can reconnect a held call both via the CTI application and via the phone. A beep sounds when you toggle between an active call and a held call when the function is active.

You can also configure this setting via the WBM interface → Page 265.

**Prerequisite:** The option was programmed by your administrator.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

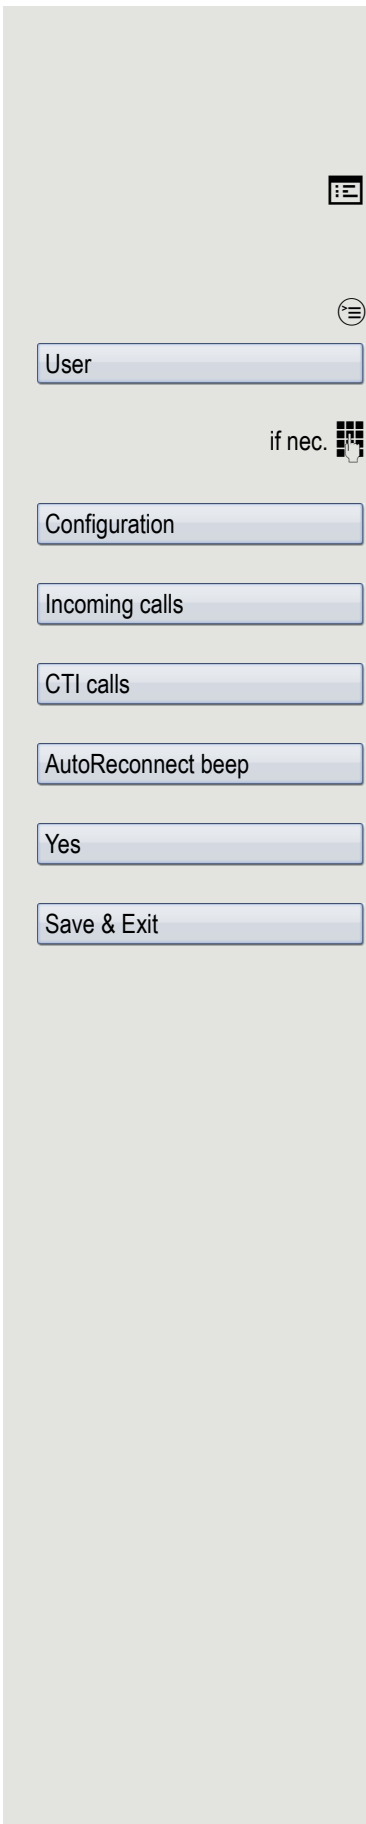

## Making calls

### Dialling with the DDS key

You can program frequently used phone numbers on programmable keys (→ Page 92). If you press a direct destination selection key, the associated contact or phone number appears and dialling is initiated.

**Prerequisite:** A direct destination key is programmed → Page 92.

Press the programmed DDS key. Dialling is initiated.

### Dialling from the local phonebook

Press the key shown.

Select and confirm a contact. The phone number is dialled.

Select and confirm the option shown in the context menu.

Select and confirm the preferred phone number. The phone number is dialled.

For detailed information about the local phonebook, see from → Page 155.


### Dialling from the corporate directory

**Prerequisite:** You have found and selected an entry in the corporate directory → Page 161.

The required entry is selected.

Select and confirm the option shown in the context menu. The connection is set up.

For detailed information about the LDAP database, see from → Page 161.

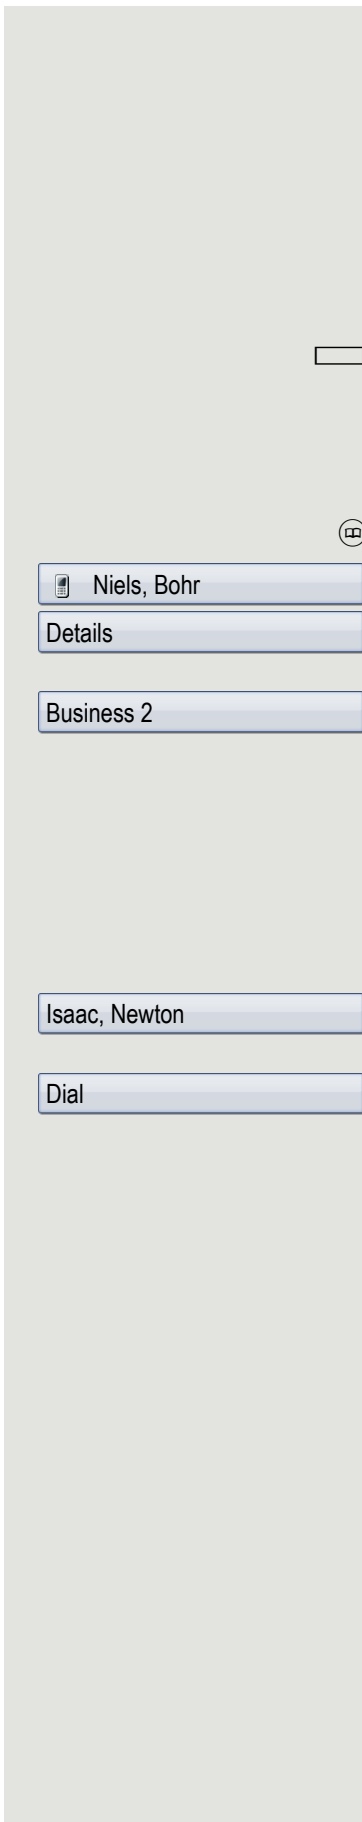



## Dialling a phone number from a list

Press the key until the application table for the relevant call list<sup>1</sup> is active.

Select and confirm the entry you want. The phone number associated with the list entry is dialled.

➡ If the party listed is already in the phonebook, the appropriate phone number icon is displayed → Page 155. If there are several numbers stored for the party in the phonebook, these can also be selected in the context menu.

## Calling a contact from a group

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the group you want.

Select and confirm the option shown in the context menu.

Select and confirm a group member. The phone number is dialled.

➡ A phone number icon is displayed if the party is already stored as a contact in the phonebook → Page 155. If there are several numbers stored for the party in the phonebook, these can also be selected in the context menu.

1. Please note the information in relation to call lists on → Page 164

## Using autodial delay


A number is automatically dialed after a set delay starting from the entry of the number's last digit. The autodial delay can be used:

- when dialling in idle mode
- when deflecting an incoming call
- Consultation
- when transferring an answered call.

The delay can be reduced by performing one of the following activities:

- pressing the **OK** key. This always works.
- lifting the handset. This only works if the phone number was entered when the phone was idle or if it was entered for a consultation call when the handset was off hook.
- pressing the loudspeaker key. This only works if the phone number was entered when the phone was idle and the loudspeaker key was not lit or if the phone number was entered for a consultation call and the loudspeaker key was not lit.

---


 If an emergency number is preset by your administrator, the autodial delay for this phone number is reduced to one second.

---

### Settings for autodial delay

You can also configure this setting via the WBM interface → Page 265.

---

 The setting does not affect automatic emergency number dialling.

---

If you select **Autodial delay**, you must either confirm the "Dial" option, press the loudspeaker key or wait until the autodial delay expires to set up a call when dialling with the handset on hook.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Specify a value and confirm your entry.


Select and confirm the option shown.

---

 Automatic dial delay does not work if you are using a dial plan and **Immediate dialing** is configured (see → Page 66). The number is automatically dialed as soon as the string entered matches an entry in the dial plan.

---



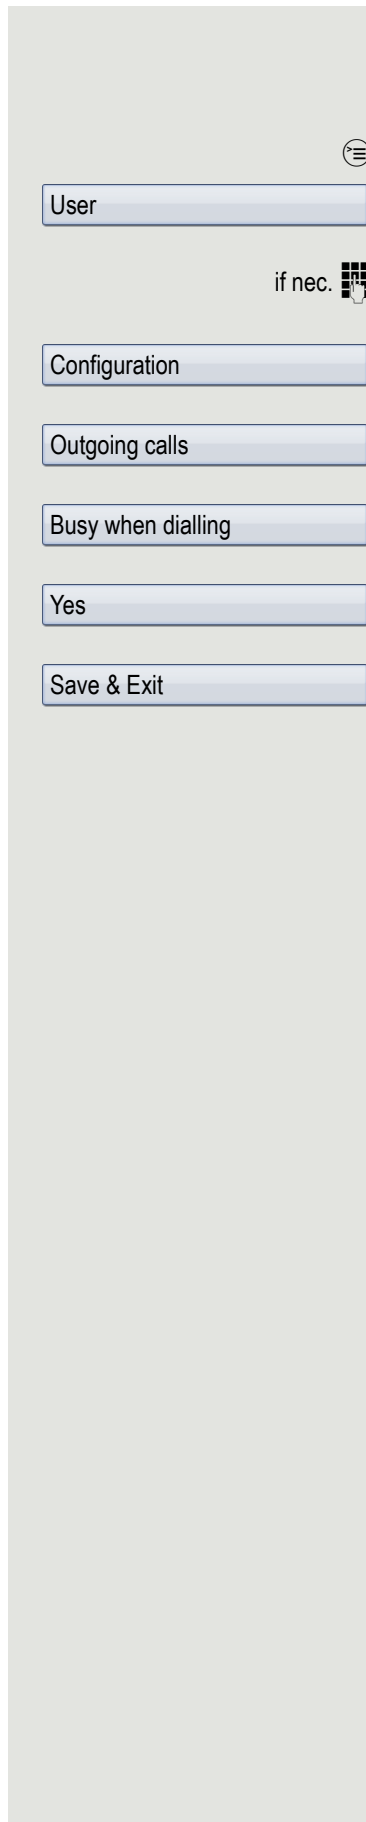

### Allowing "Busy When Dialling"

If you activate this function, an incoming call received while you are performing dialling is rejected. The caller then hears the busy signal.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

---

 This setup option can also be found under "Handling" in the "Incoming calls" menu.

---

## Conference

### Local conference

This type of conference is also referred to as a three-party conference. It involves up to three participants.

**Prerequisite:** You are conducting a consultation call → Page 70 or have accepted a second call → Page 108, and the conference function is active → Page 121.

### Initiating a local conference



You can initiate a conference by calling the "Conference" function in the context menu of either the active or held call. Alternatively you can press an already configured **Conference** key.

Conference

Select and confirm the option shown in the connection's context menu. You are connected to both parties at once. The conference is displayed.

User

### Conducting one-to-one calls

Select the connection you want to clear down.

Disconnect

Select and confirm the option shown in the context menu. You are now involved in a one-to-one call with the remaining call party.




If you already are involved in a secure connection with a party when you initiate a consultation call, the original party is placed on hold. The new consultation connection can be either secure or nonsecure. However, the first connection remains secure even if all three parties are now joined together in a conference.

The entire conference is nonsecure if the connection to at least one of the parties is not secure (see also → Page 51).

The relevant padlock icon appears on the "Conference" row.



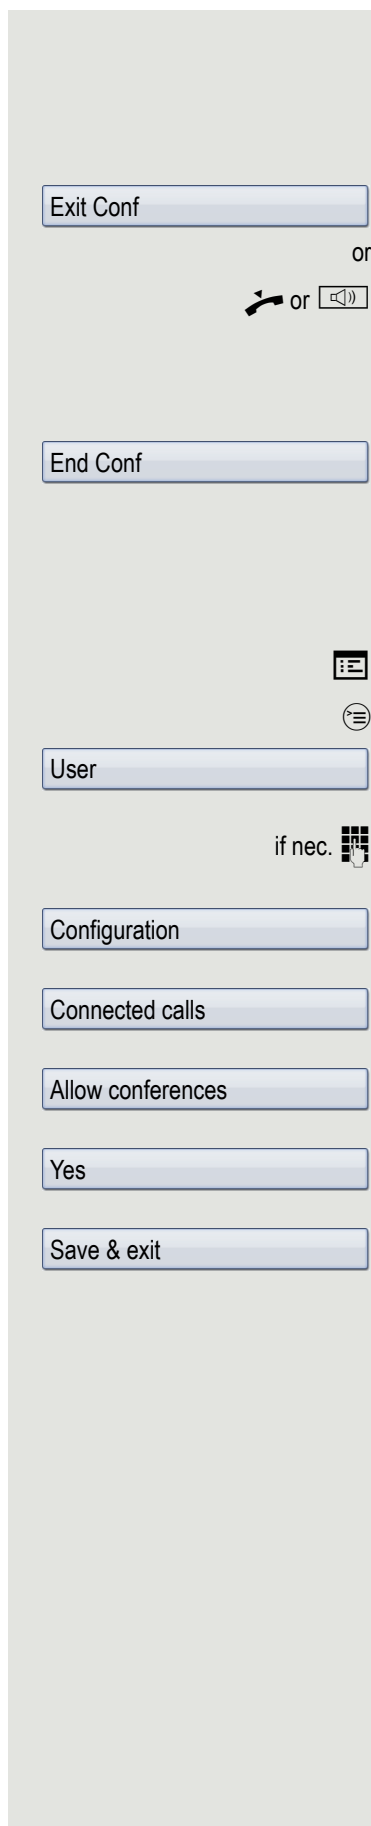

## Ending a local conference

### Allowing call partners to continue a conference after you exit

**Prerequisite:** The function "Allow joining in a local conference" (→ Page 122) was activated.

Select and confirm the option shown in the "Conference" context menu.

Replace the handset or, if you are in speakerphone mode, press the loudspeaker key. Both call partners remain connected. You are disconnected from the conference call.

### Disconnecting a party

Select and confirm the option shown in the "Conference" context menu. Both connections are cleared down – the conference is cleared down.

## Allowing a local conference

This option allows or blocks the "Local conference" function.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

### Allowing joining in a local conference

You can use this option to decide whether or not your call partners are allowed to join calls after you exit the conference call.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

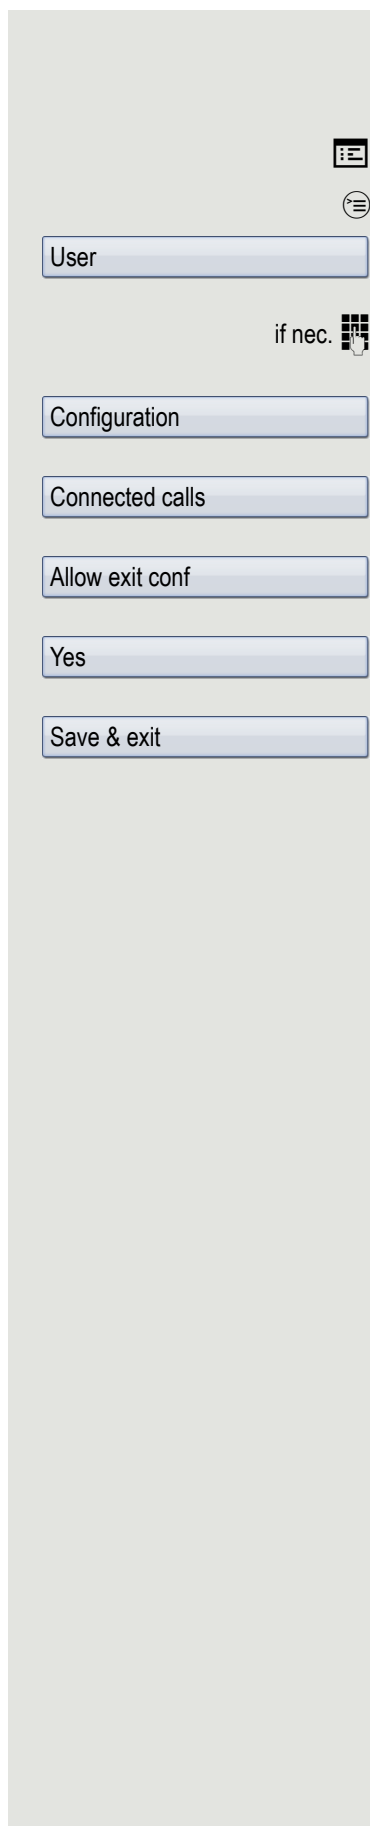


 Conference

Consultation

Conference

Hold

## System-supported conference

This type of conference is also referred to as a large conference. It can include from three up to a maximum of 16 parties (depending on the configuration in OpenScope Voice).

**Prerequisite:** You are conducting a consultation call → Page 70 or you have accepted a second call → Page 108, and the "Centralised conference" feature was configured by your administrator.

### Establishing a conference


Select and confirm the option shown in the connection's context menu. You are connected to the first two parties at once. The conference is displayed with the current participants. You can now:

- initiate a consultation call
- add a party
- put the conference on hold
- leave the conference.

### Conducting a consultation call

Select and confirm the option shown in the "Conference" context menu. If the party answers, you can:

- toggle between the party and the conference
- connect the consultation call to another called party
- end the consultation call and return to the conference
- add the consultation call party to the conference.

 If you want to add the consultation parties to the conference, use the "Add to conference" option instead of the "Consultation" option.


If you want to use the **phonebook** or a **call list** for a consultation call, select **Hold** instead of Consult (and/or Add to conference) in the context menu or press the **Hold** key and then open one of the phonebooks or a required call list (→ Page 155).

Alternatively you can also open one of the phonebooks or a call list without using the **Hold** functions – the conference is automatically placed on **Hold**.

### Adding a party

**Prerequisite:** You are conducting a consultation call and the conference is on hold.

Select and confirm the option shown in the consultation call's context menu. The party is added to the conference. Only the conference and all current participants are now displayed.

 You can also use an already configured **Conference** key instead of the Conference option in the context menu.

### Putting the conference on hold

Select and confirm the option shown in the "Conference" context menu. The conference is placed on hold and you can consult with someone in your office, for instance.



Exit Conf

### Leaving a conference

Select and confirm the option shown in the "Conference" context menu. You are disconnected from the conference call and can dial another number, for instance. The other call partners remain connected.

## Making calls with multiple lines

You can use your OpenStage 60/80 as a multi-line phone. If you have any questions regarding how to configure your OpenStage phone as a multi-line phone, please contact your administrator.

The following is a description of the telephony scenarios for multi-line phones. To facilitate comprehension, you should familiarise yourself with the enhanced telephony application and how to use the line keys beforehand. Furthermore, you can specify individual settings for your multi-line telephone. Refer to the following sections for a detailed description of the individual components:

- Introduction to multi-line phones → Page 14
- Lines and line keys → Page 24
- Multi-line telephony interface → Page 38
- Individual settings → Page 148

## Incoming calls

Depending on your individual settings, you will be notified of incoming calls.

### Accepting calls for the primary line

In this case, the telephone behaves in the same way as a single-line telephone. See → Page 51 and → Page 99.

### Answering a call via a Bluetooth headset



Press the flashing key for the main line

or



Press the answer key on the headset to answer the call.

### Accepting calls for secondary lines

**Prerequisite:** The secondary line is configured on your multi-line telephone.

### Using the handset




Lift the handset.



Conduct call.



The line that rings is automatically selected. If calls are ringing on more than one line, you will be connected to the line that has been ringing the longest.

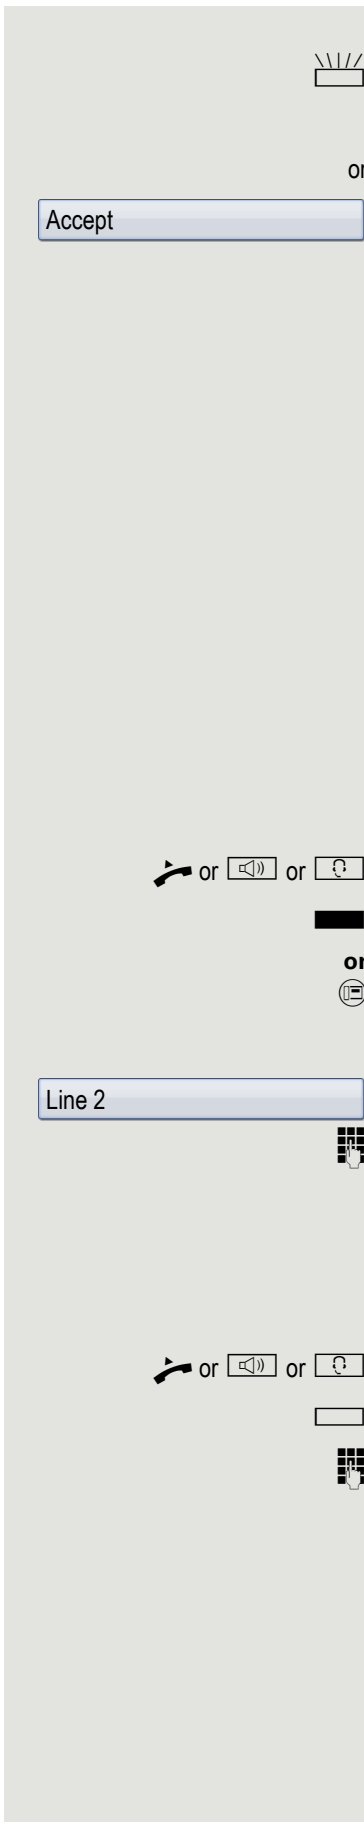

### Using the line keys

Press the flashing trunk key.  
Speakerphone mode.

Confirm the option shown.  
Speakerphone mode.

## Making calls

You must seize a line before you can make calls on a multi-line telephone.

Trunk seizure can be configured on an individual basis. Your administrator can determine if the lines on your telephone can be automatically seized and with which priority.

➡ If you have seized a secondary line, this line is reserved for you for making calls for a specific period as defined by the administrator. No other user can seize this line during this period, even if the line is also assigned to this user's telephone.

### Manual trunk seizure

Lift the handset or press the speakerphone mode or headset key.

Press the required trunk key.

With the handset on hook, press the key shown until the application tab **Overview** is active → Page 38.

Select and confirm the required line (e.g. line 2). The tab for this line is displayed.

Enter the phone number or use redial, for example. The connection is set up.

 
### Automatic trunk seizure

**Prerequisite:** Your administrator has configured automatic trunk seizure.

Lift the handset or press the speakerphone mode or headset key.

The line defined during configuration is seized.

Enter and confirm the phone number. The connection is set up.



Redial {1} 123456

## Dialling the last dialled number

The last phone number dialled on your telephone – on the primary line in the case of line keys – is displayed for redialling in a pop-up menu.

Lift the handset or press the speakerphone mode or headset key.

Seize the required line (→ Page 126).

In the pop-up menu:

Confirm the option shown<sup>1</sup>. The connection is set up.

## Forwarding calls on primary line

The call forwarding can only be activated for the primary line. Which call forwards are possible, how they are configured and activated can be found from → Page 77.

### Call forwarding information

**Prerequisite:** Your administrator has activated "Forwarding shown".

If you have activated one of the forwarding types on your phone for the primary line and a station calls, a popup window with the following information opens:

- Who is calling
- The forwarding destination.

1. Please note the information in relation to the call journal on → Page 68

## During calls

### Making and receiving calls on a single line


If you only use one line on your multi-line telephone to make calls, and you receive calls on the same line, the phone operates in the same way as a single-line telephone:

- Redial → Page 68
- Consultation → Page 70
- Toggle/Connect → Page 72
- Callback → Page 74
- Hold → Page 102
- Call waiting (second call) → Page 108
- Transferring a call → Page 111
- Conference → Page 120

Functions available exclusively for the primary line:

- Call lists → Page 43
- Voicemail → Page 46
- Call forwarding → Page 77
- Do not disturb → Page 169

---


 Depending on your individual settings, you will be notified of incoming calls → Page 154.

---

### Making and receiving calls with multiple lines

#### Accepting a waiting call

---

 Depending on the settings for "Rollover", you will be notified of incoming calls → Page 154.


---

**Prerequisite:** You are conducting a call. At the same time, a call is incoming on another line.

Call on line 1.

Press the line key for line 2. The call on line 1 is placed on hold.

---

 All multi-line users that share the line on which the call is being held (→ Page 24) can now pick up the held call. To prevent other users from answering the held call, you must place the call on "Consultation" hold → Page 70.

Depending on the setting made by your administrator, you may have to press the trunk key twice to accept the call on the other line. The first call is either placed on hold or released depending on the setting.

---

Conduct call on line 2.

End call on line 2.

Press line key for line 1.

Retrieve call on line 1.







## Putting a line on hold

On a multi-line telephone you can use the line keys to place calls on hold.

**Prerequisite:** You are conducting a call.

Press the call-line sensor key.

- The LED line key flashes.
- The LED line displays the hold status on all multi-line phones to which the line is connected.
- On phones connected to the line, a user can press the relevant line key and accept the held call.

During a consultation call or after accepting a waiting call the hold function cannot be used.

## Lines with hot or warm line function

Your administrator can configure a hot or warm line for the primary and secondary line.

The function is activated when on

- **the primary line**  
you lift the handset on the phone and press the line or loudspeaker key
- **the secondary line**  
you press the line key.

A number specified by you is dialled with a hot line immediately and with a warm line after a specific time.

Examples:

- The phone in the lift immediately dials the reception number.
- The phone at a patient's bed dials the ward number e.g. after a minute if no other number is dialled.

### Entering a number for the hot and warm line function

Specify which number should be dialled when the hot or warm line function is activated.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the required line in the context menu.

Select and confirm the option shown.

Enter and confirm the destination.

Select and confirm the option shown.

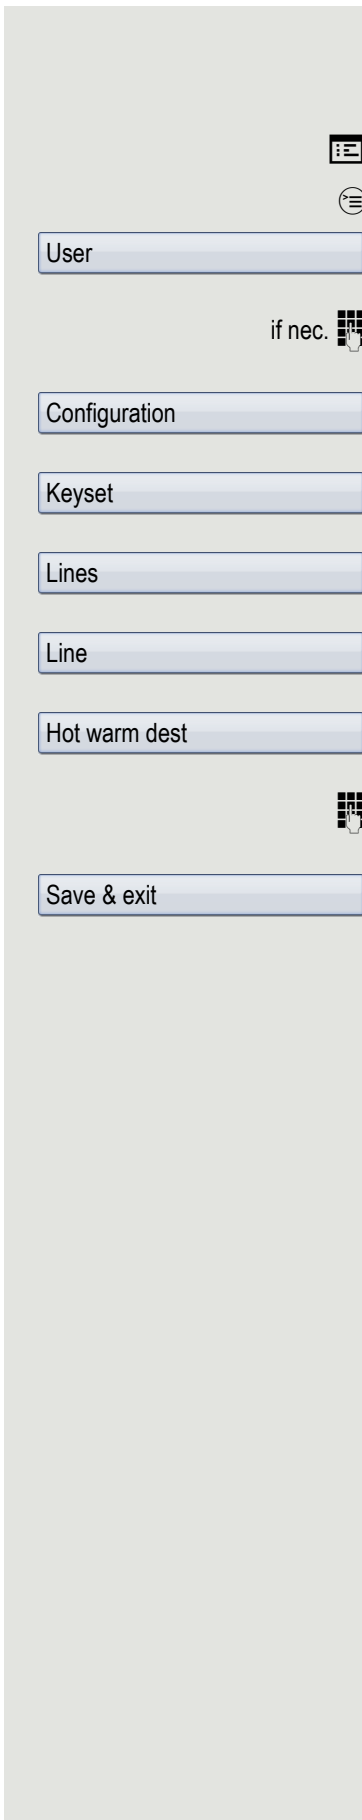

## Busy override

A station of a line trunk group is on a call. Its primary line is configured as a secondary line on your phone. This line now has the status "busy." You can connect to the call by pressing the illuminated key for this line (see also → Page 24).

**Prerequisite:** A secondary line is set up on your multi-line phone, the option to connect to the call is activated for your phone and "system-based conference" is set up for your system (→ Page 123).

If a preview is set up and activated for the relevant line (→ Page 153), you have to press the line key a second time following the preview in order to connect.

The key of a secondary line illuminates – it is busy. You want to connect to the call.

Press the illuminated line key. A conference is established. You are connected to the parties on the secondary line. The key continues to illuminate and the conference is shown on the display.



---

If there is already a conference on the secondary line you are connected to this conference. The conference is shown on the display.

---

You can now:

- Put the secondary line on hold
- Leave the conference on the secondary line
- Make consultation call
- Accept a second call
- Alternate between a new call party and a conference on the secondary line.
- Include a call party from a consultation or a second call in the conference.

## Direct station selection keys

Apart from line keys, administrator can also configure direct station selection (DSS) keys. You can use a DSS key to call an internal station directly, pick up calls for this station or forward calls directly to it.

### Calling a station directly

You cannot use DSS if the user is on another call (flashing LED).

#### Calling from the idle menu

Press the relevant DSS key.

or



Press the key shown until the application's **Overview** tab is active.

DSS call 1

Select and confirm the DSS line. The key lights up and the connection is established via the primary line.



administrator can configure the DSS key so that the connection is also established when the DSS station has activated do-not-disturb or call forwarding.


### Consultation with the DSS station

**Prerequisite:** You are conducting a call and administrator have configured the DSS key for consultation.

Press the relevant DSS key for the consultation. The key lights up and a connection is established. If the called party answers, you can toggle, transfer the first call or initiate a conference.



If administrator has configured transfer instead of consultation, you can only transfer the current call to the DSS station.

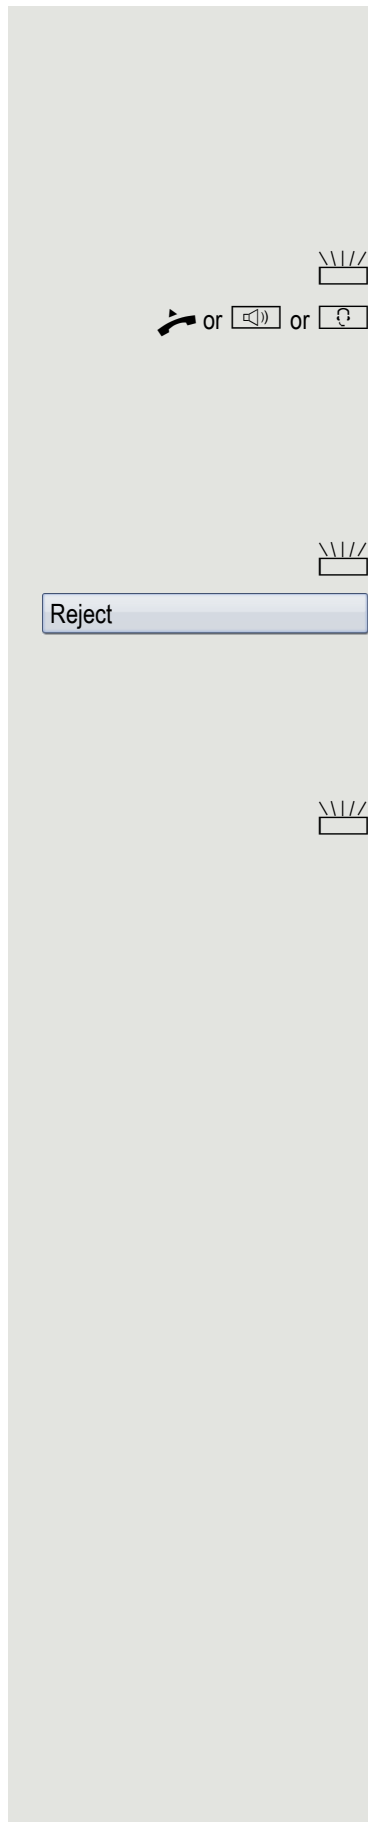

## Call pickup

You can pick up calls for another DSS station. The LED flashes if a call incoming for this station's line.

### Indirect pickup

**Prerequisite:** The auto-answer function must be deactivated → Page 114.

Press the DSS key. The call is routed to your primary line and rings.

Lift the handset or press the speakerphone mode or headset key. You are connected with the other party.

### Rejecting a call

**Prerequisite:** Your administrator enabled the Reject option for DSS keys and deactivated Auto-answer → Page 114.

Press the DSS key. The call is routed to your primary line and rings.

Select and confirm the option shown in the pop-up menu.

The caller hears a busy signal.

### Direct pickup

**Prerequisite:** The **auto-answer** function must be activated → Page 114.

Press the DSS key. The call is routed to your primary line and you are immediately connected with the other party via speakerphone.

## Deflecting a call to a DSS station

**Prerequisite:** The deflect function is enabled for DSS keys. For information on the current setting, see → Page 100.



 
If you receive a call on one of your lines, you can immediately deflect it to the DSS station.

Your phone rings and a line key flashes.

Press the relevant DSS key. The call is deflected to the DSS station. If the DSS station does not answer, you can pick up the call by pressing the DSS key.



## LED display on DSS keys


DSS Key	Explanation
	<b>Off:</b> The line is in idle mode.
	<b>Flashes:</b> You can accept a call for the DSS station via the key. The call is routed to your primary line when the call is accepted.
	<b>Illuminates:</b> The line is busy. Provided that second call is activated you can still reach the DSS station via the key. It can accept your call as a second call.

## Making calls in an executive-secretary team

An executive-secretary team is configured by the relevant administrator and may include up to four executive and up to two secretary telephones.

### Sample scenarios

This example assumes that two executive and two secretary phones are configured. Calls for the executives are forwarded immediately to the respective secretary phone. A secretary then connects the call with or without consultation to the responsible executive using the direct station selection key.

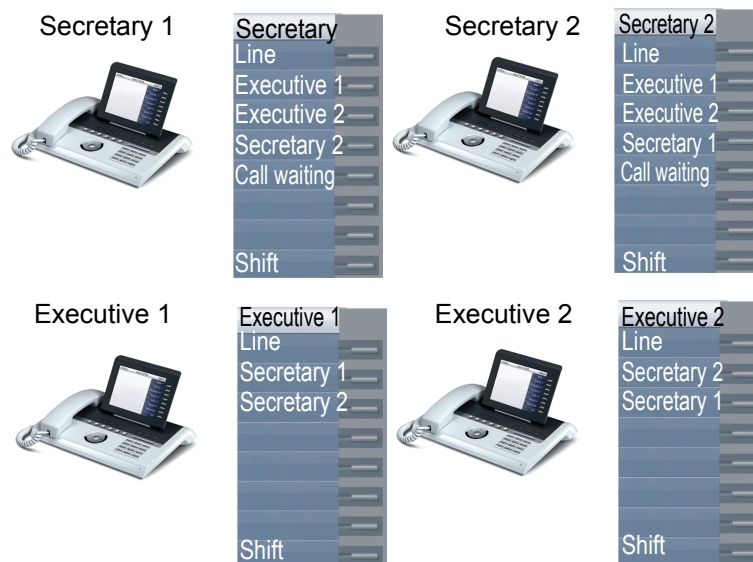

### Prerequisites:

The following call forwards are configured (→ Page 77 ):

- For All calls from Executive 1 to Secretary 1
- For All calls from Executive 2 to Secretary 2
- Forward on Busy and forward on No reply from Secretary 1 to Secretary 2
- Forward on Busy and forward on No reply from Secretary 2 to Secretary 1

"Allow call waiting" should be activated on the secretaries' phones (→ Page 110). This function can optionally be activated and deactivated using a key if a key has been configured for it.

Line and direct station selection keys have been configured by administrator and "Transfer on hangup" and server features have been activated.

## Accepting a call

Incoming calls for the executives should be forwarded immediately to the assigned secretary and answered there. The line overview (→ Page 139) shows whether the executive has activated call forwarding.

### Accepting calls at the secretary phone

An incoming call for "Executive 1" rings at the assigned "Secretary 1".

The line key of the "Secretary 1" phone flashes.



The "Secretary 1" direct station selection key on the "Executive 1" phone also flashes.



Press the line key to answer the call. The station answers. The line key flashes **rapidly**.



The "Secretary 1" direct station selection key on the "Executive 1" phone illuminates.

### Early call pickup by Executive 1

An incoming call for "Executive 1" rings on "Secretary 1". The "Secretary 1" direct station selection key on the "Executive 1" phone flashes. The "Secretary 1" has not yet answered the call. Before the call is forwarded to "Secretary 2", "Executive 1" picks up the call early.



Press the "Secretary 1" direct station selection key on the "Executive 1" key to answer the call.



If for example a call for "Executive 2" on "Secretary 2" is not answered, "Secretary 1" or "Executive 1" can pick up the call early





## Forward to Secretary 2

An incoming call for "Executive 1" rings at the assigned "Secretary 1". The call is **not** answered. After a specified period the call is forwarded to "Secretary 2". The line key of the "Secretary 2" flashes and it rings.

Press the line key on the "Secretary 2" phone to answer the call. The station answers. The "Secretary 2" direct station selection key on the "Executive 1" phone illuminates.



---

If "Secretary 1" is busy, the call is forwarded immediately to "Secretary 2" if:

- a consultation call is being made or
  - "Allow call waiting" is deactivated.
- 

## Second call

**Prerequisite:** "Allow call waiting" is activated.

If "Secretary 1" receives a second call, this can be accepted, ignored, forwarded or rejected. Detailed information on this can be found from → Page 108.


If the second call was answered, it can be forwarded using consultation or the direct station selection keys.

## Connecting a call

If e. g. the "Secretary 1" answered a call, it can forward the call using the direct station selection keys to the following telephones:

- Executive 1
- Executive 2
- Secretary 2.

The following examples show connections to "Executive 1".

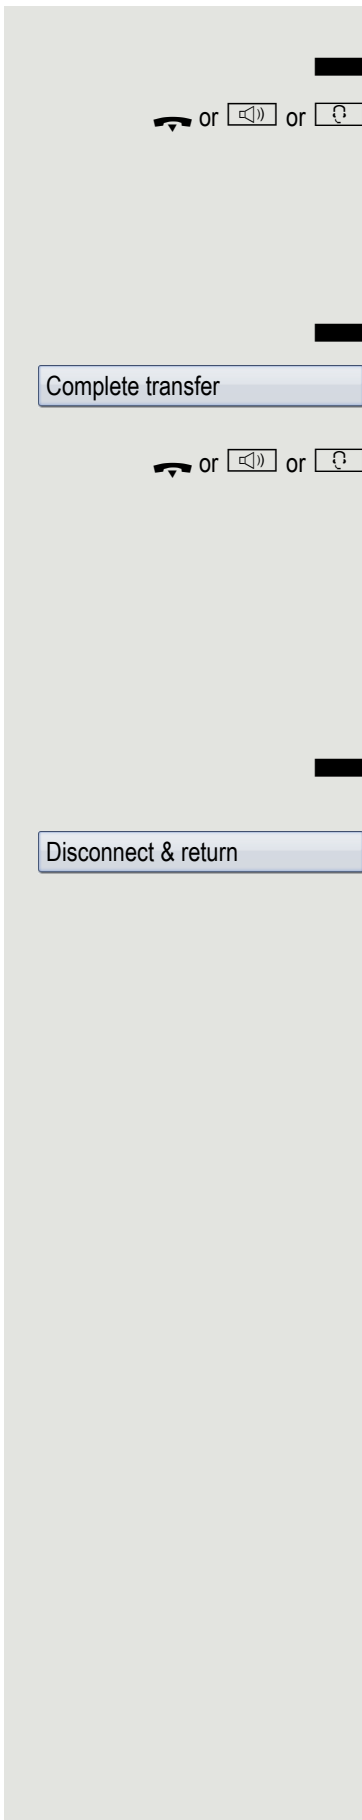

### Connecting with consultation

Press the DSS "Executive 1" key. "Executive 1" answers. Announce the call.

Press the hang-up, loudspeaker or headset key.

▶ You can also select "Complete Xfer" from the context menu.

### Connecting without consultation

Press the DSS "Executive 1" key. "Executive 1" does not answer.

Select and confirm the option shown in the pop-up menu.

Press the hang-up, loudspeaker or headset key. The "Executive 1" phone rings.

If "Executive 1" does not answer the call, so erfolgt ein Wiederanruf ( see also → Page 111) nach einer eingestellten Zeit.

▶ The "Executive 1" direct station selection key on the "Secretary 1" phone illuminates.

### Consultation without connecting

Press the DSS "Executive 1" key. "Executive 1" answers. Transferring is not wanted. The "Secretary 1" takes the call back

Select and confirm the option shown in the pop-up menu. The "Secretary 1" is reconnected with the caller.

### Toggle, disconnect or conference

During a consultation call "Secretary 1" can toggle between "Executive 1" and the caller, can initiate a conference or disconnect one of the two call parties. More on this subject can be found on pages → Page 72 and → Page 120.


## DSS keys

These keys are configured in such a way that every phone can be reached by every phone in the group. The DSS keys are also used for consultation calls.

Press a team member's DSS key. The relevant phone rings and the party answers.

## Using line overview

To view the status of the lines, change from the "My phone" tab to the "Overview" tab on the phone screen.

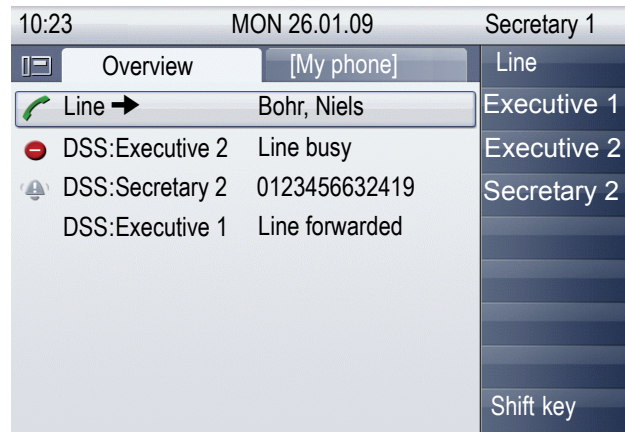

Further information on the line status can be found on → Page 38.


The "executive-secretary" team can be expanded with line keys by the administrator. These lines keys however have no influence on the behavior of the "executive-secretary" configuration.

## "Executive-secretary" with Executive/Assistant Cockpit

An "Executive/secretary" team is configured by the administrator using the "Executive/Assistant Cockpit" – referred to in this manual as E/A Cockpit. A team can for example consist of four executive and two secretary phones.

### Sample scenarios

This example assumes that two executive and two secretary as well as two representatives (with variable numbers), two mobile phones (with fixed numbers) and an answering machine are configured for E/A Cockpit.

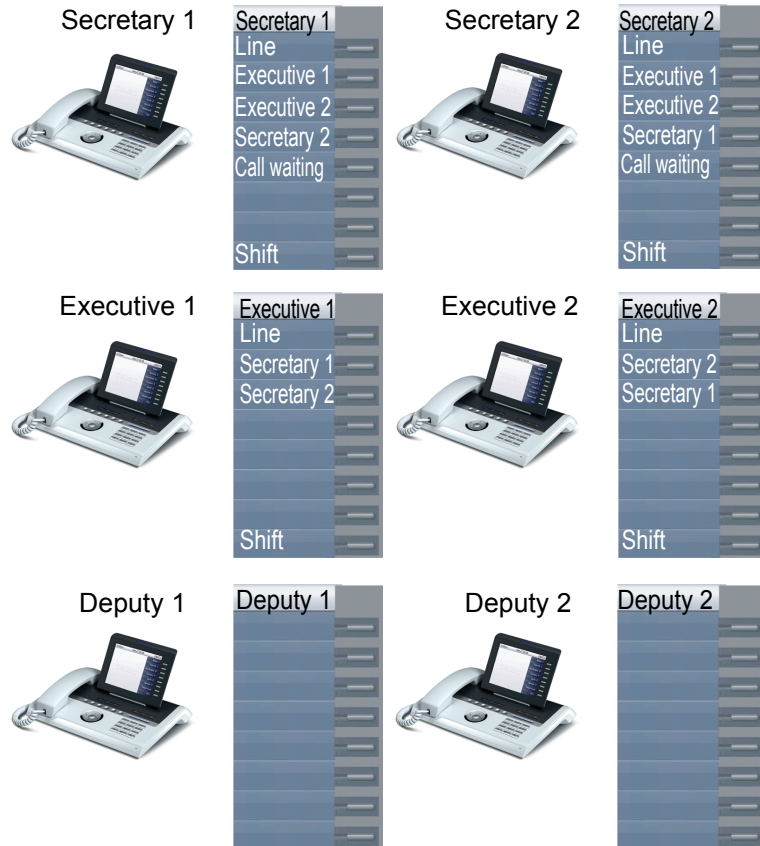

### Prerequisites:

The E/A Cockpit application is installed on the phone and the connection to a E/A Cockpit server entered.

"Allow call waiting" should be activated on the secretaries' phones (→ Page 110). Line and DSS keys have been set up and configured by administrator and Transfer on hangup, uaCSTA and server features are activated.

### Function overview

The following tasks can be performed using the E/A Cockpit application:

- Call forwarding management on the executive phones
  - Calls are forwarded to the secretary phone
  - Call forwarding is deactivated.
  - Calls are forwarded to a mobile phone
  - Calls are forwarded to a variable number
- Call forwarding for an executive phone can be configured directly on the executive phone or from the secretary phone.
- Call forwarding can be attached to a condition
- Secretary status management
  - Presence status
  - Call forwarding destination configuration
  - Representative activation and deactivation
- The presence and call forwarding status can be read on each secretary phone and on the respective associated executive phone.
- The presence status and required call forwarding for the secretary can be set from both the secretary and associated executive phone.
- DSS keys can be used
- Connecting calls with and without consultation
- Calling configured executive mobile numbers and connecting calls.
- Answering and connecting calls
- Second call


## Launching the E/A Cockpit from the secretary


For completeness sake it is assumed that no other telephone in the team has launched the application at this point.

Press the key as often as required until the Applications tab is active.

Select the E/A Cockpit application.

Confirm the option shown. The XML application is launched and a new "E/A Cockpit" tab with the overview is opened. The last status and configured call forwarding are displayed.

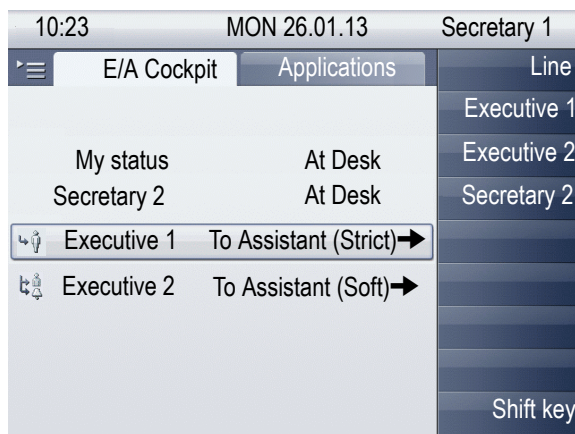

 The displayed settings are examples.

## Managing call forwarding

Every executive can configure their displayed call forwarding themselves or can have the secretary configure them. The result is displayed in the E/A Cockpit tab of Secretary 1 and Secretary 2.

In the overview menu E/A Cockpit of Secretary 1, call forwarding for Executive 1 should for example be modified.

 Executive 1 To Assistant →

Select and confirm the option shown.


You are offered the Settings selection menu for Executive 1, with the following options (examples):

- Immediate Ring
- To Assistant (Strict)
- To Mobile
- To 31201
- To Voicemail

### Cancel call forwarding

This option has no further settings. The selection is confirmed and then call forwarding is canceled. If a call is received for Executive 1, his phone rings


Select and confirm to cancel call forwarding.

 Immediate Ring →

### Forward to assistant

The "To assistant" option offers further setting options. If you want to apply the current setting, you only confirm this option. For additional options:


Open the context menu

 To Assistant (Strict) →

Select and confirm the option shown. You see the "Preferences of" selection menu with the following options:


- Soft (if At Desk, otherwise Immediate Ring). The view in the E/A Cockpit overview menu is then:  
"To Assistant (Soft)"
- Regular (if At Desk, otherwise To Voicemail). The view in the E/A Cockpit overview menu is then:  
"To Assistant (Regular)"
- Regular mobile (if At Desk, otherwise To executive Mobile). The view in the E/A Cockpit overview menu is then:  
"To Assistant (Regular mobile)"
- Regular to number (if At Desk, otherwise to a number). The view in the E/A Cockpit overview menu is then:  
"To Assistant (Regular to number)"
- Strict (To Assistant in any case - Desk, Box or Mobile). The view in the E/A Cockpit overview menu is then:  
"To Assistant (Strict)"

---

 If each other the other respective secretaries has the "At Desk" status (→ Page 145), calls are forwarded here.

---


Preferences

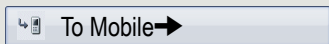

### Forwarding calls to a mobile phone

Calls can for example be forwarded to the mobile phone from Executive 1.

Select and confirm the option shown. Calls are forwarded to a predefined mobile phone number.

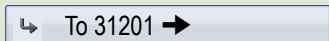

### Forwarding calls to a variable number

Calls can be forwarded to any number.

Select and confirm the option shown. You can change the number firstly via the context menu.



---

Executive 1 and Executive 2 manage the call forwarding themselves using the **My status** option. The change is displayed on the secretary phones.

---



## Managing secretary statuses

The "My status" option on the secretary phone is used to set the presence status and if required to configure call forwarding.

### Configuring status and call forwarding

Confirm the option shown. The "Set Status" dialog opens.

The following options are available in the "Set Status" menu:

- At Desk
- Off Desk
- To 31201
- Deputy [123456] on

Select the required option and confirm this. If a representative is activated, "Deputy [123456] off" appears in the options list.


If Secretary 1 only has the "Off Desk" status, all his calls are automatically forwarded to Secretary 2.

If you activate one of the two call forwardings, the "At Desk" or "Off Desk" do not affect these.

If the "To Assistant (Strict)" setting on the executive is activated, the variable call forwarding and the call forwarding to the representative only takes effect if the other secretary has the "Off Desk" status or has activated call forwarding to a representative or variable number.

The "To" variable call forwarding and call forwarding to a representative can be configured simultaneously:

- Deputy: Forwards calls for the executive phones
- Variable call forwarding: Forwards calls for the secretary phone

 If the respective secretary has the "At Desk" status, calls are forwarded.

The current status of call forwardings is displayed in the "My phone" tab on the respective executive phone.

### Changing the call forwarding destination

Open the context menu. You have the following options:

- Call mobile
- Forward Nr.
- Deputy Nr.
- Deputy on or Deputy off

The "Forward Nr." and "Deputy Nr." options are used to modify the number for variable call forwarding and for the representative.

### Changing the status remotely from another phone

For example you can change the status of the first secretary phone from the executive phone or the second secretary phone.


Confirm the option shown. You have the following options if defined.

- At Desk
- Off Desk

My status At Desk →

My status At Desk →

Secretary 1 At Desk →

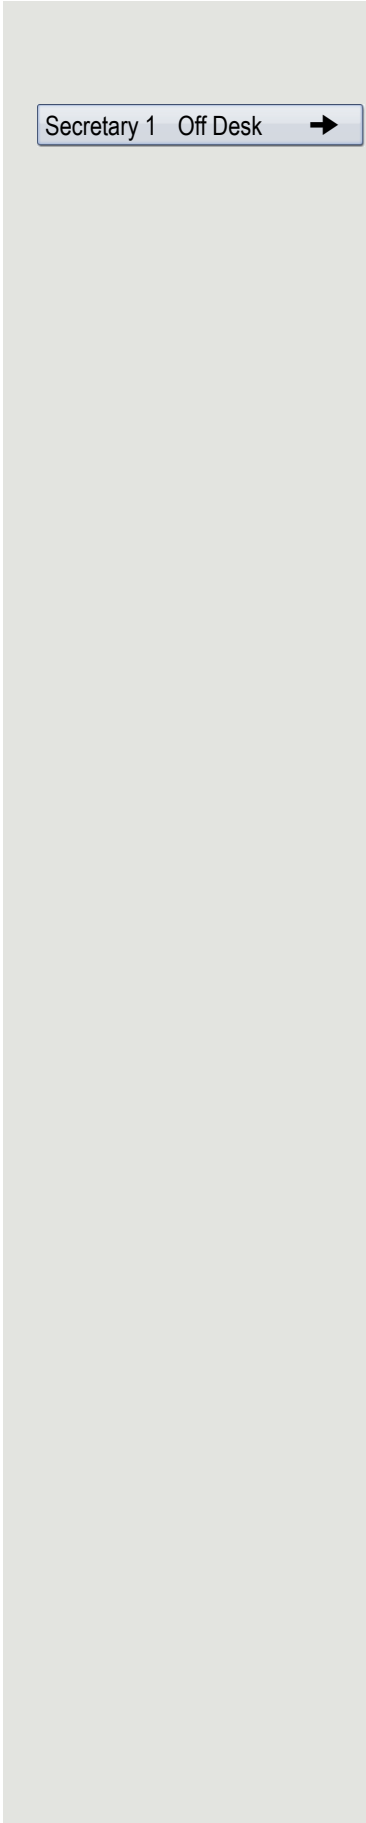

Secretary 1 Off Desk →

- Deputy [123456] on
- To Mobile
- To Voicemail

Confirm e.g. to configure the absence of Secretary 1. The secretary settings are displayed on all phones.

## Making calls in the E/A Cockpit team

### Using DSS keys

These keys are configured in such a way that every phone can be reached by every phone in the group. The only exception is when both secretaries have the "Off Desk" status and variable call forwarding is configured, then calls are forwarded to the destinations of the variable call forwarding. The DSS keys are also used for consultation calls.

### Calling the executive's mobile phone or connecting to the mobile phone

If an executive is away, the secretary can reach him directly on his mobile phone. If necessary change to the E/A Cockpit tab.

My status At Desk →

Call mobile →

Executive 1 12345 →

Open the context menu.

Select and confirm the option shown.

E.g. Executive 1 select and confirm the option shown The mobile phone rings and Executive 1 answers.

If you have a call on hold, you can connect the other station with Executive 1 by simply hanging up.

### Answering and connecting calls

The procedure for answering and connecting calls in the team is exactly the same as described in chapter "Making calls in an executive-secretary team" → Page 135.

### Second call

#### Prerequisite:

- "Allow call waiting" is activated.
- The respective other secretary has the "Off Desk" status or
- The other secretary is already on a call and active call forwarding is set to your phone.

If you receive a second call, you can accept, ignore, forward or reject it. Detailed information on this can be found from → Page 108.

If you have answered a second call, you can connect the call via consultation or using the DSS keys.

## Settings for multi-line phones (keyset)

The details for each keyset line contain supplementary information for the user. The following uneditable fields are displayed:

- Address
  - Displays the phone number for the line
- Ring on/off
  - Shows whether the ringer is activated for this line
- Selection sequence
  - Displays the priority of each line seizure when the handset is lifted or the loudspeaker key for this line is pressed

### Displaying the line in the "Overview" tab

Specify here if the selected line should be displayed in the "Overview" tab.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.


Select and confirm the option shown.


Select the required line (e.g. primary line).

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

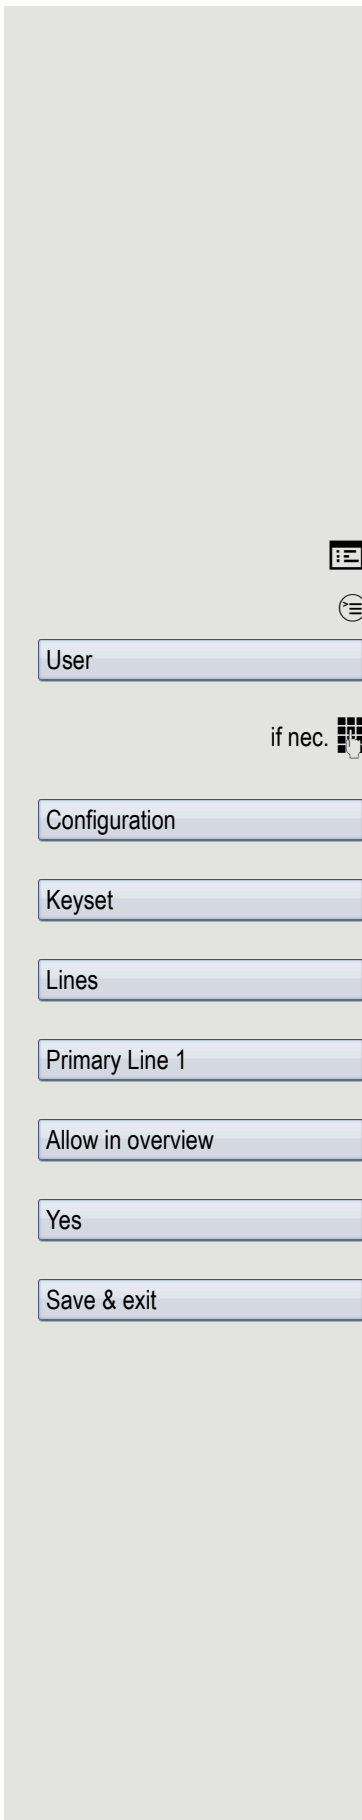

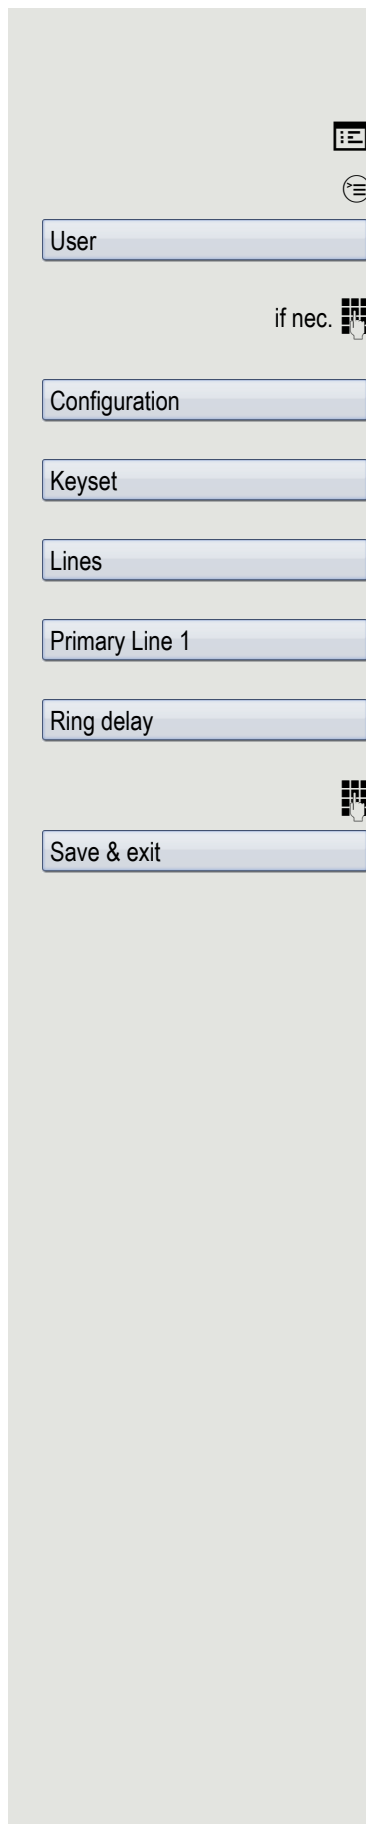

## Setting the time for a delayed ringer

Specify the length of time before a held call should be signalled on a line.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.


Select the required line (e.g. primary line).

Select and confirm the option shown.

Enter and confirm a value (between 0 and 3600 seconds).

Select and confirm the option shown.

You can activate and deactivate the set delay time for all line keys using a function key → Page 97.

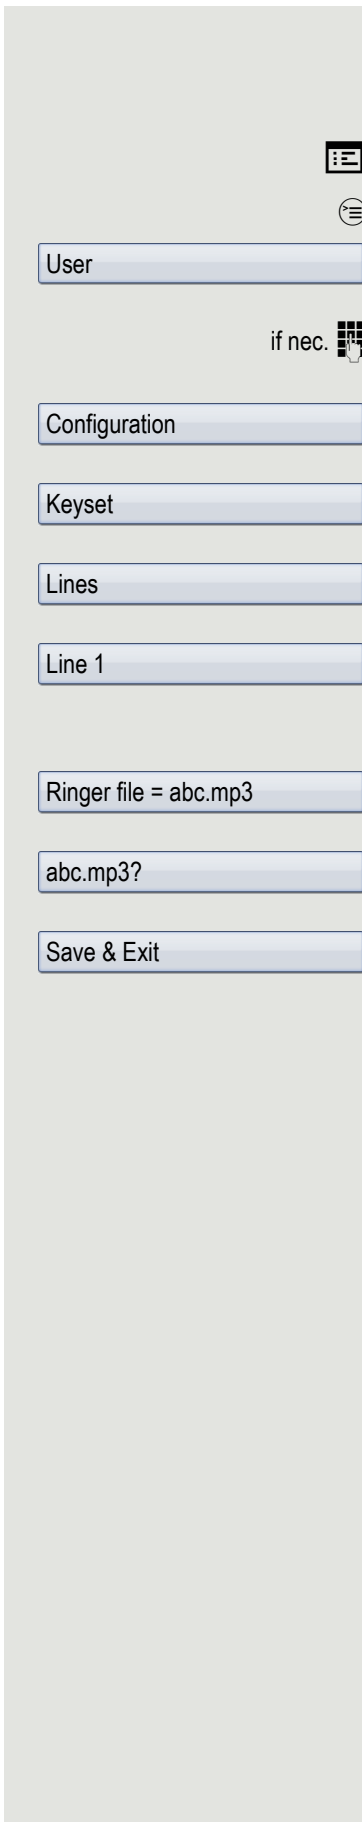

## Setting the ringtone for lines

If special ringtones have been configured by service personal for lines, you can adjust these here to suit your requirements.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the User password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the required line (for example, line 1).

## Selecting the ringer

Select the option shown.

Select the ringtone file<sup>[1]</sup> or pattern you want in the context menu. You will immediately hear the associated ringer melody. Confirm the current ringtone file.

Select and confirm the option shown.

1. The phone displays the current setting.



Ringer melody = 2

Save & Exit

Ringer tone sequence = 2

Save & Exit

### Selecting the pattern melody

The following setting is only effective if you selected "Pattern" under the ringer option.

Select the required pattern melody<sup>1</sup> between 1 and 8 in the context menu (e.g. **4**). You will immediately hear the corresponding Ringer melody. Confirm the selected Ringer melody.

Select and confirm the option shown.

### Selecting the pattern sequence

The following setting is only effective if you selected "Pattern" under the ringer option.

Select the required Ringer tone sequence in the context menu between 1 and 6 (e.g. **2**). You will immediately hear the set Ringer melody with the selected Ringer tone sequence. Confirm the selected setting.

Select and confirm the option shown.

1. The phone displays the current setting

## Configuring the "Overview" tab display

Specify here the sequence in which the individual lines in the "Overview" tab should appear on the display.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

All lines that are displayed in the overview (→ Page 148) are listed.

Select and confirm the required line (e.g. primary line).

Select one of the following options from the context menu to move an individual line:

- Move up
- Move down
- Move to top
- Move to bottom

or

Use FPK order

Select and confirm the option shown to arrange the lines in the same sequence as the line keys

or

Add all lines

Select and confirm the option shown to display all line keys in the overview.



The setting made for "Allow in overview" (→ Page 148) is ignored here.

---

Save & exit

Select and confirm the option shown.



## Line preview

**Prerequisite:** You are already on a call on one line and a further call rings on a secondary line. You have programmed a sensor key with the "Preview" function → Page 92.

### Preview for a call

**Prerequisite:** Your administrator has deactivated the permanent preview function.



Press the "Preview" sensor key. The key illuminates. The preview function is temporarily activated.



Press the flashing line key. A popup window opens and you receive information about the caller. Press the line key again to accept the call or wait until the popup closes itself after a specified period of time.

The preview function is switched off and has to be switched on again for a further operation.

### Permanent preview

**Prerequisite:** Your administrator has activated the permanent preview function.



Press the "Preview" sensor key. This way the preview for all lines with "preview mode" remains active until you press the "Preview" sensor key again.



---

If the line preview has been deactivated, a call is answered immediately on a line when the line key is pressed, without first showing caller information.

---

## Rollover for a line

Your administrator can determine how rollover calls are to be signalled.

Only the relevant line key blinks.



You hear a **special advisory tone** and the corresponding line key flashes.




The **ringer melody set sounds briefly** (approx. 3 seconds) via the loudspeaker and the corresponding line key blinks.



You hear a short **notification tone**

---

 The ringer melody is not played in speakerphone mode.

---



---

The telephone rings using the configured call signal, the corresponding line key blinks, and a pop-up menu containing the available information is displayed.

# Phonebooks and call lists

## Personal phonebook

Your personal phonebook should not contain more than 1000 entries.

### Creating a new contact

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

The form for entering contact data opens.

---

 You do not have to complete all fields to save a new contact.

---

Select and confirm the field you want.

Complete and confirm.

Select and confirm the option shown.

### Editing a contact

Press the key shown.

Select the party.

Select and confirm the option shown in the context menu.

The form for entering contact data opens.

Select and confirm the field you want.

Complete and confirm.

Select and confirm the option shown.

### Selecting a preferred phone number

If multiple phone numbers were assigned to a contact, you can select the preferred phone number here that you want to use for calls via the phonebook.

Press the key shown.

Select a phonebook entry.





Details

Select and confirm the option shown in the context menu.

Default No.

Select and confirm the option shown.

Business 2

Select and confirm the preferred phone number. The phone number is stored.

## Deleting all phonebook entries



Press the key shown.

Options

Select and confirm the option shown.

Delete all

Select and confirm the option shown in the context menu.

A confirmation request opens.

In the pop-up menu:

Delete all entries

Select and confirm the option shown. All entries are deleted.

## Managing contact groups

### Creating a new group

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

An overview appears for new groups.

Select and confirm the option shown.

Enter and confirm a new group name.

Select and confirm the option shown. The new group is stored.

### Editing a group name

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.


Select and confirm a group.


Select and confirm the option shown in the context menu.

Select and confirm the field you want.

Edit and confirm an entry.

Select and confirm the option shown. The changes are applied.

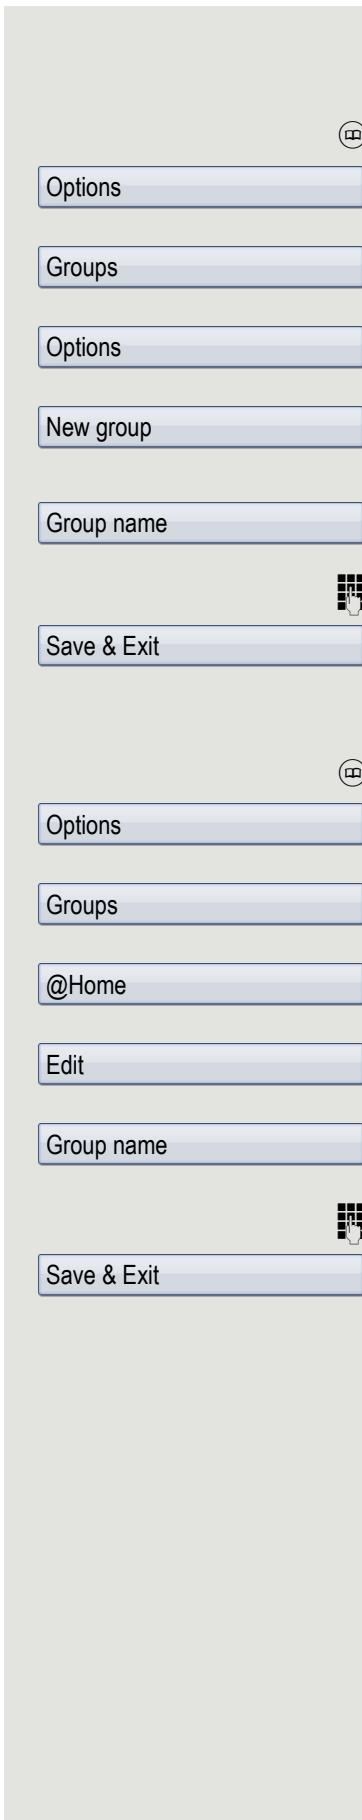

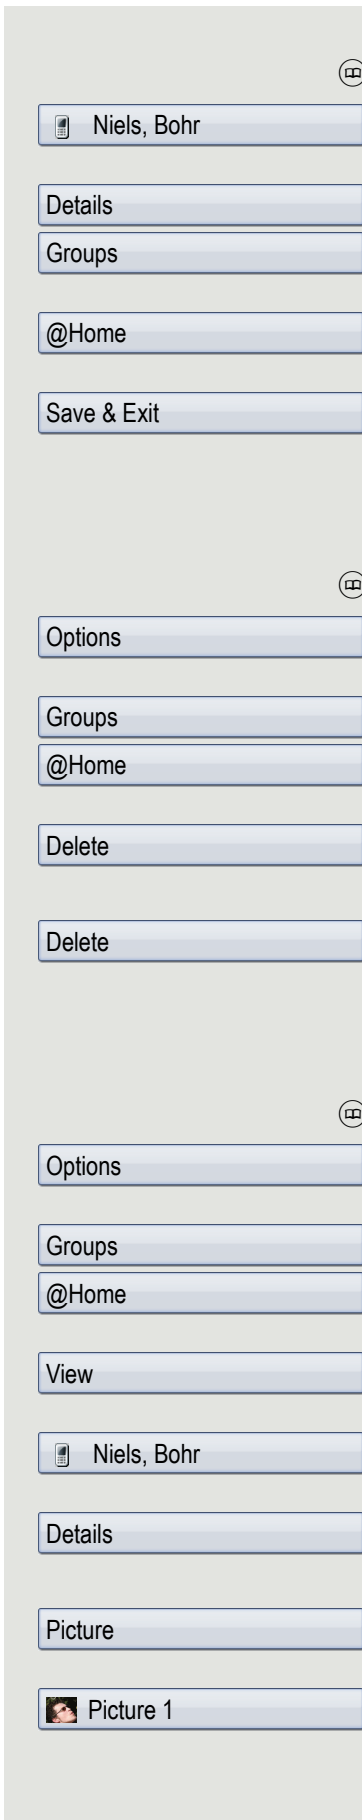

### Adding a contact to a group

Press the key shown.

Select a phonebook entry.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

Select and confirm a group.

Select and confirm the option shown.

### Deleting a group

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm a group.

Select and confirm the option shown in the context menu.

A confirmation request opens.

Select and confirm the option shown.

### Saving a picture for a contact

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm a group.

Select and confirm the option shown in the context menu.


Select group member.

Select and confirm the option shown in the context menu.

The form for entering contact data opens.

Select and confirm the option shown.

Select and confirm the picture. Pictures must be available; you can load them using OpenStage Manager, for example.

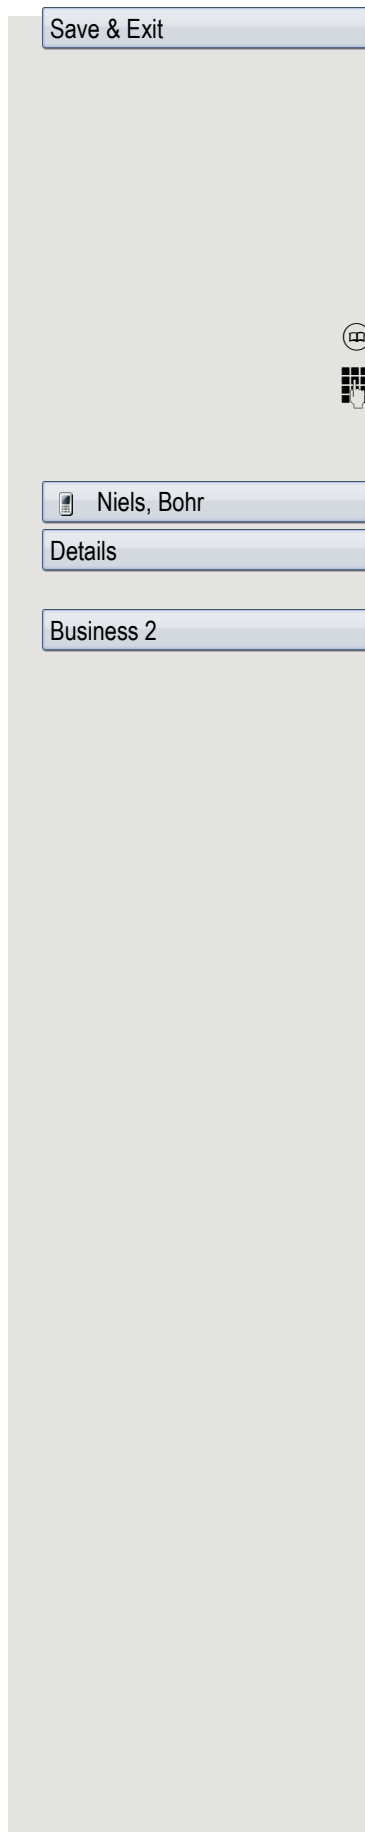

Select and confirm the option shown. The selected picture is assigned to the contact. It appears on the graphic display with the usual contact information the next time a call is received.

## Quick search in the phonebook

You can use the quick search to search the phonebook for the initial letters of a specific last name.

Press the key shown.

Enter the initial letters.


The quick search input mask opens automatically. Your search is narrowed down by every additional letter entered in the input mask.

Select a contact as soon as the name you are looking for appears.

Select and confirm the option shown in the context menu.

Select and confirm the preferred phone number. The phone number is dialled.

## Changing the display format for contacts

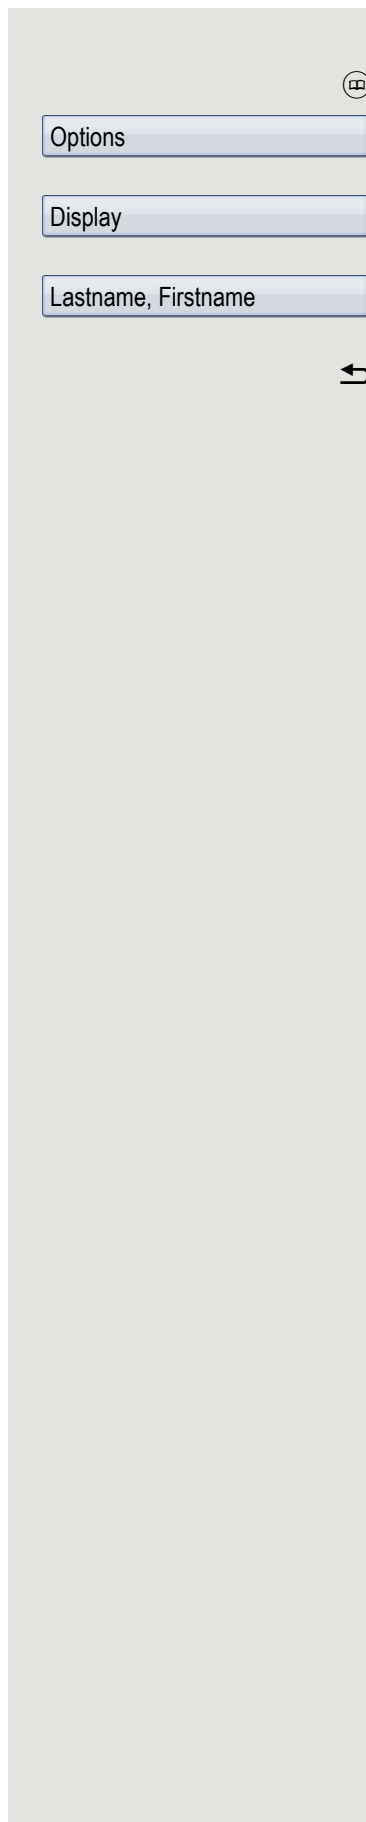

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the display format.



Press the key to return to the phonebook. The display format selected is stored.



## Corporate directory

The corporate directory is an LDAP database. It can be accessed via your network if access has been configured correctly by administrator.

You can perform searches using the name (simple search) or different information on an entry (advanced search), for example, job title or department name.

### Searching for a contact


Press the key until the "Corporate" ("LDAP") tab is active.

Select and confirm the option shown in the **Options** context menu.

Select and confirm the required search field (for example, "Last name").

Enter a search text.

Once you have completed all required search fields, confirm the search request by selecting and confirming "OK" on the display keypad (→ Page 28).

 When entering data in the search fields, note that

- the entry of wildcards is not permitted.
- an \* is automatically inserted at the start of the search string for phone numbers.
- an \* is inserted at the end of the search string in other fields.

You can perform searches using the name (simple search) or different information on an entry (advanced search), for example, job title or department name.

You can now:

- Call the contact → Page 116.
- View the entry (see below).

### Viewing entries

**Prerequisite:** You found and selected a contact (see above).

Select and confirm the option shown in the context menu for the entry.

### New search

To conduct a new search, you must first clear all the search fields.

Select and confirm the option shown in the **Delete** context menu. All search fields have been cleared.

### Defining a qualifier before a search

Prior to a search, you can select which qualifiers should also appear in the output list in the **Options** context menu.

Select and confirm the option shown. You may choose between the following criteria:

- No qualifier
- Job function
- Address 1
- Email




- Business 1
- Mobile
- Business 2
- Private
- Company
- Address 2



Select and confirm the desired qualifier.

Exit the list.

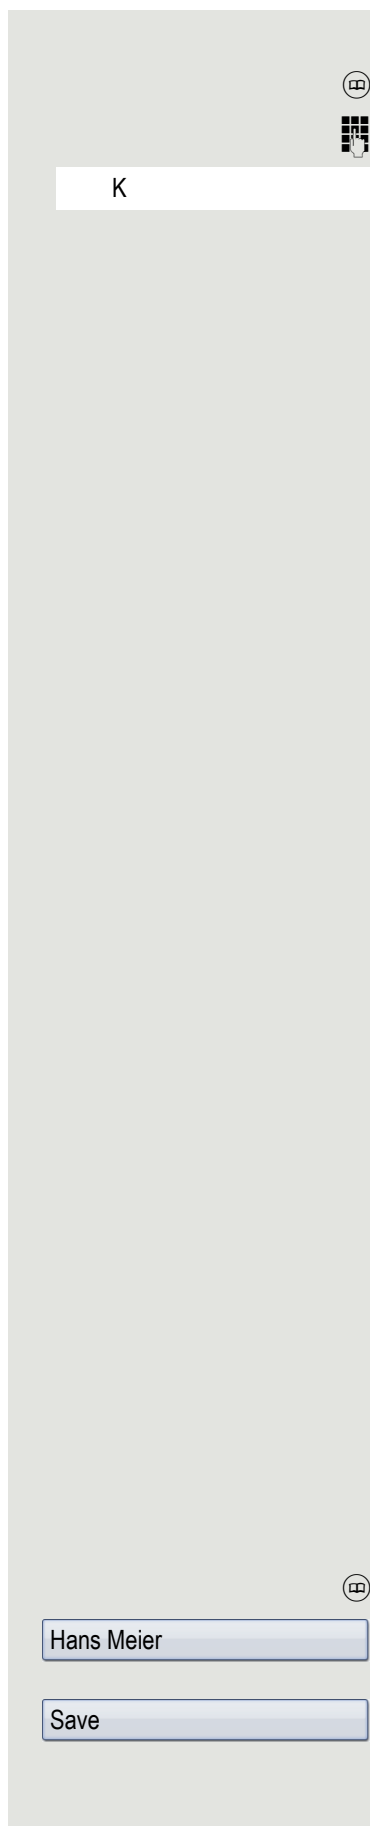





## Quick search

Press the key as often as required until the "Corporate" (LDAP) tab is active.

Enter the initial letter of the surname you need, e. g. "K".

A single-line search window appears at the lower edge of the display.

Do not enter any further characters. After a predefined period of time or after pressing the  key all available names with the corresponding initial letter are displayed. You can restrict the output by entering the second and other letters. The  key is used to switch between letters and numbers. The  key is used to delete individual characters.

When entering extended characters you can control the search individually. For the selection of extended characters firstly press the  key.

Rule list:


Extended character	Description
#	Searches for the exact string before the extended character.
,	You can enter first and last name separately using a comma. A search is carried out for the last name (possibly using a wildcard) and the first first name with the first character after the comma.
*	Wildcard. This searches for the character entered and all possible subsequent characters.

## Quick search using parts of a search string

If administrator adds a field to the template for the corporate directory and assigns this field to an existing search field, you can use any strings in a last name, for example, for the search.

To list all entries, for example, in which the string "er" appears in the **Last name** field, enter this character combination when prompted to enter the name.

Once the output list is available with entries that match this condition, you can now skip to the first corresponding entry by entering the initial letter of the last name.

 Please consult your service personal to establish whether an additional field has been added to the template for the corporate directory and which search field it has been assigned to. Note that a traditional quick search will return unintended results in this case.

## Copying entries to the local phonebook


You can copy contacts from the company-wide phone into your personal phonebook.

Press the key as often as required until the "Corporate" (LDAP) tab is active.

Select the required entry from the list, e.g. Hans Meier

Select and confirm the option shown in the context menu. The entry is copied with all details into the personal phonebook. The "Contact created" message appears.

## Call lists

For a detailed description of the different call lists, see → Page 43. The function must be activated in order to view and manage call lists → Page 166. If the call journal is not activated, the message "Call Log is disabled" is shown on the display when you press the  key.

### Viewing details

Press the key until the call list you want is active.

Select the entry you want.

Select and confirm the option shown in the context menu.

For display and information shown → Page 45.

### Deleting entries

#### Deleting an individual entry

Press the key until the call list you want is active.

Select the entry you want.

Select and confirm the option shown in the context menu.

The entry is deleted.


#### Deleting all entries in a list

Press the key until the call list you want is active.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

All entries in the list displayed are deleted.

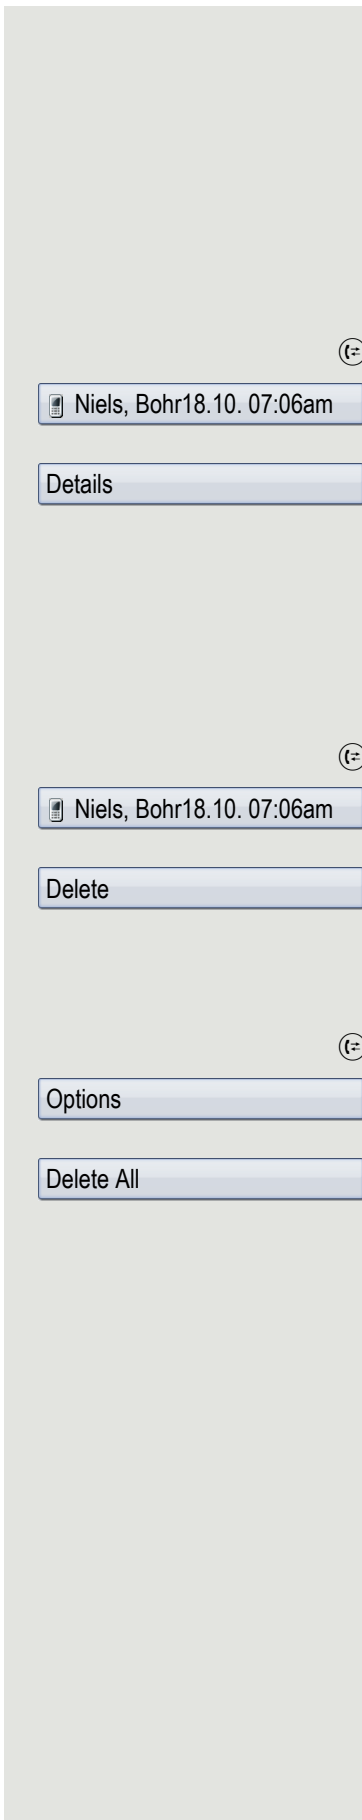

## Copying entries from the call lists into the personal phonebook

Press the key until the call list you want is active.

Select the entry you want. → Page 40

Select and confirm the option shown in the context menu.

You have the following options for "Create contact":

- Saving and changing
- Saving without changing
- Exiting (without saving)

### Saving and changing

Select and confirm the option shown.

The mask to edit a contact in the personal phonebook opens → Page 155. Fill out the relevant fields accordingly and save the new contact.

### Saving without changing

Select and confirm the option shown.

An entry is created and the message "Contact created" is displayed. If you open the phonebook, you will be prompted to update the directory. For this type of entries a group "Copied contacts" is created so that you can find them more easily.



Niels, Bohr18.10. 07:06am

Copy as contact


Saving and changing

Saving without changing

## Call logging

### Activating/deactivating the call journal

The function can be disabled in order to prevent unauthorised third parties gaining information on the other party involved in the call from the call lists. No further calls or conversations are then logged. The function is always activated by default.

 When you deactivate the call journal, please note that the customary last number redial function will also be affected by this. You can then no longer redial the last number dialled → Page 68.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

In the context menu select and confirm to deactivate the call journal. The message "Call Log is disabled" is displayed.

In the context menu select and confirm to reactivate the call journal.

Select and confirm the option shown.

 If the function is deactivated, all existing entries in the journal as well as messages for available missed calls on the display and via LEDs are deleted.


### Logging missed calls


Two options are available to you for this function:

- Answered elsewhere
- Delete entry

All missed called intended for this line are logged and new missed calls are displayed. If the "Exclude" option is selected for "Answered elsewhere", missed calls for this line that were answered either by other subscribers in the group or with "Directed pickup" are neither displayed nor logged (see also → Page 59). The "Exclude" setting is recommended if groups are set up.

Missed calls you called back are deleted automatically in the default setting "Delete when called". You can prevent this by selecting the option "Manually" for "Delete entry" and delete these calls specifically yourself.

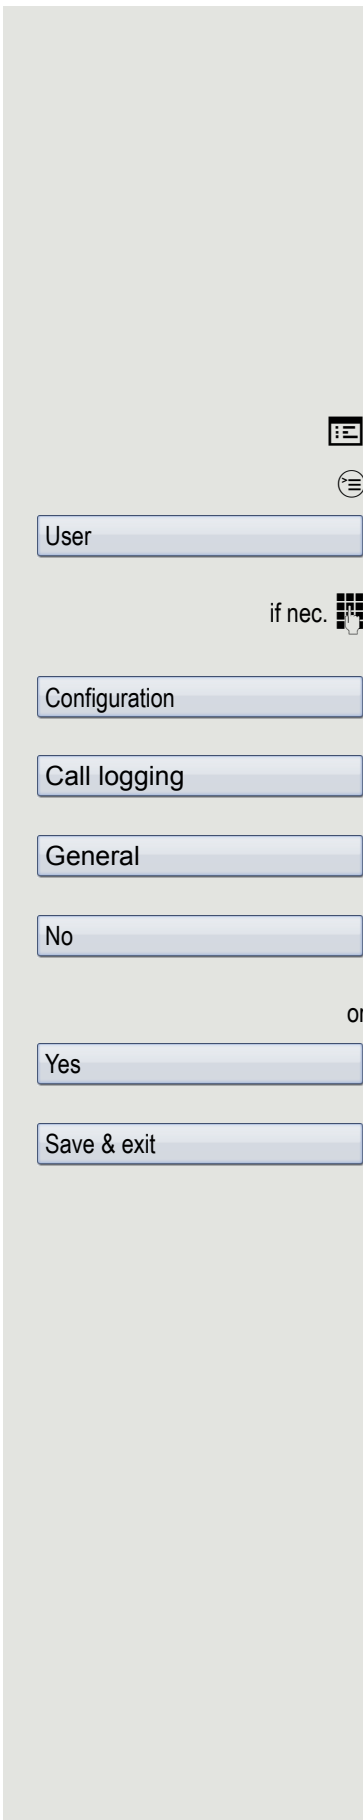

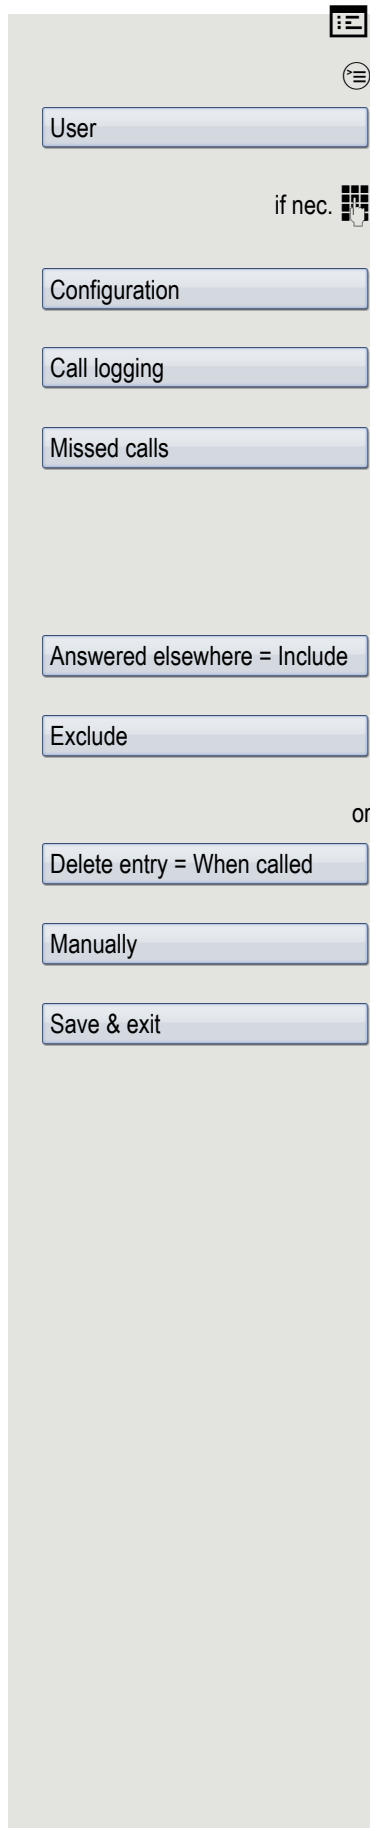

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

### Displaying missed calls that were answered elsewhere

Missed calls that have been answered by other subscribers are indicated with a green checkmark.

Select the option shown.

Select and confirm the option shown in the context menu to prevent calls answered by other subscribers being displayed in the list.

### Deleting missed calls when called

Select the option shown.

Select and confirm the option shown in the context menu to delete entries manually when called.

Select and confirm the option shown.

## Privacy/security

### Deactivating the ringtone

You can deactivate your ringtone if you do not want to be disturbed by your phone ringing. The ringtone can also be deactivated when the phone is ringing.

#### Deactivating the ringtone using the keypad



Hold down the key until the "Ringer off" icon appears on the status bar on the display (→ Page 27).

The ringtone is deactivated.



To switch the function back on, hold down the key until the "Ringer off" icon disappears from the status bar on the display.

You can also switch the function on and off using the option in the idle menu.

Select and confirm the option shown.

Ringer off

or

#### Deactivating the ringtone via sensor key

**Prerequisite:** The "Ringer off" sensor key must be configured → Page 92.

Press the "Ringer off" sensor key.



Press the lit sensor key once more to deactivate the "Ringer off" function.



## Deactivating the ringer temporarily for incoming calls and reactivating it

If you are disturbed on an important call by the phone ringing, for example, you can deactivate the ringer temporarily and then activate it again.



Press the key briefly. The ringer is deactivated.



Now press the key again briefly. The ringer is reactivated.

## Do not disturb

If "Do not disturb" is activated, your telephone will not ring. The caller hears the busy tone or an announcement that the called party cannot accept any calls at the moment.

The "Do not disturb" feature can be enabled or disabled by means of a specially programmed sensor key or also from the idle menu.



---

On multi-line telephones (→ Page 14) you can only activate the "Do not disturb" function for your primary line.

---

## Enabling do not disturb via a key


**Prerequisite:** A programmable sensor key must be assigned the function "DND" (Do Not Disturb) (→ Page 92). "Do not disturb" must be allowed → Page 170.



Press the "Do not disturb" programmable sensor key.



To deactivate the "Do not disturb" function, press the lit programmable sensor key again.

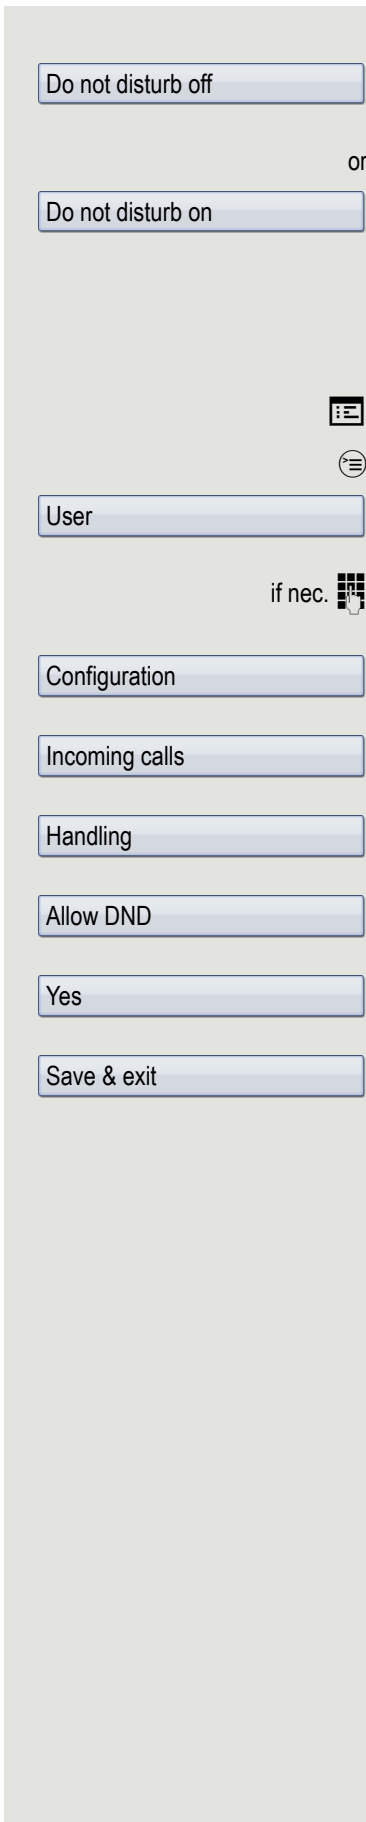

## Enabling "Do not disturb" via the idle menu

Select and confirm the option shown in the idle menu. The "Do not disturb" icon appears in the header.

Select and confirm the option shown in the idle menu. The "Do not disturb" icon disappears.

## Allowing "Do not disturb"

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.


## Security

### User password

Your user password protects your individual configurations, including your language settings. You can also use the user password to lock your telephone → Page 174.

#### Administrator may have configured the following settings:

- The password is deactivated: You do not have the option of configuring user settings. The message "Password is disabled" is displayed.
- The password is temporarily blocked: You do not have the option of configuring user settings at this time. The message "Password.suspended" is displayed.
- After initialling logging onto a user area, you may have to replace the default password with a new password.
- A password can have a predefined period of validity: You will have to create a new password when the period ends. The message "Change Password ({1} days left)" will alert you to this at the appropriate time. The message "Password has expired" appears when the validity period is over. Confirm "Change password" and change the password as described in this section.
- If you repeatedly enter the wrong password (2 to 5 times), additional attempts are blocked. You can make another attempt after a predefined time.
- It is possible that you will not be able to re-use a previously used password for a long time, so you will have to create another "new password".
- Your administrator can tell you about the rules for what and how many characters can or must be used in the password.

 The preset password "000000" corresponds to a blank password. In other words, the phone cannot be locked and the user menu is **not** password protected (see also → Page 173).

The user password can also be modified via the WBM interface (→ Page 265).

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password  
→ Page 26.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Enter the current password (at least six characters, text entry, see → Page 28) and confirm your entry.

Select and confirm the option shown.

Enter a new password (at least six characters, text entry, see → Page 28) and confirm your entry.

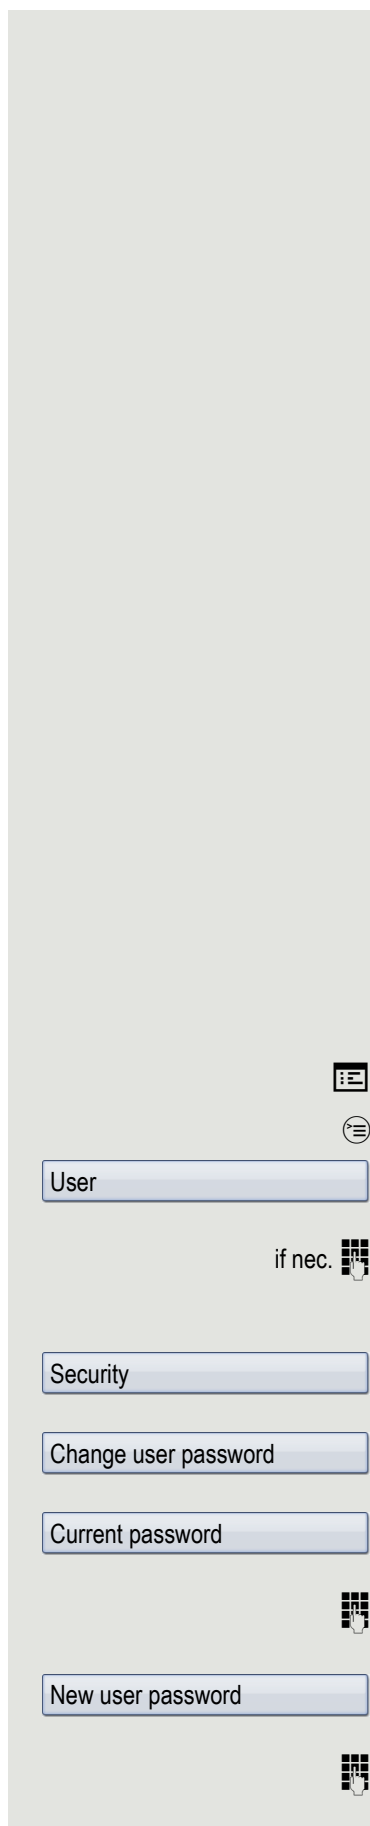

Confirm New user password



Save & Exit


Select and confirm the option shown.

Enter and confirm the new password once more.

Select and confirm the option shown.

## Deactivate user password

You can deactivate the phone's password prompt if a password has already been configured.

 The deactivation of the password prompt does not affect the WBM interface → Page 265, OpenStage Manager or CTI applications that use a password prompt. As long as the user password is deactivated, you do not have access to user settings via the WBM interface or the OpenStage Manager.

If you deactivate the user password, you are **not** able to lock the phone → Page 174 and the user menu is **not** password-protected.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the current password (at least six characters, text entry, see → Page 28) and confirm your entry.


Select and confirm the option shown.

Enter six zeros ("000000") to deactivate the password. Confirm entry (at least 6 characters, (text entry, see → Page 28).

Select and confirm the option shown.

Enter six zeros ("000000") once again and confirm.


Select and confirm the option shown.

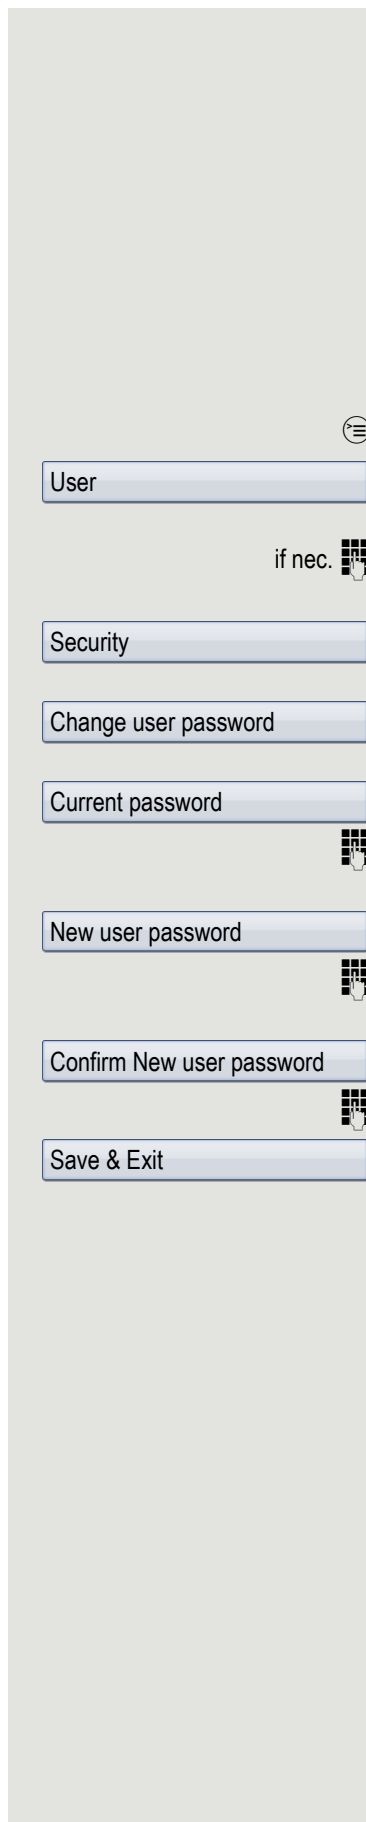

## Locking the phone

You can lock your phone to protect it against unauthorised access. In this way, no one can make calls or change your user settings unless they know your user password.

Predefined numbers from the dial plan can still be dialled when the phone is locked. For more information, contact your administrator.

 You can only lock the phone if you set a user password (→ Page 171). The password for this may not be the default setting "000000".

Check if necessary whether the telephone lock function has been activated for you by administrator.

### Activating the phone lock

Hold down the key shown until "Phone lock Confirm lock" appears.

In the pop-up menu:

Select and confirm the option shown. The phone lock activates immediately.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu. The phone is locked.

Select and confirm the option shown. The phone is locked.

 If an emergency number has been entered on the telephone by administrator, **Emergency call** will be offered on the display once you have activated the phone lock. You can also dial the emergency number via the keypad.

### Unlocking the phone

The following is displayed: Phone locked.

There are two options available for unlocking the phone:

- User unlock
- Admin unlock

Select and confirm if you know the user password. You are prompted to enter the user password.

Select and confirm if you only know the administrator password. You are prompted to enter the administrator password.





User password or enter and confirm the administrator password. The phone is unlocked if the password is correct.

---



If the telephone is locked, an emergency number entered by administrator can be dialled using the keypad or the option **Emergency call**.

If the telephone is locked redial keys cannot be used. This also applies when emergency numbers or predefined numbers from the dial rep dial are stored on them.

---

## Mobility function

**Prerequisite:** Your phone is configured to support mobility by administrator. A DLS server is available in the LAN and its address is entered in the phone.

### Mobility scenarios

When you log on to your phone, or any other mobility-enabled phone, the following scenarios are possible:

#### Logging on and off at the same phone

- Log on as a mobility user → Page 177.
- Log off as a mobility user → Page 178.

#### Logging on and off at different phones

In these cases, administrator may have made the following settings:

- Log on at a remote phone with forced logon, when the user is still logged on at that phone → Page 179.
- Delayed logon at a remote phone with forced logon, when the user is still logged on at that phone and the phone is busy → Page 180.



## Logging on and off at the same phone

### Logging on to the phone

No other mobility user is logged on.

#### Logon via a key

If a program key is configured for Mobility.

Press the "Mobility" program key.

#### Logon via the context menu

Select and confirm the option shown in the idle display context menu  
→ Page 31.

You are prompted to enter your mobility ID.


Enter and confirm mobility ID – usually a phone number.

You are prompted to enter the password.

Enter and confirm the user password.

The following messages appear on the display:

- Logging on mobile user
- Validating
- Registering
- Downloading user data

Once logon is complete, the "Mobility" program key LED lights up and the mobility icon  appears in the graphic display next to the mobile phone number.



## Logging off from the phone

**Prerequisite:** You are logged on as a mobility user.

### Logoff via key

If a program key is configured for Mobility.

Press the "Mobility" program key.

### Logon via the context menu


Select and confirm the option shown in the idle display context menu  
→ Page 31.

Is displayed. You briefly have the option to cancel the logoff, otherwise the logoff process is launched.

In the graphic display, the following messages appear:

- Logging off mobile user
- Uploading user profile
- Registering
- Downloading user data

After you have logged off, the mobility icon  is hidden.

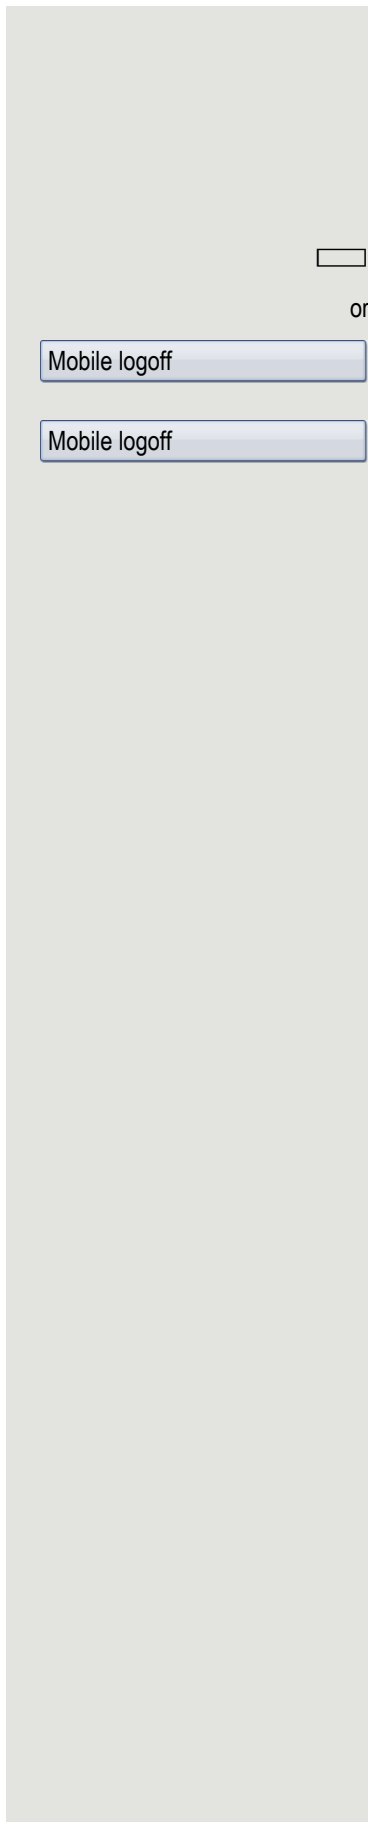

## Logging on at different telephones

An attempted login is rejected if the user is already logged on to another phone and "Logon with forced logoff" is disabled for the mobility user.

## Logging on with forced logoff at a remote phone

If the user is already logged on at another phone and the remote phone is busy, the logon is rejected.

If, however, your administrator enabled "Forced logoff during call" without setting a time, the system does not consider whether or not the remote phone is busy.

### Logon via a key

If a program key is configured for Mobility.

Press the "Mobility" program key.

### Logon via the context menu

Select and confirm the option shown in the idle display context menu  
→ Page 31.

You are prompted to enter your mobility ID.


Enter and confirm mobility ID – usually a phone number.


You are prompted to enter the password.

Enter and confirm the user password.

The following mobility messages appear in the display:

- Logging off elsewhere
- Validating
- Registering
- Downloading user data

The logoff is simultaneously displayed on the remote phone. Once logon is complete, the "Mobility" program key LED lights up and the mobility icon appears in the graphic display .

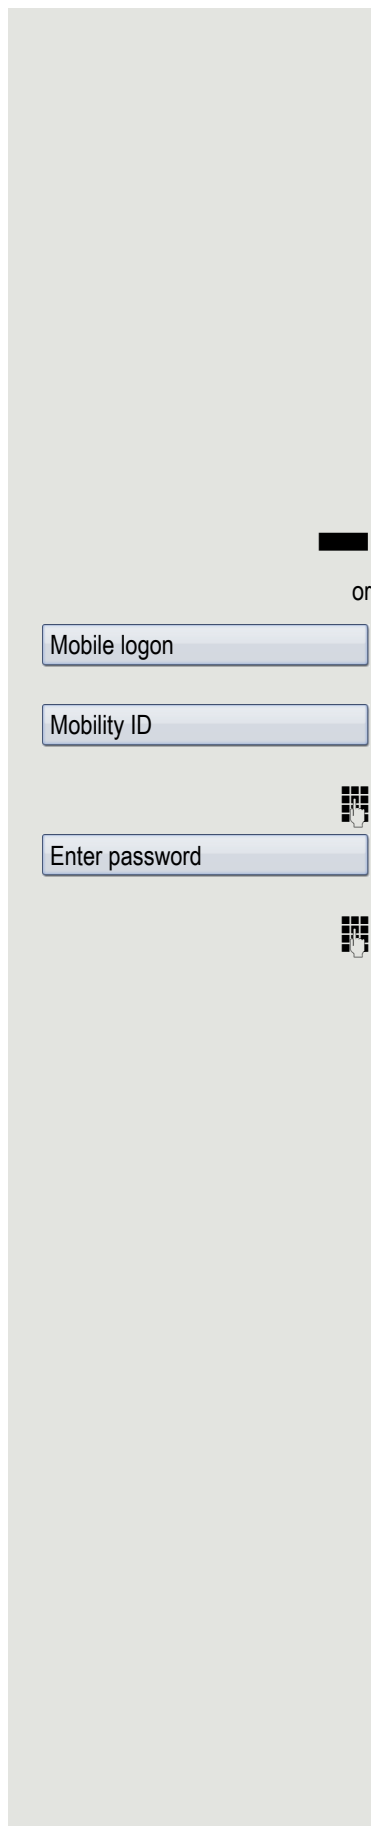

## Logging on with forced, delayed logoff at a remote phone

If the remote phone is busy and your administrator enabled "Forced logoff during call" with a set timeout, forced logoff does not occur until this timeout expires.

### Logon via a key

If a program key is configured for Mobility.

Press the "Mobility" program key.

### Logon via the context menu

Select and confirm the option shown in the idle display context menu  
→ Page 31.

You are prompted to enter your mobility ID.

Enter and confirm mobility ID – usually a phone number.

You are prompted to enter the password.

Enter and confirm the user password.

The following mobility messages appear in the display:


- Validating
- Logging off elsewhere



At the same time, the graphic display on the busy remote phone shows "Forced logoff..." . After the set timeout, the active call is ended and remote logoff is performed.

- Registering
- Downloading user data

Once logon is complete, the "Mobility" program key LED lights up and the mobility icon appears in the graphic display  .

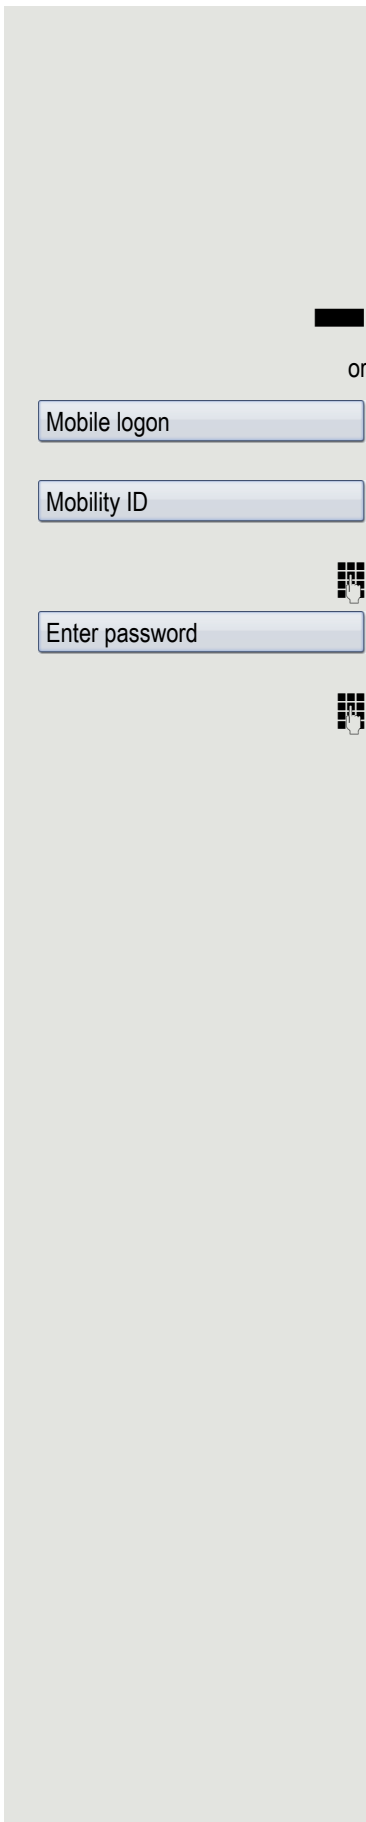

## Video function

You can connect a USB camera to your OpenStage 60/80 so that during a call you can see the other call partner, assuming he or she has also connected a camera, and vice versa (see → Page 34).

The video function is deactivated by default → Page 184) because it is not yet fully supported by all telephone systems.

**Prerequisite:** A suitable USB camera is connected and the video function has been approved by the administrator and activated by you (→ Page 184).

### Activating and deactivating the function temporarily

You can activate and deactivate the video function temporarily via the context menu in idle mode.



Video off

or



Video on

Select and confirm the option shown in the context menu to deactivate.


Select and confirm the option shown in the context menu to activate.

### Activating and deactivating a function with a key

You can configure a "Video on" key to monitor the status of the video function and respond quickly (see → Page 92). This is useful in the following situations for example:

- If the phone is already ringing and you want to quickly activate/deactivate the video function before answering the call.
- The video status can be identified immediately from the key even if the phone is in idle mode, the display is switched off or the screensaver is active.

Press the "Video on" program key. The key illuminates and the video function is activated. The video function can be deactivated by pressing the key again.

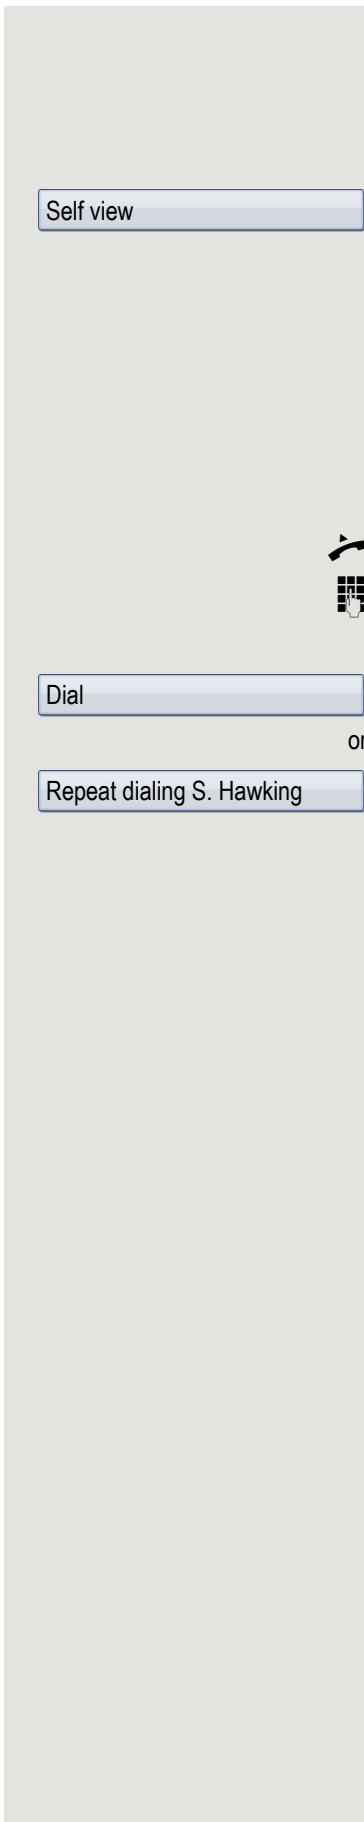

## Self view

**Prerequisite:** The phone is in idle mode.

In order to test whether your USB camera is working properly, activate the Self view function in the context menu (see also → Page 35).

Select and confirm the option shown in the context menu. You will see a video image of yourself and your surroundings on the display for approx. 10 seconds.

## Video link

If the video function on your OpenStage 60/80 and the selected remote station – likewise a OpenStage 60/80 – is enabled, you can see your call partner and your call partner can see you on the display when the connection has been set up (see → Page 34).

Lift the handset.

Enter the station number.

In the pop-up menu:

Confirm or wait until the dial delay expires (see → Page 118).

In the pop-up menu:

Confirm<sup>1</sup>.

The video link is set up automatically. As long as the context menu is open, two smaller video preview images – the Self view and the view of your call partner – will be shown on the display.

If the context menu is hidden again after a defined time or using the left button of the TouchGuide, the video image of your call partner appears in single-screen mode.

1. Please note the information in relation to the call journal on → Page 68

A vertical grey bar on the left side of the page contains two screenshots of a video interface. The top screenshot shows a button labeled 'Consultation' with a mouse cursor hovering over it. Below the button is a small icon of a video camera with a red 'X' over it. The bottom screenshot shows a button labeled 'Alternate' with a mouse cursor hovering over it.

Consultation

## Consultation

You can call a second partner during a video link.

Select and confirm the option shown in the connection's context menu.

The connection to the video caller is placed on hold and the video image is hidden.

Enter and confirm the second partner's station number.

If the consultation partner has likewise activated the video function with a webcam, you will first of all see two video preview images of yourself and the new call partner alongside the context menu. Once the context menu has been hidden again, the consultation partner appears in single-screen mode.

## Alternating

For a detailed description of alternating (toggling), see → Page 72.

Select and confirm the option shown in the connection's context menu.

If you switch to the first and then back to the second partner, each of the corresponding video preview images of the current call partner and you will be displayed first and then, after the menu disappears, the current image of the call partner in single-screen mode.

If you connect your two call partners (see → Page 73), they will likewise have a video link.

## In the absence of a USB camera

If one of the partners has enabled his or her video function but does not have a USB camera connected, you will see a crossed-out camera in preview and single-screen mode instead of the video image of the call partner.

Alternate

Hold

## Holding a call

You place the call on hold for example to consult with someone else in the room.

Select and confirm the option shown in the connection's context menu. The video display is interrupted.

Following resumption, the two small video preview images appear first and then, after the context menu disappears, the video image of your call partner in single-screen mode.

## Installing a USB camera

You can connect most of the currently commercially available USB cameras.

## Connecting a USB camera

Plug the USB connector of the camera into the USB port on the bottom of your OpenStage 60/80 (see → Page 16).

If you see the following message, the USB camera has been detected and can be used.



New USB device detected  
video.camera USB2.0 Camera

## Activating and deactivating the video function

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Select and confirm the option shown in the context menu to activate.

Select and confirm the option shown in the context menu to deactivate.

Select and confirm the option shown.



User

if nec.



Configuration

Video Call

Video on

Yes

or

No

Save & exit



## OpenScape Voice functions

The OpenScape Voice supports a number of functions that you can activate and deactivate from your phone.



On multi-line telephones, the full scope of OpenScape Voice functions is only available for the primary line.

### Feature toggle key for hunt group

You can pick a programmable sensor key and program it as a feature toggle key for activating the "make line busy" and "stop hunt" functions.

You can then use the programmable sensor key to activate or deactivate the relevant OpenScape Voice function on the server for this phone.

You can only program first-level programmable sensor keys because those linked to LEDs are used to display function status as either **on** (LED on) or **off** (LED off). The LED indicates the status of the function on the server and can therefore change without any of the programmable sensor keys being pressed.

#### Example:

Switching between "Line busy" and "Line free" (see also → Page 191).

**Prerequisite:** Your administrator configured a programmable sensor key with the function "Busy" ("make line busy" for the hunt group) → Page 95.



Press the programmable sensor key – the key lights up.



Press the illuminated programmable sensor key once again to release the line - the keys stops illuminating.

## Making anonymous calls

Your administrator decides whether or not your caller ID (name and phone number) is displayed on a called party's station. **Anonymous** calling is when your data is not transmitted. The settings configured can be deactivated, however, for specific calls.



- If your caller ID is transmitted: your caller ID is displayed.
- If your caller ID is suppressed: "unknown" is displayed.

## Deactivating

If your administrator permanently activated **anonymous calling** for your phone, you can deactivate this setting as follows:



Lift the handset.



Enter the code (see the table of codes → Page 202) to transmit the caller information.



You hear a confirmation tone/announcement.

## Activating

If your administrator activated caller ID transmission for your phone, you can deactivate this setting as follows:



Lift the handset.



Enter the code (see the table of codes → Page 202) to suppress the caller ID.



You hear a confirmation tone/announcement.

Caller ID transfer is suppressed. "unknown/Anonymous" appears on the called party's display instead of the caller ID.

## Temporarily activate anonymous calling for the next call

If your administrator activated caller ID transmission for your phone, you can deactivate this setting for the next call as follows:

Lift the handset.

Enter the code (see the table of codes → Page 202).

Wait until you hear the confirmation tone or announcement.

Dial the phone number of the party you want to contact.

Caller ID transmission is reactivated after this call.

## Temporarily deactivate anonymous calling for the next call

If your administrator suppressed caller ID transmission for your phone, you can enable this setting for the next call as follows:

Lift the handset.

Enter the code (see the table of codes → Page 202).

Wait until you hear the confirmation tone or announcement.

Dial the phone number of the party you want to contact. When you end this call, caller ID transmission is suppressed once again for the next call.

## Creating a list for selective calls

### For call acceptance

You can create a list of the phone numbers from which you are willing to accept calls (also known as a selection list). Your administrator knows how long this list may be in the OpenScape Voice used on site in your facility.

A connection is set up if a caller's phone number matches a number in the selection list. If there is a match:

- the caller receives a message that the party refuses to accept any calls with this number,
- or
- the call is forwarded to an external phone number.

Contact your administrator for information on how your OpenScape Voice is configured on site.

Lift the handset.

Enter the code (see the table of codes → Page 202).

Various announcements deliver the following information:

- the name of the feature (selective call acceptance)
- the current status (active or inactive)
- the current scope of the selection list.

These announcements are followed by verbal user prompts that let you:

- add entries to the selection list
- delete entries in the selection list
- check the selection list
- activate or deactivate the function.

### For call rejection

As for selective call acceptance, you can create a selection list with the phone numbers of parties from whom you are not willing to accept calls. Your administrator know how long this list may be in the OpenScape Voice used on site in your facility.

A call is not connected if the caller's phone number matches a number in the selection list; the caller is notified that the called party rejects calls from this number. If the caller's number is not in the selection list, the call is to you as usual.

Lift the handset.

Enter the code (see the table of codes → Page 202).

Various announcements deliver the following information:

- the name of the feature (selective call rejection)
- the current status (active or inactive)
- the current scope of the selection list.

These announcements are followed by verbal user prompts that let you:

- add entries to the selection list
- delete entries in the selection list
- check the selection list
- activate or deactivate the function.

## Anonymous calls

### Rejecting

You can reject all calls from parties that activated a data protection feature (for example, caller ID suppression) to prevent their phone number from being transmitted. In this case, you are not informed that a call was rejected.



Lift the handset.

Enter the code (see the table of codes → Page 202).

### Accepting

You can also accept calls from parties that activated a data protection feature (for example, caller ID suppression) to prevent their phone number from being transmitted.



Lift the handset.

Enter the code (see the table of codes → Page 202).

## Using abbreviated dialling

Abbreviated dialling gives you access to a central list of frequently dialled phone numbers.

You can dial a specific phone number by simply entering a digit string. As these are three-digit numbers, you can store up to 1000 phone numbers. This list is stored centrally and managed by your administrator.



Lift the handset.

Enter the code (see the table of codes → Page 202) followed by a number between 0 and 999 for the phone number you want to dial.

The number is automatically dialled.

## Call tracing

You can request automatic tracing of the last received internal call. This is particularly suitable for identifying malicious, irritating or troublesome calls.



Lift the handset.

Enter the code (see the table of codes → Page 202). The call number is being determined. Ask your administrator for the result.

## Hunt group functions

To ensure optimum handling of specific calls, your telephone can be assigned to a pickup group → Page 59 and/or a hunt group.

Your administrator can incorporate multiple telephones in a hunt group. If your telephone is assigned to a hunt group, OpenScape Voice forwards calls for the members of your group in accordance with specific rules defined by your administrator. Hunt groups are a simple solution for distributing calls to a group of telephones.

If you want another member of the group to pick up an incoming call, you can set your telephone to signal the busy status for your line to the other members of the hunt group. Hunt group calls will then no longer be forwarded to your telephone.

This feature is configured using the feature toggle key (→ Page 185).

### Making a line busy

This prevents this line being used for calls in a hunt group.

#### Activating

Lift the handset.

Enter the code (see the table of codes → Page 202).

Wait until you hear the confirmation tone.

#### Deactivating

Make the line free once more for the hunt group.

Lift the handset.

Enter the code (see the table of codes → Page 202).

Wait until you hear the confirmation tone.



## Marking the last line in the hunt group chain

Sets the "stop hunt" line in the hunt group chain. The system will stop looking for a free line in the hunt group chain after it reaches this line.

### Activating



Lift the handset.



Enter the code (see the table of codes → Page 202).



Wait until you hear the confirmation tone.

### Deactivating

Unmark the line as the end of the hunt group chain.



Lift the handset.



Enter the code (see the table of codes → Page 202).



Wait until you hear the confirmation tone.



## Reachability

You can make either serial calls or simultaneous calls on several sites. The features for this are

- serial call
- parallel call

**Prerequisite:** The administrator has configured the respective feature for your main number in OpenScape Voice.

### Serial call

#### Managing number lists/activating serial call

Before the serial call number can be activated, a serial call list must be created. This can be prepared either by administrator or you can create it yourself later. Up to six numbers can be entered in the list for sites on which incoming calls including your main number should be signalled sequentially. Each number can consist of up to 30 digits.

Lift the handset.

Enter the code for the edit mode (see code table → Page 202).

The edit mode opens and you hear an announcement with the following information:

- Feature name
- Current status (active/inactive)
- Number of numbers currently on the serial call list

You are prompted to do one of the following:

- Activate/deactivate the feature (only if numbers are already entered in the list)
- Call up the numbers currently entered in the list.
- Add or delete numbers
- Repeat the options in edit mode

If the serial call list is still empty, you are prompted to enter numbers in the list. As soon as you have entered a valid number, the serial call can be activated.

If the serial call is activated, incoming calls are first routed to your phone. If you do not answer within the timeframe defined by the administrator, the next destination phone rings for the configured period of time. The caller is informed that the call is being routed to another station. The connection is established with the first phone that accepts the call.

If the call is not answered by any phone, it is forwarded to the configured forwarding destination (on no reply) or to a "rejection announcement".

### Parallel call

#### Managing number lists/activating parallel call

Before the parallel call feature can be activated, a parallel call list must be created. This can be prepared either by administrator or you can create it yourself later. Up to six numbers can be entered in the list for sites on which incoming calls including your main number should be signalled sequentially. Each number can consist of up to 30 digits.



Lift the handset.

Enter the code for the edit mode (see code table → Page 202).

The edit mode opens and you hear an announcement with the following information:

- Feature name
- Current status (active/inactive)
- Number of numbers currently on the parallel call list

You are prompted to do one of the following:

- Activate/deactivate the feature (only if numbers are already entered in the list)
- Call up the numbers currently entered in the list.
- Add or delete numbers
- Repeat the options in edit mode

If the parallel call list is still empty, you are prompted to enter numbers in the list. As soon as you have entered a valid number, the parallel call can be activated.

If the parallel call is activated, incoming calls are routed to your phone and all other destination phones in the parallel call list. The connection is established with the first phone that accepts the call.

If the call is not answered by any phone, it is forwarded to the configured forwarding destination (on no reply) or to a "rejection announcement".

### Activating/deactivating parallel call via code

You can activate/deactivate the parallel call without having to change to edit mode.

**Prerequisite:** You have already entered numbers in the parallel call list.



Lift the handset.

Enter the code to activate or deactivate the parallel call (see code table → Page 202).

## Parking a call

If you have answered a call for a colleague and cannot forward it to him, you can park the call.

### Park a call



You are conducting the call. Let the other party know, e.g. that you are trying to connect him.



Enter the code for parking (see code table → Page 202).

You hear a confirmation tone and the line number is announced. The other party hears a waiting melody. The caller hears a waiting melody.



Replace the handset

Tell your colleague that a call for him is parked and give him the line number.

### Unparking

To unpark the call, your colleague must proceed as follows:



Lift the handset.



Enter the unparking code (see code table → Page 202). He is prompted to enter a line number.



Enter the specified line number.




Your colleague is now connected with the waiting caller.

## Silent Monitoring

If this function has been configured by administrator and enabled for the destination phone, you can join an active call of an internal station and listen in un-noticed (muted) or with the knowledge of the target station (active).

### Active silent monitoring

Station A and B are on a call. You want to listen to the call but so that Station B does not notice but so that you can still talk to Station A.

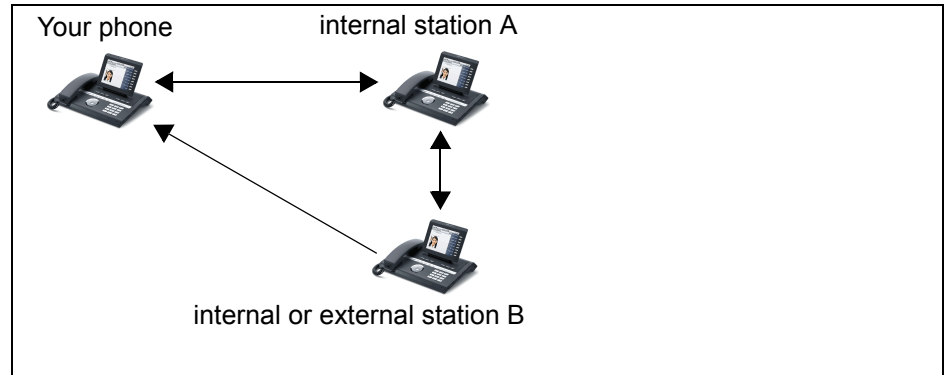

- You can hear and talk to station A.
- You can hear station B but cannot talk to him because he cannot hear you.
- Station A and B can hear and speak to each other.



Lift the handset.




Enter the code for active silent monitoring and the destination number (see code table → Page 202). You are connected to the call and can listen. If necessary notify station A.



End the silent monitoring unnoticed by replacing the handset.

## Muted silent monitoring

Station A and B are on a call. You want to monitor the call but so that neither station notices.

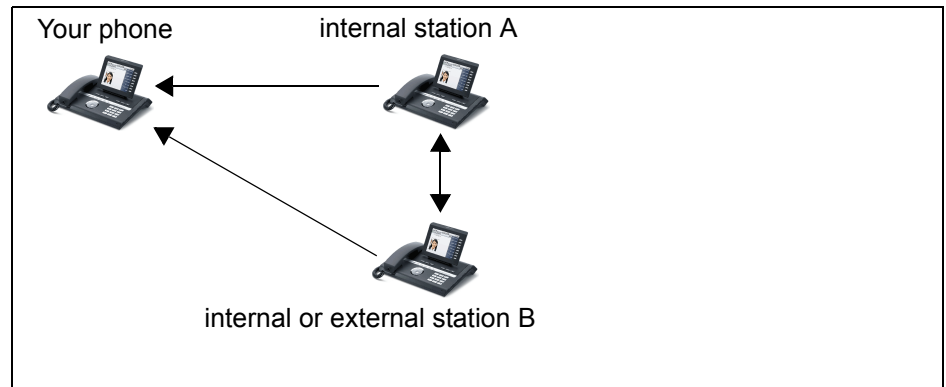

- You can hear station A but cannot talk to him because he cannot hear you
- You can hear station B but cannot talk to him because he cannot hear you.
- Station A and B can hear and speak to each other.



Lift the handset.



Enter the code for active silent monitoring and the destination number (see code table → Page 202). You are connected to the call and can listen.



End the silent monitoring unnoticed by replacing the handset.

## One-way Intercom and Two-way Intercom function

With One-way Intercom or Two-way Intercom, the loudspeaker or speakerphone function of a destination phone is activated automatically when the connection is established. Use of these functions is conceivable for example between an executive and secretary or between a doctor and receptionist.

Possible functions include:

- One-way Intercom
  - with variable input of member number
  - to a saved member number
- Two-way Intercom
  - with variable input of member number
  - to a saved member number

### Prerequisites:

- The team member belongs to the same collective group as you and has likewise been assigned a member number.
- The team member's phone has a loudspeaker (One-way Intercom) and/or a speakerphone function (Two-way Intercom).
- Automatic answering is activated for the team member.
- The team member's phone is idle.
- The member numbers of the callers are known for the One-way Intercom and Two-way Intercom functions.

You can cancel One-way Intercom or Two-way Intercom by replacing the handset or – during a consultation – resume the held call.

Two-way Intercom connections can be established from the following states:

- In idle status
- During manual call holding
- In a consultation



Functions such as "call forwarding" or "do-not-disturb" are temporarily disabled on the destination caller's phone by the One-way Intercom and Two-way Intercom functions.

---

## One-way Intercom

From your phone, you can directly call any team member whose telephone has a loudspeaker.

### One-way Intercom with variable input of member number



Lift the handset.



Enter the code for One-way Intercom (see code table → Page 202) followed by the one or two-digit member number of the respective team member.



As soon as the connection has been established, you will hear a confirmation tone and can speak to the other party via the loudspeaker.



To end the call, simply hang up.

### One-way Intercom to a saved member number

**Prerequisite:** The code for One-way Intercom and the member number are programmed on a sensor key.



Press the programmed sensor key. A connection to that member's loudspeaker will immediately be established: You can speak to the destination caller via your speakerphone.

## Two-way Intercom

From your phone, you can directly call any team member whose telephone has a speakerphone function. The loudspeaker and microphone of the destination phone are switched on automatically.

### Two-way Intercom with variable input of member number



Press the key to use your speakerphone function.



Enter the code for Two-way Intercom (see code table → Page 202) followed by the one or two-digit member number of the respective team member.



As soon as the connection has been established, you will hear a confirmation tone and can reach the destination caller via this caller's speakerphone function.

### Two-way Intercom to a saved member number

**Prerequisite:** The code for Two-way Intercom and the member number are programmed on a sensor key.



Press the programmed sensor key. A connection to the team member is established immediately and your speakerphone function will be switched on.



As soon as the connection has been established, you will hear a confirmation tone and can reach the destination caller via this caller's speakerphone function.

## Announcing the local phone number

You can use this function in order, for example, to identify the phone number of a phone in a conference room if it is not indicated on the display.



Lift the handset.



Enter the code for "Announcing the local phone number" (see code table → Page 202). The phone number is announced.



Then hang up.

## Dialling the last caller

You can retrieve and dial the phone number of the last answered or dialled caller. The following two functions could be used alternatively if you have disabled the call journal → Page 166.

### Retrieving and dialling the last answered caller

The following phone numbers can be saved for retrieval:

- The last answered call
- The last missed call
- The last picked up call (group call)



Lift the handset.



Enter the code for dialling the last answered caller (see code table → Page 202). The phone number is dialled and the connection is established.

### Retrieving and dialling the phone number of the last caller dialled

Instead, you can also use the normal redial functions of your phone as usual.



Lift the handset.



Enter the code for dialling the last caller dialled (see code table → Page 202). The phone number is dialled and the connection is established.



## Picking up out-of-hours calls

If your switchboard is no longer attended after a certain time, an out-of-hours call function can be configured on one or more phones for this period.

For example, if you hear one of the phones that has an out-of-hours call function configured ringing when the office is closed, you can pick up the call early from your phone.

You can also forward your phone to the phone with the out-of-hours call function before leaving the office so that colleagues who have not yet left can pick up calls for you.

Lift the handset.

Enter the code (see code table → Page 202) for the out-of-hours call pickup in order to pick up the ringing call.



You can also configure a key for picking up out-of-hours calls.

## Table of codes for OpenScape Voice functions

Ask your administrator to enter the latest codes in the following table. Print this page as an overview.

Function	Code	Description
Making anonymous calls off		→ Page 186
Making anonymous calls on		→ Page 186
Making anonymous calls temporarily on		→ Page 187
Making anonymous calls temporarily off		→ Page 187
List for selective call acceptance		→ Page 188
List for selective call rejection		→ Page 188
Rejecting anonymous calls		→ Page 189
Accepting anonymous calls		→ Page 189
Using abbreviated dialling		→ Page 190
Call tracing		→ Page 190
Making a line busy on		→ Page 191
Making a line busy off		→ Page 191
End of hunt group chain on		→ Page 192
End of hunt group chain off		→ Page 192
Edit mode for serial call		→ Page 193
Edit mode for parallel call		→ Page 193
Activating a parallel call		→ Page 194
Deactivating a parallel call		→ Page 194
Parking a call		→ Page 195
Unparking a call		→ Page 195
Active silent monitoring		→ Page 196
Muted silent monitoring		→ Page 197
One-way Intercom		→ Page 199
Two-way Intercom		→ Page 199
Announcing the local phone number		→ Page 200
Last answered caller		→ Page 200
Last dialled caller		→ Page 200
Picking up out-of-hours calls		→ Page 201

## Impact Levels

Communication in a Public Sector Network (PSN) is split into areas of different impact levels (IL). The Impact Level dictates how you as a user should conduct the telephone call in question. It is described below how to determine whether your call partner belongs to a lower Impact Level when the connection is being established or has been established.

Calls with a low Impact Level are treated in a particular way, either through their own icons, text labels and/or a special ringtone. It should be noted that the Impact Level causes no restriction when using the phone either during or prior to connection. Calls of the same or a higher Impact Level are not identified in any particular way.

To ensure unrestricted functionality of the IL function you have to:

- Deactivate advisory tones for unsecured voice connections (→ Page 225) and
- Deactivate automatic opening of the context menu (→ Page 230)

## Answering a call with a lower Impact Level

**Prerequisite:** The administrator has assigned separate call signals for calls with a lower Impact Level.

### Answering a call

The phone rings with the defined ringtone for calls with a lower Impact Level.

The caller is shown a special icon and the advisory "**Lower IL**".



Lift the handset.

You can also answer the call if appropriate using the loudspeaker key or via the headset.

### Answering forwarded calls

The phone rings with the defined ringtone for calls with a lower IL.

The caller is shown a special icon and the advisory "**Lower IL**".



Lift the handset.

You can also answer the call if appropriate using the loudspeaker key or via the headset.

 
### Answering a second call

The phone rings with the defined ringtone for second calls with a lower IL.

The caller is shown the advisory "**Lower IL**".



Lift the handset.



You can also answer the call if appropriate using the loudspeaker key or via the headset.

## Calls to a lower Impact Level

If you are calling a partner with a lower IL, this will be displayed when the connection is established.

### Offhook dialling

Lift the handset.

Enter the station number.

In the pop-up menu:

Confirm or wait until the dial delay expires (see → Page 118).

In the pop-up menu:

Confirm<sup>1</sup>.

The connection is set up. A special icon and the advisory "**Lower IL**" are shown on the display.



You can also set up the connection with on-hook dialling via the loud-speaker (speakerphone mode) or via a connected headset.

### Forwarding a call with a lower IL

If you are forwarding a partner with a lower IL to a partner with a higher IL, this will be displayed when the connection is established.


**Prerequisite:** The Deflect function is approved by the administrator.

A call with a lower IL rings.

Select and confirm the option shown.

Enter and confirm the phone number.

The connection is set up. A special icon, the forwarding icon and the advisory "**Lower IL**" are shown on the display.

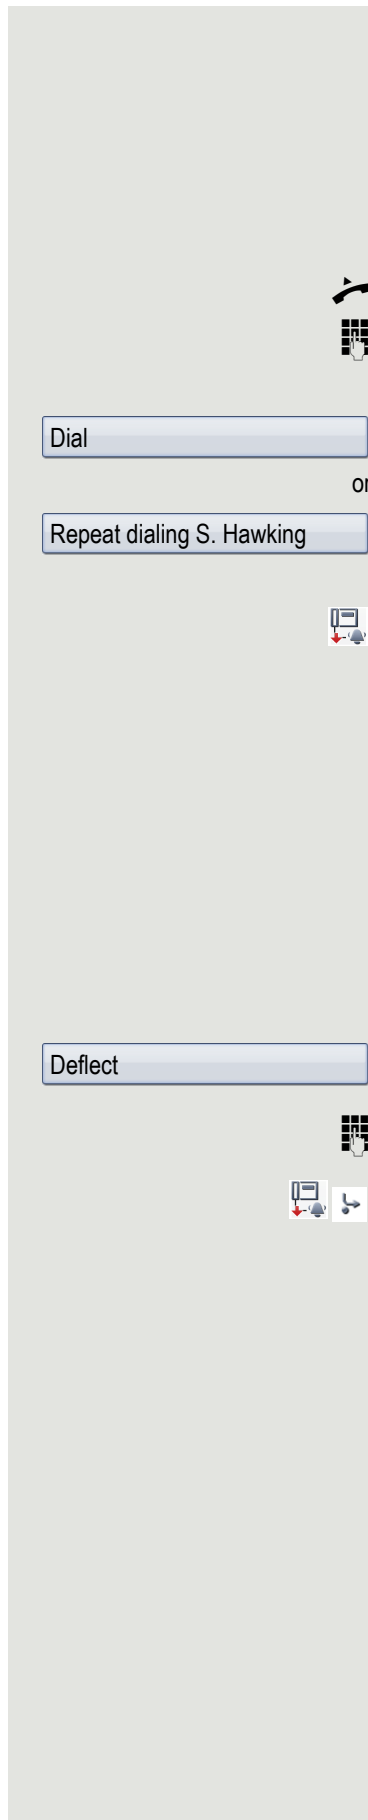

1. Please note the information in relation to the call journal on → Page 68

## Conducting a call with a lower Impact Level

If you have answered a call with a lower IL, this will be documented on the display.

### Conducting a call

You are connected with the partner from a lower Impact Level (IL) zone. The advisory "**Lower IL**" is displayed in the second call line.

### Placing a call on hold

If the held call has the status of a lower IL, the advisory "**Lower IL**" will also be displayed.

### Conference

You are connected with two or more partners in a conference call. At least one of the partners belongs to the lower Impact Level (IL) zone. The advisory "**Lower IL**" is displayed in the "Conference" line.

### Reconnecting

You have ended a consultation call for example by replacing the handset. The held partner is awaiting retrieval

If the held call has the status of a lower IL, the advisory "**Lower IL**" will also be displayed.

Confirm the option shown. You are reconnected with the first partner.

### IL alarm

If you have activated a IL alarm (→ Page 231), you will see an advisory on the display and a defined ringtone rings if the IL changes from a higher to a lower IL. This can happen for example when a call is picked up.



Retrieve held call

# Individual phone configuration


## Display

### Adjusting the display to a comfortable reading angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

## Appearance

Select your preferred appearance for the menu display here.

 For sample display themes, see → Page 27.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Select and confirm the required colour in the context menu<sup>1</sup>.

Select and confirm the option shown.



1. The phone displays the current setting.

## Lamp brightness for TouchSlider

Adjust the brightness of the TouchSlider → Page 19 by choosing one of the six settings available.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Confirm the option shown.


Set the contrast (freely adjustable).

or

Set the contrast in stages.

Confirm the option shown.

Select and confirm the option shown.

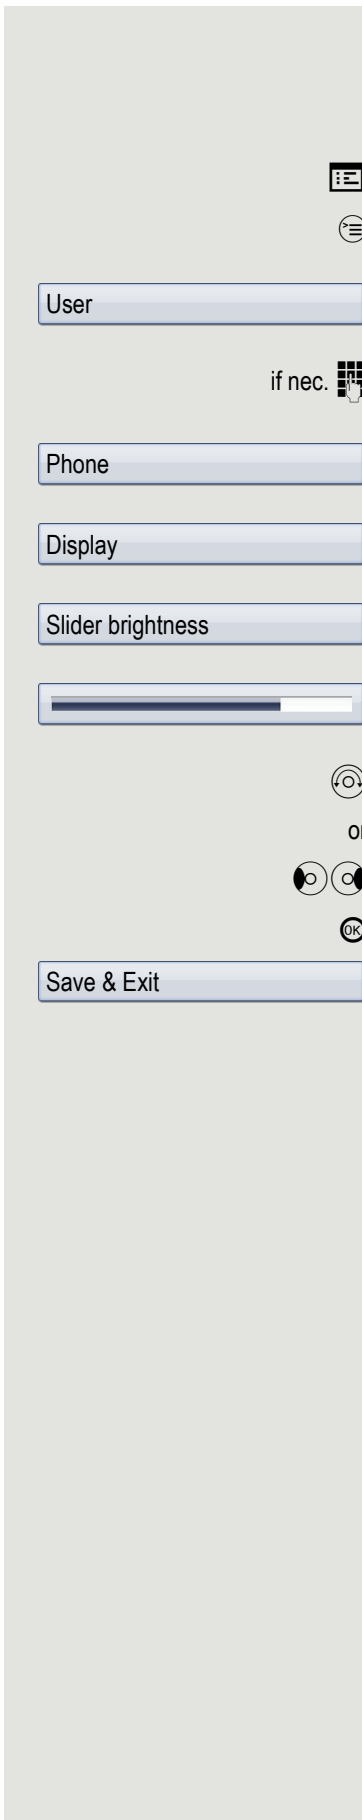



## Set the sensitivity of the TouchGuide

Adjust the sensitivity of the TouchGuide → Page 21 by choosing one of the four settings available.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

The sensitivity bar is activated.


By sliding

or

Pressing, you can choose one of four levels for the sensitivity.

Confirm the option shown.


Select and confirm the option shown.

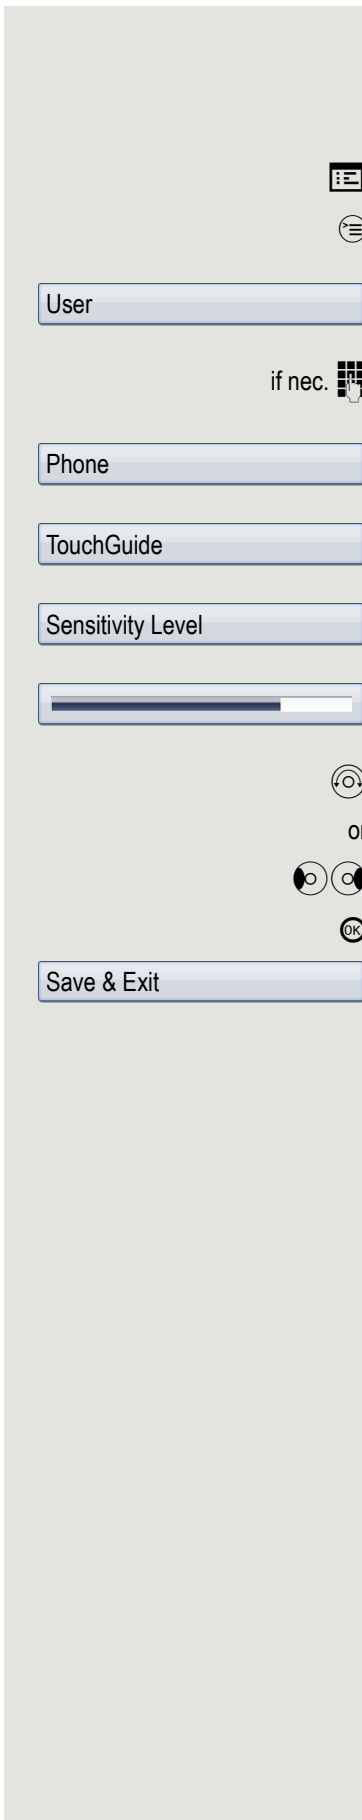



## Screensaver

Activate a screensaver for the telephone idle state.

 Your administrator can set a time of between two and eight hours defining how long the phone should be idle before display backlighting deactivates completely.

You can also configure this setting via the WBM interface → Page 265.

### Activating the screensaver

**Prerequisite:** Your administrator have loaded pictures to the OpenStage.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Select and confirm the option shown in the context menu<sup>1</sup>.

Select and confirm the option shown.

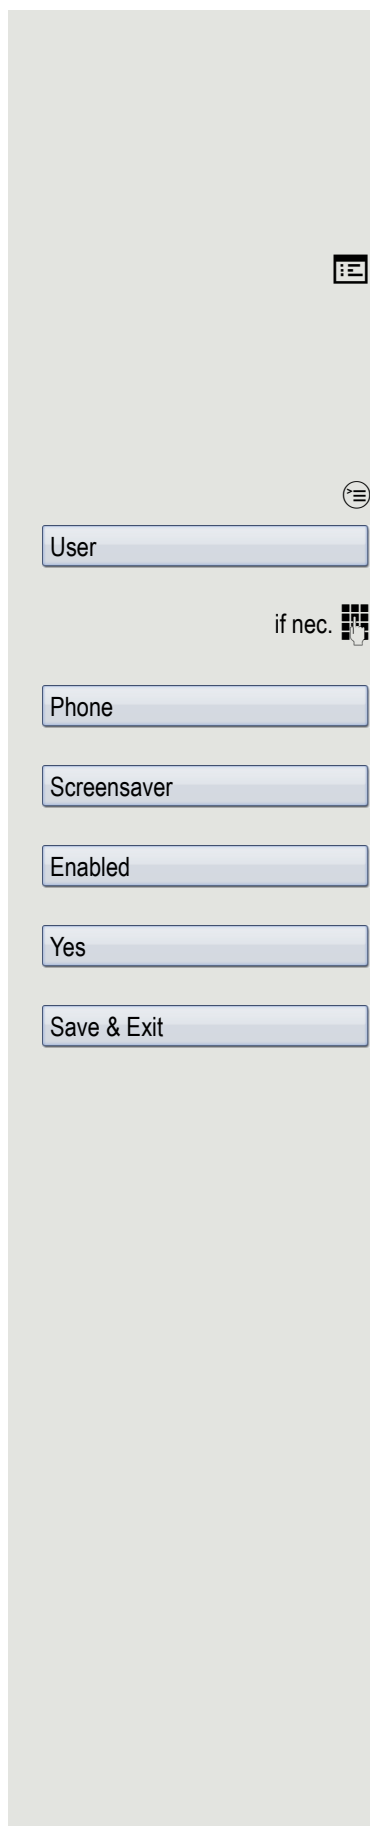

1. The phone displays the current setting.

## Automatic screensaver activation

Set how long OpenStage should be idle before the screensaver automatically activates.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select

Confirm<sup>1</sup>.

If necessary, delete the current entry.

Enter the required value in minutes → Page 28.

Confirm the option shown.

Select and confirm the option shown.



1. The phone displays the current setting.

## Setting the fade time for the screensaver

Set the intervals at which the screensaver images change here. The following fade times are possible:

- 5 seconds
- 10 seconds
- 20 seconds
- 30 seconds
- 60 seconds

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the waiting time in the context menu<sup>1</sup>.

Select and confirm the option shown.

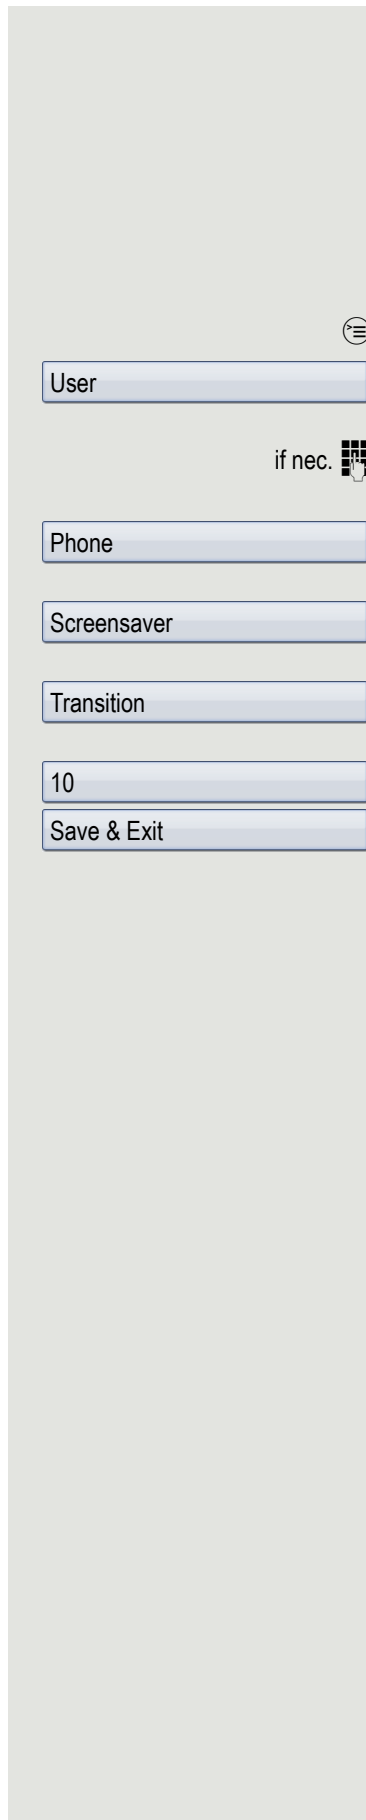

1. The phone displays the current setting.

## Date and time

You can choose the date and time display here.

You can also configure this setting via the WBM interface → Page 265.

### Setting the time

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Confirm the option shown.

Select and confirm the option shown.

Enter and confirm the time.

Select and confirm the option shown.

### Setting the date

Press the key shown until the "Settings" tab is active.

Confirm the option shown.


Enter and confirm the user password.

Confirm the option shown.

Select and confirm the option shown.

Enter and confirm the date.

Select and confirm the option shown.

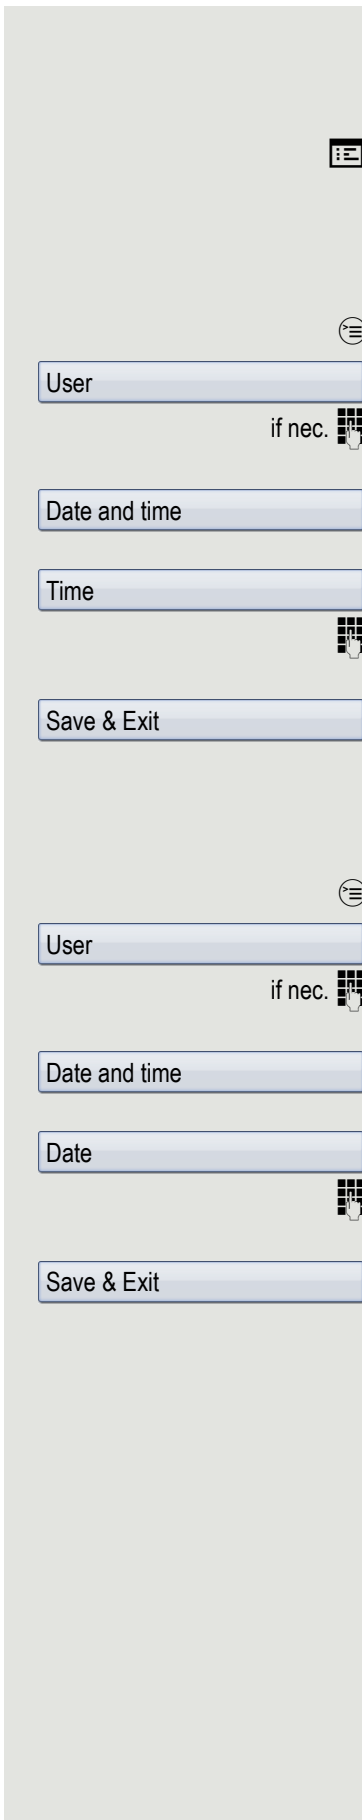

The screenshot shows a vertical list of configuration options on a light gray background. At the top right, there are two icons: a list icon and a settings icon. Below these are two input fields: 'User' and 'Locality'. To the right of the 'User' field is the text 'if nec.' followed by a keyboard icon. Below 'Locality' is another input field labeled 'Time format'. Underneath that is a selection box containing '24 Stunden'. At the bottom of this section is a 'Save & Exit' button.

## Time display format

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the time format (12- or 24-hour display) in the context menu.

Select and confirm the option shown.

## Date display format

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the format you want.

Select and confirm the option shown.

## Setting daylight saving time

You can also configure this setting via the WBM interface → Page 265.

**Prerequisite:** Auto DST is deactivated → Page 217.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

## Setting the difference between daylight saving and standard time

**Prerequisite:** Auto DST is deactivated → Page 217.

Enter the difference to be used for daylight saving time.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.


Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Enter and confirm the difference between daylight and standard time in minutes.

Select and confirm the option shown.

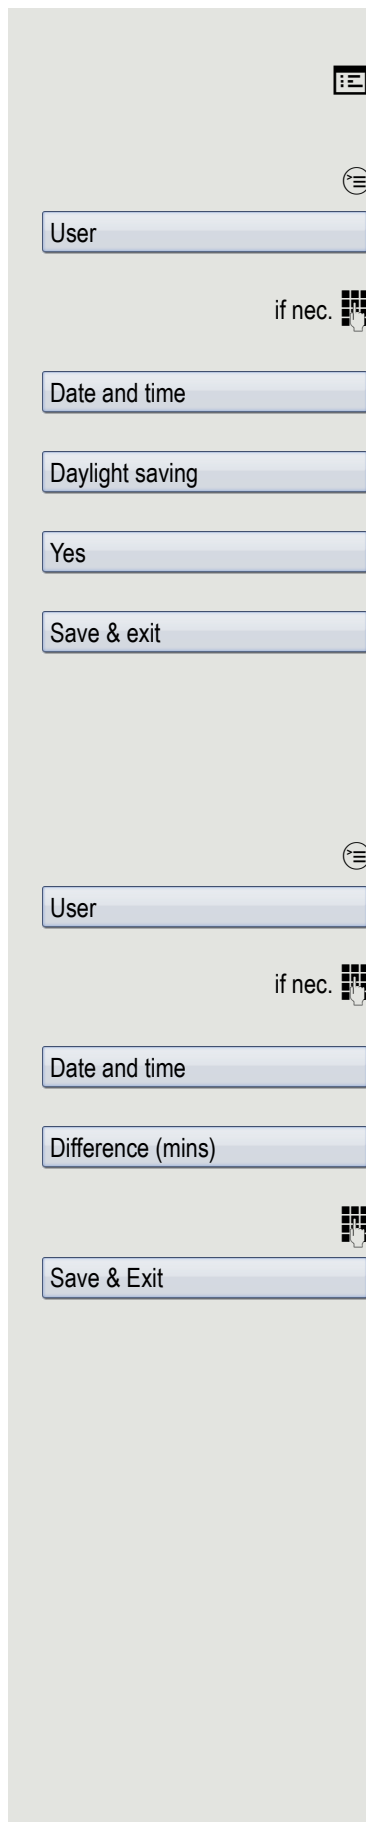



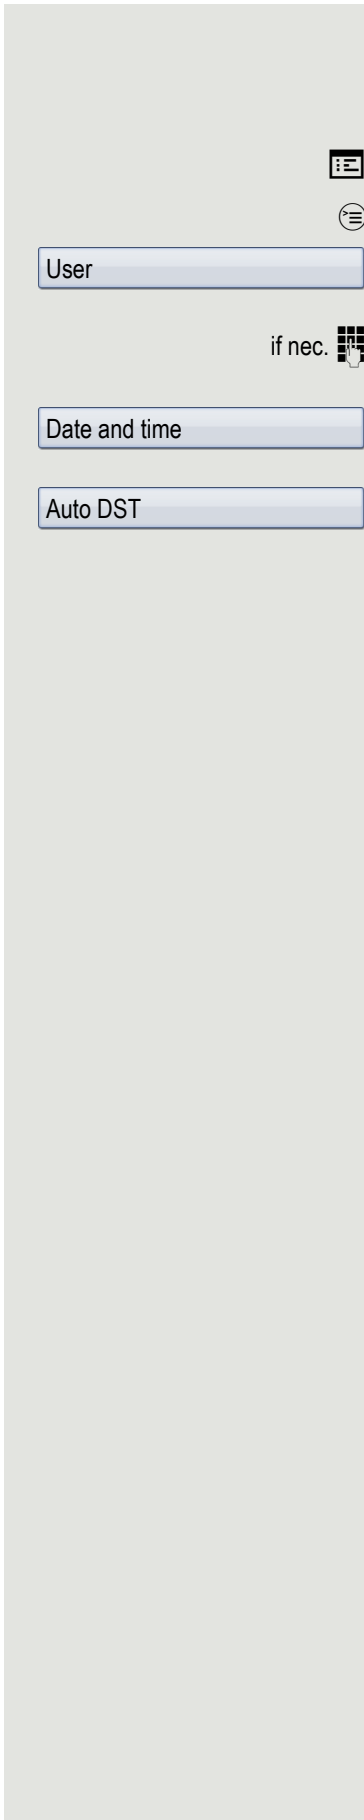

## Automatic daylight saving time

The **Auto DST** setting is provided for information purposes and can only be changed by your administrator.

You can also access this information via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


You can manually set the daylight saving time if a **No** entered here → Page 216.

## Audio

Optimise the audio settings on your OpenStage for your environment and according to your personal requirements.

### Volumes

Set the volume here, for instance, for the loudspeaker, handset or headset.

 Use the TouchSlider to adjust the current volume settings → Page 19.

You can preset different volumes for the following microphones and signals in eight levels:

- Loudspeaker
- Ringer
- Handset
- Headset
- Handsfree
- Rollover

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the volume you want to adjust (for example, "Handset").

Confirm the option shown.


Set the volume (freely adjustable).

Set the volume in stages.

While setting the volume, you will hear corresponding audio feedback.

Confirm the option shown.

Select and confirm the option shown.

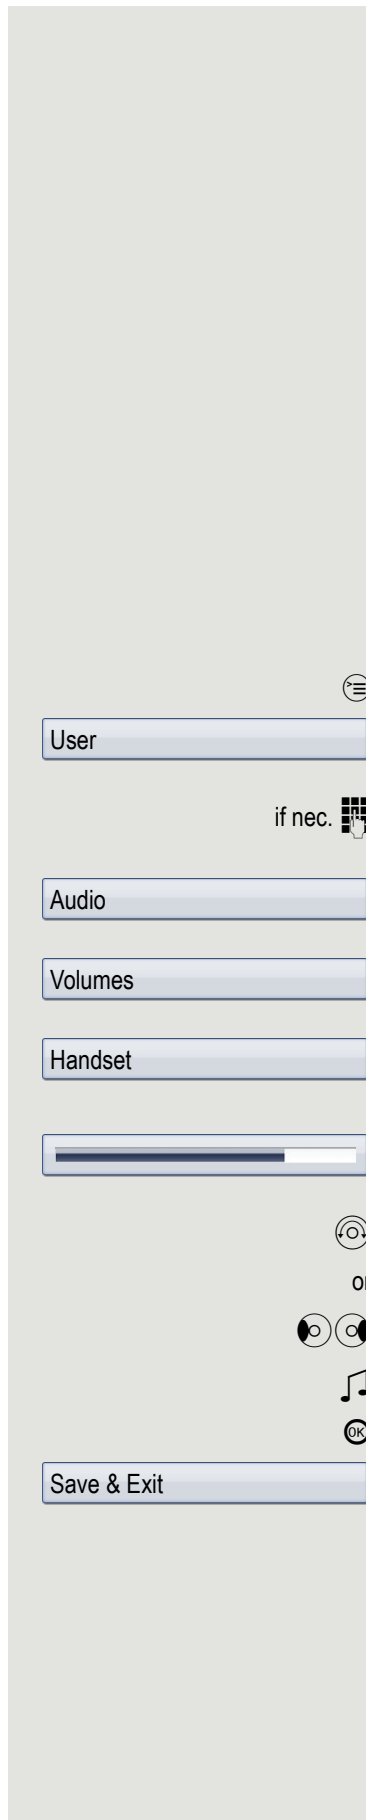

## Settings

### Room character

To ensure that the other party can hear you properly in speakerphone mode, you can adjust the phone to the room acoustics by choosing one of the following room character conditions:

- Normal
- Echoing
- Muffled

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Select and confirm the room character<sup>1</sup> in the context menu (e.g. normal).

Select and confirm the option shown.

The following values are available in the list:

- 1.0 sec. On, 4.0 sec. Off
- 1.0 sec. On, 2.0 sec. Off
- 0.7 sec. On, 0.7 sec. Off

Select and confirm the option shown.

### Ringtone

Select your preferred ringtone from the available audio files. If no individual audio files are available the "pattern" ringtone is preset. To upload your own files in ".mp3" or ".wav" format, please contact your administrator.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.


Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

1. The phone displays the current setting.

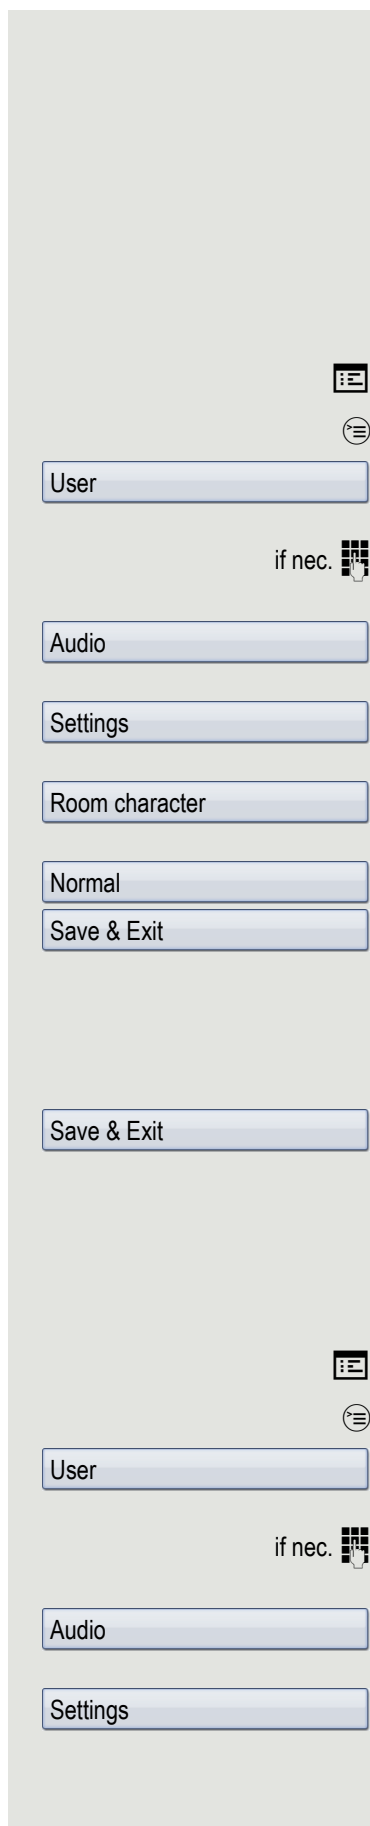

Ringer file

ABC.mp3


Save & Exit

Select the option shown.

Select and confirm the required ringtone file<sup>1</sup> or "pattern." You will immediately hear the associated ringer melody. Confirm the selected ringtone file.

Confirm the selected ringtone to use it or try a different ringtone.

1. The phone displays the current setting.

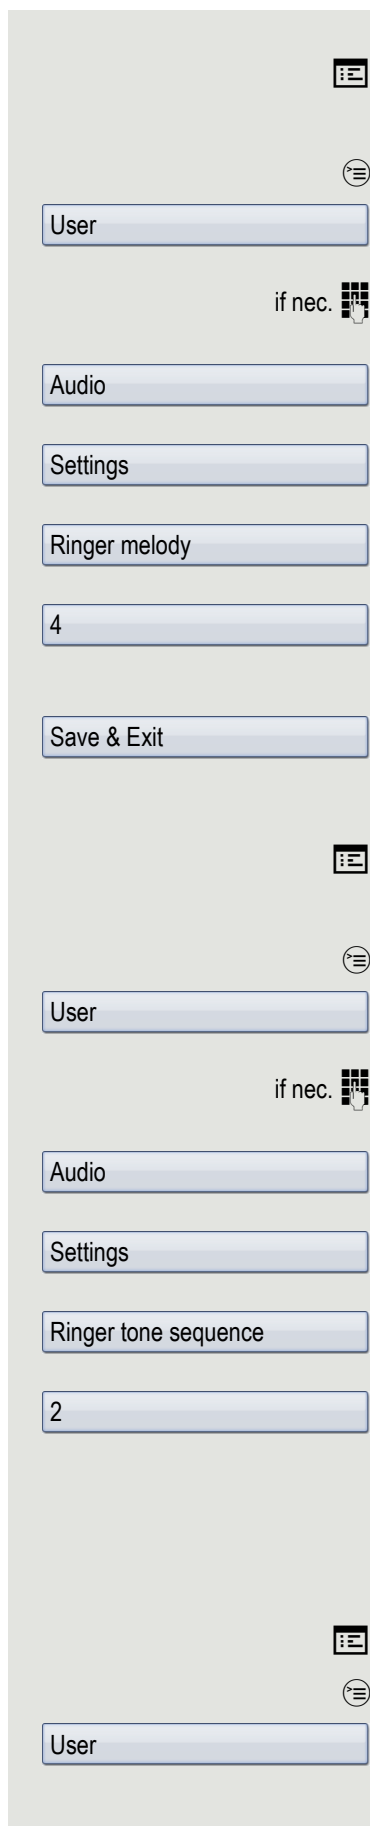

### Pattern melody

You can also configure this setting via the WBM interface → Page 265.

**Prerequisite:** You have chosen the "pattern" ringtone, see → Page 219.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the option shown.

Select the required pattern melody<sup>1</sup> between 1 and 8 (e. g. **4**) in the context menu. You will immediately hear the corresponding Ringer melody. Confirm the selected Ringer melody.

Select and confirm the option shown.

### Pattern sequence

You can also configure this setting via the WBM interface → Page 265.

**Prerequisite:** You have chosen the "pattern" ringtone, see → Page 219.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select

Select the required Ringer tone sequence between 1 and 3 (e. g. **2**) in the context menu. You will immediately hear the set Ringer melody with the selected Ringer tone sequence. Confirm the selected setting.

### Country setting for speakerphone mode





Enter the country setting you prefer for speakerphone mode here → Page 56.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

1. The phone displays the current setting.

if nec. 	Enter and confirm the user password.
Audio	Select and confirm the option shown.
Settings	Select and confirm the option shown.
Open listening	Select the option shown.
Standard mode	Select and confirm the setting you want <sup>1</sup> in the context menu ("standard mode" or "US mode").
Save & Exit	Select and confirm the option shown.
	<b>Setting headset port use</b>
	Here you set whether you are using a wired or cordless DECT headset.
User	You can also configure this setting via the WBM interface → Page 265.
if nec. 	Press the key shown until the "Settings" tab is active.
Audio	Confirm the option shown.
Settings	Enter and confirm the user password.
Headset port	Select and confirm the option shown.
Wired headset	Select and confirm the option shown.
Save & Exit	Select the option shown.
	From the following setting <sup>2</sup> select and confirm the option shown in the context menu.
	<ul style="list-style-type: none"> <li>• Wired headset</li> <li>• Wireless headset</li> <li>• Conference phone</li> </ul>
	Select and confirm the option shown.

1. The phone displays the current setting.

2. The phone displays the current setting.

## Special ringtones

You can assign a special, individual ringtone to the following incoming calls and events in order to differentiate more easily between them:

- Internal
- External
- Recall (callback)
- Emergency call
- Special 1
- Special 2
- Special 3

**Prerequisite:** administrator have activated the special ringtones.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

The setting is made in the same way for all four types.


The setting for "Internal call" is described below by way of example.

Select the option shown.

"Yes" indicates that the special ringtone has been activated.

Select and confirm the option shown.

Select the ringtone file<sup>1</sup> or "pattern" you want in the context menu. You will immediately hear the associated ringer melody. Confirm the selected ringtone file.

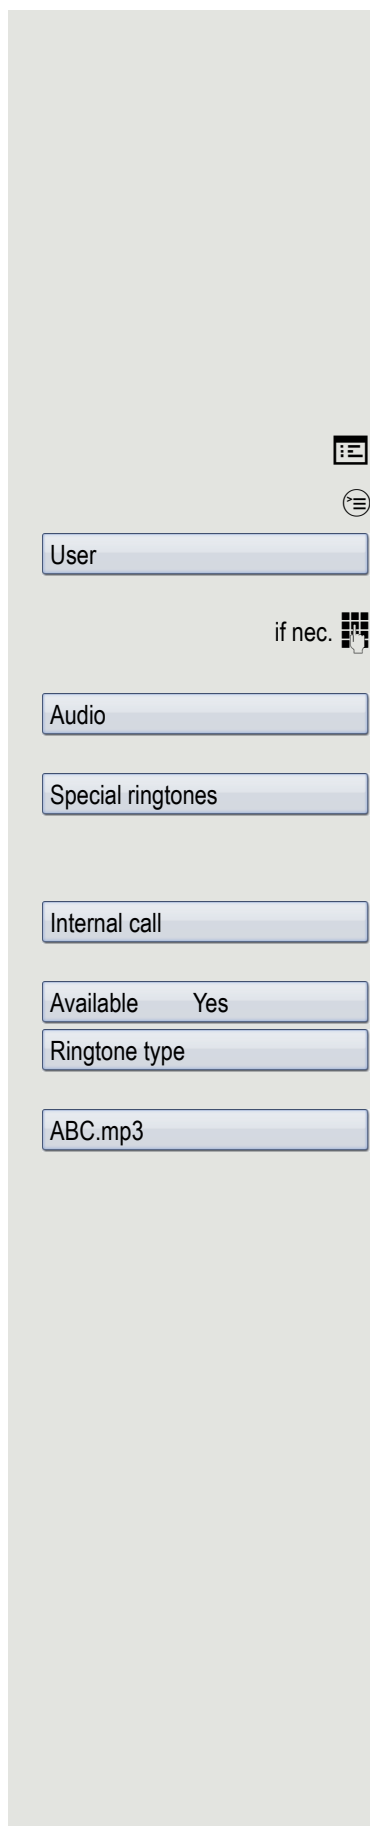

1. The phone displays the current setting

Ringer melody

4

Ringer tone sequence

2

Save & Exit



### Settings for the "Pattern" ringtone type

If you selected "pattern" as the ringtone type, you can make further settings for the pattern melody and pattern sequence:

Select and confirm the option shown.

Select the required pattern melody in the context menu between 1 and 8 (e.g. **4**). You will immediately hear the corresponding Ringer melody. Confirm the selected Ringer melody.

Select and confirm the option shown.

Select the required Ringer tone sequence in the context menu between 1 and 3 (e.g. **2**). You will immediately hear the set Ringer melody with the selected Ringer tone sequence. Confirm the selected setting.

Select and confirm the option shown.

### Activating/deactivating the ringer

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → Page 27.

Hold down the key shown.

### Adjusting the volume during a call

You are conducting a call.

Set the volume using the TouchSlider → Page 19.



## Nonsecure voice communication tone and message

Use this option to activate an alert tone that you hear when a secure voice connection with the party you are currently talking to ceases to be secure. The message "Nonsecure connection" also appears.

**Prerequisite:** Secure connection setup is the preference set by your administrator.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

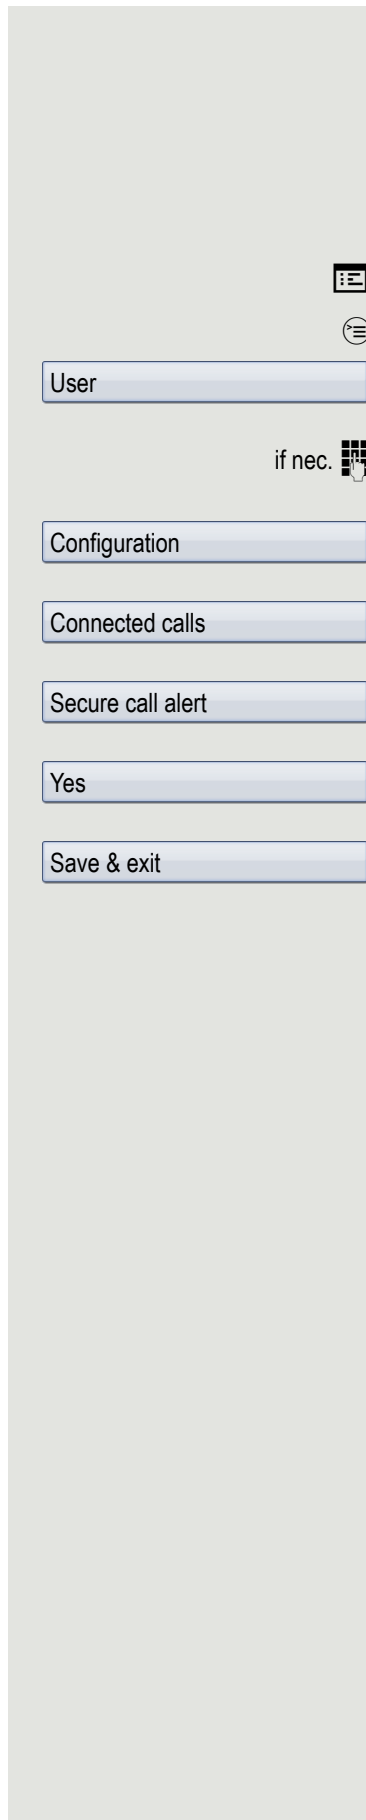

if nec. 

User

Phone

Key click

Lautstärke

Medium

Keys

Keypad only

or

All keys

Save & Exit

## Key click

You can configure whether a key click should be audible when a key is pressed. You can also decide whether this should apply for all keys or only for the keys on the keypad. In addition, you can adjust the click volume or disable the sound.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

### Adjusting the volume for the Key click

Select and confirm the option shown.

For instance, select and confirm a medium volume level. You can also select one of the following three options:

- Low
- High
- Off (for no click)

### Key selection

Select and confirm the option shown.

Select and confirm if the setting is only to apply for the character input keys.

Select and confirm the option shown for all keys.

Select and confirm the option shown.

## Setting the language and country

### Display language

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.


Enter and confirm the user password.

Select and confirm the option shown.

Select the option shown.

Select and confirm the language<sup>1</sup> in the context menu.

Select and confirm the option shown.

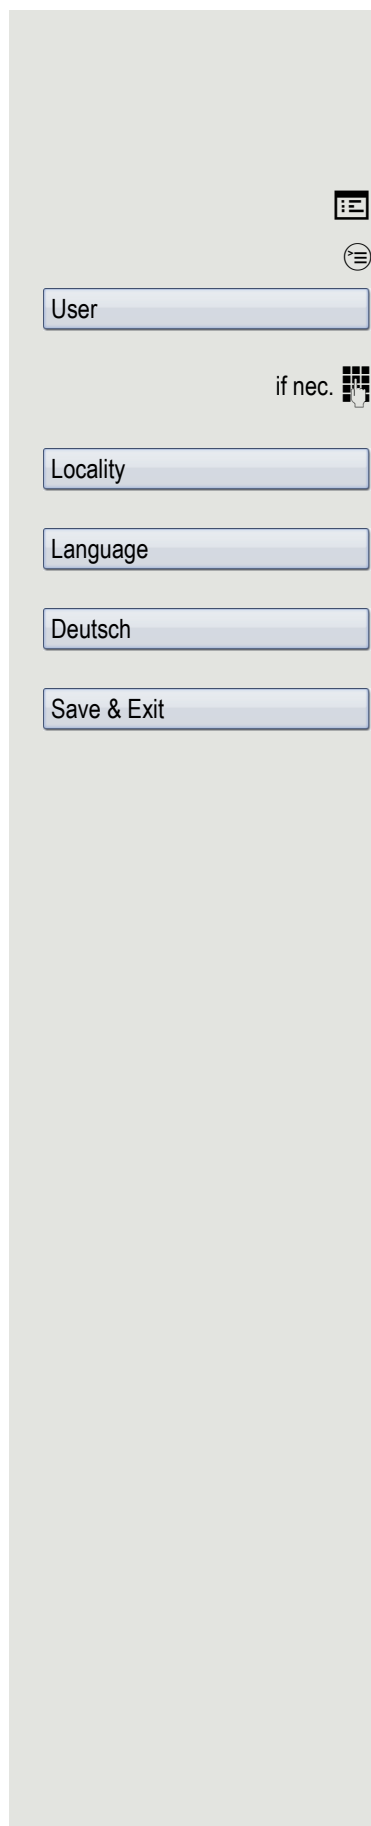

1. The phone displays the current setting.

You may choose from the following languages:

1. Bahasa Indonesia
2. Bahasa Malaysia
3. Brasileiro
4. Català
5. Čeština
6. Cymraeg
7. Dansk
8. Deutsch
9. Eesti keel
10. English
11. English(US)
12. Español
13. Français
14. Hrvatski
15. Italiano
16. Latviešu Valoda
17. Lietuvių Kalba
18. Magyar
19. Nederlands
20. Norsk
21. Polski
22. Português
23. Română
24. Slovenčina
25. Slovenski Jezik
26. Srpski Jezik
27. Suomi
28. Svenska
29. Türkçe
30. Ελληνικά
31. Български
32. Македонски Јазик
33. Русский
34. Српски Језик
35. 中文

The screenshot shows a vertical list of settings options on a phone's interface. At the top, there are two icons: a list icon and a menu icon. Below these are several input fields and buttons:

- A text input field labeled "User".
- A button labeled "if nec." with a small icon.
- A text input field labeled "Locality".
- A text input field labeled "Country".
- A text input field labeled "Germany".
- A button labeled "Save & Exit".

## Country-specific setting

Adapt your phone settings to suit the country-specific conditions (for example, transmission parameters).

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select the option shown.


Select and confirm the country<sup>1</sup> in the context menu.

Select and confirm the option shown.

### You may choose from the following countries:

1. Argentinien	AR	20.Luxembourg	LU
2. Australia	AT	21.Mexico	MX
3. Austria	AU	22.Netherlands	NL
4. Belgium	BE	23.New Zealand	NZ
5. Brazil	BR	24.Norway	NO
6. Canada	CA	25.Poland	PL
7. China	CN	26.Portugal	PT
8. Chile	CL	27.Russian Federation	RU
9. Croatia	HR	28.Singapore	SG
10.Czech Republic	CZ	29.Slovakia	SK
11.Denmark	DK	30.South Africa	ZA
12.Finland	FI	31.Spain	ES
13.France	FR	32.Sweden	SE
14.Germany	DE	33.Switzerland	CH
15.Hungary	HU	34.Thailand	TH
16.India	IN	35.Turkey	TR
17.Ireland	IE	36.United Kingdom	GB
18.Italy	IT	37.United States	US
19.Japan	JP	38.Vietnam	VN

1. The phone displays the current setting.

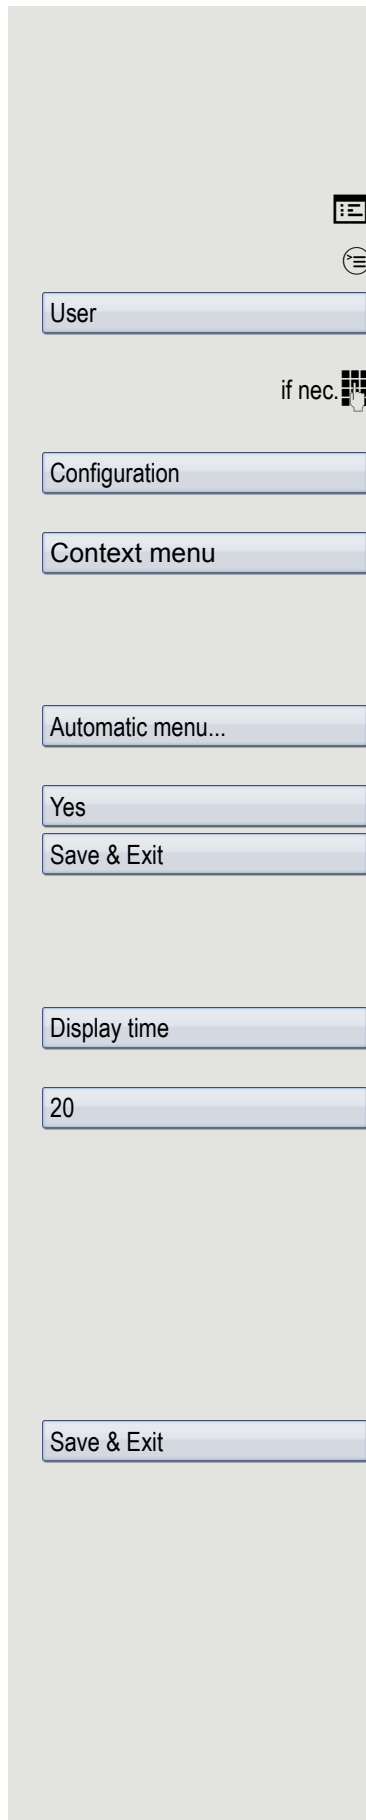

## Context menu

After a connection is set up, a context menu appears with dependent functions. You can activate/deactivate the automatic display and can also set how long the context menu should be displayed.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

## Activating/deactivating automatic menu display

Select and confirm the option shown.

In the context menu select and confirm to activate automatic menu display.

Select and confirm the option shown.

## Setting the display time

Select and confirm the option shown.

In the context menu select and confirm a value from the following options:

- 5
- 10
- 20
- 30
- 60
- 120
- Unlimited display

Select and confirm the option shown.

## Alarm on changing the Impact Level

If a call switches from a higher to a lower impact level (IL), this will be indicated by the pop-up text **Lower IL change**.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown in the context menu. The advisory function is activated.

Select and confirm the option shown.

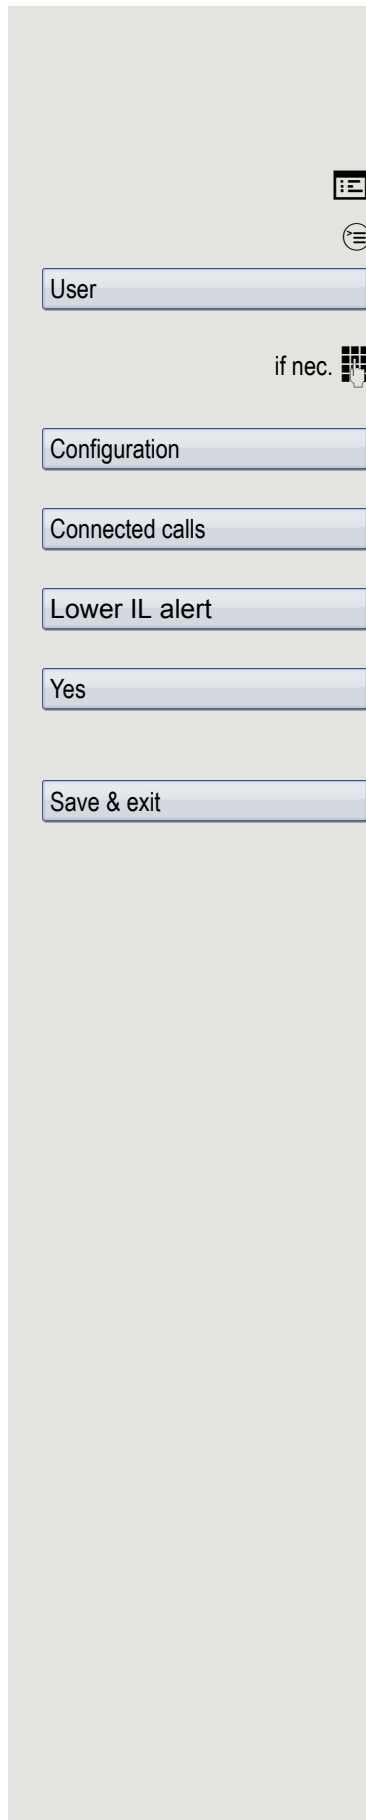

## Bluetooth

### Activating and deactivating Bluetooth



Prerequisite: The Bluetooth function was activated by the administrator for your phone.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.  
The Bluetooth settings dialog is selected.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth function is activated and is now available.

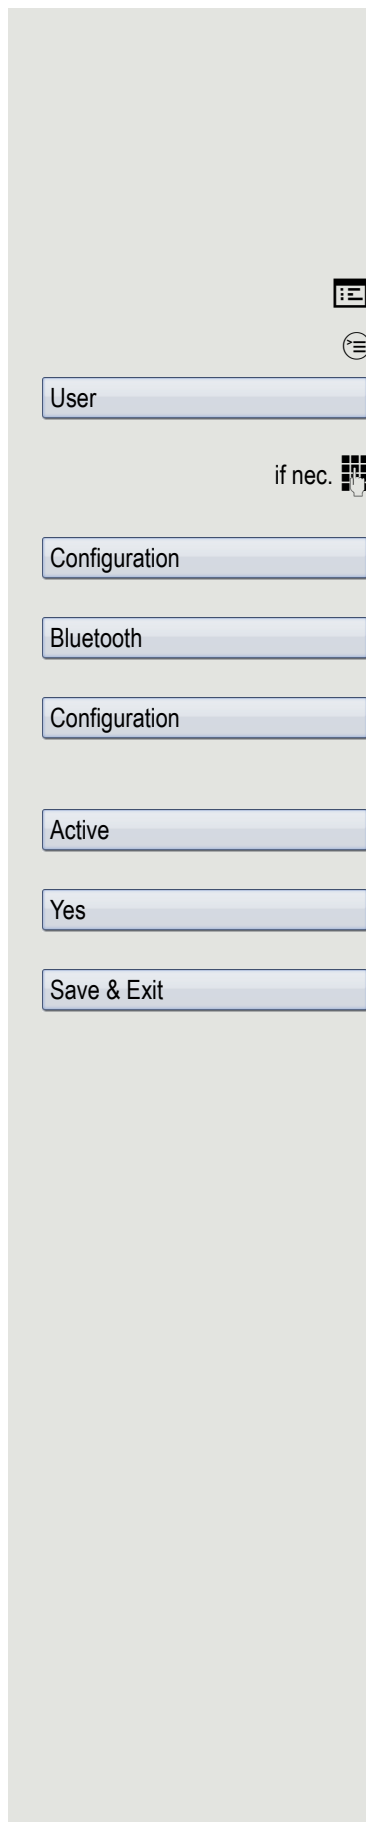



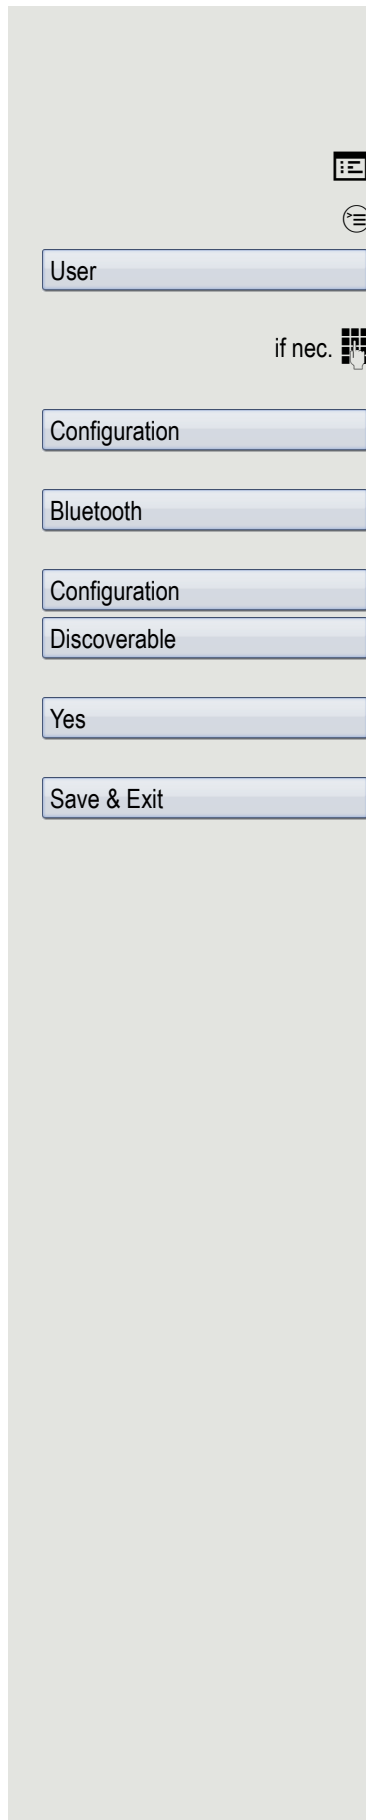

## Open Bluetooth discoverability

You can use this function to set whether or not your OpenStage should be transparent to other Bluetooth devices when operating in Bluetooth mode.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.


Select and confirm the option shown. The Bluetooth settings dialog is selected.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth function is not transparent to other devices that are not yet connected to your OpenStage.

---


 For security reasons, it is recommended that you **only activate** the "Discoverable" function for Bluetooth when new Bluetooth devices are to be connected. A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

---

## Bluetooth name for your OpenStage

Here you can determine which name your OpenStage should use to register at other Bluetooth devices.

You can also configure this setting via the WBM interface → Page 265.

 By factory default, the Bluetooth name is: **OpenStage [MAC address of your telephone]**.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth settings dialog is selected.

Select and confirm the option shown.

Specify and confirm the required name.


Select and confirm the option shown.

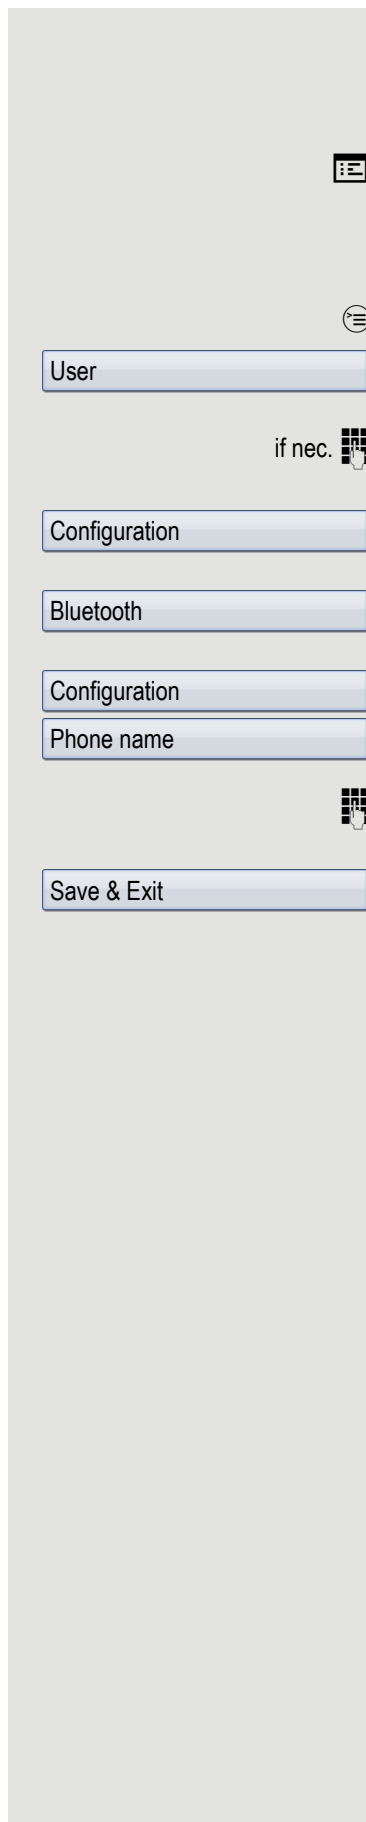

## Configuring pairing settings

Pairing is used for checking the access authorisation of a Bluetooth device in a Bluetooth network. During the pairing process, a 128-bit connection key is created. This is used for subsequent identification. You can specify whether pairing should be **Automatic**, occur after a **Prompt** or **not** at all.

You can also configure this setting via the WBM interface → Page 265.

 Pairing is only performed the first time contact is established between a Bluetooth device and your OpenStage. If the Bluetooth device is successfully paired, no further access authorisation checks are necessary. Instead, each subsequent check uses the previously created connection key.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth settings dialog is selected.


Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

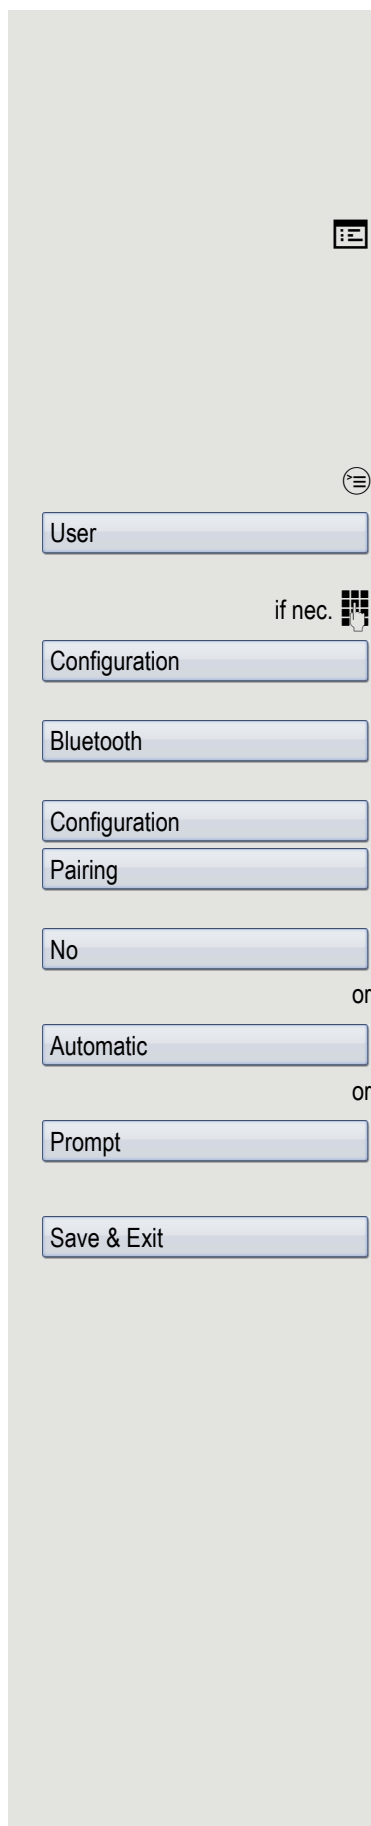

## Entering the pairing PIN

The personal identification number (PIN) contains at least four alphanumeric characters. This PIN is used for securely pairing Bluetooth devices with your OpenStage.

You can also configure this setting via the WBM interface → Page 265.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth settings dialog is selected.

Select and confirm the option shown.

Enter and confirm the PIN.

Select and confirm the option shown. The pairing function is now activated.

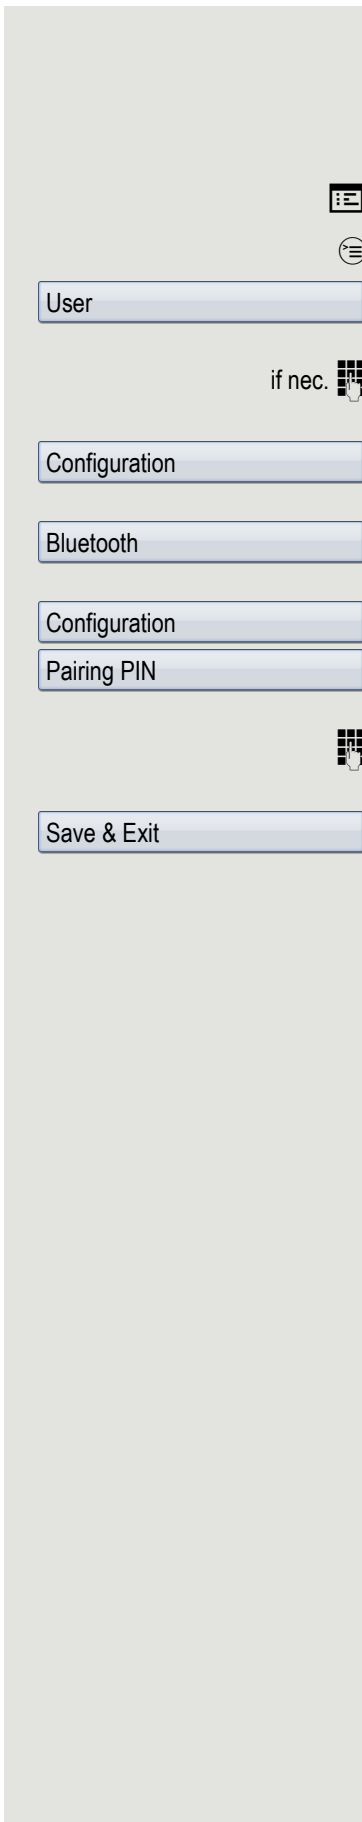

## Managing Bluetooth devices

The following functions are available in the Bluetooth pairing manager:

- Add a Bluetooth device
- Delete Bluetooth device list
- Connect or disconnect paired Bluetooth devices
- Remove single Bluetooth devices from the list
- Rename Bluetooth devices in the list

You can also configure this setting via the WBM interface → Page 265.

### Adding a Bluetooth device

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The **Bluetooth pairing manager** dialog is selected.

Select.


Select and confirm the option shown in the context menu. The system searches for devices.

If at least one new device is detected, select and confirm the relevant Bluetooth device.

Enter and confirm the specified PIN → Page 236. The message "Pairing in progress" is displayed.

If the pairing request is confirmed on the corresponding Bluetooth device and the password entered, the pairing is performed and the device is added to the list.

Your OpenStage is now "paired" with the Bluetooth device, but not yet connected → Page 239.

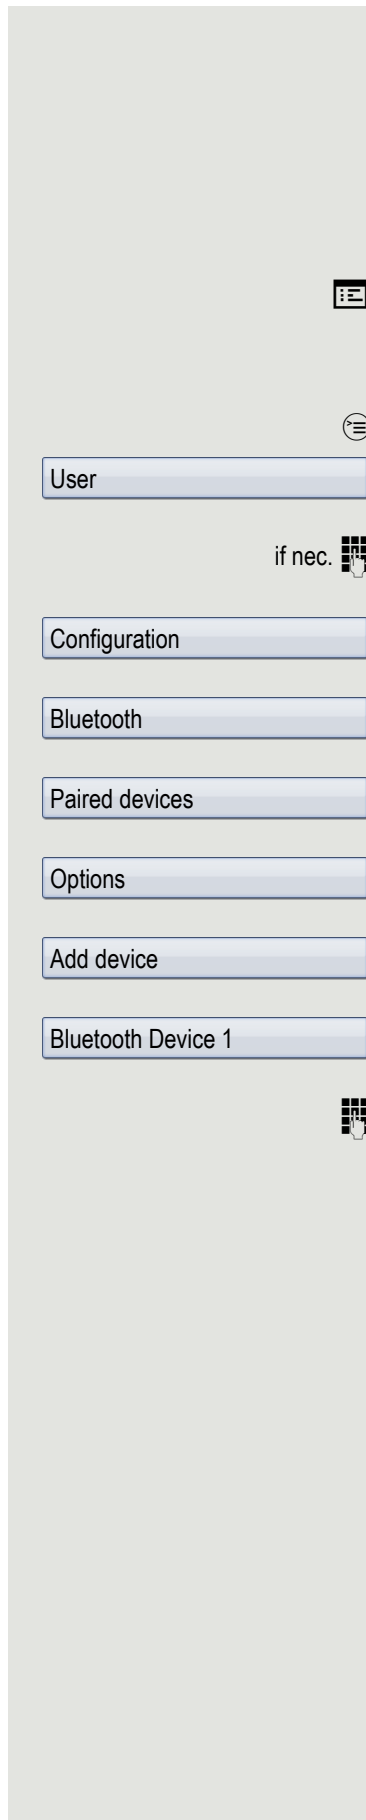

### Deleting all Bluetooth devices from the list

You can delete the whole list if, for example, the devices are no longer in the area.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.


Select and confirm the option shown. The **Bluetooth pairing manager** dialog is selected.


Select.

Select and confirm the option shown in the context menu.

"Delete all devices from pairing list?"

Confirm, if you wish to delete all devices.

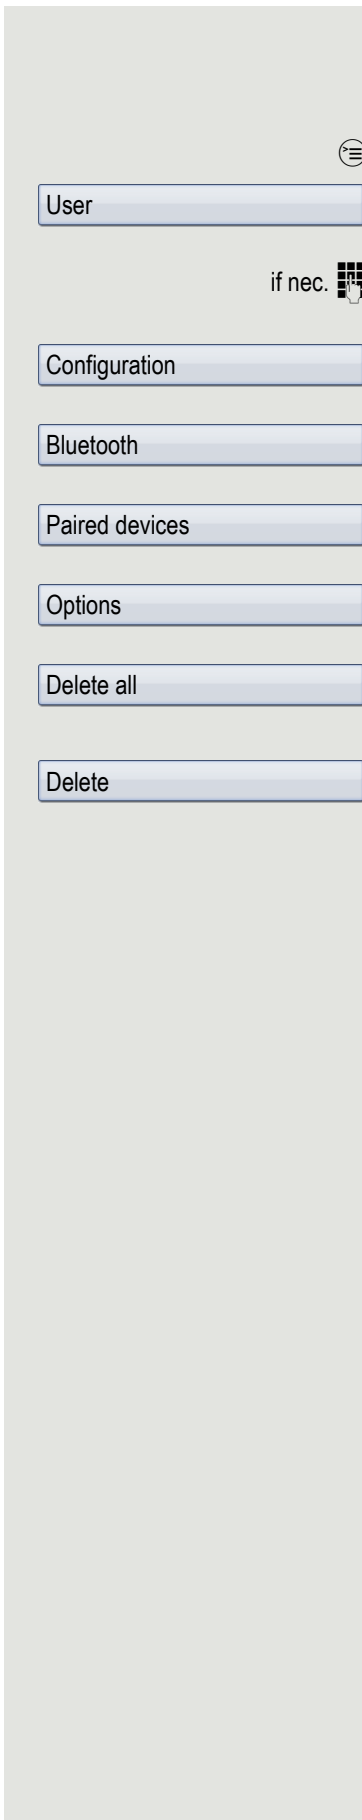

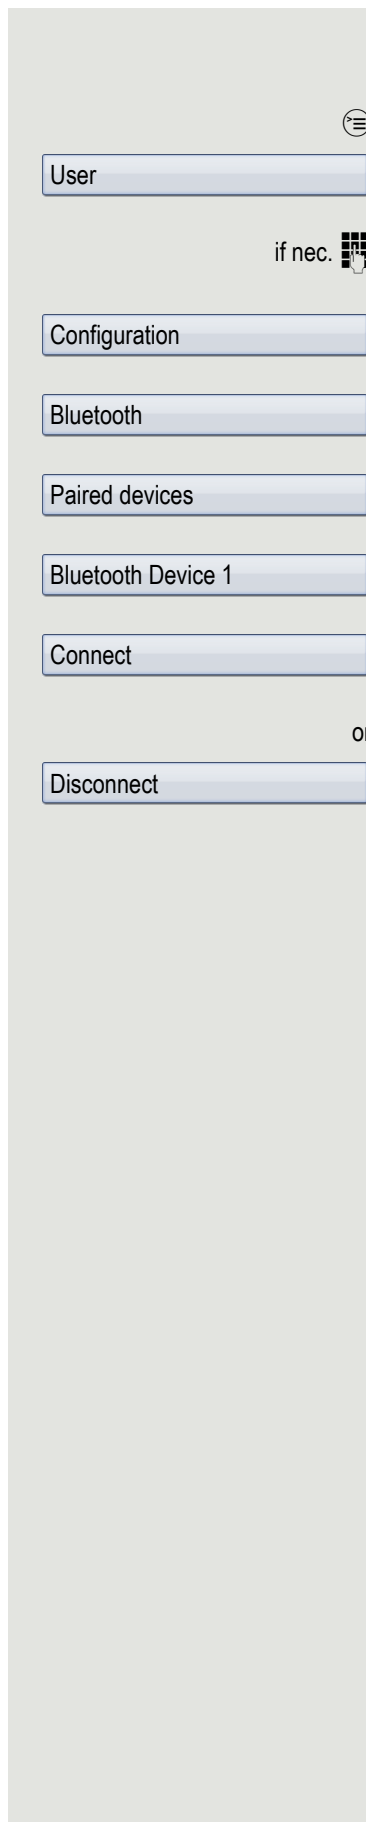

## Connecting/disconnecting a Bluetooth device

**Prerequisite:** At least one Bluetooth device is listed.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The **Bluetooth pairing manager** dialog is selected.

Select the relevant Bluetooth device.

Select and confirm the option shown in the context menu. The connection is established immediately, if the relevant Bluetooth device is reachable.

Select and confirm the option shown in the context menu.

### Deleting a Bluetooth device from the list

You can delete a single Bluetooth device from the list if, for example, it will be away from the area for an indefinite period.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The **Bluetooth pairing manager** dialog is selected.

Select the relevant Bluetooth device.

Select and confirm the option shown in the context menu.

Confirm, if you wish to delete the device.

### Renaming a Bluetooth device in the list

A Bluetooth device is entered in the list with the name set in the device. This is often the device type. You can change this logon name.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth pairing manager dialog is selected.


Select the relevant Bluetooth device.

Select and confirm the option shown in the context menu.

Enter and confirm the new name.

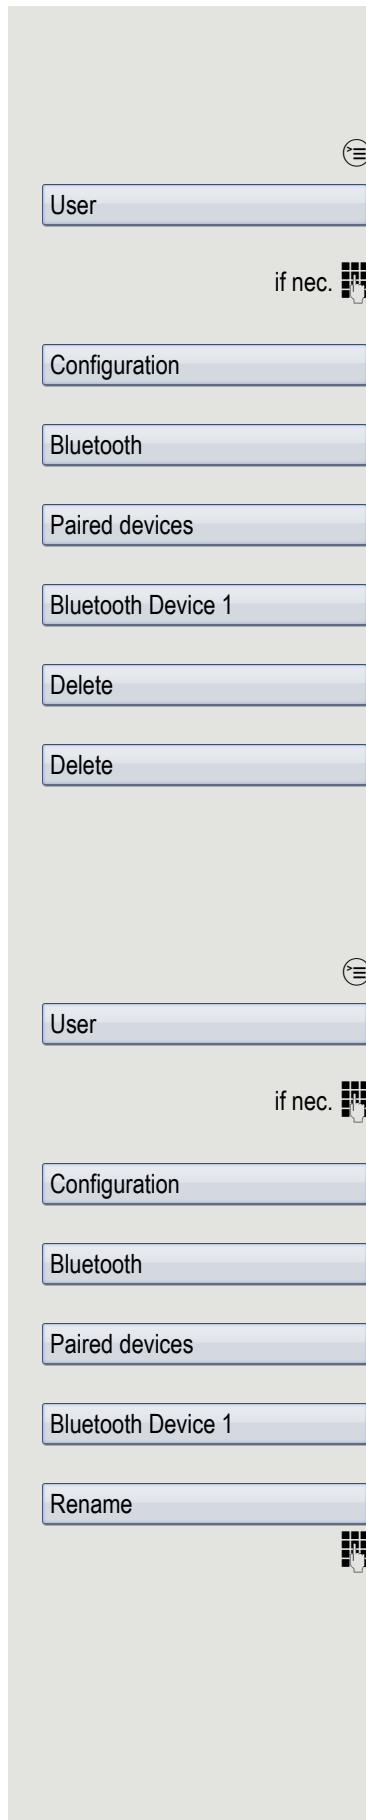



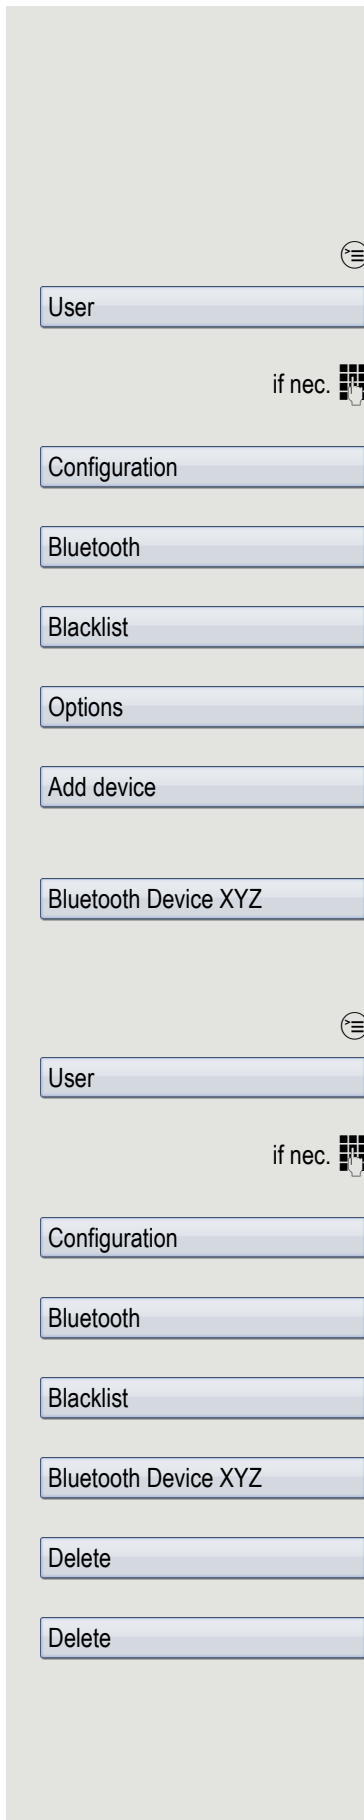

## Blacklist for Bluetooth devices

The blacklist contains the Bluetooth devices, for which a connection setup attempt should be rejected by OpenStage. The connection will only be allowed if the setup attempt comes from OpenStage.

### Adding a Bluetooth device

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth blacklist editor dialog is selected.

Select.

Select and confirm the option shown in the context menu. The system searches for devices. The detectable Bluetooth devices in your area are listed. Select a device, for which you wish to block connection.

Select and confirm the relevant device to add it to the list.

### Removing a Bluetooth device from the blacklist

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The Bluetooth blacklist editor dialog is selected.

Select the relevant Bluetooth device.

Select and confirm the option shown in the context menu.

Confirm, if you wish to remove this device from the list.

## Network information


This information overview in the user area of the service menu provides you with information about the IP address or name of the phone and the HTML address of the WBM interface. It also provides real-time data about the network activity of the phone.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown. The following overview opens:

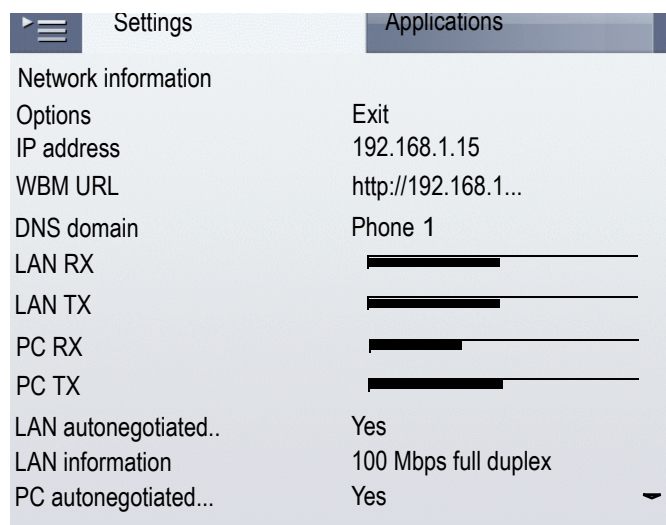


Settings	Applications
Network information	
Options	Exit
IP address	192.168.1.15
WBM URL	http://192.168.1...
DNS domain	Phone 1
LAN RX	██████████
LAN TX	██████████
PC RX	██████████
PC TX	██████████
LAN autonegotiated..	Yes
LAN information	100 Mbps full duplex
PC autonegotiated...	Yes

**IP Address:** Displays the IP address or name that was assigned to the phone in the network.

**WBM URL:** HTTP address of the WBM interface. This address is specified in the address line of the Internet browser and is used to call the WBM interface of the phone in the browser.

**DNS domain:** The administrator can also assign the phone to the IP address of a DNS domain (e. g. `http://mein-openStage.phone/`).

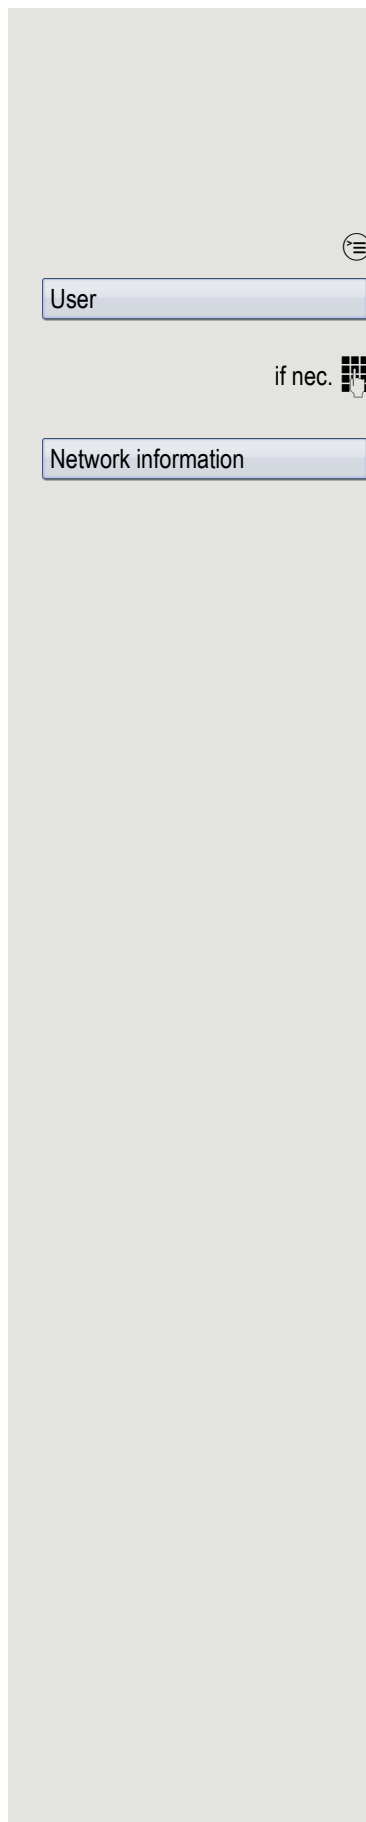


## Resetting user data

The following user-specific settings changed via the phone menu or the WBM interface can be reset to factory settings.

- Display settings
- Language setting
- Screensaver


---

 Personal images for the screensaver are deleted and default images are restored (administration e.g. using the OpenStage Manager).

---

- Audio settings
  - Volumes
  - Settings

---

 Personal ringtone files are deleted and default ringtone files are restored (administration e.g. using the OpenStage Manager).

---

- Configuration
  - Context menu
- Bluetooth
  - Configuration and Listen
- Phonebook
  - All entries are deleted.
- Call lists
  - All entries are deleted.
- Sensor keys
  - All personalised programming is deleted (see also → Page 98).

**Important:** All data is reset **without** a warning tone. If necessary back up your data on a USB memory stick (→ Page 251).

### Initiating the reset


Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm "Reset selected user data" in the context menu. The user data is reset to factory settings.

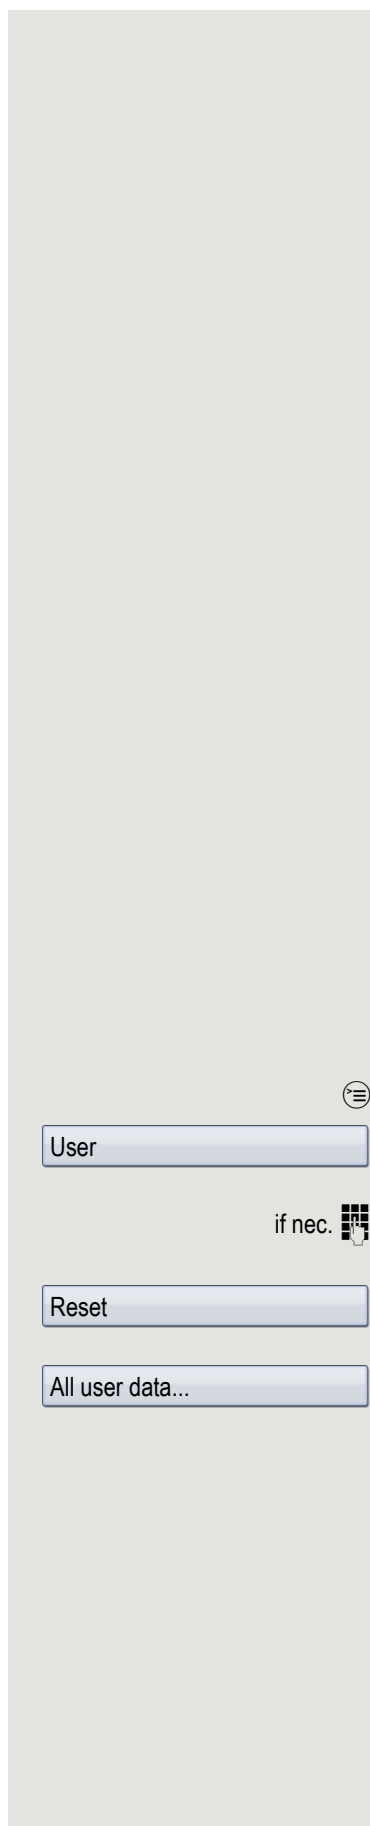

## Bluetooth

Bluetooth is an open standard for high-performance technology and allows wireless communication between PCs, PDAs, and mobile telephones.

In contrast to infrared connections, Bluetooth does not require a visual contact for communication purposes and can be used over distances of up to 10 meters.

To exchange data between Bluetooth-enabled devices, the devices need to undergo a once-off discovery procedure.

## Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on → Page 233.

The OpenStage is discoverable for other Bluetooth devices by default.

To prevent unauthorised access, we recommend deactivating discoverability once you have enabled the connection to a new Bluetooth device.



A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

---

## Pairing

Pairing is the process used by two Bluetooth-enabled devices to "see" one another and to "recognise" that they can exchange data. It is therefore used for checking the access authorisation of a Bluetooth device in a Bluetooth network. To do this, a 128 bit link key is created for subsequent identification.




Pairing is only performed the first time contact is established between a Bluetooth device and your OpenStage. If the Bluetooth device is successfully paired, no further access authorisation checks are necessary. Instead, each subsequent check uses the previously created connection key.

---

## Transferring contacts

The Bluetooth function on your OpenStage allows you to transfer contacts in **vCard format** (file extension: .vcf) from other Bluetooth devices to your OpenStage and save them in the phonebook. You can also send phonebook entries as vCards to other Bluetooth-enabled devices.

 Due to the diverse range of PCs, mobile telephones and PDA devices currently available, we are unable to provide universal instructions on how to transfer vCard files in this manual.

The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.


## Receiving a vCard

**Prerequisite:** The Bluetooth function on your OpenStage is activated → Page 232. A vCard file is stored on your Bluetooth device (PC, PDA, mobile telephone, etc.).

Launch the data transfer wizard for Bluetooth and follow the instructions.

Once the vCard is transferred, a message confirming the successful transfer is displayed on your OpenStage. You may be prompted to accept the vCard.

Example:

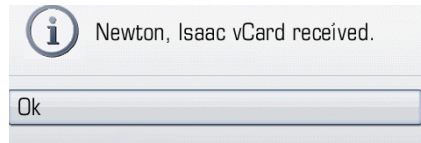

Select and confirm the option shown.

## Transferring a contact to the phonebook

Press the key shown.

Select and confirm the option shown.

## Sending a vCard

**Prerequisite:** The Bluetooth connection is configured between your OpenStage and one other device → Page 232. A vCard file is saved on the OpenStage.

Search the phonebook for the entry you wish to send.

Press the key shown.

Select a phonebook entry.

Select and confirm the option shown in the context menu. The "Send vCard via Bluetooth" dialog is displayed.

OK




Refresh directory



Niels, Bohr

Send

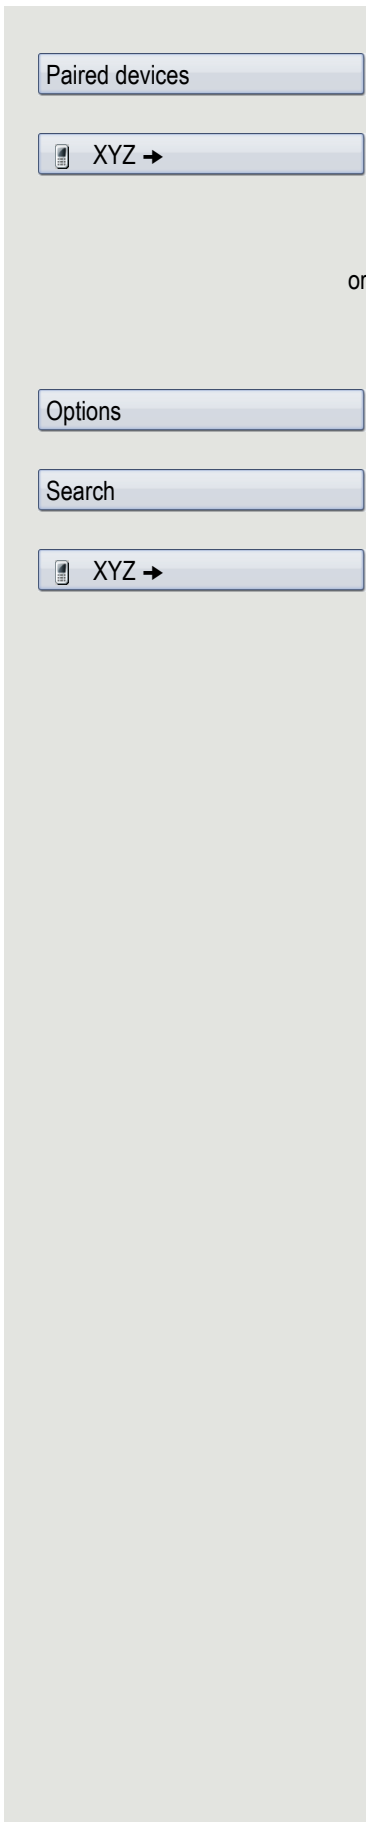

### Sending to a paired device

Select.

Select and confirm the option shown in the context menu for device. The vCard for the entry is sent.

Perform the necessary steps on the destination device to save the vCard data.

### Sending to an unpaired device

Select.

Select and confirm the option shown in the context menu. A search is started and detected devices listed.

Select and confirm the relevant device in the list.


The vCard is sent.

Perform the necessary steps on the destination device to save the vCard data.

Detected devices are then deleted from the list.

## Using a Bluetooth headset

You can connect a Bluetooth headset to your OpenStage 60/80 which is approved for use with the OpenStage 60/80. Ask your administrator about approved headset types.

 It is not recommended to activate the open listening feature → Page 57 in connection with a Bluetooth headset because this can lead to reduced quality depending on headset an environment.

## Connecting the Bluetooth headset

**Prerequisite:** The Bluetooth function on your OpenStage is activated → Page 232.

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The **Bluetooth pairing manager** dialog is selected.

Select the option shown.

## Finding and connecting the Bluetooth headset

Now switch your Bluetooth headset to pairing mode (see the user manual supplied with the device).

Select and confirm the option shown in the context menu. The system searches for devices.

Select and confirm the Bluetooth headset found (Jabra BT500, for instance).

Enter and confirm the PIN (generally "0000" or "1234" for Bluetooth headsets – for more information refer to the headset description).


The message "Pairing in progress" is displayed. Following successful pairing, the device is added to the list of paired devices.

## Connecting a Bluetooth headset to OpenStage

The Bluetooth headset must now be connected to the OpenStage 60/80.

Select the Bluetooth headset in the list.

Select and confirm the option shown in the context menu. The connection is immediately established and the headset is ready for operation.

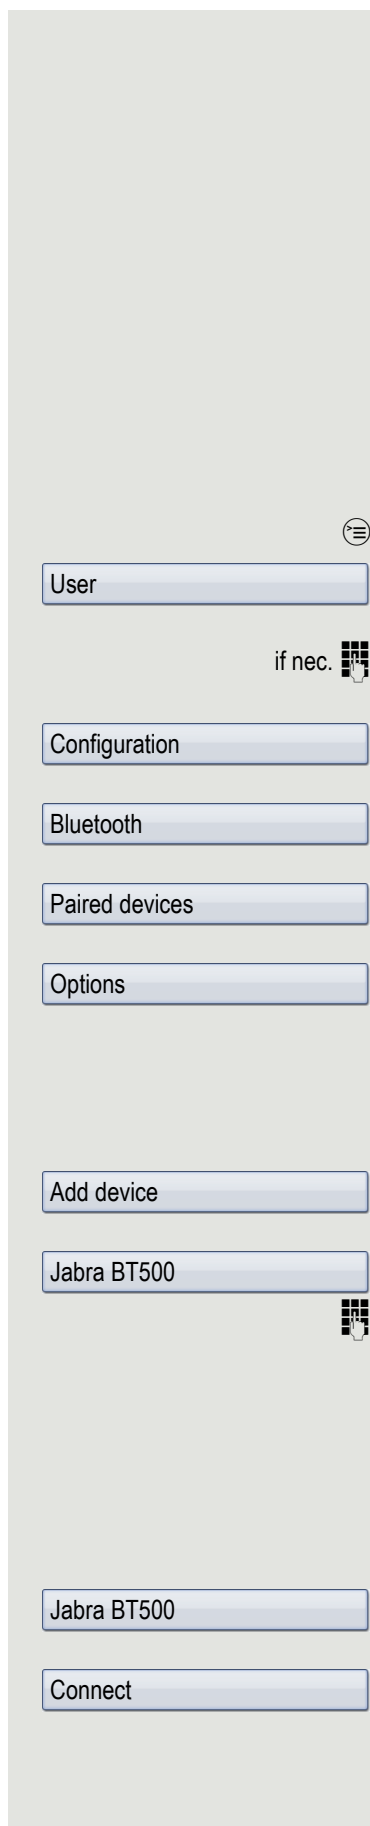

## Testing a Bluetooth headset



Press the key shown. You should now hear the on-hook signal in the headset.



Enter the station number.

or

In the pop-up menu:

Repeat dialing 123456

Select and confirm the option shown. The connection is set up as soon as your input is complete.

if nec. A small icon of a speaker with sound waves, used to indicate that the user should adjust the call volume.

If necessary, set the call volume.



## Using a Bluetooth Conference Phone

You can connect a Bluetooth conference phone to your OpenStage 60/80 which is approved for use with the OpenStage 60/80. Ask your administrator about approved conference phone types.

### Connecting a "Konftel 60W" Bluetooth conference phone

Below is an example of connecting and operating a "Konftel 60W" conference phone.

**Prerequisite:** The Bluetooth function on your OpenStage is activated → Page 232. The "Konftel 60W" conference phone is ready for use but **turned off** (see user guide "Konftel 60W").

Press the key shown until the application's "Settings" tab is active.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown. The **Bluetooth pairing manager** dialog is selected.

Select the option shown.

### Finding and pairing the Bluetooth conference phone Konftel 60W

Hold down the **trim** key on the "Konftel 60W" for two seconds until the blue display lights flash (Warning: the device must be switched off first).

Select and confirm the option shown in the context menu. The system searches for devices.

Select and confirm the Bluetooth device Konftel 60W found.

Enter and confirm the PIN ("0000" for Konftel 60W).


The message "Pairing in progress" is displayed. Following successful pairing, the device is added to the list of paired devices. You hear a short confirmation tone from the Konftel 60W before the device switches itself off again.

### Connecting Konftel 60W with OpenStage

The Konftel 60W must now be connected to the OpenStage 60/80.

Select the Konftel 60W on the list.

Select and confirm the option shown in the context menu.

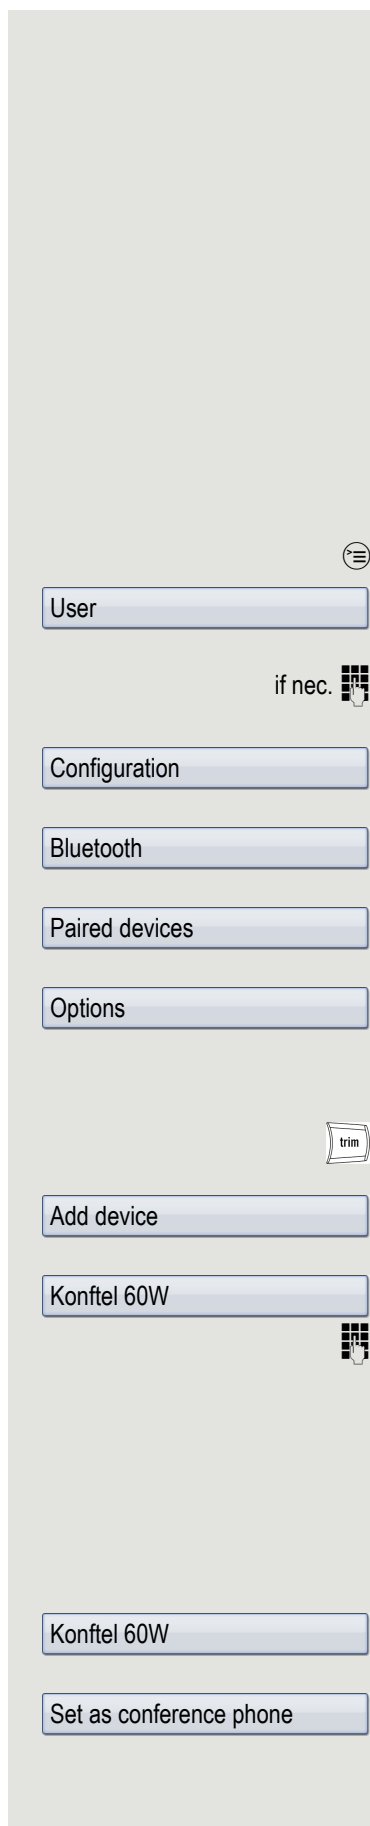



Konftel 60W

Connect

Select the Konftel 60W on the list again.

Select and confirm the option shown in the context menu. The connection is immediately established and the Konftel 60W is ready for use.

## Testing the "Konftel 60W" Bluetooth conference phone

### Answering a call

**Prerequisite:** The "Konftel 60W" conference phone is ready for use but **turned off** (see user guide "Konftel 60W"). The OpenStage is in idle mode.

Both the phone and the "Konftel 60W" ring. The caller is displayed. To answer the call, you can now:

Press the key shown.



or

Accept

Select and confirm the option shown.

or



Press the On/Off key on the "Konftel 60W".

You are connected with the other party. The "Konftel 60W" is activated. You can now for example initiate a consultation call or accept a second call to set up a conference.

### Calling a station

**Prerequisite:** The "Konftel 60W" conference phone is ready for use but **turned off** (see user guide "Konftel 60W"). The OpenStage is in idle mode.

Press the key shown.



or



Enter the station number. The "Konftel 60W" switches itself on automatically. Once the stations answers, you can set up a conference via a consultation or second call.

## Backup/restore

Backups are usually made to a USB mass storage device and contain user-specific data.

A backup includes the following components:

- All user settings for configuration
- Call forwarding instructions with default destinations
- Phonebook entries with relevant data
- Ringtones
- Photos
- Screensavers
- Call list entries

The USB mass storage device is only used to back up and restore the user area in the phone memory. You do not have to remove the USB medium after a backup. You can create multiple backups on the medium and restore them as required. You can also restore the backups saved on another phone as a means of transporting your settings and data, for instance, if your phone has to be replaced.


A restore operation only works if the relevant settings are enabled on the phone and the current software release supports these settings.

Every backup is given a separate name and is password-protected. Setting the password encrypts the content of the backup. Data can only be restored after entering the password set. The backup file is not automatically deleted after a restore operation.



A USB pen drive must be connected to the USB port provided so that the options described below are available to you. Otherwise you are only offered the "Close" option.

---

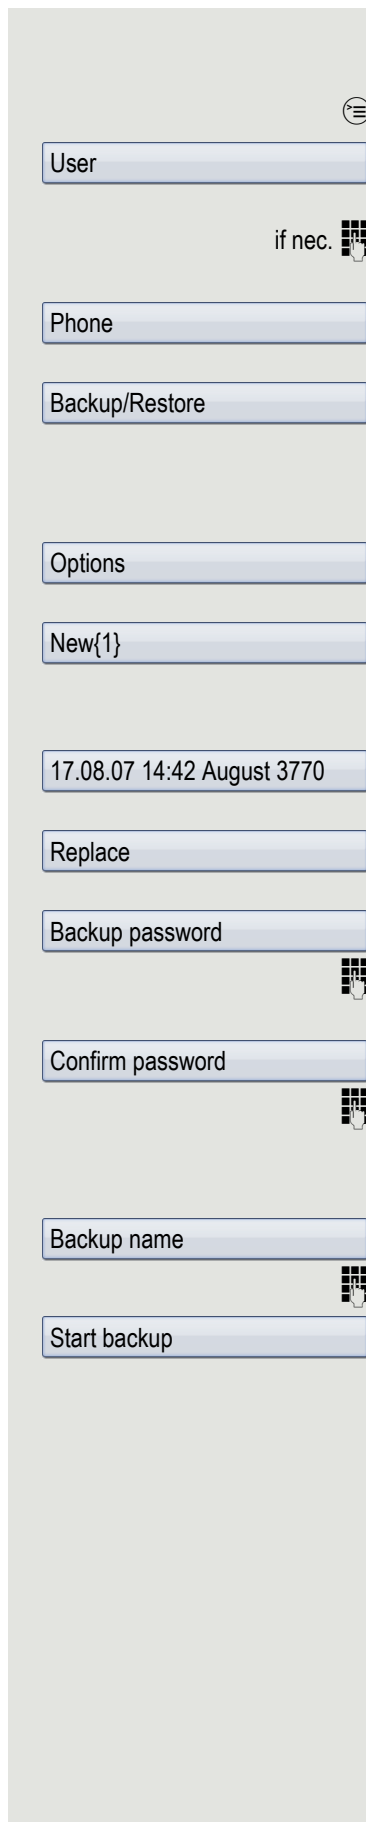

## Saving user data

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

## Creating a new backup

Select and confirm the option shown.

Select and confirm the option shown in the context menu.

## Replacing an existing backup

Select and confirm the backup available.

Select and confirm the option shown in the context menu.

Select and confirm the option shown.

Enter and confirm the backup password.

Select and confirm the option shown.

Re-enter and confirm the password.


## Naming a new backup

Select and confirm the option shown.

Enter and confirm a name for the backup.

Select and confirm the option shown. The user data is saved. The message **Backup created successfully** is displayed.

## Restoring user data

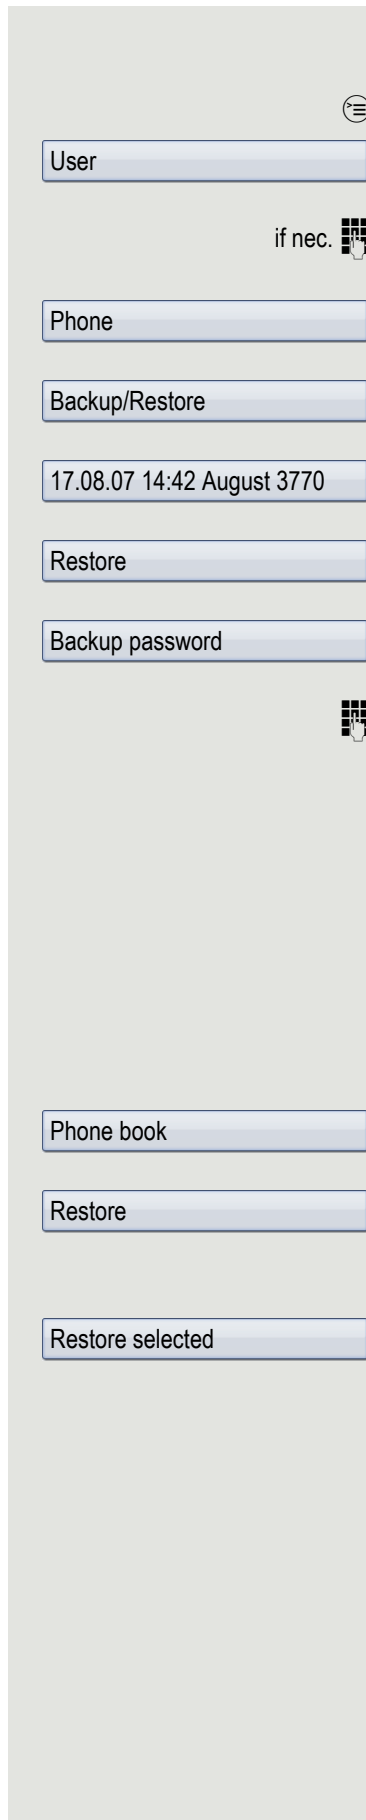

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the backup you want.

Select and confirm the option shown.

Select and confirm the option shown.

Enter and confirm the backup password.

You can set Ignore or Restore in the context menu for the following options. The default setting is Ignore:

- Phone book
- Call logs
- Menu data
- Screensaver images
- All clip images
- All ringer tones
- All midlet data

If you want to activate the phonebook's Restore, for instance, then:

Select the option shown.

Select and confirm the option shown in the context menu.

The restore operation can begin once you have activated all the options you want:

Select and confirm the option shown. The following message appears when the procedure is finished: **Restore successfully completed.**

## Deleting a user backup on a storage medium

You can delete invalid or older backups on your USB medium.

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the backup you want.

Select and confirm the option shown. A security prompt is displayed:

Delete backup 17.08.08 14:42 August 3770?

Confirm the option shown to delete the backup. Backup deletion is the responsibility of the user and is therefore not password-protected.

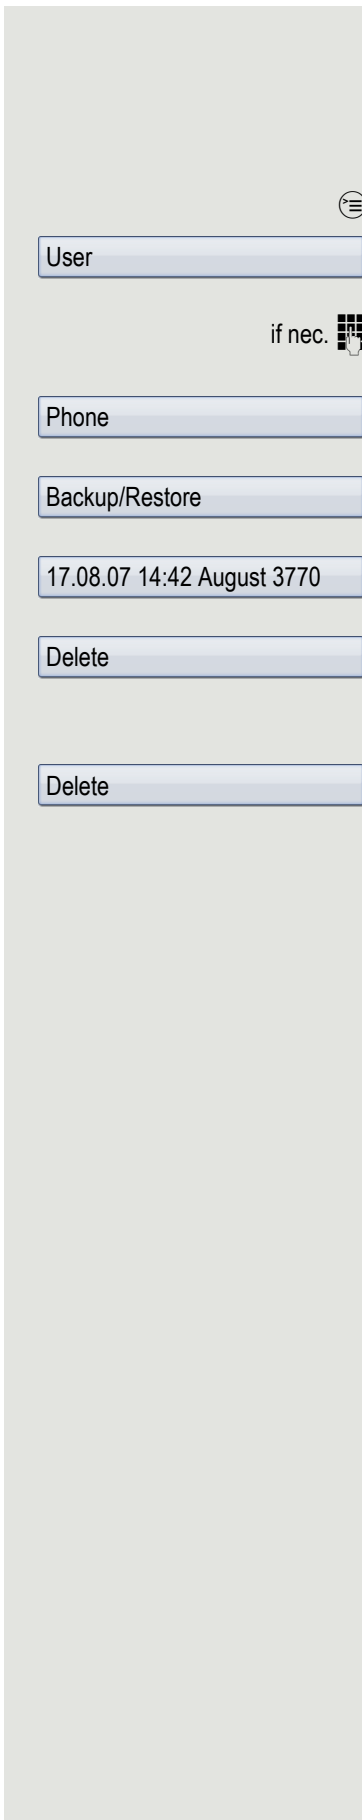

## Displaying and checking backups on USB media

Check which backups are stored on the medium.

Press the key shown until the "Settings" tab is active.


Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the backup you want and confirm it to check the settings

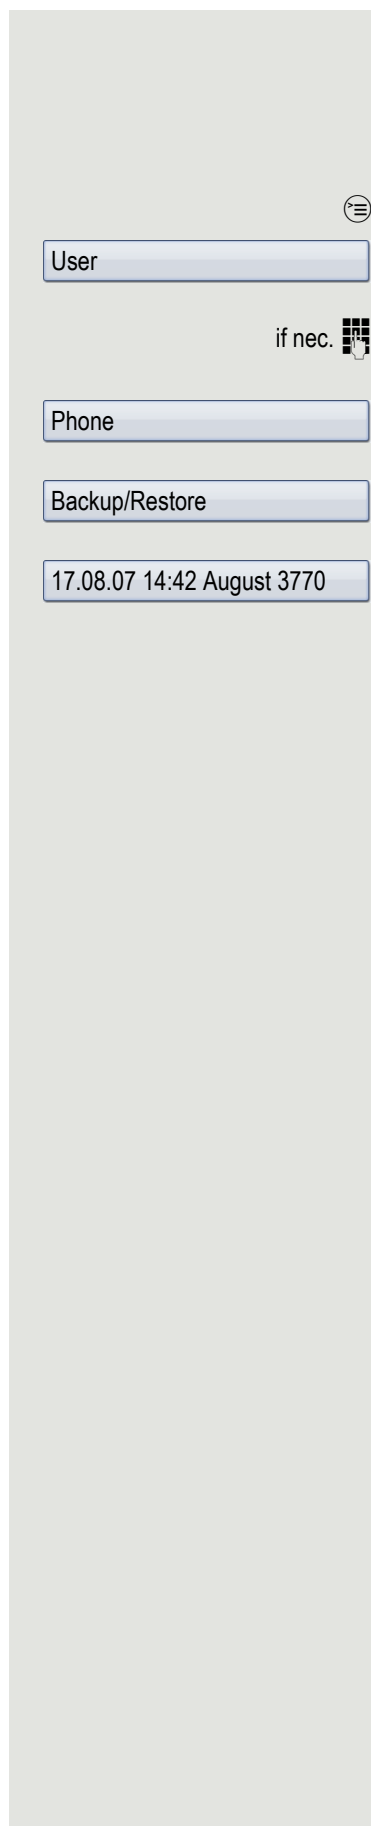

## Call recording

A central voice recorder is installed in the network for recording calls to which your telephone connects in order to record the current voice traffic. The recorder records the entire voice flow of two or more participants.

You should configure a recording button in order to simplify handling of manual call recording → Page 92. It is assumed in the description below that a corresponding key has been configured.

## Recording modes

The administrator can configure the following operating modes for call recording:

- Manual
- AutoStart
- All Calls
- Disabled

The following settings are possible to audibly signal the recording:

- Repeated
- Single Shot
- Off

Check with your administrator as to which settings were made for your phone.

### Mode: ALL CALLS

The telephone starts and stops the recorder automatically in order to ensure that all calls are being recorded.

### Mode: MANUAL

You decide when the recorder is started and stopped or paused. If the recorder is switched on, all further calls will be recorded. If you pause the recorder then nothing will be recorded. If there are no calls, then the recorder likewise pauses.

### Mode: AUTOSTART

The telephone starts the recorder automatically. You can stop or pause the recorder yourself however and restart it. If a call has already been recorded, new incoming and outgoing calls will also be recorded. If you pause the recorder during a call, special calls such as consultation calls, call pickups and second calls will not be recorded as long as the recorder is paused. If the telephone reverts to idle status, the AutoStart process is set up again for the next call.



## Explanations of recording

### Recordable calls

A recordable call is any call that has a call connection status on the telephone. This can be any incoming or outgoing call. It is immaterial here whether a call is set up directly via the telephone or via an application.

- Outgoing
- Incoming
- Consultation
- Pickup
- Reconnect
- Second call
- Connected call
- Conference<sup>1</sup>
- Automatic call acceptance
- Secured or unsecured line

### Non-recordable calls

- Outgoing calls that have not yet reached full connection status, such as a ringing call.
- Calls on hold

### Enhanced functions:

 
1. A conference<sup>2</sup> can be set up or cleared down during recording.
2. A consultation can be performed during recording.
3. Call transfer is also available during recording.
4. A second call can be accepted during recording.

### The following features are not supported:

1. Playing back recordings over the telephone.
2. Deleting recordings over the telephone.
3. Functions for editing recordings over the telephone.

### Recording tips

You will receive the following advisories while a call is being recorded:

- The recording symbol  on the display (permanent)
- Beep (repeated at intervals for you and your call partner)
- Beep (single at the start of recording for you and your call partner)

The audible advisory can also be switched off. Please check with the relevant administrator.

1. Server-based conference only  
2. Server-based conference only

## Multiline

In terms of call recording, no distinction is made between multiline and single-line. If recording has started, recording is performed, otherwise not. The recording status of a line persists as long as calls are connected to this line.

For example, if line A is being recorded (initiated manually) and you switch to line B or line A is placed on manual hold and you switch to line B, the recording is ended and a partial recording saved.

 
If you disable recording for the call on line B (mode = manual or auto start) and switch back to line A, the recording for line A is not started again.

The modes mentioned (All Calls, AutoStart or Manual) refer to the telephone and are therefore the same for all lines.

## Recording calls

### Automatic call recording

This is the simplest mode. If you have accepted a call or called a subscriber and the subscriber answers, the call is recorded automatically. Refer to → Page 257 to check which calls this can be.

As soon as the recording starts, you will see the recording symbol  and hear a beep (see also → Page 257).

You cannot pause the recording manually in this mode.

### Manual call recording

#### Activating or deactivating call recording when the telephone is in idle mode

**Prerequisite:** Manual mode is selected. The recording button is configured and indicates the status.

Select the option shown in the telephone's context menu to enable the option. or disable the option.

Recording on

Recording off

or



Press the recording button to enable the option - the LED key lights up.



or press the key shown to disable the option - the LED extinguishes.

The recording button also indicates the status change if you activated or deactivated call recording via the context menu.

### Call recording with AutoStart

Standby mode is activated in principle in idle mode. The recording button LED lights up. You cannot switch off the recorder. As soon as a call is set up, call recording starts automatically.

Lift the handset.




or

 


Press the key shown.



The station answers. You hear a beep, the recording symbol  is shown on the display and the recording button LED remains lighting. The call is now being recorded (see also → Page 257)

You can pause the recording at any time and continue it again.



If you end the call, the AutoStart process is set up again for the next call.

## Controlling call recording

### Starting call recording manually during a call

**Prerequisite:** Manual mode or AutoStart is selected. You are conducting a call. Recording has not started. The recording button LED is not lighting.



You are conducting a call (see also → Page 257).



Press the recording button to start the recording - the LED key lights up.

You hear a beep and the recording symbol  is shown on the display. The call is now being recorded (see also → Page 257)


### Pausing call recording manually during a call

**Prerequisite:** Manual mode or AutoStart is selected. You are conducting a call. Recording has started. The recording button LED lights up.



You are conducting a call (see also → Page 257).

 


Press the recording button to pause the recording - the LED extinguishes and the recording symbol  on the display disappears.


You can start the recording again at any time, for example to continue recording the current call.

### Ending call recording automatically

**Prerequisite:** You are conducting a call. Recording has started. The recording button LED lights up.




The recording is ended automatically as soon as the call is terminated or if the call status changes so that the call is no longer being recorded - for example if a line is placed on manual hold and another line is seized (Multiline).


The LED extinguishes and the recording symbol  on the display disappears.

## Consultation during call recording

 **Prerequisite:** You are conducting a call. Recording has started. The recording button LED is lighting.

You initiate a consultation – your main call is placed on hold as a result while the consultation is being performed.

 
The recording is paused while you initiate the consultation. The recording symbol  on the display disappears.

If the consultation partner answers, the consultation call is recorded. You hear a beep and the recording symbol  is shown on the display again.

You can now terminate the consultation call or for example switch back to the first call party (alternate) while the consultation call is placed on hold.

## Second call during call recording

 
**Prerequisite:** You are conducting a call. Recording has started. The recording button LED is lighting.

You are conducting a call. You hear a beep and the recording symbol  is shown on the display. The call is now being recorded.

A second call party camps on → Page 108.

In the pop-up menu:

 Select and confirm the option shown.


You are connected with the second party. You hear a beep and the recording symbol  is shown in the line for the second call – this call is now being recorded. The first party is placed on hold.




Accept

## Call recording while alternating

 **Prerequisite:** You have an active or held consultation or second call. Recording has started. The recording button LED is lighting.

You are connected with the second party. You hear a beep and the recording symbol  is shown in the line for the second call.


Select and confirm the option shown in the context menu for this connection.


You are switched to the main call. You hear a beep and the recording symbol  is shown in the line for the main call – this call is now being recorded.

You can pause and restart the recording at any time in manual and auto start modes.

## Your call is paused and reconnected during the recording.

**Prerequisite:** You are conducting a call that is being recorded.

 
Your call partner has placed the call on hold. You hear the music on hold. The recording is paused and the recording symbol  has disappeared from the display.

Your call partner resumes the call. You hear a beep and the recording symbol  is shown on the display.

## Setting up a conference during recording

**Prerequisite:** You are conducting a consultation call → Page 70 or you have accepted a second call → Page 108 and the "System conference" feature was configured by the administrator. Recording has started. The main call is placed on hold. The recording button LED is lighting.


Select and confirm the option shown in the connection's context menu. You are connected to both parties at once. The conference is displayed with the current participants.

You hear a beep and the recording symbol  is shown in the line for the conference call.


## Adding conference participants during the recording

 
**Prerequisite:** You have set up a conference. The "System conference" feature was configured by the administrator. The conference call is now being recorded.

You have performed a consultation or accepted a second call (→ Page 70 or → Page 108). The conference call is placed on hold.

You hear a beep and the recording symbol  is shown in the line for the consultation or second call. The call is now being recorded.


Select and confirm the option shown in the context menu for the consultation or second call in order to include the new participant in the conference. The conference is displayed with all current participants.

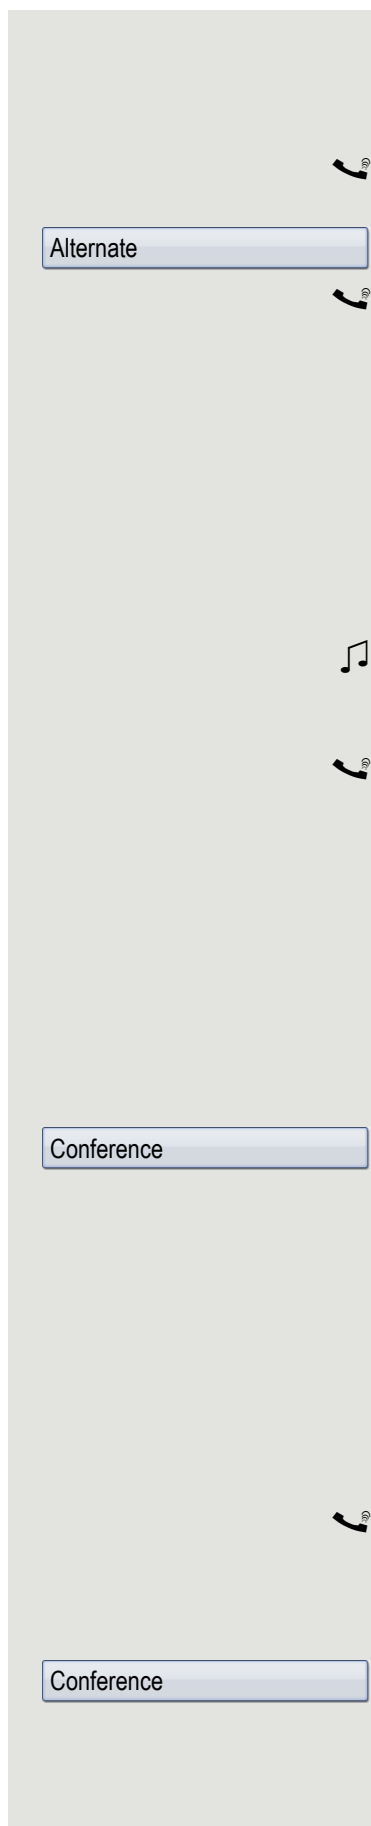


You hear a beep and the recording symbol  is shown again in the line for the conference call.

## Your call is included in a conference during the recording.

 **Prerequisite:** You are conducting a call that is being recorded. You are to be included in a conference by your call partner. You are placed on hold while the conference is being set up.

 You hear the music on hold while your call partner is setting up the conference. The recording is paused and the recording symbol  has disappeared from the display.

Your call partner answers again and you are connected to the conference. You hear a beep and the recording symbol  is shown in the "Conference" line. The conference call is now being recorded.


## Putting a line on hold manually during the recording

 
There are two options for placing a line manually on hold:

- You place the active line on hold during the call recording and then resume the call on this line.
- You seize a different line during call recording. The first line is placed on manual hold.


**Prerequisite:** The telephone has more than one line configured. The active line is being recorded. The recording button LED is lighting.

## Holding and retrieving the call on the line


You are conducting a call, for example on line A. You hear a beep and the recording symbol  is shown on the display. The call is now being recorded.


Press line key A. The line key LED starts flickering. The call is placed on hold. The recording is paused while the call is on hold. The recording symbol  on the display disappears.

### Retrieving a held call:

 Press line key A. The line key LED lights up. The call is retrieved. You hear a beep and the recording symbol  is shown on the display again. Call recording is continued.

## Holding a call on the line and conducting a call on a different line

 Press line key B – the LED lights up. You hear a beep and the recording symbol  is shown on the display for line B – this call on line B is being recorded. Line A is placed on hold, call recording of line A has been terminated.

Press line key A to resume the call. You hear a beep and the recording symbol  is shown on the display for line A – a new recording of line A commences.

## Diagnostic information

This information overview in the user area of the service menu provides you with information on the current configuration of the telephone:

Press the key shown until the "Settings" tab is active.

Confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

You see a numbered list of telephone parameters with the current settings.

You can see a more structured view of the list via the WBM interface  
→ Page 265:

Example:

Diagnostic Information		
2011-05-11 08:23:40		
00	terminal.number:	3339
01	sip.server:	192.168.1.240
02	sip.port:	5060
03	sip.registrar:	192.168.1.240
04	sip.registrar.port:	5060
05	sip.gateway:	192.168.1.240
06	sip.transport:	UDP
07	sip.gateway.port:	5060
08	server.features:	No
09	dns.results:	5060
10	multiline:	No
11	registered.lines:	5060
12	backup.active:	Yes
13	backup.proxy:	
14	software.version:	V3 R0.22.0 SIP 110502
15	display.message:	None
16	last.restart:	2011-05-11T08:00:34
17	memory.free:	60,696K free
18	ip.adress:	192.168.1.235
19	subnet.mask:	255.255.255.0
20	default.route:	192.168.1.2
21	primary.dns:	192.168.1.105
22	secondary.dns:	192.168.1.2
23	route.1.ip:	
24	route.1.gateway:	None
25	route.1.mask:	None
26	route.2.ip:	None

User



if nec.



Diagnostic information

**Diagnostic Information**

27	route.2.gateway:	None
28	route.2.mask:	None
29	mac-address:	0001e325eaca
30	discovery.mode:	Manual
31	dhcp.reuse:	No
32	lan.port.type:	0
33	pc.port.status:	None
34	pc.port.type:	0
35	pc.port.autoMDIX:	No
36	vlan.id:	
37	qos.layer.2:	
38	qos.layer.2.voice:	5
39	qos.layer.2.signalling:	None
40	qos.layer.2.default:	0
41	qos.layer.3:	Yes
42	qos.layer.3.voice:	13
43	qos.layer.3.signalling:	7
44	lldp.med.operation:	




## Web interface (WBM)

You can configure a number of settings for your phone via the WBM interface. Communication is via a secure HTTPS connection. Access to the WBM interface must be activated by administrator.

### Calling up the WBM interface

---

 For more information on the IP address, the WBM interface address, and how to connect the telephone to the network, refer to the section entitled "Network information" → Page 242.

---

To call up the WBM interface, open a Web browser and enter the following:

**https://[IP address of the phone]**


[IP address of the phone] is the IP address of your phone.

or

**https://[Name of the phone]**

[Name of the phone] which was assigned by administrator.

---

 You might receive a certificate notification from the browser. Follow the instructions to download the certificate.

You will be prompted to configure a user password the first time you call up the WBM interface → Page 171. You must log on with this password in future every time you want to open the User Pages.

---

### Administrator Pages

This area lets you configure settings for administering your phone and the network environment. Access to the Administrator Pages is protected by the admin password. For more information, contact your administrator or refer to the administration manual.

### User pages

The WBM interface homepage opens once you have entered and confirmed the phone's IP address.

1. Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
2. Click a menu entry to open the corresponding form.
3. Make the desired changes.
4. Click the corresponding button to save or discard your changes.

#### Button functions

- "Login": Log on to the phone after you have entered the user password
- "Submit": Apply changes
- "Reset": Reset original values
- "Refresh": Update values (for example, under "Bluetooth" - "Last connected device")
- "Logout": Log off the phone

## User menu






All settings that you can make via the WBM interface's user menu can also be made via the phone's user menu → Page 47.

## User Pages











### User login

User login  → Page 171














### Date and time

- Local time  → Page 214
- Local date (day, month, year)  → Page 214
- Allow daylight saving  → Page 216
- Difference (minutes)  → Page 216
- Auto time change  → Page 217

### Audio

- Standard Ringer
  - Ringer melody  → Page 221
  - Ringer tone sequence  → Page 221
  - Ring file  → Page 219)
  - Room character  → Page 219
  - Open listening  → Page 221
  - Headset port  → Page 222
- Special ringers
  - Internal  → Page 223
  - External  → Page 223
  - Recall  → Page 223
  - Emergency  → Page 223
  - Special 1
  - Special 2
  - Special 3

### Configuration



 



- Outgoing calls
  - Autodial delay (seconds)  → Page 118
  - Callback option  → Page 75
  - Allow busy when dialling  → Page 119
  - Allow transfer on ring → Page 113
  - Allow immediate dialling → Page 66
- **Incoming calls**
  - Deflecting
    - Allow deflection  → Page 100
    - Default deflect destination  → Page 100
    - Deflect to DSS  → Page 100
  - Forwarding (call forwarding by type, see → Page 83)
  - Settings
    - Forwarding Favourites: Destination 1 to Destination 5  → Page 81
    - Forward all calls allowed  → Page 81
    - to  → Page 80
    - Direct destination → Page 78
    - Forward on busy allowed  → Page 81
    - to  → Page 80
    - Direct destination → Page 78
    - Forward on no reply allowed  → Page 81
    - to  → Page 80

- Direct destination → Page 78
- No reply delay (seconds)<sup>1</sup> ☎ → Page 82
- Alerts
  - Visual alerts ☎ → Page 101
  - Audible alerts ☎ → Page 101
  - Forwarding party ☎ → Page 101
- Handling
  - Allow call waiting ☎ → Page 110
  - Allow DND ☎ → Page 170
  - Allow busy when dialling ☎ → Page 119
- CTI calls
  - Allow auto-answer ☎ → Page 114
  - Allow beep on auto-answer ☎ → Page 114
  - Allow beep on auto-reconnect ☎ → Page 115
- Connected calls
  - Allow call transfer ☎ → Page 111
  - Allow call joining ☎ → Page 73
  - Allow exit conference ☎ → Page 122
  - Allow hold reminder ☎ → Page 104
  - Hold reminder delay (minutes) ☎ → Page 105
  - Hold and hang-up ☎ → Page 106
  - Allow music on hold ☎ → Page 107
  - Allow conferences ☎ → Page 121
  - Secure call alert ☎ → Page 225
  - Toggling associate ☎ → Page 110
  - Lower IL alert ☎ → Page 231
- **Context menu**
  - Auto show menu ☎ → Page 230
  - Auto hide time (sec.) ☎ → Page 230
- Keypad
  - Lines
    - Ring delay (seconds) ☎ → Page 149
    - Allow in overview ☎ → Page 148
    - Address<sup>2</sup>
    - Primary line<sup>[1]</sup>
    - Ring on/off<sup>[1]</sup>
    - Ringer melody ☎ → Page 151
    - Ringer tone sequence ☎ → Page 151
    - Ringtone ☎ → Page 150
    - Selection order<sup>[1]</sup>
    - Hot/warm line<sup>[1]</sup>
    - Hot/warm line destination ☎ → Page 130
  - Overview
    - Use FPK order ☎ → Page 152
    - Add all lines ☎ → Page 152
    - Reordering directions: Move down, Move to bottom, Move to top, Move up ☎ → Page 152
- BLF
  - Busy Lamp Field: **not** for OpenScape Voice
- Bluetooth
  - Bluetooth device address<sup>[3]</sup>
  - Phone name ☎ → Page 234
  - Status<sup>[1]</sup>
  - Active ☎ → Page 232










1. Only if "Server features" was deactivated by your administrator

2. Information - read only





3. Information - read only

- Discoverable  → Page 233
- Pairing mode  → Page 235
- PIN for pairing  → Page 236
- Last connected device
  - Device address<sup>[1]</sup>
  - Device name<sup>[1]</sup>
  - Device class<sup>[1]</sup>
- Call logging
  - General
    - Enable call log  → Page 166
  - Missed calls<sup>1</sup>  → Page 166
    - Answered elsewhere
    - Delete entry
- Video Call
  - Video on  → Page 184

### Phone


- Display settings
  - Levels
    - Slider brightness  → Page 208
    - Key module contr.  → Page 210
    - TouchGuide  → Page 209
  - Misc.
    - Display theme  → Page 207
- Screensaver
  - Screensaver enabled  → Page 211
  - Inactivity delay  → Page 212
  - Screensaver transition delay  → Page 213
- Program keys
  - Normal
    - Edit  → Page 93
  - Shifted
    - Edit  → Page 93
- Key Module 1 (if available such as Program keys)
- Key Module 2 (if available such as Program keys)
- Key click
  - Volumes
    - Off
    - Low
    - Medium
    - High
  - Keys
    - Keypad only
    - All keys

### Locality

- Country  → Page 229
- Language  → Page 227
- Date format  → Page 215
- Time format  → Page 215

1. Operation of the missed calls logging function for "Answered elsewhere" is dependent on support by the SIP server

**Security**

- Password
- Current Password
- New password  → Page 171
- Confirm password

Diagnostic information  → Page 263

## Fixing problems

### Caring for your telephone

- Never allow the telephone to come into contact with colouring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaning fluids containing alcohol or plastic-damaging detergents to clean the telephone. The use of scouring agents is also forbidden.

### Troubleshooting

#### Pressed key does not respond:

If the telephone is locked redial keys cannot be used. This also applies when emergency numbers or predefined numbers from the dial plan are stored on them.

Check whether your telephone is locked ("Phone locked: Enter Password" appears on the screen). If the phone is locked, unlock it.

#### The phone does not ring on call:

Check whether the ringtone is deactivated (see icon in the status bar on the display → Page 27). If it is deactivated, activate the ringtone

#### You cannot dial a number:

Check whether your telephone is locked ("Phone locked: Enter Password" appears on the screen). If the phone is locked, unlock it.

#### To correct any other problems:


First contact the relevant administrator. Problems that cannot be corrected should be referred to Customer Service.

### Contact partner in the case of problems

Contact your administrator if a fault persists for more than five minutes, for example.

## Local user menu

### Opening the user menu on the phone

Press the  key to open the user menu.

On the **Settings** tab, select the **User** menu option. You are prompted to enter the User password → Page 171. Confirm this with **OK**. The options of the user menu are available.

### User menu display

The majority of settings that can be made via the user menu on the phone, can also be made via the WBM interface → Page 265.







Changes are usually confirmed using the **Save & Exit** option or discarded using the **Exit (no save)** option. You can exit the current menu level with the left key of the TouchGuide (→ Page 21). You will be asked whether you want to **Save** or **Do not save**.

#### **User**

##### **Date and time?**

- Options Save & Exit
  - Exit (no save)
- Time hh:mm → Page 214
- Date DD.MM.YYYY → Page 214
- Daylight saving Yes → Page 216
  - Yes
  - No
- Difference (mins)mm → Page 216
- Auto DST Yes/No<sup>[1]</sup> → Page 217

#### **Audio?**

- Volumes?
  - Options Save & Exit
    - Exit (no save)
  - Loudspeaker  → Page 218
  - Ringer  → Page 218
  - Handset  → Page 218
  - Headset  → Page 218
  - Handsfree  → Page 218
  - Rollover  → Page 218
- Settings?
  - Options Save & Exit
    - Exit (no save)
  - Ringtone pattern → Page 219
    - Pattern
    - Ringer1.mp3
    - Ringer2.mp3
    - Ringer3.mp3
    - Ringer4.mp3
    - Ringer5.mp3
    - Ringer6.mp3
  - Ringer melody2 → Page 221
    - 1

1. Information - read only

- 2
- 3
- 4
- 5
- 6
- 7
- 8
- Ringer tone sequence 1 → Page 221
  - 1
  - 2
  - 3
  - 4
  - 5
  - 6
- Room character Normal → Page 219
  - Normal
  - Echoing
  - Muffled
- Open listening Standard mode → Page 221
  - Standard mode
  - US mode
- Headset socket Cordless headset → Page 222
  - Wired headset
  - Cordless headset
  - Conference unit
- Special ringtones
  - Internal call
    - Options **Save & Exit**
    - **Exit (no save)**
    - Available Yes/No
    - Ringer Pattern → Page 223
    - Ringer melody 2 → Page 223
    - Ringer tone sequence 1 → Page 223
  - External
    - Options **Save & Exit**
    - **Exit (no save)**
    - Available Yes/No
    - Ringer Pattern → Page 223
    - Ringer melody 2 → Page 223
    - Ringer tone sequence 1 → Page 223
  - Recall
    - Options **Save & Exit**
    - **Exit (no save)**
    - Available Yes/No
    - Ringer Pattern → Page 223
    - Ringer melody 2 → Page 223
    - Ringer tone sequence 1 → Page 223
  - Emergency call
    - Options **Save & Exit**
    - **Exit (no save)**
    - Available Yes/No
    - Ringer Pattern → Page 223
    - Ringer melody 2 → Page 223
    - Ringer tone sequence 1 → Page 223
  - Special 1
    - Options **Save & Exit**
    - **Exit (no save)**



- Available Yes/No
- Ringer Pattern → Page 223
- Ringer melody 2 → Page 223
- Ringer tone sequence 1 → Page 223
- Special 2
  - Options **Save & Exit**
  - **Exit (no save)**
  - Available Yes/No
  - Ringer Pattern → Page 223
  - Ringer melody 2 → Page 223
  - Ringer tone sequence 1 → Page 223
- Special 3
  - Options **Save & Exit**
  - **Exit (no save)**
  - Available Yes/No
  - Ringer Pattern → Page 223
  - Ringer melody 2 → Page 223
  - Ringer tone sequence 1 → Page 223
- ⊞ Configuration?
  - **Outgoing calls?**
    - Options **Save & Exit**
    - Exit (no save)
    - Autodial delay 6 → Page 118
      - 1
      - 2
      - 3
      - 4
      - 5
      - 6
      - 7
      - 8
      - 9
    - Callback Yes → Page 75
      - Yes
      - No
    - Busy when dialling Yes → Page 119
      - Yes
      - No
    - Transfer on ring Yes → Page 113
      - Yes
      - No
    - Immediate dialing Yes → Page 66
      - Yes
      - No
  - **Incoming calls?**
    - Deflecting
      - Options **Save & Exit**
      - Exit (no save)
      - Allow deflection Yes → Page 100
        - Yes
        - No
      - Default destination nnnnnn → Page 100
      - Deflect to DSS Yes/No<sup>[1]</sup> → Page 100
    - Forwarding (call forwarding by type, see → Page 83)
      - Settings

1. Information - read only

- All calls → → Page 81
- Enter destination (context menu) → Page 79
- List of saved numbers (context menu), if applicable
- Edit favorites (Context menu) → Page 79
  - Options Save & Exit
    - Exit (no save)
    - Destination 1
    - Destination 2
    - Destination 3
    - Destination 4
    - Destination 5
- Copy → Page 80
- Paste (if copying is active) → Page 80
- Busy → → Page 81
- Enter destination (context menu) → Page 79
- List of saved numbers (context menu), if applicable
- Edit favorites (Context menu) → Page 79
  - Options Save & Exit
    - Exit (no save)
    - Destination 1
    - Destination 2
    - Destination 3
    - Destination 4
    - Destination 5
- Copy → Page 80
- Paste (if copying is active) → Page 80
- No reply (after {1}s) → → Page 81
- Enter destination (context menu) → Page 79
- List of saved numbers (context menu), if applicable
- Edit favorites (Context menu) → Page 79
  - Options Save & Exit
    - Exit (no save)
    - Destination 1
    - Destination 2
    - Destination 3
    - Destination 4
    - Destination 5
- Copy → Page 80
- Paste (if copying is active) → Page 80
- Set delay<sup>[1]</sup> → Page 82
- Alerts
  - Options Save & Exit
    - Exit (no save)
  - Visual alerts No → Page 101
    - Yes
    - No
  - Audible alerts No → Page 101
    - Yes
    - No
  - Forwarding party Display last → Page 101
    - Display first
    - Display last
- Handling
  - Options Save & Exit
    - Exit (no save)
  - Allow call waiting Yes → Page 110

1. Only if "Server features" was deactivated by your administrator

- Yes
- No
- Allow DND Yes → Page 170
  - Yes
  - No
- Busy when dialling Yes → Page 119
  - Yes
  - No
- CTI Calls?
  - Options Save & Exit
    - Exit (no save)
  - AutoAnswer Yes → Page 114
    - Yes
    - No
  - AutoAnswer beep Yes → Page 114
    - Yes
    - No
  - AutoReconnect beep Yes → Page 115
    - Yes
    - No
- **Connected calls?**
  - Options Save & Exit
    - Exit (no save)
  - Allow call transfer Yes → Page 111
    - Yes
    - No
  - Allow call joining Yes → Page 73
    - Yes
    - No
  - Allow exit conf Yes → Page 122
    - Yes
    - No
  - Allow hold rem. Yes → Page 104
    - Yes
    - No
  - Hold rem. delay 8 → Page 105
    - 3
    - 4
    - 5
    - 6
    - 7
    - 8
    - 9
    - 10
    - 11
    - 12
    - 13
    - 14
    - 15
  - Hold and hang-up Yes → Page 106
    - Yes
    - No
  - Music on hold Yes → Page 107
    - Yes
    - No
  - Allow conferences Yes → Page 121
    - Yes

- No
- Secure call alert Yes→ Page 225
  - Yes
  - No
- Toggle associate Yes→ Page 110
  - Yes
  - No
- Lower IL alert → Page 231
  - Yes
  - No
- Context menu
  - Automatic menu...Yes→ Page 230
    - Yes
    - No
  - Display time20→ Page 230
    - 5
    - 10
    - 20
    - 30
    - 60
    - 120
    - Unlimited display
- **⊞ Keypad**
  - Lines?
    - Line (one of **eight** possible)
      - Options Save & Exit
      - Exit (no save)
      - Ring delay 0 → Page 149
      - Allow in overview Yes → Page 148
        - Yes
        - No
      - Hot warm action<sup>[1]</sup> No action → Page 130
      - Hot warm dest nnnn
      - Address<sup>[1]</sup> nnnn
      - Ring on/off<sup>[1]</sup> On
      - Ringtone = Ringer → Page 150
      - Ringer melody = 2→ Page 150
      - Ringer tone sequence= 1→ Page 150
        - Selection order<sup>[1]</sup> 1
  - Overview?→ Page 148
    - Line (up to **eight** lines)
      - Move down
      - Move to bottom
      - Use FPK order
      - Add all lines
      - Save
      - Do not save
- **BLF?**
- Busy lamp field **not** for OpenScape Voice
- **⊞ Bluetooth**
  - Configuration
    - OptionsSave & Exit
    - Exit (no save)
    - Telephone ID00:01:E3:2D:76:D9
    - ActiveYes→ Page 232
      - Yes




1. Information - read only

- No
- DiscoverableYes→ Page 233
- Yes
- No
- Telephone nameOpenStage 80→ Page 234
- PairingPrompt→ Page 235
- No
- Prompt
- Automatic
- Pairing PIN\*\*\*\*→ Page 236
- Paired devices→ Page 237
- Options
- Exit
- Add device
- Delete all
- Nokia HS-54W
- Disconnect/Connect
- Set as conference unit
- Delete
- Rename
- Blacklist→ Page 241
- Options
- Exit
- Add device
- Delete all
- Call logging
- General → Page 166
- Options: **Save & Exit**
- **Exit (no save)**
- Enable call logYes→ Page 166
- No
- Missed calls → Page 166
- **Save & Exit**
- **Exit (no save)**
- Answered elsewhere = Exclude
- Include
- Delete entry = When called
- Manually
- Video Call
- Video onNo→ Page 184
- Yes
- No

#### ☒ Phone

- Backup/Restore
- Options
- Close
- New→ Page 252
- Options                      Start backup
- Start backup
- Cancelling Backup...
- Backup password
- Confirm password
- Backup name              OpenStage 80
- 25.11.09 09:45 OpenStage80→ Page 255
- Restore→ Page 253
- Options                      Restore selected

- Restore selected
- Restore all
- Cancel restore
- Backup password
- Backup ID
- Phone book           Ignore
- Ignore
- Restore
- Call logs           Ignore
- Ignore
- Restore
- Menu data           Ignore
- Ignore
- Restore
- Screensaver imagesIgnore
- Ignore
- Restore
- All clip images    Ignore
- Ignore
- Restore
- All ringer tones   Ignore
- Ignore
- Restore
- All midlet data    Ignore
- Ignore
- Restore
- Replace→ Page 252
- Options            Start backup
- Start backup
- Cancelling Backup...
- Backup password
- Confirm password
- Backup name        OpenStage 80
- Full ID
- Delete→ Page 254
- Delete
- Cancel
- Screensaver
- OptionsSave & Exit
- Exit (no save)
- EnabledYes→ Page 211
- Yes
- No
- Start (mins)30→ Page 212
- 0
- 5
- 10
- 20
- 30
- 60
- Transition delay (s)10→ Page 213
- 0
- 5
- 10
- 20
- 30
- 60

- Display settings?
  - OptionsSave & Exit
    - Exit (no save)
  - Display themeCrystal sea→ Page 207
    - Crystal sea
    - Warm grey
  - Key mod. contrast → Page 210
  - Slider brightness → Page 208
- Program keys
  - Press the key to be programmed*
  - OptionsSave & Exit
    - Exit (no save)
  - NormalUnallocated→ Page 93
    - Unallocated
    - *Further functions, see*→ Page 281
  - Label*predefined or customised*
  - Settings*function-dependent*
  - ShiftedUnallocated→ Page 93
    - Unallocated
    - *Further functions, see*→ Page 282
  - Label*predefined or customised*
  - Settings*function-dependent*
- Key Module (if available such as Program keys)
- TouchGuide
  - OptionsSave & Exit
    - Exit (no save)
  - Touchguide setting → Page 209
- Key click
  - OptionsSave & Exit
    - Exit (no save)
  - Volume→ Page 226
    - Off
    - Low
    - Medium
    - High
  - Keys→ Page 226
    - Keypad only
    - All keys

### Locality?

- OptionsSave & Exit
  - Exit (no save)
- CountryDE→ Page 229
  - DE?
  - *Further countries, see*→ Page 229
- LanguageDeutsch→ Page 227
  - Deutsch
  - *Further languages, see*→ Page 228
- Date formatdd/mm/yyyy→ Page 215
  - dd/mm/yyyy
  - yyyy/mm/dd
  - mm/dd/yyyy
- Time format24 hour→ Page 215
  - 24 hour
  - 12 Hour (AM/PM)

### Security?

- Change user password → Page 171
  - OptionsSave & Exit
    - Exit (no save)
  - Current password
  - New user password
  - Confirm password
- Phone lock → Page 174
  - OptionsSave & Exit
    - Exit (no save)
  - Lock phoneNo
    - Yes

#### Network information?

- OptionsExit
- Phone address → Page 242
- Web address
- IP address
- LAN RX
- LAN TX
- PC RX
- PC TX
- LAN autonegotiatedYes
- LAN information10 Mbps full duplex
- PC autonegotiated Yes
- PC information Link down

#### **Diagnostic information** → Page 263

#### Reset?

- OptionsCancel
  - Cancel
  - Reset all user data → Page 243
  - Reset selected user data → Page 98
- Function key data No? → Page 98
  - Yes
  - No



## Key functions

### Normal

You can program the following functions on the Normal of the function keys:

- Selected dialing
- Repeat dialing
- CF unconditional
- CF busy
- CF no reply
- CF unconditional - any
- CF unconditional – int.
- CF unconditional – ext.
- CF busy - any
- CF busy – int.
- CF busy – ext.
- CF no reply - any
- CF no reply – int.
- CF no reply – ext.
- Ringer off
- Hold
- Alternate
- Blind transfer call
- Transfer call
- Deflecting
- Shift
- Conference
- Headset
- Do not disturb
- Group pickup
- Repertory dial
- Feature toggle
- Mobility
- Directed pickup
- Callback
- Cancel callbacks
- Consultation
- Call Waiting toggle
- Immediate ring
- PreView
- Start application
- Built in fwd
- Pause callbacks
- Resume callbacks

## Shifted

You can program the following functions on the Shifted of the function keys:

- Selected dialing
- Repeat dialing
- Alternate
- Blind transfer call
- Transfer call
- Deflecting
- Conference
- Repertory dial
- Directed pickup
- Callback
- Cancel callbacks
- Consultation
- Start application
- Pause callbacks
- Resume callbacks

# Index

## Numerics

2nd alert ..... 62

## A

Accepting calls  
     multi-line ..... 125  
 Administration ..... 49  
 AICS Zip tone ..... 71  
 Alerts ..... 101  
 Announcing the local phone number ..... 200  
 Answered elsewhere ..... 166  
 Application tab ..... 27, 33  
 Applications ..... 36, 49  
     activating an application ..... 36  
     opening the context menu ..... 36  
     selecting an application tab ..... 36  
     selecting an entry ..... 36  
 Applications menu ..... 47  
 Audio  
     room character ..... 219  
 Audio controls ..... 19  
 Autodial delay ..... 118  
 Auto-Headset ..... 71  
 Auto-headset ..... 53

## B

Bluetooth ..... 244  
 Browsing in tabs ..... 22  
 Busy override ..... 131  
 Busy tone while dialling ..... 63

## C

Call  
     deflecting ..... 99  
     ending ..... 58  
     holding ..... 102  
     incoming ..... 52  
     rejecting ..... 99  
     transferring ..... 111  
 Call control ..... 62  
 Call forwarding  
     Activate/deactivate ..... 81  
     Activating/deactivating ..... 89  
     Copy and insert destination phone numbers ..... 80  
     Copying/pasting destination phone numbers ..... 87  
     Destination phone number ..... 78, 84

Favourites ..... 79, 87  
 Last destination ..... 84  
 last destination ..... 78  
 Save destination phone number ..... 79  
 Saving a destination phone number ..... 85  
 Variable ..... 78, 84  
 Call forwarding chain ..... 91  
 Call forwarding favourites ..... 79  
 Call forwarding information ..... 127  
 Call lists ..... 43, 161  
 Call logs  
     copying into phonebook ..... 165  
 Call pickup ..... 59  
 Call recording  
     alternating ..... 261  
     automatic ..... 258  
     AutoStart ..... 258  
     call types ..... 257  
     conference ..... 261  
     consultation ..... 260  
     controlling ..... 259  
     line key ..... 262  
     manual ..... 258  
     modes ..... 256  
     Multiline ..... 258  
     second call ..... 260  
     symbols ..... 257  
     tips ..... 257  
 Call settings  
     CTI calls ..... 219  
     multi-line ..... 148  
 Call type ..... 96  
     All calls ..... 83  
     Assigning destination phone number ..... 89  
     External ..... 83  
     Internal ..... 83  
 Call types ..... 83  
 Call waiting ..... 108  
 Callback ..... 74  
 Calls  
     Forwarding ..... 77  
 Camera test ..... 35  
 CE marking ..... 3  
 Changing the date display ..... 215  
 Code lock ..... 174  
 Conference ..... 120  
 conference  
     starting conference ..... 70  
 Connection options ..... 16  
 Consultation ..... 63, 70  
 Consultation call from second call ..... 108  
 Contact  
     display format ..... 160  
 Context ..... 66  
 Context menus ..... 29  
 Copy and insert destination phone numbers ..... 80  
 Copying/pasting destination phone numbers ..... 87

- ## D
- Date ..... 214
  - Daylight saving ..... 216
  - Deactivating the ringer temporarily ..... 169
  - Deleting entries ..... 166
  - Destination phone number ..... 78, 84
  - Diagnostic call ..... 50
  - Dial plan ..... 118, 174
  - Direct station selection ..... 132
  - Display design ..... 207
  - Display icons ..... 287
    - application tab ..... 33
    - call state ..... 37
    - message icons ..... 30
    - multi-line ..... 38
    - phonebook entries ..... 40
  - Display settings
    - idle mode for display ..... 212
  - Display Symbols
    - application tab ..... 33
    - multi-line ..... 38
    - status bar ..... 27
  - Do not disturb ..... 169
  - DSS ..... 132
  - DSS call
    - call deflection ..... 134
  - DSS key
    - consultation ..... 132
    - indirect pickup ..... 133
    - reject call ..... 133
  - During calls
    - multi-line ..... 128
- ## E
- E/A cockpit ..... 140
    - launching ..... 142
    - making calls ..... 145
    - managing call forwarding ..... 143
    - status ..... 145
  - Early call pickup ..... 136
  - Emergency call ..... 174
  - Emergency number ..... 174
  - Executive/Assistant Cockpit ..... 140
  - Executive/secretary ..... 135
    - connecting a call ..... 137
    - second call ..... 137
- ## F
- Favourites for call forwarding ..... 87
  - Forced logoff ..... 180
  - Forwarding primary line ..... 127
  - Function keys ..... 19
- ## G
- General information ..... 13
  - Graphic display ..... 27
    - call lists ..... 44, 45
    - icons for call state ..... 37
    - icons for phonebook entries ..... 40
    - Voicemail ..... 46
  - Graphic display settings
    - idle mode for graphic display ..... 212
  - Group call ..... 59
- ## H
- Headset
    - answering call automatically ..... 53
    - Automatically accept call ..... 71
  - Help function ..... 49
  - Hot line ..... 67
  - Hotline
    - for lines ..... 129
- ## I
- Icons ..... 287
    - application tab ..... 33
    - call state ..... 37
    - message icons ..... 30
    - multi-line ..... 38
    - phonebook entries ..... 40
  - Ignoring second call ..... 109
  - Immediate dialing ..... 66, 118
  - Important information ..... 4
  - Incoming calls
    - multi-line
      - accepting calls ..... 125
  - Intercom ..... 198
- ## K
- Key click ..... 226
  - Key modules ..... 17
  - Keypad ..... 26
- ## L
- Language setting ..... 227
    - country setting ..... 229
    - language for user prompts ..... 227
  - Large conference ..... 123
  - LDAP ..... 161
    - copying into phonebook ..... 163
    - quick search ..... 163
  - LED display ..... 23

Line preview .....	153
Line status .....	38
Line utilization .....	24
Lines	
hot/warm line .....	129
List for phone numbers and contacts .....	155
Location of the telephone .....	4
Logging on and off	
as a mobility user .....	177, 179

## M

Making calls	
multi-line .....	126
Message icons .....	30
Microphone .....	69
Mini-switch, using .....	17
Missed calls .....	76
Mobility .....	176
forced logoff .....	180
logon, logoff .....	177, 179
Mode keys .....	20
Multi-line	
accepting calls .....	125
busy override .....	131
LED display .....	25, 134
making and receiving calls	
on a single line .....	128
with multiple lines .....	128
Multi-line telephone .....	14

## N

Normal dialing .....	66
----------------------	----

## O

One-way Intercom .....	198
Open listening .....	57
OpenScape Voice .....	185
"last caller redial" function .....	68
abbreviated dialing	
two-key abbreviated dialing .....	190
accepting anonymous calls .....	189
call tracing .....	190
creating a list for selective calls .....	188
Feature toggle key .....	185
functions .....	185
hunt group .....	191
making anonymous calls .....	186
parallel call .....	193
parking .....	195
reachability .....	193
rejecting anonymous calls .....	189

serial call .....	193
silent monitoring .....	196
OpenStage Key Module .....	17
Operating instructions .....	3
Out-of-hours calls .....	201
Overview tab .....	136, 139, 152

## P

Padlock icon .....	51
Parallel call .....	193
Parking .....	195
Phantom line .....	24
Phone	
locking .....	174
Phone number directories .....	155
Phone settings .....	207
Phonebook .....	40, 155
LDAP .....	42, 161
local phonebook .....	41
contact, quick search .....	159
editing a contact .....	155
group administration .....	157
new contact .....	155
saving a picture .....	158
selecting a preferred phone	
number .....	155
voice recognition .....	158
Picking up out-of-hours calls .....	201
Picking up the held call .....	55
Pickup group .....	59
Pop-up menu .....	30, 32, 37
Primary line .....	24
Privacy .....	168
Private line .....	24
Program/Service menu .....	47
Programmable sensor key .....	92
Programmable sensor keys .....	23

## Q

Quick search	
LDAP .....	163

## R

Reachability .....	193
Redial .....	68
Redialing	
multi-line .....	127
Redial keys .....	116
Resetting sensor keys .....	98
Ring delay .....	149
Ringer melody .....	151

Ringer off .....	168
Ringtone for lines .....	150
Ringtone sequence .....	151
Rollover .....	154

## S

Safety precautions .....	3
Save destination phone number .....	79
Saving a destination phone number .....	85
Screensaver .....	211
Screensaver image .....	211
Search contacts, .....	40
Second call .....	108
Second ringing call .....	62
Secondary line .....	24
Security .....	168
Self-image .....	35, 182
Sensor key .....	92
Sensor keys	
feature toggle .....	95
Forwarding .....	95
immediate ring .....	97
repertory dial .....	94
Serial call .....	193
Set headset port .....	222
Setting the date .....	214
Setting the time .....	214
Settings .....	207
Shared line .....	24
Silent monitoring .....	196
Single-line telephone .....	14
Speakerphone mode .....	52, 56
speakerphone distance .....	4
Status icons .....	27
Symbols	
application tab .....	33
multi-line .....	38
status bar .....	27
System conference .....	123

## T

Telephone maintenance .....	270
Telephone models .....	18
Telephony interface	
multi-line .....	38
single line .....	37
Text input (via the display keyboard) .....	28
Theme .....	207
Time .....	214
Time display format .....	215
Toggle/Connect .....	72
TouchGuide .....	21
TouchSlider .....	19

Troubleshooting .....	270
Trunk keys .....	24
Two-way Intercom .....	198

## U

Unlocking the phone .....	174
USB camera .....	181
User interface .....	15
User support .....	14
Using network ports more efficiently .....	17

























 
 
 


## V


















Variable call forwarding .....	78, 84
Video function .....	181
activating/deactivating .....	184
Video link .....	34, 182

## W

Warm line .....	67
for lines .....	129
Web interface .....	265, 271

## Display icons

<b>Application tab</b>	
	Telephony interface → Page 37
	Phonebooks → Page 40
	Call lists → Page 43
	Voicemail → Page 46
	Program/Service menu/Applications menu → Page 47
	Help function → Page 49
<b>Status bar</b>	
	The ringtone is deactivated → Page 168
	Operating data is sent to the server → Page 50
	The "Do not disturb" function is activated → Page 169
	The phone lock is activated → Page 174
	The Bluetooth function is activated → Page 232
	A mobile user is logged on to the telephone
<b>Messages</b>	
	You have received one or more new messages
	One or more new entries have been added to the call lists
	Local call forwarding is activated for all calls
<b>Connection status</b>	
	You receive a call
	After dialling, the other subscriber's phone rings
	You receive a call with a lower impact level
	Following dialling with a lower impact level
	Forwarded call with a lower impact level
	Reconnect with a lower impact level
	The call is active
	High-quality voice connection (G.722)
	The call has been disconnected
	You have placed the call on hold (e.g. consultation hold)
	Your call partner has placed the call on hold
	Call recording has started
	The voice connection is secure
	The voice connection is not secure

<b>MultiLine</b>	
	Call for the corresponding line
	Call for a line with suppressed ringtone → Page 154
	"Hold reminder" is activated → Page 104
	The line is currently not available
	The line is busy
	The line is free
<b>Phonebook entries</b>	
	Primary business number
	Secondary business number
	Mobile phone number
	Private phone number
<b>E/A Cockpit</b>	
	Not available
	Available
	Call forward to assistant (if available)
	Ring immediately (call forwarding cleared)
	Call forwarding to mobile phone
	Call forwarding to answering machine
	Call forwarding to a number