

# TRUCK-G500

## Installation Manual



**Trucking Software for  
INE-W920R / INE-W925R / INE-W928R / INE-W977BT**

English  
October 2013, Version 1.0

## Installation instructions for INE-W920R / INE-W925R / INE-W928R\* and INE-W977BT\*:

- 1) Insert the Micro SD card into the card slot below the detachable face plate.  
\*INE-W928R / INE-W977BT: Insert the Micro SD card adapter including the Micro SD card into the SD card slot located below the display.
- 2) Power the unit on. The unit will be updated which takes up to 45 minutes.  
Caution: Do not power off the unit and do not switch off ACC.
- 3) Make sure to insert the Micro SD card BEFORE you access <https://alpine.naviextras.com> for map and content updates!  
After the Micro SD card is inserted and contents copied trucking specific map and content updates will be available at <https://alpine.naviextras.com>.

## How to adjust truck specific settings in the Navigation Software of INE-W920R / INE-W925R / INE-W928R and INE-W977BT:



- 1) Press hard key “Navigation” and touch the “Settings” symbol from the Navigation Main Menu.




Example: INE-W920R



2) Touch “Route Settings”, and then touch “Vehicle”.

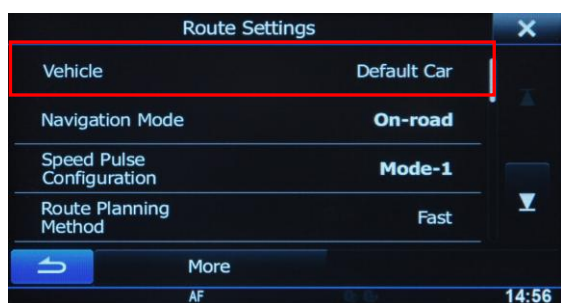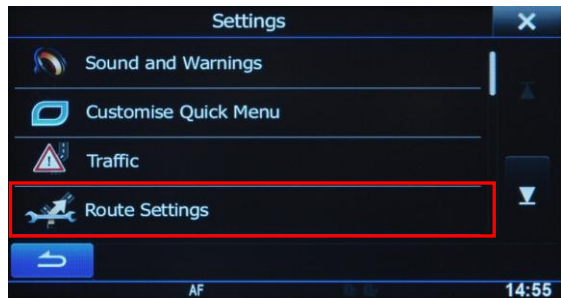

3) Scroll down and select “Default Lorry”.

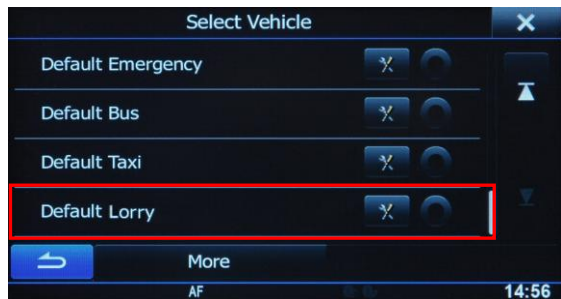

4) Touch the “Settings” symbol in the “Default Lorry” selection bar to access the settings menus for the trucking feature allowing you to customize and adjust values applicable to your vehicle.

