

USER'S MANUAL

USB-2 Data Edition HandyDrive

Index

1.- Introduction

- 1.1.- General unit description**
- 1.2.- Connecting the HandyDrive to a computer**
 - 1.2.1.- Connecting the HandyDrive to a USB hub**
- 1.3.- Disconnecting the HandyDrive**
- 1.4.- System Requirements**
- 1.5.- About the USB-2 interface**

2.- Macintosh users

- 2.1.- Installing the extension**
- 2.2.- Formatting the HandyDrive**
- 2.3.- Disconnecting the HandyDrive**
- 2.4.- MacOS issues**

3.- Windows 98, Windows 98SE and Windows Me users

- 3.1.- Installing the driver**
 - 3.1.1.- Installing the driver under Windows 98 and Windows 98SE**
 - 3.1.2.- Installing the driver under Windows Me**
- 3.2.- Formatting the HandyDrive**
- 3.3.- Disconnecting the HandyDrive**
- 3.4.- Windows 98, 98SE and Me issues**

4.- Windows 2000 Professional and Windows XP Home Edition and Professional users

- 4.1.- Installing the driver**
 - 4.1.1.- Configuring the Windows XP write cache**
- 4.2.- Formatting the HandyDrive**
- 4.3.- Disconnecting the HandyDrive**
- 4.4.- Windows 2000 Professional and Windows XP Home Edition and Professional issues**

5.- Linux users

- 5.1.- Installing the driver**
- 5.2.- Connecting the HandyDrive**
- 5.3.- Formatting the HandyDrive**
- 5.4.- Mounting and unmounting the HandyDrive**

6. Features

7.- Problem solving quick guide

8.- FAQ quick guide

1.- Introduction

1.1.- General unit description

The following items are delivered within the HandyDrive package:

- HandyDrive Data Edition unit-
- CD with drivers-
- User´s manual
- USB cable-
- Double connection USB cable

The USB-2 HandyDrive Data Edition is an external hard disk unit, powered via the USB cable. Should enough power supply be delivered from the USB system to the HandyDrive, there is no need for an external power supply to operate the unit.

NB 1 : Should enough power supply not be delivered from the USB system to the HandyDrive, the double connection USB cable must be used to connect the HandyDrive to the system, as explained later in this manual. Should the problem not be solved this way, an external power supply must be used to operate the unit.

The unit can be used under the following operating systems:

Operating systems needing additional drivers (included in the CD):

- Windows 98/98SE

Operating systems including native support:

- Windows Me (Millenium)
- Windows 2000 Professional
- Windows XP Home Edition and Professional
- MacOS 8.6
- MacOS 9.x
- MacOS X
- Linux.(kernel 2.4.x)

1.2.- Connecting the HandyDrive to a computer.-

The HandyDrive can be hot-plugged to the USB port in a portable or desktop computer. This means that the connection can take place while the system is up and running, with no need for a system restart.

The hard disk is already formatted with one FAT-32 partition, so that it is ready to be used under any of the supported Operating Systems. If you wish, the disk can be formatted to other file system types as supported by your Operating System (see each Operating System section).

The HandyDrive can be operated in either of two modes, in the Bus-Powered mode (without an external power supply) or in the Self-Powered mode (powered from an external power supply).

Enough power supply must be delivered from the USB system (either from the system´s root port or from the USB hub where the unit is connected to) for the Handydrive to be operated in the Bus-Powered mode. See NB 1 above.

Two LED indicators are available in the HandyDrive: the green one lights whenever the HandyDrive is getting power, while the red one lights on and off as the disk is being read/written by the system. Do not move or disconnect the HandyDrive unless the red light is completely off, as physical disk damage can occur. Before

disconnecting the HandyDrive from the computer, follow the rules described in the section "Disconnecting the HandyDrive" corresponding to your Operating System.

How to know that the adequate power level is being delivered to the HandyDrive?

If adequate power supply is being delivered to the Handydrive, the green LED (light indication) will light and the motor will spin up (the drive is very quiet, so you must be very close to the drive to hear the motor spinning up). If the green LED does not light or the motor does not spin-up, adequate power supply is not being delivered to the HandyDrive, so additional power is needed. See next section **How to solve the inadequate power supply problem?**

Should the HandyDrive be connected to a USB port not supplying adequate current or voltage levels to operate the disk drive, either the drive's motor will not spin-up and a somewhat rattle noise will be produced by the drive's heads, or the drive's motor will spin up and down for ever, and the system either will not recognise or will not be able to access the drive. It is also possible that the disk's motor could spin-up and the system recognises the drive, but random errors or system crashes occur during the normal usage. To solve this, see following section.

How to solve the inadequate power supply problem?


- 1.- Using the double connection USB cable to connect the HandyDrive to two USB ports
- 2.- Using the external power supply to operate the HandyDrive in the Self-Powered mode

1.- Double connection USB cable

The HandyDrive is delivered with a special USB-2 cable adapter, that can be connected on one side to two USB ports (either system or hub ports), and on the other side to two USB devices.


Once the cable has been connected to two USB ports, the HandyDrive can be connected to the device connector labeled "HANDY", and the second device connector (labeled "RATÓN" –mouse-) can be connected to any Low Power device (like mouse, keyboard, joystick or those devices powered from their own power supply). This cable adapter can solve the low current level problem, but it does not solve the low voltage level problem.

System's side
connectors, to
connect to two
system or hub
ports

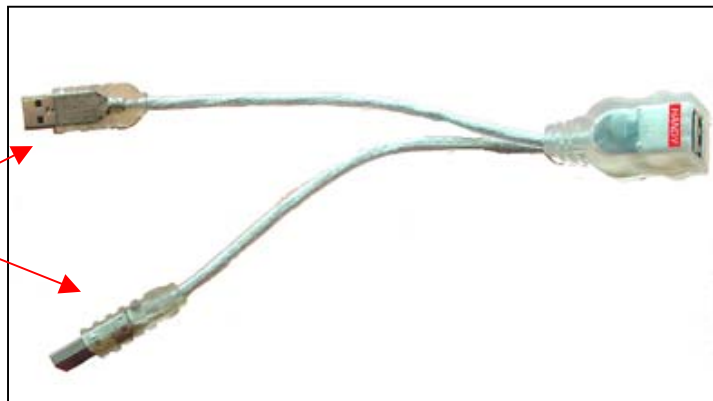

"RATON" port to
connect any Low
Power device
like mouse,
keyboard, or
any Self-
Powered device

"HANDY" port to
connect the
HandyDrive.

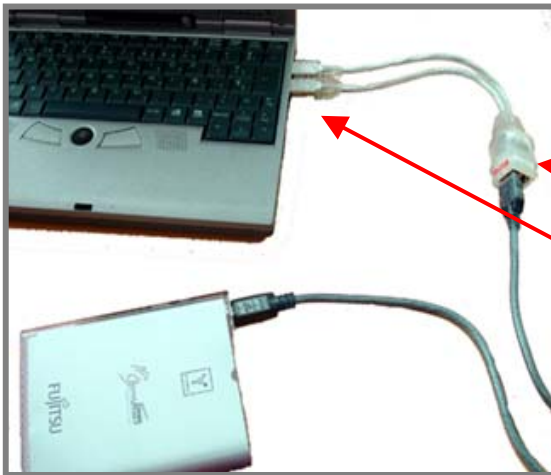

The HandyDrive is connected to the "HANDY" port of the double connection cable.

Both system's side connectors are connected to two USB ports at the portable.

2.- Using the external power supply

You must ask your dealer to provide you the power supply cable for your Data Edition HandyDrive.


1.2.1.- Connecting the HandyDrive to a USB hub.-

The HandyDrive can be connected to the system's root port, or to a hub port. There are two kinds of USB hubs: Bus-Powered hubs (powered directly from the USB cable) and Self-Powered hubs (powered from their own power supply).

1.- Using Bus-Powered hubs (with no external power supply)

Generally speaking, Bus Powered hubs are designed to supply power only to Low Power devices (those drawing 100 mA or less, like keyboards, mouse or joystick, or those powered from their own power supply).

As the HandyDrive draws more than 100 mA, the external power supply is needed when connecting to a Bus-Powered hub.

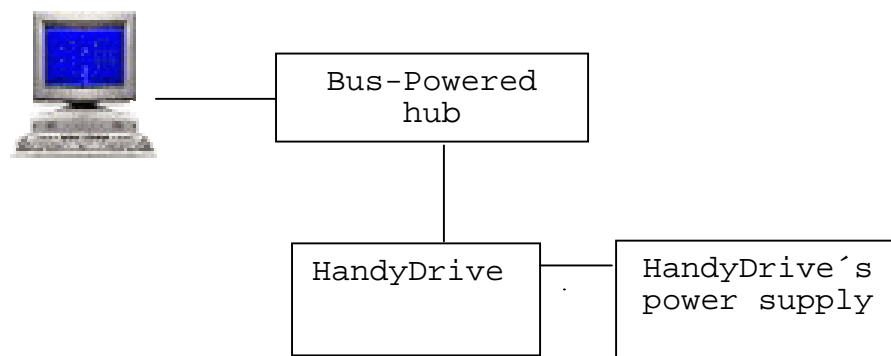


NB: Depending on the hub's particular design, it may be incompatible with Self-powered devices that are also able to work in the Bus-powered mode (like the HandyDrive), so that the system cannot work with the device even if the external power supply is being used. Under this situation, a message stating that "the hub does not

provide enough power level to the device” is issued. Due to this possible incompatibility, using the HandyDrive with Self-powered hubs is highly recommended.

2.- Self-Powered hubs (with external power supply)

Generally speaking, Self-Powered hubs can deliver adequate power level to the HandyDrive, so that the HandyDrive’s external power supply is not needed

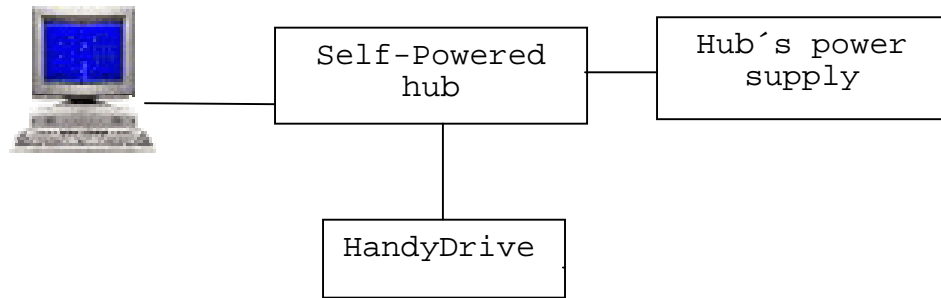

NB: Should adequate power supply not be delivered by the Self-Powered hub, the double connection cable provided with the HandyDrive can be used to connect the unit to two hub’s ports (see section **How to solve the inadequate power level problem?** above).

1.3.- Disconnecting the HandyDrive

Before disconnecting the HandyDrive from the computer, the safe removal procedures described in the section “Disconnecting the HandyDrive” corresponding to your Operating System must be followed. Failing to do so may lead to data loss.

Once the device has been safely stopped, the HandyDrive can be disconnected from the computer.

1.4.- System Requirements:

Compatibility:	PC, Apple/MAC, Linux
Hardware:	USB-2 port (USB-1 compatible)
Operating System:	Windows 98/98SE/Me/2000 Professional/XP Home Edition and Professional Mac OS 8.6, 9.x and X Linux (kernel 2.4.x and later)

1.5.- About the USB-2 interface

When the HandyDrive is connected into a USB-2 port, the data transfer rate is 40fold than that of the USB-1 mode (480 Mbps or 60 MB/s). Connecting the HandyDrive to a USB-1 port is also allowed, however the data transfer rate will slow down to that supported by the USB-1 port (12 Mbps or 1.5 MB/s).

Should the HandyDrive be connected into a USB-1 port or hub, it will run at USB-1 transfer rate. Should an external USB-2 hub be connected into a USB-1 port or hub, all devices connected to the USB-2 hub will run at USB-1 transfer rate.

My system does not have USB-2 ports available. What can I do?

If the system does not have USB-2 ports available, a USB-2 host adapter card supporting your Operating System can be installed.

Before acquiring a USB-2 host adapter card, read the manufacturer's documentation to check whether your Operating System is supported and whether it provides USB-2 support for your Operating System. Special attention must be paid to this issue should your Operating System be Windows 98 (First Edition) or MacOS, as some USB-2 boards support these Operating Systems only in the USB-1 mode.

Before acquiring a USB-2 host adapter card, you must read the manufacturer's documentation to check whether your system complies with the minimum requirements specified. For PC environments, a 266 or 333 MHz Pentium processor with 64 MB of RAM is usually required; for Macintosh environments, a Beige G3 rev. B Power Macintosh or later is normally required.

To be able to work with your USB-2 Data Edition HandyDrive in the USB-2 mode, the installed USB-2 ports must be first recognized by your Operating System.

How to know whether the USB port where I have attached my HandyDrive is running at USB-1 or USB-2 mode?

Under Windows, to have the USB-2 ports running into the USB-2 mode, the USB-2 driver must be installed. Should the USB-2 driver not be installed, the USB-2 ports will run at USB-1 mode. You may run the **Device Manager** to check this:

- Click on **My PC** with the right hand mouse button
- Select **Properties** on the options menu
- Under Windows 98/SE and Me, select the **Device Manager** tab
- Under Windows 2000 and XP, select the **Hardware** tab and then the **Device Manager** button

Get into the **Universal Serial Bus controllers** group and locate all the **USB host controllers**. Those controllers named **Universal/UHCI** or **Open/OHCI** are USB-1 controllers. Those controllers named **Enhanced/EHCI** are USB-2 controllers. Check for yellow or red marks on those controllers. Should one USB-2 card be installed on the system, one Enhanced/EHCI USB host controller must be found under the Device Manager, unless the USB-2 driver is not installed (in this case the controller may appear as an **Unknown device**). In this case follow the card instructions to install the USB-2 driver.

Every USB-2 port is USB-1 compatible, so USB-2 ports will show in the Device Manager as one Enhanced/EHCI USB host controller plus some Universal/UHCI or Open/OHCI USB host controllers, all of them corresponding to the same USB ports.

To check whether the USB port you have attached your HandyDrive is running at USB-1 or USB-2 mode, the Device Connection view must be selected:

- Under Windows 98/SE and Me, select the **Device connection view** radio button
- Under Windows 2000 and XP, open the **View** menu and select the **Device by connection** option

Open the device tree (by clicking with the primary mouse button on the **+** sign at the left of device entries) until the **PCI bus** device is located. Depending on system configuration, the PCI bus device can be located at the second or third device branch. Open the **PCI bus** branch and locate all the **USB host controllers** (on the **PCI bus** branch there may be a **PCI bridge** device, whose branch must also be opened to locate possible additional USB host controllers). Open all branches at all of the **USB host controllers** until the HandyDrive is located. If the HandyDrive is located at the branch of one **Enhanced/EHCI host controller**, then the port is running in USB-2

mode, but if it is located at the branch of one **Universal/UHCI** or **Open/OHCI host controller**, then the port is running in USB-1 mode.

Under MacOS, open the **Apple System Profiler** and select the **Devices and volumes** tab. The HandyDrive appears next to one of the USB ports in the system. Looking into the device information, the parameter **speed** will show **Full** if the port is running in USB-1 mode, or will show **High** if the port is running in USB-2 mode.

Under Linux, to have the USB-2 ports running into the USB-2 mode, the **EHCI** module must be loaded. Should the **EHCI** module not be loaded, the USB-2 ports will run in USB-1 mode. The **lsmod** and **dmesg** commands can be executed to check whether the **EHCI** module has been loaded or not. Some Linux distributions include the EHCI module but do not load it automatically, so you must run the **modprobe** command to have the module manually loaded. The **USBView** utility can also be run to check the type of available USB ports and to check what USB port type the HandyDrive attached to.

2.- MACINTOSH USERS

2.1.- Installing the extension

No additional extension is required. The HandyDrive is supported under MacOS 8.6, 9.x and MacOS X with the USB native extensions.

Should the system be MacOS 8.6, you must check that the native USB Support version is 1.3.5 or above. On the contrary, the USB Support must be upgraded (you may do that from the Apple's web site)

To get information on the USB-2 ports and USB-2 support availability on your system, please see section 1.5.

2.2.- Formatting the HandyDrive

The HandyDrive is already formatted and ready for use with a FAT-32 partition, so its icon will appear on the desktop when being connected. If reformatting the disk is not required, you may skip this section and jump to section 2.3.

If reformatting the HandyDrive is required at any other moment, you may do that by selecting the Erase Disk option from the Finder's Special menu under MacOS 8.6 or 9.x, or by the Disk Utility under MacOS X. HFS format is not recommended.

Due to the large disk capacity, if MacOS native format is desired, HFS+ format is recommended. HFS format is not recommended due to the high wasting of disk space produced as disk space assigned to each file is much larger than the real file size.

Should the DOS format be the only available choice in the Erase Disk utility, File Sharing Control Panel must be disabled in the Extension Manager to be able to reformat the HandyDrive into the HFS+ format.

Once the disk has been reformatted, File Sharing may be enabled again if desired.

Should Windows and/or Linux compatibility be desired, DOS (FAT-32) format must be used. Reformating the disk to the DOS format by Disk Utility under MacOS X is NOT recommended (see section **2.4.- MacOS X issues**).

2.3.- Disconnecting the HandyDrive

Before disconnecting the HandyDrive, please Eject the disk by throwing it into the can. After the HandyDrive's icon has disappeared from the desktop, the HandyDrive can be safely disconnected. Read section 2.4.

2.4.- MacOS issues

- MacOS 10.0.x **does not adequately support** DOS format. It is recommended **NOT to use** DOS volumes under this environment. Upgrading the MacOS version or reformatting the HandyDrive into the HFS+ format is recommended.
- MacOS 10.1.x and later do support DOS format, but DOS volumes created by Disk Utility are **incompatible** with Windows. Additionally, both MacOS 9 and X can take **several minutes** in mounting the volume on the desktop. Should reformatting the disk to the DOS format be required, it can be done under MacOS 9 or under Windows or Linux.
- When attaching a FAT-32 disk to MacOS 10.1.x, a verification of the whole partition is conducted by the system before the disk is mounted. When a large volume of data is contained in the disk, this verification can take some minutes, taking longer when attached to a USB-1 port. The red LED indicator of the HandyDrive lights on and off as this verification takes place. If avoiding this situation is desired, you can either upgrade the MacOS version or reformat the HandyDrive to the HFS+ format.
- When mounting or ejecting DOS volumes, sometimes it is necessary to move the mouse to have the icon mounted on or unmounted from the desktop under MacOS X.

3.- WINDOWS 98, WINDOWS 98SE AND WINDOWS Me USERS

3.1.- Installing the driver

3.1.1.- Installing the driver under Windows 98 and Windows 98SE

- Insert the HandyDrive's CDROM into the CDROM drive of your computer.
- A window showing several HandyDrive models is automatically opened.
- Select the Data Edition HandyDrive and then select the "Install the driver" option. Follow the screen instructions.

NB: If the installing window does not open automatically when the CDROM is inserted into the CDROM drive, it may be that your system does not automatically run Autorun files. Open the Explorer and locate the CDROM drive letter. Then double-click on the Autorun file located in the root folder of the CDROM.

Once the driver has been installed, the HandyDrive can be connected.

Should the HandyDrive be connected before installing the driver, the Windows New Hardware Found Wizard will open. In this case please close the Wizard and proceed with the driver installation as explained above.

To know how to get information on the USB-2 ports and USB-2 support availability on your system, please see section 1.5.

3.1.2.- Installing the driver under Windows Me

No additional driver is required. The HandyDrive is supported by the Windows Me native USB Mass Storage driver.

3.2.- Formatting the HandyDrive

The HandyDrive is already formatted and ready for use with a FAT-32 partition, so its icon will appear in My PC and in the Explorer when being connected. If reformatting the disk is not required, you may skip this section and jump to section 3.3.

If reformatting the HandyDrive is required at any other moment, you may do that by the Format option in the drive's menu:

- In My PC or in the Explorer, locate the HandyDrive's icon or letter.
- Click with the right hand mouse button on the HandyDrive's icon or letter, so that the device menu will appear.
- From the device menu, select the Format option. The Format Disk window will appear.
- Select Complete Format type.
- You may wish to give the partition a name by entering a volume name in the LABEL box.
- Select the Start button.
- A warning message is shown. Select Accept.
- At the end of the formatting process, Scandisk is suggested to be executed. You may wish to verify the partition by executing Scandisk (this may take a long time, as the disk surface is being verified).
- The formatting process is over. The HandyDrive can be now accessed and data can be read/written on it.

The file system being done is FAT-32, so that the volume is compatible with MacOS and Linux.

3.3.- Disconnecting the HandyDrive

Before disconnecting the HandyDrive, the device must be stopped by the "Stop and Eject Hardware" utility, located at the right side of the Task Bar (its icon is that of a PCMCIA card with an arrow above it).

By selecting this icon, all removable drives along with their respective logical letters will be shown. Select the HandyDrive and select **Stop**. Once the confirmation dialog box is shown, the HandyDrive can be safely disconnected.

Under Windows 98, the right hand mouse button must be used to select the Stop and Eject icon.

3.4.- Windows 98 and 98SE issues

This section includes VERY IMPORTANT information, applicable only when two or more partitions are going to be created in the HandyDrive. This is only recommended to advanced users.

The HandyDrive is already formatted and ready for use with a FAT-32 partition. Should you want to partition the HandyDrive into two or more partitions you can do that by the FDISK utility, but following restrictions must be observed:

- Due to a limitation in the **Windows 98** and **Windows 98SE** FORMAT utility, formatting a partition in a USB or firewire hard disk drive **starting above 8 GB is erroneously done**. This is to say, **the sum** of the capacity of the primary partition plus the capacities of any Logical Units except the last one **cannot be greater than 8 GB**. For example, if two partitions are being made, the primary partition cannot be greater than 8 GB. If three partitions are desired, the sum of the primary partition plus the first logical unit cannot be greater than 8 GB.

A general rule to check that this requirement is met, is that **the last Logical Unit created in the HandyDrive must have a capacity greater than the total HandyDrive capacity minus 8 GB**. This is to say:

- On the 40 GB HandyDrive, the last Logical Unit must have a capacity greater than 32 GB.
- On the 60 GB HandyDrive, the last Logical Unit must have a capacity greater than 52 GB.
- On the 80 GB HandyDrive, the last Logical Unit must have a capacity greater than 72 GB.
- On the 100 GB HandyDrive, the last Logical Unit must have a capacity greater than 92 GB.

Windows Me does not have this limitation, so that FDISK can be used to partition the disk into any number of partitions of any size.

4.- WINDOWS 2000 PROFESSIONAL AND WINDOWS XP HOME EDITION AND PROFESSIONAL USERS

4.1.- Installing the driver

No additional driver is required. The HandyDrive is supported by the Windows 2000 and XP native USB Mass Storage drivers.

To know how to get information on the USB-2 ports and USB-2 support availability on your system, please see section 1.5.

4.1.1.- Configuring the Windows XP write cache

You may speed-up disk write operations by activating the Windows XP write cache. To do that:

- Open My PC and click on the HandyDrive's icon with the right hand mouse button
- On the drive's menu select the **Properties** option
- Select the **Hardware** tab
- A list of all available disk drives is shown. Double click on the HandyDrive and select the **Properties** button
- Open the **Directives** tab
- Check the **Configure for performance** box and deselect the **Enable the disk write cache** box (this option has no utility and if disabled Windows XP will not ask for a system restart).

This procedure has to be done only once. Windows will remember this configuration for all subsequent attachments of the HandyDrive.

4.2.- Formatting the HandyDrive

The HandyDrive is already formatted and ready for use with a FAT-32 partition, so its icon will appear in My PC and in the Explorer when being connected. If reformatting or repartitioning the disk is not required, you may skip this section and jump to section 4.3.

If reformatting the partition is required at any other moment, you may do that by the Format option in the drive's menu, but following restrictions must be observed:

- **Windows 2000 Professional and Windows XP Home Edition and Professional cannot format to the FAT-32 file system partitions greater than 32 GB.**

Partitions greater than 32 GB can be formatted to the FAT-32 file system under Windows 98 / SE / Me, Linux and MacOS 9.

Optionally the HandyDrive can be partitioned into partitions smaller than 32 GB so they can be formatted to the FAT-32 file system under Windows 2000 or XP.

If desired the HandyDrive can be formatted to the NTFS file system, but then the NTFS partitions will only be accessible under Windows 2000 or XP.

Partitions must be created by the Disk Administrator. To do that you must log in the system with Administration rights. To open the Disk Administrator you may click on My PC with the right hand mouse button and select the Administrate option. The Disk Administration link is located on the list at the left of the window.

If Disk Administrator asks for permission to write a signature onto the disk, YES must be selected. Otherwise the HandyDrive will be put in off-line status, so you will not be able to create the partitions.

Locate the HandyDrive drive and right-click on the disk space to get the options menu

The partition may be formatted from within the Create Partition Wizard (one-step creating and formatting procedure), or it can be formatted afterwards either from the Disk Administrator or from My PC or Explorer (by the Format option within the drive's menu).

FAT-32 (for partitions smaller than 32 GB) or NTFS file systems can be selected, but NTFS partitions will only be accessible under Windows 2000 or XP.

See section 4.4.- Windows 2000 Professional and Windows XP Home Edition and Professional issues, about creating FAT-32 partitions and about Windows 2000's Disk Administrator

4.3.- Disconnecting the HandyDrive

Before disconnecting the HandyDrive, it must be stopped by the "Stop and Eject Hardware" utility, located at the right side of the Task Bar (its icon is that of a PCMCIA card with an arrow above it).

By selecting this icon, all removable drives along with their respective logical letters will be shown. Select the HandyDrive and select **Stop**. Once the confirmation dialog box is shown, the HandyDrive can be safely disconnected.

After data has been written onto the disk under XP, it is possible that stopping the device is not allowed at first time. In this case you can just retry the stopping procedure for a second time.

See next section 4.4.- Windows 2000 Professional and Windows XP Home Edition and Professional issues, about issues when stopping devices.

4.4.- Windows 2000 Professional and Windows XP Home Edition and Professional issues

- Due to a limitation in the Windows 2000 Professional's Disk Administrator, when a one-step partition creating and formatting process is executed, it may be possible that a formatting error will be reported. In this case, the partition (already created) must be selected and formatted again.
- Due to a limitation in Windows XP Home Edition and Professional, USB disks cannot be ejected if a view of them is opened in the Explorer or My PC (an error message is reported by the Stop and Eject utility, stating that some program is making use of the device). To be able to Stop and Eject the HandyDrive, make sure to close or change the view in the Explorer or My PC, then run the Stop and Eject utility again.
- The execution of some programs (backup, antivirus and so on) may sometimes prevent the Stop and Eject procedure from stopping the device (a message stating that the device cannot be stopped is shown), even if those programs have already finished. This is not a problem with the HandyDrive but with those programs or the Operating System itself. You can try to close all programs and/or close and open again the Windows session. If this does not work, the only solution is to restart Windows.
- Windows 2000 and XP cannot format to the FAT-32 file system a partition greater than 32 GB. If a partition greater than 32 GB is created, then:
 - Under Windows XP, NTFS is the only available choice when formatting either by the Disk Administrator or by the Format option of the drive's menu.
 - Under Windows 2000, FAT-32 is an available choice when formatting by the Disk Administrator, but the error message "Volume size is too large" is shown.

- Under Windows 2000, FAT and FAT-32 are available choices when formatting by the Format option of the drive's menu, but in both cases the error message "Windows could not finish formatting" is shown.

To be able to format a partition to the FAT-32 file system, the maximum size that can be specified in the Wizard is 32.768 MB under Windows XP, and 32.769 MB under Windows 2000. Due to this limitation, should you wish to format to the FAT-32 file system a partition greater than 32 GB, it must be formatted under Windows 98/SE/Me, that have no such limitations.

5.- LINUX USERS

5.1.- Installing the driver

No additional driver is required. Linux includes native USB-2 and USB Mass Storage support from kernel 2.4.18, and there are also available patches for earlier 2.4.x versions

To know how to get information on the USB-2 ports and USB-2 support availability on your system, please see section 1.5.

5.2.- Connecting the HandyDrive

The HandyDrive is assigned an SCSI device name (**sdx**). The **dmesg** command may be used to locate what device name was assigned.

5.3.- Formatting the HandyDrive

The HandyDrive is already formatted and ready for use with a FAT-32 partition. If reformatting or repartitioning the disk is not required, you may skip this section and jump to section 5.4.

If reformatting or repartitioning the HandyDrive is required at any other moment, you must be **superuser** .

Partitions are created by **fdisk**. Following is the command line to run **fdisk** on the **sda** device:

```
fdisk /dev/sda
```

Linux type partitions are created by default, so if another partition type is desired the partition type must be changed before exiting **fdisk**. You may do that by selecting the **t** option. To create a FAT-32 partition, the "c" partition type must be selected.

Once the partition has been created it can be formatted by **mkfs**. If you have created FAT-32 partitions, then the **mkfs.msdos** command must be used instead:

```
mkfs.msdos -F 32 /dev/sda1
```

The **Dosutils** package must be installed for **mkfs.msdos** command to be used.

This process takes a while and no progress indication is shown. You can confirm the formatting is taking place by looking at the red LED indication on the HandyDrive.

5.4.- Mounting and Unmounting the HandyDrive

The HandyDrive must be mounted to have the disk accessible. Likewise, the HandyDrive must be unmounted before disconnecting it from the computer.

If you are running a graphic environment, disk partitions have a device menu available from where partitions can be mounted and unmounted. If you are running a command line environment, the **mount** and **umount** commands must be used. The following command mounts the first partition on the **sda** device onto the **dir** folder (the folder where the disk is to be mounted must actually exist or be previously created):

```
mount /dev/sda1 /dir
```

The following command unmounts the partition that is actually mounted on the **dir** folder:

umount /dir

6. Features

Size	135 mm x 75 mm x 15 mm
Weight	180 gr.
Optional AC Adapter	The unit is powered from the USB port. The optional power supply output is DC 5V / 1,7 A
Interface	USB 2 (60 MB/s), compatible with USB 1
Hard disk	40 GB 60 GB 80 GB 100 GB
Accessories	USB cable Double connection USB cable CD with drivers User's Manual

7.- Problem solving quick guide

Problem	Root cause	Solution (see the User's Manual for more details)
.- The HandyDrive's LEDs do not light when connecting the drive to the computer or to a self-powered hub (powered from its own power supply)	.- Adequate power supply is not being delivered to the HandyDrive.	.- Use the special double connection USB cable to connect the HandyDrive to the computer or to the hub. .- Use the external power supply to operate the HandyDrive in the Self-Powered mode. See section 1.2 in the manual
.- Rattle noise from the disk's motor and heads is produced when connecting the HandyDrive to the computer or to a self-powered hub, and the LEDs do not light permanently (they flash all the time)	.- Adequate power supply is not being delivered to the Handydrive.	.- Use the special double connection USB cable to connect the HandyDrive to the computer or to the hub. .- Use the external power supply to operate the HandyDrive in the Self-Powered mode. See section 1.2 in the manual
.- The disk's motor does spin-up and the drive is recognized by the system, but read/write operation is not stable, and/or system hangs during the normal operation of the drive.	.- Adequate power supply is not being delivered to the Handydrive.	.- Use the special double connection USB cable to connect the HandyDrive to the computer or to the hub. .- Use the external power supply to operate the HandyDrive in the Self-Powered mode. See section 1.2 in the manual
.- When connecting the HandyDrive to a Bus-Powered hub, I get a message that the hub cannot deliver adequate power supply to the USB device, even if the HandyDrive is being powered from its own power supply.	.- The hub is not compatible with Self-powered devices that are also able to work in the Bus-powered mode (like the HandyDrive).	.- Use a Self-Powered hub See section 1.2.1 in the manual
.- File transfer issues	.- Driver issue or connecting issue or powering issue	.- Under Windows 98/SE make sure the driver is correctly installed. .- Check the HandyDrive is correctly powered and the green LED indicator is on permanently. .- Check the USB cable connections. Check that the red LED indicator flashes while file transfers are taking place.
.- When disconnecting the HandyDrive, I get a message that an USB device has been unsafely disconnected.	.- The HandyDrive has not been stopped before disconnecting it.	.- The device must be stopped before disconnecting it. See the Disconnecting procedure for your operating system in the User Manual
.- How do I format the HandyDrive under MacOS?		.- By the Erase Disk utility in the Finder's Special menu or by the Disk Utility (MacOS X). See section 2.2 in the manual
.- Under MacOS 9, the Erase Disk utility only shows the DOS option. How to format the HandyDrive to the HFS+ format?	.- MacOS 9 configuration	.- The File sharing control panel must be disabled in the Extension Manager. The Erase Disk utility will then show the HFS+ option.
.- When connecting/ejecting the HandyDrive, the volume is not mounted/unmounted on/from my MacOS X desktop.	.- MacOS X issue	.- Sometimes the FAT-32 volume is not mounted/unmounted in/from the MacOS X desktop until after the mouse has been moved.
.- When formatting the drive to the DOS format under MacOS X, Windows does not recognize the	.- MacOS X issue.	.- The DOS format made by Disk Utility is not correct. The volume may be formatted under MacOS 9 (or Windows or Linux).

partition and MacOS takes a long time to have the disk mounted.		
.- I have many problems under MacOS X 10.0.x and I have even lost data.	.- MacOS 10.0.x issue	.- DOS format is not adequately supported by MacOS 10.0.x. Upgrading the MacOS version or reformatting the HandyDrive to the HFS+ format is recommended.
.- After having used the HandyDrive under MacOS X, I see many duplicated files under MacOS 9, Windows and Linux.	.- MacOS X management of DOS volumes.	.- When files or folders are copied to a DOS volume under MacOS X, depending upon the MacOS version a control file for each one, with the same name but preceded by a dash, is also created. These files are not seen under OS X but are visible under other operating systems.
.- A yellow or red mark is shown next to the HandyDrive in the Device Manager (Win98/98SE)	.- The driver has not been correctly installed.	.- Reinstall the driver.
.- The disk icon does not appear in My PC when I connect the HandyDrive.	.- USB connection issue or Operating System issue	.- Check if yellow or red marks are shown in Device Manager. .- Check if the driver has been successfully installed under Windows 98/SE. .- Disconnect the HandyDrive from the USB port and reconnect again after 10 seconds. .- Restart Windows.
.- I cannot Stop the device under Windows XP or 2000	.- Windows XP and 2000 issue	Stop the HandyDrive again after trying one or some of the following actions: .- Under XP close all open views of the HandyDrive in My PC or Explorer, and then try to stop it again. .- Even if all views are closed, sometimes XP cannot stop the device for the first time if data has been written onto the disk. Retry for a second time. .- Close all programs making use of the disk (backup, antivirus and so on). .- Under Windows 2000, open and close the Disk Administrator. .- Close and open again the Windows session. .- If nothing works, restart Windows
.- When trying to format the partition to the FAT-32 format under Windows 2000 or XP, I always get the error that "the volume size is too large" or "Windows could not finish the format operation".	.- The partition is larger than 32 GB (Windows 2000 and XP limitation)	.- You may divide the disk space into several partitions shorter than 32 GB. .- You can create and format a FAT-32 partition larger than 32 GB under Windows 98/98SE and Me. It will be accessible under Windows 2000 and XP See section 4.4 in the User Manual
.- I don't find the mkfs.msdos command to format the HandyDrive under Linux	.- The Dosutils package is not installed	.- Install the Dosutils package .- Alternately, the disk may be formatted under Windows or MacOS 9.
.- My HandyDrive has much free space left but I cannot do a backup (or write a file) larger than 4 GB.	.- FAT-32 file system limitation	The FAT-32 file system has a file size limitation on 4 GB. .- You must divide your backup copies into pieces shorter than 4 GB.

8.- FAQ quick guide

Question	Answer
.- Can I install and boot the Operating System off the HandyDrive?	.- No. Booting off USB Mass Storage Devices would need to be supported both by system BIOS and by the Operating System.
.- What are the supported Operating Systems	.- Windows 98 / 98SE / Me / 2000 Professional and XP Home Edition and Professional, MacOS 8.6, 9.x and X and Linux (kernel 2.4.x or later). .- Only Windows 98/SE need a driver to be installed.
.- How can I format the HandyDrive?	The HandyDrive is delivered already partitioned and formatted with a FAT-32 partition. If needed, the HandyDrive can be reformatted or repartitioned by using the Operating System tools. See the "Formatting the HandyDrive" section corresponding to your Operating System for formatting procedures and limitations.
.- How many partitions can I create in my HandyDrive?	.- Only one volume can be created by the Erase Disk utility under MacOS 8 and 9. Should the disk be previously partitioned, each partition can be individually reformatted, but number of partitions or their sizes cannot be changed. .- Multiple partitions can be created under all other operating systems. See the "Formatting the HandyDrive" section corresponding to your Operating System for formatting procedures and limitations.
.- Can I access the HandyDrive under DOS or NT?,	.- USB is not supported by either DOS or NT. The only way to have the HandyDrive accessible under DOS or NT would be if it could be supported directly by the system BIOS. .- Anyway, FAT-32 is not supported by DOS or NT, so that the HandyDrive would be partitioned into 2 GB FAT partitions or be formatted to the NTFS format (only for use under NT).
.- Can I access the HandyDrive by booting off a floppy disk or CDROM or booting Windows in the System Symbol mode?	.- As of today, the only system supporting USB Mass Storage Devices when booting off a floppy disk or CDROM is Linux. Boot CDs and floppy disks can be generated, and microdistributions are also available in CDROM from several parties.
.- How to know whether my USB ports are USB-1 or USB-2? .- How to know whether the port attached to the HandyDrive is running at USB-1 or USB-2 mode?	See the section 1.5 of the User Manual for more details: .- Under Windows, open the Device Manager and look for the USB Host Controllers. Universal (UHCI) and Open (OHCI) Host Controllers are USB-1, whereas Enhanced (EHCI) Host Controllers are USB-2. .- Under MacOS, you can check your USB ports in the Apple System Profiler . .- Under Linux, you can check whether the EHCI driver has been loaded by lsmod and dmesg commands. The USBView utility can also be used to check the installed USB ports.
.- I have not got a USB 2.0 port in my PC, but only USB 1.1. How can I access the USB-2 HandyDrive?	.- You may connect the USB-2 HandyDrive to a USB-1 port but it will run at the slower USB-1 transfer rate. You can install a USB-2 host adapter card in your system (in this case, please check whether the card does support your operating system in the USB-2 mode). USB-2 transfer rate is 40fold the USB-1 rate. See section 1.5 in the User Manual for more details.
.- Can I format the HandyDrive to the NTFS / HFS / HFS+ / EXT2, etc?	Yes you can, but the HandyDrive will only be accessible under the Operating Systems supporting the relevant format: .- MacOS supports both FAT-32 and HFS+. .- Windows 98/SE/Me support FAT-32 .- Windows 2000/XP support both FAT-32 and NTFS. .- Linux supports FAT-32 and native types (EXT, EXT2). NTFS is supported only for reading.
.- Can I share the HandyDrive among Mac, Windows and Linux?	.- Yes as all them support the FAT-32 file system.
.- How can I work with my HandyDrive under Linux? Any driver needed?	.- USB-2 is supported from kernel 2.4.18 and patches are available for earlier versions 2.4.x. Should the EHCI module not being automatically loaded, manual loading may be accomplished by the modprobe command (see section 1.5 of the User manual for more details). .- Details on formatting and device mounting and unmounting are explained in the User Manual, and a comprehensive technical bulletin is also available at our web site es.fujitsu.com

