

SubstiTUBE® T8 Advanced EM

ST8A-0.9M-11.3W-EM

Datasheet



Innovative LED-lamp, easy and safe to use in CCG installations as direct retrofit. Energy saving potential of up to 70% by replacing 0.9 m T8 fluorescent tubes. Instant 100% light without flickering. No mercury.


Applicable in warehouses, cold storage, supply rooms, corridors, industry, stairways, garages, etc; for applications with high operating hours.

Technical Features


- LED lamp in T8 shape with G13 socket
- Weight: 160g
- For operation at magnetic ballast without rewiring
- LED starter bridge included
- Glass body
- Powerfactor > 0.9
- Up to 50.000 h lifetime
- Switching cycles > 200.000
- Color Rendering Index (CRI) > 80
- Overpower and short circuit protected
- High color homogeneity
- RoHS-conformity, no mercury
- Not for operation with ECG, not dimmable
- Energy Efficiency Class: A++

Technical operating data	Color	Colortemp. [K]	Lum. Flux [lm]	Voltage [V] / Frequency [Hz] / Input current [mA]	Power [W]	Radiance- Angle [°]
ST8A-0.9m-11.3W-840-EM	Cool White	4000	1700	220 -240 / 50-60 / 52	11,3	160
ST8A-0.9m-11.3W-865-EM	Cool Daylight	6500	1700			

Minimum / Maximum ratings	Ambient temperature Ta [C°]	Maximum temperature at Tc test point [C°]	Storage temperature Ts [C°]
ST8A-0,9M	-20°...50°	67°	-20°...80°

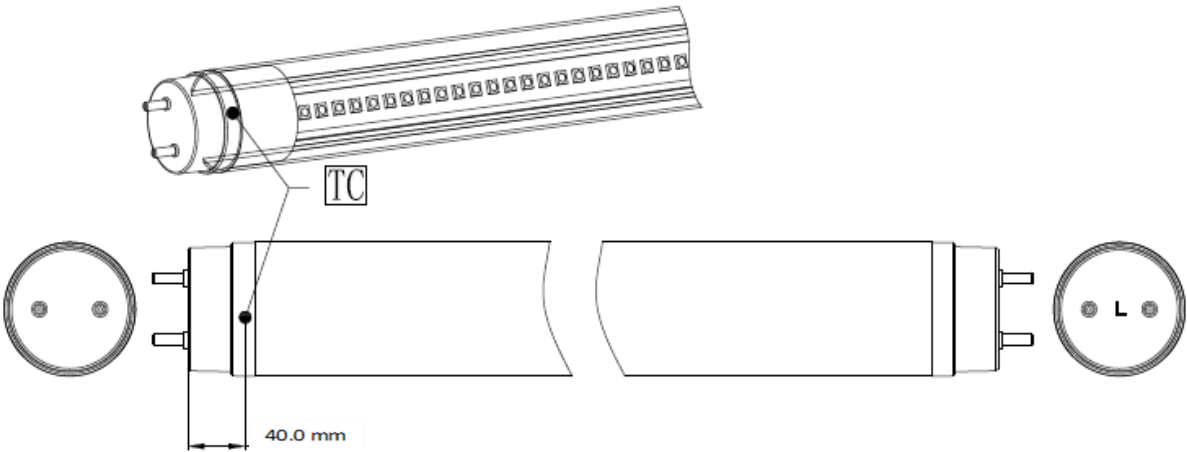


Drawings	l [mm]	d [mm]
ST8A-0,9M	893	27,8

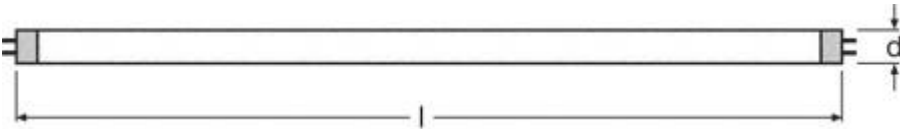

Safety and Application notes

 - The SubstiTUBE® Advanced must not be damaged or operated in a damaged condition.
- When operating with CCG, the included “SubstiTUBE® Start” has to be inserted as well. If the conventional starter is not replaced the SubstiTUBE® Advanced will start blinking. Switch off immediately, the SubstiTUBE® Advanced can be damaged!



Lamp suitable for 50 Hz or 60 Hz operation



Lamp not suitable for high frequency operation



Lamp not suitable for emergency operation

- Do not use SubstiTUBE® Advanced in luminaires which do not have any starter or when the starter cannot be replaced.
- Not usable in luminaires with serial lamp connection i.e. more than one tube at one magnetic ballast (tandem circuitry).
- The SubstiTUBE® Advanced emits light only with a limited angle, not like a fluorescent tube with 360° output.
- Due to the characteristic light distribution of the SubstiTUBE® Advanced, the resulting luminaire light characteristic is likely to change. It is not guaranteed that e.g. standards for lighting at working places will be complied to after replacement. A photometric check of the installation is recommended.
- The effective energy savings depend on the efficiency of the luminaire setup to be replaced and should be considered individually in each case. Particularly magnetic ballast losses are reduced to ohmic losses and are normally only about 1 W.



- The SubstiTUBE® Advanced is protected according to IP20. Applications with external risk of moisture and dust can be served with an adequately protected luminaire.

- SubstiTUBE® products differ in their diameters and geometries from fluorescent lamps. Their use in open batten luminaires with gaskets is possible if no excessive force is expended during the fixing. Obtaining the necessary IP protection in open batten luminaires with gaskets cannot be ensured.
- SubstiTUBE® Advanced may also be driven directly on line voltage. In order to grant a safe operation mode please refer to the installation instructions for further information.
- Photobiological Safety of lamps and lamp systems according to IEC 62471. Risk Group: Exempt

Maximum amount of SubstiTUBE Advanced on one circuit breaker



Circuit breaker 10 A (B type)	CCG	85
	CCG incl. Comp. Cap.	20
	Direct mains	90
Circuit breaker 16 A (B type)	CCG	135
	CCG incl. Comp. Cap.	30
	Direct mains	140

Installation Instruction for CCG

- Make sure that the supply voltage is disconnected.
- Carefully remove the fluorescent tube and starter according to the lamp holder type.
- Insert SubstiTUBE® Advanced and SubstiTUBE® Start properly.

Below an example for typical lamp holder types is described

- Turn the conventional lamp 90° degrees and take it out of the socket.
- Remove the conventional starter by turning it.
- Insert and latch the SubstiTUBE® Start into starter socket.
- Insert SubstiTUBE® Advanced into socket and locate into position by turning 90°.
- Check light emission direction.

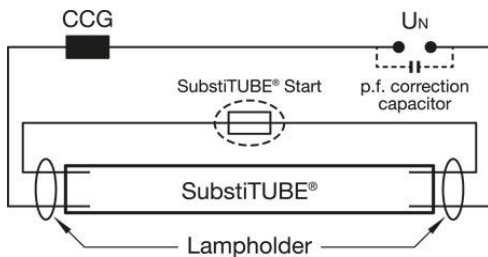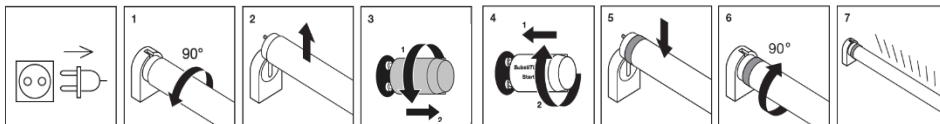

Circuit diagram of a retrofitted CCG luminaire

Ordering guide

Ordering guide	Light color	EAN*	S-Unit**
ST8A-0.9m-11.3W-840-EM	Cool White / 4000 K	4058075818095	10 x 1
ST8A-0.9m-11.3W-865-EM	Cool Daylight / 6500 K	4058075818118	

* EAN: Ordering number per single module

** S-Unit: Lamps per shipping unit

Sales and Technical Support

Sales and technical support is given by the local OSRAM subsidiaries. On our worldwide homepage all OSRAM subsidiaries are listed with complete address and phone numbers.

Further Information

Downloads: Eulumdat / IES files, CE declaration
www.ledvance.com/Substitube