

## Mobile / Multimedia Battery Charger Guide

AC Charger Model No.	DC Charger Model No.	Suitable for Original Brand	Suitable for use with Original Battery / Device Model #
HCUSB-IPHONE	CC1224U-IPHONE	<b>Apple</b>	iPhone, iPhone 3G, iPhone 3GS, iPod 1st Generation, iPod 2nd Generation, iPod 3rd Generation, iPod 4th Generation, iPod 5th Generation, iPod 6th Generation, iPod Mini, iPod Nano, iPod Photo, iPod Touch, iPod U2, iPod Video
HCUSB-MOTV3	CC1224U-MOTV3	<b>Asus</b>	A626, A686, A696, M530W, P320, P525, P526, P527, P535, P550, P735, P750, R300, R600, R700
HCUSB-MOTV3	CC1224U-MOTV3	<b>Blackberry</b>	5790, 5810, 5820, 6200, 6210, 6220, 6230, 6280, 6500, 6510, 6710, 7100g, 7100i, 7100r, 7100t, 7100v, 7100ve, 7100vi, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v, 7200, 7210, 7230, 7250, 7280, 7290, 7500, 7510, 7520, 7730, 7750, 8100c Pearl, 8100 Pearl, 8110 Pearl, 8120 Pearl, 8130 Pearl, 8300 Curve, 8310 Curve, 8320 Curve, 8330, 8350, 8700c, 8700f, 8700g, 8700r, 8700v, 8703e, 8800c, 8800 Curve, 8800g, 8800r, 8820, 8830, 9000 Bold
HCUSB-MOTV8	CC1224U-MOTV8	<b>Blackberry</b>	8220 Pearl, 8900 Curve, 9500, 9530 Storm
HCUSB-MOTV3	CC1224U-MOTV3	<b>Creative</b>	MuVo Slim, Zen Micro
HCUSB-MOTV3	CC1224U-MOTV3	<b>Danger</b>	Hiptop LX, Sidekick Slide
HCUSB-MOTV3	CC1224U-MOTV3	<b>Dell</b>	Pocket DJ 5GB
HCUSB-MOTV3	CC1224U-MOTV3	<b>Dopod</b>	565, 577W, 586, 595, 818, 838, 838 Pro, 900, C720, C720W, C730, C750, C800, C858, CHT 9100, D600, D802, D810, GALA100, M700, P100, P660, P800, P860, PU10, S1, S600, WIZA100
HCUSB-DPD696	CC1224U-DPD696	<b>Dopod</b>	696, 696i, 699
HCUSB-SET28	CC1224U-SET28	<b>Ericsson</b>	A2218, A2618, A2628, A3618, R300, R310, R320, T20, T28, T29, T39, T60, T65, T66, T68
HCUSB-MOTV3	CC1224U-MOTV3	<b>E-Ten</b>	Glofish X600, Glofish X650, Glofish X800, m700, X500, X550
HCUSB-MOTV3	CC1224U-MOTV3	<b>Google</b>	G1, G2
HCUSB-HPIP3800	CC1224U-HPIP3800	<b>HP</b>	iPAQ Models: 1910, 1915, 1930, 1935, 1940, 1945, 1950, 1955, 2210, 2215, 2400, 2410, 2415, 2495, 2755, 2795, 3800, 3830, 3835, 3850, 3870, 3875, 3900, 3950, 3955, 3970, 3975, 4150, 4155, 4350, 4355, 4700, 5150, 5450, 5455, 5470, 5550, 5555, 6300, 6315, 6320, 6325, 6340, 6500, 6510, 6515, 6828, 6900, 6920, 6925, H1900, H1910, H1930, H1940, H1945, H2200, H2210, H2212E, H2215, H3800, H3900, H4100, H4150, H4155, H4350, H4355, H5100, H5150, H5400, H5450, H5455, H5500, H5550, H5555, H6300, H6310, H6315, H6340, H6500, HW6500, HW6515, HW6700, HW6900, HX2000, HX2100, HX2110, HX2400, HX2415, HX2495, HX2700, HX2750, HX2795, RX1950, RX1955, RX3000, RX3115, RX3400, RX3417, RX3700, RX3715, RZ1700, RZ1710, RZ1715
HCUSB-MOTV3	CC1224U-MOTV3	<b>HP</b>	iPAQ 6818, iPAQ 6828
HCUSB-MOTV3	CC1224U-MOTV3	<b>HTC</b>	5800, Apache, Dash, Dream, Excalibur, Fusion, Fuze, G1, G2, Herald, Kaiser, Magic, Mogul, P3450, P3700, P4000, P4350, RAPH100, Raphael, S620, S720, Shadow, Snap, T7272, Titan, Touch, Touch 3G, Touch Diamond, Touch Diamond II, Touch Diamond Pro, Touch Dual, Touch Dual 850, Touch HD, Touch Pro, Touch Pro II, Touch Viva, TYTN, TYTN II, Wing, Wizard, XV6800
HCUSB-DPD696	CC1224U-DPD696	<b>HTC</b>	Alpine, Himalaya
HCUSB-DPD696	CC1224U-DPD696	<b>I-Mate</b>	PDA2
HCUSB-MOTV8	CC1224U-MOTV8	<b>LG</b>	AX155, AX265, AX300, AX500, AX830, BANTER, CF360, Chocolate 3, CT810, Dare, enV2, Glimmer, GR500, Incite, LG830, Lotus, LX265, LX400, Rhythm, RUMOR2, Spyder, Swift, UX265, UX280, UX300, UX830, VX8560, VX8610, VX9100, VX9700, Wine, XENON
HCUSB-LGKG800	CC1224U-LGKG800	<b>LG</b>	AX275, AX380, AX565, AX8600, CE110, CP150, CU515, CU575, CU720 Shine, CU915, CU920, ENV, Flare, KC550, KC910 Renoir, KE770 Shine, KE800 Chocolate Platinum, KE820, KE850 Prada, KE90, KE970 Shine, KF300, KF310, KF390, KF510, KF600 Venus, KF700, KF750 Secret, KF900 Prada, KG270, KG290, KG320, KG800 Chocolate, KG810, KG820, KG920, KM900 Arena, KP500 Cookie, KS20, KS360, KU311, KU800, KU950, KU970 Shine, KU990 Viewty, LG AX260, LX150, LX160, LX260, LX570, Musiq, Rumor, Scoop, Shine, Trax, TU515, TU720, U310, U830, UX260, UX380, UX565, Venus, Voyager, VU, VX10000, VX5400, VX8350, VX8500, VX8550, VX8600, VX8700, VX8800, VX9400, VX9900, Wave, White Chocolate
HCUSB-LGU8110	CC1224U-LGU8110	<b>LG</b>	B2000, B2100, C1100, C1200, C3300, C3310, C3320, F1200, F2100, F2300, F2400, F3000, F5100, G1600, G1610, G5500, G7020, G7030, G7050, HD5330, KG220, KG225, KG245, KP200, KP202, L1100, L342i, M4410, SE47, T2100, T5100, TD6000, TU400, TU500, TU550, U300, U8110, U8120, U8130, U8138, U8180, U8330, U8360, U8380, U8500, U880W, U890W
HCUSB-LG5300	CC1224U-LG5300	<b>LG</b>	DM-120, DM-150, DM-510, G1500, LG5300, LG5400, LG7100, TD4000
HCUSB-MOTV3	CC1224U-MOTV3	<b>Mitac</b>	Mio A201, Mio A501, Mio A700, Mio P350, Mio P550
HCUSB-MOT998	CC1224U-MOT998	<b>Motorola</b>	2088, 3688, 8088, Acomplii 6188, CD928, StarTac, V2088, V3688, V8088, V8088+, V998
HCUSB-MOTV3	CC1224U-MOTV3	<b>Motorola</b>	6510, 7510, 7520, A1200, A630, A688, A70, A780, A840, A845, C290, C330, C331g, C332g, C650, E1070, E310, E770v, EM28, EM330, ic402, ic502, ic602, ISCHIA, KRZR K1, KRZR K1M, KRZR K3, L2, L6, L7, Lifestyle 285, M300, MING, MPx200, PEBL U6, Profile 300, Profile 500, Q, Q700, Q9C, Q9M, Razr MAXX VE, Razr V3A Razr V3C, Razr V3E, Razr V3I, Razr V3M, Razr V3T, Razr V3X, Razr V3XX, Razr V3Z, Razr V6 Maxx, Rizr Z3, Rizr Z6TV, Rizr Z8, ROKR E2, ROKR E6, ROKR Z6M, Sidekick Slide, SKVR L6, SKVR L7, Slide, SLVR L7, T193, The Blend, The Buzz, Tundra, U6 PEBL, V180, V188, V190, V195, V197, V220, V2200, V235, V300, V323, V323i, V325, V325i, V360, V361, V365, V400, V500, V505, V525, V551, V600, VA76R, VE465 FROST, W175, W230, W315, W370, W375, W376, W377, W385, W490, W510, Z6C World Edition
HCUSB-MOTV60	CC1224U-MOTV60	<b>Motorola</b>	A1000, A630, A728, A760, A768, A840, A845, A860, C300, C331, C333, C341, C343, C353, C975, C980, E1000, E310, E398, E550, MPX220, ROKR E1, T280, T300P, T700, T720, T721, T722, T725, T730, T731, V1050, V120, V210, V260, V262, V265, V266, V276, V300, V303, V330, V400, V500, V501, V505, V525, V535, V545, V547, V550, V551, V60, V600, V60i, V620, V635, V66, V70, V80, V810, V975, V980
HCUSB-MOTV8	CC1224U-MOTV8	<b>Motorola</b>	Aura, EM325, i9, Krave, Q9E, Q9H, QA30, QSH, Razr2 V8, Razr2 V9M, Razr2 Z9, Razr VE20, Rokr E8, Rokr U9, STATURE, V750, V940, V950, V950 Renegade, VE20, VU204, Z9, ZN4, ZN5
HCUSB-NOK7250	CC1224U-NOK7250	<b>Motorola</b>	C250, C300, C330, C332, C333, C336, C350, C359, C375, C380, C385, C390, C450, C550, C650, C651, E375, E380, V150
HCUSB-MOTV3	CC1224U-MOTV3	<b>MWg</b>	Atom V, Zinc II
HCUSB-NDS	CC1224U-NDS	<b>Nintendo</b>	DS, Game Boy Advance SP
HCUSB-NDSL	CC1224U-NDSL	<b>Nintendo</b>	Nintendo DS Lite
HCUSB-NDSI	CC1224U-NDSI	<b>Nintendo</b>	Nintendo DSi
HCUSB-NOK7250	CC1224U-NOK7250	<b>Nokia</b>	1100, 1101, 1110, 1112, 1221, 1260, 1261, 1600, 2100, 2112, 2115i, 2116, 2116i, 2118, 2125, 2126, 2128, 2140, 2260, 2270, 2275, 2280, 2285, 2300, 2310, 2600, 2610, 2626, 2650, 2651, 2652, 3100, 3105, 3108, 3120, 3125, 3155, 3200, 3205, 3210, 3220, 3230, 3285, 3300, 3310, 3315, 3330, 3350, 3361, 3390, 3395, 3410, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3586, 3587, 3588, 3590, 3595, 3600, 3610, 3620, 3650, 3660, 5100, 5110, 5120, 5125, 5140, 5140i, 5160, 5165, 5170, 5180, 5185, 5190, 5210, 5510, 6010, 6012, 6015, 6016, 6019, 6020, 6021, 6030, 6060, 6100, 6108, 6110, 6150, 6155, 6170, 6200, 6210, 6220, 6225, 6230, 6230i, 6235, 6236, 6250, 6255, 6256, 6260, 6270, 6301, 6310, 6310i, 6340, 6360, 6370, 6385, 6510, 6560, 6585, 6590, 6600, 6610, 6610i, 6620, 6630, 6650, 6651, 6670, 6680, 6681, 6682, 6800, 6810, 6820, 6822, 7100, 7110, 7160, 7190, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7380, 7600, 7610, 7650, 7700, 7710, 8110, 8210, 8250, 8260, 8265, 8270, 8280, 8290, 8310, 8390, 8800, 8801, 8810, 8850, 8855, 8860, 8890, 8910, 8910i, 9110, 9210, 9210i, 9290, 9300, 9500, E60, E70, N-Gage
HCUSB-NOK6111	CC1224U-NOK6111	<b>Nokia</b>	1200, 1208, 1209, 1650, 1680 Classic, 2323 Classic, 2330 Classic, 2600 Classic, 2630, 2680 Slide, 2700 Classic, 2760, 3109, 3110 Classic, 3120 Classic, 3250, 3500 Classic, 3600 Slide, 5000, 5070, 5080, 5130 XpressMusic, 5200, 5300, 5310, 5500, 5610, 5700 XpressMusic, 5800 XpressMusic, 6070, 6080, 6085, 6101, 6103, 6110 Navigator, 6111, 6120 Classic, 6121 Classic, 6125, 6131, 6151, 6210 Navigator, 6220 Classic, 6233, 6234, 6260 Slide, 6267, 6270, 6280, 6288, 6300, 6500 Slide, 6555, 6600 Fold, 6600 Slide, 6700 Classic, 7070 Prism, 7100 Supernova, 7210 Supernova, 7310 Supernova, 7360, 7370, 7373, 7500 Prism, E50, E51, E61, E61i, E63, E65, E66, E71, E75, E90, N70, N71, N73, N76, N77, N78, N79, N80, N800 Internet Tablet, N80 Internet Edition, N810 Internet Tablet, N81 8GiG, N82, N90, N91, N91 8GiG, N92, N93, N95, N95 8GiG, N96
HCUSB-NOK6500	CC1224U-NOK6500	<b>Nokia</b>	6500 Classic, 7900 Crystal Prism, 7900 Prism, 8600 Luna, 8800 Arte, 8800 Sapphire Arte, N85, N97, N97 Mini
HCUSB-MOTV3	CC1224U-MOTV3	<b>O2</b>	Graphite, Xda Atom, Xda Atom Exec, Xda Atom Life, Xda Atom Pure, Xda II mini, Xda Stealth, Xda Zinc, Xphone II
HCUSB-DPD696	CC1224U-DPD696	<b>O2</b>	Xda II, Xda Iii
HCUSB-DPD696	CC1224U-DPD696	<b>Orange</b>	SPV M1000, SPV M1500, SPV M2500
HCUSB-PALM	CC1224U-PALM	<b>Palm</b>	M130, M515, Tungsten T, Tungsten W, ZIRE 71

## Mobile / Multimedia Battery Charger Guide

AC Charger Model No.	DC Charger Model No.	Suitable for Original Brand	Suitable for use with Original Battery / Device Model #
HCUSB-NOK6500	CC1224U-NOK6500	<b>Palm</b>	Pre
HCUSB-MOTV8	CC1224U-MOTV8	<b>Palm</b>	Pre, Treo 800w, Treo Pro
HCUSB-DPD696	CC1224U-DPD696	<b>Qtek</b>	2020, 2020i, 2060
HCUSB-MOTV3	CC1224U-MOTV3	<b>RCA</b>	Lyra Jukebox RD2762
HCUSB-SAMG800	CC1224U-SAMG800	<b>Samsung</b>	Avila, Beat, Corby, GT-B2700, GT-C3050, GT-C3110, GT-C5220, GT-E2510, GT-M3510 Beat, GT-M8800 Pixon, GT-S3650 Corby, GT-S3653 Corby, GT-S5230 Avila, GT-S5230 Player One, GT-S5230 Star, GT-S5230 Tocco Lite, GT-S5233 Avila, GT-S5233 Player One, GT-S5233 Star, GT-S5233 Tocco Lite, GT-S7330, Luxe, Omnia, Pixon, Player One, SGH-A551, SGH-A561, SGH-A821, SGH-C450, SGH-E210, SGH-F110, SGH-F210, SGH-F250, SGH-F330, SGH-F400, SGH-F480, SGH-F488, SGH-F490, SGH-F700, SGH-G600, SGH-G800, SGH-i200, SGH-i450, SGH-i550, SGH-i560, SGH-i617 BlackJack, SGH-i640, SGH-i780, SGH-i900 Omnia, SGH-i908, SGH-J610, SGH-J700, SGH-J750, SGH-J800 Luxe, SGH-L760, SGH-M110, SGH-M600, SGH-M610, SGH-U800, SGH-U900 Soul, SGH-Z720, Soul, Star, Tocco Lite
HCUSB-NOK6500	CC1224U-NOK6500	<b>Samsung</b>	B3310, B7610 Omnia Pro, Beat DJ, C5510, Emporio Armani, G810, Galaxy, GT-B3310, GT-B7610, GT-C5510, GT-F7500, GT-i8000, GT-i8510, GT-i8910, GT-M7500, GT-M7600, GT-S5600, GT-S5603, GT-S7220, GT-S7350, GT-S8000, GT-S8000H, GT-S8300, i7500 Galaxy, i8000 Omnia 2, i8510 innov8, i8910 Omnia HD, Innov8, Jet, M7500 Emporio Armani, M7600 Beat DJ, Omnia 2, Omnia HD, Omnia Pro, Preston, S5600 Preston, S7220 Ultra B, S7350 Ultra S, S8000H, S8000 Jet, S8300 Ultra Touch, SGH-G810, Ultra B, Ultra S, Ultra Touch
HCUSB-SAM2510	CC1224U-SAM2510	<b>Samsung</b>	GT-E2510, SGH-A401, SGH-A402, SGH-A411, SGH-A412, SGH-A701, SGH-A711, SGH-A801, SGH-A811, SGH-C170, SGH-C520, SGH-D520, SGH-D528, SGH-D800, SGH-D807, SGH-D808, SGH-D820, SGH-D830, SGH-D840, SGH-D848, SGH-D888, SGH-D900, SGH-E200, SGH-E250, SGH-E390, SGH-E420, SGH-E500, SGH-E570, SGH-E590, SGH-E740, SGH-E780, SGH-E790, SGH-E830, SGH-E840, SGH-E870, SGH-E900, SGH-F200, SGH-F300, SGH-F330, SGH-F300, SGH-F500, SGH-i520, SGH-i600 BlackJack, SGH-i607, SGH-i620, SGH-i718, SGH-j400, SGH-j600, SGH-j600i, SGH-L170, SGH-L600, SGH-M300, SGH-M610, SGH-P300, SGH-P310, SGH-T329, SGH-T509, SGH-T519, SGH-T629, SGH-T809, SGH-U100, SGH-U300, SGH-U420, SGH-U600, SGH-U700, SGH-X208, SGH-X530, SGH-X820, SGH-X830, SGH-Z150, SGH-Z170, SGH-Z230, SGH-Z400, SGH-Z510, SGH-Z540, SGH-Z560, SGH-Z630, SGH-Z710, SGH-Z720
HCUSB-SAME700	CC1224U-SAME700	<b>Samsung</b>	SCH-600, SCH-620, SGH-A130, SGH-A288, SGH-A300, SGH-A400, SGH-A601, SGH-A800, SGH-C100, SGH-C300, SGH-D410, SGH-D500, SGH-D508, SGH-D510, SGH-D600, SGH-E100, SGH-E310, SGH-E330, SGH-E360, SGH-E370, SGH-E600, SGH-E630, SGH-E700, SGH-E730, SGH-E738, SGH-E770, SGH-E800, SGH-E820, SGH-N181, SGH-N361, SGH-N500, SGH-P400, SGH-P510, SGH-R210, SGH-R220, SGH-S300, SGH-S308, SGH-S500, SGH-T100, SGH-T108, SGH-T400, SGH-T500, SGH-T508, SGH-V200, SGH-X100, SGH-X150, SGH-X200, SGH-X430, SGH-X460, SGH-X480, SGH-X530, SGH-X600, SGH-X640, SGH-X660, SGH-X680
HCUSB-SAME530	CC1224U-SAME530	<b>Samsung</b>	SGH-A300, SGH-A400, SGH-A800, SGH-B500, SGH-C100, SGH-C110, SGH-C120, SGH-C130, SGH-C200, SGH-C210, SGH-C300, SGH-D410, SGH-D500, SGH-D508C, SGH-D600, SGH-D608, SGH-D720, SGH-E100, SGH-E300, SGH-E310, SGH-E330, SGH-E330N, SGH-E340, SGH-E350, SGH-E350E, SGH-E360, SGH-E370, SGH-E380, SGH-E400, SGH-E530, SGH-E600, SGH-E610, SGH-E630, SGH-E700, SGH-E720, SGH-E730, SGH-E770, SGH-E770, SGH-E800, SGH-E820, SGH-E850, SGH-I300, SGH-I320, SGH-N100, SGH-N400, SGH-N500, SGH-N600, SGH-N620, SGH-P200, SGH-P400, SGH-P510, SGH-P730, SGH-Q100, SGH-Q200, SGH-R210S, SGH-S100, SGH-S300, SGH-S400i, SGH-S500, SGH-S500i, SGH-T100, SGH-T400, SGH-V200, SGH-X100, SGH-X140, SGH-X150, SGH-X160, SGH-X200, SGH-X210, SGH-X300, SGH-X450, SGH-X460, SGH-X480, SGH-X500, SGH-X520, SGH-X530, SGH-X600, SGH-X620, SGH-X630, SGH-X640, SGH-X650, SGH-X660, SGH-X670, SGH-X680, SGH-X700, SGH-X810, SGH-X810, SGH-Z105, SGH-Z130, SGH-Z300, SGH-Z500
HCUSB-MOTV8	CC1224U-MOTV8	<b>Samsung</b>	SPH-M220, SPH-M320, SPH-M540 Rant, SPH-M630 Highnote
HCUSB-MOTV8	CC1224U-MOTV8	<b>Sanyo</b>	Katana Eclipse, Katana LX, PRO200, PRO700, S1, SCP2500, SCP3800, SCP6750
HCUSB-SHPGX15	CC1224U-SHPGX15	<b>Sharp</b>	550SH, 770SH, GX15, GX17, GX25, GX29, GX293, GX30, GX30c, GX30i, GX31, GX32, GX40, GX-E30, GX-F200, GX-L15, GX-T15, GX-T17, GX-T25, GX-T29, GX-T300, GZ200, SX-633, WX-T81
HCUSB-MOTV3	CC1224U-MOTV3	<b>Sharp</b>	EM-One S01SH, Hiptop LX, PV250, Sidekick LX
HCUSB-SEIMC25	CC1224U-SEIMC25	<b>Siemens</b>	A35, A40, A50, C25, C45, M35, M50, ME45, S25, S35, S45, SL45
HCUSB-SEIMC55	CC1224U-SEIMC55	<b>Siemens</b>	A52, A55, C55, C60, C65, CF62, CV65, CX65, CX70, CXV65, CXV70, M55, M65, MC60, S55, S65, SK65, SL55, SL65, SK1
HCUSB-SONYPSP	CC1224U-SONYPSP	<b>Sony</b>	PSP-1000, PSP-2006
HCUSB-MOTV3	CC1224U-MOTV3	<b>Sony</b>	Walkman NW-E507
HCUSB-SEK750	CC1224U-SEK750	<b>Sony-Ericsson</b>	Aino, C510, C702a, C702i, C901 GreenHeart, C902, C902i, C903, C905, D750i, F305, G502, G700i, G705, G900i, J100a, J100c, J100i, J110a, J110c, J110i, J120c, J120i, J220a, J220c, J220i, J230c, J230i, Jalous, K200a, K200c, K200i, K220c, K310a, K310c, K310i, K320i, K330, K510a, K510c, K510i, K530i, K550c, K550i, K550im, K550imi, K610i, K610im, K618i, K630i, K660i, K750c, K750i, K758c, K770i, K790a, K790c, K790i, K800i, K810i, K818c, K850i, K858i, M600i, M608c, P1i, P910, P910a, P910c, P910i, P990i, R300i, R306i, S500i, Satio, T270i, T280i, T303, T650i, T658i, T700, T707, T715, V630i, V640i, W200a, W200c, W200i, W300c, W300i, W302, W350a, W350i, W380a, W380i, W395, W508, W518a, W550c, W550i, W580i, W595, W600, W600c, W600i, W610c, W610i, W660i, W700c, W700i, W705, W710c, W710i, W712a, W715, W760, W760i, W800, W800c, W800i, W810c, W810i, W830c, W830i, W850i, W880i, W888c, W890i, W898c, W900c, W900i, W902, W908c, W910i, W950c, W950i, W958c, W960i, W980i, W995, Z250i, Z258i, Z310a, Z310i, Z320i, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z555i, Z558c, Z558i, Z610i, Z710c, Z710i, Z750a, Z750i, Z780a
HCUSB-MOTV3	CC1224U-MOTV3	<b>Sony-Ericsson</b>	Apsen, Vivaz, Xperia X1, Xperia X10, Xperia X1a
HCUSB-SET28	CC1224U-SET28	<b>Sony-Ericsson</b>	C1002S, D750i, F500i, J200c, J200i, J210, J210c, J210i, J300, J300a, J300c, J300i, K300, K300a, K300c, K300i, K500, K500c, K500i, K506c, K508c, K508i, K600i, K608i, K700, K700c, K700i, K750i, P800, P800c, P802, P900, P902, P908, P910, P910a, P910c, P910i, P990c, S700, S700c, S700i, S710a, T100, T105, T200, T226, T226m, T226s, T230, T237, T237S, T238, T28, T290, T290a, T290c, T290i, T300, T302, T306, T310, T312, T316, T39, T600, T606, T608, T610, T610NZ, T616, T618, T61c, T61d, T61x, T61z, T628, T62u, T630, T637, T66m, T68i, T68ie, T68m, V600i, V800Z1010, Z200, Z208, Z300, Z300a, Z300c, Z300i, Z500, Z500a, Z500c, Z500i, Z600, Z800, Z800i
HCUSB-PALM	CC1224U-PALM	<b>Sony-Ericsson</b>	J132
HCUSB-MOTV3	CC1224U-MOTV3	<b>Telstra</b>	Hiptop LX, Hiptop Slide
HCUSB-DPD696	CC1224U-DPD696	<b>T-Mobile</b>	MDA II
HCUSB-MOTV3	CC1224U-MOTV3	<b>T-Mobile</b>	Sidekick LX, Sidekick Slide
HCUSB-LGK6800	CC1224U-LGK6800	<b>UTStarcom</b>	C711
HCUSB-DPD696	CC1224U-DPD696	<b>Vodafone</b>	VPA II
HCUSB-ZTE850	CC1224U-ZTE850	<b>ZTE</b>	F150, F151, F152, F153, F156, F158, F159, F165, F165i, F252, F256, F850, F851, T165i, T6, T7

\*Some Fixed Plug DC chargers available - see website for more details.

### Mobile / Multimedia Battery Charging Solutions

AC USB Type Solution



DC USB Type Solution



Packaged AC Charger



Packaged DC Charger

USB AC & DC Solutions are interchangeable and individual parts are available separately, see Website for more details.