



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.



LATTISSIMA PREMIUM AND ORIGINAL



Duration: 20 minutes
Machine Displayed: *Lattissima Premium*

STEP 1



Turn the machine on and allow it to warm up.

STEP 2



Eject the capsule. Close the lever.

STEP 3



Empty the capsule container and drip tray and reinsert.

STEP 4




Fill the water tank halfway full with water and pour in **1 packet** of descaling solution.

STEP 5




Attach the hot water nozzle to the connecting pipes on the left side of the machine.

STEP 6

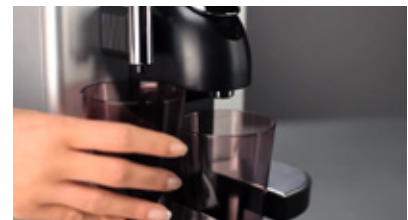

Insert the water tank and place a receptacle under the coffee and hot water outlets.

STEP 7

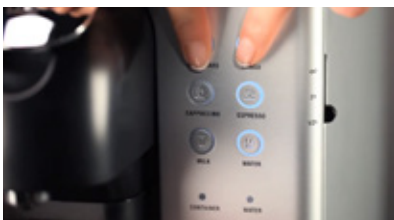


Simultaneously press and hold the Lungo and Latte Macchiato buttons for 5 seconds or until the Lungo button begins to blink quickly.

STEP 8



Press and release the Lungo button. The recipe buttons will blink alternately and the solution will flow out of the coffee and hot water outlets alternately as well.

STEP 9

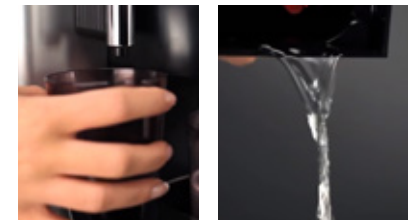

Once the Lungo button is blinking alone, discard the solution. Empty the drip tray and reinsert.



STEP 10



Rinse the water tank thoroughly, refill to the MAX line with fresh water and reinsert.

STEP 11



Put the receptacle back under the coffee and hot water outlets. Press and release the Lungo button to begin rinsing.

STEP 12



The recipe buttons will blink alternately and the water will flow out of the coffee and hot water outlets alternately as well.

STEP 13




The Lattissima Premium shuts off when descaling is complete. The Original machine enters standby mode.

STEP 14



Rinse and refill the water tank and reinsert.

STEP 15

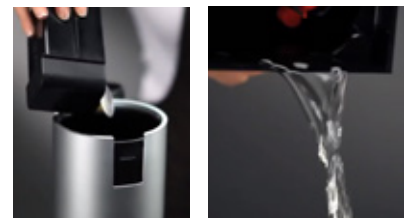

Empty and rinse the capsule container and drip tray and reinsert.

STEP 16



Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes. The machine is now ready for use.