




# PowerTel 580 Combo




## User Guide

## Corded phone base

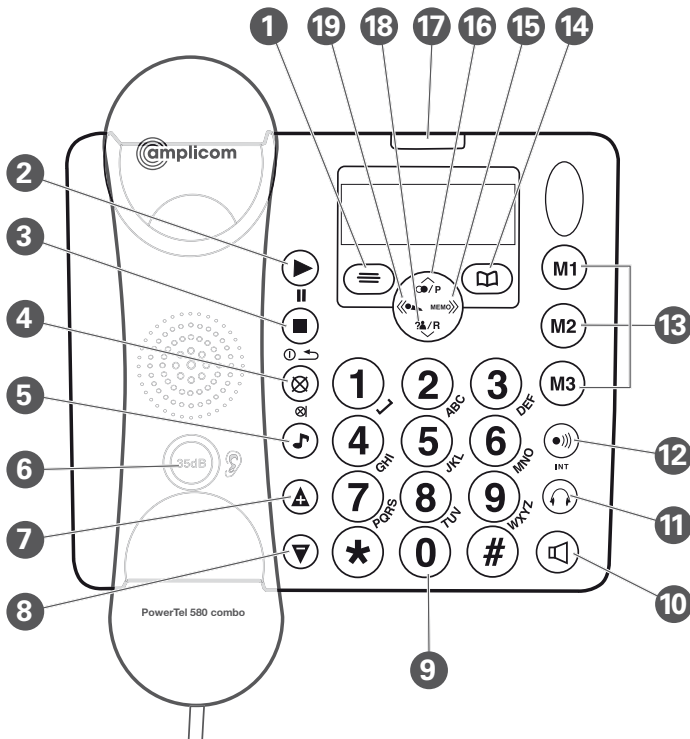

- 1 Menu/OK
- 2 Play/Pause
- 3 Stop
- 4 Mute/Delete
- 5 Equaliser
- 6 35dB Boost (under handset)
- 7 Volume up
- 8 Volume down
- 9 Keypad
- 10 Handsfree
- 11 Headset
- 12 Find handset/Intercom/Registration
- 13 Quick dial memories/User profiles
- 14 Phonebook
- 15 Fast forward/Memo
- 16 Up/Redial/Pause
- 17 Incoming call light/New messages received
- 18 Down/Calls list/Recall
- 19 Rewind/OGM

## Cordless handset and charger base

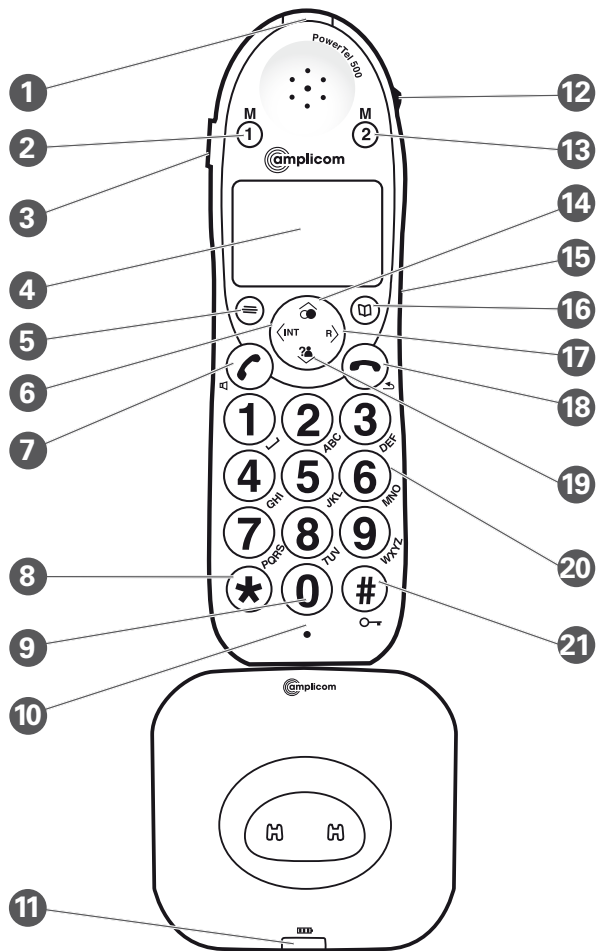

- |                                   |   |
|-----------------------------------|---|
| <b>1</b> Incoming call light      | <b>12</b> Volume up/down                        |
| <b>2</b> Memory 1                 | <b>13</b> Memory 2                              |
| <b>3</b> 35dB Boost               | <b>14</b> Up/Redial                             |
| <b>4</b> Display                  | <b>15</b> Headset socket (Headset not included) |
| <b>5</b> Enter Menu/ Mute/Delete  | <b>16</b> Phonebook/ Save/OK                    |
| <b>6</b> Internal call            | <b>17</b> Recall                                |
| <b>7</b> External call/ Handsfree | <b>18</b> End call                              |
| <b>8</b> */Ringer on/off          | <b>19</b> Down/Calls list/ Equaliser            |
| <b>9</b> Pause (long press 0)     | <b>20</b> Keypad                                |
| <b>10</b> Microphone              | <b>21</b> #/Keylock                             |



<b>Getting started</b> .....	<b>9</b>	Redial a number using your cordless handset.....	22
Check box contents .....	10	Call back a previous caller .....	22
<b>Set up your phone system in four simple steps</b> .....	<b>11</b>	Dial a number in your phone book...	23
Corded phone base display icons explained .....	14	Dial a number using the quick dial buttons .....	23
Cordless handset display icons explained .....	15	Adjust the corded phone earpiece volume .....	24
Phone menu guide.....	17	Adjust the cordless handset earpiece volume .....	24
How to use your phone menu display.....	17	Boost the handset earpiece volume.	24
<b>Making and receiving calls</b> .....	<b>19</b>	Handsfree feature .....	24
Make a call using your corded phone .....	20	Use handsfree calling on your corded phone .....	25
Make a call using your cordless handset.....	20	Use handsfree calling on your cordless handset.....	25
End a call .....	20	Adjust the tone on the corded phone base only .....	25
Take a call .....	21	See call length.....	26
Redial a number using your corded phone base.....	21	Use a headset (not included) with the corded phone .....	26

Use a headset (not included) with the cordless handset.....	26	To deregister a handset using the cordless handset .....	30
Mute.....	26	Power failure – what to do .....	31
Mute the microphone on the corded phone.....	26	<b>Using your menu – corded phone ...</b>	<b>33</b>
Mute the microphone on the cordless handset.....	26	Priority/Default Setting.....	34
Switch the cordless handset ringer on and off only.....	27	User Profiles.....	34
Lock and unlock the cordless handset keypad.....	27	Change the profile name.....	34
Make an internal call.....	27	Change a profile’s handset volume..	35
Transfer an external call internally ...	28	Change a profile’s boost setting.....	36
Make a conference call using the corded phone.....	28	Change a profile’s tone ('equaliser') setting .....	36
Make a conference call using the cordless handset .....	29	Choosing which profile to use .....	37
Register a handset .....	29	Change ringer melody.....	38
Deregister a handset .....	30	Change ringer volume.....	38
To deregister a handset using the base corded phone .....	30	Switch key tone on or off.....	39
		Change display contrast.....	39
		Change display language.....	40
		Remember boost.....	40
		Read number.....	41
		Change to upper or lower case.....	41

Change System PIN.....	42	Delete a quick dial entry.....	50
Change date/time.....	42	<b>Using your calls list –</b>	
Change clock hours to 12- or 24-hour format display .....	43	<b>corded phone.....</b>	<b>51</b>
Reset to default settings .....	43	Store numbers from your calls list to the phonebook or quick dial memory (M1, M2, M3) .....	52
<b>Using your phone book –</b>		Delete a single calls list entry .....	52
<b>corded phone.....</b>	<b>44</b>	Delete all calls list entries.....	53
How to use the keypad when using your phone book .....	44	<b>Using your menu –</b>	
Enter a name and number in your phone book.....	45	<b>cordless handset .....</b>	<b>55</b>
Edit a phone book entry .....	45	Priority/Default Setting.....	56
Delete a phone book entry.....	46	User Profiles.....	56
Delete all phone book entries .....	47	Change a profile name .....	56
Copy phone book entries to another handset.....	47	Change a profile’s handset volume..	57
<b>Using your quick dial memory –</b>		Change a profile’s boost setting.....	57
<b>corded phone.....</b>	<b>49</b>	Change a profile’s tone (‘equaliser’) setting .....	58
Store a quickdial name and number	49	Copy a profile.....	59
Edit a quick dial entry .....	50	Choosing which profile to use .....	59
		Change the handset ringer melody..	60

Change the handset ringer volume..	61
Change the tone ('equaliser') setting	61
Remember boost .....	62
Change handset name .....	62
Switch key pad beep on or off.....	63
Change contrast.....	63
Switch auto talk on or off.....	64
Change backlight timer .....	64
Switch confirmation beep on or off .	65
Select base.....	65
Change language.....	66
Change system PIN code .....	66
Change date/time.....	67
Change clock hours to 12 or 24 hour format.....	67
Set alarm .....	68
Switch night light on or off .....	68
Base Settings .....	69
Change base ringer melody.....	69
Change base ringer volume.....	69

<b>Using your phone book – cordless handset .....</b>	<b>70</b>
How to use the keypad when using your phone book .....	70
Enter a name and number in your phone book.....	71
Edit a phone book entry .....	71
Delete a phone book entry or all entries .....	72
Copy phone book entries to another handset.....	73
<b>Using your quick dial memory buttons – cordless handset.....</b>	<b>74</b>
Store a quick dial name and number	74
Edit a quick dial entry .....	74
Delete a quick dial entry.....	75
<b>Using your calls list – cordless handset .....</b>	<b>76</b>
Store numbers from your calls list to the phonebook.....	77



Delete a single calls list entry .....	77	Change PIN.....	85
Delete all calls list entries.....	78	Call in to check messages.....	86
<b>Using your answering machine .....</b>	<b>79</b>	<b>Use on a private branch exchange ..</b>	<b>87</b>
Switch answering machine on or off.....	80	To set recall time using the corded phone.....	88
Set the answering machine language .....	80	To set recall time using the cordless handset.....	88
Set answer mode.....	80	Insert a dialling pause .....	89
Record your outgoing message .....	81	Using additional services.....	89
Set answer delay .....	82	Set dial mode .....	90
Record a memo.....	83	To change dial mode using the corded phone.....	90
Listen to messages or memos using the corded phone .....	83	To change dial mode using the cordless handset.....	90
Delete a single message or memo...	84	Reset to default settings .....	91
Delete all messages and memos.....	84	To reset to default settings on your corded phone .....	91
Listen to messages or memos using your cordless handset.....	84	To reset to default settings on your cordless handset.....	91
Memory full.....	85		
Remote access to your answering machine .....	85		

<b>Help and support.....</b>	<b>93</b>
Troubleshooting guide .....	94
<b>General information.....</b>	<b>97</b>
Safety information.....	98
Disposal .....	100
Technical details .....	101
Default settings.....	102
Maintenance and guarantee .....	104
Declaration of Conformity.....	105
<b>Index .....</b>	<b>106</b>

# Getting started

# Getting started

**Important: please make sure you've read the safety information on page 98 before you set up your phone system.**

## Check box contents

You should have:


- 1 corded phone base (includes handset and answering machine base)
- 1 cordless handset
- 1 battery cover
- 1 belt clip
- 1 charger base (for cordless handset)
- 2 power adapters (one's already attached to your charger base)
- 1 telephone cable
- 2 rechargeable AAA 1.2V 800mAh NiMH batteries

**Important: use only the power adapters, telephone line cord and batteries supplied with your PowerTel 580 Combo otherwise your phone may not work.**

# Set up your phone system in four simple steps

## 1 Connect your corded phone base


- i. Plug the power adapter (the one with nothing attached to it) into the back of your corded phone base and the other end into the mains power wall socket and switch on.
- ii. Plug the telephone cable into the back of your corded phone base and the other end into the phone wall socket.
- iii. Plug one end of the handset cable into the handset and the other end into the side of the base.

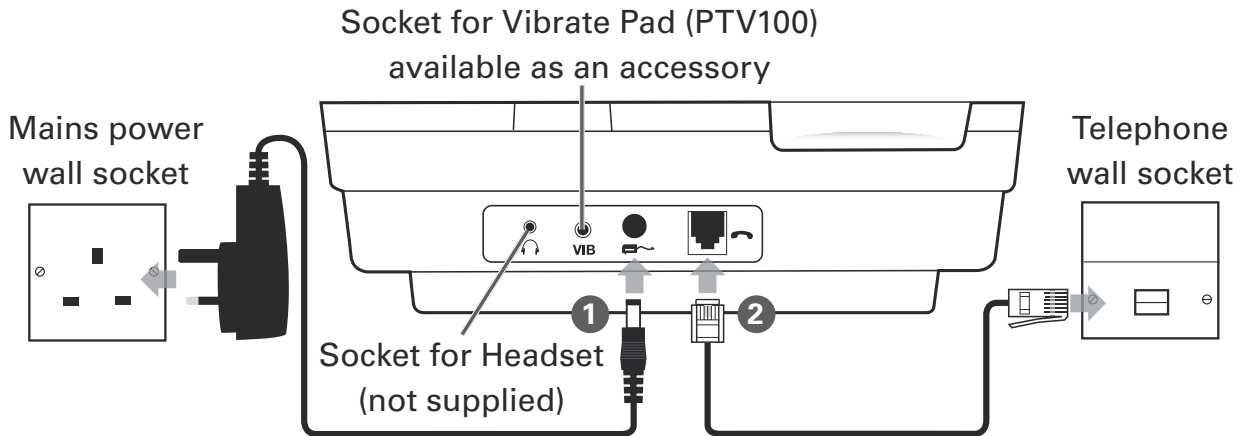

**Important: use only the power adapters, telephone line cord and batteries supplied with your PowerTel 580 Combo otherwise your phone may not work.**


## 2 Connect your charger base

Plug the other power adapter that's already attached to your charger base into your mains power wall socket and switch the power on.

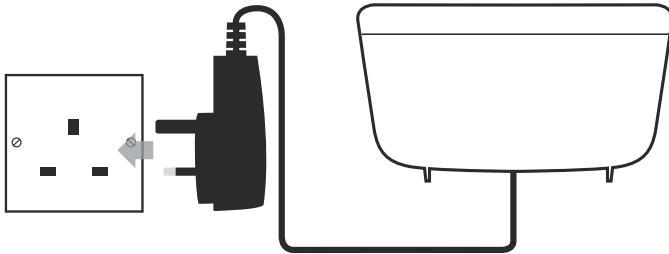

## 3 Install your batteries

- i. Insert your two rechargeable batteries into your handset. Make sure they're the right way round so '+' lines up with '+'.
- ii. Replace your handset's battery compartment cover.

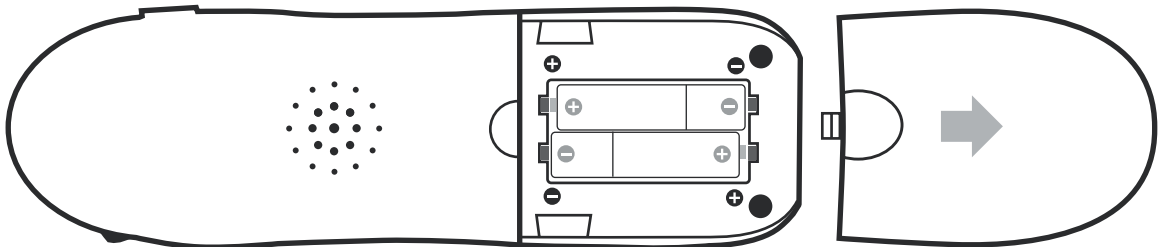

## 4 Charge your cordless handset

So it can charge fully, place your handset on its charger base for at least 15 hours (make sure the power socket is switched on!).

**Important: only use the rechargeable 800mAh NiMH batteries supplied. Over time if you need to replace the batteries make sure they are of the same type as those supplied. Never use Alkaline batteries.**

## Attach the belt clip (optional)

There is a belt clip included in the box that you can attach to the back of your cordless handset if required. Simply turn the handset over and slot the belt clip securely into the two holes located on either side of the handset.

**Private exchanges: if your phone is going to use a private exchange (for example, if you have to dial '9' to get an outside line, please follow the steps on page 89).**

## Your telephones are now ready for use!

## **Corded phone base display icons explained**

The following icons appear in your corded base display to indicate:



Phone book mode



Ringer off



Handsfree mode



Call in progress



Boost receiver volume is on (Icon will flash)



Mute handset microphone



You have new calls



Internal call in progress



## Cordless handset display icons explained

The following icons appear in your cordless handset display to indicate:



Menu



Confirm / OK



Phone book mode



There is more information to view on the left



There is more information to view on the right



Battery status



Ringer off



Keylock is on



Handsfree mode



Call in progress



Boost receiver volume is on (Icon will flash)



Mute handset microphone



You have new calls



Answering machine is on



Answering machine is off



When steady, the handset is in range of the phone base

When flashing, the handset is out of range of the phone base



Internal call in progress



## Phone menu guide



Use this section to find your way around the menu displays on **both** of your phones.





### How to use your phone menu display



When you've set up your phones and everything's connected, use your menu display to do things with your phone – from making and receiving calls to setting up user profiles and saving phone numbers.





#### Basic guide

**Open main menu:** press  (corded phone) or  (cordless handset).



**Browse sub menu:** open your main menu and then press /P or /R.

**Select sub menu item:** scroll using /P or /R until the item you're looking for is highlighted and then press  (corded phone) or  (cordless handset).

**Browse a function:** open your sub menu and then press /P or /R.

**Select a function:** scroll using  or  until the function you're looking for is highlighted and then press  (corded phone) or  (cordless handset).

**Enter digits or letters:** use your keypad.

**Confirm or save an entry or action:** press  (corded phone) or  (cordless handset).

**Cancel and return to standby:** press  (corded phone) or  (cordless handset).



**Note: if you don't do anything, your phone will automatically go on standby after 20 seconds.**

# **Making and receiving calls**




## **Making and receiving calls**

### **Make a call using your corded phone**


As you enter each number to be dialled it will be announced to you. For this feature to work you must have the Read number feature set to On, see page 41.

1. Enter the number you wish to call using your base keypad.
2. If you make a mistake, press  to delete the last digit.
3. Dial the number by picking up the handset or pressing .
4. End your call by putting the handset back in its cradle.



### **Make a call using your cordless handset**

1. Enter the number you wish to call using your handset's keypad.
2. If you make a mistake, press  to delete it.
3. Dial the number by pressing .
4. End your call by pressing .

### **End a call**





Simply put the handset in its base cradle if you're using your corded phone or press  on the cordless handset.

## Take a call

Simply lift the handset or press  if you're using the corded phone or press  on the cordless handset.

## Redial a number using your corded phone base





Your corded phone stores the last five numbers you've dialed (max. 24 digits each).

1. Open the redial list by pressing  P.
2. Scroll through the redial list using the  P or  R buttons until the number you wish to redial is highlighted. To dial the number simply lift the handset or press  to dial in handsfree mode.

**Note: each phone number will be announced as you scroll through the redial list provided the Read Number feature is enabled. See page 41, "Read number" for details.**






## Redial a number using your cordless handset

Your cordless handset stores the last ten numbers you've dialled (max. 24 digits each).

1. Open the redial list by pressing .
2. Scroll through the redial list using  or  until the number you wish to redial is highlighted and then press  to dial the number.

## Call back a previous caller

Your phone stores the last 30 incoming calls.







1. Open the incoming calls list by pressing  (corded phone) or  (cordless phone).
2. Scroll to find the number you want to call back using  or  then lift your corded handset or press  on the cordless handset.

**Note: each phone number will be announced as you scroll through the incoming calls list provided the Read Number feature is enabled. See page 41, "Read number" for details.**



## Dial a number in your phone book







To store a phone number in your phone book, see page 45 (corded phone) or page 71 (cordless handset).

1. Open your phone book by pressing  (cordless handset) or  (corded phone).
2. Scroll to find your number using  /  or  then lift your handset or press  on the cordless handset.

**Note: each phone number will be announced as you scroll through your phone book provided the Read Number feature is enabled. See page 41, "Read number" for details.**

## Dial a number using the quick dial buttons



To store phone numbers under your quick dial memory buttons, see page 49 (corded phone) or page 74 (cordless handset).

1. Choose your quick dial number by pressing ,  or  on the corded phone or  or  on the cordless handset.
2. Lift your corded phone handset or press  on the cordless handset.

**Note: the quick dial number you've selected will be announced when you press the quick dial button provided the Read Number feature is enabled. See page 41, "Read number" for details.**

## Adjust the corded phone earpiece volume

Your handset earpiece volume is louder than a standard phone. But you can still increase or decrease the volume to suit you.



To adjust the volume while you're making a call, press  or .

## Adjust the cordless handset earpiece volume

Your handset earpiece volume is louder than a standard phone. But you can still increase or decrease the volume to suit you.

To adjust the volume while you're making a call, push the button on the side of the handset up or down.


## Boost the handset earpiece volume


To boost the handset earpiece volume while you're making a call, press  (cordless phone) or  (corded phone). An image of an ear will flash in the display to show that boost is on.

## Handsfree feature





Use the handsfree feature to talk to your caller without holding the handset or to let other people in the room listen to the conversation.

## Use handsfree calling on your corded phone

To switch handsfree mode on and off, simply press .




To adjust handsfree volume, press  or  (there are 5 levels).

## Use handsfree calling on your cordless handset

1. Switch on handsfree mode by pressing the  key twice.
2. Exit handsfree mode by pressing .
3. To adjust the handsfree volume, use the switch on the right of the handset or the  or  buttons.

**Note:** you can't boost volume using   when using handsfree calling.

## Adjust the tone on the corded phone base only



To adjust the tone while you're making a call, press  then use the  or  buttons until it's right for you.

**Note:** adjusting the tone can affect volume level – you may need to adjust the volume level after you've adjusted the tone.


## See call length

You can see call time on your display.

## Use a headset (not included) with the corded phone

Simply plug your headset into the headset socket marked  on the back of the base and press the  button.


## Use a headset (not included) with the cordless handset

Simply plug your headset into the headset socket marked  on the right side of the handset. This socket can also be used with an Induction Neck Loop NL100 (not supplied).

## Mute


During a call you can mute the microphone so your caller cannot hear you.

### Mute the microphone on the corded phone

To switch off the microphone, simply press . **Mute** will be displayed.


To switch it on again, simply press  again. The display will show **Unmute**.

### Mute the microphone on the cordless handset

To switch off the microphone, simply press . **Mute On** will be displayed.





To switch it on again, simply press  again. The display will show **Off**.

## Switch the cordless handset ringer on and off only

To switch the ringer on and off, simply press and hold  for a couple of seconds.





## Lock and unlock the cordless handset keypad

You can still answer calls as usual when your keypad is locked.




To lock the keypad, press and hold  for 2 seconds. The  icon will be displayed. To unlock, press and release  then immediately, press and release .



## Make an internal call

Your corded phone base has an internal call number **HS0**, and your cordless handset **HS1**. You can make internal calls between the two handsets. These calls are free of charge.

1. Press and hold  (corded phone) or  (cordless handset).  
The display will show **Handset?** Enter the internal call number of the handset you want to call, e.g. **1** (to call the cordless phone) or **0** (to call the corded phone).
2. To accept the call on the receiving handset, press .
3. End your call by putting the handset in its base cradle or pressing  on the cordless handset.





## Transfer an external call internally

1. During your external call, press and hold either  (corded phone) or  **INT** (cordless handset) until a short beep is heard, then enter the internal call number of the handset you want to transfer the call to e.g. **1** (to call the cordless phone) or **0** (to call the corded phone).
2. To accept the call on the receiving handset, press .







**Note: if no one picks up the call you're trying to transfer, you can take the call back on your phone by pressing  or  .**

## Make a conference call using the corded phone

It's easy to hold a conference call between one external and two internal callers.

1. During your external call, press and hold  until a short beep is heard, then enter the internal call number of the handset you want to transfer the call to e.g. **1** (to call cordless Handset 1).
2. To accept the call on the receiving handset, press .
3. Once the call has been received on the other handset that you've dialled, activate your conference call by pressing and holding  for 2 seconds.
4. You can put the external call on hold by pressing .
5. The conference call will end when you put the handset back in its cradle.

## Make a conference call using the cordless handset


1. During your external call, press and hold  **INT** until a short beep is heard, then enter the internal call number of the handset you want to transfer the call to e.g. **2** (to call cordless Handset 2 – if you have more than one cordless handset on the system) or **0** (to call the corded phone).
2. To accept the call on the receiving handset, press .
3. Once the call has been received on the other handset that you've dialled, activate your conference call by pressing  and then releasing the  button.
4. You can put the external call on hold by pressing  **INT**.
5. The conference call will end when you press .

## Register a handset

You only need to register a handset if it has become de-registered from the base or if you've purchased a new handset separately.

**Important: make sure any handset you're registering is fully charged before you try to register it.**

At the cordless handset:

1. Press and hold  for approx 10 seconds until the display shows **Press and hold Page key**.







At the base:

2. Press and hold  for at least 10 seconds until the display shows **Register**.












## Deregister a handset

You may need to deregister a handset if you've too many registered on your phone system, or if the handset develops a fault and needs to be replaced.

### To deregister a handset using the base corded phone

1. Open your menu by pressing , then scroll using  or  until you highlight **Remove HS** and press .
2. Enter the PIN code and press .
3. Enter the handset's internal number (e.g. **1**) and press .

### To deregister a handset using the cordless handset

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Registration**, and press . Then scroll  to highlight **De-register** and press .
3. Enter the PIN code (default PIN 0000) and press .
4. Enter the handset's internal number (e.g. **1**) and press  to confirm.



## Power failure – what to do

If your mains power fails, you can still use your corded phone to make and receive calls – though the incoming call light won't work, your caller's details won't be stored, and the display will only show when you lift the handset.

You can still also:

- View and dial numbers using your phone book or the **M1**, **M2** and **M3** keys
- Dial out using **Recall** (Flash) and pause
- Adjust the earpiece volume
- Mute the microphone



# **Using your menu – corded phone**

## Using your menu – corded phone

For information on your answering machine, please go to page 80.

For information on your phone book, please go to page 44.

### Priority/Default Setting








If you are the main user of this telephone you should change the settings in the menu so that they are just right for you. These settings will be memorised automatically whenever you wish to make or answer a call.






The user profile feature can be used by others in the household whose preferences for volume, boost and equaliser will also be memorised and applied as indicated below.

### User Profiles

You can store 3 different user profiles, each with different settings for the 'Volume', 'Boost' and 'Equaliser' features. You can also personalise each Profile by naming it (Max 10 letters).














### Change the profile name

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Profile** and press .
2. Scroll using /P or /R until you highlight **Profile 1, 2 or 3** and press .














3. Scroll using  or  until you highlight **Name** and press .
4. Delete the current name by pressing .
5. Enter a new name (up to ten letters) and press .

## Change a profile's handset volume














You have a choice of five volume levels.


1. Open your menu by pressing , then scroll using  or  until you highlight **Profile** and press .
2. Scroll using  or  until you highlight **Profile 1, 2 or 3** and press .
3. Scroll using  or  until you highlight **Volume** and press .
4. You'll see the current volume level (e.g. 4).
5. Change the volume level using  or  and press .

## Change a profile's boost setting

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Profile** and press .
2. Scroll using /P or /R until you highlight **Profile 1, 2 or 3** and press .
3. Scroll using /P or /R until you highlight **Boost** and press .
4. You'll see the current boost setting (i.e. **On** or **Off**).
5. Change the boost setting using /P or /R and press .




## Change a profile's tone ('equaliser') setting




1. Open your menu by pressing , then scroll using /P or /R until you highlight **Profile** and press .
2. Scroll using /P or /R until you highlight **Profile 1, 2 or 3** and press .
3. Scroll using /P or /R until you highlight **Equaliser** and press .
4. You'll see the current tone setting.
5. Change the tone setting using /P or /R and press .

**Note:** when you finish changing any profile settings, press  to put the base back to standby.

## Choosing which profile to use

You need to use a handset to choose a profile to use for a call – you can't choose a profile using handsfree.











Before you answer an incoming call, press ,  or  – depending on which profile you want to use. The display will confirm your choice.

When you want to make a call and before you dial the number, press and hold ,  or  – depending on which profile you want to use. The display will confirm your choice.

**Note:** once you've selected a profile to use when making a call, you have about 30 seconds to dial the call under that profile before the system will return to its default settings.











## Change ringer melody

You have a choice of ten ringer melodies.

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Ringer Tone** and press .
2. Choose whether you want to use this melody for external or internal calls by scrolling /P or /R to highlight either **EXT Melody** or **INT Melody**, and press .
3. You'll see the current settings (i.e. **Melody 8**).
4. Scroll using /P or /R until you highlight the ringer tone you want to use and press .

## Change ringer volume








You have a choice of five volume levels plus **Off**.

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Ringer Tone** and press .
2. Scroll using /P or /R until you highlight **Volume** and press .
3. You'll see the current volume level (e.g. **Ring Vol 5**).
4. Change the ringer volume using /P or /R and press .













## Switch key tone on or off

This is the tone you hear when you press a button.

1. Open your menu by pressing , then scroll using  or  until you highlight **Key Tone** and press .
2. You'll see the current key tone setting (i.e. **On** or **Off**).
3. Change the key tone on or off using  or  and press .











## Change display contrast

You have a choice of five screen contrast levels.


1. Open your menu by pressing , then scroll using  or  until you highlight **Display** and press .
2. Scroll using  or  until you highlight **Contrast** and press .
3. You'll see the current contrast setting (e.g. **4**).
4. Change the contrast setting using  or  and press .











## Change display language

You have a choice of five languages to use on your handsets: **English, German, French, Spanish and Italian.**

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Display** and press .
2. Scroll using /P or /R until you highlight **Language** and press .
3. You'll see the current language setting (e.g. **English**).
4. Change the language setting using /P or /R and press .











## Remember boost

When this feature is set to **On** and you use the  button, the handset you're using will remember and use your last boost setting for each of your calls.











1. Open your menu by pressing , then scroll using /P or /R until you highlight **Settings** and press .
2. Scroll using /P or /R until you highlight **Boost Mem** and press .
3. You'll see the current boost memory setting (e.g. **Off**).
4. Change the boost memory setting using /P or /R and press .

## Read number

When this feature is set to **On**: as you enter each number or press a quickdial button to make a call, or when you scroll through your phonebook entries, your redial list or calls list (if you subscribe to a Caller Display/Caller ID service) the telephone numbers will be announced to you. A quarterly fee may be payable for Caller Display/Caller ID. See page 51 for further information.

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Settings** and press .
2. Scroll using /P or /R until you highlight **Read number** and press .
3. You'll see the current read number setting (e.g. **On**).
4. Change the read number setting using /P or /R and press .










## Change to upper or lower case

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Settings** and press .
2. Scroll using /P or /R until you highlight **Change case** and press .
3. You'll see the case setting (e.g. **ABC**).
4. Change the case setting using /P or /R and press .










For information on dial mode, please go to page 90.

For information on recall, please go to page 88.

## Change System PIN











1. Open your menu by pressing , then scroll using /P or /R until you highlight **Settings** and press .
2. Scroll using /P or /R until you highlight **System PIN** and press .
3. Enter your old PIN and press .
4. Enter your new PIN and press .

## Change date/time

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Time** and press .
2. Scroll using /P or /R until you highlight **Date & Time** and press .
3. Enter the day, month and year and press .
4. Enter the hours (your handset has a 24-hour clock) and press .

**Note: it's also possible to use the  and **MEMO**  keys to move backward and forward to make changes.**






## Change clock hours to 12- or 24-hour format display

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Time** and press .
2. Scroll using /P or /R until you highlight **Format** and press .
3. You'll see the current time format setting (e.g. **24 hour**).
4. Change the time format using /P or /R and press .

## Reset to default settings

You can easily reset your handset to its default settings.

**Note: your phone book, calls and redial lists and any answering machine messages will be deleted if you do this.**

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Reset** and press .
2. You'll see **Base Reset?** displayed, press  to confirm or  to cancel.

## Using your phone book – corded phone

You can store, alphabetically, up to 200 names and their phone numbers in your phone book. To quickly find a phone book entry, simply enter the first letter of the name you've stored.


**Note: each phone book entry allows for up to 16 letters for any name and up to 24 digits for any phone number.**

**Important: please remember to also enter the area code for each phone number you enter in your phone book.**

## How to use the keypad when using your phone book







You'll see that the keys on your keypad have letters as well as numbers. If you press a chosen key a number of times it'll show you all the numbers and letters it represents.

Here are some keys you may find useful when entering names and phone numbers in your phone book:








- press **1** for a space
- press  to delete a number or letter you've entered
- press **0** or **1** for certain special characters








**Note:** to enter the same letter twice, simply enter the letter and then wait until the cursor moves to after the letter you've entered, before entering it again.

## Enter a name and number in your phone book


1. Press and hold  for about 2 seconds until the display shows **Enter Name** and a flashing cursor.
2. Enter the name you want to store using the keypad and press .
3. Enter the phone number you want to store and press .
4. Scroll using  or  to choose a ringer melody for this name and number and press . The display will show **Saved**.

## Edit a phone book entry

1. Press .
2. Scroll using  or  to find the entry you want to edit.
3. Open options by pressing  and then scroll using  or  until you highlight **Edit** and press .








4. Edit the name using  or **MEMO** to move the cursor and enter the new letters and press .
5. Edit the phone number using  or **MEMO** to move the cursor and enter the new digits and press .
6. Scroll using  or  to choose a ringer melody for this name and number and press . The display will show **Saved**.

## Delete a phone book entry

1. Press .
2. Scroll using  or  to find the entry you want to delete.
3. Open options by pressing  and then scroll using  or  until you highlight **Delete** and press .
4. You'll see **Delete?** on your display. Press  to confirm the deletion or  to cancel.



## Delete all phone book entries

1. Press .
2. Open options by pressing  and then scroll using  or  until you highlight **Delete All** and press .
3. You'll see **Delete All?** on your display. Press  to confirm the deletion or  to cancel.






## Copy phone book entries to another handset

**Note: you can only copy the phone book to another handset if that handset is registered on your phone system. See page 29.**

It's easy to copy:




- a single entry (Copy entry)
- entries not already on the handset you're copying to (Copy append)
- all entries (Copy all)

**Important: when you copy all entries to a handset, all existing entries will be deleted.**










1. Press .
2. Scroll using ▲ or ▼ to find the entry or entries you want to copy and press .
3. Scroll using ▲ or ▼ to select either **Copy entry**, **Copy append** or **Copy all** and press .
4. Select the handset you want to copy to (e.g. **HS2**) by pressing <<●▶ or **MEMO**>> and press .
5. Pick up the handset you're copying entries to and press .

## Using your quick dial memory – corded phone










You can store a name (max. 16 characters) and telephone number

(max. 24 digits) under each of the quick dial memory buttons: ,  and .






### Store a quickdial name and number

1. Choose the quick dial button under which you want to store a name and number by pressing either ,  and .
2. Press  twice.
3. Enter the name you want to store using the keypad and press .
4. Enter the phone number you want to store and press .
5. Scroll  or  to choose a ringer melody for this name and number and press . The display shows **Saved**.

## Edit a quick dial entry


1. Choose the quickdial entry you want to edit by pressing either **M1**, **M2** or **M3**.
2. Press . **Edit** is displayed, press  again.
3. Edit the name using  or **MEMO** to move the cursor and enter the new letters and press .
4. Edit the phone number using  or **MEMO** to move the cursor and enter the new digits and press .
5. Scroll using  or  to choose a ringer melody for this name and number and press . The display will show **Saved**.




## Delete a quick dial entry

1. Choose the quick dial entry you want to delete by pressing either **M1**, **M2** or **M3**.
2. Press . Press /R to highlight **Delete** and press .
3. You'll see **Delete?** on your display. Press  to confirm or  to cancel.

## Using your calls list – corded phone

**Note: you must subscribe to your network provider's Caller Display/Caller ID service for this feature to work. A quarterly fee may be payable.**

Incoming call telephone numbers should appear in your calls list. If you have the caller's number stored in your phonebook the name will be displayed instead. A total of 30 incoming calls can be stored in the calls list (16 letters per name and 23 digits per number). The number of new calls received will be shown in the display with the flashing  icon. If the number doesn't appear, this is because the caller's identification (Call Line ID) has been withheld by the caller.













You can open and view your calls list by pressing . To scroll through your calls list simply press /P or .

Here are some things you may see on your calls list display:










- **WITHHELD NUMBER** – caller has withheld their number, or this information isn't available
- **INTERNATIONAL** – caller is calling from another country or using an internet service
- **PAYPHONE** – caller is calling from a public payphone
- **OPERATOR** – caller is a telephone network operator

## Store numbers from your calls list to the phonebook or quick dial memory (M1, M2, M3)






It's easy to store incoming call numbers to your phone book or quick dial list.

1. Press  to open your calls list at the most recent entry.
2. Scroll using  or  to find the entry you want to store.
3. Open options by pressing  and then scroll using  or  until you highlight **Save to PB** or **M1, M2** or **M3** and press .
4. Using your keypad, enter a name for this stored number and press .
5. Edit the number for this name, if needed, and press .
6. Scroll using  or  to choose a ringer melody for the entry and press .

## Delete a single calls list entry

1. Press  to open your calls list at the most recent entry.
2. Scroll using  or  to find the entry you want to delete.
3. Open options by pressing  and then scroll using  or  until you highlight **Delete** and press .
4. You'll see **Delete?** on your display. Press  to confirm or  to cancel.

## Delete all calls list entries

1. Press /R to open your calls list at the most recent entry.
2. Scroll using ▲ or ▼ to select an entry.
3. Open options by pressing  and then scroll using ▲ or ▼ until you highlight **Delete All** and press .
4. You'll see **Delete All?** on your display. Press  to confirm or  to cancel.





# **Using your menu – cordless handset**

## Using your menu – cordless handset

For information on your answering machine, please go to page 80.

For information on your phone book, please go to page 70.

### Priority/Default Setting








If you are the main user of this telephone you should change the settings in the menu so that they are just right for you. These settings will be memorised automatically whenever you wish to make or answer a call.






The user profile feature can be used by others in the household whose preferences for volume, boost and equaliser will also be memorised and applied as indicated below.

### User Profiles

You can store 2 different user profiles, each with different settings for the 'Volume', 'Boost' and 'Equaliser' features. You can also personalise each Profile by naming it (Max 10 letters).














### Change a profile name

1. Open your menu by pressing , then scroll using  or  until you highlight **Profile** and press .
2. Scroll using  or  until you highlight **Profile 1 or 2** and press .











3. Scroll using  or  until you highlight **Name** and press .
4. Delete the current name by pressing .
5. Enter a new name (up to ten letters) and press .




## Change a profile's handset volume

You have a choice of five volume levels.














1. Open your menu by pressing , then scroll using  or  until you highlight **Profile** and press .
2. Scroll using  or  until you highlight **Profile 1 or 2** and press .
3. Scroll using  or  until you highlight **Volume** and press .
4. You'll see the current volume level (e.g. 4).
5. Change the volume level using  or  and press .


## Change a profile's boost setting

1. Open your menu by pressing , then scroll using  or  until you highlight **Profile** and press .
2. Scroll using  or  until you highlight **Profile 1 or 2** and press .
3. Scroll using  or  until you highlight **Boost** and press .

4. You'll see the current boost setting (i.e. **On** or **Off**).
5. Change the boost setting using  or  and press .
















## Change a profile's tone ('equaliser') setting

1. Open your menu by pressing , then scroll using  or  until you highlight **Profile** and press .
2. Scroll using  or  until you highlight **Profile 1 or 2** and press .
3. Scroll using  or  until you highlight **Equaliser** and press .
4. You'll see the current tone setting.
5. Change the tone setting using  or  and press .

**Note:** press  to put the handset back to standby.



## Copy a profile

You can easily copy a profile to another registered and compatible PowerTel handset.

1. Open your menu by pressing , then scroll using  or  until you highlight **Profile** and press .
2. Scroll using  or  until you highlight **Profile 1 or 2** and press .
3. Scroll using  or  until you highlight **Copy** and press .
4. Scroll using  **INT** or  **R** until you highlight the handset (e.g. **2, 3** or **4**) you want to copy the profile to, and press .
5. On the handset you're copying the profile to: to confirm, press .  
Or to cancel, press .

## Choosing which profile to use

You need to use a handset to choose a profile to use for a call – you can't choose a profile using handsfree.












Before you answer an incoming call, press  or  – depending on which profile you want to use. The display will confirm your choice.

When you want to make a call and before you dial the number, press and hold <sup>M</sup>① or <sup>M</sup>② – depending on which profile you want to use. The display will confirm your choice.

**Note: once you've selected a profile to use when making a call, you have about 30 seconds to dial the call under that profile before the system will return to its default settings.**










## Change the handset ringer melody

You have a choice of ten ringer melodies.











1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. **Ring tone** is highlighted, press .
3. Scroll using  or  until you highlight **External or Internal** and press .
4. You'll see the melody setting (e.g. **7 [External]**, **9 [Internal]**).
5. Change the melody using  or  and press .




## Change the handset ringer volume

You have a choice of five volume levels plus **Off**.


1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  to highlight **Ringer volume** and press .
3. You'll see the current volume level (e.g. 5).
4. Change the ringer volume using  or  and press .











## Change the tone ('equaliser') setting

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Equaliser** and press .
3. You'll see the setting.
4. Change the tone setting using  or  and press .










**Note:** to adjust tone while you're making a call, press the  button to access the equaliser setting. Then press the  or  button to adjust the setting as shown on the bar-graph on the handset screen. Press the volume switch on the side of the phone to exit this mode.

## Remember boost

When this feature is set to On and you use the  key on the top left side of the handset, the handset you're using will remember and use your last boost setting for each of your calls.











1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Boost memory** and press .
3. You'll see the current boost memory setting (e.g. **Off**).
4. Change the boost memory setting using  or  and press .

## Change handset name

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Handset name** and press .
3. Delete the current name by pressing .
4. Enter a new name (up to 12 letters) and press .













## Switch key pad beep on or off

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Keypad Beep** and press .
3. You'll see the key pad setting (i.e. **On** or **Off**).
4. Change the key pad beep on or off using  or  and press .

## Change contrast











You have a choice of five screen contrast levels so you can set the display to how you find it most easy to read.

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Contrast** and press .
3. You'll see the current contrast setting (e.g. **3**).
4. Change the contrast setting using  or  and press .

## Switch auto talk on or off











When auto talk's switched on your handset will automatically answer the call when you pick up the handset from its charger base. This is the default setting.

If you set it to off you will need to press the  button to answer any calls.

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Auto talk** and press .
3. You'll see the current auto talk setting (e.g. **On**).
4. Change the auto talk setting using  or  and press .











## Change backlight timer

You have a choice of 10, 20, 30 or 40 seconds before the backlight timer switches off.

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Backlight time** and press .
3. You'll see the current backlight timing (e.g. **10S**).
4. Change the backlight timer setting using  or  and press .











## Switch confirmation beep on or off

This is the beep you hear when you change a setting. You can switch the beep on or off.

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Confirm beep** and press .
3. You'll see the current confirmation beep setting (e.g. **On**).
4. Change the confirmation beep setting using  or  and press .











## Select base

You can use this feature if your handset is registered to more than one base.










1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Select base** and press .
3. You'll see the current base setting (e.g. **Auto** or **Manual**).
4. Change the base setting using  or  and press .

## Change language









You have a choice of five languages to use on your handset: **English, German, French, Spanish and Italian.**

1. Open your menu by pressing , then scroll using  or  until you highlight **Handset** and press .
2. Scroll using  or  until you highlight **Language** and press .
3. You'll see the current language setting (e.g. **English**).
4. Change the language setting using  or  and press .











## Change system PIN code

1. Open your menu by pressing , then scroll using  or  until you highlight **Base settings** and press .
2. Scroll using  or  until you highlight **System PIN** and press .
3. Enter your old PIN code and press .
4. You will be prompted to enter your new PIN code twice, then press .










## Change date/time

1. Open your menu by pressing , then scroll using  or  until you highlight **Time** and press .
2. Scroll using  or  until you highlight **Date and Time** and press .
3. Enter the day, month, year and hours (your handset has a 24-hour clock) and press .

## Change clock hours to 12- or 24-hour format











1. Open your menu by pressing , then scroll using  or  until you highlight **Time** and press .
2. Scroll using  or  until you highlight **Set time format** and press .
3. You'll see the current time format setting (e.g. **24 hour**).
4. Change the time format using  or  to highlight either **12 hour** or **24 hour** and press .

## Set alarm

1. Open your menu by pressing , then scroll using  or  until you highlight **Alarm** and press .
2. Scroll using  or  until you highlight **Set alarm** (your alarm uses a 24-hour clock) and press .
3. Enter the time you want your alarm to go off at either **Once, Every Day, Mon to Fri** or **Off** and press .
4. Choose your alarm melody and press .

## Switch night light on or off









**Note: the alarm needs to be set before the night light feature will work. See above for instructions.**

1. Open your menu by pressing , then scroll using  or  until you highlight **Alarm** and press .
2. Scroll using  or  until you highlight **Night Light** and press .
3. You'll see the current night light setting (e.g. **On**).
4. Change the night light setting using  or  and press .

## Base Settings










### Change base ringer melody

You have a choice of ten base ringer melodies.

1. Open your menu by pressing , then scroll  or  until you highlight **Base settings** and press .
2. **Ring tone** is highlighted, press .
3. You'll see the ringer melody setting (e.g. **8**).
4. Change the ringer melody using  or  and press .

### Change base ringer volume

You have a choice of five volume levels plus Off.

1. Open your menu by pressing , then scroll using  or  until you highlight **Base settings** and press .
2. Scroll  until you highlight **Ringer volume** and press .
3. You'll see the current base ringer volume level (e.g. **5**).
4. Change the base ringer volume using  or  and press .

**For information on dial mode, please go to page 90.**

**For information on recall, please go to page 88.**

## Using your phone book – cordless handset

You can store, alphabetically, up to 200 names and their phone numbers in your phone book. To quickly find a phone book entry, simply enter the first letter of the name you've stored.




**Note: each phone book entry allows for up to 16 letters for any name and up to 24 digits for any phone number.**

**Important: please remember to also enter the area code for each phone number you enter in your phone book**

## How to use the keypad when using your phone book

You'll see that the keys on your keypad have letters as well as numbers. If you press a chosen key a number of times it'll show you all the numbers and letters it represents.









Here are some keys you may find useful when entering phone numbers in your phone book:

- press  for a space
- press  to delete a number or letter you've entered
- press the  key to change from upper case (e.g. ABC) to lower case (e.g. abc)
















**Note:** to enter the same letter twice, simply enter the letter and then wait until the cursor moves to after the letter you've entered, before entering it again.

## Enter a name and number in your phone book








1. Open your phone book by pressing .
2. Press . The display will show **New entry**, press  again.
3. Enter the name you want to store and press .
4. Enter the phone number you want to store and press .
5. Scroll using  or  to choose a ringer melody for this name and number and press .

## Edit a phone book entry

1. Open your phone book by pressing .
2. Scroll using  or  to find the entry you want to edit and press .
3. Scroll  to display **Edit entry** and press .
4. Press  to delete characters and use the keypad to enter new ones, then press .

5. Press  to delete digits and use the keypad to enter new ones, then press .
6. Scroll using  or  to choose a ringer melody for this entry and press .

## Delete a phone book entry or all entries

1. Open your phone book by pressing .
2. Scroll using  or  to find the entry you want to delete or highlight any entry if you want to delete all entries.
3. Press  to display either **Delete entry** or **Delete all** and press .
4. Press  to confirm or  to cancel.











## Copy phone book entries to another handset

**Note: you can only copy the phone book to another handset if that handset is registered on your phone system. See page 29.**

It's easy to copy:



- a single entry (Copy entry)
- entries not already on the handset you're copying to (Copy append)
- all entries (Copy all)

**Important: when you copy all entries to a handset, all existing entries will be deleted. To prevent this from happening you can use the "Copy append mode".**







1. Open your phone book by pressing .
2. Scroll using  or  to find the entry or entries you want to copy and press .
3. Scroll  to either **Copy entry**, **Copy append** or **Copy all** and press .
4. Scroll  **INT** or **R** to highlight the handset number you want to copy to (e.g. **2** for **Handset 2** or if you want to copy to the base select **0**) and press  to confirm.
5. Pick up the handset you're copying entries to and press  or press  on the corded phone.











## Using your quick dial memory buttons – cordless handset

You can store a name (max. 16 characters) and a telephone number (max. 24 digits) under each of the quick dial memory buttons:  and .








### Store a quick dial name and number

1. Choose the quick dial button under which you want to store a name and number by pressing either or  and .
2. Press . The display will show **New entry**, press  again.
3. Enter the name you want to store using the keypad and press .
4. Enter the phone number you want to store and press . The display will show **Saved**.

### Edit a quick dial entry

1. Choose the quick dial entry to edit by pressing either  or .
2. Press . The display will show **Edit entry**, press  again.
3. Press  to delete characters and use the keypad to enter new ones, then press .
4. Press  to delete digits and use the keypad to enter new ones, then press . The display will show **Saved**.


## Delete a quick dial entry





1. Choose the quick dial entry to delete by pressing either  or .
2. Press . Scroll  to **Delete entry** and press .
3. Display will show **Delete entry?** Press  to confirm or  to cancel.



## Using your calls list – cordless handset

**Note: you must subscribe to your network provider's Caller Display/Caller ID service for this feature to work. A quarterly fee may be payable.**

Incoming call telephone numbers should appear in your calls list. If you have the caller's number stored in your phonebook the name will be displayed instead. A total of 30 incoming calls can be stored in the calls list (16 letters per name and 23 digits per number). The number of new calls received will be shown in the display with the flashing  icon. If the number doesn't appear, this is because the caller's identification (Call Line ID) has been withheld by the caller.











You can open your calls list by pressing the  button. To scroll through your calls list simply press  or . To display more information including the date and time of the call, press **R** .

Here are some things you may see on your calls list display:









- **WITHHELD NUMBER** – caller has withheld their number, or this information isn't available
- **INTERNATIONAL** – caller is calling from another country or using an internet service
- **PAYPHONE** – caller is calling from a public payphone
- **OPERATOR** – caller is a telephone network operator

## Store numbers from your calls list to the phonebook






It's easy to store incoming call numbers to your phone book.

1. Press  to open your calls list at the most recent entry.
2. Scroll using  or  to find the entry you want to store and press .
3. The display will show **Save to phbk**, press .
4. Using your keypad, enter a name for this stored number and press .
5. Edit the number for this name, if needed, and press .
6. Scroll using  or  to choose the ringer melody for this name and number and press .

## Delete a single calls list entry

1. Press  to open your calls list at the most recent entry.
2. Scroll using  or  to find the listed call you want to delete and press .
3. Scroll  until you highlight **Delete** and press .
4. Confirm or cancel to delete the calls list entry by pressing  or .

## Delete all calls list entries

1. Press  to open your calls list at the most recent entry.
2. Scroll  until you highlight **Delete all** and press .
3. The display will show **Delete all Calls?** Press  or  to cancel.




# Using your answering machine

## Using your answering machine

After you've set up your phone system, follow these easy steps using your corded base to set up your answering machine.








### Switch answering machine on or off

To switch your answering machine on and off, simply press  on the base. The current answer mode will be announced.

### Set the answering machine language


You have a choice of three languages to use on your answering machine:

**English, German or French.**

1. Open your answering machine menu by pressing  on the base twice.
2. Scroll using  or  until you highlight **Language** and press .
3. Choose the language using  or  and press .

### Set answer mode




There are two answer modes to choose from: Answer & Record or Answer only. If you set the answer mode to Answer only your callers will not be able to leave a message.


1. Switch your answering machine on by pressing  on the base.

- To change mode between **Answer & Rec.** and **Answer Only**, press and hold  for a couple of seconds.

## Record your outgoing message









You can change the default answering message to your own. Your outgoing message needs to be under two minutes.

- Press and hold  on the base for a couple of seconds and then record your message after the beep.
- To stop recording, press .
- Check your outgoing message is how you want it but pressing  to hear it.

**Note: to return your outgoing message to the default message, simply press and hold  while the outgoing message is playing.**


## Set answer delay

You either choose the number of rings you want before your answering machine answers any incoming call or you can choose Time Saver. Time Saver saves you the cost of the call if you're calling in from elsewhere to pick up any messages: if your answering machine answers after 2 rings you have new messages, if it answers after 5 rings you have no new messages. Therefore, you can hang up after 3 rings knowing you have no new messages and you won't be charged for the call.

1. Press  twice.
2. Scroll using  or  until you highlight **Answer Delay** and press .
3. You'll see the current answer delay setting (e.g. **5** rings).
4. Choose the number of rings you want (2–9) or Time Saver using  or  or  and press .

## Record a memo




You can record memo messages for yourself or other members of the household which can be played back like normal messages.

1. Press and hold MEMO»» for a couple of seconds.
2. After the beep record your memo.
3. Press  to finish recording.



## Listen to messages or memos using the corded phone

Playback is in the order messages or memos were received. New messages are played before old ones. The time and date of each message or memo is announced before playback.







Here are some functions you may find useful:

- to play or pause, press 
- to stop, press 
- to rewind, press 
- to fast forward, press MEMO»»







## Delete a single message or memo

1. Play the message or memo you want to delete by pressing .
2. Press and hold  during playback of the message or memo to delete it.

## Delete all messages and memos

1. Press  twice.
2. Scroll using  or  until you highlight **Del. All Msgs** and press .
3. You'll see **Delete All?** on your display.
4. To confirm, press . Or to cancel, press .

## Listen to messages or memos using your cordless handset

1. Open the answering machine menu by pressing .
2. **Ans Machine** is displayed, press .
3. Scroll using  or  to display either **Play New Msgs** or **Play All Msgs** and press .
4. Press  to return to standby.

## Memory full







Your answering machine will announce if it's full and automatically stop taking any more messages and switch itself to **Answer Only**. You'll need to delete some of your messages or memos before any new messages can be recorded.

## Remote access to your answering machine


You can call your answering machine to hear your messages when you're away from home using most modern phones, including mobile phones.

You need to use a PIN code to access your answering machine. The default code is **000**. We suggest you change this for security reasons.

## Change PIN

1. Open your menu by pressing  twice, then scroll using  / **P** or  / **R** until you highlight **Remote PIN** and press .
2. Enter your old PIN and press .
3. Enter your new PIN and press .

## Call in to check messages

1. Dial your own phone number from the remote phone.
2. Press  three times, then enter your 3 digit PIN.
3. You can manage your messages using your keypad (see remote instructions below)

**Note: if you make a mistake entering your PIN three times, your answering machine will hang up and you'll need to call and try again.**

### Remote instructions guide

While listening to your messages from a remote location, enter these numbers to manage your messages.

To...

**Rewind** messages, press **1**.

**Play** or **pause** your messages, press **2**.

**Fast Forward** through your messages, press **3**.

**Hear outgoing message (OGM)**, press **4**.

**Record outgoing message (OGM)**, press **5**. To end your message, press **6**.

**Stop messages**, press **6**.

**Delete current message**, press **7**.

**Switch answering machine off**, press **8**.

**Switch answering machine on** to take messages, press **9**.

**Delete all old messages**, press **0**.

**Record a memo**, press **#**. To end your message, press **6**.













# **Use on a private branch exchange**








## Use on a private branch exchange




If your phone's on an exchange (e.g. you need to dial 9 to get an outside line), you can transfer calls and use call back by using the **R** button. You'll need to check your private exchange manual to find out which timing to use for your exchange. You can choose two recall timings: 100ms (**Short**) and 300ms (**Long**).

### To set recall time using the corded phone

1. Open your menu by pressing , then scroll using  or  until you highlight **Settings** and press .
2. Scroll using  or  until you highlight **Recall** and press .
3. You'll see the current recall timing setting (e.g. **Short**).
4. Choose the recall timing setting you want (Short or Long) using  or  and press .


### To set recall time using the cordless handset


1. Open your menu by pressing , then scroll using  or  until you highlight **Base settings** and press .
2. Scroll using  or  until you highlight **Recall** and press .
3. You'll see the current recall timing setting (e.g. **Short**).

4. Choose the recall timing setting you want (Short or Long) using /P or /R and press .

## Insert a dialling pause

If you have to dial a number for an outside line and it takes a while to connect, you can insert a pause so you don't have to wait to hear the dialling tone.

To insert a dialling pause using your corded phone, simply enter the number you usually dial for an outside line and then press /P. A P on your display will show dialling pause is active.

To insert a dialling pause using your cordless handset, simply enter the number you usually dial for an outside line and then press  for two seconds. A P on your display will show dialling pause is active.

**Note: you can also insert a dialling pause with a phone number in your phone book.**











## Using additional services

Your phone should be able to support services such as call waiting and conference calls. You'll need to check with your telephone network provider for further information on these services.











## Set dial mode

You have a choice of two dialling modes: tone and pulse. The default setting is **TONE** and this is the correct setting for use within Europe.

### To change dial mode using the corded phone

1. Open your menu by pressing , then scroll using /P or /R until you highlight **Settings** and press .
2. Scroll using /P or /R until you highlight **Dial Mode** and press .
3. You'll see the current dial mode setting (e.g. **Tone**).
4. Choose the dial mode setting you want (Tone or Pulse) using /P or /R and press .





### To change dial mode using the cordless handset

1. Open your menu by pressing , then scroll using  or  until you highlight **Base settings** and press .
2. Scroll using  or  until you highlight **Dial Mode** and press .
3. You'll see the current dial mode setting (e.g. **Tone**).
4. Choose the dial mode setting you want (Tone or Pulse) using  or  and press .



## Reset to default settings

**Important: if you reset to default settings on your corded phone, your phone book, calls list, redial list, messages and memos will be deleted. Your phone book, calls list and redial list aren't deleted if you reset your cordless handset.**

### To reset to default settings on your corded phone

1. Open your menu by pressing , then scroll using ▲ or ▼ until you highlight **Reset** and press .
2. You'll see **Base Reset?** on your display. Confirm or cancel the reset to default settings by pressing  or .

### To reset to default settings on your cordless handset

1. Press **R** for 10 seconds.
2. Confirm or cancel the reset to default settings by pressing  or .



# Help and support

## Help and support

If you need some help and you're in the UK, please first check and see if your problem can be solved using the troubleshooting guide below. If it can't, please call us on 0844 800 6503 (using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary). Lines are open Monday to Friday, 9am to 5pm, excluding public holidays. If you've a claim on your 2-year guarantee, please contact your supplier.

**Some issues may simply be resolved by disconnecting the power to the unit. In such instances the power to the main base station should be switched off and batteries in the handset should also be removed for about 20 minutes. After which reconnect everything to determine if this has resolved the issue.**

## Troubleshooting guide

### I can't make phone calls

1. Make sure the phone cable is connected properly. If it is, there may be a fault. Please make sure you're using the phone cable that came with your phone.
2. Check power's plugged in, switched on and working.
3. If using the cordless handset, make sure you aren't too far from the charger base (in ideal conditions, it should work up to 300 metres outdoors and up to 50 metres indoors).
4. Test the phone line and socket by using another phone.



## **I keep losing my connection when using my cordless handset**

1. Make sure you aren't too far from the charger base (in ideal conditions, it should work up to 300 metres outdoors and up to 50 metres indoors).
2. The charger base may not be in an ideal location – consider moving it.

## **My cordless handset keeps switching off**

1. It may need recharging. So it can charge fully, place your handset on its charger base for at least 15 hours (make sure the power socket is switched on!).
2. Replace the rechargeable batteries. Any replacement batteries should be the same type as those provided.

## **The phone system isn't responding**

You may need to reset to default settings. Please see page 43.

## **Caller's identification (Call Line ID) isn't working**

1. Check you have this service on your phone line. Please call your network provider.
2. The caller may have withheld their phone number.

## **My handset or base doesn't ring**

Check that the ringer is on. See pages 27, 38, 61 and 69.

## **I've got a buzzing noise on my radio, TV or computer**

We suggest you use your cordless handset at least one metre away from electrical equipment and mobile phones.

## **There is interference in the earpiece and/or internet connection is very slow when using the phone**

You must plug the phone into the wall socket via an ADSL filter if you have broadband internet on your phone line.


## **My answering machine won't record messages or memos**

1. Check that your answering machine is connected and switched on.
2. Answering memory may be full. See page 85.

## **My remote access isn't working**

1. Check you're using the correct PIN. See page 85.
2. Make sure you're using a touchtone phone.

## **The white light on the base is constantly flashing**

You have new answering machine message(s). Press the  button to listen to them and the flashing will stop.

# General information

## Safety information

Please make sure you read this User Guide carefully.

### Intended use

This phone is suitable for use on a public telephone network. Any other use is considered unintended use. Unauthorised modification or reconstruction isn't permitted. **Do not** open the device and attempt any repair work yourself.

### Phone location

Make sure your phone:

- is on a dry, flat and stable surface
- isn't a trip hazard with its power cable
- isn't obstructed by furniture
- is at least one metre from other electrical appliances
- isn't exposed to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

### Power supply

**Important: use only the power adapter supplied with your PowerTel 580 Combo.**

Power failure can affect your phone and equipment. Only the corded phone will work if power fails. See page 31.

## Energy efficient power adapter

The included mains adapter meets the eco-design requirements of the European Union (Directive 2005/32/EG). Thus, its power consumption is considerably lower, both in operated as well as in non-operated mode, compared with the mains adapter of previous design.



- Energiesparend
- Economisant l'énergie
- A risparmio di energia
- Energy efficient

## Medical equipment

Do not use your phone:

- near emergency or intensive care medical equipment
- during an electrical storm

It is recommended that if you have a pacemaker fitted you check with a medical expert or your health adviser before using this product

## Rechargeable batteries

Do not throw the batteries into a fire or water.


## Hearing aid compatibility

Your phone works with most popular hearing aids. However, given the wide range of hearing aids available, we can't guarantee that your phone will function fully with every hearing aid.

**Important: your phone can produce very high sound when Boost is switched on. Please take care if the handset is used by others.**

## Disposal

You are obliged to dispose of consumable goods properly in accordance with the applicable legal regulations.

The  symbol on this product indicates that electrical and electronic apparatus and batteries must be disposed of **separately** from domestic waste at suitable collection points provided by the public waste authorities. Batteries can also often be disposed of at the point of sale. Packaging materials must be disposed of according to local regulations.

## Technical details

<b>Standard</b>	DECT <sup>1</sup> GAP <sup>2</sup>
<b>Power supply (base station)</b>	Input: 230VAC 50Hz 40mA Output: 12VDC 670mA
<b>Power supply (charging station)</b>	Input: 230VAC 50Hz 30mA Output: 7.5VDC 100mA
<b>Range</b>	Outdoors Approx 300m Indoors Approx 50m
<b>Standby</b>	Up to 100hrs
<b>Maximum Talk Time</b>	Up to 10hrs
<b>Rechargeable batteries</b>	AAA 1.2V 800mAh NiMH
<b>Dialling mode</b>	Tone (DTMF) Pulse
<b>Optimum ambient temperature</b>	0°C to 45°C
<b>Optimum relative humidity</b>	20% to 80%
<b>Recall</b>	100, 300 ms

- <sup>1</sup> DECT: Digital Enhanced Cordless Telecommunication = standard for cordless phones.
- <sup>2</sup> GAP: Generic Access Profile = standard for the operation of handsets and base stations from different manufacturers.

## Default settings

To reset to default settings, please see page 43.

## Corded phone default settings

Language	English
Answer mode	Answer and Record
PIN code for remote access	000
Answer delay	5
Time format	24 Hour
External memory	8
Internal memory	9
Ring volume	5
Key tone	On
Contrast	4
Boost memory	Off
Shaker	On
Recall time	100ms
Dialling mode	Tone



## Cordless handset default settings

Language	English
Handset name	PowerTel
Handset ringing melody (external)	7
Handset ringing melody (internal)	9
Handset ringing volume	5
Base ringing melody	8
Base ringing volume	5
Keypad beep	On
Auto talk	On
Contrast	3
Backlight time	10s
Boost memory	Off
Shaker	On
Recall time	100ms
Dialling mode	Tone
PIN code	0000

# Maintenance and guarantee

## Maintenance

- Please clean your equipment's surfaces with a soft, fluff-free cloth.
- Never use cleaning agents or solvents.

## Guarantee

AMPLICOM equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble free functioning and a long service life. The terms of the guarantee do not apply where the cause of the equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of the guarantee do not apply to the rechargeable batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies resulting from material of production faults which occur during the period of guarantee will be eliminated free of charge. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee.

In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become our property.

Rights to compensation in the case of damage are excluded where there is no evidence or intent or gross negligence by the manufacturer.

If your equipment shows signs of defect during the period of guarantee, please return to the sales outlet in which you purchased the AMPLICOM equipment together with the purchase receipt. All rights to claims under the terms of guarantee in accordance with this agreement must be asserted exclusively with regard to your sales outlet.

Two years after the purchase of our products, claims under the terms of guarantee can no longer be asserted.

## **Declaration of conformity**

This device fulfils the requirements stipulated in the EU directive:  
1999/5 EU directive on radio equipment and telecommunications  
terminal equipment and the mutual recognition of their conformity.



Conformity with the above mentioned directive is confirmed by the CE symbol on the device.

To view the complete Declaration of Conformity, please refer to the free download available on our website [www.amplicom.eu](http://www.amplicom.eu)

# Index

## A

Adjusting the handsfree volume 25

Adjusting the earpiece volume 24

Alarm 68

Answer delay 82

Answer mode 80

Answering machine 80

Auto talk 64

## B

Backlight timer 64

Base ringer melody 69

Base ringer volume 69

Base select 65

Base settings 69

Boost memory 40, 62

Boosting the earpiece volume 24

## C

Calling back missed calls 22

Call in to check messages 86

Call length 26

Calls list 51-53, 76-78

Change case 41

Changing the PIN code 66, 85

Charging the batteries 12-13

Check the contents of the box 10

Conference calls 28-29

Confirmation beep 65

Connecting the base and charger 12-13

Contrast 39, 63

## D

Date/time 42-43, 67

Declaration of Conformity 105

Default settings 43, 102-103

Delete messages 84

De-register a handset 30

Dial mode 90

Dialling pause 89

Dialling phone numbers from  
the phone book 23

Dialling phone numbers from  
a quickdial button 23

Display contrast 39, 63

Display icons 14-16

Displaying calls list entries 51-53, 76-78

## **E**

Earpiece volume 24

End a call 20

Entering a name in the phonebook

45, 71

Equaliser 36, 61

## **G**

Guarantee 104

## **H**

Handset deregistration 30

Handset name 62

Handset registration 29

Handset ringer melody 60

Handset ringer volume 61

Handsfree 24-25

Headset use 26

Help 94

## **I**

Icons in the display 14-16

Inserting the batteries 12

Internal calls 27

## **K**

Keypad lock 27

Keypad beep on/off 63

Keytone on/off 39

## **L**

Language 40, 66

Listening to your messages 83-84

## **M**

Maintenance 104

Making a call 20

Making internal calls 27

Memo 83

Memory full 85

Menu guide 17-18

Muting the microphone 26

## **N**

Navigating the menu 17-18

Night light 68

## **P**

Pause 89

Phone book 23, 44-48, 70-73

PIN 66, 85

Play messages 83-84

Power fail 31

Private branch exchanges 88

Profiles 34-37, 56-60

## Q

Quickdial 23, 49-50, 74-75

## R

Recall 88-89

Read number 41

Record a memo 83

Record your outgoing message 81

Redial 21-22

Register a handset 29

Remember boost 40, 62

Remote access 85-86

Reset to default settings 43, 102-103

Ringer melody 38, 60, 69

Ringer on/off 27

Ringer volume 38, 61, 69

## S

Safety information 98

Select base 65

Set the answer delay 82

Set the answer mode 80-81

Set the voice prompt language 40, 66

Setting the recall time 88-89

Storing a quickdial entry 49, 74

## T

Take a call 21

Talk time display 26

Technical details 101

Tone control 25, 61

Transferring external calls internally 28

## U

User profiles 34, 56

Using a headset 26

Using remote access 85

Using the answering machine 80

Using the menu 17-18

## V

Volume 38, 61, 69









Distributed by: Audioline GmbH, D-41460 Neuss

JAN 10 – ISSUE 1.

