

User's Manual

(EN)

tiptel Ergophone 6010/6011 GSM



tiptel

Table of contents

Table of contents	3
Safety notes	6
First operation	8
Checking the contents of the gift box.....	8
Installing SIM card and battery	8
Switching on the phone	9
Setting time and date	9
Charging the batteries	11
Controls of the phone	12
Controls at the front side	12
Controls at the backside	13
Controls at the left hand side.....	13
Controls at the right hand side	13
Elements at the top side	14
Elements at the bottom side	14
Icons in the display	14
Taking or placing calls	15
Taking calls	15
Rejecting a call	15
Direct dialling	15
Re-dial	15
Speed dialling	16
Dialling from the phone book	16
Hands free and mute	17
Call list	19
List of missed calls.....	19
List of dialled and taken calls	20
Extended call list	20

SMS	21
Reading incoming SMS	21
Sending an SMS	22
Writing an SMS text.....	23
Extended message functions	23
Drafts	23
Templates.....	24
Delete all SMS.....	24
Service centre.....	24
Status report.....	24
Memory status.....	25
Phone book	26
Search name	26
Add contact.....	26
Delete contact	27
Copying contact.....	28
Speed dial	29
Phone book settings	30
Settings	31
Silent mode	31
Vibrating alert.....	31
Phone settings	32
Melody.....	32
Volume	32
Display contrast.....	33
Language	33
Clock settings.....	33
Network settings	34
Call waiting	34
Call forward	34
Call barring.....	35
Network selection.....	36
Hide your number	36

PIN Code Request	36
Emergency settings	37
Factory default	37
Emergency call	38
Problem answering machine	39
Testing the emergency call function.....	39
Emergency call setup	40
Emergency call numbers	40
Emergency text	41
Emergency button.....	41
Cancelling an emergency call	42
Important notes on emergency functions	42
Further functions	43
Flashlight.....	43
Calculator	43
Tools.....	44
Alarm clock.....	44
Memo.....	45
Birthday reminder.....	45
Radio	46
Annex	48
Service.....	48
Warranty	49
CE Sign	51

Safety notes

- The telephone may only be operated in areas where its use is not forbidden. Generally you may not use mobile telephones in hospitals, planes, or at petrol stations.
- Do not open the device yourself and do not try to carry out any repairs. Repairs may only be carried out by a qualified technician.
- Avoid the telephone getting in contact with smoke, chemicals, humidity, dust or excessive heat (direct sunlight).
- Keep the telephone and its accessories away from children.
- The telephone's loudspeaker can be set to very high volume. Test this volume before use to avoid damage to your hearing.
- On road traffic use the telephone only together with an approved hands free equipment. Observe the country specific regulations on the use of mobile telephones.
- Keep a distance of 20 cm between the telephone and an implanted cardiac pacemaker. The telephone must be switched off immediately in case you feel or suspect any adverse effect.
- Use only the provided AC adaptor and no other AC adaptors.
- Use only original accessories and batteries.
- The telephone is not waterproof. Avoid getting it in contact with any fluids.
- Regarding any emergencies do not exclusively rely on the emergency call function of the mobile telephone. Due to technical reasons it cannot be guaranteed that you can always establish an emergency call connection.
- Disposal of the device and the batteries must be carried out in a professional way. The waste management utility of your city offers collection points for electronic waste and batteries. Do not throw your device or battery into the household garbage can or into a fire.

- Packaging or parts thereof please dispose of in accordance with your local regulations.



First operation

Checking the contents of the gift box

Part of the scope of delivery are:

- Mobile telephone tiptel Ergophone 6010/6011
- AC adaptor
- Charging cradle
- Rechargeable battery pack Li-Ion 3.7 V/1000mAh
- Headset
- User's Manual

Installing SIM card and battery


Before starting to operate the device SIM card and battery have to be installed.

The SIM card is not part of the scope of delivery. You can obtain such a card from your service provider. Handle the SIM card with care and avoid touching the electrical contacts of the card.

Before installing SIM card and battery the rear cover of the device will have to be removed. In order to do so put a finger nail under the lug of the cabinet cover (between USB charging jack and headset connector), pull it backwards, and then remove the cabinet cover.


Install the SIM card carefully as shown here in the SIM card holder. This holder is located at the bottom side of the telephone.

The SIM card with its contacts facing the telephone's bottom side will have to be shifted between the contacts of the phone and the metal

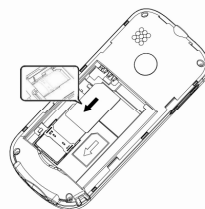

holder. The gap in the cabinet must correspond with the direction of the SIM card. The SIM card must exactly fit in the gap.

Then the battery has to be installed with its three contact fingers matching the three contact pins of the phone at the upper left below the SOS button. The battery will first have to be positioned against the contact fingers. Then it has to be inserted by minor pressure from the bottom side into the gap of the phone.

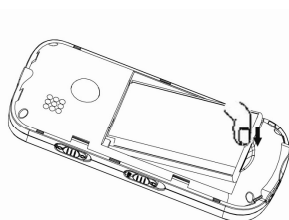

Finally refit the cabinet cover. It has to be put on the phone so that the cover lies on the phone without any gaps. Then - as the last step - press it down until it clicks into place.

Switching on the phone

Press the hang-up key (button with red handset) for 3 - 5 seconds until the display is lit.



Then the PIN (personal identification number) of your SIM card is being requested. This 4 digit number you will find in the documents of your SIM card. Enter those 4 digits of the PIN via the keypad and then press the call key (key with green handset).


Note: The PIN of your SIM card can be changed via the settings of your phone and you can also switch of the PIN query which comes when switching on the phone.


Now the telephone can be used.

Setting time and date



After switching on the phone for the first time (and after the battery has been removed) date and time will have to be set.

In order to do so press the  key, then in the main menu select "Settings" by using the  key again and then press the dial key.


In the settings menu select "Phone Settings" with the  key and then again press the dial key.

In the telephone settings menu then select "Clock Settings" with the  key and then again press the dial key.

Now select "Set Time" and again press the dial key. The time will be shown in format hh:mm (hours:minutes), hours have been selected. Use the digit keys for entering the hour and the selection will move to the minutes. Now use the digit keys to enter the minutes. To enter 13:06 o'clock you will first have to enter 13 and then 06. Then press the dial key to save your settings.

Then select "Time Format" with the  key and then use the  key again whether you wish the "24 Hours Format" or the "AM/PM" display. Finally confirm your choice with the dial key.

Note: In 24 hour format e.g. 13:30 o'clock will be shown as "13:30", in AM/PM format it is "01:30 PM". Factory preset is "24 hour format" as being used in most European countries. If you wish to keep this format there is no need to change anything with these settings.

Now use the  key to select "Set Date" and confirm this with the dial key. Enter the current date by using the digit keys in format DD:MM:YYYY, i.e. first the day, then the month (both as 2 digits) and then the year (4 digits). For 23 June 2010 you will first have to enter 23, then 06 and then 2010. Confirm your settings with the dial key.

Then press the hang-up key several times until the phone has returned to its standby display. The display now should show the correct time and below this the correct date.

Charging the batteries

Your telephone comes along with a charger cradle and an AC adaptor belonging to that cradle. Connect the small plug of the AC adaptor to the jack at the backside of the cradle and the connect the AC adaptor to a mains wall outlet.

Put the telephone in the charger cradle and the battery will be charged. During the charging process the right bar segment of the charger control display will flash in the display. As soon as the charging process has finished the flashing stops and all segments in that display are fully shown.

Note: Instead of charging the phone via the cradle the plug of the AC adaptor can also be directly connected to the jack at the bottom side of the phone. And the battery can also be charged via the USB connector of a Computer.

Before using the phone for the first time fully charge the battery. To save battery life time only place the phone in the cradle when the battery is nearly depleted (only one or two bars of the battery condition segment are shown).

With an new and fully charged battery the phone can be operated for up to 210 hours (more than 8 days)when you do not take or place any calls. After some 170 minutes (2.8 hours) call time the battery will need to be charged again. Depending on the duration of your calls re-charging the battery usually is needed once a week. In the course of time the battery will lose capacity. If you realize after some time that the battery needs re-charging in shorter intervals you should replace the battery.

Controls of the phone

Controls or connectors are located on the front side, but also on the right, left, upper, and lower side and at the backside of the phone.

Controls at the front side

Dial key:

Dialling and taking a call
 Reviewing the list of incoming calls
 Confirmation in menus

Key 1:

Accessing the answering machine by press and hold

Asterisk key:

Memory M1 by press and hold

Key 0:

Space in SMS
 Hands free



Up key:

Selection in menus
 Opening the main menu

Down key:

Selection in menus
 Opening the phone book

Hang-up key:

Hanging up or rejecting a call
 Return to standby
 Phone on/off

Hash key:

Memory M2 by press and hold

Controls at the backside



Here you find as control element the red emergency button (SOS).

When this button is being pressed for 3 seconds the emergency function gets activated. More details on this function please find in the chapter "Emergency call".

Controls at the left hand side



Here at the top you find a rocker with a + and a -.

During a call you can adjust the volume.

In addition to that you can control the volume of the integrated radio.

Controls at the right hand side



Here you find two sliding switches.

The upper sliding switch will turn on or off the integrate flash-light at the phone's top.

The lower sliding switch has three positions. The centre position means normal operation. Moving it downward activates the key lock, moving it upward switches on the integrated radio.

An activated key lock will be indicated by the corresponding icon on the display.

Note: Taking calls with the dial key is possible even with activated key lock.

Elements at the top side



At the top side you will find the integrated flashlight. You can turn it on and off via the upper sliding switch at the right hand side.


In addition to that you will also find a jack which fits the AC adaptor of Nokia mobile phones.

Elements at the bottom side



At the bottom side you will find on the left and on the right the contacts for the charger cradle and between them the mini USB connector for charging the battery with the provided charger or a computer. Between the contacts there is also the 3.5 mm phone jack for the headset. A headset is part of the scope of delivery.

Icons in the display

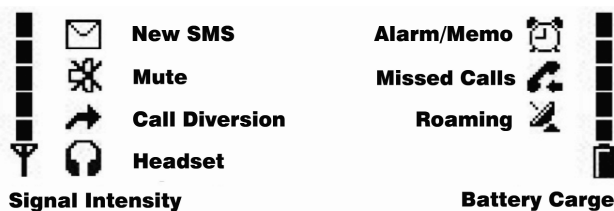

In addition to the name of the service provider, date, and time you will all the time see the signal strength of the network and the battery condition. Other icons as shown above will be displayed depending on the status or situation.

Taking or placing calls

Taking calls

When there is an incoming call the phone will ring (provided that you did not activate the "Silent Mode" function) and the telephone vibrates (provided that "Vibrating Alert" has been activated). The display will show you the caller's number and the icon for an incoming call. In case the caller's number has been saved to the phone book instead of the number his/her name will be shown. Accepting the call is done by pressing the dial key.

Rejecting a call

If you press the hang-up key with an incoming call the caller will be rejected. The caller hears the busy tone.

Direct dialling

For direct dialling enter the desired number via the digit keys and then press the dial key. A call to the desired party will be set up.

Note: Please make sure always to dial the area code first when using a mobile phone.

Re-dial

If you press the dial key in the phone's stand by mode without entering a phone number first the call list will open. A list of numbers is shown to you that you have recently dialled, from which you have taken calls, and from which you have missed calls (please also see chapter "Call list". With the cursor keys you can browse up and down through the list. Pressing the dial key once again will result in dialling the selected phone number.

Note: In case you have missed a call or received an SMS the call list upon pressing the dial key first will only show the missed calls or new SMS's. Only after reviewing these entries and after pressing the dial key for a second time you will see the call list with all entries.

Speed dialling

The telephone comprises speed dialling keys to which you can save frequently called phone numbers.

These speed dialling keys can be used in the phone's stand by mode by pressing the keys **2-9**, ***** and **#** for some 2 seconds. The individually assigned phone number will then be dialled automatically. If there are no numbers assigned instead of that you will see a query whether or not you wish to assign a number. Then you can assign a number from the phone book to the speed dial key pressed.

Key ***** carries the icon of a female head while key **#** has a male head printed on it. These two keys can be used to assign as speed dial numbers the numbers of e.g. daughter an son. Key **1** is also available for speed dialling. Usually this key is used for the number of your answering machine.

Note: In order to assign numbers to the speed dial keys this way the desired number first has to be saved to the phone book. Using the main menu **→** phone book also allows you to directly enter speed dial numbers.

Dialling from the phone book

If you press the **☰** key in stand by mode the phone book will open up showing its first entry.

With the cursor keys you can browse up and down through the list.

If you press a digit key several times within a short period of time the first with entry starting with the corresponding letter will be shown. If e.g. you wish to see the first entry starting with "L" you will have to press the key **5** three times in a row within a short period of time.



Pressing the dial key will result in opening a selection menu and another press with activated entry "Call" dials the number of the entry shown at this moment.

Note: Besides calling a contact you can also send an SMS, modify the phone book entry, or delete it.

Hands free and mute

During a phone call you can switch from handset operation to hands free. Then you will hear the other party from the big loudspeaker at the backside of the device.

In case you have a query which is not for the ears of the other party you can switch off (mute) the microphone in the phone.

If you press the dial key during a phone call a selection menu will open with the entries "Mute" and "Hands Free". With the  or  keys select "Hands Free" to activate the hands free function or "Mute" to switch off the microphone and then confirm your selection with the dial key.

The display will show icons for activated hands free operation and/or switched off microphone.

Another press of the dial key again opens the sub-menu. If "Hands Free" is currently activated the display will show "Handset" instead to get back to handset operation. If the microphone is currently switched off the display will show "Unmute" to switch on the microphone again.

Note: To switch to hands free during a call instead of the dial key and then the menu item "Hands Free" you can also press the digit key **0** for some 2 seconds.

Call list


By pressing the dial key in standby of the phone the call list will open.



When there are currently calls which you have not taken and which you have not seen yet, the call list will only show you the missed calls.

In case you already reviewed the missed calls, the call list will show you all missed calls as well as the calls taken and the dialled phone numbers.

List of missed calls

In case you missed a call due to absence this will be indicated by a large message in the display.

 In case you closed the large message of missed calls (e.g. by pressing the hang-up key), the telephone will show you through a small icon that there are still missed calls in the call list which you did not review. This icon will remain in the display until you have reviewed the missed calls.

By pressing the dial key you will get directly to the list of calls and you will see the last number which has tried to reach you. Use the  or  key to see other missed calls.


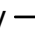
By pressing the dial key once again you will get to a menu from which you can call back the caller, send him/her an SMS, save his/her number in the phone book, or delete the call from the call list.

List of dialled and taken calls

As long as there are still missed calls in the call list which you did not review you will only see the missed calls. After you have reviewed all missed calls and then you let the call list open again you will see missed calls as well as taken calls and also dialled numbers.

Note: If you rejected a call by pressing the hang-up key this call will anyway be shown as a taken call in the call list.

Extended call list

In addition to the standard call list you open by pressing the dial key you can open the extended call list from the phone's standby mode by pressing the  key  and then "Call History".

Here you have the list of all calls in absence (missed calls), all calls you placed (dialled numbers), all calls, you took (received calls) as separate lists.

In addition to that you here have the option to delete calls from all lists at a single instance.

SMS

Your phone allows you sending and receiving short messages as text messages (SMS).

Reading incoming SMS

When have received an SMS this will be indicated in large letters on the display.

By pressing the dial key you will see the phone number(s) (or name(s), in case the subscriber is listed in the telephone book) who sent you the SMS. And by pressing the dial key once again the contents of the SMS is shown.


When seeing the contents of the SMS and pressing the dial key once again you will get a selection menu from which you can answer the SMS, call the number, delete the SMS, forward the SMS to another phone, or save the sender to the phone book.



In case you have closed the large message on a new received SMS (e.g. by pressing the hang-up key) a small icon in the display will show you that there are still SMS which you did not read so far.

Note: In case you have received calls you did not answer together with SMS you have not read yet, you first will have to go through the list of missed calls by pressing the dial key. Only after this you can review new SMS by pressing the dial key once again.


The dial key now gives you access to new SMS which you have not read so far. As soon as you have reviewed the message this message will not be shown to you again when you once more press the dial key.


But from the phone's standby mode you can press the  key → "SMS" to see the message centre of your phone.

In the section "Received SMS" you will see all SMS which you received and which you did not delete. Unread messages are tagged with "NEW".

Sending an SMS

Beside the option of answering a received SMS you can also write and SMS messages yourself.

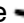In case the subscriber you wish to send an SMS to is saved in your telephone book as a contact, open the phone book from the stand by mode of your phone by pressing the  key, then select the person you wish to send the SMS to with the cursor keys, then press the dial key, and then select "Send SMS" from the menu. After you have finished writing your SMS you will just have to press the dial key to send the SMS (with or without saving it to the phone).

If the person you wish to send the SMS to is not in the phone book, from stand by mode press the  key, then "SMS", and then "Write New SMS". After finishing writing your SMS press the dial key. The you will be asked to enter the phone number of the person you wish to send the SMS to and after pressing the dial key the message will be sent.

Note: In case you select "Send and Save" after writing an SMS the short message will be sent and at the same time saved to "Sent SMS".

Writing an SMS text

The actual message text you must "write" with the digit keys. Next to the digit keys ② to ⑨ you will find three to four letters printed each. If you press the corresponding key once the first letter will be shown, if you press it twice in a short period of time the second letter will be shown and so on.

For writing the word "hello" you would have to press ④ twice, then ③ twice, then three times ⑤, then again three times ⑤, and finally three times ⑥.

Beside the printed letters assigned to the keys and the number there are more characters

① , . ? ! 1	⑤ j k l 5 £	⑨ w x y z 9 ý þ
② a b c 2 ä æ å à	⑥ m n o 6 ö ø ó	⑩ Space; 0
③ d e f 3 è ê ë	⑦ p q r s 7 ß \$	✱ Special characters: , . ? ; :
④ g h i 4 í î ï	⑧ t u v 8 ü ú ú	! " ' @ _ ~ & + - () < > { } [] ...

which are not being used so often as you can see in this table.

For a space press ⑩.

With the # key you change the current letter from lower case to upper case.

Extended message functions

In addition to simple reading and writing of SMS in the main menu → SMS there are even more functions.

Drafts

After writing an SMS you can cancel sending it with the function "Save to Draft Box". An SMS saved this way will be available to you in "Draft Box" for sending it later.

Templates

In "Templates" you will find some factory preset templates. You can edit or delete those templates but you can also create new templates.

From the menu item "Templates" you can send an SMS with or without adding more text with or without changing the modified template to "Templates". This procedure is recommended in case you wish to send more often the same message, e.g. to advise somebody that you are going to be late.

While writing an SMS you can press the dial key anytime and then select "Insert Template" to insert a text saved as a template at this position in your SMS.

Delete all SMS

Here you can delete either all short messages, or only all received messages, or all sent messages, or all messages saved as drafts, or all templates at once.

Service centre

Here you enter the phone number of the SMS centre of your service provider. You will usually receive this information together with you SIM card.

Status report

Here you can configure whether or not you would like to receive a confirmation SMS for a successfully sent short message.


In general this function should not be activated because confirmations are often subject to an extra charge and they are not always being supported.

Memory status

This function shows you how many short messages have been saved to your SIM card and to the phone and how much memory is available in total.

Phone book

Your phone comprises a memory for up to 200 phone numbers and names. In addition to that even more phone numbers can be saved to the SIM card.

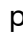To open the phone book from stand by mode press the  key. You will get to the main menu. There you use the cursor keys to select the entry "Phone Book" and then press the dial key. Now you can configure the phone book and the following options are at your choice.

Some functions are also available to you - maybe partially limited or different - in case you do not open the phone book via the main menu → Phone Book, but by opening it directly with a cursor key from stand by mode.


Search name

With this function you can search for a phone book entry by his name. This is the same as using the cursor down key from the phone's stand by mode.

Add contact

With "Add Contact" you can create a new entry.

First you will be prompted to enter the phone number. Do so by using the digit keys.

To make sure that dialling will also be successful when dialling from the network of another country, you should always save the numbers in international format which means country code included. The German phone number 02102-4280 would then be entered as +4921024280, with +49 as country code as prefix, then the area code without the leading zero. For + press  two times in a row

As a next step you will be prompted to enter the name.

Use the digit keys to enter the name of the subscriber. Pressing a digit key once selects the first letter assigned to it, pressing it several times will select the following letters.

1 , . ? ! 1	5 j k l 5 £	9 w x y z 9 ý þ
2 a b c 2 ä æ å à	6 m n o 6 ö ø ó	0 Space; 0
3 d e f 3 é ê ë	7 p q r s 7 ß \$	* Special characters: , . ? ; :
4 g h i 4 í î ï	8 t u v 8 ü ú	! " ' @ _ ~ & + - () < > { } [] ...

Beside the printed letters assigned to the keys and the number there are

more characters as you can see in this table.

For a space press **0**. With the **#** key you change the current letter from lower case to upper case.

Once you are thorough with the name press the dial key. Then the entry will be saved to the phone book.

Note: New entries cannot be made when using direct access to the phone book by using the cursor key down from the phone's stand by mode.

Delete contact

Select the entry "Delete Contact" to delete particular or all entries. You will be prompted whether you wish to delete only particular or all contacts.

When you select "All" you will be asked whether you wish to delete all contacts from the SIM card or from the phone's phone book. Use the dial key to confirm delete, use the hang-up key to cancel.

If you chose "Single" you can delete entries from the phone book, one after the other. You will see all entries not matter whether they are in the phone's phone book or on the SIM card. With **↵** and **⏪** keys you can browse through the list up or down entry by entry. When you

press the dial key you will be asked if you wish to delete the entry. Pressing the dial key a second time will cancel delete.

Note: Single entries you can also delete when accessing the phone book directly. But here the menu item "Delete" must be selected again for each and every entry to be deleted. Deleting all entries at once is not possible.

Copying contact


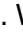
With this function you can copy all or individual entries from the SIM card to the phone's memory or from the phone's memory to the SIM card. Please note that this way copies will be created, so the entries then will have duplicates.

So, this function is only recommended in combination with "Delete Contacts/All ". You can e.g. as a first step copy all entries from the phone to the SIM card and then delete all entries in the phone's memory.

When you select this function you will be asked whether you wish to copy entries from the phone to the SIM card or from the SIM card to the phone. Select the desired option and then press the dial key.

Then you will be asked whether you wish to copy all or only individual entries. Select "Single" or "All" and confirm your selection by pressing the dial key.

Once you have selected "All" you will once again be asked if you really want to copy all entries. If you confirm this by pressing the dial key the phone will copy all entries. You can cancel this function by pressing the hang-up key.

When you have chosen "Single" the first entry in the phone book will be displayed. With  and  keys you can browse up or down one entry at a time. When pressing the dial key you will be asked whether you really wish to copy the entry. Pressing the dial key once again

confirms the copying process, pressing the hang-up key will cancel copying.

Speed dial

Here you can enter the speed dial numbers for answering machine query (digit **1**), of digits **2** to **9** and keys ***** and **#**. After pressing and holding the corresponding key for some 2 seconds the assigned number will be dialled.

In the keypad layout next to the ***** key you see a female and next to the **#** key a male face. These keys are e.g. suitable for assigning them with the phone numbers of your son and your daughter.

Note: When no phone numbers have been assigned to the keys after pressing a key for more than 2 seconds you will be asked whether you wish to assign a number to that speed dial key. But now you can only select an entry from the phone book.

Phone book settings

If you select this item you will get to a sub menu with the items "Save Entry on" and "Memory Status".



When you select "Save Entry on", then you can choose whether the phone will save new entries in the phone's memory or on the SIM card.

Saving them to the SIM card gives you the advantage that the entries will be kept in case you change the phone. Vice versa saving them to the phone gives you the advantage that they will be kept also when changing the SIM card.

It really does not matter what you select here because you can copy the entries from the SIM card to the phone's, memory or vice versa anytime before changing SIM card or telephone. It is only important to have the entries at the same location.

Memory usage shows you how many phone numbers have been saved to the SIM card or the phone's memory and how many numbers can be saved to both media at most.

Settings

From the phone's stand by mode you can go to the telephone's settings by pressing the  key  Settings.

Silent mode

Switches the phone to silent mode in order not to be disturbed in e.g. a conference by the phone's ringer.



If the phone has been set to silent this will be indicated in the phone's display by the icon on the left.

Note: In most cases it is better to turn off the phone instead of setting it to silent because the caller will then receive an info message that you are not available on the phone for the moment.

Vibrating alert

If the vibrating alert has been switched on the phone will vibrate with incoming calls or short messages in addition to the ringing signal. The vibrating alert is also active when the phone is in the "Silent Mode". You will not be disturbed by nay ringing signals but are still being notified through the vibration that somebody is calling you or that an SMS has been sent to you.

Note: Don't leave the telephone on a slippery surface with activated vibrating alert. The phone might move around due to the vibrations and e.g. fall down from a table.

Phone settings

Here you can configure some of the phone's settings.

Melody

Here you select the melodies or tone signals used by the phone to signal incoming calls and received SMS, or reminds you of birthdays.

When selecting one of these items the current melody will be played back and you can change it by using the cursor keys. Pressing the dial key will save the selected melody.

Also you can define here the key tones which will be signalled by the phone when you press a key. You can chose among three different tones and off.

Volume

Here you can adjust the handset volume (loudspeaker during calls), the ringing volume, the volume of the notifier tone after receiving an SMS, the volume of the key tones, and the volume of the melody being played back when switching the phone on or off.

After selecting an item (apart from the handset volume) the currently set melody with the currently selected volume will be played back. Use the cursor keys to adjust the volume higher or lower and then press the dial key to save this setting.

Note: The loudspeaker of the phone can be adjusted to quite a high volume and so is also suitable for the hearing impaired. Check the volume carefully by first keeping the phone at some distance from your ear to avoid damage to your hearing.

The handset volume can also be adjusted during a call by using the rocker cradle with the + and – symbol at the left hand side of the phone. A change performed this way will not be saved as a preset volume but is only valid for the current call.

Note: When you are carrying an in-ear hearing aid also the handset volume of the phone will be amplified by the hearing aid. Please keep this in mind when adjusting the volume.

Display contrast

Here you can change the displays contrast by using the cursor keys. Chose a setting where the letters can clearly be read with the background chosen.

Language

Here you select the language of the phone. Setting "Automatic" will have the phone try to detect your language via the SIM card used. If the automatic selection does not work, here you can select the desired language.

Clock settings

Here you can set time and date. Time and date will be displayed in the telephone's stand by mode but are also needed for internal functions such as the alarm clock (please see also chapter "Setting of time and date").

Network settings

Here you can make settings depending on your network.

Note: Not all providers offer such functions. You might want to contact your service provider.

Call waiting

Here you can switch on or off call waiting and query the currently selected status from your network provider.

In case call waiting has been switched on another incoming call while already having a call will be indicated by a call waiting signal. Now you can toggle between those two subscribers. The second caller will hear the ringing tone. In case you have switched off call waiting the second caller will hear the busy tone while you are having another call.

Call forward

Here you can switch on or off call forwardings and query the current status.


Select "All Calls" in case all calls shall be forwarded. With "If Busy" incoming calls will only be forwarded when you are busy having another phone call at the time. "No Answer" means that calls will be forwarded in case you do not accept the call within 15 seconds. Selection "Out of Reach" means that calls are only being forwarded in case your telephone has been switched off or it is not registered with the network.

Select the desired type of forwarding with the dial key. In the sub menu you have the option to switch forwarding on or off or to query the current status from your network provider.

After activating call forwarding you will be asked to enter the phone number to which the call shall be forwarded.

If calls shall be forwarded to the answering machine of your network provider you should enter here the phone number of the answering machine centre of your service provider. You will usually receive this information together with the documents of your service provider contract.

In case you have forwarded calls to the answering machine your service provider will usually advise you on new messages by sending you an SMS.

 In case call forwarding (no matter which type) has been activated this will be indicated by the icon on the left in your phone's display.

Call barring

In this configuration item you can set up barrings for outgoing or incoming calls.

"All Outgoing Calls" means that there are no outgoing calls possible at all.

With "Bar Outgoing International Calls" all calls to foreign countries will be blocked.

"Bar Outgoing International Calls (Except to HPLMN)" blocks all calls to foreign countries except calls to the home country of your SIM card. With this setting e.g. from inside Germany you cannot place any calls to foreign countries but you can call German numbers from outside Germany.

"All Incoming Calls" blocks any incoming calls at all.

"All Incoming Calls when Roaming" means that you can take calls in your home country, but that you cannot take calls in case your phone has been registered with a foreign network.

Network selection

Here you can configure whether your telephone shall search for a mobile network automatically or whether you wish to select this network manually. When automatic search has been activated in your home country your phone will always register with network of your provider, in foreign countries, however, it will always chose the network with the strongest signal. Manual selection makes only sense in foreign countries, but only then when you would like to use a particular network, e.g. because you know that roaming charges are cheaper than with other networks.

Hide your number

Here you can select whether or not your number will be displayed to the called party when placing a call.

"On" means that your number will not be shown. "Default Setting" means that the settings with your network provider determine whether or not your number will be shown. Usually the default settings of a network provider allow showing the number.

PIN Code Request

Here you can set whether or not your phone requires the PIN (personal identification number) of your SIM card when you want to switch on the phone.

Switching off the PIN prompt of course is more comfortable because you do not have to remember the PIN and you do not have to enter it every time. But without PIN every stranger can switch on and use

your phone which - e.g. in case your phone was stolen - can result in very high phone charges.

With "Change PIN" you can change the PIN of your SIM card. this change will be performed on the SIM card and will be permanent also when changing the phone.

Emergency settings

Here you enter emergency call numbers and configure emergency settings. More details please find in chapter "Emergency call".

Factory default

Here you can reset the settings of your phone back to the factory default settings. The phone book, however, will not be deleted. As confirmation you will have to enter the PIN **0000**.

Emergency call

Your telephone provides you with an emergency call function which can be activated by pressing the SOS key at the backside of your phone for more than 2 seconds.

In case in your configuration is at least one emergency call number and the emergency call key has been activated the telephone will make a emergency call when pressing the SOS key for at least 2 seconds (also with activated key lock without confirmation).

The phone will sound an alert signal and sends an SMS with an individually defined help text to (up to five) configured emergency phone number(s).

Then the phone will call the first configured emergency phone number. In case the call is taken the phone automatically goes to hands free mode. If the called party hangs up the telephone dials the next emergency phone number. To exit the emergency call function the hang-up key must be pressed and held for some time.

If the call is not being taken the phone will call the next emergency call number configured. In case the call is not taken with any of the emergency phone numbers (or the emergency function is not being terminated after a call has been taken), the phone will repeat calling all configured emergency call numbers three times.

While the phone is calling an emergency phone number the display will show the phone number. The call is being made in hands free mode. So you can hear whether or not the called party takes the call. During SMS transmission and during the dialling attempts the phone will all the time sound the alert signal. Once the connection has been set up or it rings at the emergency phone number or the called party has taken the call the alert signal will stop but it will start again with every new dialling attempt.

After an emergency call (no matter whether it was taken, it was not successful, it was terminated) the phone will take any new calls automatically and go to hands free mode. This way contact to the helpless person is still possible even when the emergency call was already terminated. To exit this function the phone must be completely switched off and then on again.

Problem answering machine

The phone cannot detect whether the emergency call was taken by a person, an answering machine, or a fax machine.

In case the call was taken by e.g. an answering machine the current call can be terminated by pressing the hang-up key. The phone will then dial the next emergency phone number.

In case an answering machine gets a message which is not loud and clear it will in most cases hang up after a few seconds. Since the phone will continue the emergency function even after a call was taken calling the next emergency call number will still happen even when the first call was taken by an answering machine and the helpless person did not or could not press the hang-up key. It can, however, not be ruled out that there are answering machines that already with some louder background noise will detect this as voice and will not hang up.

That's why you should make sure that with entered emergency call numbers these numbers do not have any answering machines or fax machines.


Testing the emergency call function

After setting up the emergency call function test it thoroughly. This test should be done together, i.e. the owner/user of the device together with the persons whose phone numbers have been entered as emergency phone numbers.

Please keep in mind the user of the device is in a stress situation when making the emergency call. Also persons who are meant for taking the emergency call should be made familiar with the operation of the emergency call function in order to be able to give the helpless person in this situation directions (e.g. how to terminate the emergency call function).

Emergency call setup

For setting up the emergency call function the emergency call itself must be activated and the emergency call test and the emergency call numbers will have to be programmed.

From the phone's stand by mode press the  key and then settings → Emergency Settings. Here you find all settings for configuring the emergency call.

Emergency call numbers

Under "Emergency Numbers" you programme up to five emergency call numbers. In an emergency the first number will be dialled first, the second number will be dialled after the first number, and so on. Emergency call numbers must be saved as entries in the phone book.

When you select this item the phone will display "Create" or "Delete". Here you select whether you wish to delete already programmed emergency call numbers or to enter new emergency call numbers.

If you select "Create" the phone will show you all currently not set up emergency call numbers. Pressing the dial key on the selected emergency call number gets you into the phone book where you select the entry which shall be saved as emergency call number. Then press the dial key for confirmation. This way you can save up to five emergency call numbers.

After having selected the emergency call number you will be asked whether you also wish to send an SMS to that number. You should confirm this in case the emergency call number is a mobile phone number. With fixed net phone numbers you should only confirm this when you are sure that the phone behind this number is capable of receiving SMS.

Note: If you activate SMS with phones behind phone numbers which are not capable of receiving SMS the service provider will call the subscriber and read the SMS to them. This call would result in having that phone busy right in the moment when the mobile phone tries to call this phone with its emergency call.

When you select "Delete", the phone shows you all already setup emergency call numbers. By selecting an emergency call number and pressing the dial key the number can be deleted.

Note: To edit an emergency call number it must be deleted first and then programmed once again.

"Change Sequences" changes the sequences of the emergency numbers.

Emergency text

Here you enter the text which will be sent in an emergency as SMS. You can edit the text.

Emergency button

Here you select whether or not the emergency call button at the backside of the phone will be activated.

With an activated button the emergency call function is active as explained above. With a not activated button the emergency call func-

tion is not available, even if you have programmed emergency call numbers or text.

Cancelling an emergency call

If an emergency call was made accidentally you can cancel it by pressing and holding the hang-up key for some time.

To abort the emergency function completely you will have to turn off the phone and then switch it on again.

Important notes on emergency functions

- Don not rely exclusively on these emergency call functions. In certain situations (e.g. no network or no balance for outgoing calls) the emergency function cannot be activated.
- With configured emergency call numbers answering machines are not allowed.
- Make sure that all owners of emergency call numbers know that you configured their number for an emergency call and advise them on how to react on an emergency call from you.
- The general emergency number 112 in mobile networks must not be configured as emergency call number. Same applies to 110 and any other official emergency call numbers.
- Verify your setup regarding emergency call numbers completely in order to fix possible errors.
- Please note that the emergency call can also be made by contact with objects e.g. in your (hand) bag and due to that handle the phone with activated emergency call function very carefully.

Further functions

In addition to placing and taking phone calls your phone with its integrated flashlight, the calculator, the organizer, and the integrate radio provides you with additional functions.


Flashlight

Your phone has an integrated flashlight which e.g. can help you unlocking your door in the dark. The upper slide switch at the right hand side of the phone is used to turn the flashlight on and off.

Please note that using the flashlight will consume a lot of energy and so will reduce the standby time of your battery in large amounts.

Note: the light of the flashlight is generated by a high power LED. Never point directly to the eyes of a person or an animal.



Calculator

Your phone comprises a (simple) integrated pocket calculator. From the phone's stand by mode press  key \rightarrow Calculator.

To operate the calculator first enter the first number then use the cursor keys to select one of the operations shown on the right hand side (+, -, x or /) then enter the second number and finally press the dial key to show the result.

Exiting the calculator is done by pressing the hang-up key several times.

Tools

Your phone comprises a (simple) integrated organizer. From the phone's stand by mode press  key  Tools.

Alarm clock

To use your phone as an alarm clock select the function "Alarm Clock" then "Set Alarm" then the first memory position marked with -- : --.

Then you select whether the alarm shall ring only on timre or on several days a week.

With the selection "Weekly Alarm" you activate or deactivate the weekdays on which the alarm shall ring and finally select "Confirm Selection". With selection "One Shot Alarm" this step is not there.

In the next step you enter the wake-up time and then the ringing melody which you would like to use as the wake-up signal.

After confirming everything with the dial key in the overview you see the set up alarm clock and you can modify or delete it with the dial key. Exiting the alarm clock settings is done by pressing the hang-up key several times.



As soon as the alarm clock has been activated this is indicated to you in the display by the icon shown on the left.

At the alarm time the telephone rings and shows you the message "Alarm" on the display. In addition to that "Snooze" and "Stop" which can be operated with the dial/hang-up key is shown. "Stop" ends the alarm function. "Snooze" postpones it by 5 minutes.

In case you do not press a key the phone will repeat the alarm function in intervals.

Note: With a one shot activated wake-up call this call will be performed once. Activating such an alarm is only possible up to 23:59 hours before the alarm time.

Memo

With this function you can write down a memo and add time and date and the ringing melody. At the set time the phone will remind you of the written memo by the melody and the display of the note you wrote.

Operation is the same as with the alarm clock. The only difference is that before selecting the ringing melody also time and date and the text of your memo is being prompted. The memo itself will be written in the same way as an SMS via the digit keys.

If the time has come the telephone will show the memo on the display and play back the ringing melody. You can end this by pressing the hang-up key.

If you do not press any key the phone will repeat showing the memo in intervals.

Birthday reminder

Here your phone can remind you of birthdays.

When selecting this function you have the option to programme a new birthday or to modify or delete an already existing birthday entry.

If you select "New Birthday" you will be prompted to enter the name of the person of whose birthday you wish to be reminded. After entering the name press the dial key to save. Then you will be asked to enter year and day of the birthday. Finally you will have to enter the time at which you wish to be reminded of that birthday.

Now the birthday has been saved. From now on the phone will remind you at the programmed time and the melody set and the text "Birthday Reminder" together with the name and the date. Pressing the dial or the hang-up key confirms that you have read the reminder. If you do not press any key the telephone will stop playing back the melody after a short while, but it will still show the birthday reminder text on the display until you press the hang-up or the dial key.

Note: The melody which reminds you of birthdays is selected under Main Menu → Settings → Phone Settings → Melody → Birthday Reminder.

 
The birthday reminder will repeat itself once a year automatically unless you delete the entry.



When selecting "Edit Birthday" all programmed birthdays will be shown to you. With the dial key you can select the birthday and edit it.


When selecting "Delete Birthday" all programmed birthdays will be shown to you. With the dial key you can delete the birthday (after the security prompt).

Radio

Your phone has an integrated FM radio. This can be switched on by sliding the lower switch at the right hand side of the phone to its upper position.



When you turn the radio on the last station will be played and the frequency of that station together with the radio icon will be shown on the display. With  and  you can change the frequency manually.

Pressing the  key will get you in search mode and you can start it by pressing the dial key. The phone searches for the next receivable station and then stops the search. Pressing the dial key once again will start the search again. Pressing the hang-up key will end the search.

When listening to the radio you can adjust the volume with the rocker cradle marked with + and - located on the left hand side of the phone.

To mute the loudspeaker press the hang-up key, to turn it on again press the hang-up key again.

Note: Headset must be plugged in to use the radio. Headset functions as antenna.

Annex

Service

You have purchased a modern product of Tiptel.com GmbH Business Solutions. Our high-tech manufacturing facilities grant a continuous level of highest quality. If, however, problems occur or you have any questions on operating the device please contact your local dealer. During the warranty period this is your contact partner. For technical support of specialist dealers Tiptel.com GmbH Business Solutions has set up a special phone number so that they can provide you with high quality consulting service.

In case your dealer is not able to help you, you can contact Tiptel.com GmbH Business Solutions directly. First information you will find on our internet pages as shown below. In addition to that you can contact our experienced technical support staff by telephone at the times shown below:

In Germany	In Austria	In Switzerland
www.tiptel.de	www.tiptel.at	www.tiptel-online.ch
08.00 to 17.00 (Mo - Fr)	08.00 to 17.00 (Mo - Th), Fr until 15.00	08.00 to 17.00 (Mo - Fr)
Telephone 0900 100 - 84 78 35* Vanity Tel. 0900 100 - TIPTEL* *subject to charges	Telephone 02236 677 464-0, Fax 02236 677 464-21	Telephone 044 884 01 80 Fax 044 843 13 23

For questions regarding your telephone or DSL connection please contact your service provider.

Warranty

Your contact partner for any warranty issues is the specialist dealer you purchased the device from. Tiptel.com GmbH will grant a warranty of 2 years from the date of handover for the material and for the manufacturing of the device.

Initially, the purchaser shall have only the right of subsequent performance. Subsequent performance entails either repair or the supply of an alternative product. Exchanged devices or parts shall become the property of the dealer.

If the subsequent performance fails, the purchaser can either demand a reduction in the purchase price or withdraw from the contract.

The purchaser shall notify the dealer immediately of any defects found. Proof of the warranty entitlement shall be furnished by standard proof of purchase (receipt or invoice).

The warranty entitlement shall expire if the purchaser or an unauthorised third party interferes with the device. Damage caused by inappropriate handling, operation, storage or by force majeure or other external influences shall not be covered by the warranty.

The warranty shall not cover any consumable material (e.g. batteries) or defects that only slightly impair the value or the usability of the device.

Claims for damage caused by transport shall be asserted to the delivery company.

Notes on settlement:

Repairs can only be conducted by the Service Department of Tiptel.com GmbH Business Solutions. We offer a 48 hours repair service which makes sure that you will usually receive your repaired device or a replacement back after 2 days plus standard shipment time. A warranty repair does not prolong the warranty period - neither for the replaced parts nor for the device. This warranty is not transferable and shall expire if the device is sold on to another party. It shall also expire if the device is interfered with by third parties or if the serial number on the device has been removed or made illegible. There is a warranty seal on the device. Please do not damage or remove this seal because otherwise your warranty will expire.

The General Terms and Conditions of Tiptel.com GmbH Business Solutions, which are part of the contract for a dealer, shall also apply. In the event of a complaint, the defective product shall be sent to the relevant Tiptel subsidiary, the importer or dealer along with a description of the defect and the proof of purchase. For warranty handling please contact your specialist dealer or send the device directly to the following address:

In Germany	In Austria	In Switzerland
Tiptel.com GmbH Business Solutions Service	Tiptel GmbH Service	Tiptel AG Service
Halskestraße 1 40880 Ratingen	Ricoweg 30/B1 2351 Wiener Neudorf	Bahnstrasse 46 8105 Regensdorf

In case of a problem or defect covered by warranty costs for returning the repaired device back to you will be absorbed by Tiptel.com GmbH Business Solutions.

CE Sign

This device is approved for the connection and use within the analogue public telephone networks in all EC countries – according to the European Requirements. Due to technical deviations in individual countries, we cannot grant an unlimited guarantee for the successful operation at all types of telephone accesses. Tiptel hereby declares that the device complies with all fundamental requirements of the European directive 1999/5/EC. This conformity is confirmed by the CE sign on the device. Further details on the declaration of conformity can be found under the following internet address:
<http://www.tiptel.com>

Tiptel.com GmbH Business Solutions

Halskestraße 1
40880 Ratingen
Deutschland

Tel.: 0900 100-84 78 35*
Vanity Tel.: 0900 100-TIPEL*
Internet: www.tiptel.de
International: Internet: www.tiptel.com

*(1.49 Euro/min. for calls from the fixed net of Deutsche Telekom.
Calls from mobile phones can be subject to different charges)

Tiptel GmbH

Ricoweg 30/B1
2351 Wiener Neudorf
Österreich

Tel.: 02236 677 464-0
Fax: 02236 677 464-22
E-Mail: office@tiptel.at
Internet: www.tiptel.at

Tiptel AG

Bahnstrasse 46
8105 Regensdorf
Schweiz Suisse Svizzera

Tel.: 044 843 13 13
Fax: 044 843 13 23
E-Mail: tiptel@tiptel-online.ch
Internet: www.tiptel-online.ch

Tiptel B.V.

Camerastraat 2
1322 BC Almere
Nederlands

Tel.: 0900-BELTIPEL of 0900-2358478 (niet gratis)
Fax: 036 53 678 81
E-Mail: info@tiptel.nl
Internet: www.tiptel.nl

Tiptel NV

Leuvensesteenweg 510 bus 4
1930 Zaventem
Belgique België

Tel.: 0903 99 333 (1.12 Euro/min.)
Fax: 02 714 93 34
E-Mail: tech@tiptel.be
Internet: www.tiptel.be

Tiptel s.a.r.l.

23, avenue René Duguay-Trouin
78960 Voisins-Le-Bretonneux
France

Tel.: 01 39 44 63 30
Fax: 01 30 57 00 29
E-Mail: support@tiptel.fr
Internet: www.tiptel.fr

