Tiptel EM40/63 User Guide

Content

1.	Overview		
	1.1. 1.2.	IntroductionFeatures	
2		llation	
	2.1.	Check package contents Connection diagram	5
3.	Configuration		6
	3.1.3.2.3.3.	5 5 5 5 5 5 5	9
4.	Software update1		16
5.	Troubleshooting 1		

1. Overview

1.1. Introduction



The Tiptel EM40/63 is an Expansion Module for the Tiptel3240 with large graphic LCD display, 22 programmer keys and 22 dual-color LEDs, and can be programmed to various features include BLF, BLF List, Speed Dial, Hot Desking, Record, XML Browser, Account, Call forward, Pickup, Intercom, DTMF, etc.

1.2. Features

Highlights

- 4.3" 272x480 Graphical LCD with Backlight, 4-bit Graylevel
- Powered by tiptel3240 IP phone
- 22 Keys and 22 dual-color LEDs
- Black Acrylic Cover(EM63)

Features

- Different icons for each function
- Multi-Languages Support
- Programmable for BLF, BLF List, Speed Dial, Hot Desking, Record, XML Browser,
 Account, Call forward, Pickup, Intercom, DTMF, etc
- Upgradable
- Up to 3 modules daisy-chain
- Support power by tiptel3240 IP phone
- Support 3 pages

Physical Features

- 22 physical keys each with a dual-color LED
- 4.3" 272x480 Graphical LCD with Backlight
- 2 RJ12(6P6C) ports for data in and out
- AC Power Adapter: Input: AC 100-240V; Output: DC 5V/1A


2. Installation

2.1. Check package contents

Please refer to the package list below to check the completeness of package

Name	Quantity
Tiptel EM40/63 unit	1
User Guide	1
RJ-12 Cable	1
Jointbar	1
Stand	1
Screws	4

2.2. Connection diagram

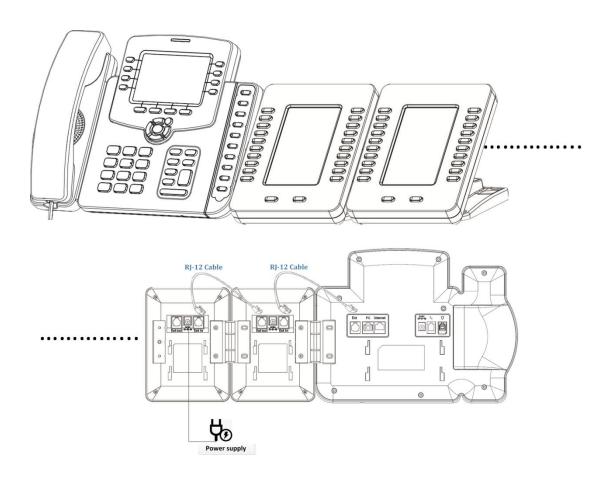


3. Configuration

The Tiptel EM40/63 expansion module supports 20 DSS Ext keys. The only way to configure the Ext keys is to access to the web interface of the sip phone. To login the web interface, you should obtain the IP address of the IP phone in advance. Press the OK key when the phone is idle after connecting to the network, and the phone will display the IP address and some other status. Enter the IP address in the IE or other web browser on your PC, the default username and password are both admin and admin.

Note: Ensure the Tiptel EM40/63 is connected to tiptel3240 successfully via the RJ12 cable.

- Press the OK key when the phone is idle after connecting to the network.
- Type the IP address on IE, input default User Name and Password: admin/admin to login the web interface.

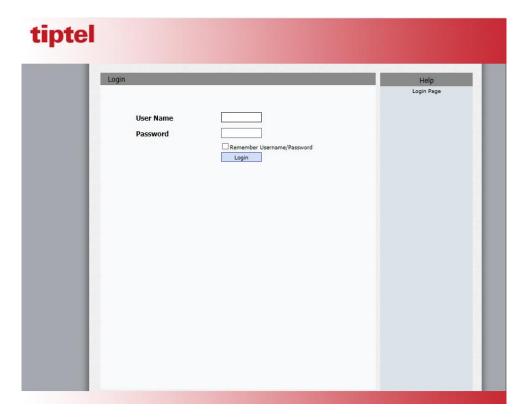


• Go to the path: Phone->Ext Key to see the configuration of each Ext key. .Allows user to assign specific feature to the designated Ext key. For Ext key, the available feature list: DND, Menu, MSG, Status, Book, Fwd, PickUp, Group PickUp, Intercom, Speed Dial, History, Favorites, Redial, Account, ACD, BLF, BLFList, Call Return, Hot Desking, Record, XML Browser, DTMF.



3.1. Expansion module selection

Several expansion modules can be chained together to connect to a tiptel3240 IP phone, so that you can have the many more Ext keys to use at the same time.

Up to three expansion modules can be daisy-chained to a single tiptel3240 IP phone. Before configuring the Ext keys, you should choose the right expansion module first.

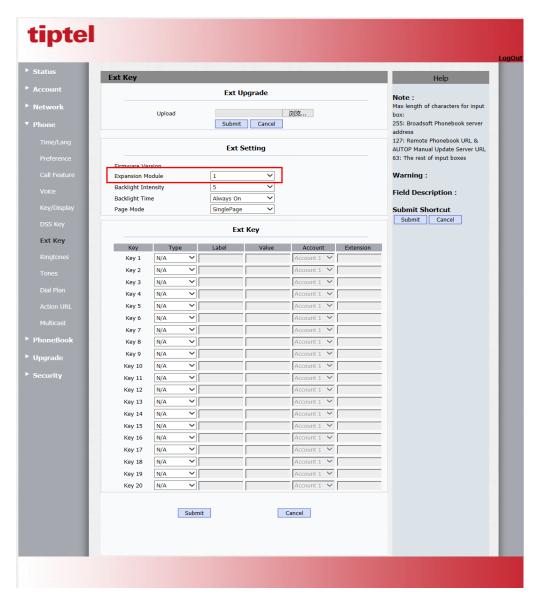


- Go to the path: Phone->Ext Key->Expansion Module;
- Choose the designated expansion module;
- Press Submit to accept the change.

3.2. Backlight Setting

Backlight level


Set the screen backlight level of the expansion module. There are five levels of the backlight intensity, default is level 5.

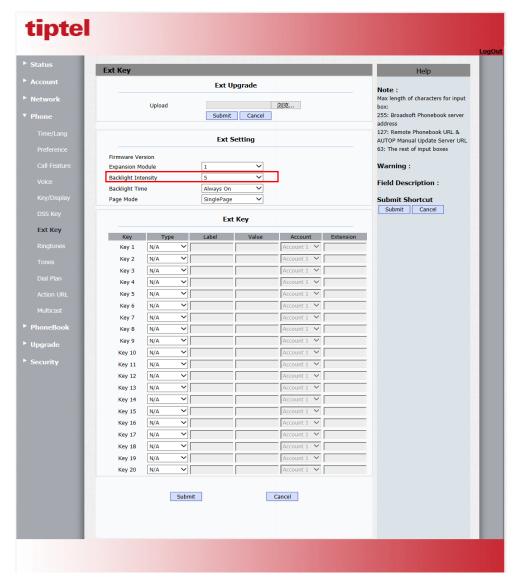

- Go to the path: Phone->Ext Key->Backlight Intensity
- Choose the backlight level;
- Press Submit to accept the change.

Backlight Duration


Set the duration of backlight of the expansion module. Default value is Always on.

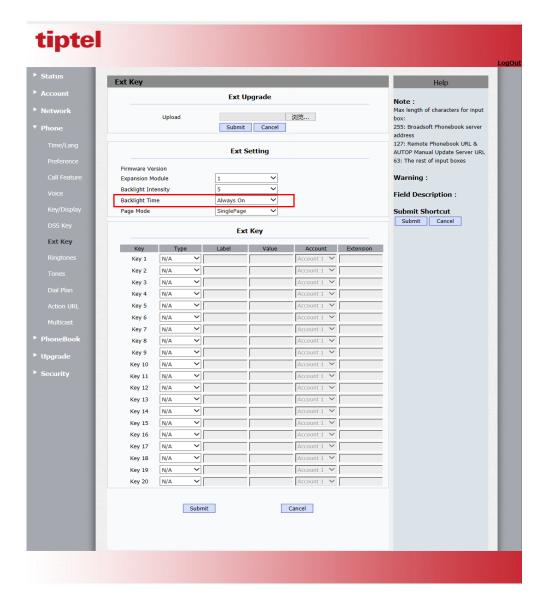

- Go to the path: Phone->Ext Key->Backlight Time
- Choose the backlight time;
- Press Submit to accept the change.

Page Mode

EM40/63 Supports two types page modes: SinglePage and MultiPage. If users want to setup more features, please use MultiPage. EM40/63 supports 3 pages, SinglePage is default.

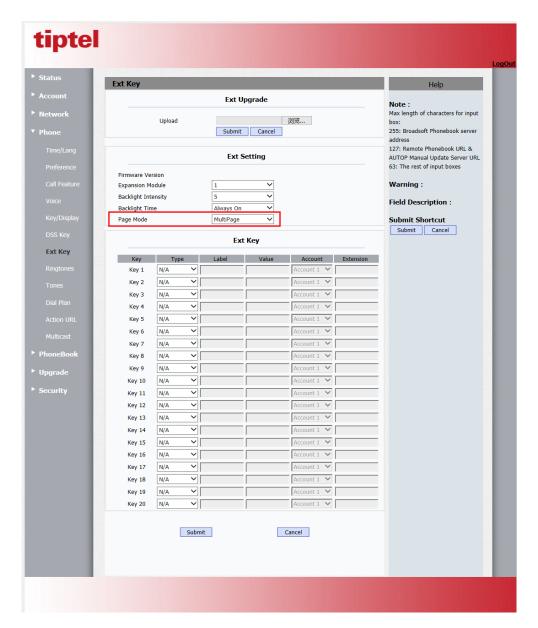

- Go to the path: Phone->Ext Key->Page Mode
- Choose the Page Mode;
- Press Submit to accept the change.

3.3. Ext Key Configuration

Go to the path: Phone->Ext Key->key


- Choose the function of each Ext key in the drop-down menu;
- Fill in the value of each item: "Label"、"Value"、"Extension"、"Account" (Not all of items are necessary for each function)
- Press Submit to accept the change.



For Example:


DND

- Go to the path: Phone->Ext Key->key
- Choose DND function of each Ext key in the drop-down menu;
- Fill in the value of Label, such as: Do not disturb
- Press Submit to accept the change.

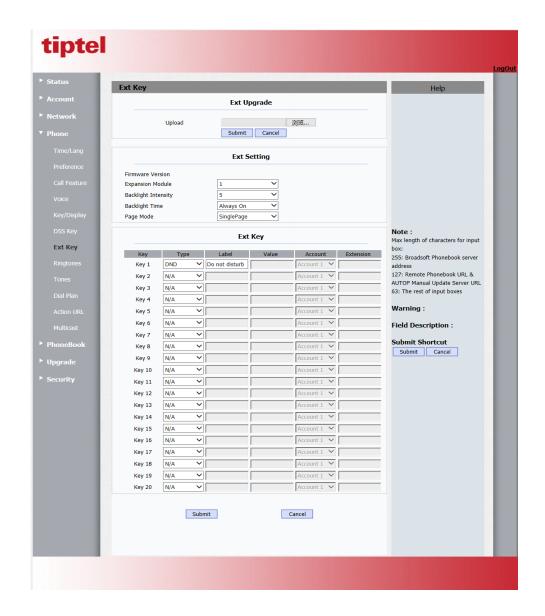

BLF(Busy Field Lamp)


- Go to the path: Phone->Ext Key->key
- Choose BLF function of each Ext key in the drop-down menu;
- Fill in the value of each item, such as: Label->Pick up; Value->1005;
 Extension->**; Account->Account1;
- Press Submit to accept the change.

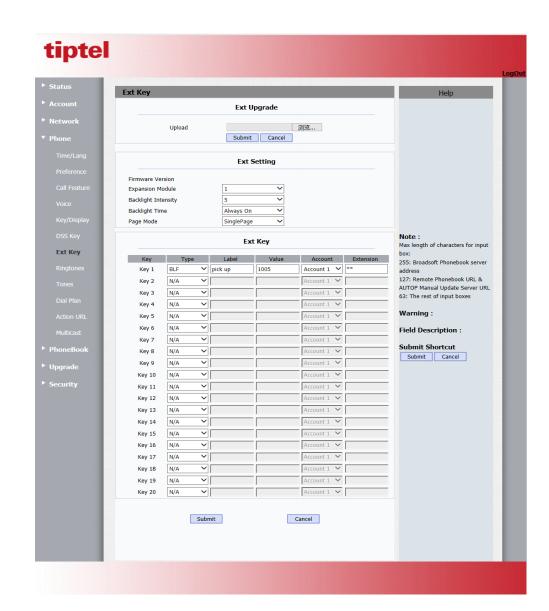

4. Software update

To select an upgrade rom file from local side, then press Submit to access the upgrading.

Note: Please make sure it's in right file format for right model.

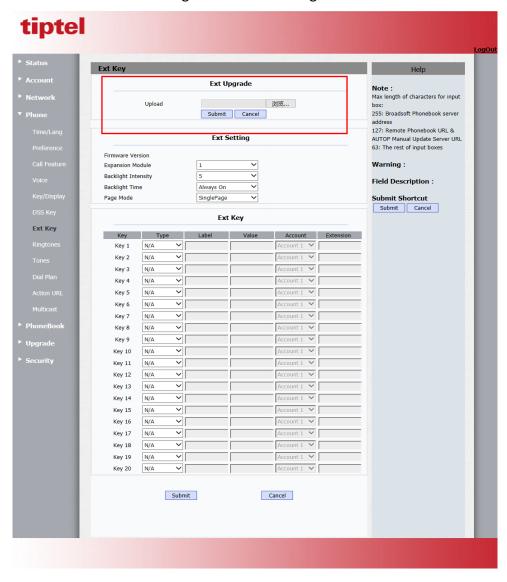

5. Troubleshooting

Issue 1: The Tiptel EM40/63 LCD is blank

If more than two expansion modules are connected to a tiptel3240 IP phone,
 ensure that at least one expansion module is plugged into a functional adapter.

Issue 2: The Tiptel EM40/63 LCD is back

 Check the backlight level of expansion module on the web interface, choose a comfortable backlight level for usage.

Issue 3: Cannot access the web interface

- Check the connection between the PC port of the device and the network port of the computer. Make sure it is fine.
- Check whether the IP address of the device is correct.
- If it is LAN, please make sure there is no IP address collision with other devices on the network.

For more information about the configuration, please refer to Tiptel 3240 IP Phone User Guide.