

EPSON®  
**PhotoPC** 750Z  
MEGAPIXEL ZOOM DIGITAL CAMERA

***Getting Started***

### IMPORTANT NOTICE DISCLAIMER OF WARRANTY

Epson America makes no representations or warranties, either express or implied, by or with respect to anything in this manual, and shall not be liable for any implied warranties of merchantability and fitness for a particular purpose or for any indirect, special, or consequential damages. Some states do not allow the exclusion of incidental or consequential damages, so this exclusion may not apply to you.

### COPYRIGHT NOTICE

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Epson America, Inc. No patent liability is assumed with respect to the use of information contained herein. Nor is any liability assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change without notice.

### TRADEMARKS

EPSON and EPSON Stylus are registered trademarks of SEIKO EPSON CORPORATION.

PhotoPC is a registered trademark and EPSON FaxAdvice, HyPict, EPSON Photo!2, and Solar Assist are trademarks of Epson America, Inc.

EPSON SoundAdvice is a service mark of Epson America, Inc.

Image Expert and Camio are trademarks of Sierra Imaging, Inc. in the United States and other countries and are used under license.

Lexar Media is a trademark of Lexar Media.

General notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

### A NOTE CONCERNING RESPONSIBLE USE OF COPYRIGHTED MATERIALS

Digital cameras and scanners, like photocopiers and conventional cameras, can be misused by improper copying of copyrighted material. While some countries' laws permit limited copying in certain circumstances, those circumstances may not be as broad as some people assume. EPSON encourages each user to be responsible and respectful of the copyright laws when using digital cameras and scanners.

Copyright © 1999 by Epson America, Inc.  
Torrance, California, USA

CPD-7966R1  
4/99



**EPSON**  
**PhotoPC 750Z**  
MEGAPIXEL ZOOM DIGITAL CAMERA

Your new EPSON® PhotoPC® 750Z is a high resolution, easy-to-use digital camera with a built-in LCD screen and 3× optical zoom. You can view your pictures before and after you capture them and transfer them to your computer.

This guide gives you the basics on setting up and using your new PhotoPC 750Z.

For detailed instructions on using advanced camera features and working with your software, see your *User's Guide*.





# Contents

## **1 Getting Ready to Use the Camera**

Unpacking Your PhotoPC 750Z	1-1
Identifying Camera Parts	1-2
Using Rechargeable NiMH Batteries	1-4
Charging Batteries	1-4
Installing Batteries	1-6
Battery Options	1-8
Attaching the Wrist Strap	1-10
Attaching the Lens Cover	1-10

## **2 Setting Up Your Software**

Installing Your PhotoPC 750Z Software	2-1
Installing for Windows 95, Windows 98, or Windows NT 4.0	2-1
Installing for Windows NT 3.51	2-2
Installing on a Macintosh	2-2
Making Windows Diskettes	2-2
Making Macintosh Diskettes	2-3

Installing the Image Expert CE Demo	2-3
System Requirements	2-4
Installing the Image Expert CE Demo	2-4

## **3 Taking Pictures**

Getting Ready to Take Pictures	3-1
Turning the Camera On and Off	3-1
Setting the Language and the Camera's Clock	3-2
Using the CompactFlash Memory Card	3-4
Installing Your Memory Card	3-4
Formatting Your Memory Card	3-5
Removing Your Memory Card	3-6
Using the Display Panel	3-7
Checking the Battery	3-7
Taking Pictures With the Viewfinder	3-7
Taking Pictures With the LCD Screen	3-9
Checking the Picture Counter	3-11

## **4 Using Basic Camera Features**

Setting Image Quality and Color Mode	4-1
Standard	4-1
Fine	4-1
Super Fine	4-2
HyPict	4-2
Monochrome Fine	4-2
Monochrome Super Fine	4-2
Monochrome HyPict	4-2
Storing Pictures	4-3
Using the Flash	4-3
Taking Pictures With the Timer	4-5

## **5 Playing Back and Saving Pictures**

Playing Back Photos	5-1
Playing Back Pictures One by One	5-3
Erasing the Currently Displayed Picture	5-3
Saving Your Pictures	5-4
Connecting the Camera to Your Computer	5-4
Transferring Photos With Image Expert	5-7

## **Index**

# 1

## Getting Ready to Use the Camera

Before you can start using your PhotoPC 750Z, you need to charge the batteries. You should also be familiar with all the camera components.

This chapter describes the following:

- ▶ Unpacking your PhotoPC 750Z
- ▶ Identifying camera parts
- ▶ Using rechargeable NiMH batteries
- ▶ Attaching the wrist strap and lens cover

---

 
### NOTE

*Read all safety instructions in this book and in your User's Guide before setting up or using the camera.*


---

### Unpacking Your PhotoPC 750Z


Make sure you have all the parts shown below.

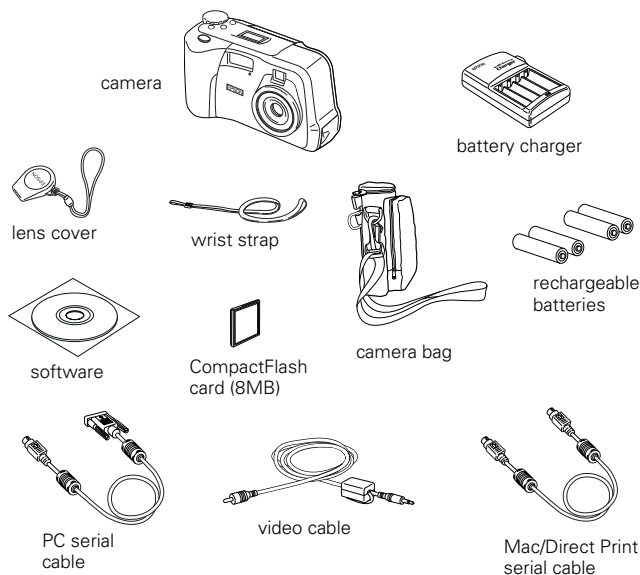

# Identifying Camera Parts

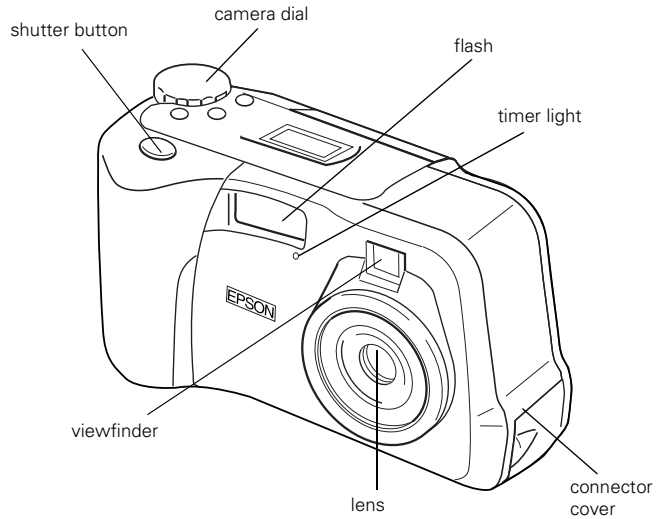 


**front view**

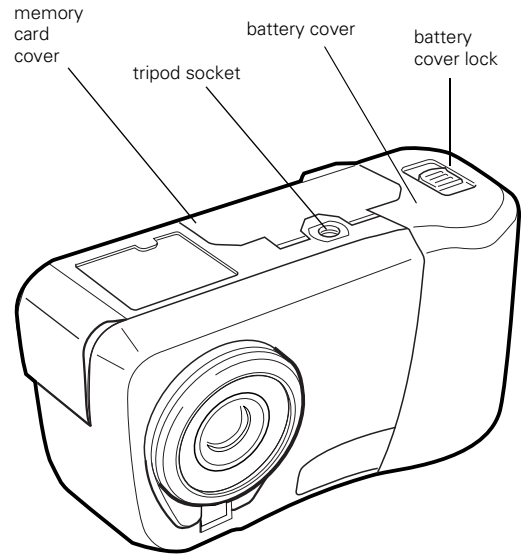 


**bottom view**



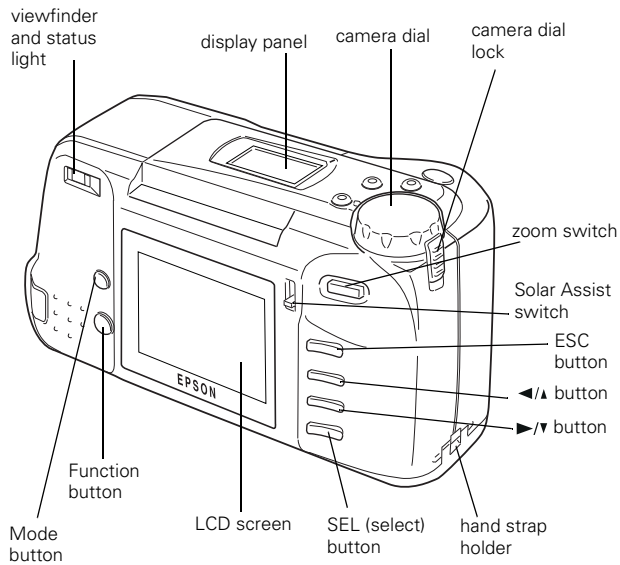 

**back view**

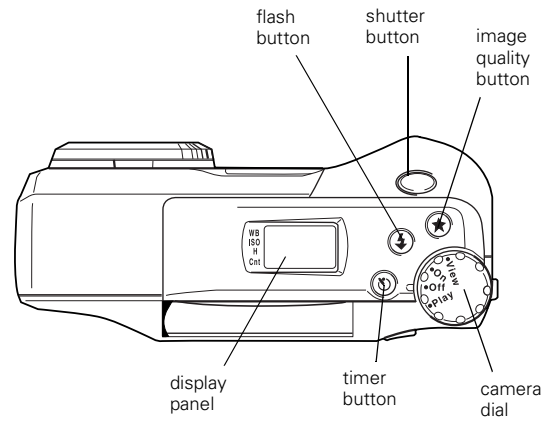 

**top view**

## Using Rechargeable NiMH Batteries

Your PhotoPC 750Z comes with four rechargeable NiMH batteries and a pocket-size charger. These batteries can be recharged hundreds of times. Before you install them in your camera for the first time, you need to charge them completely three times.

---

### NOTE

*New batteries need to be fully charged three times before you use them. This process takes approximately five or six hours—but you only need to do it once. When you need to recharge your batteries in the future, it takes approximately two and a half hours for a full charge.*

---

## Charging Batteries

It's important to fully charge your batteries, so they will last as long as possible before they need recharging.

---

### WARNING

*Shock hazard. Make sure you use the charger only with EPSON rechargeable NiMH batteries (model EU-24). To avoid the danger of leakage or explosion, do not place any other batteries in the charger. Read all safety and handling instructions here and in your User's Guide before using the charger.*

 
---

Note the following when charging batteries:


- ▶ Do not insert batteries backwards.
- ▶ Do not open the cover while battery charger lights are on.
- ▶ Do not use near water or handle with wet hands. For indoor use only.
- ▶ Do not use within reach of children.
- ▶ Do not charge the batteries using an electrical outlet on an airplane.

Follow these steps to charge your batteries for the first time:

- 1 Lift up the cover of the charger and insert all four batteries, positioning the + and – ends as shown. Then close the cover firmly.

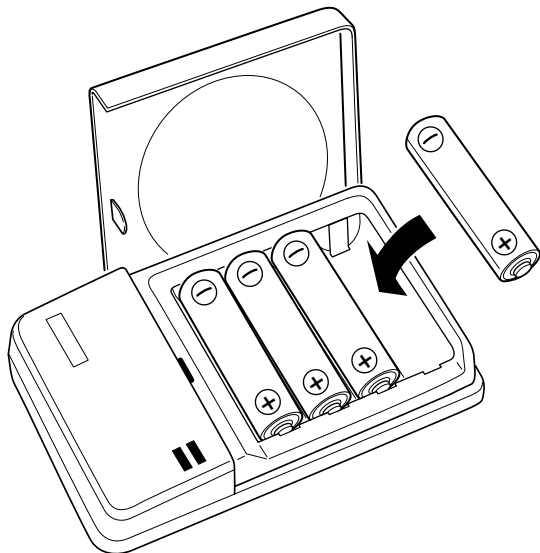

 - 2 Turn the charger over and flip the two prongs out of their compartment.

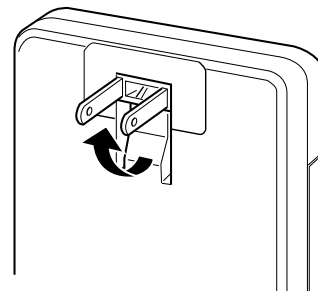

- 3 Plug the charger into an electrical outlet. Both lights turn red, indicating that the charger is working. When the batteries are charged, after about two and a half hours, the lights go off.

---

**NOTE**

*The charger lights flash to indicate changes in battery temperature and voltage. If the lights continue to flash for more than half an hour, the batteries may be damaged or worn out, and should be replaced. Unplug the charger if the batteries are not fully charged after four hours.*

---

- 4 Now charge your batteries again by opening and then closing the charger. The second charge should take about two and a half hours.
- 5 Charge the batteries a third time by opening and closing the charger again. This charge should take about 20 minutes.
- 6 After you have charged the batteries three times and both lights are off, unplug the charger. To avoid overcharging, don't leave the charger plugged in for long periods of time after the lights go off.
- 7 Wait one hour until the batteries cool before removing them from the charger.
- 8 Before storing the charger, press down on the prongs to lock the plug into place.

(For subsequent charges of your NiMH rechargeable batteries, follow steps 1 through 3, then unplug the charger and follow steps 7 and 8 above.)

Be sure to charge the batteries completely to make them last as long as possible. They can be recharged hundreds of times, so do not dispose of them until they are worn out.

---

*NOTE*

*Keep the charger terminals clean by wiping them with a dry cloth. Make sure you charge all four batteries before you use them. If you find that your batteries run out faster after you recharge them a few times, make sure you discharge them completely before recharging. If this doesn't help, replace the batteries.*

---

## **Installing Batteries**

 
Before you install the batteries, make sure the camera is turned off.

- 1 Turn the camera upside down with the LCD screen facing away from you.


2 Slide the battery cover lock from Lock to Open.





3 Lift the cover up and away from the camera.

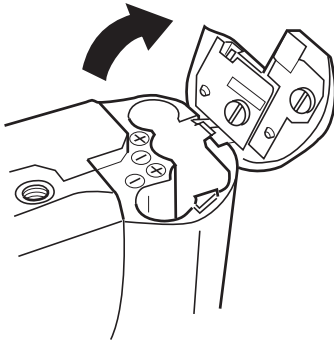

 4 Insert all four batteries into the compartment, positioning the + and - ends as shown:

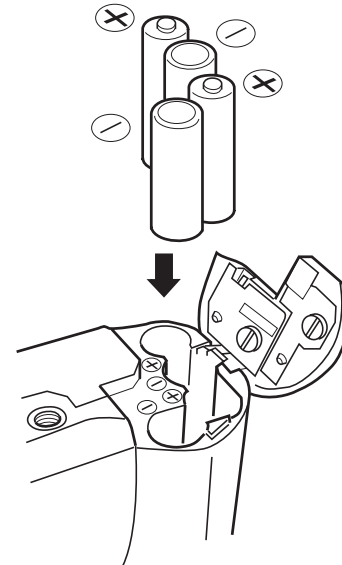

  - 5 Close the battery cover and hold it down while sliding the battery cover lock from **Open** to **Lock**.

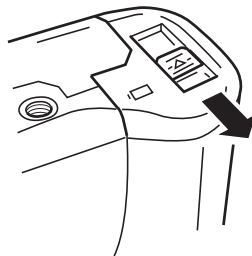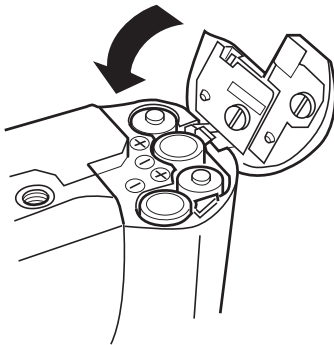

## Battery Options

If you forget to charge your rechargeable NiMH batteries or if they need to be replaced, the PhotoPC 750Z camera can also accept the following:

- ▶ Rechargeable AA NiCad batteries
- ▶ Single-use AA alkaline batteries (Panasonic® Alkaline, or Duracell® Ultra recommended)
- ▶ Single-use AA lithium batteries (longer life, Energizer® recommended)

---

### WARNING

*To avoid the danger of fire or explosion, do not mix different types of batteries. Do not allow the battery contacts to touch metal objects such as coins or keys, which could short out the battery's circuits. Read all safety and handling instructions before using batteries.*

 
---

Note the following when handling batteries:

- ▶ Use only the EPSON battery charger (Model EU-23) to charge the batteries that came with your camera.
- ▶ Use the batteries that came with your camera only in EPSON digital cameras.
- ▶ Do not use manganese batteries.
- ▶ Do not mix different types of batteries; this can cause fire or explosion.
- ▶ Replace all four batteries at the same time. Do not mix old and new batteries.
- ▶ Batteries that have not been used for a long time do not charge well. However, with regular use, the batteries will return to normal.
- ▶ Batteries discharge at least 2% per day, whether they are used or not.
- ▶ If the batteries are charged in a hot environment, or if they are charged repeatedly without being discharged, they will wear out more quickly.
- ▶ Do not drop, puncture, disassemble, or mutilate batteries. Do not get them wet or expose them to fire.
- ▶ When the camera is not used for long periods of time, remove the batteries and store them at a low temperature in a dry location. Store away from the reach of children.
- ▶ To avoid fire or electric shock, do not use batteries that are leaking or damaged in any way.
- ▶ If battery acid gets in your eyes or on your skin, immediately rinse the area with water and seek medical treatment. If a battery is swallowed, seek medical treatment immediately.
- ▶ Dispose of used batteries according to the manufacturer's instructions and in compliance with all applicable laws. Contact your local government agency for information about battery recycling and disposal.
- ▶ Battery life varies depending on the battery type, the manufacturer, and other factors.


## Attaching the Wrist Strap

To attach the wrist strap, loop the strap around the holder on the side of the camera as shown below.

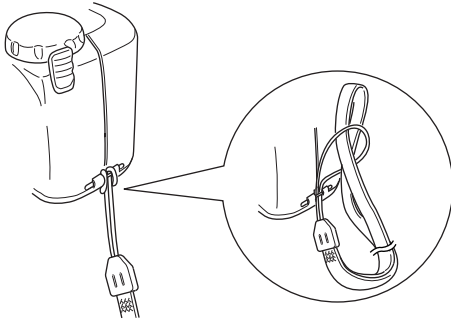

## Attaching the Lens Cover

 To attach the lens cover, loop the lens strap around and through the section of the wrist strap that is connected to the camera, as shown.

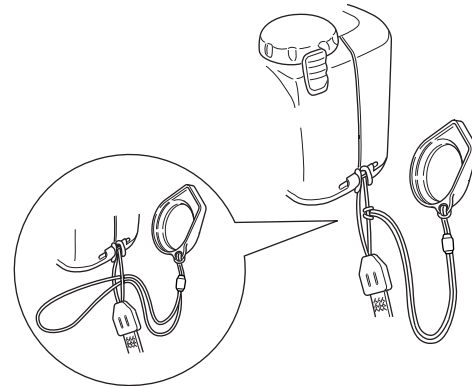



# 2

## Setting Up Your Software

Your PhotoPC 750Z comes with everything you need to transfer your pictures from the camera to your computer, and to organize, enhance, and share your images.

### Installing Your PhotoPC 750Z Software

The included CD-ROM has these applications for your Microsoft® Windows® PC or Macintosh®:

- ▶ Sierra Imaging Image Expert™
- ▶ EPSON Photo!2™ TWAIN and standalone application
- ▶ EPSON Photo File Uploader
- ▶ EPSON Photo Program Uploader
- ▶ EPSON Direct Print (to load onto the camera)

All programs (except Direct Print) are installed in the PhotoPC 750Z folder. There is also a demo version of Image Expert™ CE included on the CD-ROM. (See page 2-3.)

---

#### NOTE

*After you install your software, you can run the Image Expert Quick Tour to learn more about your camera. See page 5-8 for instructions. If you are using Windows NT® 3.51 or Macintosh, you can see the Quick Tour on the EPSON website at [www.epson.com](http://www.epson.com).*

---

### Installing for Windows 95, Windows 98, or Windows NT 4.0

- 1 Insert the CD-ROM in your drive. The install program starts automatically. If it doesn't start automatically, double-click **My Computer**. Then double-click your CD-ROM icon.

- 2 Click **Install Image Expert**.
- 3 Follow the instructions on the screen.

## **Installing for Windows NT 3.51**

- 1 Insert the CD-ROM in your drive.
- 2 In the Program Manager, select **Run** from the File menu.
- 3 Type **D:\SETUP**. If your CD-ROM drive is not drive D, substitute the correct letter. Then click **OK**.
- 4 Select **Install Image Expert** and follow the instructions on the screen.

## **Installing on a Macintosh**

- 1 Insert the CD-ROM in your drive.
- 2 Double-click the CD-ROM icon.
- 3 Double-click the **Install PhotoPC 750Z** icon. Click **Continue** and follow the instructions on the screen.

## **Making Windows Diskettes**

If you want to install the software on a computer that doesn't have a CD-ROM drive, you can create installation diskettes. Before you start, make sure you have 7 blank, formatted diskettes (19 if you want to include the Quick Tour).

- 1 Insert the CD-ROM in your drive. The install program starts automatically. If it doesn't start automatically, double-click **My Computer**. Then double-click your CD-ROM icon.

In the Windows NT 3.51 Program Manager, select **Run** from the File menu. Type **D:\SETUP**. If your CD-ROM drive is not drive D, substitute the correct letter. Then click **OK**.

- 2 Click **Make Image Expert Disks**.
- 3 Select your operating system and diskette drive and click **OK**. Follow the instructions on the screen.

## Making Macintosh Diskettes

If you want to install the software on a computer that doesn't have a CD-ROM drive, you can use either Disk Copy 6.2 or the DropImage program on your CD-ROM to make diskettes. Before you start, make sure you have 10 blank, formatted diskettes.

To use Disk Copy 6.2, double-click the file named **Make Floppies** and follow the instructions on the screen. The Image Expert disk image files are located in the Disk Images folder on the CD-ROM.

Or, use the DropImage program:

- 1 Open the Disk Images folder on your CD-ROM.
- 2 Drag the file **Disk1.image** onto DropImage 1.0. An icon for **Disk 1** appears on your desktop.
- 3 Insert a blank, formatted diskette in your drive and change its name to Image Expert 1.

- 4 Drag the Disk 1 icon onto the Image Expert 1 icon. If you are asked to confirm the copy, click **Yes**.
- 5 When the copy finishes, drag both icons to the trash. Your Macintosh ejects the diskette.
- 6 Repeat steps 2 to 5 for each disk image file.

## Installing the Image Expert CE Demo

Included on your PhotoPC 750Z CD-ROM is a demo version of Image Expert CE: a convenient, easy-to-use imaging application for your Windows CE 2.0-based Handheld PC (H/PC). Image Expert CE offers truly mobile imaging in a small, lightweight package. You can view and organize JPEG images from your camera on your H/PC as well as annotate them. You can share images with others as a slideshow on the built-in display or an external monitor, via email, beaming them from one H/PC to another, or by auto synchronizing your H/PC to your desktop system.

## System Requirements

Image Expert CE requires:

- ▶ Any H/PC running Microsoft Windows CE 2.0 or later
- ▶ 1.5MB available memory on your H/PC (for the program and image samples)

## Installing the Image Expert CE Demo

- 1 Connect your H/PC to your desktop, and establish communication between the devices.
- 2 Insert the CD-ROM in your drive. The install program should start automatically. If it doesn't, double-click **My Computer**. Then double-click your CD-ROM icon.
- 3 Click **Install Image Expert CE Demo** and follow the instructions on the screen.

Image Expert installs the necessary files. It creates an Image Expert program folder that you can access through the Start Menu and a shortcut on the desktop.

For more information and to purchase the full version of Image Expert CE, visit the Sierra Imaging website at [www.sierraimaging.com](http://www.sierraimaging.com).

# 3

## Taking Pictures

### Getting Ready to Take Pictures

Before you can take pictures with PhotoPC 750Z, you need to turn on the camera, set the language and clock, and learn how to read the settings on the display panel.

### Turning the Camera On and Off

 
To turn the camera on, remove the lens cover, slide down the camera dial lock, and rotate the camera dial to **On** or **View**, as shown in the illustration on the right. The lens moves out and the display panel on the top of the camera lights up. If you turned it to **View**, the LCD screen comes on. The status light on the back of the camera flashes for a few seconds. When it turns green, the camera is ready to take pictures.

To turn off the camera, rotate the camera dial to the **Off** position and replace the camera dial lock. The lens retracts and the display panel turns off.

---

*To prevent damage to the lens, replace the lens cover when you aren't using the camera.*

---

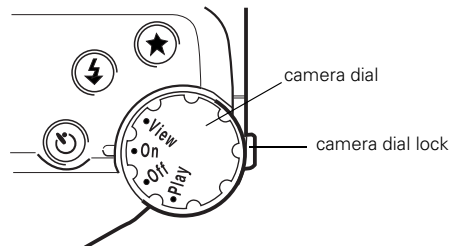

## Setting the Language and the Camera's Clock

 
Before you use the camera, you need to set the language and clock. Then the camera will automatically record the date and time for each picture you take.

---

### NOTE

You can also set the camera's clock through your computer. See page 5-4 for instructions on connecting the camera to your computer, and page 6-10 of your User's Guide for instructions on setting the date and time.

---

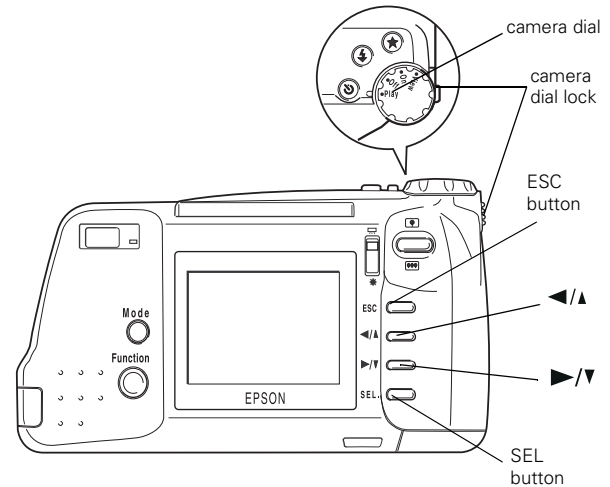

- 1 Slide the camera dial lock down and turn the camera dial to **View**.

You see a message asking you to set the language and then you see the language setting screen:

 


- 2 Press the **ESC** button to choose English.

You see a message asking you to set the clock.

- 3 Press the **SEL** button.

You see the clock setting screen, with the year setting highlighted in red:

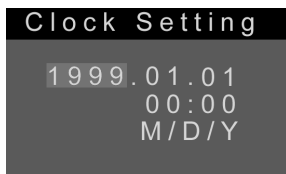

- 4 If necessary, press the ◀/▲ button to increase the number or the ▶/▼ button to decrease the number, until the year is correct.
- 5 Press the **SEL** button. The year setting is saved and the month setting is highlighted.
- 6 Adjust the month, day, hour, minute, and date format settings as described above until they are correctly adjusted and saved.

After you finish setting the clock and press the **SEL** button, your screen returns to view mode.

- 7 Turn the camera dial **Off**.

---

*NOTE*

*You need to set the clock each time you replace the batteries. The camera does not keep the date and time without battery power.*

---

## Using the CompactFlash Memory Card

Your camera comes with 4MB of internal memory and an 8MB CompactFlash memory card that increases the number of pictures you can take at one time. You can also purchase additional memory cards (4MB to 64MB), available from leading suppliers like Lexar Media™ and SanDisk®. See Appendix A in your *User's Guide* for more information.

---

### NOTE

 
*When a memory card is installed, you may notice a brief delay between the time you press the shutter button and when the camera beeps. To avoid blurring your images, make sure you hold the camera still until it beeps.*

---

## Installing Your Memory Card


Make sure the camera dial is turned **Off** before you install the card.

- 1 Turn your camera over so its LCD screen is facing up and the bottom is facing you. Flip the memory card cover open, as shown.

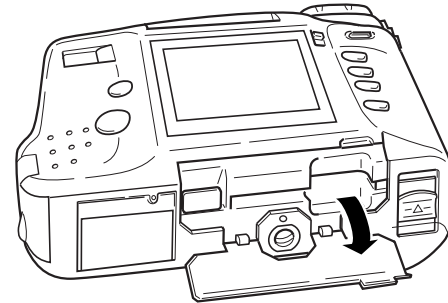



 - 2 Insert your memory card and slide it all the way into the slot.

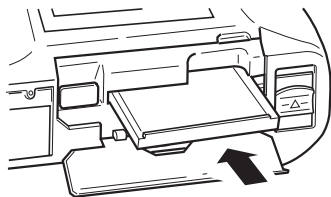

- 3 Close the memory card cover.

Next, you need to format the card. Follow the steps below.

## Formatting Your Memory Card


You should format your card before you use it. Follow these steps:

 
- 1 Set the camera dial to Play. If you haven't used the memory card, you may see the following message:

### Note

No photos  
in memory.

This applies to the memory card only, and does not indicate whether you have photos in the camera's internal memory.

- 2 Press the **SEL** button to display the LCD screen menus.
- 3 Press the ◀/▲ or ▶/▼ button until you see the Photo Control menu . Then press the **SEL** button to display the menu options, as shown below:

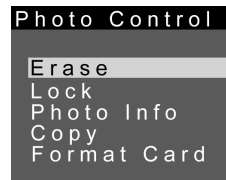

- 4 Press the ◀/▲ or ▶/▼ button until **Format Card** is highlighted.
- 5 Press the **SEL** button. A message appears stating that all data on the card will be erased and asking you to confirm the procedure.

- 6 Press the **SEL** button again to format the card and return to the Photo Control menu.


Press **ESC** until you return to normal playback mode. Now, your pictures are stored in the card's memory instead of the camera's internal memory. If the card's memory is full, you can remove it and take pictures with the internal memory.

## Removing Your Memory Card

 Make sure your camera is turned **Off** before you remove the card.

- 1 Turn your camera over so its LCD screen is facing up and the bottom is facing you.


- 2 Flip the memory card cover open.
- 3 Press the **Eject** button, then pull the card the rest of the way out by hand.

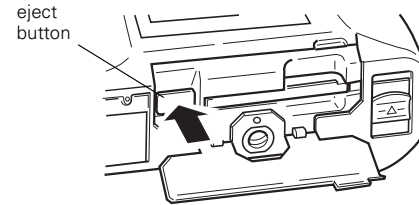


See Chapter 8 in your *User's Guide* for instructions on copying photos from the camera to a card and from a card to the camera, and using a card with a PCMCIA adapter.

## Using the Display Panel

 The display panel shows the camera's current settings and the number of pictures remaining.

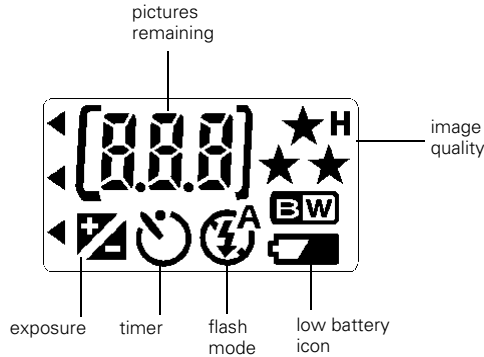

## Checking the Battery

 When your battery power is almost out, the low battery icon appears on the display panel. The icon flashes when your battery power is completely out.

You need to recharge or replace the batteries or use the AC adapter when you see the low battery icon. Although you may be able to use the camera with low batteries, it needs full battery power to operate reliably.

 
Several factors can affect battery life, including the surrounding temperature and the type of batteries you use. Low temperatures—especially below 50 °F (10 °C)—drain batteries faster. See page 1-4 for battery use instructions.

## Taking Pictures With the Viewfinder


You can capture an image with PhotoPC 750Z as you would with any point-and-shoot auto-focus camera: look through the optical viewfinder and snap the two-step shutter. However, you can also use the LCD screen to preview your picture. See page 3-9 for instructions on using the LCD screen.

- 1 Make sure you are at least 32 inches (80 cm) away from your subject. (If you want to get closer, use macro mode as described on page 1-2 in your *User's Guide*.)

- Slide the camera dial lock down and turn the camera dial to **On** and wait until the status light turns green.
- Look straight through the viewfinder and center your subject within the cross-hairs.
- Move the zoom control up to get closer or down to get further from your subject.

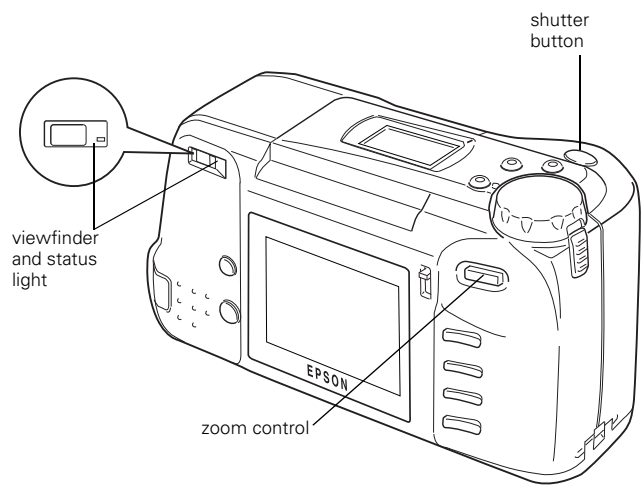

 - Hold the shutter button halfway down to lock the auto focus.



The status light changes from green to orange. While you hold the shutter button down, you can reframe your picture and move your subject off-center if you want.

- Press the shutter button the rest of the way down to take the picture.



- Hold the camera still until it beeps and the status light starts flashing red.

The flashing red light indicates that the camera has captured the image and is processing it.

---

**CAUTION**

*If you set the camera down while the light is still flashing, make sure you handle it carefully. The camera may lose your image if you set it down too hard.*

---

When the light stops flashing and turns green, the image is saved and you can take another picture. Saved images remain in memory for at least a year, even when the camera is turned off and the batteries are removed.

---

**NOTE**

 
*Remember that the camera shuts off automatically after 60 seconds. To turn the camera back on, press the shutter button all the way down. You can also “wake up” the camera by turning the camera dial Off and then turning it On again.*

---


## Taking Pictures With the LCD Screen

The LCD screen lets you see a live preview of what the camera’s lens sees at any moment.

- 1 Remove the lens cap and turn the camera dial to the **View** position.

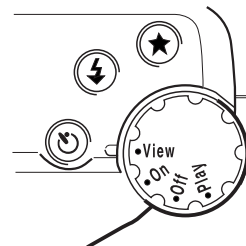

 
If you are outdoors, flip down the Solar Assist™ panel to save battery power by lighting the screen with direct sunlight.

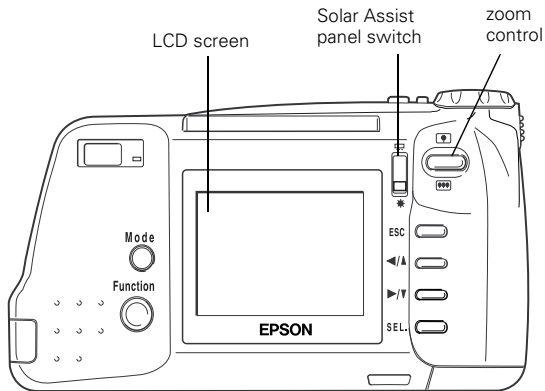

You see a preview of your picture on the LCD screen, with icons indicating the image quality setting ★, and the number of pictures you can take. (See Chapter 4 for more information about image quality settings.)

- 2 Center your subject on the screen and move the zoom control up to get closer or down to get further from your subject.

 - 3 Hold the shutter button halfway down to lock the auto focus.



The status light changes from green to orange, and a small green circle appears in the upper right corner of the screen. While you hold the shutter button down, you can reframe your picture and move your subject off-center if you want.

- 4 Press the shutter button the rest of the way down to take the picture.



- 5 Hold the camera still until it beeps and the status light starts flashing red.

---


**NOTE**

 The LCD screen uses up battery power quickly. If it is idle for more than 30 seconds, the camera turns off automatically. To turn it back on, press the shutter button down or turn the camera dial to Off and then back to View. If you want the camera to turn off after you capture a picture with the LCD screen (to save even more power), you can change the power save mode. See page 6-12 in your User's Guide.

---

## Checking the Picture Counter

The large number in the center of the display panel (on top of the camera) shows how many additional pictures you can take. This number depends on your image quality and special format settings.

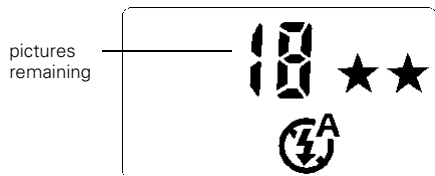

When the camera's memory is full, the number of pictures remaining is 0. The status light on the back of the camera turns red. When you press the shutter button, you can't take a picture and the LCD screen shows a message saying that the camera is full.

To free up some of the camera's memory, you can play back your pictures on the LCD screen and erase the ones you don't want to save (see page 5-3 for instructions). If you are using a higher resolution, you may also be able to take some standard resolution pictures (see page 4-1 for information on using image quality modes).

If you want to save your pictures and then erase them, you need to connect the camera to your computer and transfer the images, as described on page 5-4. You can also use an optional IOMEGA® Click!™ drive for portable storage. See Appendix A in your *User's Guide*.






# 4
 
## Using Basic Camera Features

### Setting Image Quality and Color Mode

PhotoPC 750Z has several image quality (resolution) settings: four for color pictures and three for black and white pictures. Press the image quality button on top of the camera to cycle from one setting to the other. You must enable HyPict™ and Monochrome HyPict modes before you can use them. See page 1-10 in your *User's Guide*.

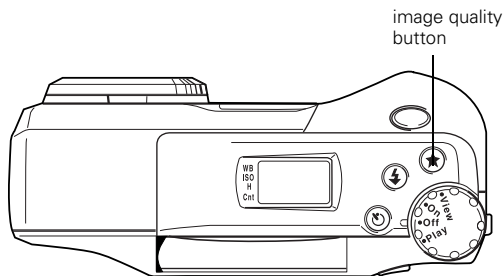

The image quality icons appear on the display panel as shown below.

### Standard

★ Produces color images at  $640 \times 480$  pixels. The camera's memory and CompactFlash card hold approximately 178 pictures, but the image size is smaller and includes less detail when enlarged. This setting is good for pictures that are viewed on screen or on the Web.

### Fine

★★ Produces color images at  $1280 \times 960$  pixels, with moderate compression. Your pictures include ample detail, and the camera's memory and CompactFlash card hold approximately 54 pictures.


## Super Fine

★ ★ Produces color images at  $1280 \times 960$  pixels with low compression. Your pictures include greater detail, and the camera's memory and CompactFlash card hold approximately 26 pictures. With less compression, Super Fine images are better for enlarging.


## HyPict

★<sup>H</sup> ★ ★ Produces color images at  $1600 \times 1200$  pixels (interpolated) with low compression. Your pictures include excellent detail and the camera's memory and CompactFlash card hold approximately 16 pictures. These images are best for enlarging for  $8" \times 10"$  prints.


## Monochrome Fine

★ ★  Produces black and white images at  $1280 \times 960$  pixels, with moderate compression. Your pictures include ample detail, and the camera's memory and CompactFlash card hold approximately 54 pictures.

## Monochrome Super Fine

★ ★ ★  Produces black and white images at  $1280 \times 960$  pixels with low compression. Your pictures include greater detail, and the camera's memory and CompactFlash card hold approximately 26 pictures. With less compression, Monochrome Super Fine images (like those in color) are better for enlarging.

## Monochrome HyPict

★<sup>H</sup> ★ ★  Produces black and white images at  $1600 \times 1200$  pixels (interpolated) with low compression. Your pictures include excellent detail and the camera's memory and CompactFlash card hold approximately 16 pictures. These images are best for enlarging for  $8" \times 10"$  prints.

Fine image quality is sufficient for most purposes. Use Super Fine or HyPict if you need maximum detail (in enlargements, for example). Note that Super Fine image files and HyPict image files can be more than twice the size of Fine quality image files. Higher quality images also take longer for the camera to process. In HyPict mode, it takes the camera approximately 20 seconds to process the image.

## Storing Pictures

You need to remove the CompactFlash memory card from the camera before you can use its internal memory to store images. (See page 1-10 for instructions.) You can increase your camera's storage capacity by replacing the 8MB CompactFlash card with a larger one. See Appendix A in your *User's Guide* for more information.

The camera holds the following numbers of pictures in each image quality mode:

	Camera's 4MB Internal Memory	8MB Lexar Media Memory Card	Total for 12MB Internal Memory and 8MB Card
<b>Standard</b>	50	128	178
<b>Fine</b>	15	39	54
<b>Super Fine</b>	7	19	26
<b>HyPict</b>	4	12	16

---

### NOTE

*You can mix pictures of varying quality in the camera; the camera's image capacity will vary accordingly. Depending on the content of your pictures, your camera may hold more than the numbers shown above. As long as the display panel shows a number other than zero, you can continue taking pictures.*

---

## Using the Flash

The camera's built-in flash is effective within a range of 8 inches to 8 feet (20 cm to 2.3 m). Press the flash button to cycle through the three flash settings.

An icon for each setting appears on the display panel as shown below:

### Auto



The flash goes off automatically whenever it's needed for adequate lighting (factory setting).

## Forced Flash



The flash goes off with every picture you take. Use this setting to compensate for backlighting; for example, when you are facing a light source.

## Flash Off



The flash is disabled, even when adequate lighting is not available. Use this setting for special effects, where flash photography is prohibited, or for macro mode close-ups.

After you take a flash picture, the icon blinks until the flash is fully recharged. Your flash setting remains in effect even after you turn off the camera.

---

### TIP

*When you are using the flash off setting, hold the camera steady to avoid capturing blurry images.*


*When you're taking pictures outdoors, make sure the sun is at your back. In very bright light (at the beach or in snow, for example), your pictures may come out too light. You can use the manual exposure setting to darken an image before you capture it. See page 1-14 in your User's Guide for instructions.*

*Alternatively, you can use Image Expert or other image editing software to correct over-exposure problems after you take the picture.*


*When you're taking pictures at night, you can use the slow synchronized flash mode to light up the background as well as your subject. See page 1-17 in your User's Guide for details.*

 
---

## Taking Pictures With the Timer

 Setting the timer creates a 10-second delay between the time you press the shutter button and the actual image capture. This allows you to take a picture of yourself.

- 1 Secure the camera on a flat surface or on a tripod. (See page A-2 in your *User's Guide* for information on attaching the camera to a tripod.)
- 2 Turn on the camera and wait until the status light turns green.

- 3 Press the timer button. The timer icon  appears on the display panel.

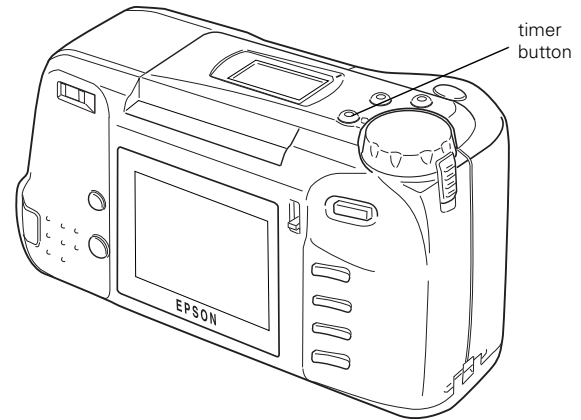

- 4 Press the shutter button. The timer icon and the red timer light on the front of the camera flash slowly for 8 seconds. Then they flash rapidly for 2 seconds before the shutter is released.

The camera beeps when the image is captured. The status light on the back of the camera flashes red as the PhotoPC 750Z processes the image. When the status light stops flashing and turns green, you can take another picture.


- 5** To turn off the timer, press the timer button again or turn off the camera.

# 5
 
## Playing Back and Saving Pictures


### Playing Back Photos

- 1 Slide down the camera dial lock and turn the camera dial to **Play**. The last photo you took appears on the LCD.

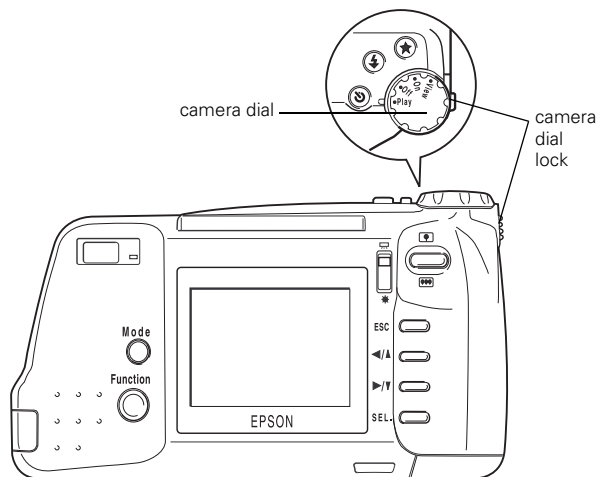

- 2 To access the screen menus, press the SEL button. Blue menu icons appear at the top of the screen with the currently selected menu displayed in orange.

 The settings for this menu are displayed on the screen, as shown:

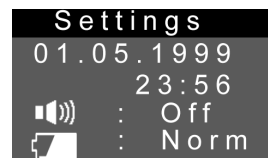

- 3 Press the  $\blacktriangleleft/\blacktriangle$  and  $\blacktriangleright/\blacktriangledown$  buttons to view the settings for other menus.

You can choose from the following menus:



**Settings** (date, time, beep, LCD brightness, and power-save mode). See pages 6-6 to 6-12 in

your *User's Guide* for more information.



**Information** (turn off the display of information on played-back pictures). See

page 2-5 in your *User's Guide* for instructions.



**Playback Mode** (one at a time or groups of 9 images). See page 2-4 in your *User's Guide* for

instructions.



**Magnification** (zoom in on a picture and view it in sections). See page 2-6 in your *User's Guide*

for instructions.



**Photo Control** (erase, lock, display memory information, or work with flash memory cards).

See pages 2-7 to 2-12 and Chapter 8 in your *User's Guide* for instructions.



**Slide Show** (play back pictures automatically). See page 2-5 in your *User's Guide* for instructions.



**Software** (print directly from the camera or remove the Direct Print program). See

Chapter 9 in your *User's Guide* for instructions.



**Language** (select language for LCD display and menus). See page 6-12 in your *User's Guide*


for instructions.

- 4 To exit the menus, press the **ESC** button until the menu icons and settings disappear. (Depending on the menu, you may have to press this button several times to return to playback mode.)
- 5 When you're finished with playback mode, turn the camera dial **Off**.



## Playing Back Pictures One by One

 When you set the camera dial to **Play**, you see the last picture you took on the LCD screen, along with the date, time, and picture information:

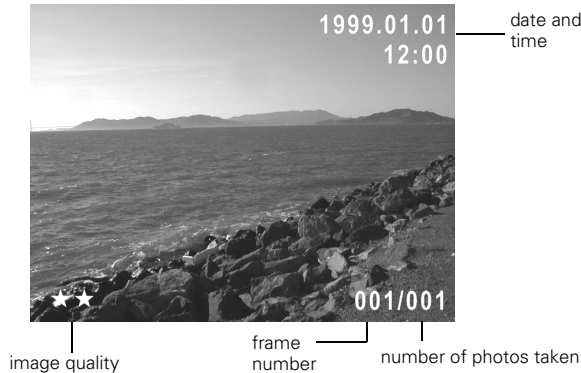

- Press the **▶/▼** button to display the earliest picture taken. You can continue pressing the button to view your pictures in order. Press **◀/▲** to move backward through your pictures.

## Erasing the Currently Displayed Picture

Make sure the camera is set to **Play** and the image you want to erase is displayed.

- Hold down the **Function** button and press the **ESC** button.

You see the following message on the LCD screen:




- Press the **SEL** button to erase the picture.

You can also erase all the images in your camera at once or select multiple images. See Chapter 2 in your *User's Guide*.

---

### NOTE

If you try to erase a locked photo , you see a warning message. Press any button to clear the message. See Chapter 2 in your *User's Guide* for instructions on locking and unlocking images.

---

## Saving Your Pictures

You can connect your camera to your computer and download your photos once you are finished taking them. See the sections below for information.

## Connecting the Camera to Your Computer

Note the following before you start:

- ▶ If you have the optional AC adapter, you can conserve battery life by using it when you connect the camera to your computer. See Appendix A in your *User's Guide* for instructions and ordering information.
- ▶ The camera shuts off automatically after 5 minutes of inactivity when the camera is connected to your computer. To turn the camera back on, press down the shutter button or turn the camera dial **Off** and then **On** again. (You can change the auto shut-off time period if you want. See pages 6-6 to 6-9 in your *User's Guide* for instructions.)

- ▶ When you connect the camera, make sure your system is not exposed to sources of electromagnetic interference, such as stereo speakers or the base units of cordless telephones.

## Connecting to a Windows PC

Make sure you have the serial cable that came with your camera. Before you start, turn off the camera and your computer.

- 1 Find a serial port on the back of your computer. You may have two serial ports labeled COM1 and COM2, or the ports may be labeled with icons. If you have two serial ports available, use COM1 (port 1) to connect your camera.

 
---

### NOTE


*If you have a 25-pin serial port, you can use a 9- to 25-pin adapter.*

---


- 2 Line up the serial connector on the cable with one of the serial ports on your computer, and insert the connector. Then tighten the screws.

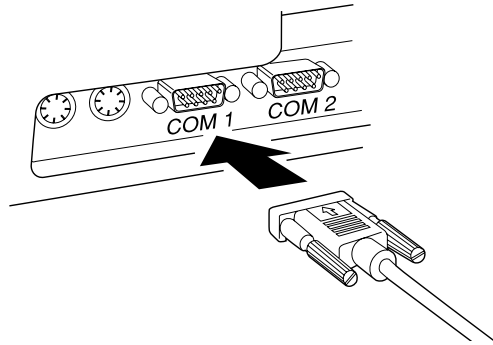

 - 3 Open the connector cover on the side of the camera.

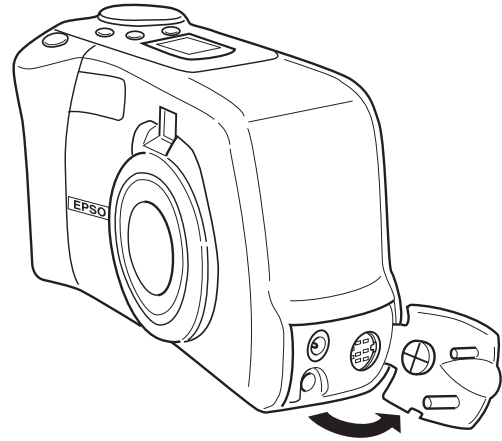

 - 4 Depending on the type of cable you have, line up either the arrow or the flat side of the cable connector with the mark on the camera's serial port. Then insert the connector.

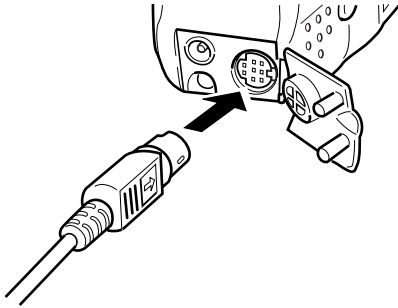

- 5 Turn on the camera and your computer system.

---



**NOTE**

*If you have problems connecting to the COM port you have selected, check your computer's COM port configuration and try again. See page 5-11 for more tips on connecting your camera and getting the computer to see it.*

---

## Connecting to a Macintosh

Make sure you have the Macintosh/Direct Print cable that came with your camera. Before you start, turn off the camera and your Macintosh.

- 1 Locate the modem port  or printer port  on the back of your Macintosh. You can use either port to connect the camera.

 
---

**NOTE**

*If you are sharing a serial port that you use for another device, make sure AppleTalk® is turned off. Your Macintosh may not recognize the camera if AppleTalk is on. Also, if you have problems connecting to the printer port, use the modem port instead. See page 5-11 for more tips on connecting your camera and getting the computer to see it.*

---

- 2 Line up the arrow on the cable connector with the port icon on your Macintosh. Then insert the connector.

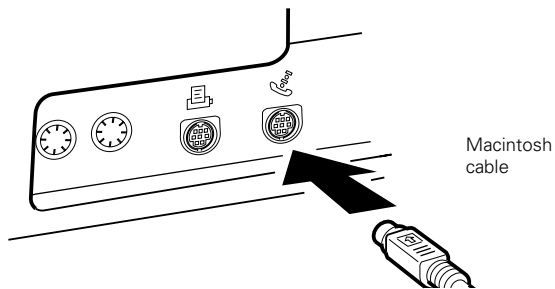

- 3 Open the connector cover on the side of the camera, as shown on page 5-5.
- 4 Line up the arrow/flat side of the cable connector with the mark on the camera's serial port (as shown on page 5-6). Then insert the connector.
- 5 Turn on the camera and your Macintosh system.

On a PowerPC™ or G3 Macintosh (or a Windows PC with a high-speed serial board), you may be able to transfer your pictures at a rate of 230.4KB per second. If your camera software doesn't set this speed automatically, you can set it manually. See pages 6-6 to 6-8 in your *User's Guide*.

## Transferring Photos With Image Expert

PhotoPC 750Z provides several different ways to transfer your pictures from the camera to your computer. The simplest method is to use the Image Expert software that came with your PhotoPC 750Z. This lets you view small thumbnail images of your pictures, and then quickly transfer them to an album (folder) on your hard disk drive.

If you haven't installed your software, do it now, following the instructions on page 2-1. Make sure the camera is turned on and connected to your computer.

---

*NOTE*

*Although these instructions and the accompanying illustrations show Image Expert running under Windows 95, Windows 98, or Windows NT 4.0, you can follow the same steps on a Macintosh or Windows NT 3.51 system.*

---

**1** Start Image Expert.

Under Windows 95, Windows 98, or Windows NT 4.0, click **Start**, and then point to **Programs**, **PhotoPC 750Z**, **Image Expert**.

On a Macintosh, find the **PhotoPC 750Z** folder on your hard disk. Double-click **Image Expert** to open the Image Expert folder, then double-click the **Image Expert** icon.

Under Windows NT 3.51, double-click the **PhotoPC 750Z** program group icon, then double-click the **Image Expert** icon.

If you're using Windows 95, Windows 98, or Windows NT 4.0, you see a Quick Tour screen like the following:



If you're using a Macintosh or Windows NT 3.51, skip to step 3.

- 2** Click on any of the topics for an animated demonstration of what you can do with Image Expert and PhotoPC 750Z.

To skip the tour and transfer your pictures, click **Close**.  
You see a window like the following:



- 3 Click **View Pictures in the Camera**. You see a window displaying “filmstrips” of your images. (If you see an error message instead, follow the instructions on page 5-11.)



- 4 Click **Get All** to transfer all the images. You can also click an individual image to select it. The **Get All** button changes to **Get Selected**.

---

**NOTE**

If you want to select more than one image, hold down the **Ctrl** key on your keyboard while you click each image. To deselect an image, click it again while still holding the **Ctrl** key.

 
---

You see a Select Album window like the following:



Type here if you want to rename your album.

### Windows

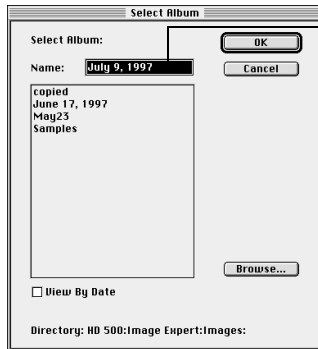


Type here if you want to rename your album.

### Macintosh

Image Expert will automatically create an album (folder) for your pictures with the current date as its name. You can type your own name for the album if you want, or choose an existing album.

 - 5 Click **Open** (or **OK** on a Macintosh) to begin transferring your pictures. A window like the following appears to show you the progress of each image.

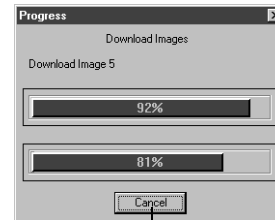

Click if you want to stop transferring images.

- 6 When you're finished, close the filmstrip window. You see a message asking if you want to delete all the files in the camera.




- 7 If you want to make room for more pictures in your camera, click **Yes**. Your pictures are displayed in an album of thumbnails. You can double-click an image to open it in Image Expert.

You can display your images one by one, edit, print, and copy them to diskettes, or place them in your documents and presentations. See your *User's Guide* for instructions.

You can also use the Help menu for more information. If you're using Windows 95, Windows 98, or Windows NT 4.0, you can run the Quick Tour from the Help menu to learn more about the camera and your software.

## What To Do if You See an Error Message

 When you click the button to view images in the camera, you may see a message like the following:

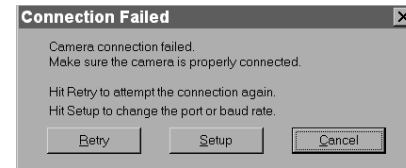


Follow these tips to get your camera connected correctly:

- 1 Make sure the camera is turned on and has not shut off automatically. If it has, press the shutter button or rotate the camera dial to **Off** and then back to **On**.
- 2 Check the cable and make sure the connections are secure. Make sure the pins inside the connector are not bent.
- 3 Make sure your batteries have enough power, or your AC adapter is connected.

- 4 Click **Retry**. If you see the **Connection Failed** message again, click **Setup**.

 You see the following dialog box:

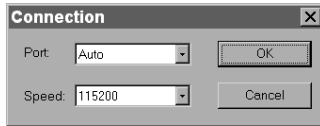

- 5 Select another port if necessary. In most cases, it is best to leave the **Port** setting at **Auto** because Image Expert can detect the camera connection automatically.

If you have a serial device connected to one port and an internal modem on the other, you can try setting the **Port** to **COM3** or **COM4**.

- 6 Select a slower connection speed. Image Expert automatically chooses the fastest speed that works with your system, but this may actually be too fast for the configuration of your port. Try setting the speed to **57600**. You may need to experiment to choose the best speed.

- 7 When you are finished, click **OK**.

---

*NOTE*

*See your User's Guide for more troubleshooting information.*

---

For detailed instructions on using advanced camera features and working with your software, see your *User's Guide*.



# Index

## A

- AC adapter, 3-7, 5-4
- Adjusting camera settings, 4-1
- AppleTalk, 5-6
- Attaching wrist strap, 1-10

## B

### Batteries

- charging, 1-4 to 1-6
  - checking, 3-7
  - handling, 1-8 to 1-9
  - installing, 1-6 to 1-8
  - options, 1-8 to 1-9
- Battery icon, 3-7

## C

### Cable

- serial, 5-4 to 5-6
- CD-ROM, installing software, 2-1 to 2-3

Charging batteries, 1-4 to 1-6

Clock, setting, 3-2 to 3-3

CompactFlash memory card

- formatting, 3-5
- installing, 3-4 to 3-5
- removing, 3-6

Computer, connecting camera, 5-4 to 5-7

## D

Date, setting, 3-2 to 3-3

Deleting pictures, *see* Erasing pictures

Diskettes, software installation, 2-1 to 2-3

Display panel, 3-7

## E

EPSON Photo!2

- installing, 2-1 to 2-3

Erasing pictures from camera

- using computer, 5-10

Error messages  
on computer, 5-11 to 5-12

## F

Flash, 4-3 to 4-4

## H

Handling batteries, 1-8 to 1-9

## I

Image Expert

error messages, 5-11 to 5-12

Quick Tour, 5-8

transferring pictures, 5-7 to 5-12

Windows CE demo, 2-3

Images, *see* Pictures

Information menu, 5-2

Installing

batteries, 1-6 to 1-8

software, 2-1 to 2-3

## L

Language menu, 5-2

Language, setting, 3-2 to 3-3

LCD screen

menus, 5-2

## M

Macintosh

connecting to camera, 5-4 to 5-7

Memory capacity, 4-3

Memory card, *see* CompactFlash memory card

## P

Photo Control menu, 3-5, 5-2

PhotoPC 750Z camera

AC adapter, using with, 3-7

connecting to Macintosh, 5-4 to 5-7

connecting to PC, 5-4 to 5-6

date, setting, 3-2 to 3-3

display panel, 3-7

features, 1-2 to 1-3

picture counter, 3-11

settings, adjusting, 4-1

software, 2-1 to 2-3

time, setting, 3-2 to 3-3

timer, 4-5 to 4-6

turning on and off, 3-1

unpacking, 1-1

PhotoPC 750Z software, installing, 2-1 to 2-3

Photos, *see* Pictures

Picture counter, 3-11

## Pictures

- counter, 3-11
- erasing with computer, 5-10
- storage capacity of camera, 3-11

## Playback Mode menu, 5-2

## Power

- AC adapter, 3-7
- battery, *see* Batteries

## S

Self timer, 4-5 to 4-6

Serial cable, 5-4 to 5-6

Settings menu, 5-2

Shutter, snapping, 3-7

Slide Show menu, 5-2

Snapping the shutter, 3-7

Software, installing, 2-1 to 2-3

Software Menu, 5-2

Storage cards, *see* CompactFlash storage cards

Strap, attaching, 1-10

## T

### Taking pictures

- using the flash, 4-3 to 4-4
- with the LCD screen, 3-9 to 3-11
- with the timer, 4-5 to 4-6
- with the viewfinder, 3-7 to 3-9

Time, setting, 3-2 to 3-3

Timer, 4-5 to 4-6

Turning camera on and off, 3-1

## U

Unpacking the camera, 1-1

## W

Wrist strap, attaching, 1-10