



MOTOROLA

Digital Cordless Telephone

Motorola S3

For S3001, S3002, S3003 and S3004



Warning: Charge the handset for 24 hours before use.



Welcome...

to your new Motorola S3000 Digital Cordless Telephone!

- All handsets fully cordless for locating anywhere within range.
- 100 Name and number phonebook.
- Copy phonebook entries between handsets.
- Speakerphone for hands-free conversations.
- Caller ID shows you who's calling and see details of the last 50 callers in a Calls list.¹
- Register up to 5 handsets to a single base and register each handset with up to 4 different bases.
- Make internal calls, transfer external calls, hold 3-way conversation between two internal callers and an external caller.
- Hearing Aid Compatible (HAC).
- Intelligent Charging saving unnecessary power usage.
- ECO mode reduces the transmitted power and energy consumption.
- ECO PLUS turns off transmitted power when the telephone is in standby mode.

Need help?

If you have any problems setting up or using your S3000, please contact Customer Services on 0800 0820750.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

¹You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

This user guide provides you with all the information you need to get the most from your phone.

To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- Cordless handset
- Cordless base
- 2 x rechargeable Ni-MH battery cells
- Power adaptor for the base
- Telephone line cord

If you have purchased a S3000 multiple pack you will also have the following additional items:

- Cordless handset & charger
- 2 x rechargeable Ni-MH battery cells
- Power adaptor for the charger



ECOMOTO: a convergence of efforts by marketing, design, research, engineering and supply chain management that leads to better products for everyone. A holistic view that focuses on both social and environmental responsibility. A passion and a shared point of view.

The right thing to do.

- Meets and / or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 25% post consumer recycled content plastic.
- Energy efficient charger that meets EU Code of Conduct requirements.
- ECO mode function which reduces the transmitted power and energy consumption, please refer to page 39.

1. Getting started.....	7
2. Getting to know your phone	11
3. Using the phone.....	16
3.1 Make a call.....	16
3.2 Pre-dial.....	16
3.3 Dial direct memory numbers 1 to 9.....	16
3.4 Call from the phonebook.....	16
3.5 Call from the Calls list.....	16
3.6 Answer a call	16
3.7 Adjust volume	17
3.8 Mute	17
3.9 End a call	17
3.10 Switch handset on/off.....	17
3.11 Call a second external number	18
3.12 Intercom.....	18
3.12.1 Call another handset.....	18
3.12.2 Transfer an external call to another handset.....	18
3.12.3 Three-party conference call	19
3.13 Voicemail	19
4. Phonebook.....	20
4.1 View and dial phonebook entries	20
4.2 Store an entry.....	20
4.3 Entering names	20
4.4 Character map.....	21
4.5 Enter a pause.....	21
4.6 View an entry.....	21
4.7 Edit an entry	22
4.8 Delete an entry	22
4.9 List entry	22
4.10 Delete all entries	22
4.11 Store a direct memory number	23
4.12 Delete a Direct memory number	23
4.13 Copy phonebook to another handset.....	23
5. Caller ID and Calls list.....	25
5.1 Calls list.....	25
5.1.1 View the Calls list	25
5.1.2 Dial from the Calls list.....	25
5.1.3 Modify and dial a number in the Calls list	26
5.1.4 Save a number from the Calls list to the phonebook	26
5.1.5 Delete a Calls list entry	26
5.1.6 Delete entire Calls list	26
5.2 Redial	27

5.2.1	Redial the last number.....	27
5.2.2	View and dial a number in the redial list	27
5.2.3	Copy a redial number to the phonebook	27
5.2.4	Delete a redial list entry.....	27
5.2.5	Delete entire redial list.....	27
6.	Clock & Alarm	28
6.1	Set date and time.....	28
6.2	Set alarm	28
6.3	Set alarm melody.....	28
7.	Personal settings	29
7.1	Handset tones.....	29
7.1.1	Ring volume	29
7.1.2	Ring melody	29
7.1.3	Group melody	29
7.1.4	Key tones on/off	30
7.1.5	First ring.....	30
7.2	Handset name	30
7.3	Auto pick up.....	30
7.4	Auto hang up.....	31
7.5	Display language.....	31
7.6	Room monitor on/off	31
7.7	Room monitor.....	31
7.8	Backlight on/off	32
7.9	Keypad lock	32
8.	Advanced settings	33
8.1	Recall time	33
8.2	Dial mode.....	33
8.2.1	Temporarily switch from Pulse to Tone dialling	33
8.3	Call barring	33
8.3.1	Switch call barring on/off	34
8.3.2	Set a number to be barred	34
8.4	Easy call	34
8.4.1	Switch Easy call on/off.....	34
8.4.2	Set the Easy call number.....	34
8.4.3	Dial an Easy call number	35
8.5	Registration	35
8.6	Register a handset	35
8.7	Select a base	36
8.8	Unregister a handset	36
8.9	PIN.....	36
8.10	Reset	37
8.11	Default settings	37
8.12	Auto prefix.....	38

8.13	Intrusion.....	38
8.14	ECO mode.....	38
8.15	ECO PLUS.....	39
9.	Help	40
10.	General information	41

1. Getting started

IMPORTANT

Do not place your S3000 in the bathroom or other humid areas.

Location



You need to place your S3000 base within 2 metres of the mains power socket and telephone wall socket so that the cables will reach. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your S3000 works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Putting it as high as possible ensures the best signal.

HANDSET RANGE

The unit has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 50 metres. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH

The  icon on your handset indicates that you are within range of the base. When out of range of the base, the  icon flashes. If you are on a call, you will hear a warning beep.

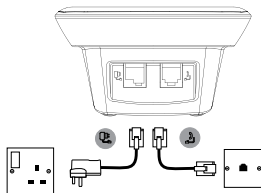 
If you are on a call, the line will hang up if the handset moves out of range of the base. Move back within range. The handset will automatically re-connect to the base.



Setting up

IMPORTANT

The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.

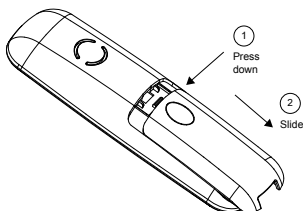 
Connecting the base




1. Plug the telephone line cord into the socket marked  on the rear of the base.
2. Plug the power adaptor into the socket marked  on the rear of the base and plug the other end into the mains power wall socket. Switch on the mains power.

Installing and charging the handset

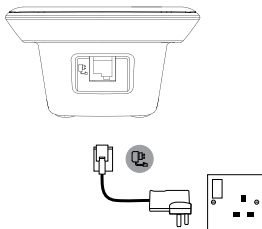 
1. Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery cells supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.





2. Slide the battery cover back into place.
3. If you are charging the batteries for the first time, place the handset on the base to charge for at least 24 hours continuously.
4. When the handset is fully charged,  icon will appear steady on the display. Plug the other end of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Connecting the handset and charger (for multi-pack only)

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.




1. Plug the power adaptor into the socket marked  on the rear of the charger and plug the other end into the mains power wall socket.
2. Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeable batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
3. Slide the battery cover back into place.
4. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 24 hours continuously.
5. When the handset is fully charged,  icon will appear steady on the display. The display will show **HANDSET** and handset number (e.g. 2) to indicate that it is registered to the base.

IMPORTANT

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 550mA rechargeable batteries) supplied with your S3000.

BATTERY LOW WARNING

If you hear a warning beep every 30 seconds during a call, you will need to recharge the handset before you can use it again.

When charging,  icon will scroll on the display.

BATTERY PERFORMANCE

In ideal conditions, fully charged batteries should give up to 12 hours talk time or up to 180 hours standby time on a single charge.¹

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk / standby time. Eventually they will need to be replaced.










After charging your handset for the first time, subsequent charging time is about 6–8 hours a day. Batteries and handset may become warm during charging. This is normal.

¹*All talk and standby times are approximate and depend on features selected and usage pattern.*

Date and time

If you have subscribed to a Caller ID Service, the date and time is set automatically for all handsets when you receive your first call.

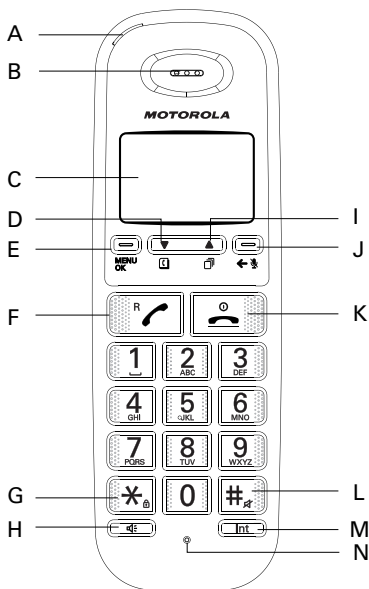 
If you do not have a Caller ID service, you can set the date and time manually.

1. Press , scroll  to **Clock & Alarm** and press .
2. **Date & Time** is highlighted. Press .
3. Enter the date using the format DD/MM e.g. 04/08 for 4 August and press .
4. Enter the time (HH:MM) and press .
If the current time format setting is 12 hour, scroll  or  to select am or pm.
5. Press  to return to standby.

Your S3000 is now ready for use.

2. Getting to know your phone

Overview of your handset



A In use LED

Lights up when the phone is in use.

B Earpiece

C Display

See page 10 for display icons.

D Phonebook / Scroll Down / Volume down

Open the phonebook.

Scroll down through lists and menus.

Decrease the earpiece volume.

E Menu / OK

Enter the main menu.

Select the option displayed on screen.

Confirm menu option – OK is displayed on screen.

F Talk / Recall

Make or answer a call.

Use recall (R) functions.

G Pulse to Tone Dialling / * / Keypad lock

During a call, press and hold to switch from pulse dialling to tone dialling.

Dial a *.

In standby mode press and hold to lock/unlock the keypad.

H Hands-free key

Activate and deactivate hands-free during a call.

IMPORTANT

Hands-free activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

I Call list / Scroll Up / Volume up

Open the Call log. Press ▲ to enter the Calls list.

Scroll up through lists and settings.

J Redial / Scroll right / Clear / Mute / Back

Open the redial list.

Scroll to the right.

Delete characters on screen when entering names and numbers.

Mute / unmute the microphone during a call.

Go back to previous menu level ⬅ is displayed on the screen.

K End call / Switch handset on/off

End a call.

When in a menu, go back to standby mode.

Press and hold to switch handset off (when in standby) or on.

L Ringer off / Pause / #

Press and hold to switch handset ringer on or off.

When dialling or storing a number, press and hold to enter a pause (P).

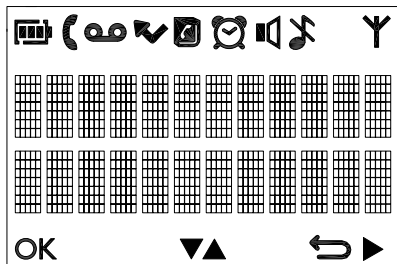 
Dial a #.

M Intercom









Press to make an internal call.

N Microphone





Handset display



Display icons

-  On when the line is in use.
Flashes when there is an incoming call.
-  Flashes when you have new voicemail messages.
Off when you have no voicemail messages.¹
-  Flashes when you have missed calls and new number(s) are in the Calls list.²
-  Phonebook is open.
-  The alarm clock has been set.
-  Hands-free mode is activated.
-  Handset ringer is off.
-  Steady when the handset is registered and within range of the base.
Flashes when the handset is out of range or searching for base.

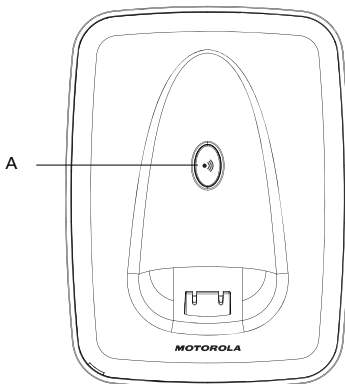 
The approximate power levels of your battery are indicated as below:

-  Battery is fully charged.
-  Battery is partially charged.
-  Battery is running low.
-  Battery is almost empty. The battery icon will flash and emit a warning beep every minute during call.

¹This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.



²For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

Overview of the base










A Paging key

Paging is a useful way of finding lost handsets.

1. Press  on the base.
All handsets ring.
2. Press  again to cancel the paging call or press any key on the handset to stop the paging call.

Navigating the menus

The basic steps of navigating through the menu and on-screen options.

1. From the standby screen, press .
The main menu is opened.
2. Use the  or  keys to scroll through the menu.
3. Soft key options **OK** and  are displayed. Press  to select **OK** and open a sub-menu or validate an option.
Press  to go back to previous menu level, correct a character or cancel an action.
4. Press  to return to standby.

NOTE

If you do not press any button on the handset for 15 seconds the display will automatically return to standby. It will also return to standby when the handset is placed on the base or charger.

Menu Map

PHONEBOOK

NEW ENTRY
 LIST ENTRY
 <NAME>
 EDIT ENTRY
 DELETE ENTRY
 DELETE ALL
 DIRECT MEM
 PBTRANSFER¹

CLOCK/ALARM

DATE & TIME
 SET ALARM
 ALARMTONE

PERSONAL SET

HANDSETTONE
 RING VOLUME
 RING MELODY
 GROUP MELODY
 KEYTONE
 FIRST RING
 HANDSET NAME
 AUTO PICK-UP
 AUTO HANG-UP
 LANGUAGE
 ROOM MONITOR
 BACKLIGHT

ADVANCED SET

RECALL TIME
 DIAL MODE
 CALL BARRING
 EASY CALL
 REGISTRATION
 SELECT BASE
 REGIST. BASE
 UNREGISTER
 PIN
 RESET UNIT
 PREFIX
 INTRUSION
 ECO MODE
 ECO PLUS

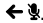

¹This option is only available if more than one S3000 handset is registered to the base.

3. Using the phone

3.1 Make a call

1. Press .
2. Dial the telephone number.

3.2 Pre-dial

1. Enter the phone number (maximum 24 digits). If you make a mistake press .
2. Press  to dial the phone number entered.





3.3 Dial direct memory numbers 1 to 9

1. Press and hold a key from 1 to 9 until the number is displayed and dialled.

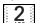
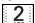
NOTE

To store a direct memory number, see page 23.

3.4 Call from the phonebook

1. Press . The first entry in the phonebook is displayed.
2. Scroll  or  to the entry you want.
3. Press  to dial the number.





NOTE

Instead of scrolling to browse the phonebook entries, press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing  will show the entries starting with A. Pressing  again will show the entries starting with B, etc...



3.5 Call from the Calls list

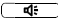
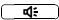
NOTE

You need to subscribe to your network's Caller ID service to be able to see the caller's number in the Calls list. See "Calls list" on page 25 for more details.

1. Press  to enter the Calls list. The first entry in the calls list is displayed.
2. Scroll  or  to the entry you want.
3. Press  to dial the number.

3.6 Answer a call

1. When the phone rings and  flashes in the display, if the handset is off the base press  to answer the call, or if the handset is on the base simply lift the handset to answer the call.

2. Press  to answer the call via hands-free.
3. To switch between hands-free and the earpiece press .

IMPORTANT

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing.



NOTE

If you have subscribed to your Network's Caller ID service and assigned a VIP Group to the caller's number, the caller's details are displayed before the phone starts ringing (see "Store an entry" on page 20 and "Group melody" on page 29). You can set your phone to give the default melody as soon as the call is received then once the caller's identity is displayed, the assigned melody will start. See "First ring" on page 30.

If Auto Pick up mode (see page 30) is on, simply lift up the handset from its base to answer the call. The default setting is ON. See all "Default settings" on page 37.



An incoming call has priority over other events. Whenever there is an incoming call, other operations in progress such as phone settings, menu navigation, etc. will be ended.

3.7 Adjust volume


1. During a call, press  or  to adjust the earpiece or hands-free volume. The level is shown in the handset display.

3.8 Mute

Mute the microphone so that you can talk to someone else in the room without your caller hearing you.

1. During a call, press . The microphone is muted.
2. Press  again to turn the microphone back on.

3.9 End a call


1. Press .

After you hang up, the duration the phone is off-hook is displayed for 5 seconds.

NOTE


If auto hang-up is on (see page 31) simply replace the handset on the base to end the call. The default setting is ON.

3.10 Switch handset on/off

1. Press and hold  to switch the handset on or off.

3.11 Call a second external number

Put an external caller on hold to make a second external call. You can then switch between both callers or hold a 3-way conference call.

1. During your call, press **MENU** **OK**. Scroll ▼ to **INIT 2ND CALL**.
2. Press **MENU** **OK**. Display shows **CALLING R.**
3. Enter the second number.
4. When your second caller answers, press **MENU** **OK** to open the option menu:
 - **CONFERENCE** – press **MENU** **OK** to initiate a 3-way with an external caller and internal caller.
 - **SWITCH CALLS** – press **MENU** **OK** to switch between the two callers.
5. Press  to hang up.

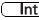

Note

This service is network dependent.

3.12 Intercom

This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.

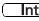

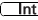
3.12.1 Call another handset

1. Press .
 - If you have two handsets, the other handset is called automatically.
 - If more than two handsets are registered to the base, their numbers are displayed, e.g. 2345*. Enter the number of the handset you want to call or press * to ring all handsets.
2. Press  to hang up.

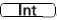
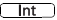


NOTE

If the handset does not belong to S3000 range, this function may not be available.


3.12.2 Transfer an external call to another handset

1. During an external call, press . Your caller is put on hold.
2. Enter the number of the handset you want to call or press * to ring all handsets.
If there are only two handsets, the other handset is called automatically.
3. When the other handset answers, announce the caller then press  to transfer the call. If the other handset does not answer, press  to talk to your caller again.

3.12.3 Three-party conference call

1. During an external call, press .
Your caller is put on hold.
2. Enter the number of the handset you want to call or press * to ring all handsets.
If there are only two handsets, the other handset is called automatically.
3. When the other handset answers, announce the call then press and hold  to connect both calls. If the other handset does not answer, press  to talk to your caller again.
4. Press  to hang up.

3.13 Voicemail

If you have subscribed to your network's voicemail service (if available), your S3000 displays  when you have a new message.

NOTE


You can turn off the  icon. When viewing the Calls list, press and hold



4. Phonebook



The S3000 handset phonebook can store up to 100 names and numbers. Numbers can be up to 24 digits long and names up to 12 characters long. Entries are stored in alphabetical order.



4.1 View and dial phonebook entries


1. Press . Display shows the first entry.

Scroll  or  to the entry you want.










Or

To search alphabetically, press  then press the key with the first letter of the name, e.g. if the name begins with N, press  twice.

The display shows the first entry beginning with N. If required, press  or  to scroll to the exact entry.


2. Press  to dial the entry displayed.

4.2 Store an entry

1. Press . PHONEBOOK is displayed.
2. Press . NEW ENTRY is displayed.
3. Press . ENTER NAME is displayed.
4. Enter a name and press .
5. Enter a number. Press  to save. Press  or  to select NO GROUP, GROUP A, B or C and press  to confirm.
6. Press  to return to standby.





NOTE


You can assign individual contacts to specific groups of your choice. For example, Group A contains phone numbers of all your co-workers. You can also assign a specific ring melody to that group (see "Group melody" on page 29). You can benefit from this feature only if you have subscribed to Caller ID service from your network provider. If it is the case, every time someone from that group calls you, you will hear the designated melody for that group.

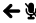

Cancel storing an entry by pressing  at any time during the process.

4.3 Entering names

Use the alphanumeric keypad to enter names in the phonebook. For instance to enter the name Paul

- | | | | |
|---|-------|---|-------------|
| P | Press |  | once |
| A | Press |  | once |
| U | Press |  | twice |
| L | Press |  | three times |





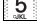
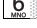


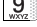

To enter a space press 

Press  to delete a character or press and hold  to delete all characters.

4.4 Character map


Use the keypad to enter names and characters.

Key Assigned characters and symbols

	Space	1	-	<	>	*
	A	B	C	2		
	D	E	F	3		
	G	H	I	4		
	J	K	L	5		
	M	N	O	6		
	P	Q	R	S	7	
	T	U	V	8	?	
	W	X	Y	Z	9	
	0	-	/	\	#	+





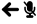

4.5 Enter a pause

If your S3000 is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to get an outside line. A pause is normally stored after the switchboard access code (e.g. 9)



1. When storing a number, press and hold  until the display shows P. You can then continue storing the phone number.

4.6 View an entry


In standby:

1. Press .
2. Enter the first letter of the name to search alphabetically then scroll  or  to the exact entry. The name is displayed.
3. Press  to display the number. If there are more than 12 digits, press  again to see the rest of the number.
4. Press  to return to standby.


During a call:

1. Press **MENU** **OK** twice to open the phonebook menu.
2. Enter the first letter of the name you want then scroll ▲ or ▼ if necessary to the exact name. Press ← to display the number. If there are more than 12 digits, press ← again to see the rest of the number.
3. Press  to cancel the phonebook display.
4. Press  again to end the call.

4.7 Edit an entry

1. Press ▼.
2. Scroll ▲ or ▼ to the entry you want to edit and press **MENU** **OK**. **EDIT ENTRY** is displayed. Press **MENU** **OK** again.
3. Edit the name and press **MENU** **OK** to confirm. Use ← to delete characters.
4. Edit the number. Press **MENU** **OK** to confirm.
5. Scroll ▲ or ▼ to select **NO GROUP**, **GROUP A**, **B** or **C** and press **MENU** **OK** to confirm.
6. Press  to return to standby.

4.8 Delete an entry

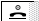
1. Press ▼.
2. Scroll to the entry you want to delete and press **MENU** **OK**.
3. Scroll ▼ to **DELETE ENTRY** and press **MENU** **OK**.
4. Display shows **CONFIRM?**. Press **MENU** **OK**.
5. Press  to return to standby.

4.9 List entry


You can also view, edit and delete an entry through the phonebook menu.

1. Press **MENU** **OK** twice to open the phonebook menu.
2. Scroll ▼ to **LIST ENTRY** and press **MENU** **OK** to confirm.
3. You can now follow the instructions in sections 4.6, 4.7 and 4.8 from step 2.


4.10 Delete all entries

1. Press **MENU** **OK** twice.
2. Scroll ▼ to **DELETE ALL** and press **MENU** **OK**.
3. Display shows **CONFIRM?**. Press **MENU** **OK**.
4. Press  to return to standby.

4.11 Store a direct memory number

1. Press **MENU** **OK** twice.
2. Scroll ▼ to **DIRECT MEM** and press **MENU** **OK**.
3. **KEY 1** is displayed. Press **MENU** **OK**.
If no number is stored **NO ENTRY** is displayed. If a number is stored the name will be displayed.
4. Scroll ▼ to **KEY X**, where **X** is the keypad number where the entry will be stored. Press **MENU** **OK**.
5. **ADD** is displayed. Press **MENU** **OK**.
6. The first phonebook entry is displayed. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact entry, then press **MENU** **OK**.
7. Press  to return to standby.

4.12 Delete a Direct memory number

1. Press **MENU** **OK** twice.
2. Scroll ▼ to **DIRECT MEM** and press **MENU** **OK**.
3. **KEY 1** is displayed. Press **MENU** **OK**.
If no number is stored **NO ENTRY** is displayed. If a number is stored the name will be displayed.
4. Scroll ▼ to **KEY X**, where **X** is the keypad number where the entry is stored. Press **MENU** **OK**.
5. Scroll ▼ to **DELETE**. Press **MENU** **OK**.
6. **CONFIRM?** is displayed. Press **MENU** **OK**.
7. Press  to return to standby.


4.13 Copy phonebook to another handset

If you have more than one S3000 handset registered to your base you can copy the phonebook between handsets.

1. Press **MENU** **OK** twice.
2. Scroll ▼ to **PB TRANSFER** and press **MENU** **OK**.
3. Scroll ▲ or ▼ to the number of the handset you want the phonebook copied to. Press **MENU** **OK**.

On the receiving handset:

1. **TRANS. FROM: HANDSET X** (where **X** is the handset number of the sending handset) is displayed.
Press **MENU** **OK** to start the copying process.

2. When **DONE!** is displayed on both handsets, press  to return to standby.

NOTE

If an entry with the same name and number is already stored in the receiving handset, it will not be copied across.

5. Caller ID and Calls list

If you have subscribed to Caller ID and provided the identity of the caller is not withheld, the number of the caller will be displayed together with the date and time of the call (if provided by the network).

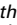
NOTE

- If the caller's number is stored in your phonebook along with a name, the name will also be displayed.
- If the telephone number is not available for incoming calls, the handset will display **UNAVAILABLE**.
- Information about incoming calls will vary by country and network operator. Some operators may charge a subscription for their Caller ID service.







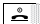
51. Calls list

The Calls list contains details of missed and received call. Details include the date and time of the call. Entries are displayed in chronological order with the most recent call at the top of the list.


NOTE

- When the Calls list is full, a new call replaces the oldest in the list.
- The received and missed Calls list holds details of up to 50 calls.
- If you receive more than one call from the same number, only the most recent call is kept in the Calls list.
- When you have missed calls (incoming calls that you haven't answered) the  icon will be displayed in the display on all handsets registered to the base.
- If one handset is used to view the Calls list, the icon on the other handsets will continue to flash (Multipack user only).


5.1.1 View the Calls list


1. Press  to enter the Calls list.
 - The most recent number or name if stored in the phonebook is displayed. New calls are marked with  icon flashing.
2. Scroll  or  through the Calls list.
 - At the end of the list, you will hear three short beeps.
Press  to see the number. If the number has more than 12 digits, press  to see the rest of the number.
3. Press  to return to standby.

NOTE



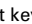

The  icon stops flashing once all new calls have been viewed.

5.1.2 Dial from the Calls list

1. Press  to enter the Calls list.
The most recent call is displayed.

2. Scroll ▲ or ▼ to the entry you want.
3. Press  to dial.







5.1.3 Modify and dial a number in the Calls list

1. Press ▲ to enter the Calls list.
2. Scroll ▲ or ▼ to the entry you want.
3. Press  the display shows **EDIT ENTRY**.
4. Press  again. The display shows **ENTER NUMBER**.
5. Press ▲ or ▼ to move the cursor to edit or delete number.
6. Press Digit key to input a number or  to delete a number.
7. Press  to dial out using the modified number.





NOTE

The edited entry cannot be saved in the Calls list.





5.1.4 Save a number from the Calls list to the phonebook

1. Press ▲ to enter the Calls list. The most recent call is displayed.
2. Scroll ▲ or ▼ to the number you want.
3. Press  then press ▼ until **SAVE NUMBER** is displayed.
4. Press . **ENTER NAME** is displayed. Use the keypad to enter the name.
5. Press  then the number is displayed, the user can then edit the number if required and must press  to save the number (even if has not been edited).
6. Press ▲ or ▼ to select **NO GROUP**, **GROUP A**, **B** or **C** and press  to confirm.
7. Press  to return to standby.

5.1.5 Delete a Calls list entry

1. Press ▲ to enter the Calls list. The most recent call is displayed.
2. Scroll ▲ or ▼ to the number you want.
3. Press  then scroll ▼ to **DELETE** and press .
4. Display shows **CONFIRM?**. Press  to confirm.
5. Press  to return to standby.

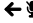


5.1.6 Delete entire Calls list

1. Press ▲ to enter the Calls list. The most recent call is displayed.
2. Press  then scroll ▼ to **DELETE ALL** and press .
3. Display shows **CONFIRM?**. Press  to confirm.
4. Press  to return to standby.

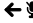

5.2 Redial

The S3000 lets you redial any of the last 10 numbers called. Numbers can be up to 24 digits long.

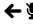

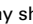
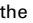
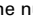


5.2.1 Redial the last number

1. Press . The last number dialled is displayed.
 - If the number has more than 12 digits, the display shows ► and the cursor blinks. Press  to display the rest. If the number is stored in the Phonebook, the name is displayed.
2. Press  to dial.

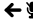

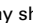
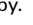

5.2.2 View and dial a number in the redial list

1. Press . The last number dialled is displayed.
If required, scroll ▲ or ▼ to display the number you want.
2. Press  to dial the number.

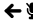

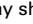
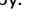

5.2.3 Copy a redial number to the phonebook

1. Press  and scroll ▲ or ▼ to the entry you want.
2. Press .
3. Display shows **SAVE NUMBER**. Press .
4. Enter the name and press .
5. Edit the number if required and press .
6. Press ▲ or ▼ to select **NO GROUP**, **GROUP A**, **B** or **C** and press  to confirm.
7. Press  to return to standby.

5.2.4 Delete a redial list entry

1. Press . Scroll ▲ or ▼ to display the number you want.
2. Press  and scroll ▼ to **DELETE** then press .
3. Display shows **CONFIRM?**. Press  to confirm, then  to return to standby.

5.2.5 Delete entire redial list








1. Press  then press .
2. Scroll ▼ to **DELETE ALL** and press .
3. Display shows **CONFIRM?**. Press  to confirm. Press  to return to standby.

6. Clock & Alarm











If you subscribe to your network's Caller ID service, the time on your S3000 may be set automatically each time you receive a call, depending on your network provider.

You can also set or adjust the time using the Clock & Alarm menu.


6.1 Set date and time


1. Press **MENU**  and scroll  to **CLOCK/ALARM**. Press **MENU** . Display shows **DATE & TIME**, then press **MENU** .
2. Enter the date using the format **DD/MM** e.g. 04/ 08 for 4th August.
3. Press **MENU**  and enter the time using the 24 hour format **HH:MM**, e.g. 14:45 for 2:45pm.
4. Press **MENU**  to confirm.
5. Press  to return to standby.

6.2 Set alarm

1. Press **MENU** , scroll  to **CLOCK/ALARM** and press **MENU** .
2. Scroll  to **SET ALARM** and press **MENU** .
3. Scroll  or  to **OFF**, **ON ONCE** or **ON DAILY** and press **MENU** .
4. If you select **ON ONCE** or **ON DAILY**, enter the time using the 24 hour format **HH-MM** e.g 14:45 for 2:45pm and press **MENU** .
5. Press  to return to standby. When the alarm goes off, press any key to stop the ring.


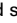




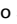


NOTE

Once the alarm is set to on, the  icon is displayed.

The alarm will ring at the medium level. **ALARM ON** and the  will flash on the display.

6.3 Set alarm melody

There are 3 alarm melodies.

1. Press **MENU**  and scroll  to **CLOCK/ALARM**.
2. Press **MENU** .
3. Scroll  to **ALARM TONE** and press **MENU** . Melodies are played.
4. Scroll  or  to select a melody.
5. Press **MENU**  to confirm.
6. Press  to return to standby.

7. Personal settings

7.1 Handset tones







IMPORTANT

When the phone is ringing, avoid holding the earpiece too close to your ear as it may damage your hearing.

7.1.1 Ring volume







Choose from: RINGER OFF, LOW, MEDIUM, HIGH, BOOST and PROGRESSIVE (increasing ring volume).

The default setting is HIGH.

1. Press , scroll ▼ to **PERSONAL SET** and press .
2. **HANDSET TONE** is displayed. Press .
3. **RING VOLUME** is displayed. Press .
4. Scroll ▲ or ▼ to adjust the ringer volume level.
5. Press  to save the settings.
6. Press  to return to standby.








7.1.2 Ring melody

Choose from 10 ringer melodies.

1. Press , scroll ▼ to **PERSONAL SET** and press .
2. **HANDSET TONE** is displayed. Press  and scroll ▼ to **RING MELODY**. Press .
3. Press ▲ or ▼ to select the melody.
A sample of the melody is played.
4. Press  to confirm.
5. Press  to return to standby.






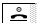
7.1.3 Group melody

To benefit from this feature, you must subscribe to the Caller ID service. This menu enables you to select and set the melodies to be played when there is an external incoming call from a contact whose name is stored in your phonebook and is part of a group. You can associate 1 ring melody to each group. There are three phonebook groups (GROUP A, B and C) available for you to organize your contacts. Each group can be assigned a unique melody.

1. Press , scroll ▼ to **PERSONAL SET** and press .
2. **HANDSET TONE** is displayed. Press  and scroll ▼ to **GROUP MELODY**. Press .
3. Scroll ▲ or ▼ to select: GROUP A, B or C, then press .
4. Press ▲ or ▼ to select the melody you want for the group and press .
5. Press  to return to standby.







7.1.4 Key tones on/off

When you press a key on the handset you hear a beep. You can switch these beeps on or off.

1. Press **MENU** , scroll ▼ to **PERSONAL SET** and press **MENU** .
2. **HANDSET TONE** is displayed. Press **MENU**  and scroll ▼ to **KEY TONE**. Press **MENU** .
3. Scroll ▲ or ▼ to select **ON** or **OFF**.
4. Press **MENU**  to confirm.
5. Press  to return to standby.




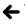


7.1.5 First ring

Your S3000 will automatically detect the Caller ID (Subscription dependent). If you do not wish to hear the ring before the caller identification is displayed you can manually set **FIRST RING** to **OFF**. The default setting is **ON**.


1. Press **MENU** , scroll ▼ to **PERSONAL SET** and press **MENU** .
2. **HANDSET TONE** is displayed. Press **MENU**  and scroll ▼ to **FIRST RING**. Press **MENU** .
3. Scroll ▲ or ▼ to select **ON** or **OFF**.
4. Press **MENU**  to confirm.
5. Press  to return to standby.






7.2 Handset name

Personalise your handset, with a name or location for example Peter or Bedroom. Maximum 10 characters.


1. Press **MENU** , scroll ▼ to **PERSONAL SET** and press **MENU** .
2. Scroll ▼ to **HANDSET NAME** and press **MENU** . The current name is displayed.
3. Press  to delete the current name.
4. Enter the name you want – maximum 10 characters and press **MENU**  to save.
5. Press  to return to standby.





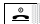
7.3 Auto pick up

With Auto pick up switched on, you can answer a call by simply lifting the handset off the base or charger. If switched off, you will have to press  to answer a call. The default setting is **ON**.

1. Press **MENU** , scroll ▼ to **PERSONAL SET** and press **MENU** .
2. Scroll ▼ to **AUTO PICK-UP**. Press **MENU** .
3. Scroll ▲ or ▼ to select **ON** or **OFF**.
4. Press **MENU**  to confirm.
5. Press  to return to standby.





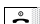
7.4 Auto hang up

With Auto hang up switched on, you can end a call by simply replacing the handset on the base or charger. If switched off, you have to press  to hang up. The default setting is ON.

1. Press , scroll ▼ to **PERSONAL SET** and press .
2. Scroll ▼ to **AUTO HANG-UP**. Press .
3. Scroll ▲ or ▼ to select **ON** or **OFF**.
4. Press  to confirm.
5. Press  to return to standby.





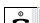
7.5 Display language

You can change the display language.

1. Press , scroll ▼ to **PERSONAL SET** and press .
2. Scroll ▼ to **LANGUAGE**. Press .
3. Scroll ▲ or ▼ to select the language you want.
4. Press  to confirm.
5. Press  to return to standby.

7.6 Room monitor on/off

Leave one handset in a room and use another handset to hear sounds in that room.


1. Press , scroll ▼ to **PERSONAL SET** and press .
2. Scroll ▼ to **ROOM MONITOR**. Press .
3. Press ▲ or ▼ to select **ON** or **OFF**.
4. Press  to confirm.
5. Press  to return to standby.

When switched **ON**, you can leave this handset in the room you wish to monitor. Only the microphone is on. Anyone in the room cannot hear you.

7.7 Room monitor

1. Switch a handset's Room monitor mode setting **ON** and place that handset in the room.
2. At a second handset, press **INT** and enter the number of the handset you are using as a room monitor. You can now hear sounds coming from the room.






NOTE

To stop room monitoring at any time, press .

IMPORTANT

This product is not intended for use as a baby safety device and is not a substitute for adult supervision.

7.8 Backlight on/off

1. Press , scroll ▼ to **PERSONAL SET** and press .
2. Scroll ▼ to **BACKLIGHT**. Press .
3. Press ▲ or ▼ to select **ON** or **OFF**.
4. Press  to confirm.
5. Press  to return to standby.

7.9 Keypad lock

Prevent accidental dialling while carrying the handset by locking the keypad. While the keypad is locked, you can answer incoming calls as normal.


1. Press and hold *.
The display shows **KEYS LOCKED**.
2. To unlock the handset, press and hold * again.

8. Advanced settings

8.1 Recall time

This setting is useful to access certain network and PABX/switchboard services.

The default S3000 recall time is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.


1. Press **MENU OK**, scroll ▼ to **ADVANCED SET** and press **MENU OK**.
2. **RECALL TIME** is displayed. Press **MENU OK**.
3. Press ▲ or ▼ to select the setting you want: **SHORT**, **MEDIUM**, **LONG**.
4. Press **MENU OK** to confirm.
5. Press  to return to standby.

NOTE


The use of your S3000 cannot be guaranteed on all PABX.

8.2 Dial mode

The default S3000 dialling mode is suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **MENU OK**, scroll ▼ to **ADVANCED SET** and press **MENU OK**.
2. Scroll ▼ to **DIAL MODE**. Press **MENU OK**.
3. Press ▲ or ▼ to select **TONE** or **PULSE**.
4. Press **MENU OK** to confirm.
5. Press  to return to standby.

8.2.1 Temporarily switch from Pulse to Tone dialling

1. In talk mode press and hold  for 2 seconds.

The dial mode will change from Pulse to Tone for the duration of the call.

8.3 Call barring









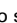


Prevent certain numbers from being dialled from your S3000. Store up to four specific numbers, each up to 4 digits – for example, international or local prefixes.

Bypass Call barring by switching the setting to **OFF**.










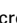



NOTE

*If you switch Call barring on, **BARR MODE ON** will be displayed on your screen in standby mode.*


8.3.1 Switch call barring on/off

1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **CALL BARRING**. Press **MENU** .
3. Enter the master PIN (default setting 0000) and press **MENU** .
4. **MODE** is displayed. Press **MENU** .
5. Press  or  to select **ON** or **OFF**. Press **MENU**  to confirm.
6. Press  to return to standby. You can now set the number. (See below)












8.3.2 Set a number to be barred

1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **CALL BARRING**. Press **MENU** .
3. Enter the master PIN (default setting 0000) and press **MENU** .
4. Scroll  to **NUMBER**. Press **MENU** .
5. If necessary, scroll  or  to the next available slot.
6. Press **MENU**  and enter the number or prefix you want to bar. Press **MENU**  to confirm.
7. Press  to return to standby.

8.4 Easy call

When activated, this feature allows you to dial a number by pressing any key on your handset (except ). This feature is very useful for access to emergency services.

8.4.1 Switch Easy call on/off


1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **EASY CALL**. Press **MENU** .
3. Enter the master PIN (default setting 0000) and press **MENU** .
4. **MODE** is displayed. Press **MENU**  then press  or  to select **ON**. Press **MENU**  to confirm.
5. Press  to return to standby.

To switch Easy call off again:

1. Press .
2. **OFF?** is displayed. Press **MENU**  to confirm.

8.4.2 Set the Easy call number

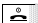
1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **EASY CALL**. Press **MENU** .

3. Enter the master PIN (Default setting 0000) and press **MENU OK**.
4. Scroll ▼ to **NUMBER**. Press **MENU OK**.
5. Enter the number. Press **MENU OK** to confirm.
6. Press  to return to standby.

NOTE

If you switch Easy call on, **EASY CALL** will be displayed on your screen in standby mode. You can not set Easy call ON until an Easy call number has been stored.

8.4.3 Dial an Easy call number

When an Easy call number has been stored and the Easy call setting switched ON, press any key (apart from ) to dial a number.

NOTE

When Easy call is switched ON, you can still answer any incoming call as normal.

8.5 Registration

Up to 5 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.


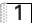
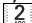
- The instructions described below apply specifically to your S3000 handset. If you wish to register another manufacturer's handset, the instructions may vary. In this case, please refer to the manufacturer of the additional handset.
- The Master PIN is required before you can register or unregister handsets. The default PIN is 0000.

8.6 Register a handset

At the base:

1. Press and hold the a button on the base station for at least 3 seconds. The base station emits a beep when it is ready to accept registration. You have 90 seconds in which to register a handset.

At the handset:

1. Press **MENU OK** and scroll ▼ to **ADVANCED SET** and press **MENU OK**.
2. Scroll ▼ to **REGISTRATION** and press **MENU OK**.
3. Scroll ▲ or ▼ to display **REGIST. BASE** and press **MENU OK**. **BASE 1234** is displayed and the registered base number is flashing. Enter the number of the base on which you wish to register your handset.
If you have only 1 base station, press . If you have 2 base stations, press  or , etc.
4. When the display shows **PIN ?**, enter the base PIN and press **MENU OK**.

When the handset registers with the base, it is assigned a handset number.

8.7 Select a base

You can register your S3000 handset with up to 4 bases. Once registered, you can switch between bases, for example, bases at home and at work.

1. Press **MENU** **OK** and scroll ▼ to **ADVANCED SET** and press **MENU** **OK**.
2. Scroll ▼ to **REGISTRATION** and press **MENU** **OK**.
3. **SELECT BASE** is displayed. Press **MENU** **OK**.
The available bases are displayed with the current base number flashing.
4. Enter the number of the base you want – 1,2,3 or 4.
When the base is found you hear a beep. If not found, the display shows **UNREGISTERED**.


8.8 Unregister a handset

Use one handset to delete another. You cannot delete the handset that you are using.

1. Press **MENU** **OK** and scroll ▼ to **ADVANCED SET** and press **MENU** **OK**.
2. Scroll ▼ to **UNREGISTER** and press **MENU** **OK**.
3. Enter the 4 digit master PIN and press **MENU** **OK**.
Display shows the first registered handset number.
4. Scroll ▲ or ▼ to select the handset you want to delete and press **MENU** **OK**.
UNREGISTERED is displayed on the handset screen.

8.9 PIN

The 4-digit master PIN is used when registering or unregistering a handset and when changing some settings on your S3000. The default setting is 0000. You can change this PIN for more security.

1. Press **MENU** **OK**, scroll ▼ to **ADVANCED SET** and press **MENU** **OK**.
2. Scroll ▼ to **PIN**. Press **MENU** **OK**.
3. Enter the current 4 digit master PIN and press **MENU** **OK**. (Default setting 0000).
4. Enter the new PIN and press **MENU** **OK**.
5. Press  to return to standby.

NOTE

Make a note of your PIN. If you forget your PIN you will need to reset your product.

8.10 Reset

This will reset your S3000 to its default settings.

1. Press **MENU** **OK** , scroll ▼ to **ADVANCED SET** and press **MENU** **OK** .
2. Scroll ▼ to **RESET UNIT**. Press **MENU** **OK** .
3. **CONFIRM?** is displayed. Press **MENU** **OK** .

NOTE











Entries stored in the phonebook is retained. After reset, depending on your country, the welcome mode setting may be shown on the handset display.

8.11 Default settings


Handset name	HANDSET
Key tone	On
First ring	On
Auto pick up	On
Auto hang up	On
Ringer melody	Melody 1
Ringer volume	High
Earpiece volume	3
Phonebook	Unchanged
Call list	Empty
Redial list	Empty
Master PIN	0000
Keypad lock	Off
Clock	12:00
Alarm	Off
Dial mode	Tone

8.12 Auto prefix










You can set the S3000 to detect a dialling number and replace it with another number. The number to be detected can be up to 5 digits long. It can be replaced with a number up to 10 digits.

1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **PREFIX**. Press **MENU** .
3. **DETECT DIGIT** is displayed. Press **MENU** .
4. Enter the number you want to be detected and press **MENU** .
5. Scroll to **PREFIX NUM.** and press **MENU** .
6. Enter the number you want it replaced with and press **MENU** .
7. Press  to return to standby.

8.13 Intrusion

When an external call is taking place, another handset registered to the base can join in, making the call a 3-way conference, just by pressing .




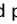





To enable this, Intrusion must be set to **ON**.

1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **INTRUSION**. Press **MENU** .
3. Scroll  or  to **ON** or **OFF**.
4. Press **MENU**  to confirm.
5. Press  to return to standby.

8.14 ECO mode

Your S3000 offers an ECO mode function which reduces the transmitted power and energy consumption when switched on. This feature is set to **OFF** by default.

To turn ECO mode to **ON** or **OFF**:

1. Press **MENU** , scroll  to **ADVANCED SET** and press **MENU** .
2. Scroll  to **ECO MODE** and press **MENU** .
3. Press  or  to highlight **ON** or **OFF** then press **MENU**  to confirm.
4. Press  to return to standby.

A confirmation beep is emitted and when switched **ON** the handset display will switch between the handset's name and **ECO MODE**.


NOTE

*When ECO Mode is set to **ON**, the handset range will be reduced.*

8.15 ECO PLUS

When ECO PLUS is activated and the unit has been idle for 1 minute the transmitted power between the handset and the base will stop, an incoming call or pressing any key will activate the unit and it will revert back to the normal mode. This feature is set to OFF by default.

To turn ECO PLUS to ON or OFF:

1. Press **MENU** **OK**, scroll ▼ to **ADVANCED SET** and press **MENU** **OK**.
2. Scroll ▼ to **ECO PLUS** and press **MENU** **OK**.
3. Press ▲ or ▼ to highlight **ON** or **OFF** then press **MENU** **OK** to confirm.
4. Press  to return to standby.

9. Help

The icon is not scrolling during charge

- Bad battery contact – move the handset slightly.
- Dirty contact – Clean the battery contact with a cloth moistened with alcohol.
- Battery is full – no need to charge.

No dialling tone

- No power – check the connections. Reset the phone: unplug and plug back in the mains.
- Batteries are empty – charge the batteries for at least 24 hours.
- You are too far from the base – move closer to the base.
- Wrong line cable – use the line cable provided.
- Line adaptor (when needed) is not connected to the line cord – connect the line adaptor (when needed) to the line cord.

Poor audio quality

- The base is too close to electrical appliances, reinforced concrete walls or metal doorframes – move the base at least one metre away from any electrical appliances.

The icon is blinking

- Handset is not registered to the base – register the handset to the base.
- You are too far from the base – move closer to the base.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID service does not work

- Check your subscription with your network operator.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try recharging or replacing the batteries.
- Try disconnecting and connecting the base power supply.
- If LED is not lit up, then try disconnecting and connecting the base power supply.

Unable to register another handset

- Maximum number of 5 handsets has been reached.
- The display shows **SEARCHING**. You must unregister a handset in order to register a new one.

Noise interference on your radio or television

- Your base or charger may be too close. Move it as far away as possible.

10. General information

IMPORTANT

This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

This product is intended for connection to analogue public switched telephone networks and private switchboards in Europe.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's Guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

CAUTION

To reduce the risk of fire, use only the supplied power adaptor.

Unplug this cordless phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the handset or base until after you have unplugged the power and phone from the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

- Read and understand all instructions and save them for future reference.

- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

CAUTION

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the battery pack that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep battery packs out of the reach of children.
- Remove battery packs if storing over 30 days.
- Do not dispose of battery packs in fire, which could result in explosion.
- The rechargeable battery packs that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged

General information

or during prolonged periods of use. This is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood.

- Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions

• **European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive**

The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trashbin label on the product (or the package in some cases). As defined by the WEEE directive, this crossed-out trashbin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste. Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.

- The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Suncorp Technologies Limited, 2/F, Shui On Centre, 6-8 Harbour Road, Hong Kong. ("SUNCORP")

What Does this Warranty Cover?

Subject to the exclusions contained below, SUNCORP warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will SUNCORP do?

SUNCORP or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this limited warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR SUNCORP BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories (battery, power supply(s) and line cords)	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or SUNCORP, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, SUNCORP or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call: 0800 0820750.

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a SUNCORP Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

Technical Information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your S3000 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

R&TTE

This product is intended for use within Europe for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC including compliance with ICNIRP standard for electromagnetic energy exposure.

Connecting to a switchboard

This product is intended for use within Europe for connection to the public telephone network.

Inserting a pause

With some switchboards, after dialling the access code you may have to wait for a moment while the switchboard picks up an outside line so you will need to enter a pause in the dialling sequence.

Press and hold # to insert a pause (P) before entering the telephone number.

You may also need to enter a pause when storing international numbers or charge card numbers.

Recall

You may need to use the recall function if you are connected to a switchboard/PABX (Private Automatic Branch Exchange), contact your PABX supplier for further information.

General information

Declaration of Conformity (DoC)

Suncorp declares that the following products:

Brandname: Motorola
Type: S3001, S3002, S3003, S3004
Descriptions: DECT phone without telephone answering machine (S300x) and their multi-handset versions.

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

- R&TTE Directive (1999/5/EC)
- Ecodesign Directive (2009/125/EC)

The products are compliant with the following standards:

Safety: EN60950-1:2006+A11:2009+A1:2010+A12:2011
EMC: EN301489-1 v1.9.2 and EN301489-6 v1.3.1
RF Spectrum : EN301406 v2.1.1
Ecodesign : EC No 278/2009, 6 April 2009

For and on behalf of Suncorp Technologies Limited,

Signature:



CW Cheung
2013.03.21
12:38:25 +08'00'

Printed name & Position: CW Cheung – Chief Technical Officer

Date: March 21, 2013

Place: 3001-3005 China Resources Building, 26 Harbour Road,
Wan Chai, Hong Kong

Manufactured, distributed or sold by
Suncorp Technologies Ltd., official
licensee for this product. MOTOROLA
and the Stylized M Logo are trademarks
or registered trademarks of Motorola
Trademark Holdings, LLC. and are used
under license. All other trademarks are the
property of their respective owners. © 2013
Motorola Mobility LLC. All rights reserved.

Version 3 (UK)

