



VTRAK
M610i, M310i, M210i
Product Manual

Version 0.9

Copyright

© 2007 Promise Technology, Inc. All Rights Reserved.

Copyright by Promise Technology, Inc. (Promise Technology). No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of Promise Technology.

Trademarks

Promise, and the Promise logo are registered in U.S. Patent and Trademark Office. All other product names mentioned herein may be trademarks or registered trademarks of their respective companies.

Important data protection information

You should back up all data before installing any drive controller or storage peripheral. Promise Technology is not responsible for any loss of data resulting from the use, disuse or misuse of this or any other Promise Technology product.

Notice

Although Promise Technology has attempted to ensure the accuracy of the content of this manual, it is possible that this document may contain technical inaccuracies, typographical, or other errors. Promise Technology assumes no liability for any error in this publication, and for damages, whether direct, indirect, incidental, consequential or otherwise, that may result from such error, including, but not limited to loss of data or profits.

Promise Technology provides this publication “as is” without warranty of any kind, either express or implied, including, but not limited to implied warranties of merchantability or fitness for a particular purpose.

The published information in the manual is subject to change without notice. Promise Technology reserves the right to make changes in the product design, layout, and driver revisions without notification to its users.

This version of the *Product Manual* supersedes all previous versions.

Recommendations

In this *Product Manual*, the appearance of products made by other companies, including but not limited to software, servers, and disk drives, is for the purpose of illustration and explanation only. Promise Technology does not recommend, endorse, prefer, or support any product made by another manufacturer.

Contents

Chapter 1: Introduction to VTrak	1
About This Manual	1
VTrak Overview	2
Architectural Description	3
Features and Benefits	4
Highlights	4
Subsystem and Controller Features	5
Operational Features	5
Management	6
Specifications	6
Warranty and Support	7
FCC Statement	7
Chapter 2: VTrak Installation	9
Unpacking the VTrak	9
Mounting VTrak M610i in a Rack	10
Mounting VTrak M310i or M210i in a Rack	12
Installing Disk Drives	15
Drive Slot Numbering	15
Installing Disk Drives	16
Making Management and Data Connections	18
Configuring an IP Storage Area Network	18
Configuring Direct Attached Storage	19
Making Serial Cable Connections	20
Connecting the Power	21
Chapter 3: VTrak Setup	23
Setting up the Serial Connection	23
Choosing DHCP or a Static IP Address	24
Viewing MAC and IP Addresses in the CLI	24
Viewing MAC and IP Addresses in the CLU	24
Setting up VTrak with the CLI	25
Setting up VTrak with the CLU	27
Creating Disk Arrays with WebPAM PROe	29
Logging into WebPAM PROe	29
Selecting a Language	31
Creating a Disk Array	31
Logging out of WebPAM PROe	35
Using WebPAM PROe over the Internet	36
Obtaining a Security Certificate	36

Chapter 4: Management with WebPAM PROe	37
Logging into WebPAM PROe	38
Selecting a Language	40
Perusing the Interface	41
Using the Header	42
Using Tree View	43
Using Management View	44
Viewing the Event Frame	44
Logging out of WebPAM PROe	45
Working with the Storage Network	46
Viewing Other Subsystems	46
Updating the List of Subsystems	46
Logging into a Subsystem	46
Hiding the Other Subsystems	46
Working with Subsystems	47
Viewing Subsystem Information	47
Setting an Alias for the Subsystem	47
Setting Subsystem Date and Time	48
Viewing the Runtime Event Log	48
Saving the Runtime Event Log	49
Clearing the Runtime Event Log	49
Viewing NVRAM Events	49
Saving NVRAM Events	50
Clearing NVRAM Events	50
Viewing Current Background Activities	50
Making Background Activity Settings	51
Running Background Activities	52
Running Media Patrol	52
Running PDM	52
Viewing Scheduled Activities	53
Scheduling an Activity	53
Deleting a Scheduled Activity	54
Viewing Lock Status	54
Setting the Lock	55
Renewing the Lock	55
Releasing the Lock	55
Managing Users	57
Viewing User Information	57
Making User Settings	57
Making Your Own User Settings	58
Setting-up User Event Subscriptions	58

Chapter 4: Management with WebPAM PROe, cont.

Managing Users, cont.	
Changing Another User's Password	59
Changing Your Own Password	59
Creating a User	60
Deleting a User	61
Viewing User Sessions	61
Logging out Other Users	61
Managing the Network Connection	62
Making Subsystem Management Port Settings	62
Making iSCSI Data Port Settings	62
Viewing VLAN Entries	63
Creating a VLAN Entry	63
Changing a VLAN Entry	64
Deleting a VLAN Entry	65
Viewing Link Aggregation Entries	65
Creating a Link Aggregation Entry	65
Changing a Link Aggregation Entry	66
Deleting a Link Aggregation Entry	66
Managing iSCSI Connections	67
Viewing Node Information	67
Making Node Settings	68
Viewing Target Port Information	69
Viewing Data Port Statistics	69
Viewing Portal Information	70
Viewing Session Information	70
Viewing iSNS Information	70
Making iSNS Settings	71
Viewing CHAPs	71
Adding CHAPs	71
Editing CHAPs	72
Deleting CHAPs	72
Pinging iSCSI Connections	72
Managing Storage Services	73
Adding an Initiator	73
Deleting an Initiator	73
Viewing a LUN Map	74
Enabling LUN Masking	74
Adding a LUN Map	74

Chapter 4: Management with WebPAM PROe, cont.

Managing Software Services	76
Making Email Settings	76
Making SLP Settings	77
Making Web Server Settings	77
Making Telnet Settings	79
Making SNMP Settings	79
Making CIM Settings	81
Making Netsend Settings	82
Exporting the User Database	84
Importing a User Database	85
Updating the Firmware	86
Restoring Factory Defaults	87
Clearing Statistics	88
Shutting Down the Subsystem	89
Monitoring the Shutdown	89
Restarting the Subsystem	90
Monitoring the Restart	90
Managing Controllers	91
Viewing the Controller	91
Locating a Controller	91
Viewing Controller Information	92
Viewing Controller Statistics	93
Making Controller Settings	93
Managing Enclosures	95
Viewing the Enclosures	95
Locating an Enclosure	95
Viewing Enclosure Information	96
Making Enclosure Settings	97
Viewing FRU VPD Information	97
Checking the Batteries	97
Reconditioning a Battery	98
Silencing the Buzzer	99
Making Buzzer Settings	99
Testing the Buzzer	99
Managing Physical Drives	100
Viewing a List of Physical Drives	100
Identifying a Physical Drive	100
Making Global Physical Drive Settings	100
Viewing Physical Drive Information	101
Viewing Physical Drive Statistics	102

Chapter 4: Management with WebPAM PROe, cont.

Managing Physical Drives, cont.	
Making Physical Drive Settings	102
Clearing Stale and PFA Conditions	102
Forcing a Physical Drive Offline or Online	103
Managing Disk Arrays	105
Viewing Disk Arrays	105
Creating a Disk Array	105
Creating a Disk Array – Automatic	106
Creating a Disk Array – Express	106
Creating a Disk Array – Advanced	108
Deleting a Disk Array	109
Locating a Disk Array	110
Viewing Disk Array Information	110
Making Disk Array Settings	111
Creating a Logical Drive	111
Deleting a Logical Drive	113
Migrating a Disk Array	113
Rebuilding a Disk Array	114
Running Media Patrol on a Disk Array	115
Running PDM on a Disk Array	116
Transitioning a Disk Array	116
Preparing a Disk Array for Transport	117
Managing Logical Drives	118
Viewing Information for All Logical Drives	118
Locating a Logical Drive	119
Viewing Logical Drive Information	119
Viewing Logical Drive Statistics	120
Making Logical Drive Settings	120
Initializing a Logical Drive	121
Running Redundancy Check	122
Viewing the Logical Drive Check Table	123
Making Logical Drive LUN Settings	123
Managing Spare Drives	125
Viewing a List of Spare Drives	125
Locating a Spare Drive	125
Creating a Spare Drive	126
Deleting Spare Drive	127
Making Spare Drive Settings	127
Running Spare Check	128

Chapter 4: Management with WebPAM PROe, cont.

Working with the Logical Drive Summary 129
 Viewing a List of All Logical Drives 129
 Viewing Individual Logical Drive Information 129

Chapter 5: Management with the CLU 131

Logging into the CLU 132
 Making a Serial Connection 132
 Making a Telnet Connection 132
 Accessing Online Help 134
 Logging out of the CLU 134
 Running Quick Setup 135
 Managing the Subsystem 136
 Setting an Alias for the Subsystem 136
 Running Media Patrol 136
 Locking or Unlocking the Subsystem 136
 Setting Subsystem Date and Time 137
 Managing the Controllers 138
 Viewing Controller Information 138
 Making Controller Settings 138
 Locating the Controller 139
 Managing the Enclosure 140
 Viewing Enclosure Information 140
 Viewing Power Supply Status 140
 Locating a Power Supply 140
 Viewing Blower Status 141
 Viewing Voltage Sensor Status 141
 Viewing Temperature Sensor Status 141
 Setting Temperature Thresholds 141
 Checking the Batteries 142
 Reconditioning a Battery 142
 Locating an Enclosure 143
 Managing Physical Drives 144
 Viewing a List of Physical Drives 144
 Making Global Physical Drive Settings 144
 Setting an Alias 145
 Viewing Advanced Information 145
 Viewing Physical Drive Statistics 145
 Clearing Stale and PFA Conditions 145
 Forcing a Physical Drive Offline or Online 146
 Locating a Physical Drive 146

Managing Disk Arrays	147
Creating a Disk Array	147
Creating a Disk Array – Automatic	148
Creating a Disk Array – Express	149
Creating a Disk Array – Advanced	150
Deleting a Disk Array	151
Viewing Disk Array Information	152
Setting an Alias for a Disk Array	152
Accepting an Incomplete Array	153
Enabling Media Patrol on a Disk Array	153
Enabling PDM on a Disk Array	153
Preparing the Disk Array for Transport	153
Rebuilding a Disk Array	154
Migrating a Disk Array	154
Running PDM	155
Running Transition on a Disk Array	155
Locating a Disk Array	156
Creating a Logical Drive	156
Deleting a Logical Drive	157
Managing Logical Drives	158
Viewing Logical Drive Information	158
Setting an Alias for a Logical Drive	159
Setting Write Cache Policy	159
Setting Read Cache Policy	159
Initializing a Logical Drive	160
Running Redundancy Check	160
Locating a Logical Drive	161
Managing the Network Connection	162
Making Management Port Settings	162
Making iSCSI Data Port Settings	163
Viewing VLAN Entries	164
Creating a VLAN Entry	164
Changing a VLAN Entry	165
Deleting a VLAN Entry	165
Viewing Link Aggregation Entries	165
Creating a Link Aggregation Entry	166
Changing a Link Aggregation Entry	166
Deleting a Link Aggregation Entry	166
Managing iSCSI Connections	167
Viewing Node Information	167
Viewing Node Statistics	167

Chapter 5: Management with the CLU, cont.

Managing iSCSI Connections, cont.

- Making Node Settings 168
- Viewing Target Port Information 168
- Viewing Data Port Statistics 169
- Viewing Portal Information 169
- Viewing Session Information 169
- Viewing iSNS Information 169
- Making iSNS Settings 170
- Viewing CHAPs 170
- Adding CHAPs 170
- Editing CHAPs 171
- Deleting CHAPs 171
- Pinging iSCSI Connections 171
- Managing Background Activity 172
 - Viewing Current Background Activities 172
 - Making Background Activity Settings 172
- Working with the Event Viewer 174
 - Viewing Runtime Events 174
 - Clearing Runtime Events 174
 - Viewing NVRAM Events 174
 - Clearing NVRAM Events 175
- Managing Spare Drives 176
 - Viewing a list of Spare Drives 176
 - Creating a Spare Drive 176
 - Making Spare Drive Settings 177
 - Running Spare Check 177
 - Deleting a Spare Drive 178
- Working with LUN Mapping 179
 - Viewing Initiators 179
 - Enabling LUN Mapping 179
 - Creating Initiators 179
 - Deleting Initiators 180
 - Mapping LUNs to Initiators 180
- Managing Users 181
 - Viewing User Information 181
 - Creating a User 181
 - Changing a User's Password 182
 - Changing a User's Display Name and Email Address 182
 - Changing a User's Privilege and Status 183
 - Deleting a User 183

Chapter 5: Management with the CLU, cont.	
Working with Software Management	184
Making Email Settings	184
Making SLP Settings	185
Making Webserver Settings	185
Making Telnet Settings	186
Making SNMP Settings	186
Managing SNMP Trap Sinks	187
Making CIM Settings	188
Making Netsend Settings	188
Managing Netsend Recipients	189
Flashing through TFTP	191
Clearing Statistics	192
Restoring Factory Defaults	193
Shutting Down the Subsystem	194
Shutting down the VTrak – Telnet Connection	194
Shutting down the VTrak – Serial Connection	194
Restarting the Subsystem	196
Restarting VTrak – Telnet Connection	196
Restarting VTrak – Serial Connection	196
Working with the Buzzer	197
Silencing the Buzzer	197
Making Buzzer Settings	197
Testing the Buzzer	197
Chapter 6: Maintenance	199
Updating the Firmware in WebPAM PROe	199
Downloading the Firmware Image File	199
Updating Firmware from TFTP Server	199
Updating Firmware from your PC	200
Restarting the Subsystem	201
Updating the Firmware in the CLU	202
Downloading the Firmware Image File	202
Updating the Firmware	202
Restarting Subsystem over a Telnet Connection	202
Restarting Subsystem over a Serial Connection	203
Replacing a Power Supply	204
Remove the Old Power Supply	204
Install a New Power Supply	204
Replacing a Cooling Unit Fan or Blower	205
Replacing a Cache Battery	211

Chapter 6: Maintenance, cont.

Replacing a RAID Controller	216
Removing the old controller	216
Installing the new controller	216

Chapter 7: Technology Background 219

Introduction to RAID	219
RAID 0 – Stripe	220
RAID 1 – Mirror	221
RAID 1E – Enhanced Mirror	222
RAID 5 – Block and Parity Stripe	223
RAID 6 – Block and Double Parity Stripe	224
RAID 10 – Mirror + Stripe	225
RAID 50 – Striping of Distributed Parity	226
Choosing a RAID Level	228
RAID 0	228
RAID	228
RAID 1E	229
RAID 5	229
RAID 6	229
RAID 10	230
RAID 50	230
Choosing Stripe Size	231
Choosing Sector Size	231
Cache Policy	232
Read Cache Policy	232
Write Cache Policy	232
Adaptive Writeback Cache	232
Capacity Coercion	233
Initialization	234
Hot Spare Drive(s)	234
Partition and Format the Logical Drive	235
RAID Level Migration	235
Ranges of Disk Array Expansion	237
Media Patrol	238
Predictive Data Migration (PDM)	238
PDM Triggers	238
Transition	239
Example	240

Chapter 8: Troubleshooting	243
VTrak is Beeping	244
LEDs Display Amber or Red	245
Front Panel	245
Drive Status Indicators	246
Back of Enclosure	247
CLU Reports a Problem	250
Viewing Runtime Events	250
Viewing NVRAM Events	250
Checking a Reported Component	251
WebPAM PROe Reports a Problem	252
Event Notification Response	255
Critical & Offline Disk Arrays	269
When a Physical Drive Fails	269
With a Hot Spare Drive	269
Without a Hot Spare Drive	270
Rebuild Operation	270
Incomplete Array	272
Physical Drive Problems	273
Physical Drive Offline	273
Physical Drive Failed	273
Enclosure Problems	275
Connection Problems	278
Serial Connections	278
Network Connections	278
iSCSI Connections	279
Browser Does Not Connect to WebPAM PROe	280
Unsaved Data in the Controller Cache	281
Chapter 9: Support	283
Frequently Asked Questions	283
Contacting Technical Support	285
Limited Warranty	288
Returning Product For Repair	289
Appendix A: Useful Information	291
Serial Connector Pinout	291
SNMP MIB Files	292
Loading MIB Files	292
Index	293

Chapter 1: Introduction to VTrak

This chapter covers the following topics:

- About This Manual (below)
- VTrak Overview (page 2)
- Architectural Description (page 3)
- Specifications (page 6)

Thank you for purchasing Promise Technology's VTrak M610i, M310i, or M210i external disk array subsystem.

About This Manual

This *Product Manual* describes how to setup, use and maintain the VTrak M-Class external disk array subsystem. It also describes how to use the built-in command-line interface (CLI), command-line utility (CLU) and embedded Web-based Promise Array Management—Professional (WebPAM PROe) software.

This manual includes a full table of contents, index, chapter task lists and numerous cross-references to help you find the specific information you are looking for.

Also included are four levels of notices:



Note

A *Note* provides helpful information such as hints or alternative ways of doing a task.



Important

An *Important* calls attention to an essential step or point required to complete a task. Important items include things often missed.



Caution

A *Caution* informs you of possible equipment damage or loss of data and how to avoid them.



Warning

A *Warning* notifies you of probable equipment damage or loss of data, or the possibility of physical injury, and how to avoid them.

VTrak Overview

VTrak provides data storage solutions for applications where high performance and data protection are required. The failure of any single drive will not affect data integrity or accessibility of the data in a RAID protected logical drive.

Figure 1. VTrak M610i front view




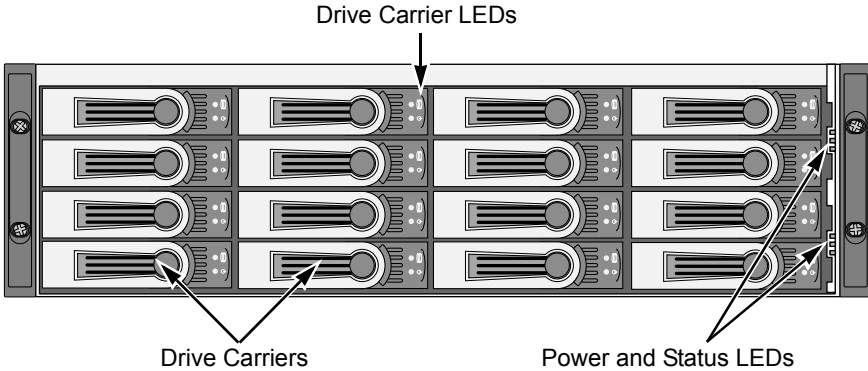


Figure 2. VTrak M310i front view (M210i is similar)

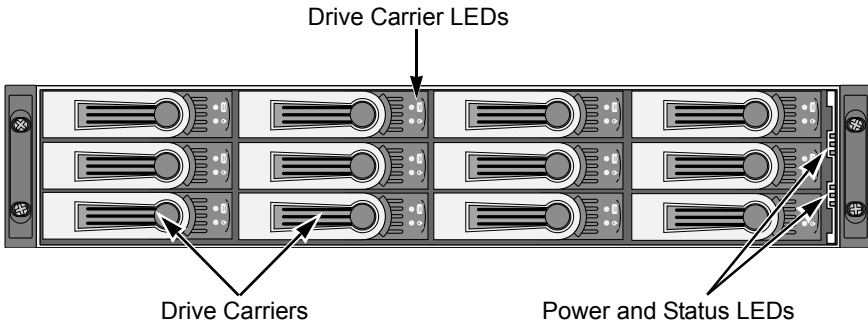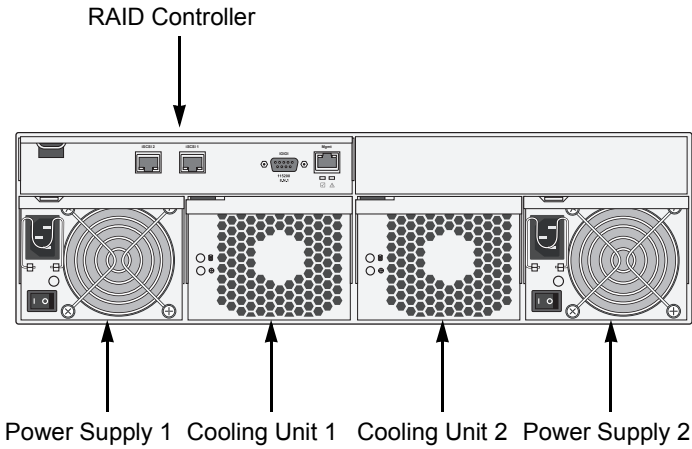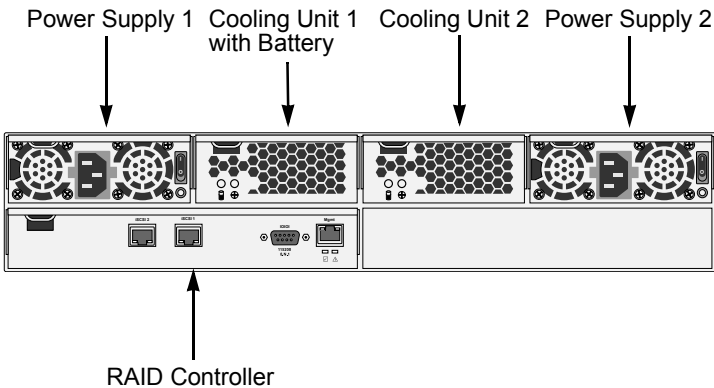

A defective drive may be replaced without interruption of data availability to the host computer. If so configured, a hot spare drive will automatically replace a failed drive, securing the fault-tolerant integrity of the logical drive. The self-contained hardware-based RAID logical drive provides maximum performance in a compact external chassis.

Figure 3. VTrak M610i rear view**Figure 4. VTrak M310i and M210i rear view**

Architectural Description

The VTrak M610i is a 3U enclosure designed for an IP-based Storage Area Network (IP SAN) and Direct Attached Storage (DAS). The M310i and M210i are 2U enclosures designed for an IP SAN or DAS.

The M610i, M310i, and M210i subsystems support:

- 1.5 Gb/s SATA disk drives
- 3.0 Gb/s SATA disk drives

All M-Class enclosures include a mid-plane, RAID controller, power and cooling units, and enclosure processor all in one cable-less chassis design. Multiple fans and power supplies provide redundancy to ensure continued usage during component failure. The RAID controller is hardware based and controls all logical drive functions transparently to the host system. VTrak appears to the computer's operating system as a standard SCSI drive or drives.

Features and Benefits

Highlights

- M610i: 16 hot-swappable drive bays in a robust 3U rackmount chassis with redundant, hot-swappable power and cooling modules
- M310i: 12 hot-swappable drive bays in a robust 2U rackmount chassis with redundant, hot-swappable power and cooling modules
- M210i: 8 hot-swappable drive bays in a robust 2U rackmount chassis with redundant, hot-swappable power and cooling modules
- Supports Serial ATA (SATA) 1.5 Gb/s and 3 Gb/s drives simultaneously in the same system
- Dual 1 Gb/s iSCSI host ports provide high-availability IP SAN
- Simplified remote management with a comprehensive embedded web-based management via Ethernet—WebPAM PROe. Command Line Interface/Utility via DB9 Serial Port
- Three years complete system limited warranty includes 24 x 7 email and phone support with highly experienced technical support technicians and an advanced replacements program
- Support for the latest RAID technology—RAID 6—Protection from a catastrophic double drive failure
- Resilient data protection features such as Predictive Data Migration™ and PerfectRAID™ provide rock solid data protection
- LUN Mapping and Masking bring flexibility for multiple application and OS support on the same storage subsystem
- Open architecture, industry's most comprehensive support for SATA hard drives and standards-based management interfaces including SNMP, CIM, and WBEM
- Support for the industry standard Disk Data Format (DDF from SNIA) ensures interoperability and drive roaming even among different RAID vendors

Subsystem and Controller Features

Drive Support: 3.5" x 1" hard disk drives: SATA II 3Gb/s and 1.5Gb/s.

Supports any mix of SATA II 3 Gb/s or 1.5 Gb/s drives simultaneously in the same system. Staggered physical drive spin-up.

External I/O Ports: Dual iSCSI 1 Gb/s host ports.

Data Cache: Shared 256 MB predictive data cache (expandable to 1 GB); Automatic write cache destaging.

Optional Battery Backup Unit (BBU) powers the data cache up to 72-hours in the event of a power failure.

Operational Features

RAID Levels: RAID 0, 1, 1E, 5, 6, 10, and 50 – Any combination of these RAID levels can exist at the same time.

Configurable RAID stripe size: 64 KB, 128 KB, 256 KB, 512 KB, and 1 MB stripe size per logical drive.

Background task priority tuning: Adjustment of minimum I/O reserved for server use during all background tasks.

Hot spares: Multiple global or dedicated hot-spare drives with revert option.

Maximum LUNs per subsystem: 256 in any combination of RAID levels.

Maximum LUNs per array: 32 logical drives (LUNs). Supports LUN carving by allowing an array to be divided into multiple logical drives. Supports out-of-order logical drive deletion and re-creation.

Max LUNs per Target ID: Up to 64, depending on host side driver and operating system.

LUN Masking and Mapping: Supports multiple hosts.

Disk Data Formats: Supports Disk Data Format (DDF) for industry-wide standardization and drive roaming between VTrak systems.

Background Activities: Media Patrol, background synchronizing, disk array rebuild, Redundancy Check, SMART condition pooling, Online Capacity Expansion (OCE), RAID Level Migration (RLM). Includes priority control, rate control, and watermarking per BGA in disk and NVRAM.

Foreground Activities: Disk array initialization.

Physical Drive Error Recovery: Predictive Data Migration (PDM), replaces unhealthy disk member in array, while maintaining normal array status during the

data transition. Bad Sector Mapping, Media Patrol, SMART, Hard/Soft Reset to recover HD from bad status, HD Power-control to recover HD from hung status.

Array Error Recovery: Data recovery from bad sector or failed HD for redundant RAID, RAID 5/6 inconsistent data Prevent (Write Hole Table), Data content Error Prevent (Read/Write Check Table) NVRAM event logging.

SCSI Commands: Supports extensive SCSI command set equivalent to SCSI/FC hard disk drives. Variable sector size (512 byte to 4 KB) to break OS 2TB limitation. 16 byte CDB support for 64-bit LBA addressing.

Management

Supported Operating Systems: Windows 2000 Server, Windows 2003 Server, Windows XP, Linux (Red Hat, SuSE), Macintosh OS X, Solaris.

Management Tools: WebPAM PROe via out-of-band Ethernet. OS independent, localized in multiple languages, SSL Security support. Command Line Interface (CLI) and Command Line Utility (CLU) via DB9 Serial Port or Telnet.

Standard Management Protocols: SNMP, WBEM/CIM

RAID Creation: Automatic, Express, and Advanced configuration support for novice to skilled users.

Management Interfaces: WebPAM PROe, CLU, CLI, audible (buzzer) and visible (LEDs) alarms.

Management Protocols: Embedded web server and management support—no host agent needed. Ethernet, DB9 serial port, SNMP, SSL, Telnet, Email.

Specifications

Current (maximum): 8 A @ 100 VAC or 4 A @ 240 VAC Current rating with two power cords.

Power Consumption: 73 W (not including disk drives).

Power Supply: M610i, 400 W; M310i, 360 W; M210i, 260 W

Dual power supplies, 100-240 VAC auto-ranging, 50-60 Hz, dual hot swap and redundant with PFC, N+1 design.

Operating Temperature: 5° to 40°C operational (-40° to 60°C non-operational)

Relative Humidity: Maximum 95 percent.

Vibration: Random, 0.21 grms, 5-500Hz, 30 Mins, X, Y, Z axis.

Dimensions (H x W x D):

M610i, 13.1 x 44.6 x 56.1 cm (5.2 x 17.6 x 22.1 in)

M210i, M310i, 8.9 x 44.6 x 56.1 cm (3.5 x 17.6 x 22.1 in)

Net Weight (subsystem only):

M610i, 26.7 kg (58.7 lb) without drives, 34.7 kg (76.3 lb) with 16 drives, assuming 0.5 kg (1.1 lb) per drive.

M310i, 25.00 kg (55.12 lbs) without drives; 30.0 kg (66.1 lbs) with 12 drives, assuming 0.5 kg (1.1 lb) per drive.

M210i, 23.0 kg (50.7 lbs) without drives; 28.0 kg (61.7 lbs) with 8 drives, assuming 0.5 kg (1.1 lb) per drive.

Gross Weight (including carton):

M610i, 30 kg (66.1 lb) without drives.

M310i,

M210i,

Safety: FCC Class B, VCCI, C-Tick, cUL, TUV, CB, BSMI.

Warranty and Support

Warranty: Three years complete system limited warranty.

Support: 24 x 7 email and phone support (Americas and EMEA only). 24 x 7 access to Promise support site for drivers, firmware, compatibility. Advanced replacements program.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Chapter 2: VTrak Installation

This chapter covers the following topics:

- Unpacking the VTrak (below)
- Mounting VTrak M610i in a Rack (page 10)
- Mounting VTrak M310i or M210i in a Rack (page 12)
- Installing Disk Drives (page 15)
- Making Management and Data Connections (page 18)
- Making Serial Cable Connections (page 20)
- Connecting the Power (page 21)

Unpacking the VTrak

The VTrak box contains the following items:

- VTrak Unit
- *Quick Start Guide*
- Null Modem Cable
- Left and right center-mount brackets
- Left and right mounting rails
- Screws for disk drives (36 for M210i; 52 for M310i; 70 for M610i; including 4 spares)
- 1.5m (4.9 ft) Power cords (2 for US and 2 for Europe)
- CD with SNMP files, *Product Manual* and *Quick Start Guide*



Warning

The electronic components within the VTrak disk array are sensitive to damage from Electro-Static Discharge (ESD). Observe appropriate precautions at all times when handling the VTrak or its subassemblies.



Important


Use the following categories of network cables with VTrak:

- Cat 6, preferred
 - Cat 5E, minimum
-

Mounting VTrak M610i in a Rack

The M610i subsystem installs to the rack using the supplied mounting rails. You can also use your existing rails.

Figure 1. VTrak M610i mounted in a rack with the supplied rails

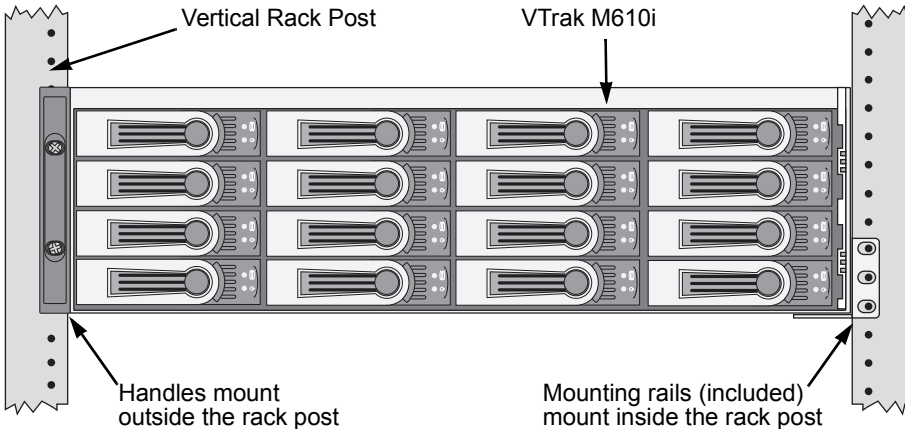

Cautions

- At least two persons are required to safely lift, place, and attach the VTrak subsystem into a rack system.
- Do not lift or move the VTrak subsystem by the handles, power supplies or the controller units. Hold the subsystem itself.
- Do not install the VTrak subsystem into a rack without rails to support the subsystem.
- Only a qualified electrician who is familiar with the installation procedure should mount and install the VTrak subsystem.
- Be sure all switches are OFF before installing the VTrak subsystem or exchanging components.


To install the M610i subsystem into a rack with the supplied mounting rails:

1. Check the fit of the mounting rails in your rack system. See Figure 2.
2. Adjust the length of the mounting rails as needed.
3. Attach the mounting rail assemblies to the outside of the rack posts, using the attaching screws from your rack system.

Be sure the support is on the bottom facing inward.

4. Square the rail assemblies in the rack.
5. Tighten the adjustment screws and the attaching screws.
6. Place the VTrak subsystem onto the rails.
7. Secure the VTrak subsystem to the rack through each handle, using the attaching screws from your rack system.


Figure 2. Rack mount assembly diagram

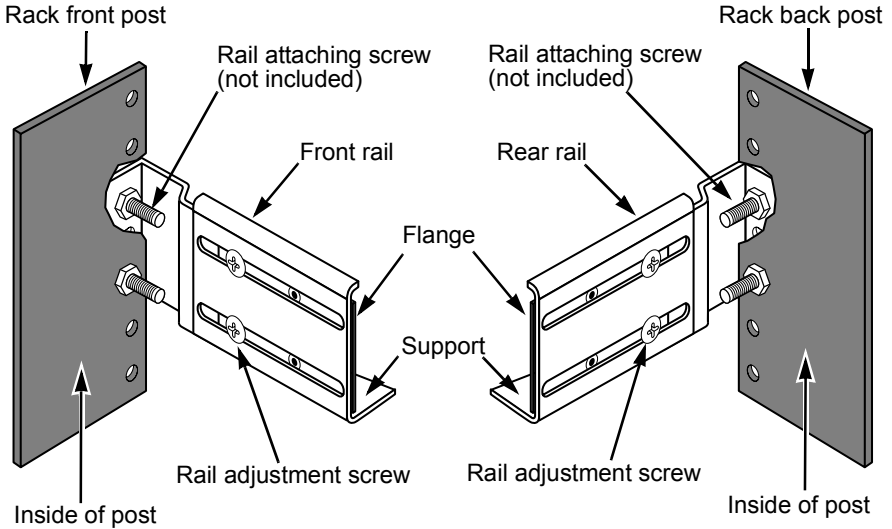

Mounting VTrak M310i or M210i in a Rack

The VTrak M310i or M210i subsystem installs to the rack using the supplied mounting rails. You can also use your existing rails.

Figure 3. Rackmounted VTrak M310i (M210i is similar)

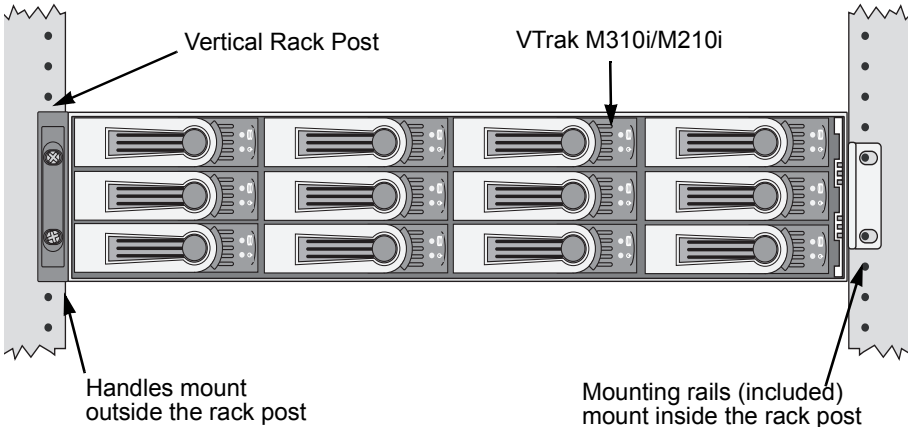

Cautions

- At least two persons are required to safely lift, place, and attach the VTrak subsystem into a rack system.
- Do not lift or move the VTrak subsystem by the handles, power supplies or the controller units. Hold the subsystem itself.
- Do not install the VTrak subsystem into a rack without rails to support the subsystem.
- Only a qualified electrician who is familiar with the installation procedure should mount and install the VTrak subsystem.
- Be sure all switches are OFF before installing the VTrak subsystem or exchanging components.

To install the M310i or M210i subsystem into a rack with the supplied mounting rails:

1. Check the fit of the mounting rails in your rack system. See Figure 5.
2. Slide the plates out of the mounting rails.
3. Attach one plate to each side of the VTrak subsystem.

Line-up the six holes in the plate with the corresponding holes in the subsystem. Attach each plate with six screws (included). See Figure 4.

4. Slide one of the rails over the plate on one side of the enclosure.
The rail is designed to slide freely over the plate.
5. Attach a flange to each end of the rail, with the rail on the opposite side of the flange from the two-hole bracket.
6. Install the rail adjustment screws (included) through the flange into the rail.
There are four screws for each flange. See Figure 5.
7. Place the subsystem with mounting rails into your rack system.
8. Attach the mounting rail assemblies to the outside of the rack posts, using the attaching screws from your rack system.
9. Square the rail assemblies in the rack.
10. Tighten the adjustment screws and the attaching screws.
11. Place the VTrak subsystem onto the rails.
12. Secure the VTrak subsystem to the rack through each handle, using the attaching screws from your rack system.

Figure 4. Sliding flange installation


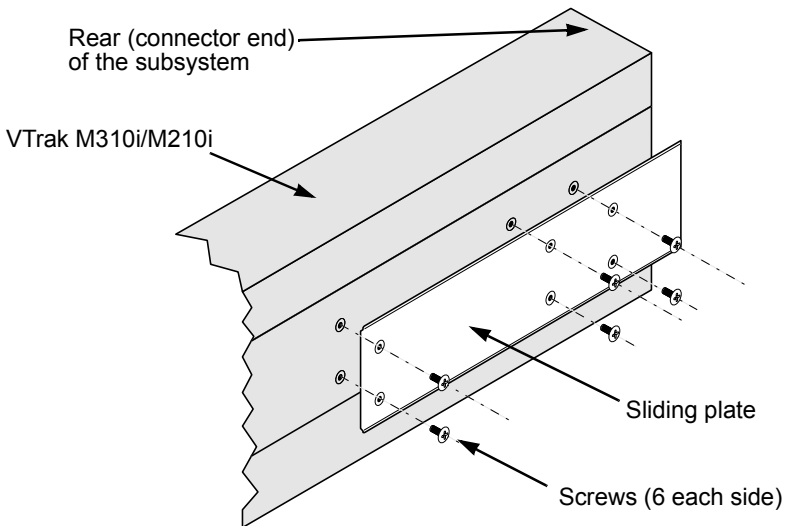


Figure 5. Mounting rail installation

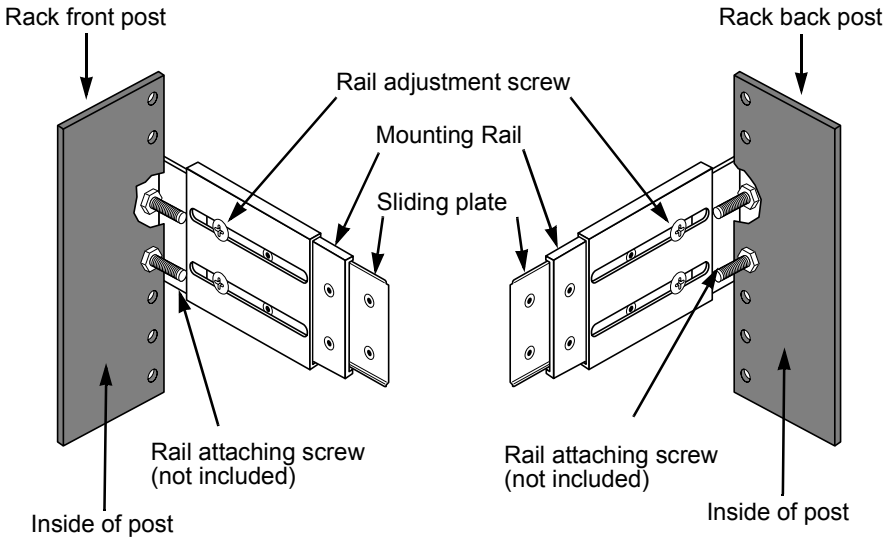

Installing Disk Drives

You can populate the VTrak with 3.5-inch, 1.5 Gb/s or 3.0 Gb/s SATA drives. For optimal performance, install physical drives of the same model and capacity. The drives' matched performance allows the logical drive to function better as a single drive. The table below shows the number of drives required for each RAID level.

Level	Number of Drives	Level	Number of Drives
RAID 0	1 or more	RAID 6	4 to 16
RAID 1	2 only	RAID 10	4 or more*
RAID 1E	2 or more	RAID 50	6 or more
RAID 5	3 to 16		

* Must be an even number of drives.



Note

Unlike other VTrak models, the M610i, M310i, and M210i do not support Parallel ATA disk drives. There is no PATA-to-SATA adapter available for these models.

Drive Slot Numbering

You can install any suitable disk drive into any slot in the enclosure. The diagram below shows how VTrak's drive slots are numbered. Slot numbering is reflected in the WebPAM PROe and CLU user interfaces.

Figure 6. VTrak M610i drive slot numbering


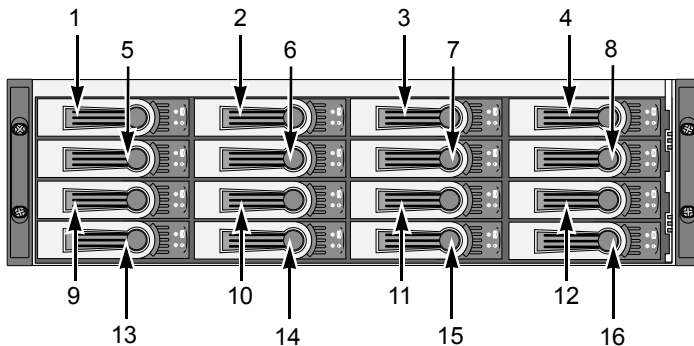


Figure 7. VTrak M310i drive slot numbering. The M210i is similar, with 8 drive carriers

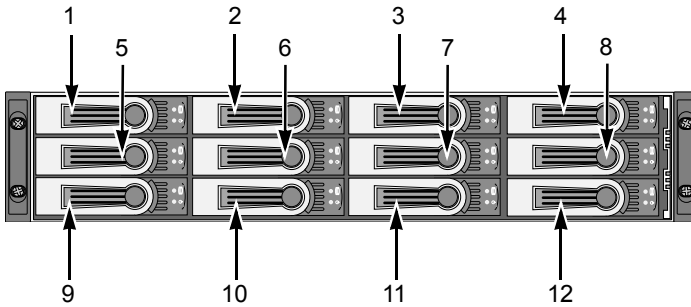

Install all of the drive carriers into the VTrak enclosure to ensure proper airflow, even if you do not populate all the carriers with disk drives.

Installing Disk Drives

1. Remove a disk drive carrier.
2. Carefully lay the disk drive into the drive carrier at the front, so that the screw holes on the bottom line up.
3. Insert the screws through the holes in the drive carrier and into the bottom of the disk drive. See Figure 8.
 - Install only the counter-sink screws supplied with the VTrak.
 - Install four screws per drive.
 - Snug each screw. Be careful not to over-tighten.
4. Reinstall the drive carrier into the VTrak chassis.

Repeat steps 1 through 4 until all of your disk drives are installed.

Figure 8. VTrak drive carrier mounting holes

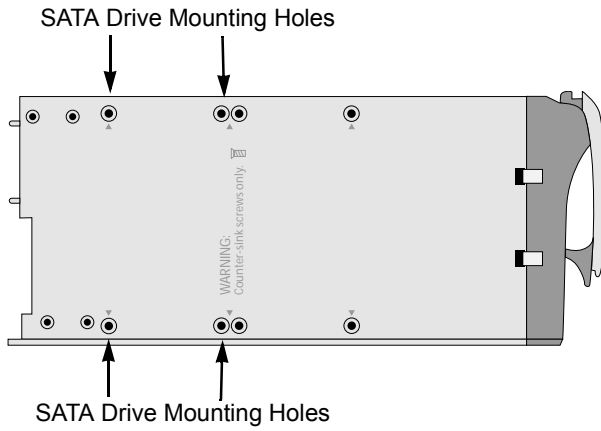


Figure 9. SATA Disk Drives mount at the front of the carrier



Making Management and Data Connections

Configuring an IP Storage Area Network

- A Gigabit Ethernet network interface card (GbE NIC) with iSCSI support (in hardware or software)
- A GbE Switch with iSCSI support
- A network switch
- A network interface card (NIC) in the PC

Data Path

To establish an isolated data path:


1. Connect the 1 GbE (iSCSI) NIC to your GbE switch.
2. Connect the VTrak Data Ports to your GbE switch.

Management Path

To establish the management path:

Connect the PC's standard network card and VTrak Management Port to your network switch.

Figure 10. VTrak IP SAN connections

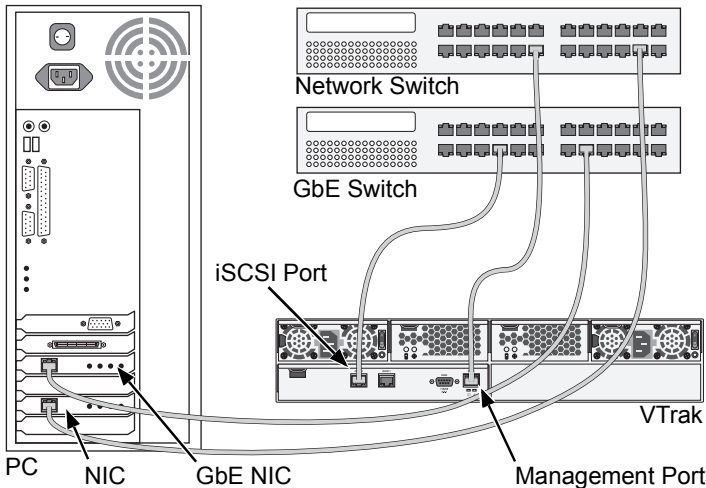

As an alternative, you can use the same GbE (iSCSI) NIC for your PC for management and data connections. However, combining management and data paths this way will reduce performance.

Configuring Direct Attached Storage

This arrangement requires:

- A Gigabit Ethernet network interface card (GbE NIC) with iSCSI support (in hardware or software)
- A network switch
- A network interface card (NIC) in the PC

Data Path

To establish the data path:


Connect the GbE (iSCSI) NIC in your PC to one of the VTrak Data Ports.

Management Path

To establish the management path:

Connect the PC's standard NIC and VTrak's Management Port to your network switch.


Figure 11. VTrak DAS connections

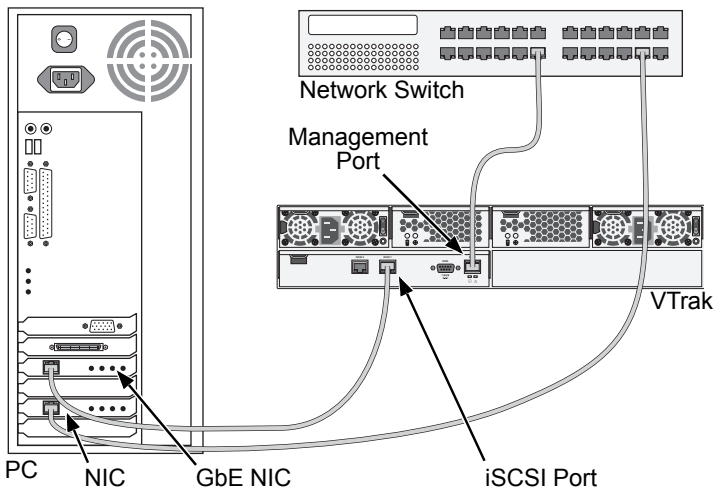

Making Serial Cable Connections

The RS-232 Serial connection enables the Command Line Interface (CLI) and Command Line Utility (CLU) on your PC to monitor and control VTrak.

Figure 12. Serial connector for VTrak M310i. The M610i and M210i are similar

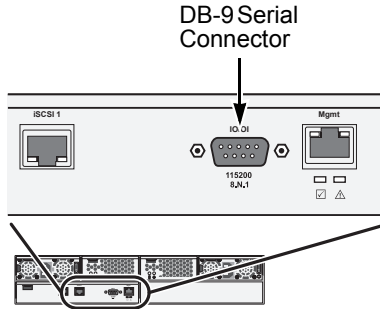

To set up a serial cable connection:

1. Attach a null-modem cable to the DB-9 connector on the VTrak.
2. Attach the other end of the null-modem cable to a serial port on the Host PC or Server.

You will establish a serial connection on the Host PC or Server (see page 23). At this time, continue with “Connecting the Power” on page 21.


Connecting the Power

Plug the power cords and switch on both power supplies on. When the power is switched on, the LEDs on the front of the VTrak will light up.

When boot-up is finished and the VTrak is functioning normally:


- Controller Heartbeat LED blinks green seven times in three seconds, goes dark for six seconds, then repeats the blink pattern.
- Power, FRU, and Logical Drive Status LEDs display green continuously.
- RAID Controller LED flashes green if there is activity on a iSCSI port.

Figure 13. VTrak front panel LED display. The M610i is shown

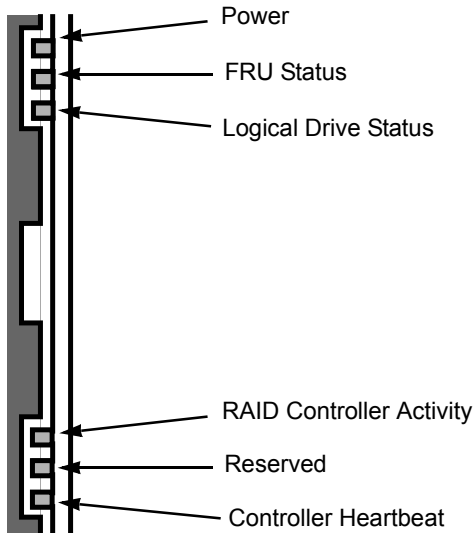

There are two LEDs on each Drive Carrier. They report the presence of power and a disk drive, and the current condition of the drive.

Figure 14. VTrak disk carrier LEDs

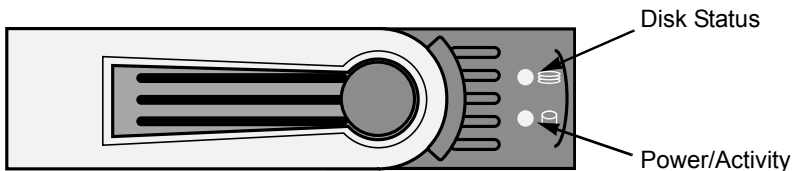

After a few moments the Power/Activity should display Green.

If there is no disk drive in the carrier, the Disk Status LED and the Power/Activity LED will remain dark.

The Power/Activity LED flashes during drive activity.

The Disk Status LED displays Green when a drive is present and configured.

Chapter 3: VTrak Setup

This chapter covers the following topics:

- Setting up the Serial Connection (below)
 - Choosing DHCP or a Static IP Address (page 24)
 - Setting up VTrak with the CLI (page 25)
 - Setting up VTrak with the CLU (page 27)
 - Creating Disk Arrays with WebPAM PROe (page 29)
-

Setting up the Serial Connection

VTrak has a Command Line Interface (CLI) to manage all of its functions, including customization. A subset of the CLI is the Command Line Utility (CLU), a user-level interface that manages your VTrak via your PC's terminal emulation program, such as Microsoft HyperTerminal. This procedure uses the serial cable connection you made. See "Making Serial Cable Connections" on page 20.

To set up the serial connection:

1. Change your terminal emulation program settings to match the following specifications:
 - Bits per second: 115200
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: none
2. Start your PC's terminal VT100 or ANSI emulation program.
3. Press Enter once to launch the CLI.
4. At the Login prompt, type **administrator** and press Enter.
5. At the Password prompt, type **password** and press Enter.

At this point, you are in the CLI. You can continue using the CLI to make network settings or you can switch to the CLU. Go to:

- Setting up VTrak with the CLI (page 25)
- Setting up VTrak with the CLU (page 27)

Choosing DHCP or a Static IP Address

When you setup your VTrak, you have the option of:

- Enabling DHCP and letting your DHCP server assign the IP address to the VTrak's Management Port.
- Specifying a static IP address for the VTrak's management port.

If you choose to enable DHCP, have your Network Administrator dedicate an IP address for the VTrak, linked to the VTrak's MAC address. This action will prevent the DHCP server from assigning a new IP address when the VTrak restarts, with the result that users can no longer log in.

Viewing MAC and IP Addresses in the CLI

To access the MAC and IP addresses for VTrak's Management Port using a serial connection and the CLI:

1. Start your PC's terminal VT100 or ANSI emulation program.
2. Press Enter once to launch the CLI.
3. At the Login prompt, type **administrator** and press Enter.
4. At the Password prompt, type **password** and press Enter.
5. At the administrator@cli> prompt, type **net -v** and press Enter.

All of the networking information displays, including the MAC and IP addresses.

Viewing MAC and IP Addresses in the CLU

To access the MAC and IP addresses for VTrak's Management Port using a serial connection and the CLU:

1. Start your PC's terminal VT100 or ANSI emulation program.
2. Press Enter once to launch the CLI.
3. At the Login prompt, type **administrator** and press Enter.
4. At the Password prompt, type **password** and press Enter.
5. At the administrator@cli> prompt, type **menu** and press Enter.
6. From the CLU Main Menu, highlight *Network Management* and press Enter.

The network port summary screen displays a list of components, including the IP address.

7. From the list of entries, highlight the *Mgmt* entry and press Enter.

All of the information for the Management Port displays, including the MAC address.

Setting up VTrak with the CLI

1. Type the following string to set the system date and time, then press Enter.
administrator@cli> date -a mod -d 2007/05/29 -t 14:50:05

In the above example, the date and time are included as examples only. Your values will be different. Use yyyy/mm/dd for the date and a 24-hour clock for the time.

2. Type the following string to set the Management Port IP address and other settings, then press Enter.

```
administrator@cli> net -a mod -t mgmt -s "primaryip=192.168.10.87,
primaryipmask=255.255.255.0, gateway=192.168.10.1"
```

In the above example, the IP addresses and subnet mask are included as examples only. Your values will be different.

If you prefer to let your DHCP server assign the IP address, type the following string, then press Enter.

```
administrator@cli> net -a mod -t mgmt -s "dhcp=enable"
```

Note that the IP address described above belongs to the VTrak subsystem, not to the RAID controller. Use this IP address to log into the VTrak over your network.

3. To verify the settings, type **net** and press Enter.

```
administrator@cli> net
```

```
=====
CId Port Type IP Mask Gateway Link
=====
1 1 Mgmt 192.168.10.87 255.255.255.0 192.168.10.1 Up
1 1 iSCSI 10.0.10.1 255.0.0.0 0.0.0.0 Down
1 2 iSCSI 10.0.10.2 255.0.0.0 0.0.0.0 Down
```

4. Type the following string to set the iSCSI Port IP address and other settings, then press Enter.

```
administrator@cli> net -a mod -t iSCSI -p 1 -s
"primaryip=192.168.10.88, primaryipmask=255.255.255.0,
gateway=192.168.10.3"
```

If you prefer to let your DHCP server assign the IP address, type the following string, then press Enter.

```
administrator@cli> net -a mod -t iSCSI -p 1 -s "dhcp=enable"
```

5. To verify the settings, type **net**, and press Enter.

```
administrator@cli> net
```

```
=====
CIId Port Type IP Mask Gateway Link
=====
1 1 Mgmt 192.168.10.87 255.255.255.0 192.168.10.1 Up
1 1 iSCSI 192.168.10.88 255.255.255.0 192.168.10.1 Up
1 2 iSCSI 10.0.10.2 255.0.0.0 0.0.0.0 Down
```

6. Repeat steps 3 and 4 to set the other iSCSI port. Use **-p 2** in place of **-p 1**.


To see the full set of CLI commands, at the `admin@cli>` prompt, type **help** and press Enter.

This completes the Management and iSCSI Port setup. Go to “Creating Disk Arrays with WebPAM PROe” on page 29.

Setting up VTrak with the CLU

1. At the administrator@cli> prompt, type **menu** and press Enter.
The CLU main menu appears.

Figure 1. CLU main menu

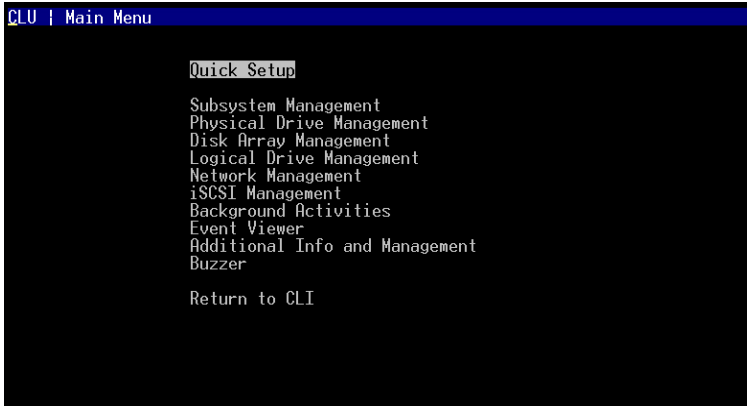

2. With *Quick Setup* highlighted, press Enter.
The first Quick Setup screen enables you to make Date and Time settings.

Setting system date and time

1. Press the arrow keys to highlight *System Date*.
2. Press the backspace key to erase the current date.
3. Type the new date.
4. Follow the same procedure to set the System Time.
5. Press Ctrl-A to save these settings and move to the Management Port configuration screen.

Making Management Port settings

By default, DHCP is disabled on VTrak and the default Management Port IP address is set to 10.0.0.1. The TCP Port is set to 2300.

Use a new Management Port IP address to log into the VTrak over your network.

Manual IP settings

To make Management Port settings manually:

1. Press the arrow keys to highlight *IP Address*.
2. Press the backspace key to erase the current IP Address.
3. Type the new IP Address.

4. Follow the same procedure to specify the Subnet Mask, Gateway IP Address and DNS Server IP Address.
If you do not have a DNS server, skip the DNS Server IP address.
5. Press Ctrl-A to save these settings and move to the iSCSI Port 1 screen.

Automatic IP settings

To make Management Port settings automatically:

1. Press the arrow keys to highlight *DHCP*.
2. Press the spacebar to toggle to *Enable*.
3. Press Ctrl-A to save these settings and move to the iSCSI Port 1 screen.

Making iSCSI Data Port settings

Manual IP settings

To make iSCSI Data Port settings manually:

1. Press the arrow keys to highlight *IP Address*.
2. Press the backspace key to erase the current IP Address.
3. Type the new IP Address.
4. Follow the same procedure to specify the Subnet Mask, Gateway IP Address and DNS Server IP Address.
If you do not have a DNS server, skip the DNS Server IP address.
5. Press Ctrl-A to save these settings and move to the iSCSI Port 2 screen.
6. Follow the same procedure to make settings for iSCSI Port 2.
7. Press Ctrl-A to save these settings.

Automatic IP settings

To make iSCSI Data Port settings automatically:

1. Press the arrow keys to highlight *DHCP*.
2. Press the spacebar to toggle to *Enable*.
3. Press Ctrl-A to save these settings and move to the iSCSI Port 2 screen.
4. Follow the same procedure to make settings for iSCSI Port 2.
5. Press Ctrl-A to save these settings.

Exiting the CLU

1. Highlight *Skip the Step and Finish* and press Enter.
2. Highlight *Return to CLI* and press Enter.

This completes the Management and iSCSI Port setup. Go to “Creating Disk Arrays with WebPAM PROe” on page 29.

Creating Disk Arrays with WebPAM PROe



Note

You can also use the CLU to create disk arrays and logical drives. See “Creating a Disk Array” on page 147 for more information.

Setting up disk arrays with WebPAM PROe consists of the following actions:

- Logging into WebPAM PROe (below)
- Selecting a Language (page 31)
- Creating a Disk Array (page 31)
- Logging out of WebPAM PROe (page 35)
- Using WebPAM PROe over the Internet (page 36)
- Optional. Obtaining a Security Certificate (page 36)

Logging into WebPAM PROe

1. Launch your Browser.
2. In the Browser address field, type in the IP address of the VTrak subsystem. Use the IP address you set in the CLI (page 25) or CLU (page 27). Note that the IP address shown below is only an example. The IP address you type into your browser will be different.

Regular Connection

- WebPAM PROe uses an HTTP connection. http://
- Enter the VTrak’s Management Port IP address 192.168.1.105

Together, your entry looks like this:

http://192.168.1.105

Secure Connection

- WebPAM PROe uses a secure HTTP connection. https://
- Enter the VTrak’s Management Port IP address 192.168.1.105

Together, your entry looks like this:

https://192.168.1.105




Note

Whether you select a regular or a secure connection, your login to WebPAM PROe and your user password are always secure.

3. When the log-in screen (Figure 2) appears:
 - Type **administrator** in the User Name field.
 - Type **password** in the Password field.
 - Click the **Login** button.The User Name and Password are case sensitive.
4. Click the **Login** button.

Figure 2. WebPAM PROe log-in screen

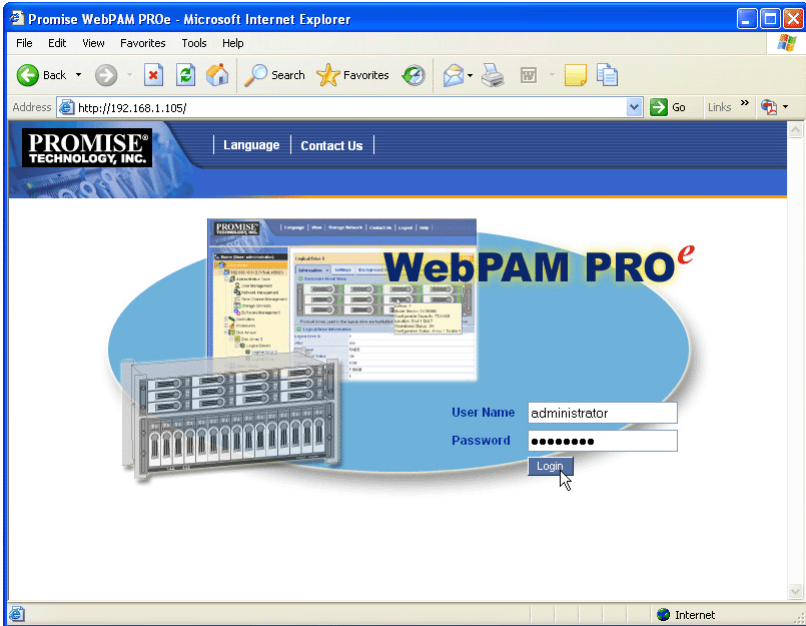

After sign-in, the WebPAM PROe opening screen appears. If there are any unconfigured physical drives in the enclosure, an Array Configuration menu will also appear. See page 31.



Note

Make a Bookmark (Netscape Navigator) or set a Favorite (Internet Explorer) of the Login Screen so you can access it easily next time.

Selecting a Language

WebPAM PROe displays in English, German, French, Italian, Japanese, Chinese Traditional, Chinese Simple, and Korean.

1. Click **Language** on the WebPAM PROe Header.
The language list appears in the Header.
2. Click the language you prefer.
The WebPAM PROe user interface displays in the selected language.

Figure 3. Clicking “Language” on the WebPAM PROe Header



Creating a Disk Array

On a newly activated VTrak subsystem, there are no disk arrays or logical drives. To create a disk array:


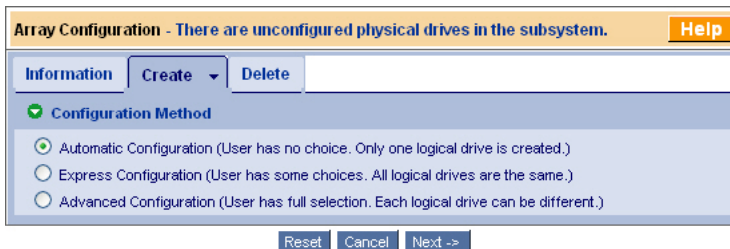
1. Click the Disk Arrays  icon, then click the Create tab.
The Array Configuration menu appears. See Figure 4.
2. Choose one of the options:
 - **Automatic** – Creates a new disk array based on a default set of parameters, including one logical drive. The number of unconfigured physical drives available determines the RAID level of the disk array and whether a spare drive is created. See page 32.
 - **Express** – Creates a new disk array based on the characteristics you specify. You can create multiple logical drives. However, all of the logical drives will be the same size and RAID level. See page 33.
 - **Advanced** – Enables you to directly specify all parameters for a new disk array and its logical drives. See page 34.
3. Click the **Next** button.

Figure 4. The Array Configuration menu



Automatic

When you choose the Automatic option, the following parameters appear on the screen:

- **Disk Arrays** – The number of physical drives in the disk array, their ID numbers, configurable capacity, and the number of logical drives to be created
- **Logical Drives** – The ID number of the logical drive(s), their RAID level, capacity, and stripe size
- **Spare Drives** – The physical drive slot number of the dedicated hot spare assigned to this disk array. A hot spare drive is created for all RAID levels except RAID 0, when five or more unconfigured physical drives are available

If you accept these parameters, click the **Submit** button.

The new disk array appears in the Disk Array List on the Information tab.

If you do NOT accept these parameters, use the Express (page 33) or Advanced (page 34) option to create your disk array.

Express

When you choose the Express option, a set of characteristics and options appears on the screen.

1. Check the boxes to select any one or a combination of:
 - **Redundancy** – The array will remain available if a physical drive fails
 - **Capacity** – The greatest possible amount of data capacity
 - **Performance** – The highest possible read/write speed
 - **Spare Drive** – A hot spare drive is created when you select Redundancy, Spare Drive, and five or more unconfigured physical drives are available
2. In the Number of Logical Drives field, enter the number of logical drives you want to make from this disk array.
The maximum possible number of logical drives appears to the right of this field.
3. From the Application Type menu, select an application that best describes your intended use for this disk array:
 - File Server
 - Video Stream
 - Transaction Data
 - Transaction Log
 - Other

4. Click the **Update** button.

Or check the Automatic Update box and updates will occur automatically.

The following parameters display:

- **Disk Arrays** – The number of physical drives in the disk array, their ID numbers, configurable capacity, and the number of logical drives to be created
- **Logical Drives** – The ID number of the logical drive(s), their RAID level, capacity, and stripe size
- **Spare Drives** – The physical drive ID number of the dedicated hot spare assigned to this disk array (all RAID levels except RAID 0)

If you accept these parameters, proceed to the next step.

If you do NOT accept these parameters, review and modify your selections in the previous steps.

5. When you are done, click the **Submit** button.

The new disk array appears in the Disk Array List on the Information tab.

Advanced



Note

For an explanation of the parameters under the Advanced option, see “Chapter 7: Technology Background” on page 219.

When you choose the Advanced option, the *Step 1 – Disk Array Creation* screen displays.

Step 1 – Disk Array Creation

1. Enter a name for the disk array in the field provided.
2. Check the box if you want to enable Media Patrol.
For more information, see “Media Patrol” on page 238.
3. Check the box if you want to enable PDM.
For more information, see “Predictive Data Migration (PDM)” on page 238.
4. Highlight physical drives you want in the disk array from the Available list and press the >> button to move them to the Selected list.
You can also double-click them to move them.
5. When you are done, click the **Next** button.

Step 2 – Logical Drive Creation

Logical Drive Creation enables you to specify logical drives under the new disk array. Enter the information for a logical drive, then click the **Update** button. If there is free capacity remaining, you can specify another logical drive now or wait until later.

6. Enter an alias for the logical drive in the field provided.
7. Choose a RAID level for the logical drive from the dropdown menu.
The choice of RAID levels depends the number of physical drives you selected.
8. RAID 50 only – Specify the number of axles for your array.
For more information on axles, see “RAID 50 Axles” on page 226.
9. Specify a Capacity and the unit of measure (MB, GB, TB).
This value will be the data capacity of the first logical drive in your new disk array. If you specify less than disk array's maximum capacity, the remainder will be available for additional logical drives which you can create later.
10. Specify a Stripe size from the dropdown menu.
64 KB, 128 KB, 256 KB, 512 KB, and 1 MB are available. 64 KB is the default.
11. Specify a Sector size from the dropdown menu.

For iSCSI, use the 512 B default.

12. Specify a Read (cache) Policy from the dropdown menu.
Read Cache, Read Ahead Cache, and No Cache are available. Read Ahead is the default.
13. Specify a Write (cache) Policy from the dropdown menu.
Write Back and Write Through (Thru) are available. Write Back is the default.
14. Click the **Update** button.
A new logical drive is displayed under New Logical Drives.
Repeat the above steps to specify additional logical drives as desired.
15. When you are done specifying logical drives, click the **Next** button.

Step 3 – Summary

The Summary lists the disk array and logical drive information you specified.

16. To proceed with disk array and logical drive creation, click the **Submit** button.

Logging out of WebPAM PROe

There are two ways to log out of WebPAM PROe:

- Close your browser window
- Click **Logout** on the WebPAM PROe banner

Figure 5. Clicking “Logout” on the WebPAM PROe banner



Clicking **Logout** brings you back to the Login Screen. See page 30.

After logging out, you must enter your user name and password in order to log in again.

Using WebPAM PROe over the Internet

The above instructions cover connections between VTrak and your company network. It is also possible to connect to a VTrak from the Internet.

Your MIS Administrator can tell you how to access your network from outside the firewall. Once you are logged onto the network, you can access the VTrak using its IP address.

While only a iSCSI-capable PC can read and write data to the logical drives on the VTrak, other PCs can monitor the VTrak from virtually any location.

Obtaining a Security Certificate

Promise Technology provides a default security certificate for the web server as well as for internal data communication. However, in most cases it is better to install and verify your own certificate. And, if possible, verify your certificate through a certificate authority, such as Verisign or Thwate. See your MIS Administrator for guidance.

To download your security certificate to WebPAM PROe, see “Making Web Server Settings” on page 77.

Chapter 4: Management with WebPAM PROe

This chapter covers the following topics:

- Logging into WebPAM PROe (page 38)
- Selecting a Language (page 40)
- Perusing the Interface (page 41)
- Logging out of WebPAM PROe (page 45)
- Working with the Storage Network (page 46)
- Working with Subsystems (page 47)
- Managing Users (page 57)
- Managing the Network Connection (page 62)
- Managing iSCSI Connections (page 67)
- Managing Storage Services (page 73)
- Managing Software Services (page 76)
- Exporting the User Database (page 84)
- Importing a User Database (page 85)
- Updating the Firmware (page 86)
- Restoring Factory Defaults (page 87)
- Clearing Statistics (page 88)
- Shutting Down the Subsystem (page 89)
- Restarting the Subsystem (page 90)
- Managing Controllers (page 91)
- Managing Enclosures (page 95)
- Managing Physical Drives (page 100)
- Managing Disk Arrays (page 105)
- Managing Logical Drives (page 118)
- Managing Spare Drives (page 125)
- Working with the Logical Drive Summary (page 129)

For information about VTrak's audible alarm and LEDs, see "Chapter 8: Troubleshooting" on page 243.

Logging into WebPAM PROe

In order to log into WebPAM PROe, you must first setup a network connection between your Host PC and the VTrak subsystem, as described in “Chapter 3: VTrak Setup” on page 23.

To log into WebPAM PROe:

1. Launch your Browser.
2. In the Browser address field, type in the IP address of the VTrak Management port.

Note that the IIP address shown below is only an example. The IP address you type into your browser will be different.

Regular Connection

- WebPAM PROe uses an HTTP connection.http://
- Enter the VTrak’s Management Port IP address 192.168.1.105

Together, your entry looks like this:

http://192.168.1.105

Secure Connection

- WebPAM PROe uses a secure HTTP connection.https://
- Enter the VTrak’s Management Port IP address 192.168.1.105

Together, your entry looks like this:

https://192.168.1.105



Note

Whether you select a regular or a secure connection, your login to WebPAM PROe and your user password are always secure.

3. When the log-in screen (Figure 1) appears:
 - Type **administrator** in the User Name field.
 - Type **password** in the Password field.
 - Click the **Login** button.

The User Name and Password are case sensitive.

4. Click the **Login** button.

Figure 1. The WebPAM PROe log-in screen



Selecting a Language

WebPAM PROe displays in English, German, French, Italian, Japanese, Chinese Traditional, Chinese Simple, and Korean.

1. Click **Language** the WebPAM PROe Header.
The language list appears in the Header.
2. Click the language you prefer.
The WebPAM PROe user interface displays in the selected language.

Figure 2. Clicking “Language” in the Header



Perusing the Interface

WebPAM PROe is browser-based RAID management software with a graphic user interface.

Figure 3. WebPAM PROe interface

The screenshot shows the WebPAM PROe interface in a Microsoft Internet Explorer browser window. The browser title is "Promise WebPAM PROe - Microsoft Internet Explorer". The address bar shows "http://192.168.20.52/screen.php". The interface has a blue header with the "WebPAM Header" and navigation links: "Language", "View", "Storage Network", "Contact Us", "Logout", "Help", and "About". Below the header is a "Subsystem" and "Function Tab" section. The left sidebar shows a "Tree View" with a "Subsystems" folder expanded to show "192.168.20.52 (VTrak M610p)", "Administrative Tools", "Controllers", "Enclosures", "Disk Arrays", "Disk Array 0", "Logical Drives", "Spare Drives", and "Logical Drive Summary". The main content area is titled "Disk Array 0" and has tabs for "Information", "Settings", "Create LD", "Delete LD", "Background Activities", and "Transport". The "Information" tab is active, showing an "Enclosure Front View" with a grid of disk drives. Below this is a "Management View" table with the following data:

Property	Value
Disk Array ID	0
Alias	Daniel
Operational Status	OK
Total Physical Capacity	145.94GB
Configurable Capacity	137.84GB

At the bottom of the interface is an "Event Frame" showing a log of events. The log is dated "Mon, Dec 11, 2006 09:52:23" and has a "Max: Events Display" of 20. The log contains the following entries:

#	Device	Event ID	Severity	Time	Description
145	DA 0	0x00130004	Info	Dec 11, 2006 09:49:14	Disk array settings have been changed
144	DA 0	0x000C0001	Info	Dec 7, 2006 18:38:53	RAID migration has completed
143	DA 0	0x000C0000	Info	Dec 7, 2006 17:38:32	RAID migration has started
142	LD 0	0x00090000	Info	Dec 7, 2006 17:36:41	A new Logical drive has been created
141	DA 0	0x00130000	Info		New disk array has been created
140	PD 6	0x000D0000	Info		Physical Disk is marked online
139	Ctrl 1	0x00040007	Info	Dec 7, 2006 15:52:23	The controller parameter(s) are changed by user
138	PD 10	0x000D0005	Info	Dec 7, 2006 13:33:53	Global Spare has been deleted
137	DA 0	0x00130001	Info	Dec 7, 2006 13:33:07	Disk array has been deleted

There are four major parts to the graphic user interface:

- Header (see page 42)
- Tree (see page 43)
- Management View (see page 44)
- Event Frame (see page 44)

Using the Header


The Header contains the following items:

- **Language** – To change languages, see “Selecting a Language” on page 40.
- **View** – To view the Event Frame, see “Viewing the Event Frame” on page 44.
- **Storage Network** – To view all of the VTrak subsystem enclosures currently accessible the network, see “Working with the Storage Network” on page 46.
- **Contact Us** – Click **Contact Us** for a list of contact information, including Technical Support. Also see “Contacting Technical Support” on page 285.
- **Logout** – To logout of WebPAM PROe, see “Logging out of WebPAM PROe” on page 45
- **Help** – Click **Help** in the Header to access the main online help menu.
- **About** – Click About in the Header to display the WebPAM PROe software version and build date.

Using Tree View

Tree View enables you to navigate around all components of the Subsystem, including iSCSI management, network and service management, RAID controller, enclosure, physical drives, disk arrays, logical drives, and spare drives. The figure below shows the components of Tree View.

Figure 4. WebPAM PROe Tree View

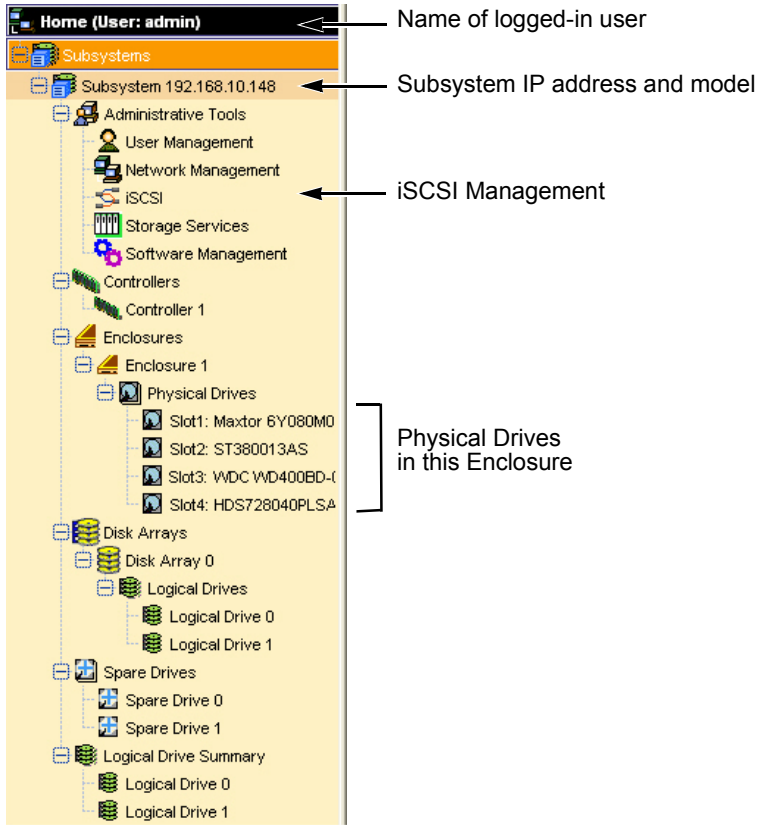

The Administrative Tools section is different for the Super User than for other users. The remainder of the Tree is the same for all users.

Management View displays information according to the item you select in Tree View.

Using Management View

Management View provides the actual user interface with the VTrak, including creation, maintenance, deletion, and monitoring of disk arrays and logical drives.

Function Tabs control specific actions and processes. This window changes depending on which item you select in Tree View and which tab you select in Management View itself.

Click the **Help** button in Management View to access online help for the function that is currently displayed.

Viewing the Event Frame

To view the Event Frame:

1. Click **View** in the Header.
2. Click the *Show Event Frame* popup option.
The VTrak user interface will display the Event Frame below Management View.
3. Click **View** again to hide the Event Frame.

In the event frame, events are listed and sorted by:

- **Item Number** – A consecutive decimal number assigned to a specific event
- **Device** – Battery, controller, logical drive, physical drive, port, etc.
- **Event ID** – The hexadecimal number that identifies the specific type of event
- **Severity** – Information, Warning, Minor, Major, Critical, and Fatal. The severity level is user-specified. See “Setting-up User Event Subscriptions” on page 58.
- **Time** – Time and date of the occurrence
- **Description** – A brief description of the event

Sorting Events

You can sort the events by Item Number, Device, Event ID, Severity, Time and Date, or Description.

Click the link at the top of the column by which you want to sort the events. After you click the item, a triangle icon appears.

- If the triangle points upward, the column is sorted low-to-high or old-to-new.
- If the triangle points downward, the column is sorted high-to-low or new-to-old.

Click the link a second time to change to flip the triangle and reverse the sort sequence.

Logging out of WebPAM PROe

There are two ways to log out of WebPAM PROe:

- Close your browser window
- Click Logout the WebPAM PROe banner (below)

Figure 8. Clicking “Logout” in the Header



Clicking **Logout** brings you back to the Login Screen. After logging out, you must enter your user name and password in order to log in again.

Working with the Storage Network

When you log into WebPAM PROe, you access a specific VTrak subsystem. See “Logging into WebPAM PROe” on page 38.

The Storage Network feature enables you to access all of the VTrak subsystems with a Management Port connection to your network.

Each VTrak subsystem is identified by its Management Port IP address.

Storage Network functions include:

- Viewing other subsystems
- Updating the list of subsystems
- Logging into a subsystem
- Hiding the other subsystems

Viewing Other Subsystems

To view the other VTrak subsystems the Storage Network:

1. Click **Storage Network** in the Header.
2. Click the *Show Network Subsystems* popup option.

The list will show all subsystems the network at the time the GUI was launched.


Updating the List of Subsystems

To update the list of the VTrak subsystems the Storage Network:

Click the **Discover** button at the bottom of the subsystem list.

Logging into a Subsystem

To log into any of the displayed VTrak subsystems:

1. In Tree View, click the Subsystem  icon of the subsystem you want to see.
If your user name and password do not match the subsystem you are logging into, the log in screen will appear.
2. Log into the new subsystem, as needed.

Hiding the Other Subsystems

To hide the other VTrak subsystems the Storage Network:


1. Click **Storage Network** in the Header.
2. Click the *Hide Network Subsystems* popup option.

Working with Subsystems

A VTrak subsystem is identified by its Management Port IP address. Subsystem functions include:


- Viewing Subsystem Information (page 47)
- Setting an Alias for the Subsystem (page 47)
- Setting Subsystem Date and Time (page 48)
- Viewing the Runtime Event Log (page 48)
- Saving the Runtime Event Log (page 49)
- Clearing the Runtime Event Log (page 49)
- Viewing NVRAM Events (page 49)
- Saving NVRAM Events (page 50)
- Clearing NVRAM Events (page 50)
- Viewing Current Background Activities (page 50)
- Making Background Activity Settings (page 51)
- Running Background Activities (page 52)
- Running Media Patrol (page 52)
- Running PDM (page 52)
- Viewing Scheduled Activities (page 53)
- Scheduling an Activity (page 53)
- Deleting a Scheduled Activity (page 54)
- Viewing Lock Status (page 54)
- Setting the Lock (page 55)
- Renewing the Lock (page 55)
- Releasing the Lock (page 55)

Viewing Subsystem Information

To view information about a subsystem, click the Subsystem  icon in Tree View. Management View displays the subsystem information.

Setting an Alias for the Subsystem

An alias is optional. To set an alias for this subsystem:


1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Settings tab.
3. Enter a name into the Alias field.

Maximum of 48 characters. Use letters, numbers, space between words, and underscore.

4. Click the **Submit** button.


Setting Subsystem Date and Time

To set a Date and Time for this subsystem:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Settings tab dropdown menu and select *Date and Time Settings*.
3. Under Subsystem Date, select the Month and Day from the dropdown menus.
4. Type the current year into the Year field.
5. Under Subsystem Time, select the Hour, Minutes and Seconds from the dropdown menus.
6. Click the **Submit** button.

Viewing the Runtime Event Log

Runtime Events lists information about the 1024 most recent runtime events recorded since the system was started. To view runtime events:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Events tab dropdown menu and select *Runtime Events*.

Events are displayed by:


- **Item Number** – A consecutive decimal number assigned to a specific event
 - **Device** – Battery, controller, logical drive, physical drive, port, etc.
 - **Event ID** – The hexadecimal number that identifies the specific type of event
 - **Severity** – Information, Warning, Minor, Major, Critical, and Fatal. The severity level is user-specified. See “Setting-up User Event Subscriptions” on page 58.
 - **Time** – Time and date of the occurrence
 - **Description** – A brief description of the event
3. Click the link at the top of the column by which you want to sort the events. After you click the item, a triangle icon appears.
 - If the triangle points upward, the column is sorted low-to-high or old-to-new.

- If the triangle points downward, the column is sorted high-to-low or new-to-old.

Click the link a second time to change to flip the triangle and reverse the sort sequence.


Saving the Runtime Event Log

To save the runtime event log as a text file:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Events tab dropdown menu and select *Runtime Events*.
3. Click the **Save Event Log** button.
4. In the File Download dialog box, click the **Save** button.
5. In the Save dialog box, name the file, navigate to the folder where you want to save the log file, and click the **Save** button.


Clearing the Runtime Event Log

To clear the runtime event log:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Events tab dropdown menu and select *Runtime Events*.
3. Click the **Clear Event Log** button.
4. In the Confirmation dialog box, type **confirm** and click the **OK** button.

Viewing NVRAM Events

NVRAM Events lists information about the 191 most recent important events. NVRAM events are stored in non-volatile memory. To view runtime events:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Events tab dropdown menu and select *System Events in NVRAM*.


Events are displayed by:

- **Item Number** – A consecutive decimal number assigned to a specific event
- **Device** – Battery, controller, logical drive, physical drive, port, etc.
- **Event ID** – The hexadecimal number that identifies the specific type of event

- **Severity** – Information, Warning, Minor, Major, Critical, and Fatal. The severity level is user-specified. See “Setting-up User Event Subscriptions” on page 58.
 - **Time** – Time and date of the occurrence
 - **Description** – A brief description of the event
3. Click the link at the top of the column by which you want to sort the events. After you click the item, a triangle icon appears.
 - If the triangle points upward, the column is sorted low-to-high or old-to-new.
 - If the triangle points downward, the column is sorted high-to-low or new-to-old.
- Click the link a second time to change to flip the triangle and reverse the sort sequence.


Saving NVRAM Events

To save the NVRAM event log as a text file:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Events tab dropdown menu and select *System Events in NVRAM*.
3. Click the **Save Event Log** button.
4. In the File Download dialog box, click the **Save** button.
5. In the Save dialog box, name the file, navigate to the folder where you want to save the log file, and click the **Save** button.


Clearing NVRAM Events

To clear the NVRAM event log:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Events tab dropdown menu and select *System Events in NVRAM*.
3. Click the **Clear Event Log** button.
4. In the Confirmation dialog box, type **confirm** and click the **OK** button.

Viewing Current Background Activities


To view the current background activities:

1. In Tree View, click the Subsystem  icon.
 2. In Management View, click the Background Activities tab.
- A list of current background activities appears, including:

- Rebuild
- PDM – Predictive Data Migration
- Synchronization
- Redundancy Check
- Migration
- Transition
- Initialization
- Media Patrol

Making Background Activity Settings

To make settings for background activities:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Background Activities tab and select *Settings* from the dropdown menu.
3. Click the dropdown menu to choose a priority of *Low*, *Medium*, and *High* for the following functions:
 - Rebuild – Rebuilds the data from a failed drive in a disk array
 - Synchronization – Checks the data integrity on disk arrays
 - Initialization – Sets all data bits in the logical drive to zero
 - Redundancy Check – Checks, reports and can correct data inconsistencies in logical drives
 - Migration – Change RAID level or add physical drives to disk arrays
 - PDM – Looks for bad blocks the physical drives of disk arrays
 - Transition – Returns a revertible spare drive to spare status

The rates are defined as follows:


- Low – Fewer resources to activity, more to data read/write.
 - Medium – Balance of resources to activity and data read/write.
 - High – More resources to activity, fewer to data read/write.
4. Highlight the following PDM trigger settings and type a value into the corresponding field:
 - Reassigned Block Threshold – 1 to 512 blocks
 - Error Block Threshold – 1 to 1024 blocks
 5. Check to enable or uncheck to disable the following functions:
 - Media Patrol – Checks the magnetic media on physical drives
 - Auto Rebuild – If there is a spare drive of adequate capacity, a critical disk array will begin to rebuild automatically. If not spare drive is

available, the disk array will begin to rebuild as soon as you replace the failed physical drive with an unconfigured physical drive of equal or greater size.

6. Click the **Submit** button to save your settings.

Running Background Activities

To run a background activity from the Background Activities tab:


1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Background Activities tab and select one of the following from the dropdown menu.
 - Media Patrol – See “Running Media Patrol” on page 52
 - Rebuild – See “Rebuilding a Disk Array” on page 114
 - PDM – See “Running PDM” on page 52
 - Transition – See “Transitioning a Disk Array” on page 116
 - Initialization – See “Initializing a Logical Drive” on page 121
 - Redundancy Check – See “Running Redundancy Check” on page 122
3. In the next screen, make the choices as requested.
4. Click the **Start** button.

Running Media Patrol

Media Patrol checks the magnetic media on physical drives. When it finds the specified number of bad blocks, it will trigger PDM. See “Making Background Activity Settings” on page 51 and “Running PDM” on page 52.

You can schedule Media Patrol to run automatically, see “Scheduling an Activity” on page 53.

To run Media Patrol:

1. In Tree View, click the Subsystem  icon.
2. From the dropdown menu on the Background Activities tab, select *Start Media Patrol*.
3. In the next screen, click the **Start** button.


Running PDM

Predictive Data Migration (PDM) migrates data from the suspect physical drive to a spare disk drive, similar to Rebuilding. But unlike Rebuilding, PDM acts *before* the disk drive fails and your Logical Drive goes Critical.

You can also run PDM on a specific disk array, see “Running PDM on a Disk Array” on page 116.


Also see “Predictive Data Migration (PDM)” on page 238.

To run PDM:

1. In Tree View, click the Subsystem  icon.
2. In Management View, click the Background Activities tab and select *Start Media Patrol* from the dropdown menu.
3. In the next screen, select the Source and Target physical drives.
The suspect physical drive is the source. The replacement physical drive is the target.
4. Click the **Start** button.


Viewing Scheduled Activities

To view scheduled activities for this subsystem:

1. Click the Subsystem  icon Tree View.
2. Click the Scheduler tab in Management View.

Scheduling an Activity

To set a scheduled activity for this subsystem:

1. Click the Subsystem  icon Tree View.
2. From the dropdown menu on the Scheduler tab, choose an item:
 - Media Patrol. See “Running Media Patrol” on page 52
 - Redundancy Check. See “Running Redundancy Check” on page 122
 - Battery Reconditioning. See “Reconditioning a Battery” on page 98
 - Spare Drive Check. See “Running Spare Check” on page 128
3. In the Scheduler dialog box, check the Enable This Schedule box.
4. Select a start time (24-hour clock).
5. Select a Recurrence Pattern.
 - Daily – Enter the number of days between events.
 - Weekly – Enter the number of weeks between events and select which days of the week.
 - Monthly – Select a calendar day of the month (1 – 31).

If you select a higher number than there are days in the current month, the actual start date will occur at the beginning of the following month.

Or, select a day of the week and select the first, second, third, fourth, or last occurrence of that day in the month.

Then, select the months in which you want the activity to occur.

6. Select a Range of Occurrence.

- Start-from date. The default is today's date.
- End-on date.

Select No End Date (perpetual).

Or, select a number of occurrences for this activity.

Or, select a specific end date. The default is today's date.

7. For Redundancy Check only:

- Choose the Auto Fix option. This feature attempts to repair the problem when it finds an error.
- Choose the Pause on Error option. This feature stops the process when it finds an error
- Check the boxes beside the logical drives (all except RAID 0) to which this activity will apply.

Each logical drive can have only one scheduled Redundancy Check.




Note

You can schedule only ONE Redundancy Check for each logical drive.

8. Click the **Submit** button.

Deleting a Scheduled Activity


To delete a scheduled activity for this subsystem:

1. Click the Subsystem  icon Tree View.
2. From the dropdown menu on the Scheduler tab, choose *Delete Schedules*.
3. Check the box to the left of the schedule you want to delete.
4. Click the **Submit** button.

Viewing Lock Status

The lock prevents other sessions (including by the same user) from making a configuration change to the controller until the lock expires or a forced unlock is done.

To view the lock status for this subsystem:

1. Click the Subsystem  icon Tree View.
2. Click the Lock tab in Management View.

The following information is displayed:


- Lock Status – The User who set (owns) the current lock.

- Expiration Time – Amount of time left until the lock automatically releases.
- Expire At Time – The date and time when the lock will automatically release.

Setting the Lock

The lock prevents other sessions (including by the same user) from making a configuration change to the controller until the lock expires or a forced unlock is done.


You can set the lock to last from one minute to one day. To set the lock for this subsystem:

1. Click the Subsystem  icon Tree View.
2. Click the Lock tab in Management View.
3. Click the **Lock** option.
4. Enter a time interval between 1 and 1440 minutes (one day) that you want the lock to stay active.
5. Click the **Submit** button.

Renewing the Lock

The lock prevents other sessions (including by the same user) from making a configuration change to the controller until the lock expires or a forced unlock is done.

Renewing the lock extends the period of time the controller remains locked. To renew an existing lock for this subsystem:

1. Click the Subsystem  icon Tree View.
2. Click the Lock tab in Management View.
3. Click the **Renew** option.
4. Enter a time interval between 1 and 1440 minutes (one day) that you want the lock to stay active.

The renew time replaces the previous Expiration Time.


5. Click the **Submit** button.

Releasing the Lock

The lock prevents other sessions (including by the same user) from making a configuration change to the controller until the lock expires or a forced unlock is done.

When the user who locked the controller logs out, the lock is automatically released. You can also release the lock before the scheduled time.

To release the lock for this subsystem:

1. Click the Subsystem  icon Tree View.
2. Click the Lock tab in Management View.

If you are the User who set the lock, click the **Unlock** option.

If another User set the lock and you are a Super User, click the **Unlock** option and check the **Force Unlock** box.

3. Click the **Submit** button.




Managing Users

User Management includes all functions dealing with user accounts. Functions include:

- Viewing User Information (page 57)
- Making User Settings (page 57)
- Making Your Own User Settings (page 58)
- Setting-up User Event Subscriptions (page 58)
- Changing Another User's Password (page 59)
- Changing Your Own Password (page 59)
- Creating a User (page 60)
- Deleting a User (page 61)
- Viewing User Sessions (page 61)
- Logging out Other Users (page 61)

Viewing User Information




The view a list of users, their status, access privileges, display name, and email address:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the User Management  icon.

The Information tab appears in Management View.

Making User Settings

To change settings of other users:

1. Log into WebPAM PROe as the Administrator or a Super User.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. On the Information tab, click the link of the user whose settings you want to change.

The Settings screen for the selected user displays.




6. Make the following settings as needed.
 - Check the Enable box to enable this user.
 - Uncheck the box to disable this user.
 - Enter or change the display name.

- Enter or change the email address.
 - From the Privilege dropdown menu, choose a new level.
See “List of User Privileges” on page 60
7. Click the **Submit** button.

The Administrator or Super User can change another user’s password. See “Changing Another User’s Password” on page 59 for more information.




Making Your Own User Settings

To change your own user settings:

1. Log into WebPAM PROe under your own user name.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. Click the Settings tab in Management View.
6. Enter or change the display name or mail address.
7. Click the **Submit** button.

Setting-up User Event Subscriptions

An event subscription enables a user to receive email messages about events taking place in the VTrak subsystem. To make or change user event subscriptions:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the User Management  icon.
4. Click the Event Subscription tab in Management View.
5. Check the box to enable event notification.
6. Under the subheadings, select the lowest level of Severity to be reported for each event. The selected level plus all higher levels of Severity will be reported.
 - Information – Information only, no action is required
 - Warning – User can decide whether or not action is required
 - Minor – Action is needed but the condition is not a serious at this time
 - Major – Action is needed now
 - Critical – Action is needed now and the implications of the condition are serious

- Fatal – Non-Recoverable error or failure has occurred
- None – Deactivates this event for notification purposes

7. Click the **Submit** button.




The user's account must have an email address. See "Making User Settings" on page 57.

For information about the email service, see "Making Email Settings" on page 76.

To send a test message to the email address in the listed under General Info, click the **Test Email** button.

Changing Another User's Password

To change a user's password:




1. Log into WebPAM PROe as the Administrator or a Super User.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. In the list of users, click the link of the user whose settings you want to change.

The Settings screen for the selected user displays.

6. Click the Password tab in Management View.
7. Enter the new password in the New Password field.
8. Enter the new password in the Retype Password field.
9. Click the **Submit** button.

Changing Your Own Password




To set or change your own password:

1. Log into WebPAM PROe under your own user name.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. Click the Password tab in Management View.
6. Enter the current password in the Old Password field.
If you do not have a password, leave this field blank.
7. Enter the new password in the New Password field.
8. Enter the new password in the Retype Password field.

9. Click the **Submit** button.

Creating a User

To create a user:

1. Log into WebPAM PROe as the Administrator or a Super User.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. Click the Create tab in Management View.
6. Enter a user name in the User Name field.
7. Enter a password for this user in the New Password and Retype Password fields.

A password is optional. If you do not specify a password, log into WebPAM PROe with the User Name and leave the password field blank.

8. Enter a display name in the Display Name field.
A display name is optional.
9. Enter the user's email address in the Email Address field.
An email address is required in order to receive email event notification.
10. Select a privilege level from the Privilege dropdown menu.
For definitions of each privilege level, see the List of User Privileges below.
11. Check the Enabled box to enable this user on this subsystem.
12. Click the **Submit** button.




List of User Privileges

- **View** – Allows the user to see all status and settings but not to make any changes
- **Maintenance** – Allows the user to perform maintenance tasks including Rebuilding, PDM, Media Patrol, and Redundancy Check
- **Power** – Allows the user to create (but not delete) disk arrays and logical drives, change RAID levels, change stripe size; change settings of components such as disk arrays, logical drives, physical drives, and the controller.
- **Super** – Allows the user full access to all functions including create and delete users and changing the settings of other users, and delete disk arrays and logical drives. The default “administrator” account is a Super User.

Deleting a User




There will always be at least one Super User account. You cannot delete the user account you used to log in.

To delete a user:

1. Log into WebPAM PROe as the Administrator or a Super User.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. Click the Delete tab in Management View.
6. Check the box to the left of the user you want to delete.
7. Click the **Submit** button.
8. Click **OK** in the confirmation box.




Viewing User Sessions

To view the current sessions:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the User Management  icon.
4. Click the Sessions tab in Management View.

Logging out Other Users

To logout other users:

1. Log into WebPAM PROe as the Administrator or a Super User.
2. Click the Subsystem  icon in Tree View.
3. Click the Administrative Tools  icon.
4. Click the User Management  icon.
5. Click the Sessions tab in Management View.
6. Check the box to the left of the user you want to log out.
7. Click the **Logout** button.
8. Click **OK** in the confirmation box.

Managing the Network Connection




The network connection deals with network connections to the VTrak's Management Ports. Functions include:

- Making Subsystem Management Port Settings (page 62)
- Making iSCSI Data Port Settings (page 62)
- Viewing VLAN Entries (page 63)
- Creating a VLAN Entry (page 63)
- Changing a VLAN Entry (page 64)
- Deleting a VLAN Entry (page 65)
- Viewing Link Aggregation Entries (page 65)
- Creating a Link Aggregation Entry (page 65)
- Changing a Link Aggregation Entry (page 66)
- Deleting a Link Aggregation Entry (page 66)

Making Subsystem Management Port Settings

When you log into the VTrak over your network, you use the management port. Before you change settings, please see “Choosing DHCP or a Static IP Address” on page 24.

To make changes to the Subsystem Management Port settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. Click the **Port Configuration** link in Management View.
5. To enable DHCP, check the DHCP box.




When DHCP is NOT enabled, enter:

- IP address
 - Subnet mask
 - Gateway IP address
 - Enter a DNS server IP address
6. Click the **Submit** button.

Making iSCSI Data Port Settings




The network settings for the iSCSI data ports are located under the Network Management and are described below. For the iSCSI settings for the iSCSI data ports, see “Managing iSCSI Connections” on page 67.

To make changes to the iSCSI Data Port settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. Click the iSCSI Ports tab in Management View.
5. Click the **Port Configuration – Port 1** link or the **Port Configuration – Port 2** link.
6. To enable DHCP, check the DHCP box.
When DHCP is NOT enabled, enter:
 - IP address
 - Subnet mask
 - Gateway IP address
7. To enable jumbo frames, check the Jumbo Frame box.
8. Enter a TCP port number.
The default is 3260.
9. Click the **Submit** button.

Viewing VLAN Entries

To view the current VLAN entries:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. Click the VLAN tab in Management View.

The Member Interface refers to an iSCSI data port or to the link aggregate trunk number.




Creating a VLAN Entry

This feature enables you to create a virtual local area network (VLAN) using an iSCSI data port on your subsystem.

If you plan to aggregate the iSCSI ports, create a link aggregation before you create the VLAN. See “Creating a Link Aggregation Entry” on page 65.




If you plan to use jumbo frames for the VLAN, enable jumbo frames for the iSCSI ports before you create the VLAN. See “Making iSCSI Data Port Settings” on page 62.

To create a VLAN entry:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. In Management View, from the dropdown menu on the VLAN tab, choose *Create VLAN Entry*.
5. Enter a name into the VLAN Name field.
Maximum of 15 characters. Use letters, numbers, space between words and underscore.
6. Enter the following information the respective boxes:
 - VLAN Tag number (2 to 4094)
 - IP Address of the VLAN
 - Subnet Mask of the VLAN. (255.255.255.0 is the default)
 - TCP Port number. (3260 is the default)
7. To enable jumbo frames on the VLAN, check the Jumbo Frame box.
8. From the dropdown menu, choose a Member Interface.
If you have link aggregation, choose the Trunk number.
If you do NOT have a link aggregation, choose an iSCSI port number.
9. Click the **Submit** button.

Changing a VLAN Entry

To change a VLAN entry:




1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. In Management View, click the VLAN tab.
5. Click the VLAN Tag link of the VLAN you want to change.
6. Enter the following information the respective boxes:
 - VLAN Tag number (2 - 4094)
 - IP Address of the VLAN
 - Subnet Mask of the VLAN. 255.255.255.0 is the default
 - TCP Port number. 3260 is the default
7. To enable jumbo frames on the VLAN, check the Jumbo Frame box.
8. From the dropdown menu, choose a Member Interface.

If you have link aggregation, choose the Trunk number. If you do not have a link aggregation, choose an iSCSI port number.

9. Click the **Submit** button.




Deleting a VLAN Entry

To delete a VLAN entry:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. In Management View, from the dropdown menu on the VLAN tab, choose *Delete VLAN Entry*.
5. Check the box to the left of the VLAN entry you want to delete.
6. Click the **Submit** button.

Viewing Link Aggregation Entries

To view the current Link Aggregation entries:




1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. Click the Link Aggregation tab in Management View.

Creating a Link Aggregation Entry

This feature enables you to aggregate the iSCSI data ports on your subsystem to increase bandwidth.

If an iSCSI port is part of a VLAN, you must delete the VLAN entry before you can use the iSCSI port to create a link aggregation. See “Deleting a VLAN Entry” on page 65.

To create a link aggregation entry:




1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. In Management View, from the dropdown menu on the Link Aggregation tab, choose *Create Link Aggregation Entry*.
5. Enter a Trunk ID number.

Use 1 to 32.

6. From the Master Port dropdown menu, choose an iSCSI port number.
7. From the Slave Port dropdown menu, choose the other iSCSI port number.
8. Click the **Submit** button.




Changing a Link Aggregation Entry

To change a link aggregation entry:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. In Management View, click the Link Aggregation tab.
5. Click the ID link of the link aggregation you want to change.
6. From the Master Port dropdown menu, choose an iSCSI port number.
7. From the Slave Port dropdown menu, choose the other iSCSI port number.
8. Click the **Submit** button.

Deleting a Link Aggregation Entry

To delete a link aggregation entry:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Network Management  icon.
4. In Management View, from the dropdown menu on the Link Aggregation tab, choose *Delete Link Aggregation Entry*.
5. Check the box to the left of the link aggregation entry you want to delete.
6. Click the **Submit** button.

Managing iSCSI Connections




A detailed explanation of these iSCSI functions, how and when they are used, and their relationship to one another is beyond the scope of this document. For more information, contact the Internet Engineering Task Force at <http://www.ietf.org/>.

Functions include:

- Viewing Node Information (page 67)
- Making Node Settings (page 68)
- Viewing Target Port Information (page 69)
- Viewing Data Port Statistics (page 69)
- Viewing Portal Information (page 70)
- Viewing Session Information (page 70)
- Viewing iSNS Information (page 70)
- Making iSNS Settings (page 71)
- Viewing CHAPs (page 71)
- Adding CHAPs (page 71)
- Editing CHAPs (page 72)
- Deleting CHAPs (page 72)
- Pinging iSCSI Connections (page 72)

Viewing Node Information

To view iSCSI node information:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.

The iSCSI Management–iSCSI Node tab enables you to see the current Data Port settings on the Controller, including:




- Maximum number of nodes supported
- Number of nodes present
- Number of failed nodes
- Node ID
- Node Name – An iSCSI node is identified by its name
- Node Alias – Maximum of 32 characters. Use letters, numbers, space between words, and underscore. An alias is optional

- Max outstanding R2T – Sets the maximum number of outstanding ready to transfer PDUs (a number)
- Maximum burst length – Maximum length of a solicited data sequence
128 KB to 16,776,704 bytes (16 MB - 512 KB)
- Maximum number of connections – Maximum number of connections supported
- Default time to wait – After a dropped connection, the number of seconds to wait before attempting to reconnect
- Default time to retain – Number of seconds after time to wait (above) before reassigning outstanding commands
- Error recovery level – Error recovery level supported
- Initial R2T – Allows initiator to begin sending data to a target without receiving a ready to transfer command
- Header Digest – Enables the use of Header Digest (CRC). See note below
- Data Digest – Enables the use of a Data Digest (CRC). See note below
- Data PDU in order – Enables placement of data in PDU order
- Data sequence in order – Enables placement of data in sequence order
- Uni-directional CHAP Authentication – Enables Challenge Handshake Authentication Protocol
- Bi-directional CHAP Authentication – Enables bi-directional and uni-directional CHAP authentication

Making Node Settings

The settings made here apply to both iSCSI data ports.

To make iSCSI data port settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the **iSCSI Node 1** link in Management View.
5. Optional. Type an alias in the Alias field.
Maximum of 32 characters. Use letters, numbers, space between words, and underscore. An alias is not required.
6. Enter the values in the fields as required.
7. Check the boxes to enable features as required.
8. Click the **Submit** button.






Notes

Header Digest and Data Digest work best with initiators equipped with a TCP Offload Engine (TOE). Refer to your iSCSI HBA user manual for more information.

For iSCSI network settings on the Data Ports, see “Making iSCSI Data Port Settings” on page 62.

Viewing Target Port Information

To view iSCSI port target information:




1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the Port Target tab in Management View.

Information (in GUI order):

- Controller ID – 1
- Port ID – 1 or 2
- Max Receive Data Segment Length – 8 KB is the default
- Number of Active Sessions – Number of sessions logged into this port
- Primary Header Digest Method – CRC-32
- Primary Data Digest Method – CRC-32
- iSCSI Receive Marker – None

Viewing Data Port Statistics




To view iSCSI port statistics:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. From the Port Target tab dropdown menu in Management View, choose *Port Statistics*.

The data port statistics are displayed.

Viewing Portal Information

To view iSCSI portal information:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the Portal tab in Management View.




Information (in GUI order):

- Portal ID – 1 to 34
- IIP Address – IP address of the port or VLAN
- Associated Type – iSCSI or VLAN
- Interface Name – Port number or VLAN name
- TCP port number – 3260 is the default

Also see “Making iSCSI Data Port Settings” on page 62 and “Viewing VLAN Entries” on page 63.

Viewing Session Information

To view iSCSI session information:




1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the Sessions tab in Management View.

The window displays session information.

Viewing iSNS Information




Internet Storage Name Service (iSNS) is a protocol used to facilitate the automated discovery, management, and configuration of iSCSI and Fibre Channel devices on a TCP/IP network.

To view iSCSI iSNS information:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the iSNS tab in Management View.

Making iSNS Settings




To make iSCSI iSNS settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the iSNS tab in Management View.
5. Click the **iSNS** link.
6. Check the box to enable iSNS.
7. Enter the iSNS server IP address.
8. Enter a new iSNS Port number if required.
Use 1 to 65535.
9. Click the **Submit** button.




Viewing CHAPs

Challenge Handshake Authentication Protocol (CHAP) is an authentication agent (typically a network server) sends the client program a random value and an ID value. Both the sender and peer share a predefined secret. The peer concatenates the random value, the ID, and the secret and calculates a one-way hash value. The hash value is sent to the authenticator, which in turn builds that same string on its side, calculates the sum, and compares the result with the value received from the peer. If the values match, the peer is authenticated.




To view iSCSI CHAPs:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the CHAP tab in Management View.
The window displays CHAP information.




Adding CHAPs

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the CHAP tab in Management View.

Editing CHAPs

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. From the CHAP tab dropdown menu, choose *Add CHAP*.
5. Enter a name in the Name field.
6. Enter a secret of 16 or more characters in the Secret field.
7. Enter the secret again in the Retype Secret field.
8. Select the CHAP type.
Peer to peer is one-way authentication. Local is bi-directional authentication.
9. Click the **Submit** button.




Deleting CHAPs

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. From the CHAP tab dropdown menu, choose *Delete CHAP*.
5. Check the box to the left of the CHAP you want to delete.
6. Click the **Submit** button.

Pinging iSCSI Connections

This function enables you to ping other network nodes (PCs, servers, etc.) through VTrak's iSCSI data ports.

To ping an iSCSI connection:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the iSCSI Management  icon.
4. Click the Ping tab in Management view.
5. Enter the IP address you want to ping in the IP Address field.
6. Select the data port (1 or 2) from the Ping Through Port dropdown menu.
7. Click the **Submit** button.
After a few moments, the result displays in the iSCSI Ping Operation header.

Managing Storage Services

The Storage Services–LUN Map tab displays the Target IDs and LUNs assigned to each logical drive.




For iSCSI, LUN masking is the process of applying a LUN Map so that each initiator can only access the LUNs specified for it.

Features include:

- Adding an Initiator (page 73)
- Deleting an Initiator (page 73)
- Viewing a LUN Map (page 74)
- Enabling LUN Masking (page 74)
- Adding a LUN Map (page 74)

Adding an Initiator

To add an initiator:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Storage Services  icon.
4. From the Initiators tab dropdown menu, choose *Add Initiator*.
5. Enter the initiator's name in the Initiator Name field.

An iSCSI initiator name is the iSCSI name of the initiator device and is composed of a single text string. iSCSI WWNs are somewhat different from regular WWNs.




Obtain the initiator name from the initiator utility on your host system.

Note that the initiator name you input must match exactly in order for the connection to work.

6. Click the **Submit** button.

Deleting an Initiator




To delete an initiator:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Storage Services  icon.
4. From the Initiators tab dropdown menu, choose *Delete Initiator*.
5. Check the box to the left of the initiator you want to delete.

6. Click the **Submit** button.

Viewing a LUN Map




To view the current LUN Map:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Storage Services  icon.
4. Click the LUN Map tab in Management View.

Enabling LUN Masking




LUN Masking is the process of applying a LUN Map so that each initiator can only access the LUNs specified for it.

To enable LUN Masking:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Storage Services  icon.
4. Click the LUN Map tab in Management View.
5. Check the Enable LUN Masking box.
6. Click the **Submit** button.

Adding a LUN Map

To add a LUN map:

1. Click the Subsystem  icon in Tree view.
2. Click the Administrative Tools  icon.
3. Click the Storage Services  icon.
4. in Management View, from the LUN Map tab dropdown menu, choose *Add LUN Map*.
5. Select an initiator from the Initiator dropdown menu.
Or enter the initiator's WWN in the Initiator Name field.
Obtain the initiator name from the initiator utility on your host system.
Note that the initiator name you input must match exactly in order for the connection to work.
6. Click the **Submit** button.

LUN Mapping Parameters

- Initiator – The iSCSI card in the Host system that initiates commands to the target (VTrak)
- Initiator Name – A World Wide Name (WWN), used to identify the Initiator. An iSCSI initiator name is the iSCSI name of the initiator device and is composed of a single text string. iSCSI WWNs are somewhat different from regular WWNs.
- Logical Drive ID – The disk array ID number
- RAID Level – RAID Level of the logical drive
- Capacity – Capacity of the logical drive
- Serial Number – Serial number of the logical drive
- WWN – World Wide Name, used for the Initiator name
- LUN – Logical Unit Number on this logical drive for the selected initiator. Each logical drive has a unique LUN

Managing Software Services



Software Services include the following functions:

- Making Email Settings (page 76)
- Making SLP Settings (page 77)
- Making Web Server Settings (page 77)
- Making Telnet Settings (page 79)
- Making SNMP Settings (page 79)
- Making CIM Settings (page 81)
- Making Netsend Settings (page 82)

Making Email Settings

The Email sends notification messages to users. See Setting-up User Event Subscriptions (page 58).

To make Email service settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **Email Setting** link in Management View.
4. Enter the IP address for your SMTP server.
5. Enter server port number for your SMTP server.
25 is the default.
6. Select Yes to enable SMTP authentication or No to Yes.
7. If you selected Yes for SMTP authentication, enter a Username and Password in the fields provided.
8. Enter an Email sender address (example: RAIDmaster@mycompany.com).
9. Enter an Email subject (example: VTrak Status).
10. Click the **Submit** button.

Sending a Test Message

To send one test message to the User currently logged into WebPAM PROe:

1. Under Test Email, check the “Send A Test Email” box.
2. Click the **Submit** button.

If you do not receive the Test Email message, see your Network Administrator for assistance with the mail server setup, email accounts, and other issues.

Changing the Startup Setting

1. Under Startup Type:

- Click the Automatic option to start the service automatically during system startup. Recommended.
 - Click the Manual option to start the service manually (the service does not start during system startup).
2. Click the **Submit** button.

Stopping Email service

To stop the Email service:




1. Click the **Stop** button.
2. Click **OK** in the confirmation box.

Starting or Restarting Email service

To start or restart the Email service, click the **Start** or **Restart** button.

Making SLP Settings

VTrak's SLP service discovers services available over the Internet. To make SLP service settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Software Management  icon.
4. Click the **SLP** link.
5. Choose the Startup Type.
 - Click the Automatic option to start the service automatically during system startup. Recommended.
 - Click the Manual option to start the service manually (the service does not start during system startup).
6. Click the **Submit** button.

Stopping SLP service

To stop the SLP service:

1. Click the **Stop** button.
2. Click **OK** in the confirmation box.



Starting or Restarting SLP service

To start or restart the SLP service, click the **Start** or **Restart** button.

Making Web Server Settings

VTrak's Web Server service connects the VTrak GUI to the VTrak subsystem through your browser.

To make Web Server settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **Web Server Setting** link in Management View.
4. Enter the HTTP Port number.
80 is the default.
5. Enter Session Time Out interval.
This setting causes WebPAM PROe to timeout after a period of inactivity. 24 minutes is the default. The range is 1 to 1440 minutes (one day).
6. If you want to use a secure connection, check the Enable SSL box.
7. If you checked the Enable SSL box, enter a HTTPS Port number.
443 is the default.
8. If you want to download a SSL Certificate, check the Download Certificate box.
9. If you checked the Download Certificate box, enter the Certificate filename or click the Browse... button to locate it.
10. Click the **Submit** button.
11. Click **OK** in the confirmation box to restart the Web Server service with your changes.

Changing the Startup Setting

1. Under Startup Type:
 - Click the Automatic option to start the service automatically during system startup. Recommended.
 - Click the Manual option to start the service manually (the service does not start during system startup).
2. Click the **Submit** button.

Stopping Web Server service

To stop the Web Server service:



1. Click the **Stop** button.
2. Click **OK** in the confirmation box.

Starting or Restarting Web Server service

To start or restart the Web Server service, click the **Start** or **Restart** button.

Making Telnet Settings

VTrak's Telnet service enables you to access VTrak's Command Line Interface (CLI) through a network connection. To make Telnet settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **Telnet Setting** link in Management View.
4. Enter the Telnet Port number.
2300 is the default.
5. Enter the Maximum Number of Connections.
4 is the default.
6. Enter the Session Time Out interval.
24 minutes is the default.
7. Click the **Submit** button.
8. Click **OK** in the confirmation box to restart the Telnet service with your changes.

Changing the Startup Setting

1. Under Startup Type:
 - Click the Automatic option to start the service automatically during system startup. Recommended.
 - Click the Manual option to start the service manually (the service does not start during system startup).
2. Click the **Submit** button.

Stopping Telnet service

To stop the Telnet service:

1. Click the **Stop** button.
2. Click **OK** in the confirmation box.



Starting or Restarting Telnet service

To start or restart the Telnet service, click the **Start** or **Restart** button.

Making SNMP Settings

VTrak's SNMP service enables the SNMP browser to obtain information from the VTrak. The Trap Sink is where SNMP events are sent and can be viewed.

To change the SNMP settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **SNMP Management** link in Management View.
4. Enter the SNMP Port number.
161 is the default.
5. Enter a System Name.
There is no default name.
6. Enter a System Location.
USA is the default.
7. Enter a System Contact (the email address of the administrator or other individual).
8. Enter the Read Community.
Public is the default.
The Write Community is always Private.
To add a Trap Sink, see “Adding Trap Sinks” below.
9. Click **OK** in the confirmation box to restart the SNMP service with your changes.

Adding Trap Sinks

To add a trap sink:

1. Enter a Trap Sink IP address.
2. Select a Trap Filter, select the lowest level of Severity to be reported for each event.
See “Setting-up User Event Subscriptions” on page 58 for an explanation of the Severity levels.
3. Click the **Update** button.
The new trap sink appears in the Trap Sinks list.
4. Click the **Submit** button.
5. Click **OK** in the confirmation box.

Deleting Trap Sinks

To delete a trap sink:

1. Highlight the trap sink you want to delete from the list.
2. Click the **Delete** button to remove the trap sink from the list.
3. Click the **Submit** button.
4. Click **OK** in the confirmation box.

Changing the Startup Setting

1. Under Startup Type:
 - Click the Automatic option to start the service automatically during system startup. Recommended.
 - Click the Manual option to start the service manually (the service does not start during system startup).
2. Click the **Submit** button.

Stopping SNMP service

To stop the SNMP service:

1. Click the **Stop** button.
2. Click **OK** in the confirmation box.



Starting or Restarting SNMP service

To start or restart the SNMP service, click the **Start** or **Restart** button.

Making CIM Settings

VTrak's CIM (Common Information Model [a protocol]) service provides a database for information about computer systems and network devices.

To change the CIM settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **CIM Setting** link in Management View.
4. Click the **Start** button to start the CIM service.
5. To enable CIM using a HTTP connection:
 - Choose the Yes option
 - Enter a port number in the field provided (5988 is the default)
6. To enable CIM using a HTTPS connection:
 - Choose the Yes option
 - Enter a port number in the field provided (5989 is the default)
7. To enable authentication for your CIM connection(s):
 - Choose the Yes option
 - Enter the old password in the field provided (password is the default)
 - Enter a new password in the field provided

To change your password, the CIM service must be running. See "Starting or Restarting CIM service" on page 82.

There is only one user. The default name is "cim." No changes are possible.

8. Click the **Submit** button.

Changing the Startup Setting

1. Under Startup Type:
 - Click the Automatic option to start the service automatically during system startup. Recommended.
 - Click the Manual option to start the service manually (the service does not start during system startup).
2. Click the **Submit** button.

Stopping CIM service

To stop the CIM service:

1. Click the **Stop** button.
2. Click **OK** in the confirmation box.



Starting or Restarting CIM service

To start or restart the CIM service, click the **Start** or **Restart** button.

Making Netsend Settings

VTrak's Netsend service sends VTrak subsystem events in the form of text messages to your Host PC and other networked PCs. This service is normally Stopped and set to Manual start. See "Netsend Requirements" on page 83.

To change the Netsend settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **Netsend** link.
4. Click the **Start** button to start the Netsend service.
5. Click the **Submit** button.

Adding Netsend recipients

See "Netsend Requirements" on page 83. To add a Netsend recipient:

1. In the Recipient Address field, type the IP address of the recipient PC.
2. Under Recipient filter, select the lowest level of Severity to be reported for each event.

See "Setting-up User Event Subscriptions" on page 58 for an explanation of the Severity levels.

3. Click the **Update** button to add the new recipient to the list
4. Click the **Submit** button.
5. Click **OK** in the confirmation box.

Deleting Netsend Recipients

To delete a Netsend recipient:

1. Highlight the recipient you want to delete in the recipient list.
2. Click the **Delete** button to remove the recipient from the list.
3. Click the **Submit** button.
4. Click **OK** in the confirmation box.

Changing the Startup Setting

1. Under Startup Type:
 - Click the Automatic option to start the service automatically during system startup. Recommended if you plan to use this feature.
 - Click the Manual option to start the service manually (the service does not start during system startup). The default setting.
2. Click the **Submit** button.

Stopping Netsend service

To stop the Netsend service:

1. Click the **Stop** button.
2. Click **OK** in the confirmation box.

Starting or Restarting Netsend service

To start or restart the Netsend service, click the **Start** or **Restart** button.

Netsend Requirements

In order to use Netsend:

- Netsend must be running the VTrak
- You must provide the IP address for each recipient PC
- The Messenger service must be running on each recipient PC



If your Netsend and Messenger service settings are correct but the recipient PC does not receive event messages, check the recipient PC's Firewall settings. Refer to your OS documentation for more information.

Exporting the User Database

You can export the User Database file to share user information and settings among multiple VTrak subsystems.

The Export action saves a text file a designated folder the Host PC. From there, you can import the User Database file to other VTrak subsystems.

To export the User Database file:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **Export** link in Management View.
4. Click the **Export** button.
5. In the Opening export dialog box, click the **Save to Disk** option.
6. Click the **OK** button.

The user database file is saved to the Host PC from which you access WebPAM PROe.



Note

The Encryption box is grayed out. Encryption is always enabled.

Importing a User Database






Caution

Do NOT use this function to update the VTrak firmware.

The Software Management–Import tab enables you to import the User Database file from the Host PC's file system to the VTrak subsystem. When you make user settings to one VTrak, you can export the User Database file to the Host PC. From there, you can import the User Database file to other VTrak s so that all have the same User information and settings.

To import the User Database file to this subsystem:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Software Management  icon.
4. Click the Import tab.
5. Under the Type dropdown list, choose *User Database*.
6. Enter the name of the file to be imported.

Or, click the **Browse...** button to search for the file.

Look for a file called *export*.

7. Click the **Submit** button.
8. Click the **Next** button.

If the imported file is a valid user database, an warning will appear to inform you that it will overwrite the previous settings.

9. In the Warning box, click the **OK** button.

This user settings are applied to this VTrak subsystem.



Note

The Decryption box is grayed out. Decryption is always enabled.

Updating the Firmware

This procedure is covered in Chapter 6: Maintenance. See “Updating the Firmware in WebPAM PROe” on page 199 for instructions.

Restoring Factory Defaults



VTrak includes a function to restore the default settings to its Firmware and Software settings.



Caution

The action of restoring default settings can disrupt your VTrak functions. Use this feature only when necessary and only the settings that must reset to default in order to set them correctly.



To access the Restore Defaults feature:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
The Administrative Tools list appears.
3. Click the **Restore Factory Defaults** link at the bottom of the list in Management View.
The Restore Factory Defaults screen appears.
4. Check the Firmware and Software functions you want to restore to default settings.
5. Click the **Submit** button.
6. In the confirmation box, type the word **confirm** in the field provided.
7. Click the **OK** button.

The functions you selected will be automatically restored to their default settings.

Clearing Statistics

The Clear Statistics function clears statistical data on controllers, iSCSI ports, physical drives, and logical drives. To clear statistical data:



1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the **Clear Statistics** link.

The Clear Statistics tab appears in Management View.

4. Click the **Submit** button.
5. In the confirmation box, type the word **confirm** in the field provided.
6. Click the **OK** button.

Shutting Down the Subsystem

You can only do part of this function in WebPAM PROe. Additional action is required, as described below. To shutdown the subsystem:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Shutdown link in Management View.
A Shutdown or Restart tab will appear.
4. On the Shutdown or Restart tab, choose *Shutdown* from the dropdown menu.
5. Click the **Submit** button.
6. In the confirmation box, type the word **confirm** in the field provided.
7. Click the **OK** button.
When the controller shuts down, your WebPAM PROe connection will be lost.
8. Wait for no less than two minutes.
9. Manually turn off the power supply switches the back of the subsystem.

Monitoring the Shutdown



To monitor a shutdown, you must use the Command Line Interface (CLI) though a serial connection to the VTrak.

At the “administrator@CLI>” prompt, type **shutdown -a shutdown**.

When the “Shutdown complete. It is now safe to power off the subsystem.” message appears, turn off the power supply switches.

Restarting the Subsystem

You can only do part of this function in WebPAM PROe. Additional action is required, as described below. To restart the subsystem

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Shutdown link in Management View.
A Shutdown or Restart tab will appear.
4. On the Shutdown or Restart tab, choose *Restart* from the dropdown menu.
5. Click the **Submit** button.
6. In the warning box, click the **OK** button.
7. In the confirmation box, type the word **confirm** in the field provided.
8. Click the **OK** button.

When the controller shuts down, your WebPAM PROe connection will be lost.

9. Wait for two to three minutes.
10. In your browser, log into WebPAM PROe once again.
If you cannot log in, wait for 30 seconds, and try again. Repeat until login is successful.

Monitoring the Restart

To monitor a restart, you must use the Command Line Interface (CLI) through a serial connection to the VTrak.

At the “administrator@CLI>” prompt, type **shutdown -a restart**.

When the “Login:” prompt appears, the restart is finished.



Managing Controllers

The RAID controller is the heart of the VTrak subsystem. Controller Management includes the following functions:

- Viewing the Controller (page 91)
- Locating a Controller (page 91)
- Viewing Controller Information (page 92)
- Viewing Controller Statistics (page 93)
- Making Controller Settings (page 93)

Viewing the Controller

To view information about the controller:

1. Click the Subsystem  icon in Tree View.
2. Click the Controllers  icon.

The controller information appears under the Information tab in Management View. Controller information includes:

- Controller ID (1)
- Alias, if assigned
- Model, if applicable
- Status – OK means normal
- Readiness Status – Active or Standby
- Locate – Click the button to locate the controller. See below

VTrak subsystems, such as the M610i, M310i, and M210i, with only one controller will always show that the second controller is “Missing.”

Locating a Controller

To identify a specific controller in the VTrak subsystem:





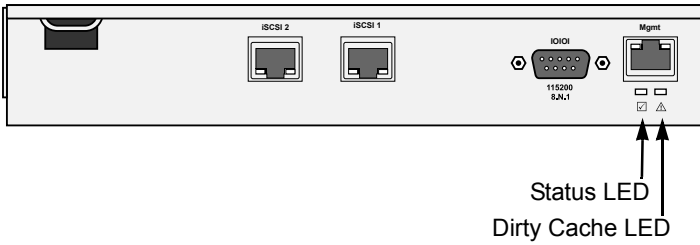

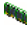

1. Click the Subsystem  icon in Tree View.
2. Click the Controllers  icon.
3. In Management View, click the **Locate Controller** button.
4. The Controller Dirty Cache  LED and Status  LED, on the back of the Controller, will flash for one minute. See the illustrations below.

Figure 9. The VTrak M610i controller LEDs



Viewing Controller Information

To view Controller information:

1. Click the Subsystem  icon in Tree View.
2. Click the Controllers  icon.
3. Click the Controller  icon.

The controller information appears the Information tab in Management View.

Adjustable items

You can set or adjust the following items:

- Alias, if assigned
- Coercion, enable or disable
- Coercion Method
- SMART – Self-Monitoring, Analysis, and Reporting System for physical drives.
- SMART Polling Interval
- Write Back Cache Flush Interval
- Enclosure Polling Interval

See “Making Controller Settings” on page 93.

Upgradable items




You can upgrade the following items:

- Boot loader Version
- Firmware Version number
- Software Version number
- Memory Size

See “Chapter 6: Maintenance” on page 199.

Viewing Controller Statistics

To view controller statistics:




1. Click the Subsystem  icon in Tree View.
2. Click the Controllers  icon.
3. Click the Controller  icon.
4. Click the Information tab in Management View and choose *Statistics* from dropdown menu.

Clearing Statistics

To clear statistics, see “Clearing Statistics” on page 88.

Making Controller Settings

To make Controller settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Controllers  icon.
3. Click the Controller  icon.
4. Click the Settings tab in Management View.
5. Make the following settings as needed:
 - Enter a name into the Alias field.
Maximum of 48 characters. Use letters, numbers, space between words, and underscore. An alias is optional.
 - Check the SMART Log box to enable the Self-Monitoring, Analysis, and Reporting System (SMART).
 - Enter a polling interval (1 to 1440 minutes) in SMART Polling Interval field.
 - Check the Coercion Enabled box to enable disk drive capacity coercion.
When disk drives of different capacities are used in the same array, coercion reduces the usable capacity of the larger disk drive(s) in order to match the smallest capacity drive.
For more information, see “Capacity Coercion” on page 233.
 - Select a coercion method from the Coercion Method dropdown menu.
The choices are:
 - GB Truncate** – (Default) Reduces the useful capacity to the nearest 1,000,000,000 byte boundary.
 - 10GB Truncate** – Reduces the useful capacity to the nearest 10,000,000,000 byte boundary.

Group Rounding – Uses an algorithm to determine how much to truncate. Results in the maximum amount of usable drive capacity.

Table Rounding – Applies a predefined table to determine how much to truncate.

- Enter a time interval (1 to 12 seconds) in the Write Back Cache Flush Interval field.

For more information, see “Cache Policy” on page 232.

- Enter a time interval (15 to 255 seconds) in the Enclosure Polling Interval field.
- Check the Adaptive Writeback Cache box to enable the Adaptive Writeback Cache feature.

For more information, see “Adaptive Writeback Cache” on page 232.

6. Click the **Submit** button.

The changes take effect immediately.



Managing Enclosures

Enclosure Management includes the following functions:

- Viewing the Enclosures (page 95)
- Locating an Enclosure (page 95)
- Viewing Enclosure Information (page 96)
- Making Enclosure Settings (page 97)
- Viewing FRU VPD Information (page 97)
- Checking the Batteries (page 97)
- Reconditioning a Battery (page 98)
- Silencing the Buzzer (page 99)
- Making Buzzer Settings (page 99)
- Testing the Buzzer (page 99)

Viewing the Enclosures

To view information about the enclosures:



1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.

The following information is shown:

- Enclosure ID number
- Enclosure Type
- Operational Status
- Status Description – Specific components in need of attention, if any

Locating an Enclosure

To locate an enclosure (subsystem):

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the **Locate Enclosure** button.

The Disk Status LEDs on the front of the enclosure will flash for one minute. See the illustrations below.

Figure 11. VTrak M610i front view


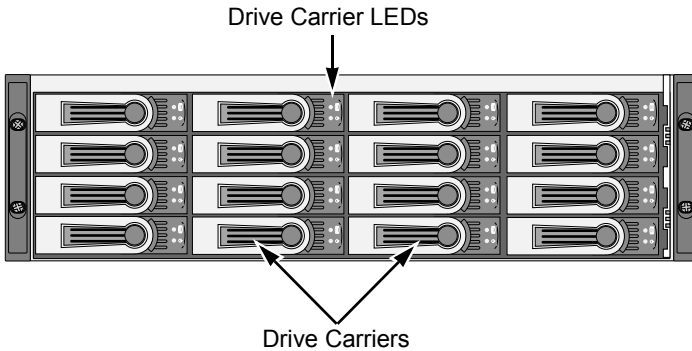





Figure 12. VTrak drive carrier LEDs

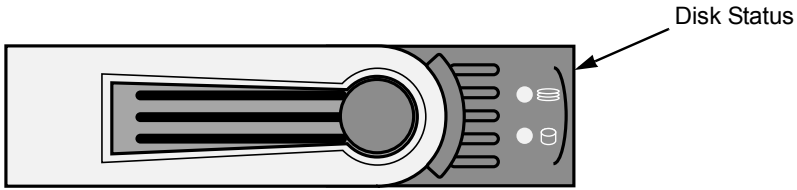

Viewing Enclosure Information

To view enclosure information:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.

Enclosure information appears the Information tab in Management View. You can monitor power supplies, cooling units, enclosure temperatures and voltages, and the battery.

Adjustable items

You can set or adjust the following items:




- Enclosure Warning and Critical temperature thresholds
- Controller Warning and Critical temperature thresholds

See "Making Enclosure Settings" on page 97.

For information on Enclosure problems, see "Chapter 8: Troubleshooting" on page 243.

Making Enclosure Settings

To make Enclosure settings:




1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Settings tab in Management View.
5. Enter a value in the following fields as necessary:
 - Enclosure Warning Temperature Threshold
 - Enclosure Critical Temperature Threshold
 - Controller Warning Temperature Threshold
 - Controller Critical Temperature Threshold
6. Click the **Submit** button.

The changes take effect immediately.

Viewing FRU VPD Information

FRU VPD refers to Vital Product Data (VPD) information about Field Replaceable Units (FRU) in the enclosure. The number and type of FRU depends on the subsystem model.




To view FRU VPD information:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the FRU VPD tab in Management View.

Use this information when communicating with Technical Support and when ordering replacement units. For contact information, see “Contacting Technical Support” on page 285.

Checking the Batteries

The Enclosure–Battery tab displays information about the cache backup battery (or batteries) in the VTrak subsystem enclosure. To check the batteries:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Battery tab in Management View.

Battery Notes

Each battery works with a controller. If the battery is present in the subsystem but the corresponding controller is not present, the battery will not appear in the interface.

If a battery does not reflect normal conditions and it is not currently under reconditioning, run the Recondition function before you replace the battery. See “Reconditioning a Battery” on page 98.

During reconditioning, the battery is fully discharged then fully recharged. During that time, if the Adaptive Writeback Cache function is enabled, the controller cache is reset to Write Thru. After conditioning, the cache is set to Write Back. See “Making Controller Settings” on page 93.

If a battery reaches the threshold temperature while charging or discharging, the charge or discharge pauses and the blower runs at high speed until the battery temperature falls below the threshold.




If the battery does not maintain normal values after a Recondition, replace the battery. See “Replacing a Cache Battery” on page 211.

VTrak automatically reconditions the battery every two months. To set the schedule, see “Scheduling an Activity” on page 53.

When you install a new battery, the cycle count shows 0. VTrak automatically runs a recondition on the battery to verify it. If you restart the subsystem or controller before reconditioning is finished, the battery is charged to 100%, then reconditioning starts again.

Reconditioning a Battery

To recondition the battery:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. In Management View, from the Battery tab dropdown menu, choose *Recondition*.
5. Click the **Submit** button.

During reconditioning, Battery status can show “discharging” and “recharging”, and a value will display next to Current. During that time, the controller cache is reset to Write Thru. Reconditioning runs in the background and stops automatically upon completion.




VTrak automatically reconditions the battery every two months. To set the recondition schedule, see “Scheduling an Activity” on page 53.

Silencing the Buzzer

The buzzer sounds to inform you that the VTrak needs attention. See “VTrak is Beeping” on page 244 for more information.

You can silence the buzzer for the current trigger event.




To silence the Buzzer:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Buzzer tab in Management View.
5. Click the **Mute** button.

The buzzer goes silent. If another trigger event occurs, the buzzer will sound again.




Making Buzzer Settings

To make buzzer settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. In Management View, from the Buzzer tab dropdown menu, choose *Settings*.
5. Check the Buzzer Enable box to enable the buzzer.
Uncheck the Buzzer Enable box if you do not want the buzzer to sound.
6. Click the **Submit** button.

Testing the Buzzer

To test buzzer function:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Buzzer tab in Management View.
5. Click the **Sound** button.

The buzzer will sound for one minute.





Managing Physical Drives

Managing Physical Drives deals with the physical disk drives installed in the VTrak subsystem enclosure, including the following functions:

- Viewing a List of Physical Drives (page 100)
- Identifying a Physical Drive (page 100)
- Making Global Physical Drive Settings (page 100)
- Viewing Physical Drive Information (page 101)
- Viewing Physical Drive Statistics (page 102)
- Making Physical Drive Settings (page 102)
- Clearing Stale and PFA Conditions (page 102)
- Forcing a Physical Drive Offline or Online (page 103)

Viewing a List of Physical Drives





To view a list of physical drives in this enclosure:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.

The list of physical drives appears in Management View.

Identifying a Physical Drive

To identify physical drive in the VTrak subsystem enclosure:




1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. In Management View, click the physical drives in the graphic.

The location of the physical drive is highlighted in the Enclosure Front View diagram.

Making Global Physical Drive Settings

Global settings apply to all of the physical disk drives installed in the VTrak subsystem enclosure. To make global physical drive settings:






1. Click the Subsystem  icon in Tree View.

2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. Click the Global Settings tab in Management View.
6. Make the settings as needed.
Check the boxes to enable:
 - Write Cache
 - Read Look Ahead Cache
 - Command Queuing (for disk drives that support Command Queuing)
 - From the DMA Mode dropdown menu, select a DMA mode.
7. Click the **Submit** button.

The functions you enable here depend on whether the physical drives support those functions. See “Viewing Physical Drive Information” on page 101 to determine which functions a particular drive supports.

Viewing Physical Drive Information

To view physical drive information:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. Click a Physical Drive  icon.

Useful information provided here includes:

- The location of the physical drive is highlighted in the Enclosure Front View diagram.
- Operational Status – OK is normal. Can also show Rebuilding, Forced Online, Forced Offline, Transition Running, PDM Running, Media Patrol Running, Stale, PFA, Offline, or Dead.
- Configuration Status – The array to which the drive is assigned or its spare designation, including Unconfigured, Stale, PFA, Global Spare, Dedicated Spare, Revertible Global Spare, Revertible Dedicated Spare.

Adjustable Items






- Write Cache
- Read Look Ahead Cache
- Command Queuing

- DMA Mode

See “Making Global Physical Drive Settings” on page 100.

Viewing Physical Drive Statistics

To view physical drive statistics:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. Click a Physical Drive  icon.
6. From the dropdown menu on the Information tab, choose *Statistics*.






Clearing Statistics

To clear statistics, see “Clearing Statistics” on page 88.

Making Physical Drive Settings

An alias is the only setting you can make to an individual physical drive. All other settings are global. See “Making Global Physical Drive Settings” on page 100.

To make physical drive settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. Click a Physical Drive  icon.
6. Click the Settings tab in Management View.
7. Type an alias into the Physical Drive Alias field.
Maximum of 32 characters. Use letters, numbers, space between words, and underscore. An alias is optional.
8. Click the **Submit** button.






Clearing Stale and PFA Conditions

The Clear tab only appears when those conditions are present.

- Stale – The physical drive contains obsolete disk array information.
- PFA – The physical drive has errors resulting in a prediction of failure.

Be sure you have corrected the condition by a physical drive replacement, rebuild operation, etc., first. Then clear the condition. See “Physical Drive Problems” on page 273 for more information.

To clear a Stale or PFA status from a physical drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. Click a Physical Drive  icon.
6. in Management View, click the Clear tab.
7. In the Confirmation box, click **OK** to confirm.



Note

If a physical drive has both a Stale and a PFA condition, click the Clear tab once to clear the Stale condition, then click again to clear the PFA condition.

Forcing a Physical Drive Offline or Online

The Physical Drive–Force Offline/Online tab enables you to force an:

- Online physical drive to go Offline
- Offline physical drive to go Online

The Force Offline/Online tab appears only for physical drives that are assigned to disk arrays.



Caution

Forcing a physical drive offline or online is likely to cause data loss. Back up your data before you proceed. Use these functions only when required.







Important

Forcing a physical drive offline will cause your logical drives to become degraded. If Auto Rebuild is enabled and a spare drive is available, the disk array will begin rebuilding itself automatically.

To force a physical drive offline or online:

1. Click the Subsystem  icon in Tree View.

2. Click the Enclosures  icon.
3. Click the Enclosure  icon.
4. Click the Physical Drives  icon.
5. Click a Physical Drive  icon.
6. Click the Force Offline/Online tab in Management View.
7. Click the **Submit** button.
8. In the confirmation box, type the word **confirm** in the field provided.
9. Click the **OK** button.



Managing Disk Arrays

Disk Array Management includes the following functions:

- Viewing Disk Arrays (page 105)
- Creating a Disk Array (page 105)
- Deleting a Disk Array (page 109)
- Locating a Disk Array (page 110)
- Viewing Disk Array Information (page 110)
- Making Disk Array Settings (page 111)
- Creating a Logical Drive (page 111)
- Deleting a Logical Drive (page 113)
- Migrating a Disk Array (page 113)
- Rebuilding a Disk Array (page 114)
- Running PDM on a Disk Array (page 116)
- Transitioning a Disk Array (page 116)
- Preparing a Disk Array for Transport (page 117)

Viewing Disk Arrays

To view the disk arrays in this enclosure plus any expanded or cascaded enclosures:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.

A list of disk arrays appears in Management View.

Click the **DA** link to view a specific disk array. See “Viewing Disk Array Information” on page 110.

Creating a Disk Array



The CLU provides three methods of creating a disk array:

- **Automatic** – Creates a default disk array and logical drive based on unconfigured physical drives in the system. No user choices. See “Creating a Disk Array – Automatic” on page 106.
- **Express** – You select the RAID characteristics and type of application. Creates a disk array and logical drive(s) based on your input. See “Creating a Disk Array – Express” on page 106.
- **Advanced** – You specify all parameters for a new disk array. One logical drive will be made automatically when you create the disk array. If you select less than the total available capacity, you can use the remaining space to

create additional logical drives at a later time. See “Creating a Disk Array – Advanced” on page 108.

Creating a Disk Array – Automatic

The Disk Array Automatic Creation option enables you to create a new disk array following a default set of parameters. One logical drive will be made automatically when you create the disk array. To create a Disk Array using the Automatic function:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Create tab in Management View.
4. From the Create tab dropdown menu, select *Automatic*.

The following parameters display:

- **Disk Arrays** – The number of physical drives in the disk array, their slot numbers, configurable capacity, and the number of logical drives to be created
 - **Logical Drives** – The ID number of the logical drive(s), their RAID level, capacity, and stripe size
 - **Spare Drives** – The physical drive slot number of the dedicated hot spare assigned to this disk array. A hot spare drive is created for all RAID levels except RAID 0, when five or more unconfigured physical drives are available
5. If you accept these parameters, click the **Submit** button.

The new disk array appears in the Disk Array List the Information tab.

If you do NOT accept these parameters, use the Advanced option to create your disk array.



Creating a Disk Array – Express

The Disk Array Express Creation option enables you to choose the parameters for a new disk array by specifying the characteristics you want. With this method, you can create multiple logical drives at the same time you create your disk array. However, all of the logical drives will be the same.

If you prefer to specific the parameters directly, use the Advanced option to create your disk array.

If you are uncertain about choosing parameters for your disk array, use the Automatic option.

To create a new disk array:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Create tab in Management View.
4. From the Create tab dropdown menu, select *Express*.
5. Check the boxes to select any one or combination of:
 - **Redundancy** – The array will remain available if a physical drive fails
 - **Capacity** – The greatest possible amount of data capacity
 - **Performance** – The highest possible read/write speed
 - **Spare Drive** – A hot spare drive is created when you select Redundancy, Spare Drive, and five or more unconfigured physical drives are available
6. In the Number of Logical Drives field, enter the number of logical drives you want to make from this disk array.
7. From the Application Type menu, select an application that best describes your intended use for this disk array:
 - File Server
 - Video Stream
 - Transaction Data
 - Transaction Log
 - Other
8. Click the **Update** button.

Or check the Automatic Update box and updates will occur automatically.

The following parameters display:

- **Disk Arrays** – The number of physical drives in the disk array, their slot numbers, configurable capacity, and the number of logical drives to be created
- **Logical Drives** – The slot number of the logical drive(s), their RAID level, capacity, and stripe size
- **Spare Drives** – The physical drive slot number of the dedicated hot spare assigned to this disk array (all RAID levels except RAID 0)

If you accept these parameters, proceed to the next step.

If you do NOT accept these parameters, review and modify your selections in the previous steps.

9. When you are done, click the **Submit** button.



The new disk array appears in the Disk Array List the Information tab.

Creating a Disk Array – Advanced

The Disk Array Advanced Creation option enables you to directly specify all parameters for a new disk array. One logical drive will be made automatically when you create the disk array. If you select less than the total available capacity, you can use the remaining space to create additional logical drives at a later time.

If you are uncertain about choosing parameters for your disk array, use the Express or Automatic option to create your disk array.

To create a new disk array:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. From the Create tab dropdown menu, select *Advanced*.

Step 1 – Disk Array Creation

4. Enter an alias for the disk array in the field provided.
5. Check the box if you want to enable Media Patrol.
For more information, see “Media Patrol” on page 238.
6. Check the box if you want to enable PDM.
For more information, see “Predictive Data Migration (PDM)” on page 238.
7. Highlight physical drives you want in the disk array from the Available list and press the >> button to move them to the Selected list.
You can also double-click them to move them.
8. When you are done, click the **Next** button.

Step 2 – Logical Drive Creation

Logical Drive Creation enables you to specify logical drives under the new disk array. Enter the information for a logical drive, then click the **Update** button. If there is free capacity remaining, you can specify another logical drive now or wait until later.

9. Enter an alias for the logical drive in the field provided.
10. Choose a RAID level for the logical drive from the dropdown menu.
The choice of RAID levels depends the number of physical drives you selected.
11. RAID 50 – Specify the number of axles for your array.
For more information on axles, see “RAID 50 Axles” on page 226.
12. Specify a Capacity and the unit of measure (MB, GB, TB).
This value will be the data capacity of the first logical drive in your new disk array. If you specify less than disk array's maximum capacity, the remainder will be available for additional logical drives which you can create later.

13. Specify a Stripe size from the dropdown menu.
64 KB, 128 KB, 256 KB, and 1 MB are available. 64 KB is the default.
14. Specify a Sector size from the dropdown menu.
For iSCSI, use the 512 B default. See “Choosing Sector Size” on page 231.
15. Specify a Read (cache) Policy from the dropdown menu.
Read Cache, Read Ahead Cache, and No Cache are available. Read Ahead is the default.
16. Specify a Write (cache) Policy from the dropdown menu.
Write Back and Write Through (Thru) are available. Write Back is the default.
17. Click the **Update** button.
A new logical drive is displayed under New Logical Drives.
Repeat the above steps to specify additional logical drives as desired.
18. When you are done specifying logical drives, click the **Next** button.

Step 3 – Summary

The Summary lists the disk array and logical drive information you specified.

19. To proceed with disk array and logical drive creation, click the **Submit** button.

The new disk array appears in the Disk Array List the Information tab.



Note

This function does not automatically create a hot spare drive. After the disk array is created, you can create a hot spare drive for it. For more information, see “Creating a Spare Drive” on page 126.

Deleting a Disk Array



The Disk Arrays–Delete tab enables you to delete existing disk arrays.



Caution

If you delete a disk array, you also delete any logical drives that belong to it, along with the data in those logical drives. Back up any important data before deleting a disk array.

To delete a disk array:




1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Delete tab in Management View.

4. Check the box to the left of the disk array you want to delete.
5. Click the **Submit** button.
6. In the confirmation box, type the word confirm in the field provided.
7. Click the **OK** button.

The selected disk array disappears from the Disk Array List the Information tab.

Locating a Disk Array

To locate a Disk Array:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.




In the diagram at the top of Management View, the crosshatched physical drives belong to the disk array.

4. Click the crosshatch pattern.

The disk status LEDs will blink for one minute.

Viewing Disk Array Information

To view Disk Array information:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.

The disk array information is shown in Management View.

Disk Array Operational Status

- **OK** – This is the normal state of a logical drive. When a logical drive is Functional, it is ready for immediate use. For RAID Levels other than RAID 0 (Striping), the logical drive has full redundancy.
- **Synchronizing** – This condition is temporary. Synchronizing is a maintenance function that verifies the integrity of data and redundancy in the logical drive. When a logical drive is Synchronizing, it will function and your data is available. However, access will be slower due to the synchronizing operation.
- **Critical/Degraded** – This condition arises as the result of a physical drive failure. A degraded logical drive will still function and your data is still available. However, the logical drive has lost redundancy (fault tolerance). You must determine the cause of the problem and correct it.

- Rebuilding – This condition is temporary. When a physical drive has been replaced, the logical drive automatically begins rebuilding in order to restore redundancy (fault tolerance). When a logical drive is rebuilding, it will function and your data is available. However, access will be slower due to the rebuilding operation.
- Transport Ready – After you perform a successful Prepare for Transport operation, this condition means you can remove the physical drives of this disk array and move them to another enclosure or different drive slots. After you relocate the physical drives, the disk array status will show OK.




Adjustable Items

- Alias – Optional.
- Media Patrol – Enabled or disabled.
- PDM – Enabled or disabled.

See “Making Disk Array Settings” on page 111.

Making Disk Array Settings



To make Disk Array settings:


1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Settings tab in Management View.
5. Optional. Enter an alias in the Disk Array Alias field.
Maximum of 32 characters. Use letters, numbers, space between words, and underscore. An alias is optional.
6. To enable Media Patrol support, check the Media Patrol box.
7. To enable PDM support, check the PDM box.
8. Click the **Submit** button.

Creating a Logical Drive

When you create a disk array, you automatically create one logical drive also. If the initial logical drive used less than the full capacity of the disk array, you can create additional logical drives from the same disk array.

To create a logical drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.

3. Click the Disk Array  icon.
4. Click the Create LD tab in Management View.
5. Enter an alias (name) in the Alias field.
Maximum of 32 characters. Use letters, numbers, space between words, and underscore. An alias is optional.
6. From the RAID Level dropdown list, select a RAID level for this logical drive.
All RAID levels supported by the disk array appear in the list. See “Choosing a RAID Level” on page 228.
7. RAID 50 – Specify the number of axles for your array.
For more information on axles, see “RAID 50 Axles” on page 226.
8. Enter a capacity and select unit of measure (MB, GB, TB).
The default value is the available capacity of the disk array. You can use this value or any lesser amount.
9. From the Stripe dropdown menu, select a Stripe size for this logical drive.
The choices are 64 KB, 128 KB, 256 KB, 512 KB, and 1 MB. 64 KB is the default. See “Choosing Stripe Size” on page 231.
10. From the Sector dropdown menu, select a Sector size for this logical drive.
For iSCSI, use the 512 B default. See “Choosing Sector Size” on page 231.
11. From the Read Policy dropdown menu, select a Read Cache policy for this logical drive.
The choices are Read Cache, Read Ahead, and No (read) Cache. Read Ahead is the default. See “Cache Policy” on page 232.
12. From the Write Policy dropdown menu, select a Write Cache policy for this logical drive.
The choices are Write Through (thru) and Write Back. Write Back is the default. If you selected No Cache under Read Cache, this setting will be Write Through. See “Cache Policy” on page 232.
13. Click the **Update** button to enter the logical drive parameters.
14. Review the results. If there is remaining space the disk array, you can create another logical drive, following the steps above. Each logical drive can have a different set of parameters.
15. Click the **Next** button when you are done.
A new window displays with the disk array information and the proposed logical drives with their parameters.
16. Click the **Submit** button create the logical drives.

The new logical drive appears in the Logical Drive List the Information tab.

If you created a fault-tolerant logical drive (any RAID level except RAID 0), the Operational Status of new logical drive will display *Synchronizing* for several minutes after creation. You can use the logical drive during this period but read/write performance could be slower than normal.




Deleting a Logical Drive



Caution

All data the logical drive will be lost. Back up any valuable data before deleting the logical drive.

To delete a logical drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Delete LD tab in Management View.
5. Check the box to the left of the logical drive you want to delete.
6. Click the **Submit** button.

In the confirmation box, type the word **confirm** in the field provided.

7. Click the **OK** button.

The selected logical disappears from the Logical Drive List the Information tab.

Migrating a Disk Array

The action of migrating a disk array means either or both:

- Change the RAID Level
- Expand the storage capacity




For a list of Migration options and other important information, see “RAID Level Migration” on page 235.



Notes

- You can add physical drives to a RAID 50 array but you cannot change the number of axes.
- If you add an odd number of physical drives to a RAID 10 array, it will become a RAID 1E array by default.

To Migrate an existing disk array:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. From the dropdown menu the Background Activities tab, select *Start Migration*.
5. Highlight physical drives you want in the disk array from the Available list and press the >> button to move them to the Selected list.
You can also double-click them to move them.
6. When you are done, click the **Next** button.
7. Select a new RAID Level, if desired.
8. To expand the disk array's capacity, check the Expand Capacity box.
9. If you checked the Expand Capacity box, enter a number into the Capacity field and select the appropriate unit of measure (MB, GB, TB).
10. Under Capacity Usage, highlight the logical drive whose RAID level you want to change or whose capacity you want to expand.
11. Click the **Update** button.
The logical drive changes to reflect your choices.
12. Update other logical drives using the same method.
13. When you are done making the changes, click the **Next** button.
14. Click the **Submit** button to begin Migration.

To set Migration priority, see “Making Background Activity Settings” on page 51.

Rebuilding a Disk Array

When you rebuild a disk array, you are actually rebuilding the data on a replacement physical drive.

Rebuilding Automatically

Normally, a disk array would rebuild itself using a hot disk drive, after going Critical. However, if the Auto Rebuild function is disabled or no spare drives are available, you must initiate the procedure.




To enable Auto Rebuild, see “Making Background Activity Settings” on page 51.

To create a spare drive, see “Creating a Spare Drive” on page 126.

For more information, see “Hot Spare Drive(s)” on page 234.

Rebuilding Manually

If a physical drive has failed, identify and replace the drive, then rebuild the disk array as described below:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.

If there are multiple disk arrays, choose the icon with the yellow !.

4. From the dropdown menu the Background Activity tab, select *Start Rebuild*.
5. Select the Source physical drive.
This is a remaining functional physical drive in the disk array.
6. Select the Target physical drive.
This is the replacement physical drive.
7. Click the **Submit** button.

The Disk Array Background Activity tab shows the rebuild progress on the replacement (target) physical drive. Depending the size of the physical disk involved, this process will take some time.

To view more information, click the **Rebuild on PDx** link.




To set Rebuild priority, see “Making Background Activity Settings” on page 51.

Running Media Patrol on a Disk Array

Media Patrol checks the magnetic media on physical drives. When it finds the specified number of bad blocks, it will trigger PDM. See “Making Background Activity Settings” on page 51 and “Running PDM” on page 52.

You can schedule Media Patrol to run automatically, see “Scheduling an Activity” on page 53.

To start Media Patrol:




1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. From the dropdown menu the Background Activities tab, choose *Start Media Patrol*.
5. Click the **Start** button.

Running PDM on a Disk Array

Predictive Data Migration (PDM) migrates data from the suspect physical drive to a spare physical drive, similar to Rebuilding. But unlike Rebuilding, PDM acts *before* the disk drive fails and your Logical Drive goes Critical.

See “Predictive Data Migration (PDM)” on page 238.

To start PDM:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Background Activities tab in Management View.
5. From the dropdown menu the Background Activities tab, choose *Start PDM*.
6. In the next screen, select the Source and Target physical drives.
The suspect physical drive is the source. The replacement physical drive is the target.
7. Click the **Start** button.


Transitioning a Disk Array

Transition is the process of replacing a revertible spare drive that is currently part of a disk array with an unconfigured physical drive or a non-revertible spare. The revertible spare drive returns to its original status. For more information, see “Transition” on page 239.

In order to run the Transition function:

- The spare drive must be Revertible.
- You must specify an unconfigured physical drive of the same or larger capacity to replace the revertible spare drive.

To run Transition:

1. Click the Subsystem  icon in Tree View.
2. From the dropdown menu on the Background Activities tab, select *Start Transition*.
3. Select an unconfigured physical drive from the list of available drives.
4. From the Target Physical Drive dropdown menu, choose an unconfigured physical drive.
5. Click the **Submit** button.

After Transition is completed, refresh the screen. The revertible spare drive will be listed under the Spare Drives icon and the disk array's operational status will show OK.

To set Transition priority, see “Making Background Activity Settings” on page 51.

Preparing a Disk Array for Transport

Transport is the action of moving the physical drives of a disk array:

- To different slots in the same VTrak enclosure
- From one VTrak enclosure to another






Important

Before you can use this feature:

- There must be a dedicated spare disk drive assigned to this disk array.
 - The disk array's Operational Status must be OK.
-

To prepare a disk array for transport:

1. Click the Subsystem  icon in Tree View.
 2. Click the Disk Arrays  icon.
 3. Click the Disk Array  icon.
 4. Click the Transport tab in Management View.
 5. Click the **Submit** button.
 6. In the confirmation box, type the word **confirm** in the field provided.
 7. Click the **OK** button.
 8. After the Transition is complete, move the physical drives comprising the disk array to their new locations.
 9. Click the **Refresh** button in your Browser.
- The drives appear in their new locations and disk array status displays OK.

Managing Logical Drives





Logical drives are made from disk arrays. In the Tree, you can see a graphic representation of the logical drives that belong to each array. You can see a summary of all logical drives in the subsystem under Logical Drive Summary.

Logical drive management includes the following functions:

- Viewing Information for All Logical Drives (page 118)
- Locating a Logical Drive (page 119)
- Viewing Logical Drive Information (page 119)
- Viewing Logical Drive Statistics (page 120)
- Making Logical Drive Settings (page 120)
- Initializing a Logical Drive (page 121)
- Running Redundancy Check (page 122)
- Viewing the Logical Drive Check Table (page 123)
- Making Logical Drive LUN Settings (page 123)

Viewing Information for All Logical Drives

To view information about all logical drives in a disk array:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon

Logical Drive Status

- **OK** – This is the normal state of a logical drive. When a logical drive is Functional, it is ready for immediate use. For RAID Levels other than RAID 0 (Striping), the logical drive has full redundancy.
- **Synchronizing** – This condition is temporary. Synchronizing is a maintenance function that verifies the integrity of data and redundancy in the logical drive. When a logical drive is Synchronizing, it will function and your data is available. However, access will be slower due to the synchronizing operation.
- **Rebuilding** – This condition is temporary. When a physical drive has been replaced, the logical drive automatically begins rebuilding in order to restore redundancy (fault tolerance). When a logical drive is rebuilding, it will function and your data is available. However, access will be slower due to the rebuilding operation.

- **Critical** – This condition arises as the result of a physical drive failure. A degraded logical drive will still function and your data is still available. However, the logical drive has lost redundancy (fault tolerance). You must determine the cause of the problem and correct it.
- **Offline** – This condition arises as the result of a second physical drive failure. An Offline logical drive is not accessible but some or all of your data may remain intact. You must determine the cause of the problem and correct it.
- **Transport Ready** – After you perform a successful Prepare for Transport operation, this condition means you can remove the physical drives of this disk array and move them to another enclosure or different drive slots. After you relocate the physical drives, the disk array status will show OK.






To create a logical drive, see “Creating a Logical Drive” on page 111.

To delete a logical drive, see “Deleting a Logical Drive” on page 113.

For a Degraded or Offline logical drive, see “Critical & Offline Disk Arrays” on page 269.

Locating a Logical Drive

To locate a logical drive:





1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon
5. Click the Logical Drive  icon.

In the diagram at the top of Management View, the crosshatched physical drives belong to the logical drive.

6. Click the crosshatch pattern.
The disk status LEDs will blink for one minute.

Viewing Logical Drive Information

To view information for a single logical drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon

5. Click the Logical Drive  icon.

To specify an Alias or set the Read and Write Policies, click the Settings tab.

Logical Drive Status

See “Logical Drive Status” on page 118.

Logical Drive Synchronization

Synchronization is an automatic procedure applied to logical drives when they are created. Yes means the logical drive was synchronized.






Adjustable Items

- Alias – Optional.
- Read Policy
- Write Policy

See “Making Logical Drive Settings” on page 120.

Viewing Logical Drive Statistics

To view information for a single logical drive:





1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon
5. Click the Logical Drive  icon.
6. In Management View, Click the dropdown menu on the Information tab and choose *Statistics*.


Clearing Statistics

To clear statistics, see “Clearing Statistics” on page 88.

Making Logical Drive Settings

To make Logical Drive settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon

5. Click the Logical Drive  icon.
6. Click the Settings tab in Management View.
7. Optional. Enter an alias in the Logical Drive Alias field.
Maximum of 32 characters. Use letters, numbers, space between words, and underscore. An alias is optional.
8. From the Read Policy dropdown menu, select a Read Cache policy.
The choices are Read Cache, Read Ahead, and No Cache.
9. From the Write Policy dropdown menu, select a Write Cache policy.
The choices are Write Back and Write Through (Thru). If you select No Read Cache, Write policy is automatically Write Through.
10. Click the **Submit** button.

Initializing a Logical Drive





Initialization is done to logical drives after they are created from a disk array. Initialization sets all data bits in the logical drive to zero. The action is useful because there may be residual data the logical drives left behind from earlier configurations. For this reason, Initialization is recommended for all new logical drives.



Caution

When you initialize a logical drive, all the data the logical drive will be lost. Backup any important data before you initialize a logical drive.

Initialize a Logical Drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Logical Drive Summary  icon.
3. Click the  icon of the logical drive you want to Initialize.
You can also start Initialization from the Subsystem  icon Background Activities tab
4. Click the Background Activities tab in Management View.
5. From the Background Activities dropdown menu, select *Initialization*.
6. To select Quick Initialization, check the box.
If you checked the box, enter a value in the Quick Initialization Size field. This value is the size of the initialization blocks in MB.
7. If you did not select Quick Initialization, enter a hexadecimal value in the Initialization Pattern in Hex field or use the default 00000000 value.

8. Click the **Submit** button.
9. In the confirmation box, type the word **confirm** in the field provided.
10. Click the **OK** button.




To view the progress of the Initialization, click the Background Activity tab.


To set Initialization priority, see “Making Background Activity Settings” on page 51.

Running Redundancy Check

Redundancy Check is a routine maintenance procedure for fault-tolerant logical drives (those with redundancy) that ensures all the data matches exactly. Redundancy Check can also correct inconsistencies. You can also schedule a Redundancy Check. See “Scheduling an Activity” on page 53.

Redundancy Check a Logical Drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Logical Drive Summary  icon.
3. Click the  icon of the logical drive you want to Initialize.

You can also start Redundancy check from the Subsystem  icon Background Activities tab






4. From the dropdown menu on the Background Activities tab, select *Redundancy Check*.
5. To select *Auto Fix*, check the box.
This feature attempts to repair the problem when it finds an error.
6. To select *Pause On Error*, check the box.
This feature stops the process when it finds an error.
If Auto Fix is also checked, the process stops only when it finds a non-repairable error.
7. Click the **Submit** button.

To view the progress of the Redundancy Check, click the Background Activity tab.

To set Redundancy Check priority, see “Making Background Activity Settings” on page 51.

Viewing the Logical Drive Check Table

The Logical Drive Check Table displays errors related to a logical drive. Use this information to evaluate the integrity of the logical drive and to determine whether corrective action is needed. To View the tables:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon
5. Click the Logical Drive  icon.
6. Click the Check Table tab in Management View.
7. Click the option for the table you want to see.

The default is All tables.

If there are entries, they are listed as follows:

- Entry Number – A number assigned to each block of entry.
- Table Type – Read Check, Write Check or Inconsistent Block (see below).
- Start Logical Block Address – LBA of the first block for this entry.
- Count – Number of continuous blocks starting from this LBA.

Table Definitions

- Read Check Table – Contains a list of read errors for this logical drive.
- Write Check Table – Contains a list of write errors for this logical drive.
- Inconsistent Block Table – Contains a list of inconsistent blocks for this logical drive. Mirror data for RAID Levels 1, 1E, and 10 or Parity data for RAID Levels 5, 6, and 50 identified by the Redundancy Check (a background function).

Making Logical Drive LUN Settings






For iSCSI, LUN Masking is the process of applying a LUN Map so that each initiator can only access the LUNs specified for it.

Before you can specify an initiator for your LUN map, you must add an initiator to the VTrak's initiator list. See "Adding an Initiator" on page 73.

Obtain the initiator name from the initiator utility on your host system.

You must enable LUN Masking in order apply a LUN map to your logical drive. See "Enabling LUN Masking" on page 74.

To specify a iSCSI LUN Map:

1. Click the Subsystem  icon in Tree View.
2. Click the Disk Arrays  icon.
3. Click the Disk Array  icon.
4. Click the Logical Drives  icon
5. Click the Logical Drive  icon.
6. Click the LUN Map tab in Management View.
7. From the Initiator dropdown menu, choose an initiator for your LUN.
Or type the initiator name into the Initiator Name field.
8. Note that the initiator name you input must match exactly in order for the connection to work.
9. Type a LUN into the Map to LUN field.
10. Click the **Assign** button.
The initiator appears in the Assigned Initiator List.
11. Click the **Submit** button.

LUN Mapping Parameters

- Initiator Name – A World Wide Name (WWN), used to identify the Initiator.
An iSCSI initiator name is the iSCSI name of the initiator device and is composed of a single text string. iSCSI WWNs are somewhat different from regular WWNs.
- Alias – Optional. A common name for an iSCSI initiator
- Symbolic Name – Optional
- IP Address – IP address of the iSCSI port for this initiator
- Port ID – Port ID of the Fibre Channel port for this initiator
- LUN – Logical Unit Number on this logical drive for the selected initiator
You must enter different LUN numbers for each logical drive

Managing Spare Drives



When a physical drive in a disk array fails and a spare drive of adequate capacity is available, the disk array will begin to rebuild automatically using the spare drive. See “Critical & Offline Disk Arrays” on page 269.

Spare drive management includes the following functions:

- Viewing a List of Spare Drives (page 125)
- Locating a Spare Drive (page 125)
- Creating a Spare Drive (page 126)
- Deleting Spare Drive (page 127)
- Making Spare Drive Settings (page 127)
- Running Spare Check (page 128)

Viewing a List of Spare Drives

To view a list of spare drives:



1. Click the Subsystem  icon in Tree View.
2. Click the Spare Drives  icon.

The information includes:

- ID – The unique ID number assigned to the spare drive.
- Operational Status – OK is normal. Can also show Rebuilding, Transition Running, PDM Running, or Offline.
- Physical Drive ID – The ID number of the physical drive in the subsystem enclosure.
- Capacity – The data storage capacity of this spare drive.
- Revertible – Yes or No. A revertible spare drive automatically returns to its spare drive assignment after the failed physical drive in the disk array is replaced.
- Type – Global, can be used by any disk array. Dedicated, can only be used by the assigned disk array.
- Dedicated to Array – For dedicated spares, the disk array to which it is assigned. Global spares show N/A.

Locating a Spare Drive

To locate a physical drive assigned as a spare drive in the VTrak subsystem enclosure:

1. Click the Subsystem  icon in Tree View.
2. Click the Spare Drives  icon.

3. Click the Spare Drive  icon.

In Management View, the Enclosure Front View diagram appears with the location of the spare drive highlighted.



Creating a Spare Drive



Important

- There must be an unconfigured physical drive available for selection as a spare drive. See “Viewing a List of Physical Drives” on page 100.
 - Be sure the unconfigured physical drive has adequate capacity to replace the largest drive in the disk array.
-

To create a spare drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Spare Drives  icon.
3. Click the Create tab in Management View.
4. Select a spare type, Global or Dedicated.
Global can be used by any disk array. Dedicated can only be used by the assigned disk arrays
5. To make a revertible spare drive, check the Revertible box.
A revertible spare drive can be returned to spare drive status after it replaces a failed drive in a disk array. See “Transition” on page 239 for more information.
6. In the Physical drives field, highlight the physical drive you want to assign as a spare drive in the Available list and press the >> button to move the drive to the Selected list.
You can also double-click drives to move them.
7. If you selected a Dedicated spare drive, in the Dedicated to Disk Arrays field, highlight disk arrays to which you want assign the spare drive from the Available list and press the >> button to move the array to the Selected list.
You can also double-click arrays to move them.
8. Click the **Update** button.
Your choices are displayed under New Hot Spare Drives.
9. If you agree with the proposed choices, click the **Submit** button.



Deleting Spare Drive



Note




If an existing spare drive has the wrong parameters for your needs, click the Settings tab to change the parameters rather than delete the spare drive and create a new one.

To delete a spare drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Spare Drives  icon.
3. Click the Delete tab in Management View.
4. Check the box to the left of the spare drive you want to delete.
5. Click the **Submit** button.
In the confirmation box, type the word **confirm** in the field provided.
6. Click the **OK** button.

Making Spare Drive Settings



The Spare Drive–Settings tab enables you to change the settings of an existing spare drive. To change spare drive settings:

1. Click the Subsystem  icon in Tree View.
2. Click the Spare Drives  icon.
3. Click the Spare Drive  icon.
4. Click the Settings tab in Management View.
5. Select a spare type, Global or Dedicated.
Global can be used by any disk array. Dedicated can only be used by the assigned disk arrays
6. To make a revertible spare drive, check the Revertible box.
A revertible spare drive automatically returns to its spare drive assignment after the failed physical drive in the disk array is replaced.
7. If you selected a Dedicated spare drive, in the Dedicated to Disk Arrays field, highlight the disk arrays to which you want assign the spare drive from the Available list and press the >> button to move them to the Selected list.
You can also double-click array to move it.
8. Click the **Submit** button.

Running Spare Check

Spare Check verifies the operational status of your spare drives. You can also schedule a Spare Check. See “Scheduling an Activity” on page 53.

To check a spare drive:

1. Click the Subsystem  icon in Tree View.
2. Click the Spare Drives  icon.
3. Click the Spare Check tab in Management View.
4. From the Physical Drive dropdown menu, select the spare drive you want to check.

Or select *All* to check all the spare drives at the same time.

5. Click the **Submit** button.

The results of the Spare Check appear under Spare Check Status in the Information tab. “Healthy” means normal condition.

Working with the Logical Drive Summary



The Logical Drive Summary displays a list of all logical drives in the VTrak enclosure plus the expanded or cascaded enclosures. This list does not arrange the logical drives under the disk array to which they belong nor under the enclosure in which they are located.

Logical Drive Summary includes the following functions:




- Viewing a List of All Logical Drives (page 129)
- Viewing Individual Logical Drive Information (page 129)

Viewing a List of All Logical Drives

To view a list of all logical drives in all enclosures:

1. Click the Subsystem  icon in Tree View.
2. Click the Drive Summary  icon.

Viewing Individual Logical Drive Information

1. Click the Subsystem  icon in Tree View.
2. Click the Drive Summary  icon.
3. Click the Logical Drive  icon.

The information and location for the logical drive appear in Management View. See Viewing Logical Drive Information (page 119).

Chapter 5: Management with the CLU

This chapter covers the following topics:

- Logging into the CLU (page 132)
- Running Quick Setup (page 135)
- Managing the Subsystem (page 136)
- Managing the Controllers (page 138)
- Managing the Enclosure (page 140)
- Managing Physical Drives (page 144)
- Managing Disk Arrays (page 147)
- Managing Logical Drives (page 158)
- Managing the Network Connection (page 162)
- Managing iSCSI Connections (page 167)
- Managing Background Activity (page 172)
- Working with the Event Viewer (page 174)
- Managing Spare Drives (page 176)
- Working with LUN Mapping (page 179)
- Managing Users (page 181)
- Working with Software Management (page 184)
- Flashing through TFTP (page 191)
- Clearing Statistics (page 192)
- Restoring Factory Defaults (page 193)
- Shutting Down the Subsystem (page 194)
- Restarting the Subsystem (page 196)
- Working with the Buzzer (page 197)

For information about VTrak's audible alarm and LEDs, see "Chapter 8: Troubleshooting" on page 243.

Logging into the CLU

There are two connections methods for the CLU:

- **Serial** – Requires a null-modem cable to connect the serial ports on the Host PC and VTrak
- **Telnet** – Requires a network connection between the Host PC and VTrak's Management Port

Making a Serial Connection

Before you begin, be sure the null modem cable is connected between the Host PC and VTrak, and that both machines are booted and running. Then do the following actions:

1. Start your PC's terminal emulation program.
2. Press **Enter** once to launch the CLU.

Making a Telnet Connection

If your Telnet connection has not been setup, refer to "Making Serial Cable Connections" on page 20.

To start the telnet program:

1. Go to the command line prompt (Windows) or click the terminal icon (Linux), then run:

```
telnet 192.168.1.56 2300
```

The IP address above is only an example. Use your VTrak's Management port IP address. *2300* is the Telnet port for the VTrak.

The telnet login screen appears:

2. At the Login prompt, type the user name and press Enter.
The default user name is *administrator*.
3. At the Password prompt, type the password and press Enter.
The default password is *password*.
The CLI screen appears.
4. At the CLI prompt, type **menu** and press Enter
The CLU Main Menu appears.

Figure 4. The CLU main menu

```

CLU | Main Menu

Quick Setup
Subsystem Management
Physical Drive Management
Disk Array Management
Logical Drive Management
Network Management
iSCSI Management
Background Activities
Event Viewer
Additional Info and Management
Buzzer

Return to CLI

```

Quick Setup – A sequence of four steps to setup System Date & Time, Management Port, and RAID Configuration.

Subsystem Management – View controller information, lock/unlock the controller, set date and time, and monitor the enclosure.

Physical Drive Management – View disk drive assignments and parameters, change disk drive cache settings and command queuing, and locate a physical drive.

Disk Array Management – View disk array information, create and delete disk arrays, transport, rebuild, PDM, and transition functions, and locate a disk array, create and delete logical drives.

Logical Drive Management – View logical drive information, name logical drives, initialization and redundancy check, and locate a logical drive.

Network Management – Set the IP address for Management Port, gateway, and DNS server; subnet mask.

iSCSI Management – Node settings, Port statistics, Session information, iSNS options, CHAPs, and Ping function.

Background Activity – Settings for Media Patrol, Auto Rebuild, Rebuild, Migration, PDM, Transition, Synchronization, Initialization, Redundancy Check rate, and thresholds.

Event Viewer – View the event logs.

Additional Info and Management – Spare Drives, LUN Mapping, User management, EMail, SLP, Webserver, Telnet, SNMP, CIM, and Netsend settings, firmware flash, clear statistics and restore factory default settings.

Buzzer – Enable, disable or silence the buzzer (audible alarm).

Accessing Online Help

To access online help on any CLU screen, press Ctrl-E.

To return to the CLU, press Enter.

Logging out of the CLU

1. Highlight *Return to Previous Menu* and press Enter.
Repeat this action until you arrive at the Main Menu.
2. From the Main Menu, highlight *Return to CLI* and press **Enter** to exit
3. Close the terminal emulation, Telnet or terminal window.

Running Quick Setup

Quick Setup is discussed under “Setting up the Serial Connection” on page 23.

Managing the Subsystem

Subsystem Management includes the following functions:

- Setting an Alias for the Subsystem (page 136)
- Running Media Patrol (page 136)
- Locking or Unlocking the Subsystem (page 136)
- Setting Subsystem Date and Time (page 137)

Setting an Alias for the Subsystem

An alias is optional. To set an Alias for this subsystem:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Type and alias into the Alias field.
Maximum of 48 characters. Use letters, numbers, space between words and underscore.
3. Press Ctrl-A to save your settings.

Running Media Patrol

Media Patrol is a routine maintenance procedure that checks the magnetic media on each disk drive. Media Patrol checks all physical drives assigned to disk arrays and spare drives. It does not check unconfigured drives.

To start, stop, pause or resume Media Patrol:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Media Patrol* and press enter.
3. Highlight *Start*, *Stop*, *Pause*, or *Resume* and press Enter.
4. If you chose Stop, press Y to confirm.

Locking or Unlocking the Subsystem

The lock prevents other sessions (including by the same user) from making a configuration change to the controller until the lock expires or a forced unlock is done. When the user who locked the controller logs out, the lock is automatically released.

Setting the Lock

To set the lock:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Lock Management* and press Enter.
3. In the Lock Time field, type a lock time in minutes.
1440 minutes = 24 hours

4. Highlight *Lock* and press Enter.

Resetting the Lock

To reset the lock with a new time:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Lock Management* and press Enter.
3. In the Lock Time field, type a lock time in minutes.
1 to 1440 minutes (24 hours)
4. Highlight *Renew* and press Enter.

Releasing the Lock

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Lock Management* and press Enter.
3. Highlight *Unlock* and press Enter.

Releasing a Lock set by another user

To release somebody else's lock:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Lock Management* and press Enter.
3. Highlight *Force Unlock* and press the Spacebar to change to *Yes*.
4. Highlight *Unlock* and press Enter.

Setting Subsystem Date and Time

Use this screen to make Date and Time settings:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Modify System Date and Time* and press Enter.
3. Highlight the System Date or System Time setting.
4. Press the backspace key to erase the current value.
5. Type in a new value.
6. Press Ctrl-A to save your settings.

Managing the Controllers

Controller Management includes the following functions:

- Viewing Controller Information (page 138)
- Making Controller Settings (page 138)
- Locating the Controller (page 139)

Viewing Controller Information

Controller Management includes information, settings and statistics.

To access Controller Management:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Controller Management* and press Enter.
3. Highlight the controller you want and press Enter.

Basic Controller information displays.

To access additional controller information, highlight *Advanced Information* and press Enter.

To access controller statistics, highlight *Controller Statistics* and press Enter.

Making Controller Settings

An alias is optional. To set an Alias for this controller:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Controller Management* and press Enter.
3. Highlight the controller you want and press Enter.
4. Highlight *Controller Settings* and press Enter.
5. Make the following settings as required:

- Type and alias into the Alias field.

Maximum of 48 characters. Use letters, numbers, space between words and underscore. An alias is optional.

- Highlight *Coercion* and press the spacebar to toggle between *Enable* and *Disable*.
- Highlight *Coercion Method* and press the spacebar to toggle through:

GB Truncate – Reduces the capacity to the nearest 1 GB boundary

10 GB Truncate – Reduces the capacity to the nearest 10 GB boundary

Grp (group) Rounding – Uses an algorithm to determine truncation. Results in the maximum amount of usable drive capacity

Table Rounding – Applies a predefined table to determine truncation

- Highlight *Cache Flush Interval* and press the backspace key to erase the current value. Type a new interval value (1 to 12 seconds).
 - Highlight *SMART* and press the spacebar to toggle between *Enable* and *Disable*.
 - Highlight *SMART Poll Interval* and press the backspace key to erase the current value. Type a new interval value (1 to 1440 minutes).
 - Highlight *Adaptive Writeback Cache* and press the spacebar to toggle between Enabled and Disabled.
6. Press Ctrl-A to save your settings.

Locating the Controller

To locate this controller:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Controller Management* and press Enter.
3. Highlight the controller you want and press Enter.
4. Highlight *Controller Settings* and press Enter.
5. Highlight *Locate Controller* and press Enter.

Controller Dirty Cache LED and Status LED, on the back of the Controller, will flash for one minute.

Managing the Enclosure

Enclosure Management includes the following functions:

- Viewing Enclosure Information (page 140)
- Viewing Power Supply Status (page 140)
- Locating a Power Supply (page 140)
- Viewing Blower Status (page 141)
- Viewing Voltage Sensor Status (page 141)
- Viewing Temperature Sensor Status (page 141)
- Setting Temperature Thresholds (page 141)
- Checking the Batteries (page 142)
- Reconditioning a Battery (page 142)
- Locating an Enclosure (page 143)

Viewing Enclosure Information

Enclosure Management includes information, status, settings and location. To access Enclosure Management:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.

To access FPU VPD information (vital product data on field replaceable units), highlight *FPU VPD Information* and press Enter.

To access the current status of the power supplies, blowers, temperature or voltage sensors, highlight the item you want and press Enter.

Viewing Power Supply Status

To view the status of the power supplies:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Power Supplies* and press Enter.

The screen displays the operational and fan status of VTrak's two power supplies. If any status differs from normal or the fan speed is below the Healthy Threshold value, there is a fan/power supply malfunction. See "Replacing a Power Supply" on page 204.

Locating a Power Supply

To locate a power supply:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.

2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Power Supplies* and press Enter.
4. Highlight *Locate Power Supply* and press Enter.
The LED on the selected power supply blinks for one minute.

Viewing Blower Status

To view the status of the blowers:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Blowers* and press Enter.

The screen displays the status and speed of VTrak's blowers. There is one blower in each cooling unit. If blower speed is below the Healthy Threshold, there is a blower malfunction. See "Replacing a Cooling Unit Fan or Blower" on page 205.

Viewing Voltage Sensor Status

To view the status of the voltage sensors:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Voltage Sensors* and press Enter.

If any voltage is outside the Healthy Threshold values, there is a voltage malfunction in the enclosure. See "Chapter 8: Troubleshooting" on page 243.

Viewing Temperature Sensor Status

To view the status of the temperature sensors:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Temperature Sensors* and press Enter.

If any temperature exceeds the Healthy Threshold value, there is an overheat condition in the enclosure. See "Setting Temperature Thresholds" on page 141 and "Chapter 8: Troubleshooting" on page 243.

Setting Temperature Thresholds

To change temperature thresholds:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.

3. Highlight *Enclosure Settings* and press Enter.
4. Highlight the Temperature Warning threshold you want to change.
5. Press the backspace key to erase the current value.
6. Type a new interval value in degrees C.
7. Press Ctrl-A to save your settings.

Checking the Batteries

This feature enables you monitor and recondition the subsystem battery or batteries.

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Batteries* and press Enter.
4. Highlight the battery you want to monitor and press Enter.

Battery Notes

Each battery works with a controller. If the battery is present in the subsystem but the corresponding controller is not present, the battery will not appear in the interface.

If a battery does not reflect normal conditions and it is not currently under reconditioning, run the Recondition function before you replace the battery. See “Reconditioning a Battery” on page 142.

If a battery reaches the threshold temperature while charging or discharging, the charge or discharge pauses and the blower runs at high speed until the battery temperature falls below the threshold.

If the battery does not maintain normal values after a Recondition, replace the battery. See “Replacing a Cache Battery” on page 211.

VTrak automatically reconditions the battery every two months.

When you install a new battery, the cycle count shows 0. VTrak automatically runs a recondition on the battery to verify it. If you restart the subsystem or controller before reconditioning is finished, the battery is charged to 100%, then reconditioning starts again.

Reconditioning a Battery

To recondition the subsystem battery:

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Batteries* and press Enter.

4. Highlight the battery you want to monitor and press Enter.
5. Highlight *Recondition Battery* and press Enter.
6. Press Y to confirm.

During reconditioning, Battery status can show “discharging” and “recharging”, and a value will display next to Current. During that time, the controller cache is reset to Write Thru. Reconditioning runs in the background and stops automatically upon completion.

VTrak automatically reconditions the battery every two months.

Locating an Enclosure

This feature helps you identify the physical VTrak enclosure you are working with through the CLU.

1. From the Main Menu, highlight *Subsystem Management* and press Enter.
2. Highlight *Enclosure Management* and press Enter.
3. Highlight *Locate Enclosure* and press Enter.

The LEDs on the front of the VTrak will blink for one minute.

Managing Physical Drives

Physical Drive Management includes the following functions:

- Viewing a List of Physical Drives (page 144)
- Making Global Physical Drive Settings (page 144)
- Setting an Alias (page 145)
- Viewing Advanced Information (page 145)
- Viewing Physical Drive Statistics (page 145)
- Clearing Stale and PFA Conditions (page 145)
- Forcing a Physical Drive Offline or Online (page 146)
- Locating a Physical Drive (page 146)

Viewing a List of Physical Drives

To view a list of physical drives:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight *Global Physical Drives Settings* and press Enter.

The list of physical drives appears.

Making Global Physical Drive Settings

All physical drive settings are made globally, except for setting an alias, which applies to individual drives.

To make global physical drive settings:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight *Global Physical Drives Settings* and press Enter.
3. Change the following settings as required:
 - Highlight *Write Cache* and press the spacebar to toggle between *Enabled* and *Disabled*.
 - Highlight *Read Look Ahead Cache* and press the spacebar to toggle between *Enabled* and *Disabled*.
 - Highlight *CmdQueuing* and press the spacebar to toggle between *Enabled* and *Disabled*.
 - Highlight *DMA Mode* and press the spacebar to toggle through UDMA 0–5 and MDMA 0–2.
4. Press Ctrl-A to save your settings.

Setting an Alias

An alias is optional. To set an Alias for a physical drive:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight the physical drive of your choice and press Enter.
3. Type an alias into the Alias field.
Maximum of 32 characters. Use letters, numbers, space between words and underscore.
4. Press Ctrl-A to save your settings.

Viewing Advanced Information

To view advanced information about the selected physical drive:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight the physical drive of your choice and press Enter.
3. Highlight *Advanced Information* and press Enter.

Viewing Physical Drive Statistics

To view the statistics for the selected physical drive:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight the physical drive of your choice and press Enter.
3. Highlight *Physical Drive Statistics* and press Enter.

Clearing Stale and PFA Conditions

The Clear Stale and Clear PFA functions only appear when those conditions exist on the physical drive. To clear a Stale or PFA condition on a physical drive:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight the physical drive of your choice and press Enter.
3. Highlight *Clear Stale* or *Clear PFA* and press Enter.

If a physical drive is still online and shows a PFA error but “Clear PFA” does not appear, use PDM to copy the data to a new physical drive. Go to Disk Array Info and Settings.

If a physical drive is offline and shows a PFA error, rebuild the disk array. Go to Disk Array Info and Settings. After rebuilding, the drive will show Stale. Run Clear Stale then run Clear PFA.

If the physical drive with a PFA error is a spare, you must delete the drive as a spare, then Clear PFA will be available.

After you clear a PFA error, watch for another PFA error to appear. If it does, replace the physical drive.

Forcing a Physical Drive Offline or Online

This function enables you to force an:

- Online physical drive to go Offline
- Offline physical drive to go Online

The Force Offline/Online function appears only for physical drives that are assigned to disk arrays.



Caution

Forcing a physical drive offline or online is likely to cause data loss. Back up your data before you proceed. Use these functions only when required.

To force a physical drive offline or online:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight *Global Physical Drives Settings* and press Enter.
3. Highlight the physical drive of your choice and press Enter.
4. Highlight *Force Offline* or *Force Online* and press Enter.
5. Press Y to confirm.

Locating a Physical Drive

This feature helps you identify a physical drive within the VTrak enclosure you are working with through the CLU. To locate a physical drive:

1. From the Main Menu, highlight *Physical Drive Management* and press Enter.
2. Highlight *Global Physical Drives Settings* and press Enter.
3. Highlight the physical drive of your choice and press Enter.
4. Highlight *Locate Physical Drive* and press Enter.

The drive carrier LEDs on the front of the VTrak will blink for one minute.

Managing Disk Arrays

Disk Array Management includes the following functions:

- Creating a Disk Array (page 147)
- Deleting a Disk Array (page 151)
- Viewing Disk Array Information (page 152)
- Setting an Alias for a Disk Array (page 152)
- Enabling Media Patrol on a Disk Array (page 153)
- Enabling PDM on a Disk Array (page 153)
- Preparing the Disk Array for Transport (page 153)
- Rebuilding a Disk Array (page 154)
- Migrating a Disk Array (page 154)
- Running PDM (page 155)
- Running Transition on a Disk Array (page 155)
- Locating a Disk Array (page 156)
- Locating a Disk Array (page 156)
- Creating a Logical Drive (page 156)
- Deleting a Logical Drive (page 157)

Creating a Disk Array

The CLU provides three methods of creating a disk array:

- **Automatic** – Creates a default disk array and logical drive based on unconfigured physical drives in the system. No user choices. See “Creating a Disk Array – Automatic” on page 148.
- **Express** – You select the RAID characteristics and type of application. Creates a disk array and logical drive(s) based on your input. See “Creating a Disk Array – Express” on page 149.
- **Advanced** – You specify all parameters for a new disk array. One logical drive will be made automatically when you create the disk array. If you select less than the total available capacity, you can use the remaining space to create additional logical drives at a later time. See “Creating a Disk Array – Advanced” on page 150.

Creating a Disk Array – Automatic

To create a disk array using the Automatic feature:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight *Create New Array* and press Enter.
3. Highlight *Configuration Method* and press the spacebar to toggle to *Automatic*.
4. Review the proposed configuration of disk array and logical drive(s).
 - To accept the proposed configuration and create the disk array and logical drive(s), highlight *Save Configuration* and press Enter.
 - To reject the proposed configuration, highlight *Cancel Array Configuration* and press Enter. You will return to the Disk Arrays Summary screen.

To create a disk array with different characteristics, repeat the steps above specifying different parameters but choose the Express or Advanced option.

Creating a Disk Array – Express

To create a disk array using the Express feature:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight *Create New Array* and press Enter.
3. Highlight *Configuration Method* and press the spacebar to toggle to *Express*.
4. Highlight *Configuration Method* and press to spacebar to select each of the following characteristics for your disk array:
 - Redundancy
 - Capacity
 - Performance
 - Spare Drive
5. Highlight *Number of Logical Drives* and press the backspace key to erase the current value.
6. Enter the number of logical drives you want.
7. Highlight *Application Type* and press the spacebar to toggle though the applications and select the best one for your disk array.
 - File Server
 - Video Stream
 - Transaction Data
 - Transaction Log
 - Other
8. Press Ctrl-A to save your settings and move to the next screen.
9. Review the proposed configuration of disk array and logical drive(s).

To accept the proposed configuration and create the disk array and logical drive(s), highlight *Save Configuration* and press Enter.

To reject the proposed configuration, highlight *Cancel Array Configuration* and press Enter. You will return to the Disk Arrays Summary screen.

To create a disk array with different characteristics, highlight *Create New Array* and press Enter. Repeat the steps above specifying different parameters.

Creating a Disk Array – Advanced

For more information on the choices below, see “Chapter 7: Technology Background” on page 219. To create a disk array using the Advanced feature:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight *Create New Array* and press Enter.
3. Highlight *Configuration Method* and press the spacebar to toggle to *Advanced*.
4. Choose whether to enable Media Patrol and PDM.
5. If you want to specify an alias to the disk array, highlight *Alias* and type a name.
Maximum of 32 characters. Use letters, numbers, space between words and underscore.
6. Highlight *Save Settings* and Continue and press Enter.
7. Highlight a physical drive you want to add to your array and press the spacebar to select it.
Repeat this action until you have selected all the physical drives for your array.
8. Highlight *Save Settings and Continue* and press Enter.
9. If you want to specify an alias to the logical drive, highlight *Alias* and type a name.
Maximum of 32 characters. Use letters, numbers, space between words and underscore.
10. Highlight *RAID Level* and press the spacebar to toggle through a list of available RAID levels.
11. If you want to create multiple logical drives, highlight *Capacity*, press the backspace key to remove the current value, then type a new smaller value.
12. Highlight *Number of Axles* and press the spacebar to select the number of axles. Applies to RAID 50 only.
13. Highlight *Stripe* and press the spacebar to toggle through stripe sizes and select 64 KB, 128 KB, 256 KB, 512 KB, or 1 MB.
14. Highlight *Sector* and press the spacebar to toggle through sector sizes.
For iSCSI, use the 512 B default. See “Choosing Sector Size” on page 231.
15. Highlight *Write Policy* and press the spacebar to toggle write cache policy between *WriteBack* and *WriteThru* (write though).
16. Highlight *Read Policy* and press the spacebar to toggle read cache policy through *ReadCache*, *ReadAhead*, and *NoCache*.
17. Highlight *Save Logical Drive* and press Enter.

18. Review logical drive(s) you are about to create for your new array. Then do one of the following actions:
 - If you agree with the logical drive(s) as specified, highlight *Complete Disk Array Creation* and press Enter. A note will appear to remind you to set up LUN mapping for your new logical drive(s). Press any key to continue.
 - If you specified less than the full capacity for the logical drive in the previous screen, and you want to add another logical drive now, highlight *Create New Logical Drive* and press Enter.
 - If you do not agree with the logical drive(s), highlight *Return to Previous Screen* and press Enter to begin the process again.

Deleting a Disk Array



Caution

When you delete a disk array, you delete all the logical drives and the data they contain. Back up all important data before deleting a disk array.

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want to delete and press the spacebar to mark it. The mark is an asterisk (*) to the left of the listing.
3. Highlight *Delete Marked Arrays* and press Enter.
4. Press Y to confirm the deletion.

Viewing Disk Array Information

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
The information and settings screen appears.
3. Highlight any of the following and press Enter to view a list of:
 - Spare drives in this array, dedicated and global
 - Physical drives in this array
 - Logical drives in this array

Disk Array Operational Status

- **OK** – This is the normal state of a logical drive. When a logical drive is Functional, it is ready for immediate use. For RAID Levels other than RAID 0 (Striping), the logical drive has full redundancy.
- **Synchronizing** – This condition is temporary. Synchronizing is a maintenance function that verifies the integrity of data and redundancy in the logical drive. When a logical drive is Synchronizing, it will function and your data is available. However, access will be slower due to the synchronizing operation.
- **Critical/Degraded** – This condition arises as the result of a physical drive failure. A degraded logical drive will still function and your data is still available. However, the logical drive has lost redundancy (fault tolerance). You must determine the cause of the problem and correct it.
- **Rebuilding** – This condition is temporary. When a physical drive has been replaced, the logical drive automatically begins rebuilding in order to restore redundancy (fault tolerance). When a logical drive is rebuilding, it will function and your data is available. However, access will be slower due to the rebuilding operation.
- **Transport Ready** – After you perform a successful Prepare for Transport operation, this condition means you can remove the physical drives of this disk array and move them to another enclosure or different drive slots. After you relocate the physical drives, the disk array status will show OK.

Setting an Alias for a Disk Array

This function sets an alias for the disk array. To set an alias:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. To set an alias for this disk array, highlight *Alias* and type an alias into the field.

Maximum of 32 characters. Use letters, numbers, space between words and underscore. An alias is optional.

4. Press Ctrl-A to save your settings.

Accepting an Incomplete Array

This condition is the result of a missing physical drive. See “Incomplete Array” on page 272 before you use this function.

To accept an incomplete array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Accept Incomplete Array* and press Enter.

Enabling Media Patrol on a Disk Array

Media Patrol checks the magnetic media on physical drives.

To run Media Patrol on a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Media Patrol* and press the spacebar to toggle between *Enable* and *Disable*.
4. Press Ctrl-A to save your settings.

Enabling PDM on a Disk Array

This function enables and disables Predictive Data Migration (PDM).

To enable or disable PDM:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *PDM* and press the spacebar to toggle between *Enable* and *Disable*.
4. Press Ctrl-A to save your settings.

See “Running PDM” on page 155.

Preparing the Disk Array for Transport

To run the Transport function on a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.

3. Highlight *Transport* and press Enter.
4. Press Y to confirm.

Rebuilding a Disk Array

Before you can rebuild, you must have a replacement physical drive of adequate capacity or your disk array. To rebuild a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Background Activities* and press Enter.
4. Highlight *Rebuild* and press Enter.
5. Specify the source and target physical drives.
6. Highlight *Start* and press Enter.

Migrating a Disk Array

In order to migrate RAID level, you may have to add physical drives. For more information, see “RAID Level Migration” on page 235.

To migrate a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Background Activities* and press Enter.
4. Highlight *Migration* and press Enter.
5. Highlight the physical drive you want to add and press the spacebar to select it.

Repeat this action to add more physical drives.



Notes

- You can add physical drives to a RAID 50 array but you cannot change the number of axes.
 - If you add an odd number of physical drives to a RAID 10 array, it will become a RAID 1E array by default.
-

6. Highlight *Save Settings and Continue* and press Enter.
7. To change RAID level, Highlight the logical drive in the list and press Enter.
8. Highlight *RAID Level* and press the spacebar to toggle through the available RAID levels.
9. Optional. If you want to increase capacity, highlight *Expand Capacity* and press the spacebar to toggle to Yes.

10. Optional. If you want to increase capacity, highlight *Capacity*, press the backspace key to erase the current logical drive capacity and type in the new value.
The new value must be equal or larger than the current capacity.
11. Highlight *Save Logical Drive* and press Enter.
The screen returns to Disk Array Migration Logical Drives.
12. Highlight *Complete Disk Array Migration* and press Enter.
13. In the confirmation message, press Y to confirm.
The screen jumps to Disk Arrays Summary.

Running PDM

Be sure PDM must be enabled. See “Enabling PDM on a Disk Array” on page 153.

To run Predictive Data Migration on a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Background Activities* and press Enter.
4. Highlight *Predictive Data Migration* and press Enter.
5. Specify the source and target physical drives.
6. Highlight *Start* and press Enter.

Running Transition on a Disk Array

Transition is the process of replacing a revertible spare drive that is currently part of a disk array with an unconfigured physical drive or a non-revertible spare drive. For more information, see “Transition” on page 239.

In order to run Transition:

- The spare drive must be Revertible.
- You must have an unconfigured physical drive of the same or larger capacity to replace the spare drive.

To run Transition on a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Background Activities* and press Enter.
4. Highlight *Transition* and press Enter.
5. Specify the source and target physical drives.
6. Highlight *Start* and press Enter.

Locating a Disk Array

This feature helps you identify the physical drives assigned to the disk array you are working with in the CLU.

To locate a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Locate Disk Array* and press Enter.

The drive carrier LEDs pertaining to this disk array will blink for one minute.

Creating a Logical Drive

You can create logical drives on existing disk arrays if there is available space in the array. For more information on the choices below, see “Chapter 7: Technology Background” on page 219.

To create a logical drive from an existing disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array in which you want to create a logical drive and press Enter.
3. Highlight *Create New Logical Drive* and press Enter.

The Disk Array ID number and Maximum capacity available for the new logical drive are displayed.

4. Highlight the following parameters and press the backspace key to erase the current value:
 - **Alias** - Type an alias into the field, if desired. Maximum of 32 characters. Use letters, numbers, space between words and underscore.
 - **Capacity** - Maximum capacity shown. Enter a smaller capacity if desired.
5. Highlight the following parameters and press the spacebar to toggle through the available choices:
 - **Stripe size** – Press the spacebar to select: 64 KB, 128 KB, 256 KB, 512 KB, or 1 MB
 - **Sector size** – For iSCSI, use the 512 B default.
 - **Write Policy** – Press spacebar to select: Write Back or Write Through
 - **Read Policy** – Press spacebar to select: No Cache, Read Cache, or Read Ahead Cache
6. Highlight *Number of Axles* and press the spacebar to select the number of axles. Applies to RAID 50 only.
7. Press Ctrl-A to save your settings.



Note

If you did not use all of the available capacity of the disk array, you can create an additional logical drive at this point.

Deleting a Logical Drive



Caution

When you delete a logical drive, you delete all the data it contains. Back up all important data before deleting a logical drive.

To delete a logical drive from a disk array:

1. From the Main Menu, highlight *Disk Array Management* and press Enter.
2. Highlight the disk array that contains the logical drive you want to delete and press Enter.
3. Highlight the logical drive you want to delete and press the spacebar to mark it.
The mark is an asterisk (*) to the left of the listing.
4. Highlight *Delete Marked Logical Drives* and press Enter.
5. Press Y to confirm the deletion.

Managing Logical Drives

The Logical Drive Management function deals with settings and functions of existing logical drives. To create or delete a logical drive, see “Managing Disk Arrays” on page 147. Logical drive management includes:

- Viewing Logical Drive Information (page 158)
- Setting an Alias for a Logical Drive (page 159)
- Setting Write Cache Policy (page 159)
- Setting Read Cache Policy (page 159)
- Initializing a Logical Drive (page 160)
- Running Redundancy Check (page 160)
- Locating a Logical Drive (page 161)

Viewing Logical Drive Information

To view logical drive information:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the logical drive you want and press Enter.
The information and settings screen appears.
3. Highlight any of the following and press Enter to view more information:
 - Check Table – Read Check, Write Check, and Inconsistent Block Tables
 - Logical Drive Statistics

Logical Drive Status

- **OK** – This is the normal state of a logical drive. When a logical drive is Functional, it is ready for immediate use. For RAID Levels other than RAID 0 (Striping), the logical drive has full redundancy.
- **Synchronizing** – This condition is temporary. Synchronizing is a maintenance function that verifies the integrity of data and redundancy in the logical drive. When a logical drive is Synchronizing, it will function and your data is available. However, access will be slower due to the synchronizing operation.
- **Rebuilding** – This condition is temporary. When a physical drive has been replaced, the logical drive automatically begins rebuilding in order to restore redundancy (fault tolerance). When a logical drive is rebuilding, it will function and your data is available. However, access will be slower due to the rebuilding operation.
- **Critical** – This condition arises as the result of a physical drive failure. A degraded logical drive will still function and your data is still available. However, the logical drive has lost redundancy (fault tolerance). You must determine the cause of the problem and correct it.

- **Offline** – This condition arises as the result of a second physical drive failure. An Offline logical drive is not accessible but some or all of your data may remain intact. You must determine the cause of the problem and correct it.
- **Transport Ready** – After you perform a successful Prepare for Transport operation, this condition means you can remove the physical drives of this disk array and move them to another enclosure or different drive slots. After you relocate the physical drives, the disk array status will show OK.

Setting an Alias for a Logical Drive

To set an alias for a logical drive:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the logical drive you want and press Enter.
3. To set an alias for this disk array, highlight *Alias* and type an alias into the field.

Maximum of 32 characters. Use letters, numbers, space between words and underscore. An alias is optional.

4. Press Ctrl-A to save your settings.

Setting Write Cache Policy

To set write cache policy on a logical drive:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the logical drive you want and press Enter.
3. To set write cache policy for this disk array, highlight *WritePolicy* and press the spacebar to toggle between *WriteBack* and *WriteThru* (write though).
4. Press Ctrl-A to save your settings.

Setting Read Cache Policy

To set read cache policy on a logical drive:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the logical drive you want and press Enter.
3. To set read cache policy for this disk array, highlight *ReadPolicy* and press the spacebar to toggle though *ReadCache*, *ReadAhead* and *None*.
4. Press Ctrl-A to save your settings.

Initializing a Logical Drive

This function sets all data bits in the logical drive to zero.



Caution

When you initialize a logical drive, you delete all the data it contains. Back up all important data before initializing a logical drive.

To initialize a logical drive:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the logical drive you want and press Enter.
3. Highlight *Background Activity* and press Enter.
4. Highlight *Start Initialization* and press Enter.

The initialization parameters appear.

- Initialization pattern. The default 00000000 is best for most applications
- Quick Initialization – Yes means only the disk data format of the logical drives are initialized.
- Quick Initialization Rate – Enter a value or use the default 64 bits.

To change a parameter, highlight it and press the backspace key to erase the current value, then type the new value.

5. Highlight *Start* and press Enter.

If necessary, you can pause and resume or stop and restart the Initialization. You cannot access the logical drive until Initialization has finished.

Running Redundancy Check

Redundancy Check is a maintenance procedure for logical drives in fault-tolerant disk arrays that ensures all the data matches exactly. To run Redundancy Check:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the logical drive you want and press Enter.
3. Highlight *Background Activity* and press Enter.
4. Highlight *Start Redundancy Check* and press Enter.

The redundancy check parameters appear.

- Auto Fix – Corrects inconsistencies automatically
- Pause On Error – Pauses the Redundancy Check when an error is found

To change a parameter, highlight it and press the backspace toggle between Yes and No.

5. Highlight *Start* and press Enter.

If necessary, you can pause and resume or stop and restart the Redundancy Check. You can use the logical drive while Redundancy Check is running.

Locating a Logical Drive

This feature helps you identify the physical drives assigned to the logical drive you are working with in the CLU. To locate a logical drive:

1. From the Main Menu, highlight *Logical Drive Management* and press Enter.
2. Highlight the disk array you want and press Enter.
3. Highlight *Locate Logical Drive* and press Enter.

The drive status LEDs for the physical drives in this logical drive will blink for one minute.

Managing the Network Connection

Network Management deals with network connections and settings for the Management Port:

- Making Management Port Settings (page 162)
- Making iSCSI Data Port Settings (page 163)
- Viewing VLAN Entries (page 164)
- Creating a VLAN Entry (page 164)
- Changing a VLAN Entry (page 165)
- Deleting a VLAN Entry (page 165)
- Viewing Link Aggregation Entries (page 165)
- Creating a Link Aggregation Entry (page 166)
- Changing a Link Aggregation Entry (page 166)
- Deleting a Link Aggregation Entry (page 166)

Making Management Port Settings

Before you change settings, please see “Choosing DHCP or a Static IP Address” on page 24.

Making Automatic Settings

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight the Management port in the list and press Enter.
3. Highlight *NetMgmt Ethernet Port Settings* and press Enter
4. Highlight *DHCP* and press the spacebar to toggle to *Enabled*.
5. Press Ctrl-A to save your settings.

Making Manual Settings

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight the management port in the list and press Enter.
3. Highlight *NetMgmt Ethernet Port Settings* and press Enter
4. Highlight *DHCP* and press the spacebar to toggle to *Disabled*.
5. Highlight each of the following and press the backspace key to erase the current value, then type the new value.
 - IP Address
 - Subnet Mask
 - Gateway IP Address
 - DNS Server IP Address
6. Press Ctrl-A to save your settings.

Making iSCSI Data Port Settings

The network settings for the iSCSI data ports are located under the Network Management and are described below. For the iSCSI settings for the iSCSI data ports, see “Managing iSCSI Connections” on page 167.

Making Automatic Settings

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight the iSCSI port in the list and press Enter.
3. Highlight *NetMgmt iSCSI Port Settings* and press Enter.
4. Highlight *DHCP* and press the spacebar to toggle to *Enable*.
5. Highlight *TCP Port Number*, and press the backspace key to erase the current value, then type the new value.
Use 1 to 65535. The default is 3260.
6. Highlight *Jumbo Frame* and press the spacebar to toggle between *Enabled* and *Disabled*.
7. Press Ctrl-A to save your settings.

Making Manual Settings

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight the iSCSI port in the list and press Enter.
3. Highlight *NetMgmt iSCSI Port Settings* and press Enter.
4. Highlight *DHCP* and press the spacebar to toggle to *Disabled*.
5. Highlight each of the following and press the backspace key to erase the current value, then type the new value.
 - IP Address
 - Subnet Mask
 - Gateway IP Address
6. Highlight *TCP Port Number*, and press the backspace key to erase the current value, then type the new value.
The default is 3260.
7. Highlight *Jumbo Frame* and press the spacebar to toggle between *Enabled* and *Disabled*.
8. Press Ctrl-A to save your settings.

Viewing VLAN Entries

To view the current VLAN entries:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *VLAN* and press Enter.

The list of VLAN entries appears. The Member Interface refers to an iSCSI data port or to the link aggregate number.

Creating a VLAN Entry

This feature enables you to create a virtual local area network (VLAN) using the iSCSI data ports on your subsystem.

If you plan to aggregate the iSCSI ports, create a link aggregation before you create the VLAN. See “Creating a Link Aggregation Entry” on page 166.

If you plan to use jumbo frames for the VLAN, enable jumbo frames for the iSCSI ports before you create the VLAN. See “Making iSCSI Data Port Settings” on page 163.

To create a VLAN entry:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *VLAN* and press Enter.
3. Highlight *Create New VLAN Entry* and press Enter.
4. Highlight *Member Interface* and press the spacebar to toggle through *iSCSI Port 1* or *Port 2*.
5. Highlight *VLAN Name* and type a name for your VLAN.
Maximum of 15 characters. Use letters, numbers, space between words and underscore.
6. Highlight *VLAN Tag* and type a tag number.
Use 2 though 4094.
7. Highlight *Jumbo Frame* and press the spacebar to toggle between *Enabled* and *Disabled*.
8. Highlight *IP Address* and type an IP address for your VLAN.
9. If you want to change the subnet mask, highlight *Subnet Mask*, press the backspace key to erase the default value, then enter a new value.
10. If you want to change the TCP port number, highlight *TCP Port Number*, press the backspace key to erase the default value, then enter a new value.
11. Press Ctrl-A to save your settings.

Changing a VLAN Entry

To change a VLAN entry:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *VLAN* and press Enter.
3. Highlight a VLAN entry from the list and press Enter.
4. If you want to change the tag number, highlight *VLAN Tag*, press the backspace key to erase the current value, then enter a new value.
Use the numbers 2 though 4094.
5. If you want to change the IP address, highlight *IP Address*, press the backspace key to erase the current value, then enter a new value.
6. If you want to change the TCP port number, highlight *TCP Port Number*, press the backspace key to erase the default value, then enter a new value.
7. If you want to change the subnet mask, highlight *Subnet Mask*, press the backspace key to erase the current value, then enter a new value.
8. Highlight *Jumbo Frame* and press the spacebar to toggle between *Enabled* and *Disabled*.
9. Highlight *Member Interface* and press the spacebar to toggle through the choices.
10. Press Ctrl-A to save your settings.

Deleting a VLAN Entry

To delete a VLAN entry:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *VLAN* and press Enter.
3. Highlight a VLAN from the list and press the spacebar to mark it with an asterisk (*).
4. Highlight *Delete Marked Entries* and press Enter.
5. Press Y to confirm the deletion.

Viewing Link Aggregation Entries

To view the current Link Aggregation entries:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *Link Aggregation* and press Enter.
The list of Link Aggregation entries appears.

Creating a Link Aggregation Entry

This feature enables you to aggregate the iSCSI data ports on your subsystem to increase bandwidth.

If an iSCSI port is part of a VLAN, you must delete the VLAN entry before you can use the iSCSI port to create a link aggregation. See “Deleting a VLAN Entry” on page 165.

To create a link aggregation entry:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *Link Aggregation* and press Enter.
3. Highlight *Create New Link Aggregation Entry* and press Enter.
4. Highlight *Trunk ID* and type a value.
Use the numbers 1 through 32.
5. Highlight *Master Port* and press the spacebar to toggle to one of the iSCSI port numbers.
6. Highlight *Slave Port* and press the spacebar to toggle to the other iSCSI port number.
7. Press Ctrl-A to save your settings.

Changing a Link Aggregation Entry

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *Link Aggregation* and press Enter.
3. Highlight a Link Aggregation entry in the list and press Enter.
4. Highlight *Master Port* and press the spacebar to toggle to one of the iSCSI port numbers.
5. Highlight *Slave Port* and press the spacebar to toggle to the other iSCSI port number.
6. Press Ctrl-A to save your settings.

Deleting a Link Aggregation Entry

To delete a link aggregation entry:

1. From the Main Menu, highlight *Network Management* and press Enter.
2. Highlight *Link Aggregation* and press Enter.
3. Highlight a Link Aggregation entry from the list and press the spacebar to mark it with an asterisk (*).
4. Highlight *Delete Marked Entries* and press Enter.
5. Press Y to confirm the deletion.

Managing iSCSI Connections

A detailed explanation of these iSCSI functions, how and when they are used, and their relationship to one another is beyond the scope of this document. For more information, contact the Internet Engineering Task Force at <http://www.ietf.org/>.

Network connections and settings are discussed under “Making iSCSI Data Port Settings” on page 163.

Functions include:

- Viewing Node Information (page 167)
- Making Node Settings (page 168)
- Viewing Target Port Information (page 168)
- Viewing Data Port Statistics (page 169)
- Viewing Portal Information (page 169)
- Viewing Session Information (page 169)
- Viewing iSNS Information (page 169)
- Making iSNS Settings (page 170)
- Viewing CHAPs (page 170)
- Adding CHAPs (page 170)
- Editing CHAPs (page 171)
- Deleting CHAPs (page 171)
- Pinging iSCSI Connections (page 171)

Viewing Node Information

To view iSCSI node information:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Node* and press Enter.

Node information appears.

Viewing Node Statistics

To view iSCSI node or iSCSI layer statistics:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Node* and press Enter.
3. Highlight *iSCSI Node Statistics* and press Enter.

The node statistics appear.

Making Node Settings

These settings affect both VTrak iSCSI data ports.

Note that Header and Data Digest work best with initiators that have a TCP Offload Engine (TOE).

To make iSCSI node settings:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Node* and press Enter.
Node information appears.
3. Highlight *iSCSI Node Settings* and press Enter.
This screen enables you to make iSCSI Node Settings.
4. Highlight the items you want and press the backspace key to erase the current value, then type the new value:
 - Node Name
 - Node Alias – Maximum of 32 characters. Use letters, numbers, space between words and underscore. An alias is optional.
 - Outstanding R2T
 - Maximum Burst Length
 - Default Time to Wait
 - Default Time to Retain
5. Highlight the items you want to set and press the spacebar to toggle between *Enabled* and *Disabled*:
 - Header Digest
 - Data Digest
 - Unidirectional CHAP Authorization
 - Bidirectional CHAP Authorization
6. Press Ctrl-A to save your settings.

Viewing Target Port Information

To view iSCSI port target information:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Ports* and press Enter.
3. Highlight *Target Port 1* or *Target Port 2* and press Enter.
Port information appears.

Viewing Data Port Statistics

To view iSCSI port statistics:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Ports* and press Enter.
3. Highlight *Target Port 1* or *Target Port 2* and press Enter.
4. Highlight one of the following and press Enter:
 - MAC Layer Statistics
 - IP Layer Statistics
 - TCP Layer Statistics

Viewing Portal Information

To view iSCSI portal information:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Portal* and press Enter.

The following information appears:

- Portal ID – 1 to 34
- IP address – IP address of the port or VLAN
- TCP Port number – 3260 is the default
- Associated Type – iSCSI or VLAN
- Interface Name – Port number or VLAN name

Also see “Making iSCSI Data Port Settings” on page 163 and “Viewing VLAN Entries” on page 164.

Viewing Session Information

To view iSCSI session information:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI Sessions* and press Enter.

A list of the current iSCSI sessions appears.

Viewing iSNS Information

Internet Storage Name Service (iSNS) is a protocol used to facilitate the automated discovery, management, and configuration of iSCSI and Fibre Channel devices on a TCP/IP network.

To view iSCSI iSNS information:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.

2. Highlight *iSCSI iSNS Options* and press Enter.
The current iSNS settings appear.

Making iSNS Settings

To make iSCSI iSNS settings:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI iSNS Options* and press Enter.
3. Highlight *iSNS Settings* and press Enter.
4. Highlight *iSNS* and press the spacebar to toggle between *Enable* and *Disable*.

When *Enable* is displayed, the iSNS disabled, and you must provide an iSNS IP address and port number.

5. Highlight the items you want and press the backspace key to erase the current value, then type the new value:
 - iSNS IP address
 - iSNS Port number
6. Press Ctrl-A to save your settings.

Viewing CHAPs

To view a list of iSCSI CHAPs:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI CHAPs* and press Enter.

A list of the current CHAPs appears.

Adding CHAPs

To add an iSCSI CHAP:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI CHAPs* and press Enter.
3. Highlight *Create New CHAP Entry* and press Enter.
4. Highlight *Name* and type a name for the CHAP.
5. Highlight *Type* and press the spacebar to toggle between *Peer* and *Local*.
Peer is one-way. Local is bi-directional.
6. Highlight *Secret* and type a name of 16 or more characters.
7. Highlight *Retype Secret* and type the secret again to verify.
8. Press Ctrl-A to save the CHAP.

Editing CHAPs

To edit an iSCSI CHAP:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI CHAPs* and press Enter.
3. Highlight the CHAP you want to edit and press Enter.
4. Highlight *Name* and press the backspace key to erase the current value, then type the new value
5. Highlight *Type* and press the spacebar to toggle between *Peer* and *Local*. Peer is one-way. Local is bi-directional.
6. Highlight *Secret* and type a name of 16 or more characters.
7. Highlight *Retype Secret* and type the secret again to verify.
8. Press Ctrl-A to save the CHAP.

Deleting CHAPs

To delete an iSCSI CHAP:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *iSCSI CHAPs* and press Enter.
3. Highlight the CHAP you want to delete and press Enter to mark it. The mark is an asterisk (*) to the left of the listing.
4. Highlight *Delete Marked Entries* and press Enter.
5. Press Y to confirm the deletion.

Pinging iSCSI Connections

This function enables you to ping other network nodes (PCs, servers, etc.) through VTrak's iSCSI ports.

To ping an iSCSI connection:

1. From the Main Menu, highlight *iSCSI Management* and press Enter.
2. Highlight *Ping* and press Enter.
3. Type the IP address you want to ping in the IP Address field.
4. Highlight *Ping Through* and press the spacebar to select an iSCSI port.
5. Highlight *Ping* and press Enter. The results of the ping are displayed on the screen.

Managing Background Activity

Background activity refers to any of several functions that take place in the background while normal operation of the VTrak continues.

Background activities work in conjunction with disk arrays and logical drives. See “Managing Disk Arrays” on page 147 and “Managing Logical Drives” on page 158 for more information about how and when to use background activities.

Background Activity Management includes the following functions:

- Viewing Current Background Activities (page 172)
- Making Background Activity Settings (page 172)

Viewing Current Background Activities

From the Main Menu, highlight *Background Activity* and press Enter. A count of current background activities appears, including:

- Rebuild
- PDM – Predictive Data Migration
- Synchronization
- Redundancy Check
- Migration
- Transition
- Initialization
- Media Patrol

Making Background Activity Settings

1. From the Main Menu, highlight *Background Activity* and press Enter.
2. Highlight *Background Activity Settings* and press Enter.
3. Highlight following and press the spacebar to toggle between *Enabled* and *Disabled*.
 - Media Patrol – Checks the magnetic media on physical drives
 - Auto Rebuild – If there is a spare drive of adequate capacity, a critical disk array will begin to rebuild automatically. If not spare drive is available, the disk array will begin to rebuild as soon as you replace the failed physical drive with an unconfigured physical drive of equal or greater size.
4. Highlight following and press the spacebar to toggle through *Low*, *Medium*, and *High* rates:
 - Rebuild – Checks the data integrity on disk arrays
 - Migration – Change RAID level or add physical drives to disk arrays

- PDM – Looks for bad blocks on the physical drives of disk arrays
- Transition – Returns a revertible spare drive to spare status
- Synchronization – Checks the data integrity on disk arrays
- Initialization – Sets all data bits in the logical drive to zero
- Redundancy Check – Checks, reports and can correct data inconsistencies in logical drives

The rates are defined as follows:

- Low – Fewer resources to activity, more to data read/write.
 - Medium – Balance of resources to activity and data read/write.
 - High – More resources to activity, fewer to data read/write.
5. Highlight the following PDM trigger settings and press the backspace key to erase the current value:
 - Reassigned Block Threshold – 1 to 512 blocks
 - Error Block Threshold – 1 to 1024 blocks
 6. Press Ctrl-A to save your settings.

Working with the Event Viewer

The Event Viewer displays log of subsystem events. Events are classified as:

- Runtime Events – A list of and information about the 1023 most recent runtime events recorded since the subsystem was started
- NVRAM Events – A list of and information about most important events over multiple subsystem startups. NVRAM events are stored in non-volatile memory

Working with the Event Viewer includes the following functions:

- Viewing Runtime Events (page 174)
- Clearing Runtime Events (page 174)
- Viewing NVRAM Events (page 174)
- Clearing NVRAM Events (page 175)

Viewing Runtime Events

To display Runtime Events:

1. From the Main Menu, highlight *Event Viewer* and press Enter.

The log of Runtime Events appears. Events are added to the top of the list. Each item includes:

- Sequence number – Begins with 0 at system startup.
- Device – Disk Array, Logical Drive, Physical Drive by its ID number.
- Severity – (lowest to highest) Information, Warning, Minor, Major, Critical and Fatal
- Timestamp – Date and time the event happened.
- Description – A description of the event in plain language.

2. Press the up and down arrow keys to scroll through the log.

Clearing Runtime Events

To clear the Runtime Event log:

1. From the Main Menu, highlight *Event Viewer* and press Enter.
2. Highlight *Clear Runtime Event Log* and press Enter.
3. Press Y to confirm.

Viewing NVRAM Events

This screen displays a list of and information about 63 most important events over multiple subsystem startups.

To display NVRAM events:

1. From the Main Menu, highlight *Event Viewer* and press Enter.
2. Highlight *NVRAM Events* and press Enter.

The log of NVRAM Events appears. Events are added to the top of the list. Each item includes:

- Sequence number – Begins with 0 at system startup.
 - Device – Disk Array, Logical Drive, Physical Drive by its ID number.
 - Severity – (lowest to highest) Information, Warning, Minor, Major, Critical and Fatal
 - Timestamp – Date and time the event happened.
 - Description – A description of the event in plain language.
3. Press the up and down arrow keys to scroll through the log.

Clearing NVRAM Events

To clear the Runtime Event log:

1. From the Main Menu, highlight *Event Viewer* and press Enter.
2. Highlight *NVRAM Events* and press Enter.
3. Highlight *Clear NVRAM Event Log* and press Enter.
4. Press Y to confirm.

Managing Spare Drives

Spare Drive Management includes the following functions:

- Viewing a list of Spare Drives (page 176)
- Creating a Spare Drive (page 176)
- Making Spare Drive Settings (page 177)
- Running Spare Check (page 177)
- Deleting a Spare Drive (page 178)

Viewing a list of Spare Drives

To view a list of spare drives:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Spare Drive Management* and press Enter.

A list of the current spare drives appears, including the following parameters:

- ID number
- Operational Status
- Physical Drive ID number
- Configured Capacity
- Revertible – The spare drive returns to spare status after you replace the failed drive in the disk array. See “Transition” on page 239 for more information.
- Type – Global (all disk arrays) or Dedicated (to specified disk arrays)
- Dedicated to Array – The array to which a dedicated spare is assigned

Creating a Spare Drive

Only unconfigured physical drives can be used to make spares. Check your available drives under Physical Drive Management. See “Managing Physical Drives” on page 144.

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Spare Drive Management* and press Enter.
3. Highlight *Create New Spare Drive* and press Enter.
4. Highlight *Physical Drive Number* and press the backspace key to erase the current value, then type the new value.

Specify the number of the physical drive you want for your spare. The available drive numbers are in parentheses.

5. Highlight *Revertible* and press the spacebar to toggle between *Yes* and *No*.

A revertible drive can be returned to spare status after you replace the failed drive in a disk array. See “Transition” on page 239 for more information.

6. Highlight *Spare Type* and press the spacebar to toggle between *Dedicated* and *Global*.

Dedicated means this spare drive can only be used with the specified disk arrays. Global means this spare drive can be used by any disk array.

7. If you chose *Dedicated*, highlight *Dedicated to Arrays* and press the backspace key to erase the current value, then type the new value.

Specify the number(s) of the disk array(s) you want to assign your spare. The current disk arrays are listed in parentheses.

8. Press Ctrl-A to save the spare drive.

Making Spare Drive Settings

To change spare drive settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.

2. Highlight *Spare Drive Management* and press Enter.

A list of the current spare drives appears, including the following parameters:

3. Highlight the spare drive you want to change and press Enter.

4. Highlight the setting you want to change:

- **Revertible** – A revertible drive can be returned to spare status after you replace the failed drive in a disk array. See “Transition” on page 239 for more information.
- **Type** – *Dedicated* means this spare drive can only be used with the specified disk array(s). *Global* means this spare drive can be used by any disk array.

5. Press the spacebar to toggle between the choices.

6. For dedicated spares, type the array number the spare is assigned to.

7. Press Ctrl-A to save your settings.

Running Spare Check

To run Spare Check:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.

2. Highlight *Spare Drive Management* and press Enter.

A list of the current spare drives appears.

3. Highlight the spare drive you want to check and press Enter.

4. Highlight *Start Spare Check* and press Enter.

The results appear next to Spare Check Status.

Deleting a Spare Drive



Caution

If the spare drive you delete is the only spare, the controller will not rebuild a critical array until you provide a new spare drive.

1. Highlight the spare drive you want to delete and press the spacebar to mark it.
The mark is an asterisk (*) to the left of the listing.
2. Highlight *Delete Marked Spare Drives* and press Enter.
3. Press Y to confirm the deletion.

Working with LUN Mapping

For iSCSI, LUN Masking is the process of applying a LUN Map so that each initiator can only access the LUNs specified for it.

Features include:

- Viewing Initiators (page 179)
- Enabling LUN Mapping (page 179)
- Creating Initiators (page 179)
- Deleting Initiators (page 180)
- Mapping LUNs to Initiators (page 180)

Viewing Initiators

To view a list of iSCSI initiators:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *LUN Mapping* and press Enter.

A list of the current initiators appears.

LUN Mapping must be enabled in order for VTrak to recognize the initiator. If LUN Mapping is currently disabled, highlight *Enable LUN Mapping* and press Enter.

Enabling LUN Mapping

In the CLU, LUN masking is called “LUN mapping.”

To enable LUN Mapping:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *LUN Mapping* and press Enter.
3. Highlight *Enable LUN Mapping* and press Enter.

Creating Initiators

To create a new iSCSI initiator:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *LUN Mapping* and press Enter.
3. Highlight *Create New Initiator* and press Enter.
4. Type the name of the initiator.

An iSCSI initiator name is the iSCSI name of the initiator device and is composed of a single text string. iSCSI WWNs are somewhat different from regular WWNs.

Obtain the initiator name from the initiator utility on your host system.

Note that the initiator name you input must match exactly in order for the connection to work.

5. Press Ctrl-A to save the initiator.



Note

LUN Mapping must be enabled in order for VTrak to recognize the initiator.

Deleting Initiators

To delete an iSCSI initiator:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *LUN Mapping* and press Enter.
3. Highlight the initiator you want to delete and press the spacebar to mark it. The mark is an asterisk (*) to the left of the listing.
4. Highlight *Delete Marked Initiators* and press Enter.
5. Press Y to confirm the deletion.

Mapping LUNs to Initiators

To map a LUN to an iSCSI initiator:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *LUN Mapping* and press Enter.
3. Highlight an existing Initiator and press Enter. A list of logical drives displays.
4. In the LUN field, press the backspace key to erase the current value, then type the LUN you want to assign to this initiator, from 0 to 255. If you make a error, press Ctrl-R to restore the current LUN.
5. Press Ctrl-A to save the LUN map.

Managing Users

User Management includes the following functions:

- Viewing User Information (page 181)
- Creating a User (page 181)
- Changing a User's Password (page 182)
- Changing a User's Display Name and Email Address (page 182)
- Changing a User's Privilege and Status (page 183)
- Deleting a User (page 183)

Viewing User Information

Each user types their user name and password to log into the CLI.

To view a list of current user accounts:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *User Management* and press Enter.
A list of the current users appears.

Creating a User

To create a new user account:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *User Management* and press Enter.
3. Highlight *Create New User* and press Enter.
4. Highlight each field and type in the appropriate information:
 - User name (no spaces)
 - Password (Optional. Maximum 32 characters. Use letters, numbers, space between words and underscore)
 - Display name (Optional)
5. Highlight *Privilege* and press the space bar to toggle through the options:
For definitions of each privilege level, see the List of User Privileges below.
6. Highlight *Status* and press the space bar to toggle between the options:
 - Enabled – Allows the user to log in to the system
 - Disabled – Prevents the user from logging in to the system
7. Press Ctrl-A to save the user.

List of User Privileges

- **View** – Allows the user to see all status and settings but not to make any changes
- **Maintenance** – Allows the user to perform maintenance tasks including Rebuilding, PDM, Media Patrol, and Redundancy Check
- **Power** – Allows the user to create (but not delete) disk arrays and logical drives, change RAID levels, change stripe size; change settings of components such as disk arrays, logical drives, physical drives, and the controller.
- **Super** – Allows the user full access to all functions including create and delete users and changing the settings of other users, and delete disk arrays and logical drives. The default “administrator” account is a Super User.

Changing a User’s Password

Each user can change their own password. A Super user can change other user’s passwords. To change a user’s password:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *User Management* and press Enter.
3. Highlight a User in the list and press Enter.
4. Highlight *Change Password...* and press Enter.
5. Highlight *New Password* and type the password.
6. Highlight *Retype Password* and type the password again to verify.
7. Press Ctrl-A to save the password.

Changing a User’s Display Name and Email Address

Each user can change their display name and email address. To change a display name or email address:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *User Management* and press Enter.
3. Highlight a User in the list and press Enter.
4. Highlight *Display Name* and press Enter.
5. Highlight the items you want and press the backspace key to erase the current value, then type the new value:
 - User name
 - Email address
6. Press Ctrl-A to save the settings.

Changing a User's Privilege and Status

No user can change their own privilege or status. To change another user's privilege or status.

1. Log in as the Administrator or a Super user.
2. From the Main Menu, highlight *Additional Info and Management* and press Enter.
3. Highlight *User Management* and press Enter.
4. Highlight a User in the list and press Enter.
5. Highlight *Display Name* and press Enter.
6. Highlight *Privilege* and press the space bar to toggle through the options:
For definitions of each privilege level, see "List of User Privileges" on page 182.
7. Highlight *Status* and press the space bar to toggle between the options:
 - Enabled – Allows the user to log in to the system
 - Disabled – Prevents the user from logging in to the system
8. Press Ctrl-A to save the settings.

Deleting a User

To delete a user:

1. Log in under a user name other than the one you want to delete.
2. From the Main Menu, highlight *Additional Info and Management* and press Enter.
3. Highlight *User Management* and press Enter.
4. Highlight the user you want to delete and press the spacebar to mark it.
The mark is an asterisk (*) to the left of the listing.
5. Highlight *Delete Marked Users* and press Enter.
6. Press Y to confirm the deletion.

Working with Software Management

Software Management includes the following functions:

- Making Email Settings (page 184)
- Making SLP Settings (page 185)
- Making Webserver Settings (page 185)
- Making Telnet Settings (page 186)
- Making SNMP Settings (page 186)
- Managing SNMP Trap Sinks (page 187)
- Making CIM Settings (page 188)
- Making Netsend Settings (page 188)
- Managing Netsend Recipients (page 189)

Making Email Settings

By default, Email service is set to Automatic and its normal status is Started.

To make Email service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *Email* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Highlight the following and press the backspace key to erase the current value, then type the new value:
 - Server IP address
 - Server Port number – 25 is the default
6. Highlight *Authentication* and press the spacebar to toggle between *Yes* and *No*.
If you selected *Yes*, type in a User name and Password in the fields provided.
7. The following items are optional but recommended. Highlight and press the backspace key to erase the current value, then type the new value:
 - Sender's email address
 - Subject Line for the email message
8. Press Ctrl-A to save your settings.

To start, stop or restart the Email service, highlight *Start*, *Stop* or *Restart* and press Enter.

Making SLP Settings

By default, SLP service is set to Automatic and its normal status is Started.

To make SLP service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *SLP* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Press Ctrl-A to save your settings.

To start, stop or restart the SLP service, highlight *Start*, *Stop*, or *Restart* and press Enter.

Making Webserver Settings

By default, Webserver service is set to Automatic and its normal status is Started.

To make Webserver service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *Webserver* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Highlight the following and press the backspace key to erase the current value, then type the new value:
 - HTTP Port – 80 is the default
 - Session Time Out – 24 minutes is the default. 1440 minutes = 24 hours
6. Highlight *SSL* and press the spacebar to toggle between *Enabled* and *Disabled*.
7. Highlight *HTTPS Port* and press the backspace key to erase the current value, then type the new value. 443 is the default.
8. Press Ctrl-A to save your settings.

To start, stop or restart the Webserver service, highlight *Start*, *Stop*, or *Restart* and press Enter.

Making Telnet Settings

By default, Telnet service is set to Automatic and its normal status is Started. To make Telnet service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *Telnet* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Highlight the following and press the backspace key to erase the current value, then type the new value:
 - Port number – 2300 is the default
 - Session Time Out – 24 minutes is the default. 1440 minutes = 24 hours
 - Maximum number of connections – 4 is the default
6. Press Ctrl-A to save your settings.

To start, stop or restart the Telnet service, highlight *Start*, *Stop*, or *Restart* and press Enter.

Making SNMP Settings

By default, SNMP (Simple Network Management Protocol) service is set to Automatic and its normal status is Started.

To make SNMP service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *SNMP* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Highlight the following and press the backspace key to erase the current value, then type the new value:
 - Port Number – 161 is the default
 - System Name – (optional) Type a system name in this field
 - System Location – Type a country name in this field

- System Contact – Type the email address of your system administrator in this field
 - Read Community – Type a community name in this field
 - Write Community – private (no change possible)
6. Press Ctrl-A to save your settings.

To start, stop or restart the SNMP service, highlight *Start*, *Stop*, or *Restart* and press Enter.

Managing SNMP Trap Sinks

Creating a SNMP trap sink

To create a trap sink:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *SNMP* and press Enter.
4. Highlight *Trap Sinks* and press Enter.

A list of the current trap sinks appears.

Adding a trap sink

To add a trap sink:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *Create New Trap Sink* and press Enter
4. Highlight *Trap Sink IP address* and press the backspace key to erase the current value, then type the new IP address in this field.
5. Highlight *Trap Filter* and press the spacebar to toggle through the severity levels.

The Severity Levels are (lowest to highest) Information, Warning, Minor, Major, Critical and Fatal.

6. Press Ctrl-A to save the Trap Sink.

Deleting a trap sink

To delete a trap sink:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight the trap sink you want to delete and press the spacebar to mark it.

The mark is an asterisk (*) to the left of the listing.

4. Highlight *Delete Marked Entries* and press Enter.

Making CIM Settings

By default, CIM (Common Information Model [a protocol]) service is set to Automatic and its normal status is Started.

To make CIM service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *CIM* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Highlight *HTTP* and press the spacebar to toggle between *Enabled* and *Disabled*.
6. Highlight *HTTP Port*, press the backspace key to erase, type new value. 5988 is the default port number.
7. Highlight *HTTPS* and press the spacebar to toggle between *Enabled* and *Disabled*.
8. Highlight *HTTPS Port*, press the backspace key to erase, type new value. 5989 is the default port number.
9. Highlight *Authentication* and press the spacebar to toggle between *Enabled* and *Disabled*.

Note: There is only one user. The default name is **cim**. No changes are possible.

Note: CIM service must be running to change the password.

The default password is **password**.

10. Highlight *Change Password...* and press Enter to change the password.
11. Highlight *Old Password* and type the current password.
12. Highlight *New Password* and type a new password.
13. Highlight *Retype Password* and type the new password again.
14. Press Ctrl-A to save your settings.

To start, stop or restart the CIM service, highlight *Start*, *Stop*, or *Restart* and press Enter.

Making Netsend Settings

By default, Netsend service is set to Manual and its normal status is Stopped.

To make Netsend service settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
3. Highlight *Netsend* and press Enter.
4. Highlight *Startup Type* and press the spacebar to toggle between *Automatic* and *Manual*.
5. Press Ctrl-A to save your settings.

To start, stop or restart the Netsend service, highlight *Start*, *Stop*, or *Restart* and press Enter.

Managing Netsend Recipients

Note that the Messenger service must be running on the recipient PC in order to receive reports.

Adding a recipient

To add a recipient:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
1. Highlight *Netsend* and press Enter.
2. Highlight *Message Recipient* and press Enter.
3. Highlight *Create New Message Recipient* and press Enter.
4. Type the recipient's IP address into the field provided.
5. Highlight *Message Event Severity Filter* and press the spacebar to change severity levels.

The selected level and all higher severity levels of severity will be reported. Severity levels (from lowest to highest) are: Info, Warning, Minor, Major, Critical, and Fatal.

6. Press Ctrl-A to save your settings.

Changing Recipient Settings

To change recipient settings:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
1. Highlight the recipient whose settings you want to change and press Enter.
2. Type the recipient's IP address into the field provided.

3. Highlight *Message Event Severity Filter* and press the spacebar to change severity levels.
4. Press Ctrl-A to save your settings.

Deleting a Recipient

To delete a recipient:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Software Management* and press Enter.
1. Highlight the recipient you want to delete and press the spacebar to mark it. The mark is an asterisk (*) to the left of the listing
2. Highlight *Delete Marked Entries* and press Enter.

Netsend Requirements

In order to use Netsend:

- Netsend must be running the VTrak
- You must provide the IP address for each recipient PC
- The Messenger service must be running on each recipient PC

If your Netsend and Messenger service settings are correct but the recipient PC does not receive event messages, check the recipient PC's Firewall settings. Refer to your OS documentation for more information.

Flashing through TFTP

Use this function to flash the VTrak's firmware. See "Updating the Firmware in the CLU" on page 202 for this procedure.

Clearing Statistics

This function clears the statistical counts for the RAID controller, iSCSI ports, physical drives, and logical drives. To clear statistics:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Clear Statistics* and press Enter.
3. Press Y to confirm the deletion.

Restoring Factory Defaults

This function restores the factory default settings to the firmware and software items you select.



Caution

Use this function with care. Do not restore to default settings for any item unless you are sure this action is needed.

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Restore Factory Defaults* and press Enter.
3. Highlight the setting group you want and press the spacebar to toggle between *Yes* and *No*.
Yes means this setting will be restored to the default value.
4. Highlight *Restore Factory Defaults* and press Enter.
5. Press Y to confirm the reset.

Shutting Down the Subsystem

There are two methods for shutting down the subsystem. Choose one of the following procedures:

- Shutting down the VTrak – Telnet Connection (page 194)
- Shutting down the VTrak – Serial Connection (page 194)

Shutting down the VTrak – Telnet Connection

This function enables you to shutdown the VTrak subsystem on a Telnet connection. You can only do part of this procedure in the CLU. Additional action is required, as described below.

To shutdown the VTrak:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Shutdown or Restart* and press Enter.
3. Highlight *Shutdown or Restart* and press Enter.
4. Highlight *Option* and press the spacebar to display *Restart*.
5. Highlight *Submit* and press Enter.
A warning message appears.
6. Press Y to continue.
The screen will go blank.
7. Wait for no less than two minutes.
8. Manually turn off the power supply switches on the back of the subsystem.

Shutting down the VTrak – Serial Connection

This function enables you to shutdown the VTrak subsystem on a serial connection. You can only do part of this procedure in the CLU. Additional action is required, as described below.

To shutdown the VTrak:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Shutdown or Restart* and press Enter.
3. Highlight *Shutdown or Restart* and press Enter.
4. Highlight *Option* and press the spacebar to display *Restart*.
5. Highlight *Submit* and press Enter.
A warning message appears.
6. Press Y to continue.

7. Turn off the power supply switches when you see the following message:
Shutdown complete. It is now safe to power off
the subsystem.

Restarting the Subsystem

There are two methods for restarting the subsystem. Choose one of the following procedures:

- Restarting the Subsystem (page 196)
- Restarting VTrak – Serial Connection (page 196)

Restarting VTrak – Telnet Connection

This function enables you to restart the VTrak subsystem on a Telnet connection. You can only do part of this procedure in the CLU. Additional action is required, as described below. To restart the VTrak:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Shutdown or Restart* and press Enter.
3. Highlight *Option* and press the spacebar to display *Restart*.
4. Highlight *Submit* and press Enter.
A warning message appears.
5. Press Y to continue.
The screen will go blank.
6. Wait for no less than two minutes.
7. Re-establish your Telnet connection to the VTrak CLU.
If you cannot re-establish a connection, wait 30 seconds, then try again.

Restarting VTrak – Serial Connection

This function enables you to restart the VTrak subsystem on a serial connection. You can only do part of this procedure in the CLU. Additional action is required, as described below. To restart the VTrak:

1. From the Main Menu, highlight *Additional Info and Management* and press Enter.
2. Highlight *Shutdown or Restart* and press Enter.
3. Highlight *Option* and press the spacebar to display *Restart*.
4. Highlight *Submit* and press Enter.
A warning message appears.
5. Press Y to continue.
The screen will display shutdown and startup functions.
6. When the `Log in:` prompt appears, log into the CLU again.

Working with the Buzzer

When you first power-up the VTrak, it beeps twice to show normal operation.

The audible alarm sounds at other times to inform you that the VTrak needs attention. The buzzer provides the audible alarm. See “VTrak is Beeping” on page 244.

Choose one of the following procedures:

- Silencing the Buzzer (page 197)
- Making Buzzer Settings (page 197)
- Testing the Buzzer (page 197)

Silencing the Buzzer

To change buzzer settings:

1. From the Main Menu, highlight *Buzzer* and press Enter.
A list of Controllers appears with the current buzzer setting and status.
2. Highlight *Mute* and press Enter.
The buzzer goes silent. If another trigger event occurs, the buzzer will sound again.

Making Buzzer Settings

This function enables the buzzer on the controller.

To change buzzer settings:

1. From the Main Menu, highlight *Buzzer* and press Enter.
A list of Controllers appears with the current buzzer setting and status.
2. Highlight the Controller whose buzzer you want to set and press Enter.
3. Highlight *Enabled* and press the spacebar to toggle between *Yes* and *No*.
4. Press Ctrl-A to save your settings.

Testing the Buzzer

To test the buzzer:

1. From the Main Menu, highlight *Buzzer* and press Enter.
A list of Controllers appears with the current buzzer setting and status.
2. Highlight *Sound* and press Enter.
The buzzer sounds. Highlight *Mute* and press Enter to silence the buzzer.

Chapter 6: Maintenance

This chapter covers the following topics:

- Updating the Firmware in WebPAM PROe (page 199)
 - Updating the Firmware in the CLU (page 202)
 - Replacing a Power Supply (page 204)
 - Replacing a Cooling Unit Fan or Blower (page 205)
 - Replacing a Cache Battery (page 211)
 - Replacing a RAID Controller (page 216)
-

Updating the Firmware in WebPAM PROe

A firmware update consists of the following actions:

- Downloading the Firmware Image File (page 199)
- Updating Firmware from TFTP Server (page 199) or Updating Firmware from your PC (page 200)
- Restarting the Subsystem (page 201)




Downloading the Firmware Image File

Go to the Promise website at <http://www.promise.com/support> and download the latest firmware image (.img) file to your TFTP server or your PC. The firmware update image file includes all of the files for the VTrak, including:

- Firmware
- Software
- Kernel
- RedBoot
- Other files

Updating Firmware from TFTP Server

To update the firmware from a TFTP server:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Software Management  icon.
4. Click the Firmware Update tab.
5. Do one of the following actions:
 - Click the Download from TFTP Server option, then click the **Next** button.

- From the Firmware Update tab dropdown menu, select *Download from TFTP Server*.
6. Enter the hostname or IP address of your TFTP server in the field provided.
 7. Enter the port number of your TFTP server in the field provided (69 is the default).
 8. Enter the filename of the Firmware Update file in the field provided.
 9. Click the **Submit** button.
 10. When the download is completed, click the **Next** button.

A popup message appears warning you not to reboot the VTrak during the firmware update procedure.
 11. In the popup message, click the **OK** button.

The update progress displays. Then a popup message appears to tell you to reboot the VTrak.
 12. In the popup message, click the **OK** button.
 13. Restart the VTrak. See “Restarting the Subsystem” on page 201.






Note

After you click the **Submit** button, if WebPAM PROe displays this message: **error transferring image**, you entered an incorrect file name or an incorrect location. Check the information and try again.

Updating Firmware from your PC

To update the firmware from your PC:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Software Management  icon.
4. Click the Firmware Update tab.
5. Do one of the following actions:
 - Click the Download Flash File from Local File through HTTP option, then click the **Next** button.
 - From the Firmware Update tab dropdown menu, select *Download from Local File*.
6. Enter the filename of the Firmware Update file in the field provided.

Or, click the **Browse...** button and select the Firmware Update file in the Open dialog box.
7. Click the **Submit** button.

8. When the download is completed, click the **Next** button.
A popup message appears to warn you not to reboot the VTrak during the firmware update procedure.
9. In the popup message, click the **OK** button.
The update progress displays. Then a popup message appears to tell you to reboot the VTrak.
10. In the popup message, click the **OK** button.
11. Restart the VTrak. See “Restarting the Subsystem” on page 201.



Note

After you click the **Submit** button, if WebPAM PROe displays this message: **error transferring image**, you entered an incorrect file name or an incorrect location. Check the information and try again.



Restarting the Subsystem



Warning

Do not restart the VTrak during a firmware upgrade procedure. Wait until the upgrade is one and you are prompted to restart.

To restart the VTrak subsystem:

1. Click the Subsystem  icon in Tree View.
2. Click the Administrative Tools  icon.
3. Click the Shutdown link in Management View.
A Shutdown or Restart tab will appear.
4. On the Shutdown or Restart tab, select *Restart* from the dropdown menu.
5. Click the **Submit** button.
6. In the warning box, click the **OK** button.
7. In the confirmation box, type the word **confirm** in the field provided.
8. Click the **OK** button.
When the controller shuts down, your WebPAM PROe connection will be lost.
9. Wait for two to three minutes.
10. In your browser, log into WebPAM PROe once again.
If you cannot log in, wait for 30 seconds, and try again. Repeat until login is successful.

Updating the Firmware in the CLU

A firmware update consists of the following actions:

- Downloading the Firmware Image File (page 202)
- Updating the Firmware (page 202)
- Restarting Subsystem over a Telnet Connection (page 202)
- Restarting Subsystem over a Serial Connection (page 203)

Downloading the Firmware Image File

Go to the Promise website at <http://www.promise.com/support> and download the latest firmware image file to your TFTP server.

Updating the Firmware

To update the firmware file in the CLU:

1. From the Main Menu, highlight *Additional Info and Management*, and press Enter.
2. Highlight *Flash through TFTP* and press Enter.
3. Highlight *TFTP Server* and type the IP address of your TFTP server in the field provided.
4. Highlight *Port Number* and press the backspace key to erase the current value, then type the new value. 69 is the default.

A list of the current users appears.

5. Highlight *File Name* and type the file name of the firmware image file in the field provided.
6. Highlight *Start* and press Enter.
7. Restart the VTrak.

A message appears to tell you to reboot the VTrak.
See “Restarting Subsystem over a Telnet Connection” on page 202 or “Restarting Subsystem over a Serial Connection” on page 203.

Restarting Subsystem over a Telnet Connection



Warning

Do not restart the VTrak during a firmware upgrade procedure. Wait until the upgrade is one and you are prompted to restart.

To restart the VTrak subsystem on a Telnet connection:

1. From the Main Menu, highlight *Additional Info and Management*, and press Enter.
2. Highlight *Shutdown or Restart* and press Enter.
3. Press the spacebar to display *Restart* then press Enter.
A warning message appears.
4. Press Y to continue.
The screen will go blank.
5. Wait for two to three minutes.
6. Re-establish your Telnet connection to the VTrak CLU.
If you cannot re-establish a connection, wait 30 seconds, then try again.

Restarting Subsystem over a Serial Connection



Warning

Do not restart the VTrak during a firmware upgrade procedure. Wait until the upgrade is one and you are prompted to restart.

To restart the VTrak subsystem on a serial connection:

1. From the Main Menu, highlight *Additional Info and Management*, and press Enter.
2. Highlight *Shutdown or Restart* and press Enter.
3. Press the spacebar to display *Restart* then press Enter.
A warning message appears.
4. Press Y to continue.
The screen will display shutdown and startup functions.
5. When the `Login:` prompt appears, log into the CLU again.

Replacing a Power Supply

The power supply and its fans are replaced as one unit. There are no individually serviceable parts. No tools are required for this procedure.

Remove the Old Power Supply

To remove the power supply:

1. Verify that the power supply LED is amber or red.
2. Switch off the power.
3. Unplug the power cord.
4. Press the release button and pull the handle downward as shown. See Figures 1 and 2.
5. Pull the power supply out of the VTrak enclosure.

Install a New Power Supply

To install the power supply:

1. Carefully slide the power supply into the enclosure.
2. Gently press the handle in and upward until it locks. See Figures 1 and 2.
3. Plug in the power cord.
4. Switch on the power supply.
5. Verify that the new power supply LED is green.

Figure 1. Replacing a M610i power supply



Figure 2. Replacing a M310i/M210i power supply



This completes the power supply replacement procedure.


Replacing a Cooling Unit Fan or Blower

The fan or blower in each cooling unit is replaced as an individual part. No tools are required for this procedure.

To replace a fan or blower:

1. Verify that the Fan LED is amber or red.

Figure 3. Fan LED (left: M610i, right: M310i/M210i)

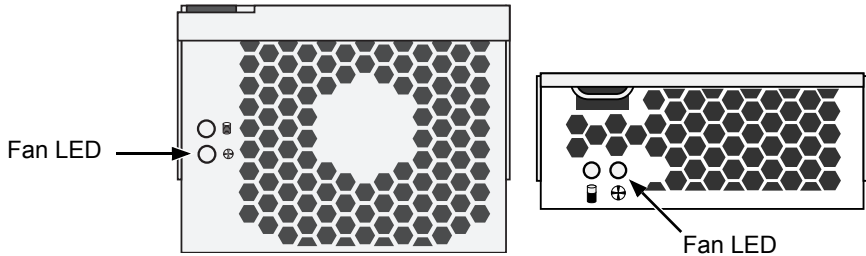

2. Press the release button and pull the handle downward. See Figures 4 and 5.
3. Pull the cooling unit out of the VTrak enclosure.

Figure 4. Removing a cooling unit from the M610i



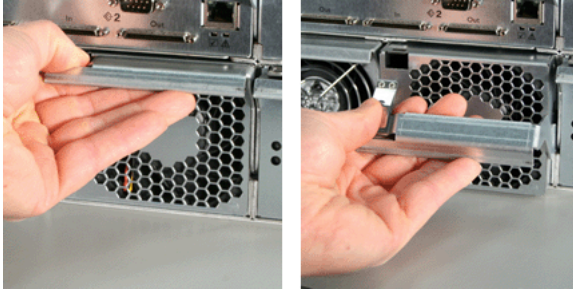


Figure 5. Removing a cooling unit from the M310i/M210i

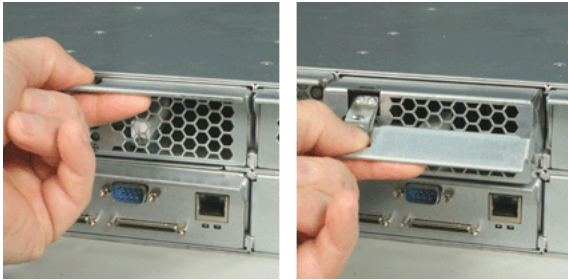


4. Loosen the thumbscrew. A retainer keeps the thumbscrew in place.
5. Grasp the cover near the thumbscrews and lift it off. Remove the cover to access the fan or blower. See Figures 6 and 7.

Figure 6. Loosen the thumbscrews and remove the cover (M610i)

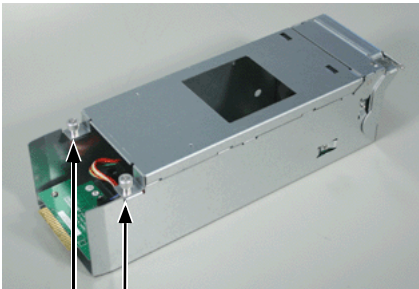


Loosen the thumbscrews

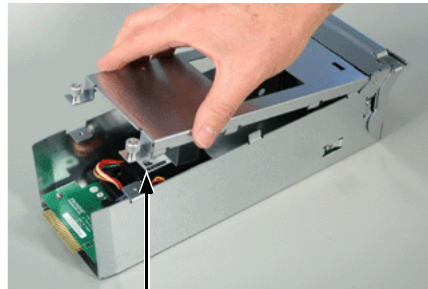


Lift the cover

Figure 7. Loosen the thumbscrews and remove the cover (M310i/m210i)

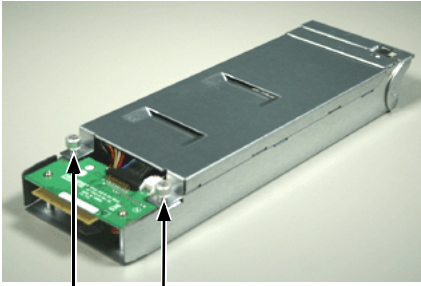


Loosen the thumbscrews

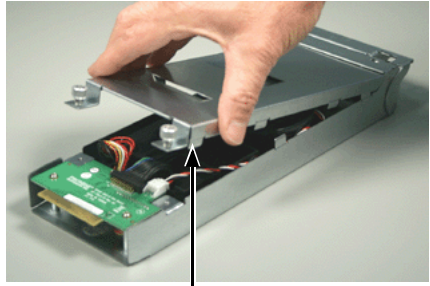

Lift the cover

6. Lift the fan or blower off the mounting pins and detach the electrical connector. See Figures 8 and 9.


Figure 8. The M610i fan and its electrical connector

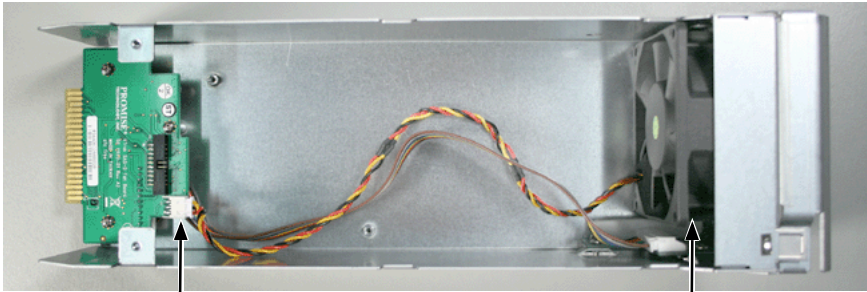

Electrical
connector

Fan

Figure 9. The M310i/M210i blower and its electrical connector

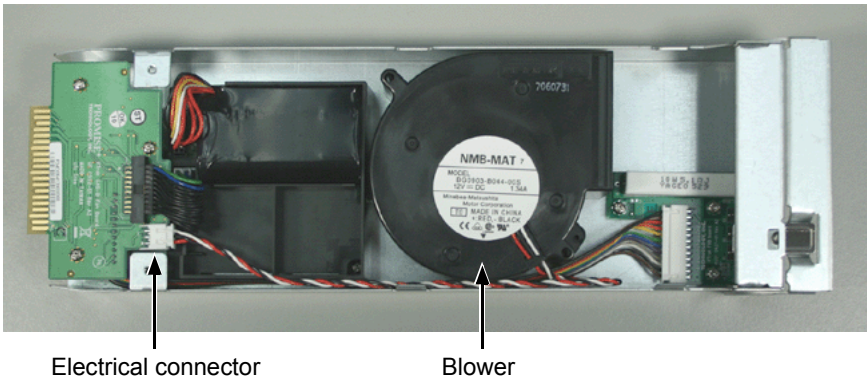

7. Attach the electrical connector of the new fan or blower and set the fan or blower in place.

Be sure you position the fan or blower onto the mounting pins. See Figures 10 and 11.

Figure 10. Position the fan onto the mounting pins, pointed outward



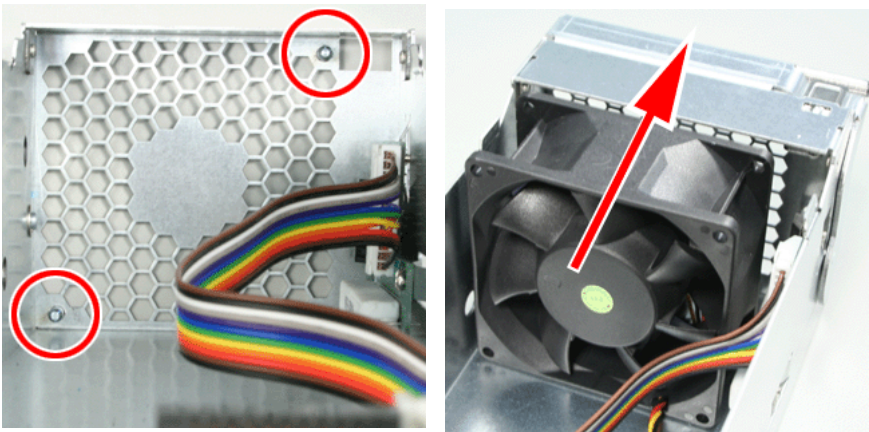



Figure 11. Position the blower onto the mounting pins, pointed outward

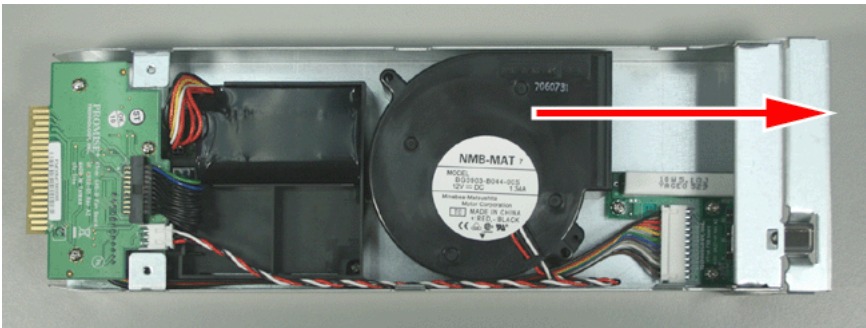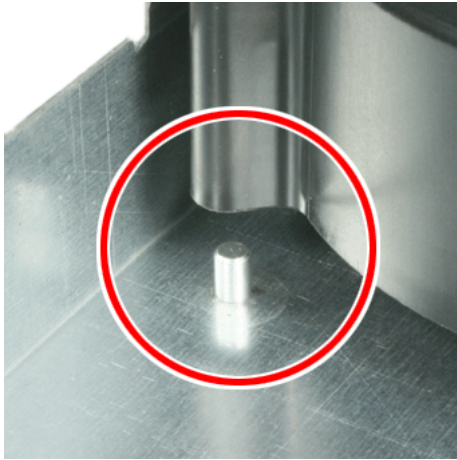

Be sure the fan points outward, towards the handle.

8. Place the top section of the cooling unit onto the bottom section and tighten the thumbscrews.
9. Carefully slide the cooling unit into the enclosure.
10. Gently press the handle in and upward until it locks.
See Figure 12.

Figure 12. Locking the cooling unit handle (left: M610i, right: M310i/M210i)

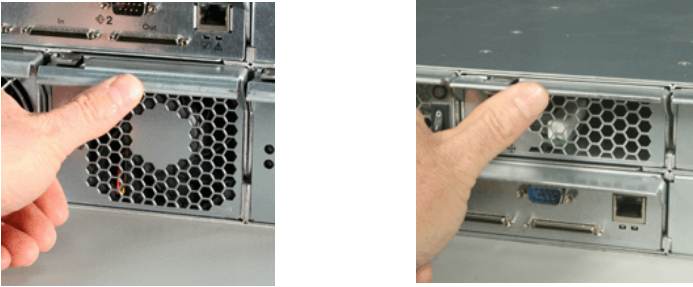

11. Verify that the Fan LEDs are green.

This completes the fan replacement procedure.

Replacing a Cache Battery

The cache battery is located inside the Cooling Unit. The battery is replaced as an individual part.




Cautions

- Try reconditioning the battery before you replace it. See page 98 or page 142 for more information.
- The battery assembly is replaced as a unit. Do not attempt to disconnect the battery by itself.
- Installing the wrong replacement battery can result in an explosion.
- Dispose of used batteries according to the instructions that accompany the battery.
- While the battery is removed, your system will be vulnerable to data loss if the power fails while data is being written to the logical drives.
- If power service has failed, do not remove the cooling unit if the Controller's Dirty Cache LED is flashing. See "Unsaved Data in the Controller Cache" on page 281.

To replace a cache battery:

1. Verify that the Battery LED is amber or red. See Figure 13.

Figure 13. Fan LED (left: M610i, right: M310i/M210i)

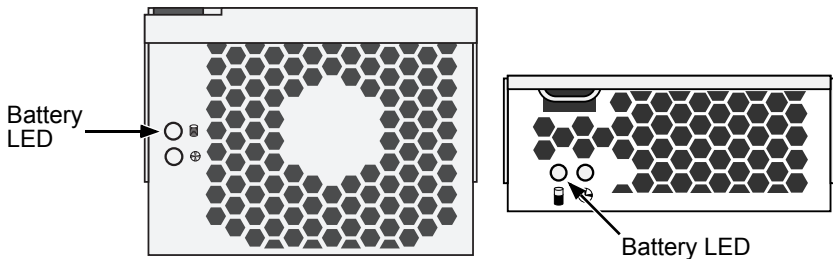

2. Press the release button and pull the handle downward as shown above.
3. Pull the cooling unit out of the VTrak enclosure. See Figures 14 and 15.

Figure 14. Removing the cooling unit from the M610i



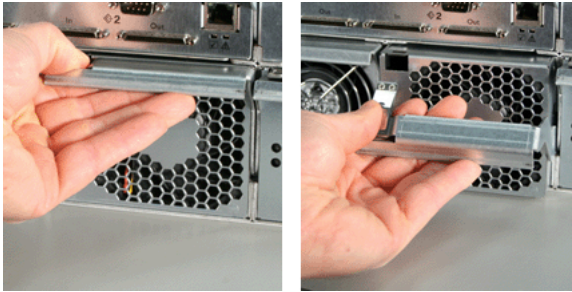


Figure 15. Removing the cooling unit from the M310i/M210i

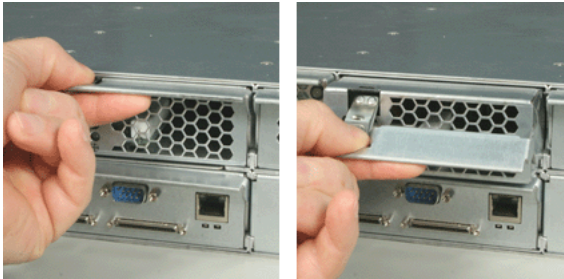


3. Loosen the thumbscrew. A retainer keeps the thumbscrew in place.
4. Grasp the cover near the thumbscrews and lift it off. Remove the cover to access the battery. See Figures 16 and 17.

Figure 16. Loosen the thumbscrews and remove the cover (M610i)

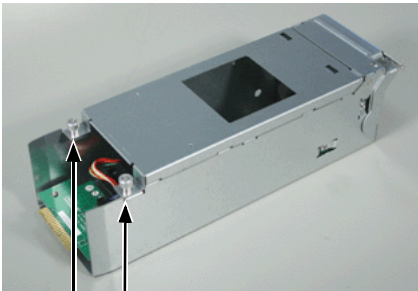


Loosen the thumbscrews

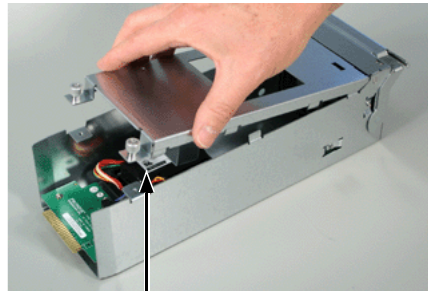


Lift the cover

Figure 17. Loosen the thumbscrews and remove the cover (M310i/m210i)

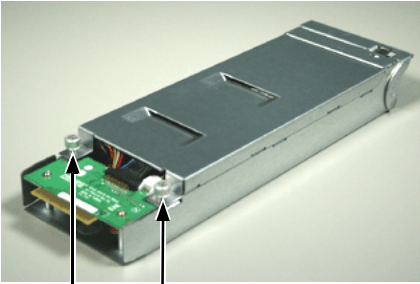


Loosen the thumbscrews

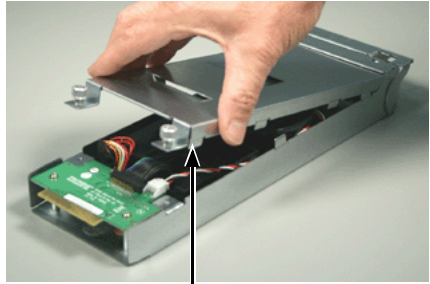

Lift the cover

5. Remove the two screws holding the battery assembly in place.
6. Detach the connector on the circuit board.
Do not detach any other connectors. See Figures 18 and 19.


Figure 18. Removing the battery assembly screws and detaching the connector (M610i)

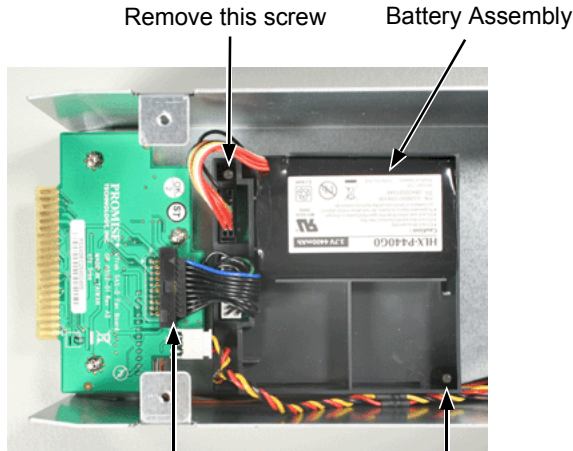

Detach this connector


Remove this screw

Figure 19. Removing the battery assembly screws and detaching the connector (M310i/M210i)

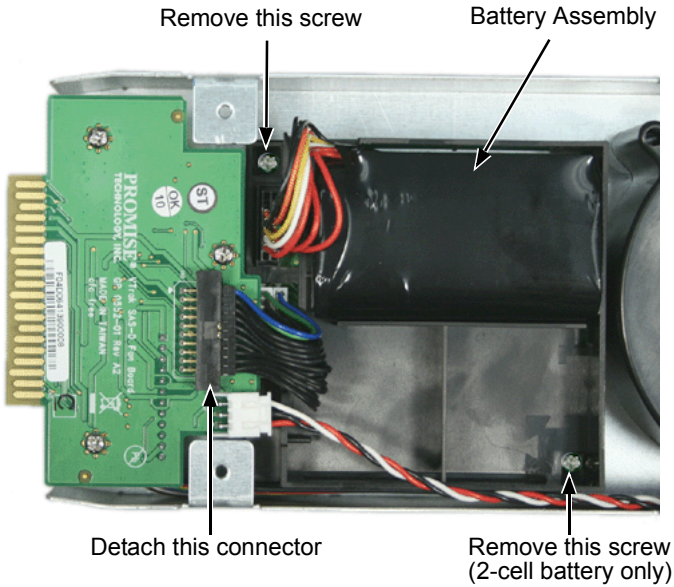

7. Lift the battery assembly out of the cooling unit.
8. Place a new battery assembly into the cooling unit.
9. Attach the connector on the circuit board.
10. Install the two screws holding the battery assembly in place to the cooling unit.
11. Place the top section of the cooling unit onto the bottom section and tighten the thumbscrews.
12. Carefully slide the cooling unit into the enclosure.
13. Gently press the handle in and upward until it locks. See Figure 20.

Figure 20. Locking the cooling unit handle (left: M610i, right: M310i/M210i)

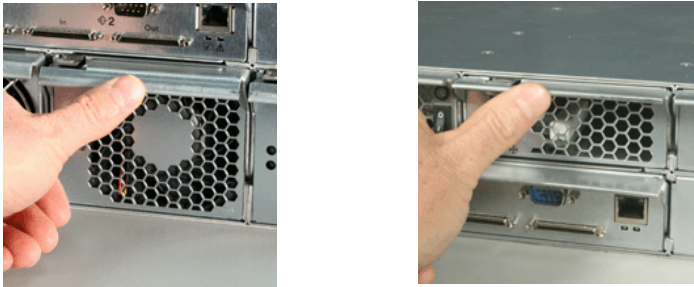

This completes the battery replacement procedure.

Replacing a RAID Controller

The RAID Controller monitors and manages the logical drives. When this controller is replaced, all of your logical drive data and configurations remain intact because this logical drive information is stored on the disk drives.



Caution

The RAID Controller is NOT a hot-swappable device. Power-down the VTrak before removing it.



Important

Do not replace the RAID Controller based on LED colors alone. Only replace the RAID Controller when directed to do so by Promise Technical Support. See page 285.

Removing the old controller

To remove the RAID Controller:

1. Shutdown the VTrak. See “Shutting Down the Subsystem” on page 89 (WebPAM PROe) or page 194 (CLU).
2. Switch off the power.
3. Disconnect the iSCSI cables, management, serial, and power cables.
4. On the controller handle, press the release button and pull the handle downward. See Figures 21 and 22.
5. Pull the controller out of the VTrak enclosure.

Installing the new controller

To install the new controller:

1. Carefully slide the controller into the enclosure.
2. Gently press the handle in and upward until it locks. See Figure 21.
3. Connect the iSCSI cables, management, serial, and power cables.
4. Switch on the power.

The VTrak will restart. For more information about VTrak’s start-up behavior, see “Connecting the Power” on page 21.

Figure 21. Removing and replacing the controller (M610i)


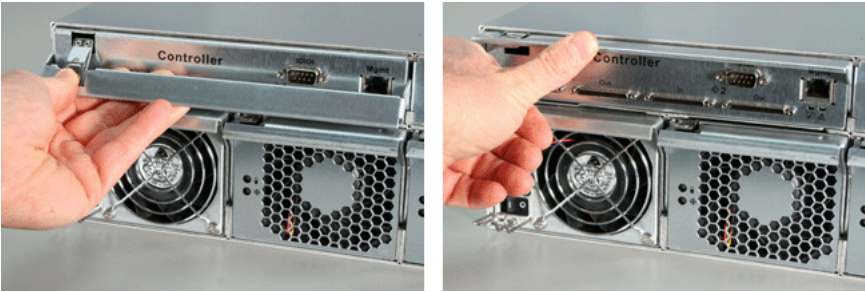


Figure 22. Removing and replacing the controller (M310i/M210i)

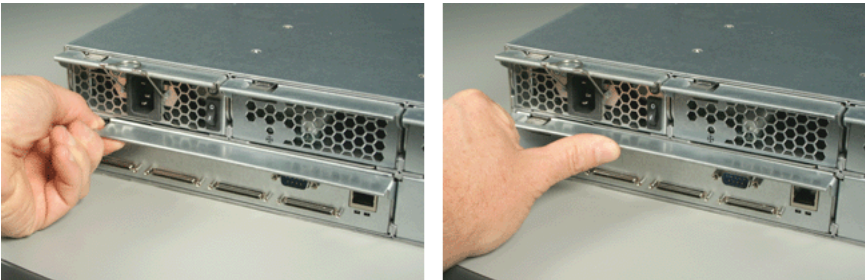

This completes the controller replacement procedure.

Chapter 7: Technology Background

This chapter covers the following topics:

- Introduction to RAID (below)
 - Choosing a RAID Level (page 228)
 - Choosing Stripe Size (page 231)
 - Choosing Sector Size (page 231)
 - Cache Policy (page 232)
 - Capacity Coercion (page 233)
 - Initialization (page 234)
 - Hot Spare Drive(s) (page 234)
 - Partition and Format the Logical Drive (page 235)
 - RAID Level Migration (page 235)
 - Media Patrol (page 238)
 - Predictive Data Migration (PDM) (page 238)
 - Transition (page 239)
-

Introduction to RAID

RAID (Redundant Array of Independent Disks) allows multiple hard drives to be combined together in a disk array. Then all or a portion of the disk array is formed into a logical drive. The operating system sees the logical drive as a single storage device, and treats it as such. The RAID software and/or controller handle all of the individual drives on its own. The benefits of a RAID can include:

- Higher data transfer rates for increased server performance
- Increased overall storage capacity for a single drive designation (such as, C, D, E, etc.)
- Data redundancy/fault tolerance for ensuring continuous system operation in the event of a hard drive failure

Different types of disk arrays use different organizational models and have varying benefits. Also see “Choosing a RAID Level” on page 228. The following outline breaks down the properties for each type of RAID disk array:

RAID 0 – Stripe

When a disk array is striped, the read and write blocks of data are interleaved between the sectors of multiple drives. Performance is increased, since the workload is balanced between drives or “members” that form the disk array. Identical disk drives are recommended for performance as well as data storage efficiency. The disk array’s data capacity is equal to the number of disk drive members multiplied by the smallest drive’s capacity.

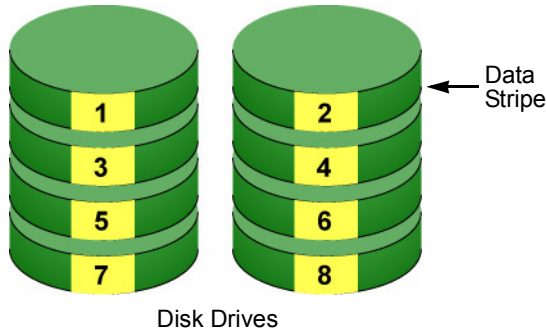


Figure 1. RAID 0 Striping interleaves data across multiple drives

For example, one 100GB and three 120GB drives will form a 400GB (4 x 100GB) disk array instead of 460 GB.

RAID 0 arrays require one or more physical drives.

Recommended applications: Image Editing, Pre-Press Applications, other applications requiring high bandwidth.

RAID 1 – Mirror

When a disk array is mirrored, identical data is written to a pair of drives, while reads are performed in parallel. The reads are performed using elevator seek and load balancing techniques where the workload is distributed in the most efficient manner. Whichever drive is not busy and is positioned closer to the data will be accessed first. With RAID 1, if one drive fails or has errors, the other mirrored drive continues to function. This is called *Fault Tolerance*. Moreover, if a spare drive is present, the spare drive will be used as the replacement drive and data will begin to be mirrored to it from the remaining good drive.

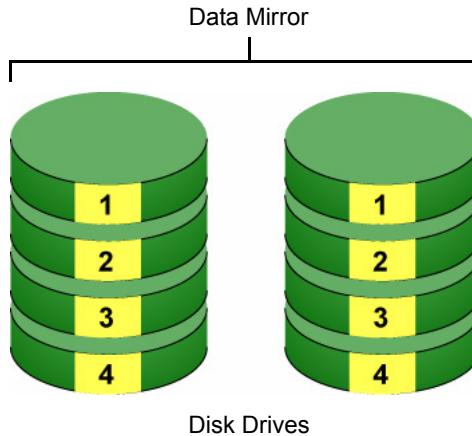


Figure 2. RAID 1 Mirrors identical data to two drives

Due to the data redundancy of mirroring, the drive capacity of the disk array is only the size of the smallest drive. For example, two 100GB drives which have a combined capacity of 200GB instead would have 100GB of usable storage when set up in a mirrored disk array. Similar to RAID 0 striping, if drives of different capacities are used, there will also be unused capacity on the larger drive.


RAID 1 arrays use two physical drives. You can create multiple RAID 1 disk arrays on the same Promise product.

Recommended applications: Accounting, Payroll, Financial, other applications requiring very high availability.

RAID 1E – Enhanced Mirror

RAID 1E offers the security of mirrored data provided by RAID 1 plus the added capacity of more than two disk drives. It also offers overall increased read/write performance plus the flexibility of using an odd number of disk drives. With RAID 1E, each data stripe is mirrored onto two disk drives. If one drive fails or has errors, the other drives continue to function, providing fault tolerance.

Enhanced Data Mirrors

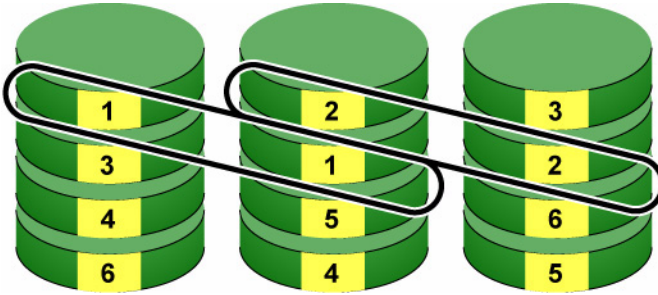

Disk Drives

The advantage of RAID 1E is the ability to use an odd number of disk drives, unlike RAID 1 and RAID 10. You can also create a RAID 1E Logical Drive with an even number of disk drives. However, if you have an even number of disks, you will obtain greater security with comparable performance using RAID 10.

RAID 1E arrays consist of three or more physical drives. You can create an array with just two physical drives and specify RAID 1E. But the resulting array will actually be a RAID 1.

Recommended applications: Imaging Applications, Database Servers, General Fileservers.

RAID 5 – Block and Parity Stripe

RAID 5 organizes block data and parity data across the physical drives. Generally, RAID Level 5 tends to exhibit lower random write performance due to the heavy workload of parity recalculation for each I/O. RAID 5 is generally considered to be the most versatile RAID level

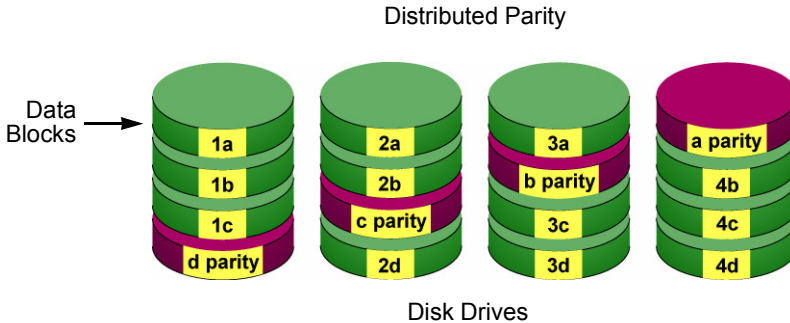


Figure 3. RAID 5 Stripes all drives with data and parity information


The capacity of a RAID 5 disk array is the smallest drive size multiplied by the number of drives less one. Hence, a RAID 5 disk array with (4) 100 GB hard drives will have a capacity of 300GB. A disk array with (8) 120GB hard drives and (1) 100GB hard drive will have a capacity of 800GB.

RAID 5 requires a minimum of three physical drives and a maximum of 16.

Recommended applications: File and Application Servers; WWW, E-mail, News servers, Intranet Servers

RAID 6 – Block and Double Parity Stripe

RAID level 6 stores dual parity data is rotated across the physical drives along with the block data. A RAID 6 disk logical drive can continue to accept I/O requests when any two physical drives fail.

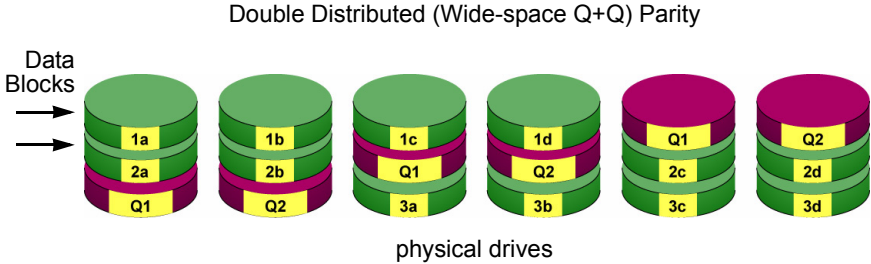

The total capacity of a RAID 6 disk logical drive is the smallest physical drive times the number of physical drives, minus two.

Hence, a RAID 6 disk logical drive with (6) 100 GB hard drives will have a capacity of 400 GB. A disk logical drive with (4) 100 GB hard drives will have a capacity of 200GB.

RAID 6 becomes more capacity efficient in terms of physical drives as the number of physical drives increases.

RAID 6 offers double fault tolerance. Your logical drive remains available when up to two physical drives fail.

RAID 6 is generally considered to be the safest RAID level.

RAID 6 requires a minimum of four physical drives and a maximum of 16.

Recommended applications: Accounting, financial, and database servers; any application requiring very high availability.

RAID 10 – Mirror + Stripe

Mirroring/stripping combines both of the previous RAID 1 and RAID 0 disk array types. RAID 10 is similar though not identical to RAID 0+1. RAID 10 can increase performance by reading and writing data in parallel while protecting data with duplication. At least four drives are needed for RAID 10 to be installed. With four disk drives, the drive pairs are striped together with one pair mirroring the first pair. The data capacity is similar to a RAID 1 disk array, with half of the total storage capacity used for redundancy. An added plus for using RAID 10 is that, in many situations, such a disk array offers double fault tolerance. Double fault tolerance may allow your logical drive to continue to operate depending on which two disk drives fail.

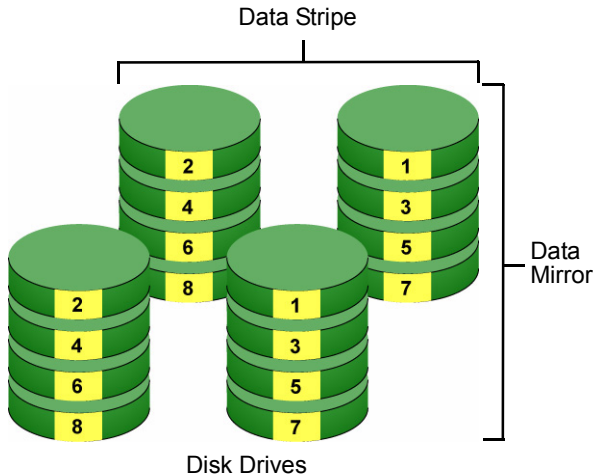


Figure 4. RAID 10 takes a data mirror on one drive pair and stripes it over two drive pairs

RAID 10 arrays require an even number of physical drives and a minimum of four.

For RAID 10 characteristics with an odd number of disk drives, use RAID 1E.

Recommended applications: Imaging Applications, Database Servers, General Fileservers.

RAID 50 – Striping of Distributed Parity

RAID 50 combines both RAID 5 and RAID 0 features. Data is striped across disks as in RAID 0, and it uses distributed parity as in RAID 5. RAID 50 provides data reliability, good overall performance and supports larger volume sizes.

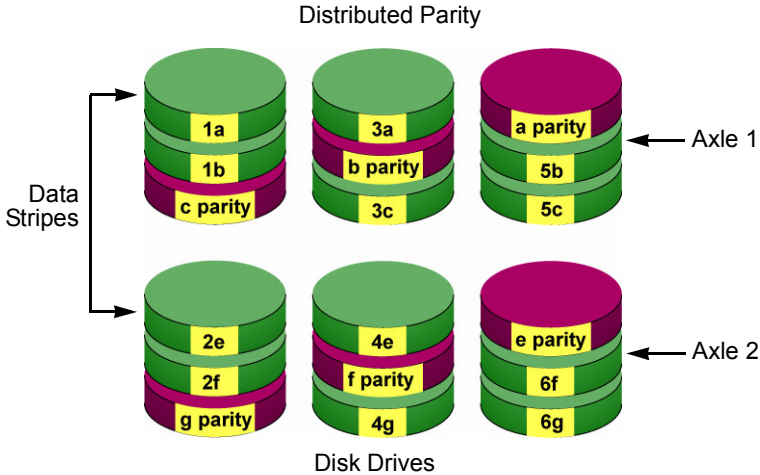


Figure 5. RAID 50 Striping of Distributed Parity disk arrays

RAID 50 also provides high reliability because data is still available even if multiple disk drives fail (one in each axle). The greater the number of axles, the greater the number of disk drives that can fail without the RAID 50 array going offline.

RAID 50 arrays consist of six or more physical drives.

Recommended applications: File and Application Servers, Transaction Processing, Office applications with many users accessing small files.

RAID 50 Axles

When you create a RAID 50, you must specify the number of *axles*. An axle refers to a single RAID 5 array that is striped with other RAID 5 arrays to make RAID 50. An axle can have from 3 to 16 physical drives, depending on the number of physical drives in the array.

The chart below shows RAID 50 arrays with 6 to 16 physical drives, the available number of axles, and the resulting distribution of physical drives on each axle.

RAID 50 Array		
No. of Drives	No. of Axles	Drives per Axle
6	2	3,3
7	2	3,4
8	2	4,4
9	2	4,5
	3	3,3,3
10	2	5,5
	3	3,3,4
11	2	5,6
	3	3,4,4
12	2	6,6
	3	4,4,4
	4	3,3,3,3
13	2	6,7
	3	4,4,5
	4	3,3,3,4
14	2	7,7
	3	4,5,5
	4	3,3,4,4
15	2	7,8
	3	5,5,5
	4	3,4,4,4
	5	3,3,3,3,3
16	2	8,8
	3	5,5,6
	4	4,4,4,4
	5	3,3,3,3,4

Choosing a RAID Level

There are several issues to consider when choosing the RAID Level for your VTrak disk array. The following discussion summarizes some advantages, disadvantages, and applications for each choice.

RAID 0

Advantages	Disadvantages
Implements a striped disk array, the data is broken down into blocks and each block is written to a separate disk drive I/O performance is greatly improved by spreading the I/O load across many channels and drives No parity calculation overhead is involved	Not a true RAID because it is not fault-tolerant The failure of just one drive will result in all data in an disk array being lost Should not be used in mission critical environments

Recommended Applications for RAID 0

- Image Editing
- Pre-Press Applications
- Any application requiring high bandwidth

RAID

Advantages	Disadvantages
Simplest RAID storage subsystem design Can increase read performance by processing data requests in parallel since the same data resides on two different drives	Very high disk overhead - uses only 50% of total capacity

Recommended Applications for RAID 1

- Accounting
- Payroll
- Financial
- Any application requiring very high availability

RAID 1E

Advantages	Disadvantages
Implemented as a mirrored disk array whose segments are RAID 0 disk arrays High I/O rates are achieved thanks to multiple stripe segments Can use an odd number of disks	Very high disk overhead - uses only 50% of total capacity

Recommended Applications for RAID 1E

- Imaging applications
- Database servers
- General fileserver

RAID 5

Advantages	Disadvantages
High Read data transaction rate Medium Write data transaction rate Good aggregate transfer rate	Disk failure has a medium impact on throughput

Recommended Applications for RAID 5

- File and Application servers
- WWW, E-mail, and News servers
- Intranet servers
- Most versatile RAID level

RAID 6

Advantages	Disadvantages
High Read data transaction rate Medium Write data transaction rate Good aggregate transfer rate Safest RAID level	High disk overhead – equivalent of two drives used for parity Slightly lower performance than RAID 5

Recommended Applications for RAID 6

- Accounting and Financial
- Database servers
- Any application requiring very high availability

RAID 10

Advantages	Disadvantages
Implemented as a mirrored disk array whose segments are RAID 0 disk arrays High I/O rates are achieved thanks to multiple stripe segments	Very high disk overhead - uses only 50% of total capacity

Recommended Applications for RAID 10

- Imaging applications
- Database servers
- General fileserver

RAID 50

Advantages	Disadvantages
High Read data transaction rate Medium Write data transaction rate Good aggregate transfer rate High reliability Supports large volume sizes	Higher disk overhead than RAID 5

Recommended Applications for RAID 50

- File and Application servers
- Transaction processing
- Office application with many users accessing small files

Choosing Stripe Size

Stripe Size, also called “Stripe Block Size”, refers to the size of the data blocks written to, and read from, the physical drives. Stripe Size is specified when you create a disk array. In order to change the Stripe Size of an existing disk array, you must delete the disk array and create a new one. You can select Stripe Size directly when you use the Advanced function to create a disk array. If you use the Express function to create a disk array, WebPAM PRO selects the Stripe Size when you choose an Application Type.

The available Stripe Sizes are 64, 128, 256 KB, 512 KB, and 1 MB. 64 KB is the default. There are two issues to consider when selecting the Stripe Size.

First, you should choose a Stripe Size equal to, or smaller than, the smallest cache buffer found on any physical drive in the disk array. Selecting a larger value slows read/write performance because physical drives with smaller cache buffers need more time for multiple accesses to fill their buffers.

Second, if your data retrieval consists of fixed data blocks, such as with some database or video applications, then you should choose that size as your Stripe Size.

If you do not know the cache buffer or fixed data block sizes, Promise suggests you select 64 KB as your Stripe Size. Generally speaking, email, POS, and web servers prefer smaller stripe sizes. Video and database applications prefer larger stripe sizes.

Choosing Sector Size

A sector is the smallest addressable area on a physical disk drive. Sector Size refers to the size of sector measured by the number of bytes of data it can hold. The most common sector size is 512 bytes (512 B). A smaller sector size results in a more efficient use of a disk drive’s capacity. 512 B is the default sector size for logical drives on VTrak.



Important

For iSCSI, always use a 512-byte sector size.

- Larger sector sizes are incompatible with the Microsoft iSCSI initiator.
 - Linux systems with the 2.4 kernel do not support variable sector sizes.
 - Linux systems with the 2.6 kernel support 64-bit LBA and do not need larger sector sizes.
-

Cache Policy

As it is used with VTrak, the term cache refers to any of several kinds of high-speed, volatile memory that hold data moving from your computer to the physical drives or vice-versa. Cache is important because it can read and write data much faster than a physical drive. There are read caches, which hold data as it is read from a physical drive; and write caches, which hold data as it is written to a physical drive.

In order to tune the cache for best performance in different applications, user-adjustable settings are provided. Cache settings are made in conjunction with logical drives:

- When you create a logical drive. See “Creating a Logical Drive” on page 111 (WebPAM PROe) or page 156 (CLU).
- On an existing logical drive. See “Making Logical Drive Settings” on page 120 (WebPAM PROe) or page 159 (CLU).

Read Cache Policy

- Read Cache – The read cache is enabled.
- Read Ahead – The read cache and the read-ahead feature are enabled. Read-ahead anticipates the next read and performs it before the request is made. Can increase read performance.
- No Cache – The read cache is disabled.

Write Cache Policy

- Write Back – Data is written first to the cache, then to the physical drive. Better performance. VTrak has a cache backup battery to protect data in the cache from a sudden power failure.
- Write Thru – Also “Write Through”. Data is written to the cache and the physical drive at the same time. Safer.

If Write Policy is set to Write Back, and the cache backup battery goes offline, the Write Policy automatically changes to Write Thru. When the battery comes back online, the Write Policy automatically changes back to Write Back.

If Write Policy is set to Write Back, and the Adaptive Writeback Cache feature is enabled, the Write Policy will remain at Write Back even when the battery is offline. Any data in the controller cache will be lost in the event of a power failure.

Adaptive Writeback Cache

On the VTrak subsystem, you can set the logical drive write cache policy to Write Through or Write Back.

If you set the write cache policy to Write Back, your data is first written to the controller cache, and later to the physical drive. This action improves performance. To preserve the data in the cache in the event of a power failure, the subsystem has a backup battery that powers the cache until service is restored.

Normally, if the cache backup battery is not present or the battery is being reconditioned, your logical drive write cache policy is automatically set to Write Through, so no data is stored in the controller cache. This action slightly reduces performance but avoids data loss in the event of a power failure. When a battery is installed or finishes reconditioning, the write cache policy is automatically reset to Write Back.

The Adaptive Writeback Cache option enables you to set your logical drive write cache policy to Write Back, even if no cache backup battery is present or the battery is being reconditioned. This action improves performance but also risks a loss of data in the event of a power failure.

To enable the Adaptive Writeback Cache option, click the Controller Settings tab. See “Making Controller Settings” on page 93 (WebPAM PROe) or page 138 (CLU).

Also see “Replacing a Cache Battery” on page 211.

Capacity Coercion

This feature is designed for fault-tolerant logical drives (RAID 1, 1E, 5, 10, 50, and 60). It is generally recommended to use physical drives of the same size in your disk arrays. When this is not possible, physical drives of different sizes will work but the system must adjust for the size differences by reducing or coercing the capacity of the larger drives to match the smaller ones. With VTrak, you can choose to enable Capacity Coercion and any one of four methods.

Enable Capacity Coercion and select the Method in the Controller Settings menu. See page 93 or page 138. The choices are:

- GB Truncate – (Default) Reduces the useful capacity to the nearest 1,000,000,000 byte boundary.
- 10GB Truncate – Reduces the useful capacity to the nearest 10,000,000,000 byte boundary.
- Group Rounding – Uses an algorithm to determine how much to truncate. Results in the maximum amount of usable drive capacity.
- Table Rounding – Applies a predefined table to determine how much to truncate.

Capacity Coercion also affects a replacement drive used in a disk array. Normally, when an physical drive fails, the replacement drive must be the same

capacity or larger. However, the Capacity Coercion feature permits the installation of a replacement drive that is slightly smaller (within 1 gigabyte) than the remaining working drive. For example, the remaining working drives can be 80.5 GB and the replacement drive can be 80.3, since all are rounded down to 80 GB. This permits the smaller drive to be used.

Without Capacity Coercion, the controller will not permit the use of a replacement physical drive that is slightly smaller than the remaining working drive(s).

Initialization

Initialization is done to logical drives after they are created from a disk array. Initialization sets all data bits in the logical drive to zero. The action is useful because there may be residual data on the logical drives left behind from earlier configurations. For this reason, Initialization is recommended for all new logical drives. See “Initializing a Logical Drive” on page 121 (WebPAM PROe) or page 160 (CLU).



Caution

When you initialize a logical drive, all the data on the logical drive will be lost. Backup any important data before you initialize a logical drive.

Hot Spare Drive(s)

A hot spare is a disk drive that is connected to the disk array system but is not assigned as a member of the disk array. In the event of the failure of a drive within a functioning fault tolerant disk array, the hot spare is activated as a member of the disk array to replace a drive that has failed.

VTrak will replace a failing disk drive in a disk array with an unassigned drive, if one is available. The unassigned drive is not part of any disk array. Such a drive is called a *hot spare* drive. There are two types:

- **Global** – An unassigned disk drive available to any disk array on the VTrak.
- **Dedicated** – An unassigned disk drive that can only be used by a specified disk array.

The hot spare policy function lets you select whether a disk array will access any unassigned disk drive or a designated drive in the event of disk drive failure. See “Managing Spare Drives” on page 125 (WebPAM PROe) or page 176 (CLU) for information on how to make this setting.

The spare drive effectively takes the place of the failed drive and the RAID system immediately begins to rebuild data onto the drive. When the rebuild is complete, the disk array is returned to fault tolerant status.

VTrak includes a function that enables you to return a hot spare drive from a disk array back to spare status. When you create the hot spare drive, check the Revertible box to enable this feature. See “Transition” on page 239.

See also “Critical & Offline Disk Arrays” on page 269.

Partition and Format the Logical Drive

Like any other type of fixed disk media in your system, a RAID logical drive must also be partitioned and formatted before use. Use the same method of partitioning and formatting on an logical drive as you would any other fixed disk.

Depending on the operating system you use, there may or may not be various capacity limitations applicable for the different types of partitions.

RAID Level Migration

To *migrate* a disk array is to do one or both:

- Change its RAID level
- Increase the number of disk drives (sometimes called Expansion)

Migration takes place on an existing Functional disk array without disturbing the existing data. While the disk array is migrating, you can access the data as before. When migration is complete, your disk array will have a different RAID level and/or a larger capacity.

Different types of disk arrays use different organizational models and have varying benefits. The following outline breaks down the properties for each type of RAID supported by Promise products.

From	To	Increase		Redundancy	
		Capacity	Performance	Add	Lose
RAID 50	RAID 10	•			
	RAID 5				•*
	RAID 1E		•		
	RAID 0	•	•		•
RAID 10	RAID 50	•			
	RAID 5	•			
	RAID 1E	•			
	RAID 0	•	•		•

From	To	Increase		Redundancy	
		Capacity	Performance	Add	Lose
RAID 5	RAID 50			•	
	RAID 10	•	•		
	RAID 1E	•			
	RAID 0	•	•		•
RAID 1E	RAID 50	•			
	RAID 10	•			
	RAID 5	•			
	RAID 0	•			•
RAID 1	RAID 50	•	•		
	RAID 10	•			
	RAID 5	•	•		
	RAID 1E	•			
	RAID 0	•	•		•
RAID 0	RAID 50	•		•	
	RAID 10	•		•	
	RAID 5			•	
	RAID 1E	•		•	
	RAID 1			•	
* Decreases the existing redundancy					



Important

- The Target disk array may require more disk drives than the Source disk array
 - If the Target disk array requires an EVEN number of disk drives but the Source disk array has an ODD number, ADD a disk drive as part of the migration process
 - You cannot reduce the number of disk drives in your disk array, even if the Target disk array requires fewer disk drives than the Source disk array
 - RAID 1 (mirroring) works with two drives only. Only a single-drive RAID 0 disk array or a single-drive JBOD can migrate to RAID 1. Other RAID Levels use too many drives to migrate
 - You cannot migrate a disk array when it is Critical or performing activities such as Synchronizing, Rebuilding, and PDM
 - You cannot migrate to or from RAID 6. You must create a new disk array and move your data to it
-

Ranges of Disk Array Expansion

The Windows 2000 and XP (32-bit) operating systems support a 10-byte LBA format. As a result, these OSes can only recognize 4 billion addresses. If you create a logical drive using the default 512 B sector size, the logical drive will be limited to 2 TB of data, even if there is more space available on your disk drives.

This limitation does not apply to Windows XP (64-bit), 2003 Server, Vista, and Linux OSes with the 2.6 kernel. Linux OSes with the 2.4 kernel do not support variable sector sizes, therefore you cannot apply the solution described here to those OSes.

For Windows 2000 and XP (32-bit) operating systems, you can direct WebPAM PROe to expand a logical drive beyond the maximum 2 TB expansion size. When the expansion is finished:

- WebPAM PROe will show the logical drive in the desired size.
- Your operating system might show the logical drive at 2 TB.
- Additional capacity might appear as unpartitioned and unformatted.

At this point, you can format the unpartitioned/unformatted capacity as a *second* logical drive.

Media Patrol

Media Patrol is a routine maintenance procedure that checks the magnetic media on each disk drive. Media Patrol checks all physical drives assigned to disk arrays. Media Patrol does not check unconfigured drives.

Media Patrol will also check spare drives, if those drives have Media Patrol enabled. Media Patrol for spare drives is enabled by default. You can disable it in VTrak's Command Line Interface (CLI).

Unlike Synchronization and Redundancy Check, Media Patrol is concerned with the condition of the media itself, not the data recorded on the media. If Media Patrol encounters a critical error, it triggers PDM if PDM is enabled.

You can run Media Patrol from the subsystem. See "Running Media Patrol" on page 52 (WebPAM PROe) or page 136 (CLU).

You can also run Media Patrol on a disk array in WebPAM PROe. See page 115.

Predictive Data Migration (PDM)

Predictive Data Migration (PDM) is the migration of data from the suspect disk drive to a spare disk drive, similar to Rebuilding a Logical Drive. But unlike Rebuilding, PDM constantly monitors your disk drives and automatically copies your data to a spare disk drive *before* the disk drive fails and your Logical Drive goes Critical. See "Running PDM" on page 52 (WebPAM PROe) or page 155 (CLU).

After the data is copied from the suspect disk drive, the controller marks it with a Stale configuration and a PFA error.

You can clear the Stale configuration and PFA error and put the disk drive back into service. See "Clearing Stale and PFA Conditions" on page 102 (WebPAM PROe) or page 145 (CLU). In some cases, however, you might remove the disk drive for repair or replacement.

PDM Triggers

The following actions trigger PDM:

- A disk drive with unhealthy status (see below)
- Media Patrol finds a disk critical error*
- You initiate PDM manually

*PDM also counts the number of media errors reported by Media Patrol.

A disk drive becomes unhealthy when:

- A SMART error is reported

- The bad sector remapping table fills to the specified level

Because data would be lost if written to a bad sector, when a bad sector is detected, the disk drive creates a map around it. These maps are saved in the bad sector remapping table, which has a capacity of 512 reassigned blocks and 1024 error blocks.

When the table fills to a specified percentage of its capacity, PDM triggers a migration of data from the suspect drive (the disk drive with the bad sectors) to a spare disk drive.

During data migration, you will have access to the Logical Drive but it will respond more slowly to read/write tasks because of the additional operation. The time required for data migration depends on the size of the disk drive.

See “Making Background Activity Settings” on page 51 (WebPAM PROe) or page 172 (CLU).

Transition

The Transition feature enables you to specify “permanent” spare drives for your VTrak subsystem. Transition is the process of replacing a revertible spare drive that is currently part of a disk array with an unconfigured physical drive or a non-revertible spare. The revertible spare drive returns to its original status.

Transition happens *automatically* when the following sequence of events takes place:


- You create a revertible spare drive.
See page 126 (WebPAM PROe) or page 176 (CLU).
- A physical drive assigned to your disk array fails and the array goes critical or degraded.
- VTrak automatically rebuilds your array to the revertible spare drive and the array becomes functional again.
- You replace the failed physical drive with a new physical drive of equal or greater capacity.
- VTrak automatically transitions (moves) the data from the revertible spare to the new physical drive.
- The new physical drive becomes part of the array and the revertible spare drive returns to its original spare status.

Transition happens *manually* when you specify a different unconfigured physical drive to transition (move) the data from the revertible spare drive.


See the example below.

Example


Following is an example to explain the Transition function.

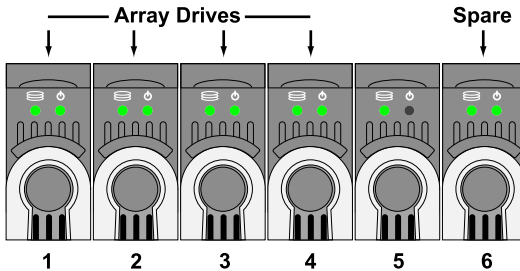

In the example above, there is a four-drive RAID 5 disk array and a global spare drive. Physical drives 1, 2, 3, and 4 belong to the disk array. Physical drive 5 remains unconfigured. Physical drive 6 is a revertible spare drive.

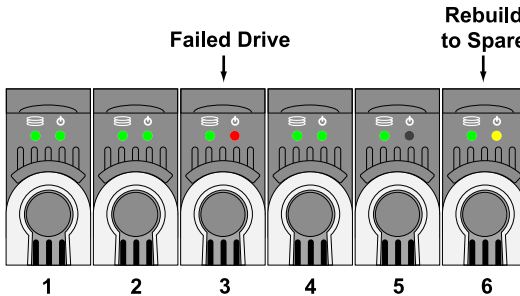

If a physical drive fails in a disk array and there is a spare drive of adequate capacity available, the controller automatically rebuilds the array using the spare drive. In this example, physical drive 3 failed and the array is rebuilt using physical drive 6, the revertible spare drive.

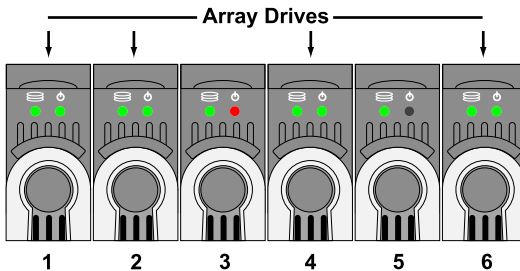


When the rebuild is complete, the spare drive has replaced the failed drive. In this example, failed drive 3 was replaced by spare drive 6. The disk array now consists of physical drives 1, 2, 4, and 6.

There is no spare drive at this moment. Even if physical drive 5 is of adequate capacity, it has not been designated as a spare, therefore the controller cannot use it as a spare.

Automatic Transition

At this juncture, you would replace the failed drive in slot 3 with a new one of the same or greater capacity.

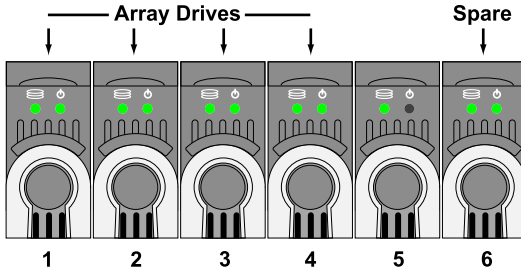


When the VTrak controller detects the new drive in slot 3, it will:

- Automatically transition the data on drive 6 to drive 3
- Return drive 6 to spare status

When the Automatic Transition is finished, physical drives 1, 2, 3, and 4 belong to the disk array and physical drive 6 is a revertible spare drive. The original configuration is restored.

Manual Transition

If you wanted to use the drive in slot 5 as a member of the disk array, rather than the drive in slot 3, you would run the Transition function manually. See page 116 (WebPAM PROe) or page 155 (CLU).

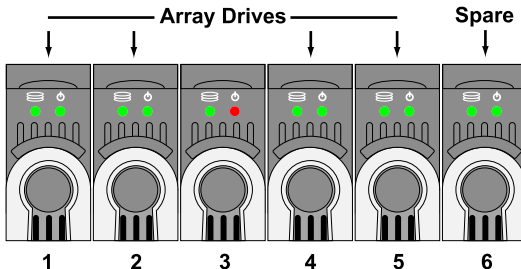

When the Manual Transition is finished, physical drives 1, 2, 4, and 5 belong to the disk array and physical drive 6 is a revertible spare drive.

At this point, you would replace the drive in slot 3. The new drive in slot 3 will be unconfigured until you assign it to a disk array or as a spare.

Chapter 8: Troubleshooting


This chapter covers the following topics:

- VTrak is Beeping (page 244)
 - LEDs Display Amber or Red (page 245)
 - CLU Reports a Problem (page 250)
 - WebPAM PROe Reports a Problem (page 252)
 - LEDs Display Amber or Red (page 245)
 - Event Notification Response (page 255)
 - Critical & Offline Disk Arrays (page 269)
 - Incomplete Array (page 272)
 - Physical Drive Problems (page 273)
 - Enclosure Problems (page 275)
 - Connection Problems (page 278)
 - Browser Does Not Connect to WebPAM PROe (page 280)
 - Unsaved Data in the Controller Cache (page 281)
-

VTrak is Beeping

VTrak's alarm has five different patterns, as shown below.

Figure 1. Audible alarm sound patterns

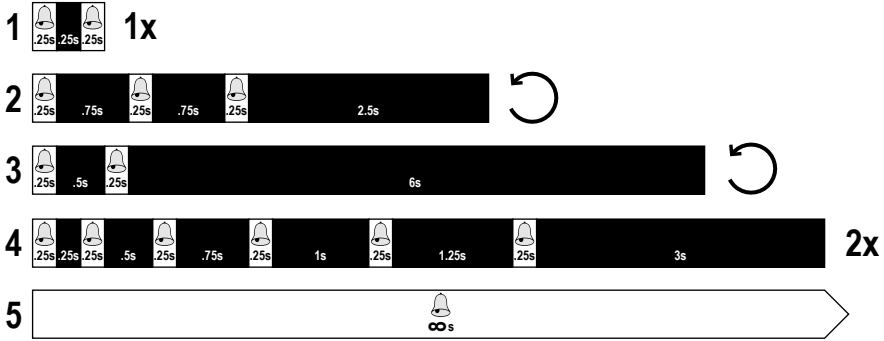

When you first power-up the VTrak, it beeps twice to show normal operation.

The audible alarm sounds at other times to inform you that the VTrak needs attention. But the alarm does not specify the condition. When the alarm sounds:

- Check the front and back of VTrak for red or amber LEDs, as described above.
- If email notification is enabled, check for new messages.
- Check for yellow !s 🟡 or red Xs 🔴 in Tree View (see page 252).
- Check the event log. See page 48 (WebPAM PROe) or page 174 (CLU).

When a continuous tone sounds, there are multiple alarm patterns sounding at the same time.


To make alarm settings or cancel an alarm, see page 99 (WebPAM PROe) or page 197 (CLU).

LEDs Display Amber or Red

Front Panel

When the power is switched on, the LEDs on the front of the VTrak will light up.

Figure 2. VTrak front panel LED display. The M610i is shown

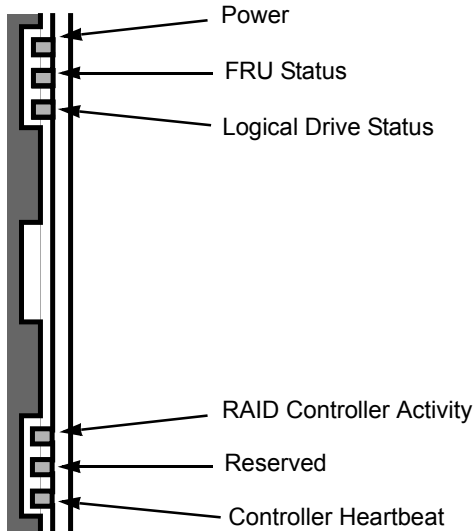

When boot-up is finished and the VTrak is functioning normally:

- Controller Heartbeat LED blinks once every two seconds.
- Power, FRU, and Logical Drive LEDs display green continuously.
- The RAID Controller LED flashes green if there is activity on a iSCSI port.

See the table below.

LEDs	State				
	Dark	Steady Green	Flashing Green	Amber	Red
Power	System Off	Normal			
FRU*	System Off	Normal		Fan, battery or PSU Problem	Fan, battery or PSU Failed
Logical Drive	System Off	Normal		Logical Drive Critical	Logical Drive Offline
Controller Activity	No Activity		Activity		
Controller Heartbeat	System Off		Normal**		

* Field Replacement Unit: includes fan, battery, and power supply unit (PSU).
 ** Blinks once every two seconds.


See page 199 for more information about field-replaceable components.
 See page 269 for a discussion of critical and offline logical drives.

Drive Status Indicators

There are two LEDs on each Drive Carrier. They report the presence of power and a disk drive, and the current condition of the drive.

The VTrak spins up the disk drives sequentially in order to equalize power draw during start-up. After a few moments the Power/Activity and Disk Status LEDs should display green.

Figure 3. VTrak drive carrier LEDs

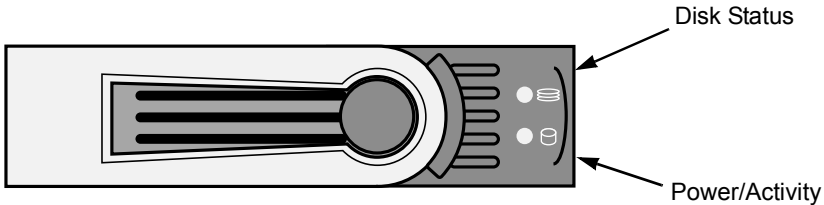

LEDs	State				
	Dark	Steady Green	Flashing Green	Amber	Red
Power/Activity	No Drive	Drive Present	Activity		
Status	No Power/ No Drive	Drive OK		Drive Rebuilding	Drive Error

See “Critical & Offline Disk Arrays” on page 269 for a discussion of rebuilding and failed disk drives.

Back of Enclosure

When the FRU Status LED on VTrak’s front panel shows Amber or Red, check the LEDs on the back of VTrak. These LEDs give the status of the field replaceable units.

Figure 1. VTrak M610i rear view

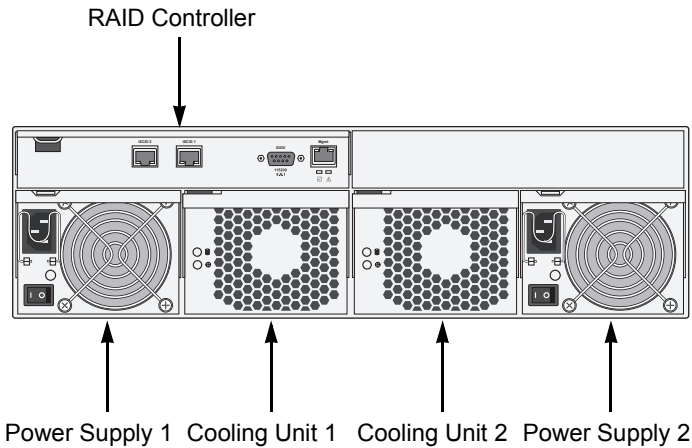


Figure 2. VTrak M310i and M210i rear view


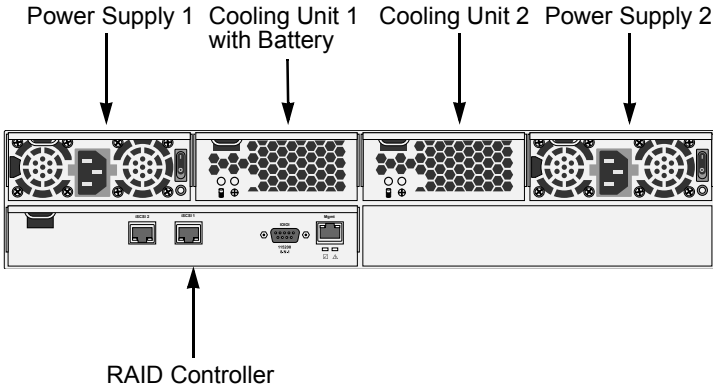


Figure 4. Fan LED (left: M610i, right: M310i/M210i)

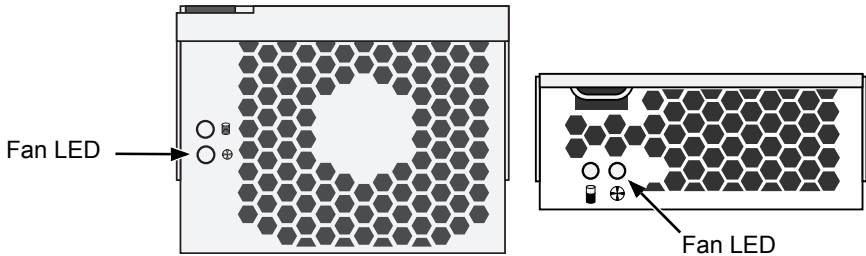


Under normal conditions, the power supply and fan LEDs should display green.

LEDs	State			
	Dark	Green	Amber	Red
Power supply	Not detected	OK	Fan failed	Failed
Fan	Not detected	OK	Wrong speed	Failed

To check a component's installation, follow the same procedure as replacing the component, except that you reinstall the original component rather than a new one. In most cases, this action fixes a bad connection and allows VTrak to detect the component. If this action does not correct the problem, replace the unit. See page 199 for instructions.

The Controller Location LEDs, on the back of the VTrak subsystem, will flash for one minute.

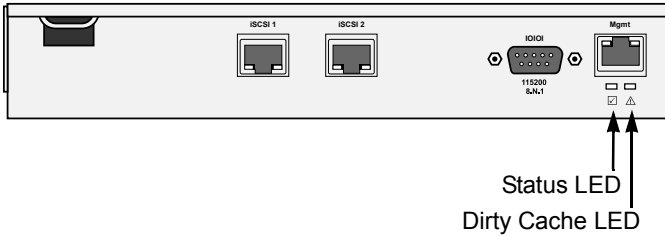Figure 5. The VTrak controller LEDs

Under normal conditions, the Controller Status LED (marked with icon) is green and the Dirty Cache LED (marked with icon) is dark. See the table below.

LEDs	State			
	Dark	Green	Amber	Flashing Amber
Status	no power	OK	Error	
Dirty Cache	OK		Unsaved data in cache	OK

If the Controller Status LED is amber, restart the VTrak. See “Restarting the Subsystem” on page 90 or page 196.

If the Controller Status LED continues to display amber after startup, contact Promise Technical Support. See “Contacting Technical Support” on page 285.

The Dirty Cache LED flashes during input/output operation. If the LED shines amber and the power is off, there is unsaved data in the cache. Do NOT power down the VTrak while this LED is on. See “Browser Does Not Connect to WebPAM PROe” on page 280 for more information.

CLU Reports a Problem

The CLU reports information passively—you must determine which functions to check based on the sound of the VTrak's audible alarm (see page 244) and any amber or red LEDs (see page 245).

Check the event logs first. Then check the reported component.

Viewing Runtime Events

To display Runtime Events:

1. From the Main Menu, highlight *Event Viewer* and press Enter.

The log of Runtime Events appears. Events are added to the top of the list. Each item includes:

- Sequence number – Begins with 0 at system startup.
- Device – Disk Array, Logical Drive, Physical Drive by its ID number.
- Severity – (lowest to highest) Information, Warning, Minor, Major, Critical and Fatal
- Timestamp – Date and time the event happened.
- Description – A description of the event in plain language.

Press the up and down arrow keys to scroll through the log.

Viewing NVRAM Events

This screen displays a list of and information about 63 most important events over multiple subsystem startups.

To display NVRAM events:

1. From the Main Menu, highlight *Event Viewer* and press Enter.
2. Highlight *NVRAM Events* and press Enter.

The log of NVRAM Events appears. Events are added to the top of the list. Each item includes:

- Sequence number – Begins with 0 at system startup.
 - Device – Disk Array, Logical Drive, Physical Drive by its ID number.
 - Severity – (lowest to highest) Information, Warning, Minor, Major, Critical and Fatal
 - Timestamp – Date and time the event happened.
 - Description – A description of the event in plain language.
3. Press the up and down arrow keys to scroll through the log.

Checking a Reported Component

In this example, let us check disk array status.

1. Open the CLU.
2. Highlight *Disk Array Management* and press Enter.
3. Observe the status of your disk arrays.

DaId	Alias	OpStatus	CfgCapacity	FreeCapacity	MaxContiguousCap
0	DA0	OK	75.44GB	66.06GB	66.06GB
1	DA1	Degraded	189.06GB	179.68GB	179.68GB
2	DA2	OK	73.57GB	64.20GB	64.20GB

At this point, you can highlight the Degraded array and press Enter to see more information. See below.

```

Disk Array ID      : 1          Physical Capacity   : 189.06GB
OperationalStatus : Degraded   MaxContiguousCapacity : 11.18GB
FreeCapacity      : 179.68 GB  ConfigurableCapacity : 179.68GB
SupportedRAIDLevels: 0 5 10 1E
  
```

```

Disk Array Alias   : DA1
MediaPatrol       : Enabled
PDM               : Enabled
  
```

```

Transport
Rebuild
Predictive Data Migration
Transition
Dedicated Spare Drives in the Array
Physical Drives in the Array
Logical Drives in the Array
[Locate Disk Array]
  
```

```

Save Settings      [CTRL-A]
Restore Settings   [CTRL-R]
Return to Previous Menu
  
```

From this screen:

- Highlight *Physical Drives in the Array* and press Enter to identify the failed disk drive
- Highlight *Rebuild* and press Enter to rebuild the array after you replace the failed disk drive


For more information, see “Critical & Offline Disk Arrays” on page 269.

WebPAM PROe Reports a Problem

WebPAM PROe aids in troubleshooting your logical drives and enclosure by continuous monitoring and reporting to the User in the following ways:

- Displays yellow !s and red Xs in Tree View.


Figure 6. Yellow !s and red Xs in Tree View

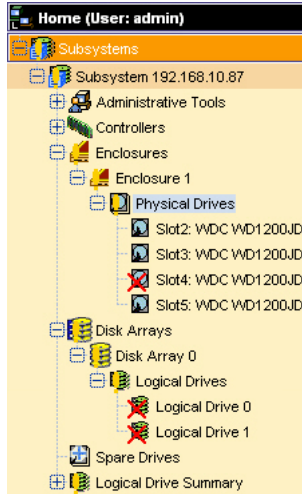

- Sends email messages, per your configuration.
- Displays popup messages, per your configuration.

To set up email and popup message notification, see “Setting-up User Event Subscriptions” on page 58.

Figure 7. An example of a popup message

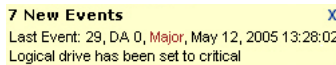

- Keeps a record in the Event Log.

Also see these troubleshooting topics:

- “Event Notification Response” on page 255
- “Critical & Offline Disk Arrays” on page 269
- “Frequently Asked Questions” on page 283

Event Notification Response

When you select Event Notification, WebPAM PROe sends popup and/or email messages regarding its status. The messages you see depend on your notification selection and what is currently happening in the VTrak. See “Setting-up User Event Subscriptions” on page 58.

The table below cites:

- Reported Events – Events that require you to take action
- Corrective Actions – The action you should take in response to the event

A list of event categories is shown below.

- Battery (page 255)
- Blowers (page 256)
- Cache (page 257)
- Controller (page 257)
- Disk Array (page 257)
- Drive Interface Controller (page 258)
- Enclosure (page 258)
- Event Log (page 258)
- Host Interface Controller (page 258)
- iSCSI (page 259)
- Logical Drive (page 259)
- Media Patrol (page 260)
- Online Capacity Expansion (page 261)
- PDM (page 261)
- Physical Disk (page 262)
- PSU (Power Supply Units) (page 263)
- PSU Fans (page 264)
- RAID Level Migration (page 264)
- Rebuild (page 265)
- Redundancy Check (page 265)
- Resource (page 266)
- Spare Check (page 266)
- Spare Drives (page 266)
- SMART (page 267)
- Stripe Level Migration (page 267)
- Synchronization (page 267)
- System (VTrak) (page 268)
- Transition (page 268)
- Watermark (page 268)

Reported Event	Corrective Action
Battery	
Battery temperature is above the threshold	The battery is too hot. Verify proper airflow around the through the VTrak. If airflow is OK, replace the battery. See page 211.
Battery temperature is normal	Normal.
Battery capacity is below the threshold	Battery is drained. Run battery reconditioning. See page 98.

Reported Event	Corrective Action
Battery capacity is normal	Normal.
Battery is discharging	Battery is undergoing reconditioning.
Battery is charging	Battery is being recharged.
Battery reconditioning is complete	Battery reconditioning is finished.
Battery is malfunctioning	Run battery reconditioning. See page 98. If this message reappears, replace the battery.
Battery reconditioned successfully	Battery reconditioning is finished.
Battery reconditioning has failed	Replace the battery. See page 211.
Battery is reaching end of life	Replace the battery. See page 211.
Battery is removed	The battery was disconnected or removed. Reinstall the battery. See page 211.
Battery charging failed	Replace the battery. See page 211.
Battery reconditioning started	Battery reconditioning has begun.
Battery recondition terminated	The battery was disconnected or removed during reconditioning. Reinstall the battery. See page 211.
Blowers	
Blowers have started	Normal.
Blowers have stopped	Verify that the cooling unit is properly installed. If the blower still does not turn, replace the blowers. See page 205.
Blower speed is increased	Check the VTrak for overheating. See page 275.
Blower speed is decreased	Temporary overheat condition was corrected.
Blowers are NOT functioning	Replace the blowers. See page 205.
Blowers have been inserted	Normal.
Blowers have been removed	Reinstall the cooling unit(s). If the blowers does not turn, replace the blowers. See page 205.

Reported Event	Corrective Action
Blowers are functioning normally	Normal.
Blowers are NOT installed	Reinstall the cooling unit(s). If the blowers does not turn, replace the blowers. See page 205.
Blower status is unknown	Check for airflow out of the cooling unit. If there is none, check for proper installation.
Cache	
BBU flushing has started	VTrak's cache is being flushed.
BBU flushing has ended	VTrak's cache has been flushed.
BBU flushing has failed	VTrak's cache could not be flushed. Check your cache flush interval setting. See page 93.
Controller	
The controller parameter(s) changed by user	The user successfully change controller settings. See page 93.
The controller has new crash information	Check the event logs. See page 48.
Controller temperature is above the threshold/warning threshold	The VTrak controller is overheating. Check for airflow around and through the controller, and verify that all fans are working. Replace fans as needed.
Controller temperature is above the critical threshold	The VTrak controller is seriously overheating. Check for airflow around and through the controller, and verify that all fans are working. Replace fans as needed.
Disk Array	
New disk array has been created	Result of settings or user action. Normal.
Disk array has been deleted	Result of settings or user action. Normal.
Disk array has been added	Result of settings or user action. Normal.
Disk array has been removed	The physical drives of the disk array were removed from the enclosure.
Disk array settings have been changed	The user successfully disk array settings. See page 111.

Reported Event	Corrective Action
Drive Interface Controller	
Drive-interface controller found	Normal.
Drive-interface controller is NOT found	Restart the VTrak. See page 90. If this message appears repeatedly, contact Technical Support. See page 285.
Drive-interface diagnostics has passed	Normal.
Drive-interface diagnostics has failed	Restart the VTrak. See page 90. If this message appears repeatedly, contact Technical Support. See page 285.
Drive-interface controller has generated a general/ data parity error.	Drive-to-controller parity error. If this message appears repeatedly, contact Technical Support. See page 285.
Enclosure	
Enclosure temperature is above the threshold/ warning threshold	The VTrak is overheating. Check for airflow around and through the VTrak, and verify that all fans are working. Replace fans as needed. See page 205.
Enclosure temperature is above the critical threshold	The VTrak is seriously overheating. Check for airflow around and through the VTrak, and verify that all fans are working. Replace fans as needed. See page 205.
Enclosure temperature is within the normal range	Normal.
Event Log	
Event logging is enabled	Event logging has been successfully enabled.
Event logging is disabled	Event logging has been disabled.
Event log buffer is cleared in RAM	The event log was cleared.
Event log buffer is cleared in NVRAM	The non-volatile RAM event log was cleared.
Event log buffer is cleared in MDD	The MDD (disk drive) event log was cleared.
Host Interface Controller	
Host-interface controller has detected bus reset	The initiator sent a reset command. If this message appears repeatedly, contact Technical Support. See page 285.

Reported Event	Corrective Action
Host-interface controller has encountered an unrecoverable error	Restart the VTrak. See page 90.
Host-interface controller has received an abort-task/ abort task set/clear task set command.	Result of user action. Normal.
Host-interface controller has received an clear ACA command.	Result of clearing an auto contingent alliance condition. If this message appears repeatedly, contact Technical Support. See page 285.
Host-interface controller has received a LUN reset command.	Result of user action. Normal.
Host-interface controller has received a bus reboot	The VTrak rebooted itself. If this message appears repeatedly, contact Technical Support. See page 285.
Host-interface controller has encountered an unknown error	An unidentified error occurred. If this message appears repeatedly, contact Technical Support. See page 285.
Host-interface controller has encountered a system error	A VTrak system error occurred. If this message appears repeatedly, contact Technical Support. See page 285.
Host-interface controller has encountered a fatal error	Restart the VTrak. See page 90. If this message appears repeatedly, contact Technical Support. See page 285.
Host-interface controller settings have changed	Result of user action. Normal.
iSCSI	
iSCSI link is up	iSCSI link connected and ready. Normal.
iSCSI link is down	iSCSI link disconnected or otherwise not working.
Logical Drive	
Logical drive initialization has started	Result of user action. Normal.
Logical drive initialization has completed	Logical drive is ready to use. Normal.
Logical drive initialization has paused	Initialization paused because of user intervention, schedule or a higher priority background activity.

Reported Event	Corrective Action
Logical drive initialization has resumed	Initialization has resumed again after a pause.
Logical drive initialization has stopped	Initialization stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Logical drive initialization marks the logical drive offline	Initialization failure due to a failed disk drive. Replace the disk drive, delete and recreate the logical drive. See page 15, then page 105.
Logical drive initialization is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90.
Logical drive initialization is queued	Initialization has been set manually or by schedule.
A new logical drive has been created	Result of user action. Normal.
Logical drive has been deleted	Result of user action. Normal.
Logical drive has been placed online	The physical drives of the array are restored to online status.
Logical drive has been placed online. Possible data loss	One or more physical drives in the array went offline. See page 269.
Logical drive has been set to critical.	One or more physical drives in the array went offline. See page 269.
Logical drive axle has been placed online	RAID 50. One of the axles (RAID 5 arrays) returned on online status.
Media Patrol	
Media patrol is started	Result of settings or user action. Normal.
Media patrol is completed	Normal.
Media patrol is paused	Media patrol paused because of user intervention, schedule or a higher priority background activity.
Media patrol is resumed	Media patrol has resumed again after a pause.
Media patrol is stopped	Media patrol stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.

Reported Event	Corrective Action
Media patrol is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90.
Media patrol is queued	Media patrol has been set manually or by schedule.
Media patrol is stopped internally	Media patrol stopped because the disk array was deleted or removed.
Online Capacity Expansion	
Online capacity expansion has started	Result of settings or user action. Normal.
Online capacity expansion has completed	Normal.
Online capacity expansion has paused	Expansion paused because of user intervention, schedule or higher priority background activity.
Online capacity expansion has resumed	Expansion has resumed again after a pause or a reboot.
Online capacity expansion has stopped	Expansion stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Online capacity expansion has encountered a physical disk error	Bad block found on a disk drive. Migration will finish. Check the disk drive check table after migration and replace disk drive as needed. See page 123.
Online capacity expansion is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90.
Online capacity expansion is queued	Synchronization has been set manually or by schedule.
PDM	
PDM is started	Result of settings or user action. Normal.
PDM is completed	Normal.
PDM is paused	PDM paused because of user intervention, schedule or a higher priority background activity.
PDM is resumed	PDM has resumed again after a pause.
PDM is stopped	PDM stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.

Reported Event	Corrective Action
PDM is switched to rebuild.	PDM changed to rebuild because the logical drive went critical
PDM is stopped internally	The destination drive was removed or used for a rebuild.
Physical Disk	
Physical disk is marked online	Disk drive restored to normal operation.
Physical disk is marked online	Disk drive removed from service due to errors. If necessary, try to force the disk online. See page 103.
Physical disk is marked as dead.	Disk drive failure. Replace the disk drive. See page 16.
Physical disk has been reset	Disk drive reset after error and should function normally.
Physical disk assigned as global spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as global spare	Result of settings or user action. Normal.
Physical disk assigned as dedicated spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as dedicated spare	Result of settings or user action. Normal.
Physical disk has been inserted	A disk drive has been inserted into the VTrak subsystem.
Physical disk has been removed	A disk drive has been removed from the VTrak subsystem.
Bad sector is found on physical disk	Disk drive has a bad sector. The drive should remap around the bad sector. If this message appears repeatedly, replace the disk drive.
Error is detected in remap sectors	Disk drive has a bad remap sectors. If this message appears repeatedly, replace the disk drive.
Command times out on physical drive	Disk drive not responding to commands. If this message appears repeatedly, replace the disk drive.
Physical disk negotiation speed is decreased.	Disk drive had to reduce its data rate. If this message appears repeatedly, replace the disk drive.

Reported Event	Corrective Action
Previously configured disk is no longer found	Disk drive may have failed or was removed from the enclosure. Replace or reinstall the disk drive as needed.
A physical disk has encountered an unknown (non-ECC) media error.	Disk drive experienced an unknown error. If this message appears repeatedly, replace the disk drive.
A physical disk has encountered PFA condition	A potentially faulty address or bad sector was found.
A configured dead physical drive has been inserted	The disk drive inserted into the VTrak was marked as dead and will not work on the VTrak. Replace the disk drive.
A physical drive page 0/1 settings have been changed	Result of settings or user action. Normal.
Physical disk is marked as dead due to removal/failure of reassign sectors/PFA condition/forced offline state	Replace the disk drive.
PSU (Power Supply Units)	
PSU is not inserted/has been removed	A power supply unit is missing from the VTrak. Reinstall the power supply unit.
PSU is off	A power supply unit is present but turned off. Turn on the power supply.
PSU is on	Normal.
PSU is installed/operational and turned on	Normal.
PSU is installed/operational and turned off	A power supply unit is present but turned off. Turn on the power supply.
PSU is malfunctioning and turned on/off	Replace the power supply unit.
PSU 12V/5V/3.3V power is out of the threshold range	Replace the power supply unit.
PSU 12V/5V/3.3V power is within the range	Normal.

Reported Event	Corrective Action
PSU Fans	
PSU fan has turned on.	Normal.
PSU fan has turned off.	Verify that the power supply is turned on. If the fan still does not turn, replace the power supply. See page 204.
PSU fan speed increased.	Check the VTrak for overheating. See page 275.
PSU fan speed decreased.	Temporary overheat condition was corrected.
PSU fan is malfunctioning	Replace the power supply. See page 204.
PSU fan is functioning normally	Normal.
PSU fan status is unknown.	Check for airflow out of the power supply. If there is none, check for proper installation and turn the power supply on.
RAID Level Migration	
RAID Level migration is started	Result of settings or user action. Normal.
RAID Level migration is completed	Normal.
RAID Level migration is paused	Migration paused because of user intervention, schedule or a higher priority background activity.
RAID Level migration is resumed	Migration has resumed again after a pause.
RAID Level migration is stopped	Migration stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
RAID Level migration has encountered a physical disk error	Bad block found on a disk drive. Migration will finish. Check the disk drive check table after migration and replace disk drive as needed. See page 123.
RAID Level migration is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90.
RAID Level migration is queued	Migration has been set manually or by schedule.

Reported Event	Corrective Action
Migration has detected/ cleared stale NV Watermark	Watermarks are progress markers left as the result of interrupted RAID migrations. If the watermark was cleared, migration should finish.
Array was incomplete due to missing NV Watermark	RAID migration was interrupted by a shutdown. If array is online, try migration again. See page 113. If array is offline, delete and recreate array. See page 109 and page 105.
Rebuild	
Rebuild is started	Result of settings or user action. Normal.
Rebuild is completed	Normal.
Rebuild is paused	Rebuild paused because of user intervention, schedule or a higher priority background activity.
Rebuild is resumed	Rebuild has resumed again after a pause.
Rebuild is stopped	Rebuild stopped because of user intervention, schedule or the logical drive was deleted or the target disk drive encountered an error. If rebuild stopped by user intervention, restart the rebuild. See page 114.
Rebuild stopped internally	The logical drive is offline. See page 269.
Rebuild is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90.
Rebuild is queued	Rebuild has been set manually or by schedule.
Rebuild marks logical drive synchronized upon rebuild completion	Result of successful rebuild. Normal.
Redundancy Check	
Redundancy Check is started	Redundancy Check has started manually or by schedule.
Redundancy Check is completed	Redundancy Check has finished.
Redundancy Check is paused	Redundancy Check paused because of user intervention, schedule or a higher priority background activity.
Redundancy Check is resumed	Redundancy Check has resumed again after a pause.

Reported Event	Corrective Action
Redundancy Check is stopped	Redundancy Check stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Redundancy Check is aborted due to internal error	System resources are low. Reduce system load or restart the VTrak. See page 90.
Redundancy Check encountered inconsistent block(s)	Check the logical drive's inconsistent block table. See page 123. Rebuild the disk array if necessary. See page 114.
Redundancy Check task is queued	Redundancy Check has been set manually or by schedule.
Redundancy Check task is stopped internally	The logical drive is offline. See page 269.
Resource	
Resource is NOT available	System resources are low. Reduce system load or restart the VTrak. See page 90.
Spare Check	
Spare check started on the given spare drive	Result of settings or user action. Normal.
Spare check completed successfully on the given spare drive	Normal.
Spare Drives	
Physical disk assigned as global spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as global spare	Result of settings or user action. Normal.
Global Spare has been deleted	Result of settings or user action. Normal.
Physical disk assigned as dedicated spare	Result of settings or user action. Normal.
Physical disk is no longer assigned as dedicated spare	Result of settings or user action. Normal.
Dedicated Spare has been deleted	Result of settings or user action. Normal.

Reported Event	Corrective Action
SMART	
SMART error is received	A disk drive reported a SMART error. If this message appears repeatedly, replace the disk drive.
Stripe Level Migration	
Stripe Level migration is started	Result of settings or user action. Normal.
Stripe Level migration is completed	Normal.
Stripe Level migration is paused	Migration paused because of user intervention, schedule or a higher priority background activity.
Stripe Level migration is resumed	Migration has resumed again after a pause.
Stripe Level migration is stopped	Migration stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.
Stripe Level migration has encountered a physical disk error	Bad block found on a disk drive. Migration will finish. Check the disk drive check table after migration and replace disk drive as needed. See page 123.
Stripe Level migration is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90 or page 196.
Stripe Level migration is queued	Migration has been set manually or by schedule.
Synchronization	
Synchronization is started	Result of settings or user action. Normal.
Synchronization is completed	Normal.
Synchronization is paused	Synchronization paused because of user intervention, schedule or higher priority background activity.
Synchronization is resumed	Synchronization has resumed again after a pause or a reboot.
Synchronization is stopped	Synchronization stopped because of user intervention, schedule or the logical drive was deleted or went critical or offline.

Reported Event	Corrective Action
Synchronization is aborted due to an internal error.	System resources are low. Reduce system load or restart the VTrak. See page 90.
Synchronization is queued	Synchronization is already running on another logical drive in the same array.
Synchronization is stopped internally	Synchronization stopped because the disk array was deleted or removed.
System (VTrak)	
The system is started	The VTrak has been started.
The system is stopped	The VTrak was shut down.
Transition	
Transition is started	Result of settings or user action. Normal.
Transition is completed	Normal.
Transition is paused	Transition paused because of user intervention, schedule or a higher priority background activity.
Transition is resumed	Transition has resumed again after a pause.
Transition is stopped	Transition stopped because of user intervention or the logical drive was deleted.
Transition was switched to rebuild	Transition changed to rebuild because the logical drive went critical.

Critical & Offline Disk Arrays

A fault-tolerant disk array—RAID 1, 1E, 5, 10, and 50—goes *critical* when a disk drive is removed or fails. A RAID 6 disk array—goes *degraded* when a disk drive is removed or fails and *critical* when two disk drives are removed or fail.

Due to the fault tolerance of the disk array, the data is still available and online. However, once the disk array goes critical, the disk array has lost its fault tolerance, and performance may be adversely affected.

If the fault was caused by a failed drive that was removed, the drive must be replaced by another drive, either identical or larger, in order for the RAID system to rebuild and restore optimal configuration.

If your fault-tolerant disk array—RAID 1, 1E, 5, 6, 10, and 50— goes *offline*, contact Promise Technical Support. See “Contacting Technical Support” on page 285.



Warning

Take no further corrective action until you have consulted with Promise Technical Support.

A non-fault tolerant disk array—RAID 0—goes *offline* when a disk drive is removed or fails. Since the disk array is not fault tolerant, the data stored in the disk array is no longer accessible.

If one disk drive fails, all of the data on the disk array is lost. You must replace the failed drive. Then, if the disk array had more than one disk drive, delete the disk array and re-create it. Restore the data from a backup source.

When a Physical Drive Fails

VTrak provides both audible and visual indicators to alert you of a disk drive failure. The following will occur when a disk drive fails or goes offline:

- The Logical Drive LED changes from green to amber. See page 245.
- The Disk Carrier Status LED changes from green to red. See page 246.
- The audible alarm repeatedly sounds two short beeps. See page 244.
- WebPAM PROe reports the condition. See page 252.

Also see “Physical Drive Problems” on page 273.

With a Hot Spare Drive

When a physical drive in a disk array fails and a spare drive of adequate capacity is available, the disk array will begin to rebuild automatically using the spare drive.

After the disk array rebuilds itself using the spare drive, you must replace the failed drive.

To set up a spare drive, see “Creating a Spare Drive” on page 126 (WebPAM PROe) or page 176 (CLU).

Without a Hot Spare Drive

If there is no hot spare drive of adequate capacity, you must remove the failed drive and install an unconfigured replacement drive of the same or greater capacity in the same slot as the failed drive. Until you install the replacement drive, the logical drive will remain Degraded.

- If the Auto Rebuild function is ENABLED, the disk array will begin to rebuild automatically as soon as you replace the failed drive.
- If the Auto Rebuild function is DISABLED, you must manually rebuild the disk array after you replace the failed drive.

To enable Automatic Rebuild, see “Making Background Activity Settings” on page 51 (WebPAM PROe) or page 172 (CLU).

To set Hot Spare Policy, see “Making Spare Drive Settings” on page 127 (WebPAM PROe) or page 177 (CLU).



Important


If your replacement disk drive was formerly part of a different disk array or logical drive, you must clear the configuration data on the replacement drive before you use it.

See “Clearing Stale and PFA Conditions” on page 102 (WebPAM PROe) or page 145 (CLU).

Rebuild Operation

During rebuild:

- The alarm sounds a single short beep, repeated
- No warning icon displays over the Disk Array or Logical Drive in the Tree. Management View reports the Disk Array’s Operational Status as OK, Rebuilding.
- The drive carrier holding the rebuilding physical drive displays a green Activity (lower) LED while the Status (upper) LED flashes green once per second.

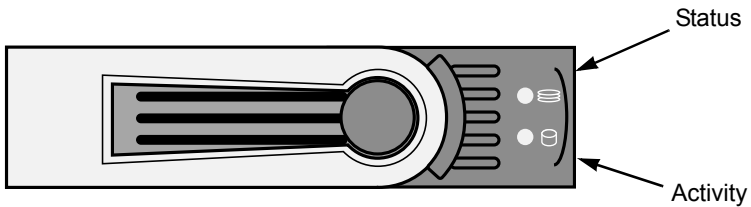Figure 10. Drive carrier LEDs

During rebuilding, you can still read and write data to the logical drive. However, fault tolerance is lost until the Disk Array returns to OK (not-rebuilding) status.

After a successful rebuild:

- The alarm is silent
- The Disk Array's Operational Status as OK
- The rebuilt disk drive Status LED displays steady green

Incomplete Array

An incomplete array results from a physical drive that fails or becomes missing during:

- RAID level migration under NVRAM
- Physical drive transport

See “Physical Drive Failed” on page 273 for more information.

When VTrak discovers an incomplete array, WebPAM PROe displays a dialog box asking you to:

- Click the **OK** button to accept the incomplete array
- Click the **Cancel** button to reject the incomplete array

Before you accept the incomplete array, be sure all of the physical drives are present and that their drive carriers are properly installed into the enclosure. See “Installing Disk Drives” on page 16.

If you choose to accept the incomplete array:

1. Click **OK** in the incomplete array dialog box.
2. Check the operational status of the logical drives in the array.
 - If the logical drives are *critical* or *degraded*, proceed with a rebuild. See “Rebuilding a Disk Array” on page 114 or page 154.
 - If the logical drives are *offline*, contact Technical Support. See “Contacting Technical Support” on page 285
3. Restore your data from a backup source, if required.

The CLU displays the option *Accept Incomplete Array* on the Disk Array Info and Settings screen. Highlight the option and press Enter to accept the incomplete array.

If you choose NOT to accept the incomplete array:

1. Click **Cancel** in the incomplete array dialog box.
2. Do one of the following:
 - Delete the array. See “Deleting a Disk Array” on page 109 or page 151.
 - Replace the missing physical drive.

Physical Drive Problems

Physical Drive Offline

Check the drive for:

- PFA Condition – Caused by a bad block or sector.
See “Clearing Stale and PFA Conditions” on page 102.
- Stale Configuration – Caused by obsolete array information on the physical drive. Identify the disk array to which the physical drive belongs. Then delete the disk array. See “Deleting a Disk Array” on page 109 or page 151.
If the error condition remains on the physical drive, clear the error condition. See “Clearing Stale and PFA Conditions” on page 102 or page 145.

Physical Drive Failed

When physical drive status shows *failed*, the physical drive cannot be repaired. You must replace the failed drive.

Physical Drive Fails during Migration

VTrak has two methods for migrating a disk array:

- DDF – The default setting. Slower but reliable
- NVRAM – An optional setting that requires special access. Faster but risks data loss

Normally, RAID level migration is done under the default Disk Data Format (DDF) setting. If a physical drive or the controller fails during migration, the disk array goes critical, and you can rebuild it. Migration under DDF can take up to several hours depending on the number and size of the physical drives and data input/output activity.

You can set the VTrak to migrate disk arrays under Non-Volatile Random Access Memory (NVRAM), a much faster process because it writes data to the memory in the controller. However, if a physical drive or the controller fails during migration, the logical drives will go offline and you will lose data. See “Incomplete Array” on page 272.

Because the setting for migration under NVRAM requires special access, most users will not encounter this condition.

Physical Drive Fails during Transport

Transport is the action of moving the physical drives of a disk array:

- To different slots in the same VTrak enclosure
- From one VTrak enclosure to another


If a physical drive fails during a transport, or you do not move all of the physical drives to their new locations, WebPAM PROe will display an incomplete array. See “Incomplete Array” on page 272.

Enclosure Problems

WebPAM PROe displays yellow !s ⚠️ red Xs ❌ in Tree View to identify components that need attention.

When a yellow ! appears over a Subsystem 🗄️ in Tree View, click the Enclosure 🗄️ icon. The Enclosure screen will display (below).

Figure 11. Enclosure information in Management View

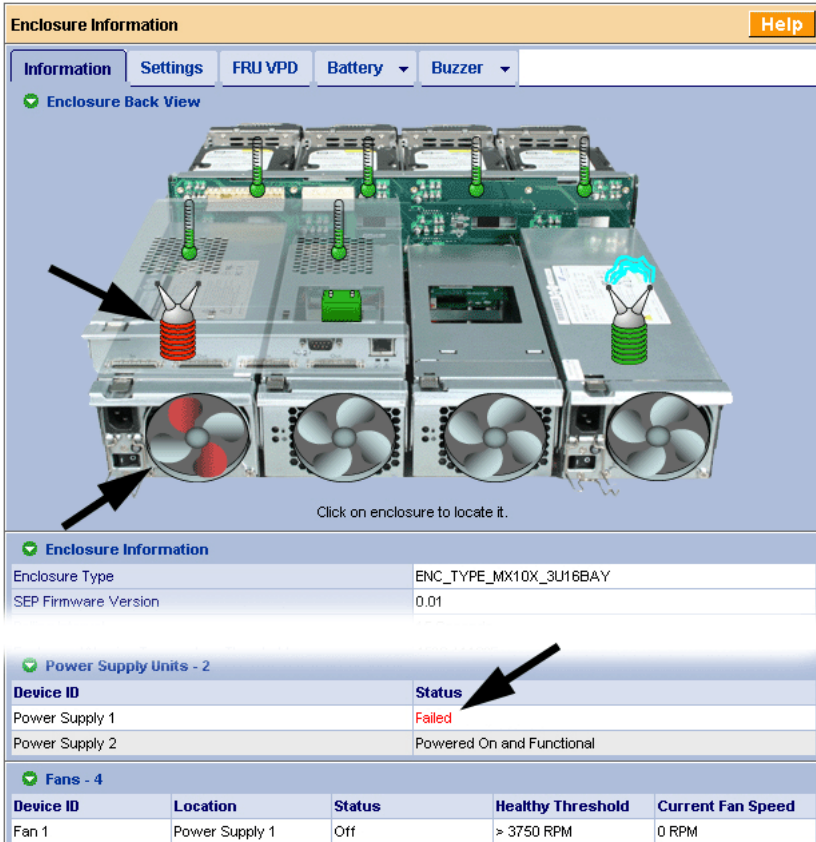

The screenshot displays the 'Enclosure Information' screen. At the top, there are tabs for 'Information', 'Settings', 'FRU VPD', 'Battery', and 'Buzzer'. Below the tabs is a 3D diagram of the enclosure. A red X icon is positioned over the first power supply unit, and a yellow ! icon is over the second. Below the diagram, there is a table with the following sections:

Enclosure Information

Enclosure Type	ENC_TYPE_MX10X_3U16BAY
SEP Firmware Version	0.01

Power Supply Units - 2

Device ID	Status
Power Supply 1	Failed
Power Supply 2	Powered On and Functional

Fans - 4

Device ID	Location	Status	Healthy Threshold	Current Fan Speed
Fan 1	Power Supply 1	Off	> 3750 RPM	0 RPM

In this example, a power supply has failed. The Enclosure Diagram displays color and motion changes to identify the failed power supply. In this case, you must replace the power supply.

Note that the image above was shortened to fit on the page.

Overheating

Temperature
Sensors



Overheating



Too Warm



Normal

Overheating is a potentially serious condition because the excessively high temperatures can lead to disk drive failure and controller malfunction.

Overheating usually results from:

- Fan failure
- Poor air circulation around the enclosure

WebPAM PROe reports failed fans along with elevated temperature. On VTrak, there are two kinds of fans:

- Power supply, 2 fans each
- Cooling units, 1 fan each


If a power supply fan fails, you must replace the power supply. If a cooling unit fan fails, you can remove the cooling unit and replace only the fan itself.

Cooling Unit
and
Power Supply
Fan Condition

No tools are required for either procedure. See page 205 for instructions on replacing the fans.



OK



Replace Now

Air circulation around the VTrak enclosure may be a more complex problem. Use the thermometer icons to help you locate the specific hot spot. Check for these conditions:

- Accumulated dust or objects blocking the fans
- Less than a minimum of 5 inches (13 cm) space between the back of the VTrak and the wall or other object
- Ambient temperature above 95°F (35°C) where the VTrak is operating

To cool down a VTrak:

- Correct any problems identified above
- Power it down and let it sit for an hour or longer

Power Supplies



OK

VTraks are equipped with redundant power supplies. The advantage of dual power supplies is that, should one fail, the other will continue powering the subsystem until the faulty one can be replaced. VTrak is capable of operating on a single power supply. As a result, if one power supply fails you must watch the front panel LEDs or WebPAM PROe in order to become aware of the condition.



Replace Soon

The power supplies are hot-swappable, meaning you can leave the VTrak running when you replace the bad one. Be careful, however, to remove the faulty power supply and not the good one, or VTrak will come to an immediate stop and your data will be unavailable until the system is powered and booted again.



Replace Now

As noted above, if a power supply fan fails, you must replace the power supply. Without the fan to cool it, the power supply will overheat and eventually fail anyway.

No tools are required for the procedure. See your page 204 for instructions on replacing a power supply.

Battery

Battery
Condition

OK

VTrak uses a battery as backup power for the cache. Should a power failure occur, the battery enables the cache to hold data up to 72 hours. The battery recharges during normal VTrak operation.



Replace Soon

In most cases, installing a replacement battery will correct a marginal or failed condition. The battery is located in the cooling unit above the controller. Remove the cooling unit for access. The battery is hot-swappable.



Replace now

No tools are required for the procedure. See page 211 for instructions on replacing the battery.

Also see “Reconditioning a Battery” on page 98 or page 142.

Connection Problems

When you install your Promise product following the instructions in the *Quick Start Guide* and this *Product Manual*, you should have little trouble getting your equipment to work the first time. But connection problems can arise that are not the User's or Installer's fault. Every conceivable problem cannot be covered in the documentation but some guidelines could be helpful.

Connection problems cause a majority of failures in almost any electrical system. While the installation of the cables and components was correct, they don't function properly, or at all, because:

- A connector is dirty or corroded
- A connector is loose or damaged
- A cable looks OK outside but has an open circuit inside
- The wrong cable was used

VTraks ship with a full set of new cables, as required for each specific model. Be sure to use these components because: 1.) They are the proper ones for your RAID subsystem, 2.) They are in brand-new condition, and 3.) You paid for them with the purchase of your VTrak.

Serial Connections

VTrak uses a serial connection for the command line interface (CLI) and the command line utility (CLU). After you set the IP address, you can access the CLI and CLU through a network connection, also. Normally, users prefer WebPAM PROe because of its graphic user interface. But the CLI and CLU can do the same jobs. And they will work when your network connection is down.

For VTrak, you must use the CLI or CLU to set the Management Port IP address in order for WebPAM PROe to connect with it. See "Setting up the Serial Connection" on page 23. This issue is discussed further under Network Connections (below). See the "Making Serial Cable Connections" on page 20 for more information on making the connection.

The CLI and CLU control and manage but they do not move data. They communicate through a null-modem cable, supplied with the VTrak. A straight-through serial cable will not work for this purpose. You may choose not use the CLI or CLU often and want to disconnect and store the cable. Consider leaving it connected, to be sure it will be there when you need it.


Network Connections

Each controller has an Ethernet (RJ45) Management Port connector on the back of the enclosure. This is a Gigabit Ethernet connector designed to connect to

your network. The VTrak becomes a node on your network like any other PC, server or other component with an IP address.

VTrak ships from the factory an IP address of 10.0.0.1. You must change this address to one that will work with your network. You make the initial IP address setting using the CLI or CLU. See “Setting up the Serial Connection” on page 23.

Figure 12. Management port connection on the RAID controller

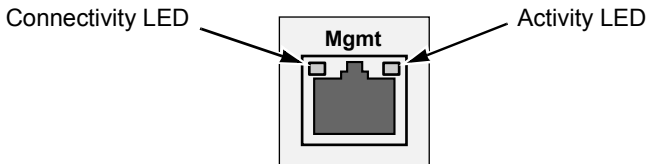

LEDs	State		
	Dark	Green	Flashing Green
Connectivity	10BaseT	100BaseT	
Activity	No activity		Activity

Note that VTrak Management Port can accept IP address assignments from a DHCP server. Use VTrak’s Command Line Utility (CLU) to enable this feature. If you have not activated DHCP support but there is a DHCP server on your network, there is a chance that it will inadvertently assign the VTrak’s Management Port IP address to another node. You might see a warning to this effect on your PC’s monitor. If this happens, WebPAM PROe may not be able to connect. See your network administrator to work out a suitable arrangement.

iSCSI Connections

A recent variation of the SCSI interface is Internet or IP SCSI (iSCSI), which converts SCSI commands to TCP/IP commands for communication over a network. VTrak uses two Gigabit Ethernet network connections to move data under the iSCSI protocol. The iSCSI ports will accept IP address assignments from a DHCP server. Also, you can use WebPAM PROe for the initial setup.

Browser Does Not Connect to WebPAM PROe

If you successfully setup and connected to WebPAM PROe, then suddenly you can no longer connect, it might be the result of the following three conditions:

- DHCP is enabled on your VTrak’s management port
- The DHCP server does not have a dedicated IP address for the VTrak
- The VTrak restarted and your DHCP server assigned a new IP address

You must obtain the new IP address for the management port in order to direct your browser to the VTrak and start WebPAM PROe.

To access the new IP address:

1. Start your PC’s terminal VT100 or ANSI emulation program.
2. Press Enter once to launch the CLI.
3. At the Login prompt, type **administrator** and press Enter.
4. At the Password prompt, type **password** and press Enter.
5. Type **net** and press Enter.

```
administrator@cli> net
```

```
=====
```

CI	Port	Type	IP	Mask	Gateway	Link
1	1	Mgmt	192.168.10.44	255.255.255.0	192.168.10.3	Up
1	1	iSCSI	192.168.10.90	255.255.255.0	192.168.10.3	Up
1	2	iSCSI	192.168.10.79	255.255.255.0	192.168.10.3	Up

```
=====
```



The new management port IP address and other network settings display.

6. Enter the new IP address into your browser to log into WebPAM PROe.

For more information, see “Setting up the Serial Connection” on page 23 and “Logging out of WebPAM PROe” on page 35.

Unsaved Data in the Controller Cache


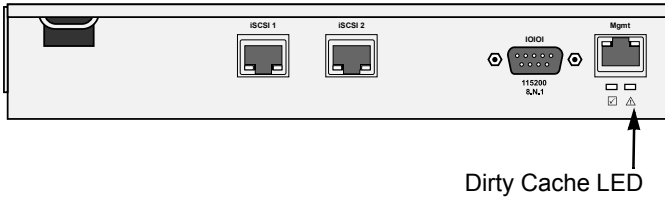
An LED (marked with the  icon) is provided to inform you that there is data in the cache that has not been saved to non-volatile memory. Such data is sometimes called “dirty,” not to suggest it is corrupted in some way but because it has not been saved to a disk drive.

Figure 13. The VTrak dirty cache LED



If there is unsaved data in the controller’s cache, the Dirty Cache LED shines amber. During this time, do NOT power down the VTrak. Wait until the LED will go dark.

Chapter 9: Support

This chapter covers the following topics:

- Frequently Asked Questions (below)
 - Contacting Technical Support (page 285)
 - Limited Warranty (page 288)
 - Returning product for repair (page 289)
-

Frequently Asked Questions

What kind of disk drives can I use with VTrak?

VTrak supports 1.5 and 3.0 Gb/s Serial ATA disk drives.

Can I take the disk drives from my UltraTrak, put them into the VTrak and keep my disk array or logical drive intact?

Yes. UltraTrak and early VTrak subsystems used a proprietary method of disk metadata, stored in the reserve sector of each physical drive. VTrak M610i, M310i, and M210i use the industry-standard DDF and has a metadata-to-DDF conversion feature. To use the conversion feature, you must restart the VTrak after installing disk drives from an older system.

VTrak M610i, M310i, and M210i do not support Parallel ATA (PATA) disk drives.

Note that if you move the disk drives from the VTrak M610i, M310i, or M210i to the older subsystems, they will not recognize your disk array or logical drive.

How can I tell when the VTrak has fully booted?

When the VTrak is fully booted up, the Power and FRU LEDs will light up green. If a disk array is present, the Logical Drive LED will light up green also. The Controller heartbeat LED blinks once every two seconds.

Why does VTrak come with a Command Line Utility?

First, to assign your VTrak an IP address in order for the WebPAM management software to connect to it. Second, in the event of a network failure, you can still access the VTrak. Third, some users prefer the Command Line Utility.

WebPAM connection was working OK. But later on, it timed out. What do I do now?

The network condition can time-out for several reasons. When an open connection has no action for a specific amount of time (the Administrator can change it), the connection times-out automatically for security reasons. When you attempt to use WebPAM, it returns to the login screen. Enter your user name and password and click Login, and WebPAM will establish a new connection. See "Making Web Server Settings" on page 77.

I can access the VTrak over my company's intranet. But I can't access it from an outside Internet connection. How do I make the Internet connection work?

This condition is not related to VTrak, but is due to your firewall and network connection protocol. Contact your MIS Administrator.

With other Promise VTraks, I used the Server's IP address in WebPAM to connect with the RAID subsystem. Why are VTrak M610i, M310i, and M210i different?

VTrak M610i, M310i, and M210i have the server software embedded. With the earlier models, you point your browser directly to the VTrak rather than a server. Also, with M610i, M310i, and M210i, you do not have to create a subsystem because the subsystem already exists.

Why can a RAID 1 logical drive on VTrak consist of only two disk drives?

On VTrak, RAID 1 logical drives work in mirrored physical drive pairs. You could create up to eight RAID 1 logical drives, depending on which subsystem model you have. Or you can create a single RAID 10 logical drive with data mirroring and up to 16 physical drives. If you have an odd number of drives but still want data mirroring, use RAID 1E.

See "Installing Disk Drives" on page 16 and "Introduction to RAID" on page 219 for more information on the number of physical drives you can use for each RAID level.

Are logical drives on VTrak limited to 2 TB?

No. But verify that your operating system *supports* logical drives over 2 TB. Also, for the operating system to *recognize* the full capacity of logical drives over 2 TB.

I have two UltraTraks and use WebPAM to monitor them. Can I use my existing WebPAM setup to monitor the VTraks also?

No. Use the WebPAM embedded with the VTrak M610i, M310i, or M210i.

How can I be sure everything is working OK on the VTrak?

Locally: The VTrak enclosure has LEDs on the front to monitor the status of power, field replaceable units (FRUs) and logical drives. When these are green, VTrak is functioning normally.

Remotely: Check the Tree Icons in WebPAM. If there are no yellow or red warning icons displayed, VTrak is functioning normally.

What happens if a logical drive goes critical?

On the front of VTrak, the logical drive LED turns amber and an audible alarm sounds. See “Critical & Offline Disk Arrays” on page 269.

Can VTrak run using just one power supply?

Yes, it is possible to run VTrak on a single power supply. There are two power supplies so that VTrak will continue running if one of the power supply fails. But deliberately leaving one power supply off negates this advantage.

In addition, leaving one power supply off reduces air flow through the VTrak enclosure and can contribute to overheating. Always switch on both power supplies.

Contacting Technical Support

Promise Technical Support provides several support options for Promise users to access information and updates. We encourage you to use one of our electronic services, which provide product information updates for the most efficient service and support.

If you decide to contact us, please have the following information available:

- Product model and serial number
- BIOS, firmware, and driver version numbers
- A description of the problem / situation
- System configuration information, including: motherboard and CPU type, hard drive model(s), SATA/ATA/ATAPI drives & devices, and other controllers.

Technical Support Services

Promise Online™ Web Site

http://www.promise.com/support (technical documents, drivers, utilities, etc.)
--

United States

E-mail Support	e-Support On-Line
Fax Support	(408) 228-1097 Attn: Technical Support
Phone Support	(408) 228-1400 option 4
If you wish to write us for support:	Promise Technology, Inc. 580 Cottonwood Drive Milpitas, CA 95035, USA

The Netherlands

E-mail Support	e-Support On-Line
Fax Support	+31 (0) 40 256 9463 Attn: Technical Support
Phone Support	+31 (0) 40 235 2600
If you wish to write us for support:	Promise Technology Europe B.V. Science Park Eindhoven 5542 5692 EL Son, The Netherlands

Germany

E-mail Support	e-Support On-Line
Fax Technical Support	+49 (0) 2 31 56 76 48 - 29 Attn: Technical Support
Phone Technical Support	+49 (0) 2 31 56 76 48 - 10
If you wish to write us for support:	Promise Technology Germany Europaplatz 9 44269 Dortmund, Germany

Italy

E-mail Support	e-Support On-Line
Fax Support	0039 06 367 12400 Attn: Technical Support
Phone Support	0039 06 367 12626
If you wish to write us for support:	Promise Technology Italy Piazza del Popolo 18 00187 Roma, Italia

Taiwan

E-mail Support	e-Support On-Line
Fax Support	+886 3 578 2390 Attn: Technical Support
Phone Support	+886 3 578 2395 (ext. 8811)
If you wish to write us for support:	Promise Technology, Inc. 2F, No. 30, Industry E. Rd. IX Science-based Industrial Park Hsin-Chu 30075, Taiwan (R.O.C.)

China

E-mail Support	support@promisechina.com
Fax Support	+86-10-8857-8015 Attn: Technical Support
Phone Support	+86-10-8857-8085/8095
If you wish to write us for support:	Promise Technology China Room 1205, Tower C Webok Time Center, No.17 South Zhong Guan Cun Street Hai Dian District, Beijing 100081, China

Limited Warranty

Promise Technology, Inc. (“Promise”) warrants that for three (3) years from the time of the delivery of the product to the original end user:

- a) the product will conform to Promise’s specifications;
- b) the product will be free from defects in material and workmanship under normal use and service.

This warranty:

- a) applies only to products which are new and in cartons on the date of purchase;
- b) is not transferable;
- c) is valid only when accompanied by a copy of the original purchase invoice.
- d) Is not valid on spare parts, fans, and power supplies

This warranty shall not apply to defects resulting from:

- a) improper or inadequate maintenance, or unauthorized modification(s), performed by the end user;
- b) operation outside the environmental specifications for the product;
- c) accident, misuse, negligence, misapplication, abuse, natural or personal disaster, or maintenance by anyone other than a Promise or a Promise-authorized service center.

Disclaimer of other warranties

This warranty covers only parts and labor, and excludes coverage on software items as expressly set above.

Except as expressly set forth above, Promise **DISCLAIMS** any warranties, expressed or implied, by statute or otherwise, regarding the product, including, without limitation, any warranties for fitness for any purpose, quality, merchantability, non-infringement, or otherwise. Promise makes no warranty or representation concerning the suitability of any product for use with any other item. You assume full responsibility for selecting products and for ensuring that the products selected are compatible and appropriate for use with other goods with which they will be used.

Promise **DOES NOT WARRANT** that any product is free from errors or that it will interface without problems with your computer system. It is your responsibility to back up or otherwise save important data before installing any product and continue to back up your important data regularly.

No other document, statement or representation may be relied on to vary the terms of this limited warranty.

Promise's sole responsibility with respect to any product is to do one of the following:

- a) replace the product with a conforming unit of the same or superior product;
- b) repair the product.

Promise shall not be liable for the cost of procuring substitute goods, services, lost profits, unrealized savings, equipment damage, costs of recovering, reprogramming, or reproducing of programs or data stored in or used with the products, or for any other general, special, consequential, indirect, incidental, or punitive damages, whether in contract, tort, or otherwise, notwithstanding the failure of the essential purpose of the foregoing remedy and regardless of whether Promise has been advised of the possibility of such damages. Promise is not an insurer. If you desire insurance against such damage, you must obtain insurance from another party.

Some states do not allow the exclusion or limitation of incidental or consequential damages for consumer products, so the above limitation may not apply to you.

This warranty gives specific legal rights, and you may also have other rights that vary from state to state. This limited warranty is governed by the State of California.

Your Responsibilities

You are responsible for determining whether the product is appropriate for your use and will interface with your equipment without malfunction or damage. You are also responsible for backing up your data before installing any product and for regularly backing up your data after installing the product. Promise is not liable for any damage to equipment or data loss resulting from the use of any product.

Returning Product For Repair

If you suspect a product is not working properly, or if you have any questions about your product, contact our Technical Support Staff through one of our Technical Services, making sure to provide the following information:

- Product model and serial number (required)
- Return shipping address
- Daytime phone number
- Description of the problem
- Copy of the original purchase invoice

The technician will assist you in determining whether the product requires repair. If the product needs repair, the Technical Support Department will issue an RMA (Return Merchandise Authorization) number.



Important

Obtain an RMA number from Technical Support *before* you return the product and write the RMA number on the label. The RMA number is essential for tracking your product and providing the proper service.

Return **ONLY** the specific product covered by the warranty (do not ship cables, manuals, diskettes, etc.), with a copy of your proof of purchase to:

USA and Canada: Promise Technology, Inc.
 Customer Service Dept.
 Attn.: RMA # _____
 47654 Kato Road
 Fremont, CA 94538

Other Countries: Return the product to your dealer
 or retailer.
 Contact them for instructions
 before shipping the product.

You must follow the packaging guidelines for returning products:

- Use the original shipping carton and packaging
- Include a summary of the product's problem(s)
- Write an attention line on the box with the RMA number
- Include a copy of proof of purchase

You are responsible for the cost of insurance and shipment of the product to Promise. Note that damage incurred due to improper transport or packaging is not covered under the Limited Warranty.

When repairing returned product(s), Promise may replace defective parts with new or reconditioned parts, or replace the entire unit with a new or reconditioned unit. In the event of a replacement, the replacement unit will be under warranty for the remainder of the original warranty term from purchase date, or 30 days, whichever is longer.

Promise will pay for standard return shipping charges only. You will be required to pay for any additional shipping options (such as express shipping).

Appendix A: Useful Information


The appendix covers the following topics:

- Serial Connector Pinout (page 291)
- SNMP MIB Files (page 292)

Serial Connector Pinout

Below is the pinout diagram for the DB-9 serial connector on all VTrak models.

The diagrams represent the connector as you see it looking at the back of the VTrak controller.

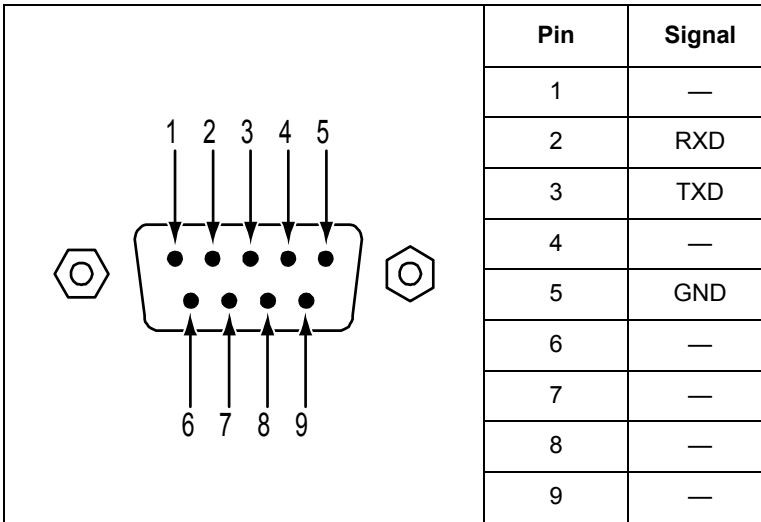

SNMP MIB Files

Promise supplies four MIB files to integrate the VTrak subsystem into your SNMP system. These files are in the SNMP folder on the VTrak Product CD. The MIB files include:

- FCMGMT-MIB.mib
- IF-MIB.mib
- ISCSI-MIB.mib
- raid4.mib

Loading MIB Files

Use a MIB browser to load these files. You can load the MIB files in any order. For help with this procedure, see the instructions that came with your MIB browser.

Index

Numerics

- 10 GB Truncate 93, 139, 233
- 2 TB Limitation 284

A

- about this manual 1
- adaptive writeback cache 94, 139
 - defined 232
- alarm
 - cancel 99, 197
 - sounding 244, 269
- alias
 - controller 93, 139
 - disk array 108, 111, 112, 150, 156
 - logical drive 34, 108, 121, 150
 - physical drive 102, 145
 - subsystem 47, 136
- architectural description 3
- array incomplete, reported events 268
- Auto Fix 54, 122, 160
- Auto Rebuild 51, 114, 172, 270
- axes
 - RAID 50 34, 108, 112, 150, 156, 226

B

- background activities
 - deleting schedule 54
 - list of scheduled 53
 - running 52
 - scheduling 53
 - settings 51, 172
 - view 50
- batteries 97, 142

battery

- failure 277
- recondition 98, 142
- replace 211
- reported events 255, 256

Battery Reconditioning 53

- BBU, reported events 257
- blower, reported events 256
- browser
 - does not connect 280
 - SNMP 79
 - web server settings 77
 - WebPAM PROe 29, 38

buzzer

- settings 99, 197
- silence 99, 197
- sounding 244, 269
- test 99, 197

C

- cache batteries 97, 142
- cancel alarm 99, 197
- capacity coercion 93, 139
 - defined 233
- capacity, specify for logical drive 34, 108, 112, 150, 156
- certificate, security 36
- change RAID level 113, 154, 235
- CHAPs
 - adding 71, 170
 - deleting 72, 171
 - editing 72, 171
 - viewing 71, 170
- check table, logical drive 123, 158
- CIM
 - service 82, 188
 - settings 81, 188
- clear statistics 88, 192

CLU

- log in 132
- log out 134
- main menu 133
- online help 134
- problem reporting 250
- serial connection 132
- Telnet connection 132

Command Line Interface (CLI) 23

Command Line Utility (CLU) 23, 283

command queuing, physical drives 101, 144

configuration status, physical drive 101

connection

- power 21
- problems 278

connector

- RJ45 278
- serial 20

controller

- adaptive writeback cache 94
- alias 93, 139
- cache flush interval 94, 139
- heartbeat LED 245, 283
- information 92, 138
- locate 91, 139
- replace 216
- reported events 257, 258, 259
- settings 93, 138
- statistics 93
- status LED 249
- unsaved data in cache 281
- view 91

cooling unit

- LED 248
- status 96, 141

create 31

- disk array 105, 147
- logical drive 111, 156

create, cont.

- spare drive 126, 176
- user 60, 181

critical

- disk array 110, 152
- logical drive 119, 158

D

data ports

- statistics 69, 169

date and time, subsystem 25, 27, 48, 137

dedicated spare drive 125, 126, 127, 176, 177, 234

default settings, restore 87, 193

delete

- disk array 109, 151
- logical drive 113, 157
- spare drive 127
- user 61, 183

deleting schedule, background activities 54

DHCP server changed IP address 280

dirty cache LED 249

Discover button 46

disk array 31

- advanced creation 34, 108, 150
- alias 108, 111, 112, 150, 156
- automatic creation 32, 106, 148
- create 31, 105, 147
- critical 110, 152, 269
- delete 109, 151
- expand 154
- expansion 237
- express creation 33, 106, 149
- incomplete array 153
- information 110, 152
- locate 110, 156

disk array, cont.
 manual rebuild 115
 Media Patrol 115
 migrate 113, 154
 offline 269
 operational status 110, 152
 PDM 116, 155
 physical drive selection 34,
 108, 150
 rebuild 114, 154, 270
 rebuilding 111, 152
 reported events 257
 settings 111, 152, 153
 synchronizing 110, 152
 transition 116
 transport 117, 153
 transport ready 111, 152
 view 105

disk drives, installing 15

disk status LED 95, 246, 269, 270,
 271

DMA mode, SATA drives 101, 144

download firmware image file 199,
 202

E

email
 service 77, 185
 settings 76, 184
 test message 59, 76

email messages 252

enclosure
 information 96, 140
 locate 95, 143
 overheat 276
 reported events 258
 settings 97, 141
 temperature 96, 141
 view 95
 voltage 96, 141

error block threshold 51, 173

event
 iSCSI 259
 notification response 255
 severity 58, 82, 189
 subscriptions 58

event log
 clear 49, 50, 174, 175
 NVRAM 174, 250
 problem reporting 252
 reported events 258
 runtime 48, 174, 250
 save 49, 50

expand disk array 113, 154

expansion ranges 237

export user database 84

F

failed
 battery 277
 power supply 275, 277
 power supply fan 276

failure recovery, physical drive 269

FCC statement 7

Features
 highlights 4
 operational 5
 subsystem and controller 5
 system management 6

firmware
 update in CLU 202
 update in WebPAM PROe 199

firmware image file, download 199,
 202

firmware update
 from PC 200
 from TFTP server 199, 202
 WebPAM PROe 199, 202

flush interval, controller cache 94,
 139

force offline 103, 146

force online 103, 146

forced unlock 55

FRU LED 245

FRU status LED 247

FRU VPD 97, 140

full initialization 121, 160

G

GB Truncate 93, 139, 233

global spare drive 125, 126, 127,
176, 177

Group Rounding 94, 139, 233

H

heartbeat LED 245

High 51

hot spare drive 234, 269

I

import user database 85

incomplete array 153, 272

inconsistent block table 123, 158

information

- controller 92, 138

- disk array 110, 152

- enclosure 96, 140

- FRU VPD 97, 140

- logical drive 118, 129, 158

- physical drive 101, 145

- subsystem 47

initialization

- defined 234

- settings 51, 173

initialize logical drive 121, 160

initiator

- adding 73, 179

- deleting 73, 180

- iSCSI 73, 179

installing disk drives 15

Internet access to WebPAM PROe
36

intranet access to WebPAM PROe
284

IP address

- DHCP or static 24

- DHCP server changed 280

- email (SMTP) server 76, 184

- iSCSI port 63, 163

- iSNS 170

- management port 24, 25, 27,
29, 38, 62, 132, 162, 279,
280

- netsend recipient 83

- netsend recipient PC 82, 189
- subsystem in WebPAM PROe
43

- trap sink 80, 187

- viewing 24

- VLAN 70, 169

iSCSI

- CHAPs 71, 72, 170, 171

- connection problems 279

- connections 72, 171

- data port settings 62, 163

- initiator 73

- IP address 63, 163

- iSNS 70, 169

- jumbo frames 63, 164

- LUN map 74

- LUN masking 74, 179

- node 67, 167

- node settings 68, 168

- ping 72, 171

- port statistics 69, 169

- port targets 69

- portal 70, 169

- session 70, 169

- target ports 168

iSCSI Port IP address

- CLI 25

-
- iSNS
 - making settings 71, 170
 - view information 70, 169
 - J**
 - jumbo frames, enable 63, 164
 - L**
 - language selection, WebPAM
 - PROe 31, 40
 - LED
 - controller 245
 - controller heartbeat 283
 - controller status 91, 139, 249
 - cooling unit 248
 - dirty cache 91, 139, 249, 281
 - disk status 95, 246, 269, 270, 271
 - drive carrier 21
 - Ethernet connector 279
 - fan 248
 - FRU 245, 283
 - FRU status 247
 - heartbeat 245, 283
 - logical drive 245, 269
 - power 245, 283
 - power supply 248
 - power/activity 246
 - red or amber 245
 - RJ45 connector 279
 - link aggregation
 - changing 66, 166
 - creating 65, 166
 - deleting 66, 166
 - viewing 65, 165
 - locate
 - controller 91, 139
 - disk array 110, 156
 - enclosure 95, 143
 - logical drive 119, 161
 - locate, cont.
 - physical drive 100, 146
 - power supply 96, 140
 - spare drive 125
 - lock
 - releasing 55, 137
 - renewing 55, 137
 - setting 55, 136
 - subsystem 54, 136
 - view status 54, 136
 - log in
 - CLI 23, 280
 - CLU 132
 - WebPAM PROe 29, 38
 - log out
 - CLU 134
 - WebPAM PROe 35, 45
 - logical drive
 - alias 34, 108, 121, 150
 - capacity 34, 108, 112, 150, 156
 - check table 123, 158
 - create 111, 156
 - critical 119, 158
 - delete 113, 157
 - information 118, 129, 158
 - initialize 121, 160
 - LED 269
 - locate 119, 161
 - LUN 123, 179
 - offline 119, 159
 - partition and format 235
 - RAID level 34, 108, 112, 150
 - rebuilding 118, 158
 - Redundancy Check 122, 160
 - reported events 259, 260
 - settings 120, 159
 - status 118, 158
 - synchronization 120
 - synchronizing 118, 158
-

- logical drive, cont.
 - transport ready 119, 159
 - view list of all 129, 158
- Logical Drive Summary 129
- logout other users 61
- LUN
 - logical drive 123
 - map, view 74
 - masking, enable 74, 179

M

- MAC address, viewing 24
- main menu, CLU 133
- Management Port
 - IP address 24
 - MAC address 24
 - settings 62, 162
- Media Patrol 115
 - defined 238
 - enable 34, 51, 108, 111, 150, 153, 172
 - reported events 260
 - run 52, 136
 - schedule 53
- MIB files 292
- migrate
 - disk array 113, 154
 - reported events 264
- Migration
 - settings 51, 172
- mount VTrak in a rack 10

N

- NetSend
 - recipients 82, 189
 - requirements 83, 190
 - service 83, 189
 - settings 82, 188
- node information 67, 167
- node settings 68, 168

- null-modem cable 132
- NVRAM event log 174, 250

O

- offline
 - logical drive 119, 159
 - physical drive 103, 146
- online capacity expansion 235
 - reported events 261
- online help
 - CLU 134
 - WebPAM PROe 42
- operational status
 - disk array 110, 152
- orphan watermark 138
- overheated enclosure 276
- overview of VTrak 2

P

- partition and format 235
- password
 - CLI/CLU 23, 132
 - CLU 182
 - WebPAM PROe 30, 38, 59
- Pause on Error 54, 122, 160
- PDM 108, 116, 150, 153, 155
 - defined 238
 - enable 34, 111
 - reported events 261
 - running 52
 - settings 51, 173
 - trigger settings 51, 173
 - triggers 238
- PFA condition 102, 145
- physical drive
 - alias 102, 145
 - capacity coercion 93, 139, 233
 - command queuing 101, 144
 - configurational status 101
 - DMA mode 101, 144

-
- physical drive, cont.
 - failure recovery 269
 - force offline or online 103, 146
 - from older subsystem 283
 - information 101, 145
 - locate 100, 146
 - operational status 101
 - read cache 101, 144
 - reported events 262
 - select for array 34, 108, 150
 - select for spare 126, 176
 - settings 102, 145
 - stale and PFA condition 102, 145, 270, 273
 - statistics 102
 - supported 283
 - write cache 101, 144
 - physical drives
 - global settings 100, 144
 - list 100, 144
 - physical drives, installing 15
 - pinout, serial connector 291
 - popup messages 252
 - port target Information 69
 - portal
 - information 70, 169
 - power
 - connection 21
 - LED 245
 - power supply
 - failed 275, 277
 - fan failure 276
 - fan reported events 264
 - LED 248
 - locate 140
 - replace 204
 - reported events 263
 - status 96, 140
 - power/activity LED 21, 246
 - Predictive Data Migration 238
 - privileges
 - CLU user 182
 - WebPAM PROe user 60
 - problem reporting
 - CLU 250
 - WebPAM PROe 252, 269
 - Q**
 - quick initialization 121, 160
 - R**
 - rackmount the VTrak 10
 - RAID
 - block and double parity stripe 224, 229
 - block and parity stripe 223, 229
 - enhanced mirror 222, 229
 - introduction 219
 - mirror 221, 228
 - mirror + stripe 225, 230
 - stripe 220, 228
 - striping of distributed parity 226, 230
 - RAID level
 - change 235
 - logical drive 34, 108, 112, 150
 - RAID levels
 - choosing 228
 - RAID 0 220, 228
 - RAID 1 221, 228
 - RAID 10 225, 230
 - RAID 1E 222, 229
 - RAID 5 223, 229
 - RAID 50 226, 230
 - RAID 6 224, 229
 - read cache
 - physical drive 101, 144
 - policy 35, 109, 112, 121, 150, 156
-

- read cache, cont.
 - policy defined 232
- read check table 123, 158
- reassigned block threshold 51, 173
- rebuild
 - disk array 114, 154, 270
 - reported events 265
 - settings 51, 172
- rebuilding
 - disk array 111, 152
 - logical drive 118, 158
- recipients, NetSend 82
- recondition a battery 98, 142
- red X 244, 252, 275
- Redundancy Check 53, 54, 122, 160
 - reported events 265
 - settings 51, 173
- regulatory statements 7
- releasing lock 55, 137
- renewing lock 55, 137
- repair, returning product for 289
- replace
 - battery 211
 - blower 205
 - controller 216
 - fan 205
 - power supply 204
- reported events
 - array incomplete 268
 - battery 255, 256
 - BBU 257
 - blower 256
 - controller 257, 258, 259
 - disk array 257
 - enclosure 258
 - event log 258
 - iSCSI 259
 - logical drive 259, 260
 - Media Patrol 260

- reported events, cont.
 - online capacity expansion 261
 - PDM 261
 - physical drive 262
 - power supply 263
 - power supply fan 264
 - RAID level migration 264
 - rebuild 265
 - Redundancy Check 265
 - resource not available 266
 - SMART error 267
 - Spare Check 266
 - spare drive 266
 - stripe level migration 267
 - synchronization 267
 - system 268
 - transition 268
- resource not available reported event 266
- response to event notification 255
- restart the subsystem 90, 196, 201, 202, 203
- restore default settings 87, 193
- returning product for repair 289
- reversible spare drive 116, 125, 126, 127, 176, 177, 239
- RJ45 connector 278
- RMA number 290
- RS232 connection 20
- running background activities 52
- runtime event log 48, 174, 250

S

- SATA disk drive, install 17
- scheduling background activities 53
- screws, counter-sink 16
- sector size 34, 109, 112, 150, 156
- sector size, defined 231
- security certificate 36
- serial cable connections 20

-
- serial connection 132
 - setting up 23
 - serial connector pinout 291
 - session information 70, 169
 - setting lock 55, 136
 - settings
 - background activities 51, 172
 - buzzer 99, 197
 - CIM 81, 188
 - controller 93, 138
 - disk array 111, 152, 153
 - email 76, 184
 - enclosure 97, 141
 - initialization 51, 173
 - iSCSI data port 62, 163
 - logical drive 120, 159
 - Migration 51, 172
 - NetSend 82, 188
 - PDM 51, 173
 - physical drives 100, 102, 144
 - rebuild 51, 172
 - Redundancy Check 51, 173
 - restore default 87, 193
 - SLP 77, 185
 - SNMP 79, 186
 - spare drive 127, 177
 - subsystem management port 62, 162
 - synchronization 51, 173
 - Telnet 79, 186
 - temperature 97, 141
 - Transistion 51, 173
 - user 57, 58, 182, 183
 - Web Server 77, 185
 - severity of events 58, 82, 189
 - shutdown the subsystem 89, 194
 - SLP
 - service 77, 185
 - settings 77, 185
 - SMART 93, 139
 - SMART error 267
 - SNMP
 - MIB files 292
 - service 81, 187
 - settings 79, 186
 - trap sinks 80, 187
 - Software Services 76
 - Spare Check 128, 177
 - reported events 266
 - spare drive 234, 269
 - create 126, 176
 - delete 127
 - locate 125
 - reported events 266
 - select physical drive 126, 176
 - settings 127, 177
 - Spare Check 128, 177
 - transition 116
 - view 125
 - Spare Drive Check 53
 - specifications 6
 - stale condition 102, 145
 - statistics
 - clear 88, 192
 - controller 93, 138
 - data ports 69, 169
 - logical drive 120, 158
 - physical drive 102, 145
 - status
 - controller 91, 138
 - cooling unit 96, 141
 - logical drive 118, 158
 - physical drive 101, 145
 - power supply 96, 140
 - spare drive 125
 - subsystem lock 54, 136
 - Storage Network 46
 - stripe level migration reported
 - event 267
 - stripe size 34, 109, 112, 150, 156
 - stripe size, defined 231
 - subsystem
-

- alias 47, 136
- date and time 25, 27, 48, 137
- fully booted 283
- information 47
- iSCSI data port settings 62, 163
- lock 54, 55, 136
- maintenance 199
- management port settings 62, 162
- Media Patrol 136
- restart 90, 196, 201, 202, 203
- shutdown 89, 194
- subsystems
 - logging into 46
 - on the storage network 46
- synchronization 113
 - disk array 110, 152
 - logical drive 118, 120, 158
 - reported events 267
 - settings 51, 173
- system reported event 268

T

- Table Rounding 94, 139, 233
- target port information 168
- TCP offload engine 69, 168
- Technical Support, contact 285
- Telnet
 - connection 132
 - service 79, 186
 - settings 79, 186
- temperature, enclosure 96, 141
- terminal emulation program 23
- test
 - buzzer 99
 - email 59, 76
- TFTP server 199, 202
- timing out, WebPAM PROe 284
- TOE 69, 168
- Transition

- automatic 241
- defined 239
- manual 241
- settings 51, 173
- spare drive 116
- transition, reported events 268
- transport disk array 117, 153
- transport ready
 - disk array 111, 152
 - logical drive 119, 159
- trap sinks 80, 187

U

- unpacking the VTrak 9
- user
 - create 60, 181
 - delete 61, 183
 - event subscriptions 58
 - logout others 61
 - password, change 59
 - privileges 60, 182
 - settings 57, 58, 182, 183
 - view sessions 61
- user database
 - export 84
 - import 85
- username and password
 - CLI/CLU 23, 132
 - WebPAM PROe 30, 38
- users, view 57, 181

V

- view
 - background activities 50
 - controllers 91
 - disk arrays 105
 - enclosure 95
 - list of all logical drives 129
 - lock status 54
- view, cont.

- physical drives 100
- scheduled activities 53
- spare drives 125
- users 57, 181
- virtual LANs
 - changing 64, 165
 - creating 63, 164
 - deleting 65, 165
 - jumbo frames 64, 165
 - viewing 63, 164
- VLANs
 - changing 64, 165
 - creating 63, 164
 - deleting 65, 165
 - jumbo frames 64, 164, 165
 - viewing 63, 164
- voltage, enclosure 96, 141
- VTrak
 - architectural description 3
 - beeping 244, 269
 - features and benefits 4
 - overview 2
 - rackmounting 10
 - specifications 6
 - unpacking 9
 - warranty 7, 288

W

warranty 7, 288

Web Server

- service 78, 186
- settings 77, 185

WebPAM PROe 31, 40

- access over an intranet 284
- access over the Internet 36

- browser 29, 38

- Event Frame 44

- Header 42

- initial VTrak setup 29

- interface 41

- log in 29, 38

- log out 35, 45

- Management View 44

- no browser connection 280

- problem reporting 252, 269

- storage network 46

- times out 284

- Tree View 43

- username and password 30, 38

write cache

- physical drive 101, 144

- policy 35, 109, 112, 121, 150, 156

- policy defined 232

- write check table 123, 158

Y

yellow ! 244, 252, 275

