



繁體中文
簡體中文
ENGLISH



使用手冊
用戶手冊
User Guide

LG-P525



CE0168 !

P/N : MFL67013103 (1.0) H

www.lg.com

Bluetooth QD ID B017118

LG-P525 使用手冊 — 繁體中文

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



目錄

安全及有效使用準則	4	手寫識別	19
安裝智能咭和手機電池	9	設定您的電子郵件	19
安裝智能咭	9	變更文字訊息設定	19
插圖	9	變更多媒體訊息設定	20
使用雙智能咭	11	社交網絡服務 (SNS)	20
手機部份	12	Facebook (SNS 續)	21
使用觸控屏幕	13	相機	21
觸控屏幕提示	13	快速拍照	21
控制觸控屏幕	13	拍照之後	21
桌面	14	使用進階設定	21
功能表屏幕	15	視像攝錄機	22
通話功能	16	快速製作影片	22
撥打電話	16	製作影片之後	23
透過通訊錄撥打電話	16	使用進階設定	23
接聽來電和拒接來電	16	音樂	24
變更一般通話設定	17	將音樂傳送至手機	24
通訊錄	17	管理檔案	25
搜尋通訊錄	17	遊戲和應用程式	25
新增通訊錄	17	FM 收音機	25
變更通訊錄設定	18	搜尋電台	25
訊息	18	應用程式	26
發送訊息	18	新增事件至日曆	26
輸入文字	19	設定鬧鐘	26
		語音備忘錄	26
		使用計算機	26
		轉換單位	26

PC Suite	26
在電腦上安裝	
LG PC Suite	26
網絡功能.....	27
存取網絡	27
存取 Google 服務	27
設定	27
個人化情景模式.....	27
變更手機設定.....	28
變更連接設定.....	28
使用藍芽發送和接收檔案..	28
同其他藍芽裝置配對	29
Wi-Fi.....	29
軟體更新.....	30
手機軟體更新	30
配件	31
技術數據.....	32
疑難排解.....	33

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本型號手機 LG-P525 之設計符合適用的無線電波暴露安全要求。此要求包括可確保所有用戶安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量子度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。

- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2 W/kg。
- 經 DASY4 測試，本手機型號在耳邊使用的最高 SAR 值為 0.948 瓦/千克（10 克），隨身攜帶時則為 1.11 瓦/千克（10 克）。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

產品保護及維護

 **警告：**只可以使用經認可用於此特定手機型號的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，例如耳機。如非必要，請勿觸及天線。

安全及有效使用準則

有效地操作手機

電子裝置

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，亦即您的胸部口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 如有免提耳機，則請使用。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。

- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人員傷害。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。當您在馬路旁邊時，這一點尤其重要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

注意！ 來自耳機的過度噪音和壓力可導致聽力損失。

爆破地區

請勿在進行爆破時使用手機。嚴格遵守相關限制、條例或規定。

潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用手機。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。

- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。

安全及有效使用準則

- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池失去可接受的效能，請更換電池。電池在必須更換前可重新充電數百次。
- 如果電池很久沒有使用，需重新充電。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 根據製造商說明棄置廢舊電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

安裝智能咭和手機電池

安裝智能咭

申請手機網絡後，您將獲得一張智能咭，當中有申請的詳細資料，如 PIN 碼、各種可選服務和許多其他內容。

重要資訊！

由於智能咭及其觸點很容易因刮痕或彎曲而損壞，因此在使用、插入或取出智能咭時要加倍小心。將所有智能咭放置在兒童無法觸及的地方。

插圖

取下電池前，必須關掉手機並中斷電源。



1 移除電池蓋。



2 取下電池。




3 插入智能咭。

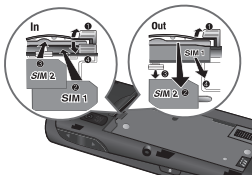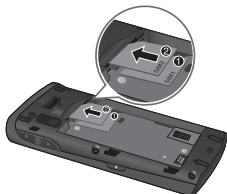

安裝智能咭和手機電池


4 裝上電池。

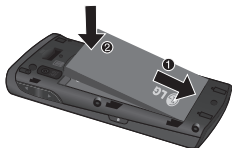

5 合上電池蓋。




6 將電池充電。

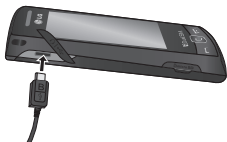

使用雙智能咭

⚠ 警告：將智能咭插入插槽前，請先確保智能咭切邊平整。

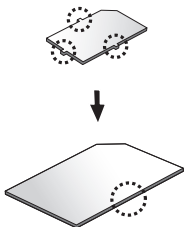

當您插入兩張智能咭時，您可於屏幕左上方看到兩個網絡訊號圖示。

要選擇或轉換智能咭，按功能表並選擇設定

提示！ 當您轉換網絡訊號時，您會看到被背景色彩強調的網絡訊號。這讓您更容易辨認您所選擇的智能咭訊號強度。

手機部份



聽筒

通話鍵

撥打電號碼及接聽來電。

清除鍵

返回前一屏幕。

結束鍵



音量鍵

- 當屏幕處於備用模式時：鈴聲和觸控音量。
- 通話中：聽筒音量。
- 向下音量鍵：按住可啟動/停用靜音模式。

立體聲耳機插孔



記憶咭插槽

使用觸控屏幕

觸控屏幕提示

- 要選擇某個項目，請按圖示。
- 點按觸控屏幕時無需太大力。觸控屏幕非常敏感，輕輕按中即可。
- 使用指尖觸控所需的選項。請注意不要碰到其他按鍵。
- 不使用 LG-P525 手機時，系統會返回鎖定屏幕。



滑動

左右滑動即可捲動。在某些屏幕上（例如，通話記錄清單），您亦可上下滑動。

控制觸控屏幕

LG-P525 的觸控屏幕可隨您正執行的工作項目而改變。

開啟應用程式

要開啟任何應用程式，只需點按此應用程式的圖示。



桌面


您可在桌面中滑動並點按所需內容。

啟動



Widget 桌面 - 點按屏幕左下方的  時，手機 Widget 控制板會出現。拖動圖示以設定 Widget。

啟動

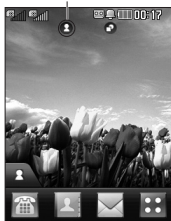

快速撥號桌面 - 您可透過此桌面直接進行通話、發送訊息或編輯通訊錄。

功能表屏幕

您可以立即在所有功能表屏幕中左右滑動即可選擇所需功能。要在不同桌面之間切換，只需在功能表屏幕上從左到右或從右到左快速滑動。

- 1 通話屏幕 - 在此功能表中發送訊息或撥打電話。



- 2 多媒體屏幕 - 使用 Google 搜尋或發送電子郵件。



- 3 應用程式屏幕 - 在此功能表中使用應用程式



通話功能

撥打電話

- 1 點按  開啟按鈕。
- 2 使用鍵盤輸入號碼。
- 3 點按  開始通話。

提示！ 要在撥打國際電話時輸入「+」，請按住 。

輕按鎖定鍵鎖定觸控屏幕，以防不小心進行撥號。

透過通訊錄撥打電話

- 1 從桌面點按  以開啟通訊錄。
- 2 點按屏幕頂部的「搜尋」欄位方塊，使用按鍵輸入想要撥打的聯絡人的前幾個字母。

- 3 從篩選的列表中，選擇想要撥打的聯絡人旁邊的「通話」圖示。如果該聯絡人存在多個號碼，將使用預設號碼。
- 4 或者，如果該聯絡人存在多個號碼，您也可以點按聯絡人名稱並選擇要使用的號碼。您還可以按  撥打預設號碼的通話。

接聽來電和拒接來電

手機響鈴後，按按鍵接聽來電。

若要靜音鈴聲，請先解鎖，然後點按靜音。如果在開會時忘記將情景模式變更為靜音，此功能將十分有用。點按拒絕拒接來電。

變更一般通話設定

- 1 點按設定功能表中的**通話設定**。
- 2 **來電拒接** - 滑動開關以開啟。您可以選擇拒接列表選擇所有通話、通訊錄、群組、所有無名稱來電、所有無來電號碼。
 - **發送我的號碼** - 選擇是否在撥出通話中顯示您的號碼。
 - **自動重撥** - 左右滑動以啟動開關。
 - **分鐘提示** - 左右滑動以啟動開關，以便在通話時聽到分鐘提示音。
 - **儲存新號碼** - 選擇「開啟」或「關閉」以儲存新號碼。

通訊錄

搜尋通訊錄

- 1 選擇通訊錄。
- 2 點按搜尋。
- 3 在「搜尋」欄位輸入聯絡人名稱的首字母，功能表將跳至該字母所在的列表區域。

新增通訊錄

- 1 選擇**通訊錄**，然後點按**新增**。
- 2 選擇是否將聯絡人儲存至**內置記憶體**或 **SIM 1 /SIM 2**。
- 3 輸入名字和姓氏。
- 4 您最多可為每個聯絡人輸入五個不同的號碼。
- 5 新增電郵地址。您最多可為每個聯絡人輸入兩個不同的電郵地址。
- 6 將聯絡人編入一個或多個群組。

7 點按儲存**儲存**通訊錄。

變更通訊錄設定

您可調整通訊錄設定，使**通訊錄**符合個人喜好。

點按選項鍵 ，然後點按**設定**。

- **顯示名稱** - 選擇先顯示名字或姓氏。
- **複製** - 在智能咭和內置記憶體之間複製通訊錄。您可以選擇一次複製一個或全部通訊錄。
- **移動** - 此操作與「複製」操作一樣，但通訊錄僅會儲存於新的位置。因此，如果您將一個聯絡人從智能咭移動至內置記憶體，它將從智能咭記憶體中刪除。
- **透過藍芽傳送所有通訊錄** - 透過藍芽將通訊錄發送到其他手機。
- **備份通訊錄/還原通訊錄** - 將通訊錄儲存或還原到其他儲存體。

- **刪除全部聯絡人** - 刪除所有的通訊錄。若確定要刪除所有通訊錄，請點按是。

訊息

LG-P525 將文字訊息和多媒體訊息結合在一個易用的功能表中。

發送訊息

- 1 點按功能表中的訊息。然後，選擇**編寫訊息**開始編寫新訊息。
- 2 點按附加以新增圖像、影片、聲音、常用範本等。
- 3 點按屏幕頂部的**收件者**並輸入收件者。然後，輸入號碼或點按  以選擇聯絡人。您還可新增多個聯絡人。
- 4 完成後，點按發送圖示。

 **警告：**如果在文字訊息中新增圖像、影片或聲音，它將自動轉換成多媒體訊息並相應地進行收費。

輸入文字

您可透過點按  和輸入法模式選擇輸入法模式。

點按  以開啟 T9 模式。只適用輸入法模式為按鍵時，才會顯示該圖示。

點按  以變更數字、符號和文字輸入。

使用 **Shift** 鍵在大小寫輸入之間變更。

手寫識別

在手寫模式下，您只需要在屏幕上寫入要輸入的字，LG-P525 手機即會將手寫內容轉換為訊息。

設定您的電子郵件

點按應用程式屏幕中的**電子郵件**。

如果尚未設定電子郵件帳戶，請啟動電子郵件設定精靈並完成設定。

您可透過選擇  以刪除或按設定。

變更文字訊息設定

點按訊息，然後點按設定。選擇**文字訊息**。

文字訊息中心 - 輸入訊息中心的詳細資料。

發送報告 - 左右滑動以啟動開關，以設定訊息發送後接收確認訊息。

有效時期 - 選擇訊息在訊息中心的儲存時間。

訊息類型 - 將文字轉換成**文字、語音、傳真、X.400**或**電子郵件**。

字元編碼 - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響資料費用。

發送長信息作為 - 選擇將長文字作為**多個文字訊息**或**多媒體訊息**。

變更多媒體訊息設定

點按訊息，然後選擇設定和**多媒體訊息**。

接收模式 - 選擇**本地網絡**或**漫遊網絡**。如果選擇**手動**，將僅收到多媒體訊息通知，然後選擇是否進行完整下載。

發送報告 - 選擇要求和/或允許發送報告。

讀取回覆 - 選擇要求和/或允許回覆。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息要在訊息中心中保留多久。

投影片播放時間 - 選擇投影片在屏幕上的顯示時間。

不受支援的附件 - 選擇是否限制不受支援的附件。

發送時間 - 選擇隔多久發送訊息。

多媒體訊息中心 - 從列表中選擇一個訊息中心或新增訊息中心。

社交網絡服務 (SNS)

您的 LG-P525 備有社交網絡服務，讓您享用及管理社交網絡。

提示：您的電話已預載 Facebook 程式，方便存取。Twitter 是基於 Java 技術的一個 java 應用程式。

注意：SNS 功能是資料性應用程式。連接及使用網上服務可能需要額外付費。請向網路提供商諮詢資料費用。

Facebook (SNS 續)

首頁：登入後便可檢視朋友的最新情況。輸入您的最新狀態或查看他人的近況。

個人檔案：可檢視個人資料。並可選擇在留言板寫入更新狀況和上載相片。

朋友：選擇搜尋功能以搜尋您的朋友。

訊息：您會看到收件匣/寄件匣資料夾，還可以編寫 SN 訊息。

相機

快速拍照

- 1 選擇相機。
- 2 當相機對準拍攝物時，按屏幕右邊的  進行拍照。

提示：要切換到相機模式或影片模式，向上/向下滑動取景器的相機或影片圖示。

拍照之後

拍攝的相片將顯示於屏幕上。

可使用以下選項。

點按 。

發送 - 點按以將相片以訊息、電子郵件或藍芽發送。

設為 - 點按以設定屏幕圖像（主屏幕牆紙、鎖定畫面牆紙、通訊錄圖像、來電影像、撥出電話影像、開機圖像和關機圖像）。

重新命名 - 點按以重新命名相片。

編輯 - 點按以編輯相片。

 點按刪除圖像。

 點按以返回取景器。

 點按以檢視已儲存的媒體匣。

使用進階設定

從取景器中，點按  以開啟所有進階設定選項。

選擇所需選項後，請按 OK 按鍵。

大小 - 更改相片的大小以節省記憶體

白平衡 - 選擇**自動**、**白熱光**、**陽光**、**日光燈**和**陰天**。

色彩效果 - 為新相片選擇色調。

連環拍攝 - 在取景器中定位對象，然後於要拍攝標準相片時，按拍攝按鈕。相機將以快速連續的方式拍照。

自拍時計 - 自拍時計讓您設定按下快門後的延遲拍攝時間。可供選擇的選項為：**關閉**、**3 秒**、**5 秒**或**10 秒**。此功能最適合自拍時使用。

夜間模式 - 在黑暗環境中非常有用。

圖像品質 - 可選擇**特細緻**、**細緻**和**正常**。質素愈細緻，相片便愈清晰。然而，相片的大小亦會隨之增加，表示您可儲存在記憶體內的相片數量會減少。

選擇儲存 - 選擇是將相片儲存至手機記憶體，還是儲存至外置記憶體。

隱藏圖示 - 選擇手動或自動隱藏相機設定圖示。

顯示拍攝圖像 - 選擇開啟可立即檢查所拍攝的圖片。

快門聲 - 從三種快門聲音中選擇一種。

格線畫面 - 可選擇**關閉**、**簡單十字**或**三等分**。

重新設定 - 還原所有相機預設設定。

視像攝錄機

快速製作影片

要切換到影片模式，滑動取景器的相機及影片圖示。

- 1 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 2 按紅點 .

- 3 ● **Rec** 將會顯示在取景器底部，而底部的計時器則會顯示影片錄製的時間長度。
- 4 若要暫停影片，請點按  並透過選擇  繼續。
- 5 點按屏幕上的  以停止。

製作影片之後

將在屏幕上顯示一張靜態影片圖像。影片名稱顯示在屏幕底部，同時會在屏幕左側和右側顯示圖示。

 點按播放影片。
可使用以下選項。

點按 。

發送 - 點按將影片以**訊息、電子郵件或藍芽**發送。

重新命名 - 點按以重新命名影片。

 點按以刪除剛剛錄製的影片，透過按是予以確定。取景器將再次出現。

-  點按立即拍攝另一段影片。當前影片將會被儲存。
-  點按檢視已儲存影片和圖片的媒體匣。

使用進階設定

從取景器中，點按  以開啟所有進階設定選項。您可變更視像攝錄機設定。選擇所需選項後，請按 **OK** 按鍵。

色彩效果 - 選擇新影片的色調。

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動、白熱光、陽光、日光燈和陰天**。

質素 - 在**特細緻、細緻及正常**之間選擇。質素越細緻，影片越清晰，檔案大小也就越大。因此，手機記憶體儲存的影片數量也將更少。

長度 - 為視像設定播放時間限制。您可選擇標準和多媒體訊息限制影片的大小，以透過多媒體訊息發送影片。

選擇儲存 - 選擇是將影片儲存至手機記憶體，還是儲存至外置記憶體。

音訊錄製 - 選擇靜音以錄製影片，而沒有聲音。

隱藏圖示 - 選擇是自動還是手動隱藏相機功能表上的圖示。

重設設定 - 重設所有視像攝錄機設定。

音樂

要存取音樂播放機，選擇**音樂**。您可從此處存取多個資料夾：

最近播放 - 播放最近播放過的歌曲。

全部曲目 - 包含手機上的全部歌曲，預載的預設音樂除外。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

播放列表 - 包含已建立的全部播放列表。

隨機播放曲目 - 按照隨機順序播放曲目。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或 USB 線。

若要使用藍芽傳送音樂：

- 1 確保兩個裝置均開啟藍芽，且彼此相互連接。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 檔案發送後，您需要在手機上按是予以接收。
- 4 檔案應顯示在**音樂 > 全部曲目**中。

管理檔案

您可以將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖片、聲音、影片和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭以便釋放手機記憶體空間。

透過選擇**我的檔案**，您可開啟儲存所有多媒體檔案的資料夾。

遊戲和應用程式

您可將新遊戲和應用程式下載至手機上以供消遣。

FM 收音機

LG-P525 具有 FM 收音機功能，您可在外出旅途中調諧至最愛電台，收聽節目。

搜尋電台

您可透過手動或自動搜尋電台，將手機調諧至收音機電台。電台將被儲存至指定頻道編號中，以防重複調諧。您必須首先將耳機插入手機中，將耳機作為天線使用。

自動調諧：

- 1 選擇 **FM 收音機**，然後選擇 。
- 2 點按**自動掃描**。顯示一則確認訊息。選擇**是**，系統將自動搜尋電台並分配到手機頻道中。

備註：您亦可透過使用屏幕顯示的 ◀ 和 ▶ 手動調諧電台。若按住 ◀ 和 ▶，則將自動搜尋電台。

應用程式

新增事件至日曆

- 1 選擇**日曆**。
- 2 選擇要將事件新增至的日期。
- 3 選擇**新增**。

設定鬧鐘

- 1 選擇**鬧鐘**。
- 2 點按**新增**，然後您可以在功能表中設定並儲存您的鬧鐘。

語音備忘錄

使用語音備忘錄錄製語音備忘錄或其他聲音檔。

使用計算機

- 1 在多媒體屏幕中點按**計算機**。
- 2 點按數字鍵以輸入數字。

轉換單位

- 1 在應用程式屏幕中觸控**單位轉換器**。
- 2 選擇是否要轉換**匯率、面積、長度、重量、溫度、體積或速度**。
- 3 然後，然後選擇單位並輸入要轉換的值。

PC Suite

您可同步您的電腦和手機。以確保所有重要詳細資料和日期相匹配，並可用作備份，讓您安心。

在電腦上安裝 LG PC Suite

- 1 到 www.lgapplication.com 並選擇您所在區域，然後選擇國家。
- 2 點選手冊及軟件。
- 3 下載 **LG 手機支援工具**。

- 4 按照屏幕上的說明完成 LG 電腦端套件安裝程式精靈。
- 5 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

 **警告：**傳輸過程中請勿中斷手機連接。

網絡功能

瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、運動和娛樂資訊，並直接往手機中載入更多內容。而無論您身在何處，有何種需求，均能一一滿足您。

存取網絡

- 1 點按**瀏覽器**。
- 2 要直接跳至瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並輸入網址，然後選擇**連接**。

注意：連接到這類服務並下載其中的內容將會產生額外收費。請向網絡供應商諮詢收費詳情。

存取 Google 服務

您可以在此應用程式中啟動 Google 服務。在多媒體屏幕中選擇 **Google 搜尋**。

設定

個人化情景模式

點按多媒體屏幕以快速變更您的情景模式。

您可使用設定功能表個人化情景模式設定。

- 1 點按**情景模式**。
- 2 選擇想要編輯的情景模式。

- 3 您可變更列表中的所有可用聲音和提示選項，包括鈴聲和音量、訊息提示音設定等。

變更手機設定

隨意調整 LG-P525 的設定，以便適合您的個人喜好。

從桌面選擇 ，從設定中選擇**手機設定**。然後選擇**記憶體資訊**。

變更連接設定

您的連接設定已由網絡商設定，以便您立即使用新手機。若要變更連接設定，請使用此功能表：從設定中選擇**連接**。

使用藍芽發送和接收檔案

要發送檔案：

- 1 開啟要發送的檔案，通常為相片、影片或音樂檔案。

- 2 選擇發送方式。選擇藍芽。
- 3 如果已配對**藍芽**裝置，LG-P525 手機將不會自動搜尋其他**藍芽**裝置。如果尚未配對，LG-P525 手機將搜尋範圍內其他已啟用**藍芽**的裝置。
- 4 選擇要將檔案發送至的裝置。
- 5 您的檔案將會被送出。

要接收檔案：

- 1 若要接收檔案，藍芽必須**開啟並可見**。有關詳情，請參閱以下的**變更您的藍芽設定**。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按以接收檔案。
- 3 您將查看到檔案的儲存位置。對於圖像檔，您可選擇**檢視檔案**或**設為牆紙**。檔案通常被儲存於**我的檔案**中的對應位置。

變更您的藍芽設定：

點按功能表中的**藍芽**。然後選擇  並選擇**設定**。

同其他藍芽裝置配對

透過配對 LG-P525 和其他裝置，您可設定一個受密碼保護的連接。

- 1 檢查藍芽是否**開啟**和**可見**。您可在**設定**功能表中變更您的可見狀態。
- 2 選擇**搜尋**。
- 3 LG-P525 手機將會搜尋裝置。完成搜尋後，**重新整理**將顯示在屏幕上。
- 4 選擇要配對的裝置並輸入密碼，然後按**確定**。
- 5 然後，手機將連接到其他裝置，並且您必須在此裝置上輸入相同的密碼。
- 6 密碼保護藍芽連接已準備就緒。

Wi-Fi

無線管理員協助您管理手機Wi-Fi（無線區域網絡）的互聯網連接，使手機能夠連接區域無線網絡，或以無線方式登入互聯網。與藍芽無線技術相比，Wi-Fi 的速度更快，範圍更廣，令使用電子郵件和瀏覽互聯網時更加快捷。

備註：LG-P525 支援 WEP 和 WPA/WPA2-PSK 安全體制。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

軟體更新

手機軟體更新

從互聯網更新 LG 手機 軟體

更多有關此功能的資訊，
請瀏覽

<http://update.lgmobile.com> 或
[http://www.lg.com/common/
index.jsp](http://www.lg.com/common/index.jsp) → 選擇國家 →
支援。

有了這項功能，您無需親
臨服務中心，就可透過互
聯網將手機軟體更新為最
新版本，十分方便。

手機軟體更新要求使用者
密切注意整個更新過程。
請確保繼續進行前，已檢
查所有在每一個步驟出現
的指引和備註。請注意，
更新期間若移除 USB 數據
線或電池，有可能對手機
造成嚴重損害。

配件

有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

充電器



立體聲
耳機



電池



USB 線



使用手
冊



注意：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高：+55°C（放電） +45°C（充電）

最低：-10°C

Declaration of Conformity



LG Electronics

Supplier Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouide-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

LG-P525

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1 : 2001
EN 50360 : 2001 / EN62209-1 : 2006
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Haeng Lee / Director

Issued Date

20. Oct. 2010

Signature of representative

LG Electronics Inc. -EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

疑難排解

本章會列出一些使用手機時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行解決。

訊息	可能起因	合理的修正措施
智能咭錯誤	手機內無智能咭，或不正確地插入智能咭。	確保已正確地插入智能咭。
無網絡連接/失去網絡	網絡範圍外訊號弱 網絡商套用新服務	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能咭是否舊於 6 至 12 個月。 如果是這種情況，請前往網絡供應商的辦事處更換您的智能咭。
密碼不正確	要更改安全密碼，您需要再次輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	預設的手機密碼為 [0000]。如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能	請聯絡您的服務供應商。

疑難排解

訊息	可能起因	合理的修正措施
無法撥打電話	撥號錯誤 新智能咭已插入 已達預付費用上限	新網絡未獲受權。 請檢查新的限制。 聯絡您的服務供應商，或使用 PIN 2 重設限額。
手機無法啟動	按下開啟/關閉鍵的時間太長。 電池並無充電 電池接觸面骯髒	按下開啟/關閉鍵至少兩秒。 替電池充電更長時間 清潔接觸面。 取出電池並重新插入。
充電錯誤	電池並無充電。 外界溫度太高或太低 接觸不良 無電壓 充電器故障 不正確的充電器；電池故障	替電池充電。 確保於正常溫度下為手機充電。 檢查充電器是否正常，以及是否正確地連接電源至手機。檢查電池接觸點，如有髒污則需清潔。 插入不同插座內。 如充電器沒有變暖，則需更換充電器。 請只使用原裝 LG 配件。 更換新電池。

訊息	可能起因	合理的修正措施
不允許撥打號碼	固定撥號號碼功能已開啟。	請檢查設定。
無法接收/發送文字訊息和圖片	記憶體已滿	刪除手機上的部份訊息
無法開啟檔案	不支援的檔案格式	檢查支援的檔案格式
SD 咭無法運作	只支援 FAT 16 檔案系統	透過讀咭器檢查 SD 咭檔案系統或使用手機將 SD 咭格式化
接收來電時，屏幕並無開啟。	距離感應器問題	如果您使用任何保護貼或保護套，檢查該等配件有否掩蓋距離感應器附近的範圍。確保距離感應器附近並無任何障礙物。
無聲音	震動或靜音模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。
掛線或凍結	軟件間歇性問題	取出電池並重新插入。 開啟手機。 透過 WEB 網站嘗試進行軟件更新。

[illegible]

LG-P525 用户手册-简体中文

此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同,这并不会另行通知。



目录

关于安全有效使用手机的准则	4	手写识别	19
安装 SIM 卡和手机电池	9	设置电子邮件	19
安装 SIM 卡	9	更改文本信息设置	19
说明	9	更改多媒体信息设置	20
使用 SIM 双卡	11	社交网络服务 (SNS)	20
手机部件	12	Facebook (SNS 续)	21
使用触摸屏	13	照相机	21
触摸屏提示	13	快速拍照	21
控制触摸屏	13	拍照后	21
主屏	14	使用高级设置	22
菜单屏幕	15	摄像机	23
通话	16	快速录制视频	23
拨打电话	16	拍摄视频后	23
从电话簿拨打电话	16	使用高级设置	24
接听和拒绝电话	16	音乐	24
更改常用通话设置	17	将音乐传输到手机	25
电话簿	17	管理文件	25
搜索联系人	17	我的游戏和应用程序	25
添加新联系人	17	FM 收音机	25
更改电话簿设置	18	搜索电台	26
信息	18	应用程序	26
发送信息	18	将事件添加到日历中	26
输入文本	19	设置闹钟	26
		语音备忘录	26
		使用计算器	26
		换算单位	27

PC 套件	27
在电脑上安装 LG PC 套件	27
网络	27
访问网页	27
访问 Google 服务	28
设置	28
个性化情景模式	28
更改手机设置	28
使用内存管理器	28
更改连接设置	28
使用蓝牙发送和接收文件	28
与其它蓝牙设备配对	29
Wi-Fi	30
软件更新	31
手机软件更新	31
配件	32
技术参数	33
故障排除	34
故障排除	36

关于安全有效使用手机的准则

请阅读以下简单的准则。
违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下 无线电波暴露和“特定吸收率” (SAR) 信息。

此款 LG-P525 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有用户（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。

- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.948 W/kg（10克），戴在身体上时，其值为 1.11 W/kg（10 克）。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为：每 1 克重的人体组织吸收的能量平均值不超过 1.6 W/kg，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

⚠ 警告：仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。

关于安全有效使用手机的准则

- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 将备注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

有效的手机操作

电子设备

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 如果车辆配备气囊，不要让安装的或便携式的无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

注意：耳机声音和压力过度可能导致听觉受损。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规定或规章。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。

不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

关于安全有效使用手机的准则

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 替换电池类型不当时可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

安装 SIM 卡和手机电池

安装 SIM 卡

当您预定了手机网络后，您将得到一个插入式 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。

重要！

插入式 SIM 卡及其内容很容易因刮擦或弯折而损坏，因此，在处理、插入或移除卡时，请小心谨慎。请将所有 SIM 卡置于儿童无法接触的地方。

说明

取出电池前，请始终关闭手机并断开与充电器的连接。



1 卸下电池盖。



2 取出电池。



3 插入 SIM 卡。

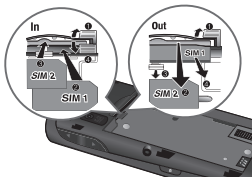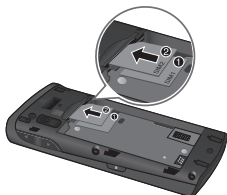


4 插入电池组。




5 盖上后盖。



6 充电。

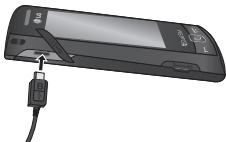

⚠ 警告：在将 SIM 卡插入到弹夹之前，请确保 SIM 卡的切角边干净整洁。

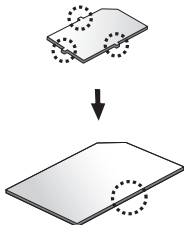

使用 SIM 双卡

当插入两张 SIM 卡时，您可以在屏幕左上方看到两个网络信号图标。

当插入两张 SIM 卡时，您可以在屏幕左上方看到两个网络信号图标。

提示！ 在切换时，您可以看到通过背景色突出显示的网络信号。这使您能够轻松识别所选 SIM 卡的信号强度。

手机部件



听筒

通话键

拨打电话号码并接听来电。

清除键

返回到上一个屏幕。

结束键



音量键

- 当屏幕位于主屏时：调整铃声和触摸音音量。
- 在通话过程中：耳机音量。
- 向下音量键：按住激活/停用静音模式。

免提或立体声耳机连接器



Micro SD 存储卡插槽

使用触摸屏

触摸屏提示

- 要选择项目，请点触图标中心位置。
- 无需大力按。触摸屏非常敏感，仅需点触即可。
- 使用指尖点触所需选项。请注意不要触碰到其它键。
- LG-P525 未使用时将返回锁定屏幕。



滚动

来回拖动即可滚动。在主屏上，如访问通话记录列表时，您还可以上下滚动。



控制触摸屏

LG-P525 触摸屏上的控件会动态更改，具体取决于您执行的任务。


打开应用程序

要打开任何应用程序，轻触其图标即可。

主屏


在所有主屏类型中，您都可以直接拖动和单击所需内容。

激活

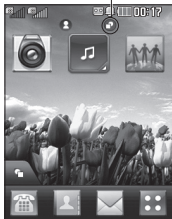

小工具主屏 - 当您点触屏幕左下方的  时，将出现手机小工具面板。当您通过拖动来注册小工具时，系统将在放下小工具的地点创建小工具。

激活

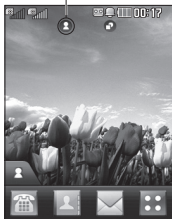

快速拨号主屏 - 当您点触  时，将出现快速拨号列表。您可以直接在此主屏中呼叫、发送信息或编辑联系人。

菜单屏幕

您可以在所有菜单屏幕来回拖动，以滚动到所需内容。要在不同的主屏之间切换，从左到右或从右到左快速摩擦屏幕即可。

1 通话屏幕 - 通过此菜单发送信息或拨打电话



2 多媒体屏幕 - 使用 Google 菜单或发送电子邮件。



3 应用程序屏幕 - 使用此菜单中的应用程序。



通话

拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘键入号码。
- 3 点触  以开始通话。

提示！ 要输入 + 以拨打国际电话，请长按 。

按电源键锁定触摸屏，避免意外拨出电话。

从电话簿拨打电话

- 1 从主屏点触  以打开电话簿。
- 2 轻触屏幕顶部的“名称”字段框，然后使用键盘输入您要呼叫的联系人的前几个字母。

- 3 从过滤列表中点触您要呼叫的联系人旁边的通话图标。如果该联系人有多个号码，则拨打默认号码。
- 4 或者，您可以点触联系人姓名，如果该联系人有多个号码可用，请选择您要使用的号码。您也可以点触  以启动对默认号码的呼叫。

接听和拒绝电话

电话铃响起时，按智能键可接听电话。

要静音，可向上滑手机滑盖。这将解锁已锁定的手机，然后轻触静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。点触拒绝拒接来电。

更改常用通话设置

- 1 在**设置**选项卡中点触**呼叫设置**。
- 2 **拒接来电** - 向左滑动开关以选择开。您可以点触拒绝列表选择所有通话、特定联系人或群组，或来自未注册号码的呼叫（即，不在您电话簿中的联系人）。
 - **发送我的号码** - 选择是否要在拨出电话时显示您的号码。
 - **自动重拨** - 向左滑动开关为开，向右滑动开关为关。
 - **分钟提示音** - 向左滑动开关为“开”，在通话过程中每隔一分钟将听到提示音。
 - **保存新号码** - 选择“开”或“关”以保存新号码。

电话簿

搜索联系人

- 1 点触**电话簿**。
- 2 点触**搜索**。
- 3 您将看到一个联系人列表。在“名称”字段中键入联系人姓名的首字母会使菜单跳转到列表的该字母区域。

添加新联系人

- 1 点触电话簿，然后点触**添加**。
- 2 选择是将联系人保存到**内存**还是**SIM 卡**。
- 3 输入姓氏和名称。
- 4 对同一个联系人，您最多可以输入 5 个不同的号码。
- 5 添加电子邮件地址。每个联系人最多可输入两个不同的电子邮件地址。

- 6 将联系人分配到一个或多个群组。
- 7 点触**保存**以保存联系人。

更改电话簿设置

您可以调整您的电话簿设置，使**电话簿**符合您的需要。

点触“**选项**”键 ，然后点触**设置**。

- **显示名称** - 选择是先显示联系人的名字还是姓氏。
- **复制** - 将电话簿从 SIM 卡复制到手机，或从手机复制到 SIM 卡。您可以逐个复制或一次性全部复制。
- **移动** - 此操作与“复制”相同，但是联系人仅保存在新位置。因此，如果将联系人从 SIM 卡移动到内存，其将从 SIM 存储卡中删除。

- **通过蓝牙发送所有联系人** - 通过蓝牙将所有联系人发送到其它手机。
- **备份电话簿/恢复电话簿** - 将电话簿数据保存或恢复到其它存储位置。
- **删除所有联系人** - 删除您的所有联系人。如果确定要清空电话簿，请点触是。

信息

LG-P525 将短信和彩信结合到一个直观易使用的菜单中。

发送信息

- 1 点触菜单中的**信息**。然后，点触**写信息**开始写新信息。
- 2 点触**插入**添加图像、视频、声音、模板等。

- 3 点触屏幕底部的主收件人以输入收件人。然后，输入号码或点触  选择一个联系人。您甚至可以添加多个联系人。
- 4 就绪后，请点触**发送**。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

输入文本

通过点触  并点触**输入方式**，您可以选择输入方法。

点触  可以打开 T9 模式。只有当您选择**键盘**作为输入法时，才会显示此图标。

点触  以在数字、符号和文本输入间切换。
使用 **Shift** 键在大小写输入之间切换。

手写识别

在手写模式中，您只需在屏幕上书写内容，LG-P525 即可将您的手写内容转换为信息。

设置电子邮件

在“应用程序”屏幕中点触**电子邮件**。

如果尚未设置电子邮件帐户，请启动并完成电子邮件设置向导。

通过选择 ，您可以检查和编辑设置。您还可以检查当您创建帐户时自动填写的其它设置。

更改文本信息设置

点触**信息**，然后点触**设置**。选择**文本信息**。

文本信息中心 - 输入信息中心的详细信息。

发送报告 - 向左滑动开关，在对方收到您发送的信息时接收确认。

有效期 - 选择信息在信息中心中的最长保存时间。

信息类型 - 将文本转换为文本、语音、传真、X.400 或电子邮件。

字符编码 - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

将长信息作为发送 - 选择是以多条短信还是一多媒体信息发送长信息。

更改多媒体信息设置

点触**信息**，然后点触**设置**和**多媒体信息**。

读取模式 - 选择**本地网络**或**漫游网络**。如果选择**手动**，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

发送报告 - 选择以**请求**和/或**允许**发送报告。

请求已读回执 - 选择以**请求**和/或**允许**已读回执。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

创建模式 - 选择是否要限制不受支持的附件。

发送时间 - 选择信息发送前的等待时间。

网络设定 - 从列表中选择或添加新信息中心。

社交网络服务 (SNS)

LG-P525 带有 SNS，允许您体验并管理您的社交网络。

提示：Facebook 是一种预加载在您的手机上的本机应用程序，易于访问。Twitter 是一种基于 Java 技术的 Java 应用程序。

备注：SNS 功能是一款数据密集型应用程序。连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

Facebook（SNS 续）

主页：登录后您将看到朋友的状态更新。就新状态输入评论或查看他人状态。

个人档案：您可以选择“留言”>“状态更新”，然后写入当前状态。查看您的信息详情，然后点触“相册”>“上传照片”以上传照片。

朋友：选择“搜索”按钮以在 Facebook 中搜索您的朋友。

信息：您可以选择“收件箱/已发送”文件夹，并撰写 SN 信息。

照相机

快速拍照

- 1 点触**照相机**菜单。
- 2 当相机对好焦后，点触屏幕中心右侧的  拍照。

提示：要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。

拍照后

拍好的照片将显示在屏幕上。

可以使用以下选项。

点触 。

发送 - 点触可以**信息**、**电子邮件**或**蓝牙**方式发送照片

设置方式 - 点触以设置屏幕图像（主屏、墙纸、锁定屏保、联系人图像、来电图像、拨出电话图像、开机图像和关机图像）。

重命名 - 点触可以重命名照片。

修改 - 点触可以编辑照片。



点触可以删除图像。



点触可以立即拍摄其它照片。



点触可以查看保存的图像库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。

选择选项后，点触**确定**按钮。

大小 - 更改照片大小以保存在储存空间中。

白平衡 - 从以下选项中选择：**自动**、**白炽灯**、**晴**、**荧光灯**和**阴天**。

色彩效果 - 选择新照片的色彩效果。

连拍 - 将物体定位在取景器中，请像拍摄普通照片一样按下拍摄按钮。相机将快速连拍多张照片。

定时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从**关闭**、**3 秒**、**5 秒**或**10 秒**中选择。如果要为自己拍摄照片，此功能是理想之选。

夜晚模式 - 在黑暗环境下非常有用。

图像质量 - 在**超精细**、**精细**和**标准**之间选择。质量越精细，照片越清晰。同时文件更大，这意味着手机内存可保存的照片数更少。

选择存储位置 - 选择是将照片保存到手机内存还是外部存储器。

隐藏图标 - 选择要手动或自动隐藏的相机设置图标。

显示已拍图像 - 选择“开”立即查看拍摄的照片。

快门声音 - 从三种快门声音中选择一种。

网格屏幕 - 从关闭、简单十字或三等分中选择。

恢复初始设置 - 恢复所有相机默认设置。

摄像机

快速录制视频

要切换为相机模式或视频模式，请向上/向下滑动取景器右部中间的相机或视频图标。

- 1 水平放置相机，将镜头对准要拍摄的物体。
- 2 按红点 .
- 3 取景器底部将出现 **● Rec**，底部计时器显示视频长度。

- 4 要暂停视频，请点触 ，要恢复录制，请选择 .

- 5 点触屏幕上的 .

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频名称在屏幕底部显示，左右侧将显示图标。

 点触可以播放视频。可以使用以下选项。

点触 .

发送 - 点触可以**信息**、**电子邮件**或**蓝牙**方式发送视频。

重命名 - 点触可以重命名视频。

 点触可以删除您刚拍摄的视频，点触**是**确认。此时将出现取景器。

 点触立即拍摄其它视频。将保存您的当前视频。

 点触可以查看保存的视频库和图片库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。滚动转盘，您可以更改摄像机设置。选择选项后，点触**确定**按钮。

色彩效果 - 选择要对新视图使用的色彩效果。

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**晴**、**荧光灯**或**阴天**中选择。

质量 - 在**超精细**、**精细**和**标准**之间选择。质量越精细，视频将越清晰，同时，文件更大。因此手机内存中保存的视频将更少。

持续时间 - 设置视频的长度限制。从**标准**和**彩信**中选择，以限制彩信最大大小。

选择存储位置 - 选择是将视频保存到手机内存还是外部存储器。

录音 - 选择静音以录制视频而不录制声音。

隐藏图标 - 选择是自动还是手动隐藏相机菜单上的图标。

恢复初始设置 - 重设所有摄像机设置。

音乐

要访问音乐播放器，请点触**音乐**。您可以在访问多个文件夹：

近期播放 - 播放您最近播放的歌曲。

所有曲目 - 包含手机上除预先加载的默认音乐以外的所有歌曲。

艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

流派 - 按流派浏览音乐集合。

播放列表 - 包含您创建的所有播放列表。

随机播放曲目 - 以随机顺序播放您的曲目。

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或数据线。

使用蓝牙传输音乐：

- 1 请确保双方设备都已打开蓝牙并且连接对方。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件发出后，您必须点触是在您的手机上接受它。
- 4 文件应显示在**音乐 > 所有曲目**中。

管理文件

您可以将任意多媒体文件储存到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡，您可以释放手机内存的空间。

通过点触**我的文档**，您可以打开保存所有多媒体文件的文件夹列表。

我的游戏和应用程序

您可以将新游戏和应用程序下载到手机中以供娱乐。

FM 收音机

LG-P525 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

搜索电台

您可以手动或自动微调收音机电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您必须首先将耳机插入手机以将其用作天线。

自动微调：

- 1 滚动并点触 **FM 收音机**，然后点触 。
- 2 点触**自动扫描**。将出现一条确认信息。选择**是**，随后将自动查找电台并分配给手机中的频道。

备注：您还可以通过使用屏幕中心显示的 ◀ 和 ▶ 手动微调电台。如果按住 ◀ 和 ▶，将自动查找电台。

应用程序

将事件添加到日历中

- 1 点触**日历**。
- 2 选择您要添加事件的日期。
- 3 点触**新增**。

设置闹钟

- 1 点触**闹钟**。
- 2 点触**添加**，然后，您可以在此菜单中设置并保存闹钟。

语音备忘录

使用录音机录制语音备忘录或其它音频文件。

使用计算器

- 1 在多媒体屏幕中点触**计算器**。
- 2 点触数字键输入数字。

换算单位

- 1 在应用程序屏幕中点触**单位换算器**。
- 2 选择要换算的内容：**货币、面积、长度、重量、温度、体积、速度**。
- 3 然后，选择单位并输入要对其进行换算的值。

- 4 根据屏幕说明完成 LG PC 套件安装程序向导。
- 5 安装完成后，桌面上将显示 LG PC 套件图标。

 **警告：**传输过程中，不要断开手机连接。

PC 套件

您可以同步 PC 与手机。同步有助于确保所有重要信息和日期匹配，同时做好备份。

在电脑上安装 LG PC 套件

- 1 转到 www.lgapplication.com，先选择您所在区域，然后选择国家/地区。
- 2 单击**手册和软件**。
- 3 下载 **LG Mobile 支持工具**。

网络

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

访问网页

- 1 点触**浏览器**。
- 2 要进入浏览器主页，请选择**主页**。或者，选择**输入地址**后键入 URL，然后选择**连接**。

备注：连接这些服务以及下载内容会产生额外费用。查看网络提供商要求的数据付费。

访问 Google 服务

您可以在此应用程序中启动 Google 服务。在多媒体屏幕中点触 **Google Search**。

设置

个性化情景模式

您可以点触多媒体屏幕快速更改情景模式。

使用设置菜单，您可以个性化每种情景模式。

- 1 点触**情景模式**。
- 2 选择您要编辑的情景模式。
- 3 随后，您可以更改列表中可用的所有声音和提示选项，包括铃声和音量、信息提示音设置等。

更改手机设置

随意根据需要调整 LG-P525 设置。

从主屏选择 ，然后滚动到**手机设置**。

使用内存管理器

从主屏选择 ，然后滚动到**手机设置**。选择**存储器资料**。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。要更改任意设置，请使用此菜单：
点触**连接**。

使用蓝牙发送和接收文件

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择**发送**。选择**蓝牙**。

- 3 如果已配对**蓝牙**设备，LG-P525 将不会自动搜索以配对其它**蓝牙**设备。否则，LG-P525 将搜索范围内其它启用了**蓝牙**的设备。
- 4 选择您要向其发送文件的设备。
- 5 您的文件将被发送。

接收文件：

- 1 要接收文件，您的蓝牙必须为**开且可见**。有关详细信息，请参阅下面的**更改蓝牙设置**。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触是以接收文件。
- 3 您可以查看文件的保存位置。对于图像文件，您可以选择**查看**文件或**用作墙纸**。文件通常保存在**我的文档**中的相应文件夹。

更改蓝牙设置：

点触“设置”选项卡中的**蓝牙**。然后选择 ，再选择**设置**。

与其它蓝牙设备配对

将您的 LG-P525 与其它设备配对，您可以设置受通行码保护的连接。

- 1 查看蓝牙是否为**开且可见**。您可以在**设置**菜单中更改可见性。
- 2 点触**搜索**。
- 3 LG-P525 将搜索设备。搜索完成时，屏幕上将显示**重试**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

Wi-Fi

通过无线管理器，您可以通过手机的 Wi-Fi（无线局域网）管理 Internet 连接。它能允许手机连接本地无线网络，或者无线访问互联网。Wi-Fi 相较于蓝牙无线技术，速度更快、覆盖范围也更广。它允许快速收发电子邮件和浏览互联网。

备注：LG-P525 支持 WEP 和 WPA/WPA2-PSK 安全。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

软件更新

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 选择国家/地区 → 支持。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。

充电器



立体声
耳机



电池



数据线



用户手册



备注

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度：+55°C（放电）+45°C（充电）

最低温度：-10°C

Declaration of Conformity



Supplier Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouide-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

LG-P525

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1 : 2001
EN 50360 : 2001 / EN62209-1 : 2006
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Haeng Lee / Director

Issued Date

20. Oct. 2010

LG Electronics Inc. -EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可能的解决方案
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，超出 GSM 网络区域。 运营商应用了新服务	将手机移到窗边或开放的区域中。检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。 如果是，请到您的网络运营商营业点处更换 SIM 卡。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	默认代码为 [0000]。如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误。 插入新 SIM 卡达到预付费限制	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。

信息	可能原因	可能的解决方案
手机无法打开	按开/关键的时间不够 电池未充电 电池触点脏	请按开/关键至少两秒钟。 充电器使用时间过长。清洁触点 取出电池并重新插入。
充电错误	电池未充电。 外部温度太热或太冷 触点问题 无电压 充电器故障 错误的充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。检查电池触点，如果需要，请清洁。 插入不同的插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。
不允许输入号码	已打开固定拨号功能。	检查设置。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
文件无法打开	不受支持的文件格式	检查可支持的文件格式
存储卡不起作用	仅支持 FAT 16 文件格式	通过读卡器检查存储卡文件系统或使用手机格式化存储卡

故障排除

信息	可能原因	可能的解决方案
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动或静音模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	取出电池并插入电池。 打开手机。 尝试通过网站执行软件更新服务。

LG-P525 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Contents

Guidelines for safe and efficient use.....	4
---	----------

Installing the SIM card and the handset battery	10
--	-----------

Installing the SIM Card	10
-------------------------------	----

Illustrations.....	10
--------------------	----

Using Dual SIM-card.....	12
---------------------------------	-----------

Phone Components.....	13
------------------------------	-----------

Using your touch screen.....	14
-------------------------------------	-----------

Touch screen tips.....	14
------------------------	----

Control the touch screen	14
-------------------------------	----

Your home screen.....	15
------------------------------	-----------

Calls.....	17
-------------------	-----------

Making a Call.....	17
--------------------	----

Making a call from your contacts	17
--	----

Changing the common call setting.....	17
---------------------------------------	----

Contacts.....	18
----------------------	-----------

Searching for a contact	18
-------------------------------	----

Adding a new contact.....	18
---------------------------	----

Changing your contact settings	18
--------------------------------------	----

Messaging	19
------------------------	-----------

Entering Text.....	20
--------------------	----

Handwriting recognition	20
-------------------------------	----

Setting up your email	20
-----------------------------	----

Changing your text message settings	20
---	----

Changing your multimedia message settings.....	21
--	----

Social network services (SNS).....	22
------------------------------------	----

Facebook (Continued SNS)..	22
----------------------------	----

Camera	23
---------------------	-----------

Taking a quick photo	23
----------------------------	----

After taking a photo.....	23
---------------------------	----

Using the advanced settings	23
-----------------------------------	----

Video camera.....	25
--------------------------	-----------

Making a quick video	25
----------------------------	----

After making a video	25
----------------------------	----

Using the advanced settings	26
-----------------------------------	----

Music	26
--------------------	-----------

Transferring music onto your phone	27
--	----

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-P525 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised

methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionising Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 0.948 W/kg (10g) and when worn on the body is 1.11 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR

limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance



WARNING: Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for safe and efficient use

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well-ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid, moisture or humidity.
- Use accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use the phone or accessories in places with high humidity such as pools, greenhouses, solariums or tropical environments, it may cause damage to the phone and invalidation of warranty.

Efficient phone operation

Electronic devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.

- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.

Guidelines for safe and efficient use

- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is a risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.


- 1 Remove the back cover.




- 2 Lift battery away.




- 3 Insert the SIM card.
Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

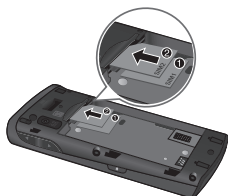

5 Attach the back cover.

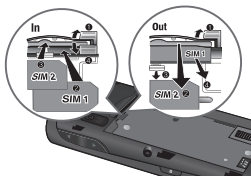


6 Charge the battery.

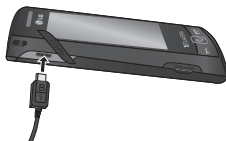

4 Insert the battery pack.



⚠ WARNING: Make sure that your SIM card has a neat and clean cut before you insert it into the holder.

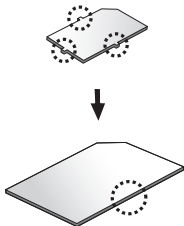

Using Dual SIM-card

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the SIMcard, press Menu and select Dual SIM settings.

TIP! You can see the network signals highlighted by background colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.

Phone Components



Earpiece

Call key

- Go to call logs.
- Dials a phone number and answers incoming calls.

Back key

Go back to a previous screen.

End key

- End or reject a call.
- Long press for power on/off.
- Come back to idle screen from menu.

Volume keys

• **When the screen is at the Home screen:**

Ring tone and touch tone volume.

• **During a call:** Earpiece volume.

• **Down volume key:**

Press and hold to activate/ deactivate Silent mode.

Lock key

- Short press to turn on/off the screen.




- Handsfree or Stereo earphone connector.
- Charger/USB cable connector.

Micro SD memory card socket

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-P525 is not in use, it will return to the lock screen.

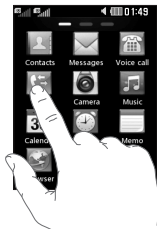

Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Control the touch screen

The controls on the LG-P525 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.



Your home screen


You can drag and click what you need right away in all home screen types.

Active



Widget home screen - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

Active

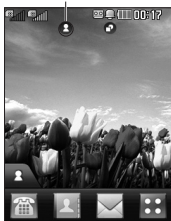

Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

Your menu screen

You can drag from side to side to scroll what you need right away in all menu screen.

To swap between the menu screens just wipe quickly over the display from left to right, or right to left.

Screen 1

You can open Contacts, Messages, Voice call, Logs, Camera, Music, Calendar, Alarms, Memo, Browser, Games and Settings modules from this screen.



Screen 2

You can open E-mail, SNS, Google search, My stuff, Messenger, Gallery, FM radio,

Voice recorder, Tasks, Profiles, Wi-Fi and Bluetooth modules from this screen.



Screen 3

You can open World clock, Calculator, Unit converter, Stopwatch, Date finder, STK (if supported by network) modules from this screen.



Calls

Making a Call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Changing the common call setting

- 1 Touch **Call settings** in the **Settings** menu.
- 2 **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers, All unknown numbers.

- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add an email addresses. You can enter up to two different email addresses per contact.
- 6 Assign the contact to one or more groups.
- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key**  and touch **Settings**.

- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts from internal memory or SIM.

Messaging

Your LG-P525 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in menu. And touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.



WARNING: If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to  change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-P525 will convert your handwriting into your message.

Setting up your email

Touch **E-mail** in Application screen.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

Social network services (SNS)

Your LG-P525 has SNS that lets you enjoy and manage your social network.

TIP: Facebook, MySpace and Twitter are java application based on Java technology.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Photos > Upload Photo**.

Friends: Search your friends in facebook by selecting Search tap.

Inbox: You can see the Inbox/ Sent folder, and write a SN message.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the  on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

The following options are available.

Touch .

Send - Touch to send the photo as a **Message**, **E-mail** or via **Bluetooth**.

Set as - Touch to set a screen image (Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image).

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.



Touch to delete the image.



Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Size - Change the size of the photo to save memory

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

Night mode - Useful to user in dark places.

Image quality - Choose between **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose **On** to check the picture you took right away.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose between **Off**, **Simple cross**, or **Trisection**.

Reset settings - Restore all camera default settings.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen to stop video recording

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides .

 Touch to play the video.

The following options are available.

Touch .

Send - Touch to send the video as a **Message**, **E-mail** or via **Bluetooth**.

Rename - Touch to rename the video.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour Effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between **Normal** and **MMS** to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

Audio recording - Choose **Mute** to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.

3 When the file is sent, you will have to accept it on your phone by touching **Yes**.

4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

Games and Applications

You can download new games and applications to your phone to keep you enjoy.

FM Radio

Your LG-P525 has an FM radio feature so you can tune into your favourite stations to listen to while on the move.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don't have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

- 1 Scroll and touch **FM radio**, and touch .
- 2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using ◀ and ▶ displayed in the centre of the screen. If you press and hold ◀ and ▶, the stations will be automatically found.

Application

Adding an event to your calendar

- 1 Touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Then select the unit and enter the value you would like to convert from.

PC Suite

You can synchronize your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

Installing LG PC Suite on your computer

- 1 Go to www.lgapplication.com
- 2 Click **Manual & Software**.
- 3 Download **LG Mobile support tool**. In LG Mobile support tool, you can select mobile sync download. Then pc suite package will be downloaded in your PC. If you unpack that file, you can install PC Suite.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.



WARNING: Do not disconnect your phone during the transfer.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

Access to Google Service

You can launch google services in this application. Touch **Google Search** in the Multimedia screen.

Settings

Personalising your profiles

You can quickly change your profile by touching the Multimedia screen.

You can personalise each profile setting using the settings menu.

- 1 Touch **Profiles**.

- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

Changing your phone settings

Use the freedom of adapting the LG-P525 to your own preferences.

From the home screen, select  then scroll to **Phone settings**.

Using memory manager

From the home screen select  then scroll to **Device settings**. Select **Memory info**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu: Touch **Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send via**. Choose **Bluetooth**.
- 3 If you have already paired the **Bluetooth** device, your LG-P525 will not automatically search for other **Bluetooth** devices. If not, your LG-P525 will search for other **Bluetooth** enabled devices within range.

4 Choose the device you want to send the file to.

5 Your file will be sent.

To receive a file:

1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.

2 A message will prompt you to accept the file from the sender. Touch Yes to receive the file.

3 You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

Touch **Bluetooth** in the SETTINGS tab. And select  and choose **Settings**.

Pairing with another Bluetooth device

By pairing your LG-P525 and another device, you can set up a passcode protected connection.

1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.

2 Touch **Search**.

3 Your LG-P525 will search for devices. When the search is completed, **Retry** will appear on screen.

4 Choose the device you want to pair with and enter the passcode, then touch **OK**.

5 Your phone will then connect to the other device, on which you will need to enter the same passcode.

6 Your passcode protected Bluetooth connection is now ready.

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-P525 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software update

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Charger



Stereo headset



Battery



Data cable



User guide



NOTE

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouide-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

LG-P525

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1/ EN 301 489-07 v1.3.1/ EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1 : 2001
EN 50360 : 2001 / EN62209-1 : 2006
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Haeng Lee / Director

Issued Date

20. Oct. 2010

LG Electronics Inc. -EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective Measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area. Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Troubleshooting

Message	Possible causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid Charge limit reached	Contact service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time
	Battery contacts are dirty	Clean the contacts.
Charging error		Take out the battery and insert again.
	Battery is not charged.	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.

Message	Possible causes	Possible Corrective Measures
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory Full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader Or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor. Make sure that the area around the proximity sensor is clean.
No Sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via WEB site.

Memo
