

## Wiring Diagram for **Pickup Models:**


**SM-1** Vintage Mini-Humbucker **SM-2** Custom Mini-Humbucker **SM-3** Seymourized Mini-Humbucker

5427 hollister avenue, santa barbara, ca 93111 tel 805.964.9610 fax 805.964.9749 www.seymourduncan.com


Congratulations on your purchase of a fine, hand-built, Seymour Duncan electric guitar pickup! Installing this pickup in your guitar isn't rocket science. And, if you're already handy with tools, it'll be a snap for you-and fun too! But if you have no experience handling red-hot soldering irons, you'd be well advised to take your new pickup and your trusty guitar to a qualified guitar tech.

## The basic steps for installation include:

- 1. Remove the strings from your guitar.
- 2. Remove the back plate and flip it over.
- 3. De-solder the original pickup's wires from the controls and make sure to remember where they were connected.
- 4. Remove the original pickup from the guitar.
- 5. Put the Seymour Duncan pickup into the guitar.
- 6. Tin the wires from the Seymour Duncan pickup, and then solder them into place (See Fig. 1). 7. Replace the back plate.
- 8. Re-string your guitar and adjust the pickup height so that your new pickup is set between 1/8" and 1/16" from the strings (when they are pressed down at the highest fret on the neck).

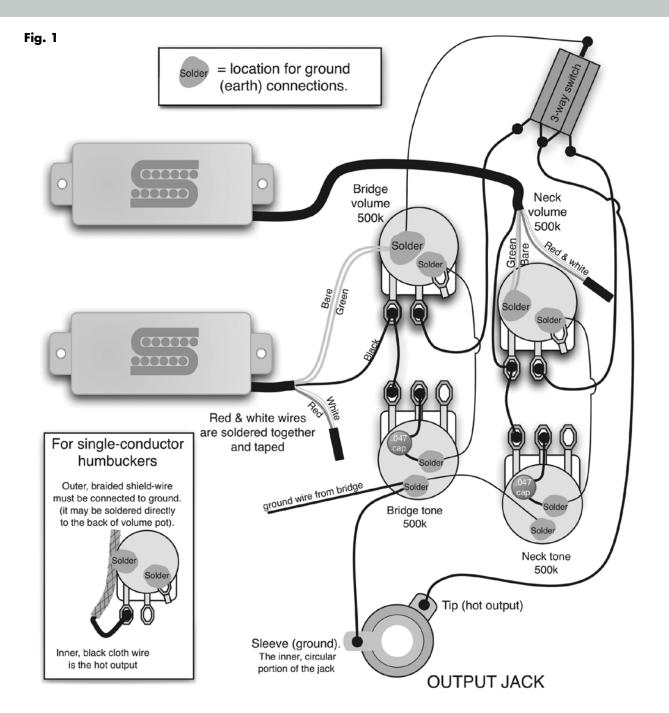

## **Additional Wiring Options**

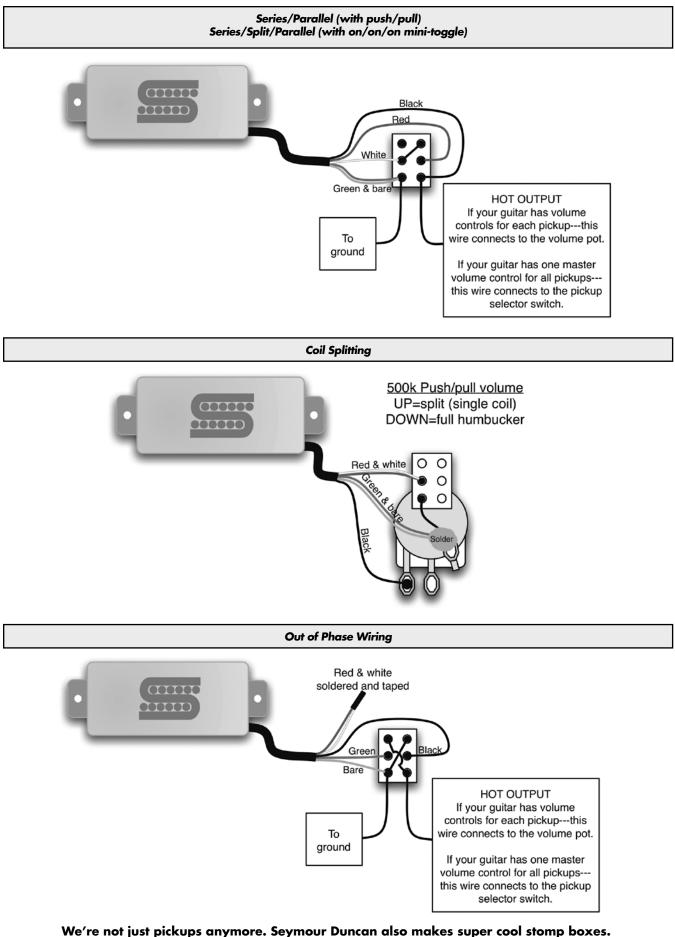

And our sister company, D-TAR, is turning out some really hip products for serious acoustic guitarists (d-tar.com).

Visit seymourduncan.com for additional wiring diagrams.