



# Parrot MINIKIT Neo 2 HD

User guide

# Content

<b>Content.....</b>	<b>2</b>
<b>Getting started.....</b>	<b>4</b>
Before you begin .....	4
Package content.....	4
Changing the language.....	4
Installing the Parrot MINIKIT Neo 2 HD .....	4
<b>Battery .....</b>	<b>5</b>
Charging the Parrot MINIKIT Neo 2 HD.....	5
Deep sleep mode .....	5
Battery life.....	5
<b>Use .....</b>	<b>6</b>
Turning the Parrot MINIKIT Neo 2 HD on / off.....	6
Navigating through the menus .....	6
Adjusting the volume for menus.....	6
<b>Connection.....</b>	<b>7</b>
Establishing a Bluetooth connection with a phone .....	7
Pairing a phone .....	7
Automatic connection.....	8
Solving the memory full problem .....	8
Using the Parrot MINIKIT Neo 2 HD with 2 phones .....	8
Activating dual mode .....	8
Connecting 2 phones to the Parrot MINIKIT Neo 2 HD.....	8
Main and secondary phones.....	8
Making and receiving Calls.....	8
Inverting main phone and secondary phone .....	9
Synchronizing the phonebook.....	9
Automatic synchronization .....	9
Recording voice tags .....	10
<b>Phone.....</b>	<b>11</b>
Receiving a call .....	11
Ringtone.....	11
Magic words.....	11
Accept a call .....	12
Reject a call .....	12
Making a call .....	12
Making a call using voice recognition .....	12
Calling a contact with several phone numbers.....	12
Calling a contact from the phonebook .....	13
Bringing up the last dialled number.....	13
Using the Siri function.....	13
Using the Parrot MINIKIT Neo 2 HD while on a call .....	13
Adjusting the volume .....	13

Transferring a call to the phone : Discreet mode .....	13
Managing a second call .....	14
Managing voice mail .....	14
Ending a call .....	14
<b>Music / GPS.....</b>	<b>15</b>
Music.....	15
GPS instructions .....	15
Adjusting the volume .....	15
<b>Troubleshooting .....</b>	<b>16</b>
The Parrot MINIKIT Neo 2 HD says «Memory full» .....	16
The Parrot MINIKIT Neo 2 HD seems to be frozen.....	16
The kit does not seem to work with my phone .....	16

# Getting started

## Before you begin

**WARNING :** All functions requiring an increased attention should only be used while the vehicle is stationary. Your safety and the one of the other road users prevails over phone calls, music and navigation instructions. Be responsible: drive carefully and pay full attention to your surrounding. Parrot denies any liability should you choose not to respect this warning.

Package content



Parrot MINIKIT Neo 2 HD



USB / micro -USB cable




Cigar-lighter charger

Changing the language

The Parrot MINIKIT Neo 2 HD language can be changed with a software update. Software update procedure is [available here](#).

Installing the Parrot MINIKIT Neo 2 HD

Use the Parrot MINIKIT Neo 2 HD clip to install it on your vehicle sun visor. While being in this position, the Parrot MINIKIT Neo 2 HD microphone is located above the jog wheel. Make sure it is pointed towards your position.

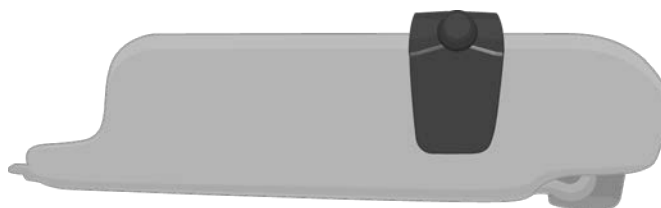

# Battery

---

## Charging the Parrot MINIKIT Neo 2 HD

- The Parrot MINIKIT Neo 2 HD must be fully charged before being used for the first time. To do so, plug the charger into your vehicle's cigar lighter and connect the USB / micro-USB cable to the charger and to the kit. You can also use the USB / micro-USB cable to connect the Parrot MINIKIT Neo 2 HD to your computer.



- During charging, the battery indicator light turns red. When the light goes out, the charge is complete.
- The charging time is approximately 3.5 hours.
- Slide the On / Off button forward to check the Parrot MINIKIT Neo 2 HD battery level.

## Deep sleep mode

- If the Parrot MINIKIT Neo 2 HD has not been connected to any phone for 5 minutes, it automatically switches to deep sleep mode. To exit deep sleep mode, press any button or connect your phone to the Parrot MINIKIT Neo 2 HD
- If you leave the Parrot MINIKIT Neo 2 HD in your vehicle without turning it off, the Parrot MINIKIT Neo 2 HD will switch to deep sleep mode. Thanks to its vibration detector, the Parrot MINIKIT Neo 2 HD will automatically exit deep sleep mode when you get back into your vehicle and close its door. If *Bluetooth* is activated on your phone, the connection between both devices will be automatically established.

## Battery life

- The battery can last up to:
  - 6 hours in conversation
  - 15 days with 2 connected phones (without communication)
  - 6 months in deep sleep mode.
- When battery level is low, a voice prompt is played. It will then beep every minute before turning off or being recharged.
- When the magic words for outgoing calls are activated, the Parrot MINIKIT Neo 2 HD does not switch to sleep mode. The battery life is thus reduced.

# Use

---

Turning the Parrot MINIKIT Neo 2 HD on / off

Slide the On / Off button backward to turn the Parrot MINIKIT Neo 2 HD on / off.  
> The red and green lights remain on while the Parrot MINIKIT Neo 2 HD starts.

Navigating through the menus

- Press the jog wheel to access the main menu.
- Browse through the menus by turning the jog wheel and confirm by pressing the green button or the jog wheel.  
> The red and green lights flash alternately when browsing the menus.
- To exit the menu, press the red button or wait for a few seconds.

Adjusting the volume for menus

- The Volume menu allows you to adjust the menus and other indications volume said by the Parrot MINIKIT Neo 2 HD.
  1. Select **Volume**.
  2. Turn the jogwheel to adjust the volume.
  3. Confirm by pressing the jogwheel.

# Connection

## Establishing a Bluetooth connection with a phone

### Pairing a phone

Before using the Parrot MINIKIT Neo 2 HD with your phone, you first have to pair both devices. The pairing process is only required once.

1. From your *Bluetooth* phone, search for *Bluetooth* peripherals (refer to the user guide of your phone for more information).
2. Select «**Parrot MINIKIT Neo 2 HD**».

*Note: The Bluetooth name of the Parrot MINIKIT Neo 2 HD ends with its software version number.*



3. Enter the “0000” PIN code and validate.
  - > The red and green lights flash
  - > The Parrot MINIKIT Neo 2 HD says «Pairing successful» when both devices are paired.

*Note: Pairing procedures for the most common phones are available on the [compatibility section of our website](#).*

Automatic connection    Once your phone is paired to the Parrot MINIKIT Neo 2 HD, the connection between both devices will be automatically established if:

- Both products are on.
- Your Parrot MINIKIT Neo 2 HD is near your phone.
- The *Bluetooth* connection of your phone is activated.

***Note:** Depending on the model of your phone, you may have to authorize the connection to the Parrot MINIKIT Neo 2 HD to allow the automatic connection. Refer to your phone user guide for more information.*

Solving the memory full problem

You can pair up to ten devices with the Parrot MINIKIT Neo 2 HD. If you attempt to pair an eleventh phone, the kit says «memory full». You must then clear the memory by holding down both the red and green buttons for 3 seconds. Doing so also clears all the contacts.

## Using the Parrot MINIKIT Neo 2 HD with 2 phones

---

Dual mode allows you to simultaneously connect two phones to the Parrot MINIKIT Neo 2 HD.

Activating dual mode

To activate dual mode :

1. Select **Dual mode**.
2. Press the jogwheel.
  - > The Parrot MINIKIT Neo 2 HD confirms the dual mode new status.

***Note:** Dual mode is deactivated by default.*

Connecting 2 phones to the Parrot MINIKIT Neo 2 HD

When the Parrot MINIKIT Neo 2 HD is switched on, it attempts to connect to all paired phones in the vehicle. If there are more than two paired phones in the vehicle, the device connects to the two phones with the oldest pairing.

Main and secondary phones

- When two phones are connected to the Parrot MINIKIT Neo 2 HD, one of them becomes the main phone and the other is the secondary phone.
- By default, the main phone is the one with the oldest pairing to the Parrot MINIKIT Neo 2 HD.

Making and receiving

- You can receive calls (manually or through voice recognition) from the main or secondary phones. The Parrot MINIKIT Neo 2 HD ringtone



Calls

varies according to the phone receiving the call.

- Only the phonebook of your main phone may be accessed through the Parrot MINIKIT Neo 2 HD. You can only make calls using your main phone. However you can easily switch between the connected phones by holding down the jogwheel for two seconds.
- If you receive a call on one of the phones while you are already on a call with the other phone, only the phone receiving a call will ring. This new call can only be picked up on the phone.

Inverting main phone and secondary phone

To define the secondary phone as your main phone temporarily (and make your main phone the new secondary phone), hold down the jog wheel for two seconds.  
> The Parrot MINIKIT Neo 2 HD says the *Bluetooth* name of the new main phone.

## Synchronizing the phonebook

---

**Warning:** Only the contacts stored in the memory of your phone will be synchronized in the Parrot MINIKIT+ memory. If your contacts are stored in your SIM card memory, move them into your phone memory. Refer to your phone user guide for more information.

Automatic synchronization

- With most of the *Bluetooth* phones, the phonebook is automatically synchronized in the kit's memory. Contacts stored in the phone and SIM card are synchronised. Refer to the [compatibility section](#) of our website for more information.  
> The Parrot MINIKIT Neo 2 HD says « Synchronization successful »
- Depending on the model of your phone, a confirmation may be necessary :
  - On Blackberry® phones a pop-up **Accept connection request** may be displayed. If so select **Yes** and check the **Don't ask me again** box.
  - On Android® phones a message may appear in the notifications area at the top of the screen. If so, accept the transfer request.
- Automatic synchronization is limited to 2.000 contacts per paired phone even if contacts have several associated numbers.
- Each time the phonebook is modified, synchronization will start automatically the next time you restart the Parrot MINIKIT Neo 2 HD.

## Recording voice tags

All your contacts, after automatic synchronization, are directly provided with a voice tag in the Parrot MINIKIT Neo 2 HD. Consequently, you don't have to record your own voice tag on each contact to make a call via the voice recognition process.

However, if the Parrot MINIKIT Neo 2 HD doesn't understand the name of one of your contacts or if a voice tag is too long, you can record a new one. To do so:

1. Select **Add voice tags**.
  - > The Parrot MINIKIT Neo 2 HD says **Phonebook**.
2. Select a letter and press the jogwheel.
3. Select the contact and press the jogwheel.
  - > The Parrot MINIKIT Neo 2 HD says « Say the contact's name ».
4. Pronounce the name of the contact chosen.
  - > The Parrot MINIKIT Neo 2 HD says « Recording successful ».

Before using your Parrot MINIKIT Neo 2 HD phone function, you first have to pair and connect both devices.

► Refer to the [Pairing a phone](#) section for more information.

## Receiving a call

---

### Ringtone

- An incoming call is indicated by a ringtone. The name of the caller is announced if his number is recorded in the phonebook of the phone connected to the Parrot MINIKIT Neo 2 HD.
- If you are using the Parrot MINIKIT Neo 2 HD with 2 phones the ringtone will be different depending on the phone on which you are receiving a call.

*Note: If your phone supports the sending of its ringtone by Bluetooth, the ringtone is played on the Parrot MINIKIT Neo 2 HD.*

### Magic words

- To adjust the ringtone volume, use the jogwheel while the Parrot MINIKIT Neo 2 HD is ringing.
- Magic words are activated by default. To activate / deactivate magic words, select **Magic words** and press the jog wheel.
- To activate / deactivate the magic words for incoming calls:
  1. Select **Magic words**.
  2. Press the jogwheel.
    - > The Parrot MINIKIT Neo 2 HD says « Magic words for incoming calls activated/deactivated ».
  3. Press the jogwheel.
    - > A prompt indicating the magic words status for incoming calls is said.
- To activate / deactivate the magic words for outgoing calls:
  1. Select **Magic words**.

2. Press the jogwheel.
  - > The Parrot MINIKIT Neo 2 HD says « Magic words for incoming calls activated/deactivated ».
3. Turn the jogwheel.
  - > The Parrot MINIKIT Neo 2 HD says « Magic words for outgoing calls activated/deactivated ».
4. Press the jogwheel.
  - > A prompt indicating the magic words status for outgoing calls is said.

- Magic words must be said at the end of the prompt indicating the incoming call.

Accept a call

If you want to answer the call, press the green button or say **“Accept”** if the magic words are activated.

Reject a call

If you want to refuse this call, press the red button or say **“Reject”** if the magic words are activated.

## Making a call

---

Making a call using voice recognition

1. Press the green button or say **“Minikit”** if the magic words for outgoing calls are activated.
  - > The Parrot MINIKIT Neo 2 HD asks you the name of the contact you want to call.
2. Say the name of the contact and the type of number (**“Work”**, **“Cellphone”** ...) if there are several numbers associated to your contact.
  - > The call is automatically launched if the voice tag is correctly understood. If it is not the case, a confirmation message is asked by the kit. Confirm by saying **«Yes»** or **«Call»**.
  - > You can also say **«Cancel»** to cancel the call.

*Note: At any time press the red button to exit voice recognition, notably when you want to cancel your action.*

Calling a contact with several phone numbers

- If there are several phone numbers associated to the contact you want to call, you can specify the type of number.

- To do so, the following vocal commands are available:

- |           |                 |                     |             |
|-----------|-----------------|---------------------|-------------|
| - Home    | - Work          | - Mobile            | - Other     |
| - At home | - At work       | - Cellular          | - General   |
|           | - Office        | - Cell              | - Default   |
|           | - At office     | - On mobile         | - Preferred |
|           | - At the office | - On cellular       |             |
|           |                 | - On cell           |             |
|           |                 | - On mobile phone   |             |
|           |                 | - On cellular phone |             |
|           |                 | - On cell phone     |             |
|           |                 | - Mobile phone      |             |
|           |                 | - Cellular phone    |             |
|           |                 | - Cell phone        |             |

Calling a contact from the phonebook

If the contact you want to call is in the phonebook of the phone connected to the Parrot MINIKIT Neo 2 HD:

1. Press the jog wheel to enter the main menu and select **Phonebook**.
2. Select a letter and press the jog wheel.
  - > Once the contact chosen:
    - press the green button to call this contact
    - or use the jog wheel to choose between different numbers of the same contact.

Bringing up the last dialled number

Hold down the green button of the Parrot MINIKIT Neo 2 HD for two seconds to redial the last dialled number.

Using the Siri function

If you are using the Parrot MINIKIT Neo 2 HD with an iPhone supporting the Siri function, say the magic word **“Hello Siri”** to launch the iPhone voice recognition and the corresponding application.

## Using the Parrot MINIKIT Neo 2 HD while on a call

---

Adjusting the volume

Use the jog wheel during a call to adjust the communication volume.  
> The volume setting is saved for subsequent calls.

*Note: A different volume level can be saved for each paired phone.*

Transferring a call to the phone : Discreet mode

- During a call, if you want to continue the conversation on your phone (private conversation), press the green button of the Parrot MINIKIT Neo 2 HD.
  - > The call is automatically transferred to the phone.
  - > The Parrot MINIKIT Neo 2 HD says “Discreet mode”.

- If you want to switch back to the kit, press the green button again.

#### Managing a second call

During a call, you can receive another call if your phone supports this functionality.

- Press the green button to accept the second incoming call.
  - > The first call is automatically put on hold.
- Press the red button to decline the second incoming call.  
You can also hang up directly from your phone.
- Press the green button to switch from a call to another.

#### Using the HD voice function

The HD Voice function optimizes audio communication clarity by reducing background noise.

To use this function, your telephone, your contact's telephone and the network you are using must be HD Voice compatible.

#### Managing voice mail

During a call, the Parrot MINIKIT Neo 2 HD allows you to send DTMFs to manage your voice mail for example. To do so :

1. Press the jog wheel to access the DTMF menu.
2. Use the jog wheel to select your DTMF between the following possibilities : 0,1,2,3,4,5,6,7,8,9,# or \*.
3. Press the jog wheel to send this DTMF to your phone.

#### Ending a call

Press the red button to end a call.

# Music / GPS

## Music

- You can use the Parrot MINIKIT Neo 2 HD to listen to songs stored on your mobile phone or *Bluetooth* audio device. To do so, your phone / audio device must support the *Bluetooth* A2DP profile (Advanced Audio Distribution Profile).
- Phone calls always have priority over music. If you receive a call while streaming music, music will be paused.

## GPS instructions

If your phone supports the GPS feature and if it can send the navigation instructions via *Bluetooth* (A2DP profile), the navigation instructions will be played by the Parrot MINIKIT Neo 2 HD.

*Note: Depending on your GPS application, navigation instructions may not be played while you are on a call.*

## Adjusting the volume

- To adjust music or GPS instructions volume, use the jogwheel while an instruction is given or music is being played.
- A different volume level may be saved for each paired phone.

# Troubleshooting

- |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The Parrot MINIKIT Neo 2 HD says «Memory full» | You can pair up to ten devices. If you attempt to pair an eleventh phone, the kit says «memory full». You must then clear the memory by holding down both the red and green buttons for three seconds. Doing so also clears all the contacts.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| The Parrot MINIKIT Neo 2 HD seems to be frozen | In case of malfunction, you can reboot the Parrot MINIKIT Neo 2 HD. To do so, press the red button while sliding the On / off button forward (as if you were checking the battery level).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| The kit does not seem to work with my phone    | <ul style="list-style-type: none"><li data-bbox="558 862 1406 974">• Make sure your phone is compatible with the Parrot MINIKIT Neo 2 HD. To do so, refer to the <a href="#">compatibility list</a> of the Parrot MINIKIT Neo 2 HD available on our website.</li><li data-bbox="558 996 1406 1223">• If your phone is compatible with the Parrot MINIKIT Neo 2 HD, make sure you have the latest software version on your Parrot MINIKIT Neo 2 HD. To find out the software version of your Parrot MINIKIT Neo 2 HD, check the name by which it is seen by other Bluetooth devices. To find out the latest software version available, download the update file and consult the update procedure, <a href="#">refer to our website</a>.</li></ul> |



# Parrot MINIKIT Neo 2 HD



Quick Start Guide

Guide de démarrage rapide

Guía de utilización rápida

快速入門指南


快速入门指南

Guia de início rápido

הלעפהל ריהמ רירדם



PI032002AA

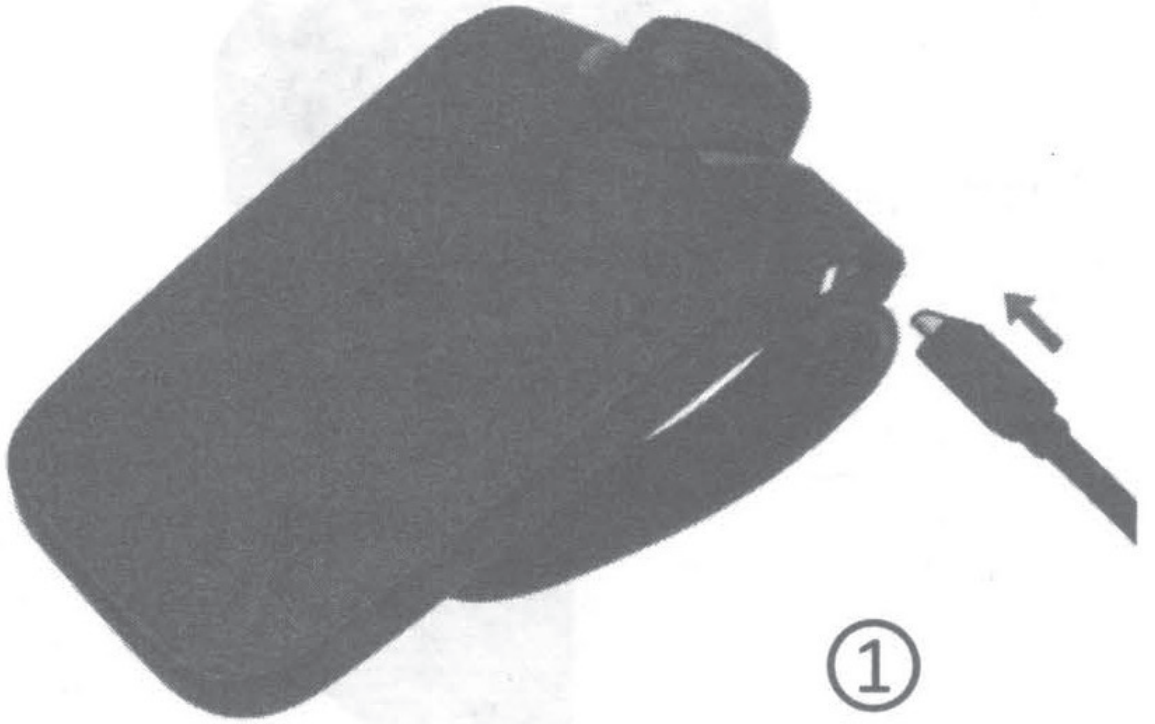

①



②



# QUICK START GUIDE

## BEFORE YOU BEGIN

### About this guide

In order to limit our paper consumption, and as part of our environmentally friendly and responsible approach, Parrot prefers to put user documents online rather than print them out. This simplified guide to the Parrot MINIKIT Neo 2 HD is therefore limited to providing you with the main instructions that will make it easy for you to use the device. More information can be found in the Parrot MINIKIT Neo 2 HD complete user guide on the Support & Download section of our website [www.parrot.com](http://www.parrot.com).

### Warning

If your Parrot MINIKIT Neo 2 HD gets out of reach while driving, stop the vehicle in a safe location before picking or hanging up a call. All functions requiring an increased attention should only be used while the vehicle is stationary . Your safety and the one of the other road users prevails over phone calls. Be responsible: drive carefully and pay full attention to your surroundings. Parrot denies any liability should you choose not to respect this warning.

### Software update

Download the latest update for free (and check the update procedure) on our website [www.parrot.com](http://www.parrot.com), in the Support

section. These updates will enable you to receive new features and improve the product's compatibility.

## **Downloading the application**

Connect to the App Store<sup>SM</sup> or Google Play<sup>TM</sup> and download the MINIKIT Neo 2 app free of charge.

# **GETTING STARTED**

## **Charging the Parrot MINIKIT Neo 2 HD**

The Parrot MINIKIT Neo 2 HD must be fully charged before being used for the first time. To do so, plug the charger into your vehicle's cigar lighter and connect the USB / micro-USB cable to the charger and to the kit (diagram 1). You can also use the USB / micro-USB cable to connect the Parrot MINIKIT Neo 2 HD to your computer.

*Note : During charging, the battery indicator light turns red. When the light goes out, the charge is complete.*

When the battery level is low, a voice prompt is played.

*Note : Slide the On / Off button forward to check the Parrot MINIKIT Neo 2 HD battery level.*

## **Installing the Parrot MINIKIT Neo 2 HD**

Use the Parrot MINIKIT Neo 2 HD clip to install it on your vehicle sun visor (diagram 2). While being in this position, the Parrot MINIKIT Neo 2 HD microphone is located above the jog wheel. Make sure it is pointed towards your position.

## Turning the Parrot MINIKIT Neo 2 HD on / off

Slide the On / Off button backward to turn the Parrot MINIKIT Neo 2 HD on / off.

## Sleep mode

If there is no phone connected to the Parrot MINIKIT Neo 2 HD for 5 minutes, the Parrot MINIKIT Neo 2 HD automatically switches to sleep mode. To exit sleep mode, press any button or connect your phone to the Parrot MINIKIT Neo 2 HD.

If you leave the Parrot MINIKIT Neo 2 HD in your vehicle without turning it off, the Parrot MINIKIT Neo 2 HD will switch to deep sleep mode. Thanks to its vibration detector, the Parrot MINIKIT Neo 2 HD will automatically exit deep sleep mode when you get back into your vehicle.

## Navigating through the menus

Press the jog wheel to access the main menu.

Browse through the menus by turning the jog wheel and confirm by pressing the green button or the jog wheel.

To exit the menu, press the red button or wait for a few seconds.

## Pairing a phone by Bluetooth

Before using the Parrot MINIKIT Neo 2 HD with your phone, you first have to pair both devices. The pairing process is only required once.

1. From your *Bluetooth*® phone, search for *Bluetooth* peripherals.



2. Select “Parrot MINIKIT Neo 2 HD”
3. Enter the “0000” PIN code and validate.
  - > The Parrot MINIKIT Neo 2 HD says «Pairing successful» when both devices are paired.
  - > Depending on the model of your phone, the connection will then be automatic as soon as your phone is close enough to the Parrot MINIKIT Neo 2 HD.

## Connection

Once your phone is paired to the Parrot MINIKIT Neo 2 HD, the connection between both devices will be automatically established each time the Parrot MINIKIT Neo 2 HD is turned on. If you leave the Parrot MINIKIT Neo 2 HD in deep sleep mode in your vehicle, the Parrot MINIKIT Neo 2 HD will automatically exit deep sleep mode when you get back into your vehicle thanks to its vibration detector.

If you want to connect a 2nd phone to the Parrot MINIKIT Neo 2 HD, activate the Dual mode option. When two phones are connected to the Parrot MINIKIT Neo 2 HD at the same time, you can always answer an incoming call on either phone. But only the phonebook of the phone with the oldest pairing to the Parrot MINIKIT Neo 2 HD may be accessed through the kit. However you can easily switch between the connected phones by holding down the jog wheel for two seconds.

## Synchronising the phonebook

With most of the Bluetooth phones, the phonebook is automatically synchronized in the kit memory. Only the contacts stored in the phone memory are synchronized. If your

contacts are stored in your SIM card memory, transfer them onto your phone memory.

*Note: Depending on the model of your phone, you may have to confirm the phonebook synchronisation on your phone.*

All your contacts after automatic synchronization process are directly provided with a voice tag in the Parrot MINIKIT Neo 2 HD. Consequently, you don't have to record your own voice tag on each contact to make a call via the voice recognition process.

## TELEPHONE FUNCTION

*Note : To activate / deactivate the magic words, select Magic words and press the jog wheel.*

### Receiving a call

An incoming call is indicated by a ringtone. The name of the caller is announced if his number is recorded in the phonebook of the phone connected to the Parrot MINIKIT Neo 2 HD.

If you want to answer the call, press the green button or say **"Accept"** if the magic words for incoming calls are activated.

If you want to refuse this call, press the red button or say **"Reject"** if the magic words for incoming calls are activated.

### Making a call

To make a call via voice recognition :

1. Press the green button or say **“Minikit”** if the magic words for outgoing calls are activated.
  - > The Parrot MINIKIT Neo 2 HD asks you the name of the contact you want to call.
2. Say the name of the contact and the type of number (**“Work”**, **“Cellphone”**...) if there are several numbers associated to your contact.
  - > The call is automatically launched if the voice tag is correctly understood.
  - > If it is not the case, a confirmation message is asked. Confirm by saying **“Yes”** or **“Call”**.
  - > You can also say **“Cancel”** to cancel the call.

*Note : If you are using the Parrot MINIKIT Neo 2 HD with an iPhone supporting the Siri function, say the magic word «Hello Siri» to launch phone voice recognition and the corresponding application.*

Hold down the green button to redial the last dialled number.

## **Using the Parrot MINIKIT Neo 2 HD while on a call**

Use the jogwheel during a call to adjust the communication volume. The volume setting is saved for subsequent calls.

During a call, if you want to continue the conversation on your phone (private conversation), press the green button.

The Parrot MINIKIT Neo 2 HD allows you to send DTMF while on call. To do so, press the jog wheel. Then use the jog wheel to select the DTMF and press the jog wheel to confirm.



## Navigation instructions

If your phone supports the GPS feature and if it can send the navigation instructions via *Bluetooth* (A2DP profile), the navigation instructions will be played by the Parrot MINIKIT Neo 2 HD.

*Note: Navigation instructions are not played by the Parrot MINIKIT Neo 2 HD during a call.*

To modify the navigation instructions volume, use the jog wheel while an instruction is given.

## TROUBLESHOOTING

**The Parrot MINIKIT Neo 2 HD says «Memory full»**

You can pair up to ten devices. If you attempt to pair an eleventh phone, the kit says «memory full». You must then clear the memory by holding down both the red and green buttons for three seconds. Doing so also clears all the contacts on the memory of the kit. You will then need to pair again both devices.

**The Parrot MINIKIT Neo 2 HD seems to be frozen**

In case of malfunction, you can reboot the Parrot MINIKIT Neo 2 HD. To do so, press the red button while sliding the On / off button forward (as if you were checking the battery level).

**The kit does not seem to work with my phone**

Make sure your phone is compatible with the Parrot MINIKIT Neo 2 HD. To do so, refer to the compatibility list of the Par-

rot MINIKIT Neo 2 HD available on our website [www.parrot.com](http://www.parrot.com), in the Support section.

If your phone is compatible with the Parrot MINIKIT Neo 2 HD, make sure you have the latest software version on your Parrot MINIKIT Neo 2 HD. To find out the software version of your Parrot MINIKIT Neo 2 HD, check the name by which it is seen by other *Bluetooth* devices. To find out the latest software version available, download the update file and consult the update procedure, refer to our website [www.parrot.com](http://www.parrot.com), Support section.

## GENERAL INFORMATION

### Warranty

Without prejudice of legal warranty, Parrot products are warranted during 1 year from the date of purchase for defects in materials and workmanship, provided that no deterioration to the product has been made, and upon presentation of proof of purchase (date of purchase, location of sale and product serial number) to the retailer. Warranty does not cover: upgrading of the software items of the Parrot products with *Bluetooth*® cell phones for compatibility purpose, data recovery, deterioration of the external aspect due to normal use of the product, any damage caused by accident, misuse, misapplication, or non-Parrot products. Parrot is not responsible for storage, loss or damaged to data during transit or repair. Any product wrongfully declared to be defective will be returned to sender and inspection, process and carriage costs will be invoiced to him.

## **Information relating to the battery and to the charger - Safety precautions**

Only use the cigar-lighter adaptable charger provided. Never use a damaged charger. Remember to charge the device before storing for a long period of time. Do not leave your device in hot or cold areas (car in direct sunlight or parked in a garage in winter). Always store in area where temperatures remain stable. The charger and the device can become hot during charging. Do not cover. Do not use your device under the rain or in/near any damp area. Do not disassemble the device. In the event of battery leakage, avoid contact of the liquid with skin and eyes. If contact occurs, rinse affected areas with plenty of water and contact a doctor.

## **Correct disposal of This Product (Waste Electrical & Electronic Equipment)**

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contract their supplier and the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

## Modifications

The explanations and specifications in this guide are given for information purposes only and may be modified without prior notice. They are deemed to be correct at time of going to press. The utmost care has been taken when writing this guide, as part of the aim to provide you with accurate information. However, Parrot shall not be held responsible for any consequences arising from any errors or omissions in the guide, nor for any damage or accidental loss of data resulting directly or indirectly from the use of the information herein. Parrot reserves the right to amend or improve the product design or user guide without any restrictions and without any obligation to notify users. If so, a later version of this guide might be available in electronic format.

## FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used

in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

<http://www.parrot.com/ce/?minikit-neo-2-hd>

Copyright © 2014 Parrot. All Rights Reserved.

## Registered Trademarks

Parrot and the Parrot logo are registered trademarks of PARROT SA.

The Bluetooth word mark is are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Parrot S.A. is under license.

App Store is a service mark of Apple Inc. Google Play and Android are trademarks of Google Inc.

All other trademarks mentioned in this guide are protected and are the property of their respective owners.

