Panasonic ideas for life

Spec File



Product Number: PT-LX26H

Product Name: LCD Projector

PT-LX26H LCD Projector

Specifications

Main unit

100-240 V AC, 50/60 Hz Power supply

Power consumption 297 W

(0.47 W when STANDBY MODE set to ECO,*1 8.6 W when STANDBY MODE set

to NETWORK)

LCD panel Panel size 14.0 mm (0.55 inches) diagonal (4:3 aspect ratio)

> Display method Transparent LCD panel (x 3, R/G/B)

Pixels $786,432 (1,024 \times 768) \times 3$, total of 2,359,296 pixels

Pixel configuration Stripe

Lens Manual zoom (1:1-1.2:1), manual focus F 2.10-2.25, f 19.11-22.94 mm

Throw ratio 1.7 - 2.0:1

YPBPR (YCBCR)

230 W UHM lamp Lamp

0.76-7.62 m (30-300 inches) diagonally, 4:3 aspect ratio Screen size

Colors Full color (16,777,216 colors) Brightness*2 2,600 lumens (LAMP MODE: HIGH)

Center-to-corner uniformity*2 85%

Contrast*2 2,500:1 (full on / full off) (LAMP MODE: HIGH, with iris on)

Resolution 1,024 × 768 pixels (Input signals that exceed this resolution will be

converted to 1,024 × 768 pixels.)

Scanning frequency **RGB** fh: 15 kHz-100 kHz, fv: 50 Hz-100 Hz, dot clock: 140 MHz or lower

(Signals above 140 MHz are downsampled.)

480i (525i): fH 15.75 kHz; fv 60 Hz, 576i (625i): fн 15.63 kHz; fv 50 Hz, fн 31.50 kHz; fv 60 Hz, 480p (525p): 576p (625p): fH 31.25 kHz; fv 50 Hz, 720 (750)/60p: fн 45.00 kHz; fv 60 Hz, 720 (750)/50p: fH 37.50 kHz; fv 50 Hz,

1080 (1125)/60i: fH 33.75 kHz; fv 60 Hz, 1080 (1125)/50i: fh 28.13 kHz; fv 50 Hz

Video/S-Video fh: 15.75 kHz, fv: 60 Hz [NTSC/NTSC4.43/PAL-M/PAL60]

fh: 15.63 kHz, fv: 50 Hz [PAL/PAL-N/SECAM]

Optical axis shift 6:1 (fixed)

Keystone correction range Vertical: ±30° (±20° with Real-Time Keystone) Installation Ceiling/desk, front/rear (menu selection)

Built-in speaker Size 3.2 cm (1-1/4 inches) (round) \times 1

> 1 W (monaural) Output power

Terminals COMPUTER (RGB) 1 IN D-sub HD 15-pin (female) × 1

> R, G, B G: 0.7 Vp-p (1.0 Vp-p for sync on G), 75 ohms;

> > B, R: 0.7 Vp-p, 75 ohms;

HD/VD, SYNC: high impedance, TTL (positive/negative) NOTE: SYNC/HD and VD terminals do not accept tri-level sync signals.

Y, PB (CB), PR (CR) Y: 1.0 Vp-p (including sync signal);

Рв (Св), Pr (Сr): 0.7 Vp-p, 75 ohms

S-Video Y: 1.0 Vp-p; C: 0.286 Vp-p, 75 ohms

NOTE: D-sub to S-Video adaptor cable ET-ADSV is required.

COMPUTER (RGB) 2 IN / 1 OUT

R, G, B D-sub HD 15-pin (female) × 1

> (input/output selectable using on-screen menu) G: 0.7 Vp-p (1.0 Vp-p for sync on G), 75 ohms;

B, R: 0.7 Vp-p, 75 ohms;

HD/VD, SYNC: high impedance, TTL (positive/negative) NOTE: SYNC/HD and VD terminals do not accept tri-level sync signals.

VIDEO IN RCA pin × 1, 1.0 Vp-p, 75 ohms

COMPUTER AUDIO IN M3 (L, R) \times 1, 0.5 Vrms

VIDEO/S-VIDEO AUDIO IN

RCA \times 2 (L/R \times 1), 0.5 Vrms

SERIAL IN D-sub 9-pin (male) × 1, for external control (RS-232C compliant) LAN RJ-45 × 1, for network connection, 100Base-TX/10Base-T, compliant

with PJLink™

PT-LX26H LCD Projector

Power cord length 2.0 m (6 ft 7 in) Molded plastic Cabinet materials

349 mm × 105 mm*4 × 247 mm*5 Dimensions (W \times H \times D) $(13-3/4 \times 4-5/32^{*4} \times 9-3/4^{*5} \text{ inches})$

Weight Approximately 2.99 kg (6.6 lbs)

Operation noise 37.0 dB (LAMP MODE: HIGH), 34.1 dB (LAMP MODE: NORMAL),

> 29.0 dB (LAMP MODE: ECO) 5-35 °C (41-95 °F)

Operating temperature Operating humidity 20%-80% (no condensation)

Remote control unit

Power supply 3 V DC (R03/LR03/AAA type battery \times 2)

Operation range*6 Approximately 7 m (23 ft) when operated from directly in front of the

signal receptor

Dimensions (W \times H \times D) $52 \times 110 \times 18 \text{ mm} (2-1/16 \times 4-11/32 \times 23/32 \text{ inches})$

Weight Approx. 67 g (2.4 oz) (including batteries)

Supplied accessories

Power cord with security lock (x 1) (x 2 for PT-LX26HEA)

Wireless remote control unit (x 1)

Batteries for remote control (R03/AAA type \times 2)

VGA cable (x 1)

Software CD-ROM (Logo Transfer Software, Multi Projector Monitoring

and Control Software) (x 1)

Filter cover (x 1)

Optional accessories

Bracket assembly

ET-LAL100 Replacement lamp unit Replacement filter unit ET-RFL100

Ceiling mount bracket ET-PKV100H (for high ceilings)

ET-PKV100S (for low ceilings)

ET-PKL100B

ET-ADSV D-sub to S-Video adaptor cable


Weights and dimensions shown are approximate. Specifications subject to change without notice.

- *1 When the standby mode is set to eco, network functions such as power on over the LAN network will not operate. Also, only certain commands can be received for external control using the serial terminal.
- *2 Measurement, measuring conditions, and method of notation all comply with ISO 21118 international standards.
- *3 WUXGA resolution is supported only when the signals are compliant with VESA CVT-RB (Coordinated Video Timing-Reduced Blanking).
- *4 With legs at shortest position.
- *5 Protruding parts not included.


SFL11M016-1

*6 Operation range differs depending on environments.


Dimensions

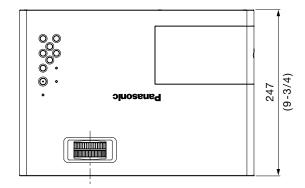

unit : mm (inch)
NOTE: This illustration is not drawn to scale.

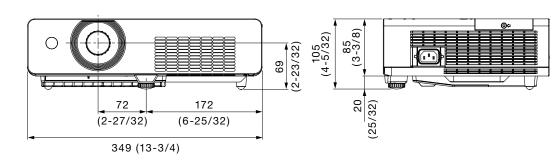


Terminals

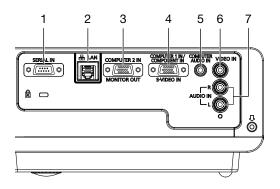

- 1 Serial input
- 2 LAN connector
- 3 Computer 2 input / computer 1 output
- 4 Computer 1 input
- 5 Audio input for computer
- 6 Video input
- 7 Audio input for video

Standard setting-up position

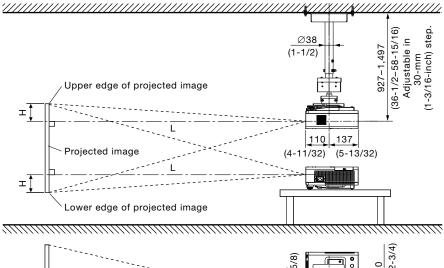

unit : mm (inch)

(2-3/4)(2-5/8) Projected image 100 100 (3-15/16)(3-15/16) 200 (7-7/8)

Illustrations show the projector installed using optional ceiling mount bracket ET-PKV100H and bracket assembly ET-PKL100B.

This illustration is not drawn to scale.

Caution:

- All construction work should be done by a qualified technician.
- When mounting to the ceiling, use the special mounting bracket. To prevent the projector from swaying or dropping, attach the wire that is included with the projector between the mounting bracket and the ceiling.

Projection distance for 4:3 aspect ratio screen

unit: meters (feet)

Projection size	Min	•	on distance [L]		Height from the edge of screen to center of lens [H]
[diagonal]	IVIII	[wide]	wax [le	lephoto]	
0.76 m / 30"	1.0	(2.9)	1.2	(3.5)	0.07 (0.21)
1.02 m / 40"	1.4	(3.9)	1.6	(4.7)	0.09 (0.29)
1.27 m / 50"	1.7	(4.9)	2.0	(5.9)	0.11 (0.36)
1.52 m / 60"	2.0	(5.9)	2.5	(7.1)	0.13 (0.43)
1.78 m / 70"	2.4	(6.9)	2.9	(8.3)	0.15 (0.50)
2.03 m / 80"	2.7	(7.9)	3.3	(9.5)	0.17 (0.57)
2.29 m / 90"	3.1	(8.9)	3.7	(10.7)	0.20 (0.64)
2.54 m / 100"	3.4	(9.9)	4.1	(11.9)	0.22 (0.71)
3.05 m / 120"	4.1	(11.9)	4.9	(14.3)	0.26 (0.86)
3.81 m / 150"	5.2	(14.8)	6.2	(17.8)	0.33 (1.07)
5.08 m / 200"	6.9	(19.8)	8.3	(23.8)	0.44 (1.43)
6.35 m / 250"	8.6	(24.8)	10.3	(29.8)	0.54 (1.79)
7.62 m / 300"	10.3	(29.8)	11.0*	(36.1)*	0.65 (2.14)

* Lens performance cannot be guaranteed for projection sizes larger than 11.0 m (36.1 ft).

NOTE:

- The value for L (distance to screen) varies slightly depending on the zoom lens characteristics.
- At the shortest projection distance, the zoom lens characteristics may cause slight image distortion.

Calculation of the projection distance

For a screen size different from the above, use the equation below to calculate the projection distance.

Aspect ratio 4:3

minimum L (m) = (diagonal screen size in inches) \times 0.0345 - 0.0233 maximum L (m) = (diagonal screen size in inches) \times 0.0414 - 0.0237

NOTE:


Distances calculated with the above equations will include a slight error.

Installable angle

Install the projector at an angle within the range shown below.


• Vertical direction

The projector may be installed at a vertical angle of 30°.

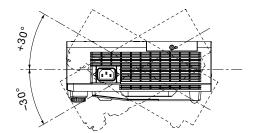

• Horizontal direction

The projector may be installed at a horizontal angle of 20° .

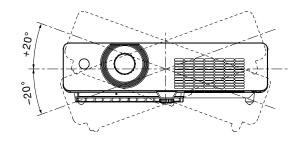

List of compatible signals

The signals that can be input to this projector are shown in the table below. Horizontal scanning frequencies of 15 kHz to 100 kHz, vertical scanning frequencies of 50 Hz to 100 Hz, and a dot clock of 140 MHz maximum can be input.

NOTE: The native resolution of this projector is 1,024 × 768 pixels. If the display resolution of the input signal is different from the native resolution, image compression or expansion will be used to convert the input signal to a level within the native resolution.

Display mode	Display	Scanning fre	quency	Dot clock	Format
	resolution (dots)* ¹	H (kHz)	V (kHz)	frequency (MHz)	
NTSC/NTSC4.43/PAL-M/PAL60	720 × 480i	15.7	59.9	_	VIDEO/S-VIDEO'
PAL/PAL-N/SECAM	720 × 576i	15.6	50.0	_	-
480i (525i)	640 × 480i	15.7	59.9	12.3	YP _B P _R /RGB
576i (625i)	768 × 576i	15.6	50.0	14.8	-
480p (525p)	640 × 480	31.5	59.9	25.2	-
576p (625p)	768 × 575	31.3	50.0	29.5	-
720p	1280 × 720	45.0	60.0	74.3	-
		37.5	50.0	74.3	-
1035i	1920 × 1035i	33.8	60.0	74.3	-
1080i	1920 × 1080i	33.8	60.0	74.3	-
		28.1	50.0	74.3	=
VGA	640 × 400	31.5	70.1	25.2	RGB
-	640 × 480	31.5	59.9	25.2	=
		37.5	75.0	31.5	=
		37.9	72.8	31.5	=
		37.9	74.4	31.5	=
		43.3	85.0	36.0	-
-	720 × 400	31.5	70.1	28.3	-
MAC LC13	640 × 480	35.0	66.6	31.3	-
MAC13	0.0 // 100	35.0	66.7	30.2	-
SVGA	800 × 600	32.7	51.1	32.7	-
	000 // 000	34.5	55.4	36.4	-
		35.2	56.3	36.0	-
		37.9	60.3	40.0	-
		37.9	61.0	40.0	-
		38.0	60.5	40.1	-
		38.6	60.3	38.6	-
		46.9	75.0	49.5	-
		48.1	72.2	50.0	-
		53.7	85.1	56.3	-
MAC16	832 × 624	49.7	74.6	57.3	-
XGA	1024 × 768	44.0	54.6	59.1	-
	1024 × 100	46.9	58.2	63.0	-
		47.0	58.3	61.7	-
		48.4	60.0	65.0	-
		48.5	60.0	65.2	-
		58.0	72.0	74.7	-
		60.0	75.0	78.8	-
		60.3	74.9	79.3	-
		61.0	75.7	81.0	-
			77.1	84.3	-
		62.0	79.4	83.4	-
		-	79.4	75.0	-
		56.5			-
-	1004 760:	68.7	85.0	94.5	-
	1024 × 768i	36.0	87.2	47.3	-
MAC10	1004 - 700	35.5	87.0	44.9	-
MAC19	1024 × 768	60.2	75.1	80.0	

^{*1} The "i" appearing after the resolution indicates an interlaced signal.

^{*2} A D-sub to S-Video adaptor cable (ET-ADSV) is required for S-Video signal input.

LCD Projector

PT-LX26H

Display mode	Display	Scanning fre	quency	Dot clock	Format	
	resolution (dots)* ¹	H (kHz)	v (kHz)	frequency (MHz)		
WXGA	1280 × 768	47.8	59.9	79.5	RGB	
		60.3	74.9	102.3	-	
		68.6	84.8	117.5	-	
	1280 × 800	41.2	50.0	68.6	=	
		49.6	60.1	79.4	=	
		49.7	59.8	83.5	=	
		56.0	70.0	95.0	-	
		57.6	72.0	97.8		
		58.2	70.0	98.9	-	
		60.0	72.0	102.8	-	
		62.8	74.9	106.5	-	
		63.9	60.0	108.0	-	
		71.5	84.8	122.5		
	1360 × 768	47.7	60.0	86.7	-	
	1300 x 100		72.0	86.7	-	
	1000 700	56.2			-	
	1366 × 768	48.4	60.0	100.1		
44.001	1376 × 768	48.4	60.0	86.7		
MAC21	1152 × 870	68.7	75.1	100.0		
SXGA	1152 × 900	61.2	65.2	92.0	-	
		71.4	75.6	105.1		
		61.9	66.0	94.5		
	1280 × 960	60.0	60.0	108.0		
	1280 × 1024	62.5	58.6	108.0	-	
		63.3	60.0	107.3	-	
		63.7	60.0	109.5		
		63.9	60.0	108.0		
		71.7	67.2	117.0	_	
		81.1	76.1	135.0		
		64.0	60.2	108.1		
		80.0	75.0	135.0	-	
		63.4	60.0	111.5	-	
		77.0	72.0	130.1	-	
		63.8	60.2	109.5	-	
		91.1	85.0	157.5	-	
	1280 × 1024i	50.0	86.0	80.0	=	
		50.0	94.0	80.0	=	
		46.4	86.7	78.4	=	
ИАС	1280 × 960	75.0	75.1	126.0	-	
	1280 × 1024	80.0	75.1	135.2	-	
SXGA+	1400 × 1050	64.0	60.2	108.0	-	
		65.4	60.1	122.9	-	
		65.1	59.9	122.4	-	
WXGA+	1440 × 900	55.9	59.9	106.5	-	
17.07.1	1440 x 300	74.9	60.0	161.9	-	
JXGA	1600 × 1200	74.9	60.0	162.0	-	
JAMA .	1000 X 1200		65.0	175.5	-	
		81.3	70.0		-	
		87.5		189.0 202.5	-	
WSXGA+	1000 1050	93.8	75.0		-	
ννονια++	1680 × 1050	65.3	60.0	146.3	-	
WUXGA	1920 × 1200	74.0	59.9	154.0		


 $[\]star 1$ The "i" appearing after the resolution indicates an interlaced signal.

LCD Projector

Serial connector

The serial connector complies with RS-232C. To control the projector from a personal computer, commands must be input through communication software, based on the format and satisfying the communication conditions shown below.

Pin assignments and signal names



D-sub 9-pin (male) Serial input

No.	Signal name	Description	No.	Signal name	Description
1	_	NC	6	_	NC
2	RXD	Receive data	7	-	NC
3	TXD	Send data	8	-	NC
4	-	NC	9	-	NC
5	GND	Ground			


Communication conditions (factory setting)

Signal level	RS-232C-compliant
Synchronization method	Start-stop synchronization
Baud rate	19,200 bps
Parity	None

Character length	8 bits
Stop bit	1 bit
X parameter	None
S parameter	None


Basic format

Transmission from the computer begins with STX, then command, parameter, and ETX are sent in this order. Add parameters according to the details of control.



NOTE: When sending commands without parameters, a colon (:) is not necessary.

Basic format with sub-commands

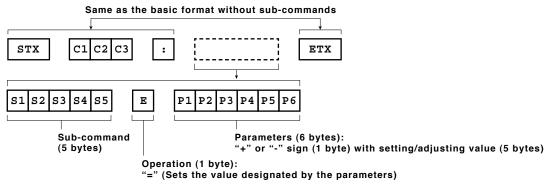

NOTE: When sending sub-commands that require no parameters, operation (E) and parameters are not necessary.

CAUTION

- It may not be possible to send or receive commands for about 10 to 60 seconds when the lamp is first turned on. If this occurs, wait for 60 seconds, then try sending or receiving again.
- · When sending multiple commands, be sure to wait for at least 0.5 second after receiving a response from the projector before sending the next
- · Additional time is sometimes required for response due to processing inside the projector. Set the time-out period for command response to 10 seconds or more.

Cable specifications

Projector			PC (DTE)
1	NC	NC	1
2			2
3			3
4	NC	NC	4
5			5
6	NC	NC	6
7	NC	NC	7
8	NC	NC	8
9	NC	NC	9

Control commands

Command: <parameter></parameter>	Function	Callback: <parameter></parameter>	Parameter value	
			Min	Max
PON*1/*2	Power on (standby mode on)	PON	-	-
POF*1	Power off (standby mode off)	POF	-	-
AVL: <pl></pl>	Volume control	AVL: <pl></pl>	0	63
IIS: <input signal=""/>	Input signal selection	IIS: <input signal=""/>	-	-
OFZ: <off on=""></off>	Freeze	OFZ: <off on=""></off>	0	1
VPM:STD	Picture mode: Standard	VPM:STD	-	-
VPM:DYN	Picture mode: Dynamic	VPM:DYN	-	-
VPM:CIN	Picture mode: Cinema	VPM:CIN	-	_
VPM:REA	Picture mode: Real	VPM: REA	-	-
VPM:BBD	Picture mode: Blackboard	VPM:BBD	-	-
VPM: CBD	Picture mode: Colorboard	VPM:CBD	-	-
VPM:IM1	Picture mode: Image 1	VPM:IM1 -		-
VPM:IM2	Picture mode: Image 2	VPM:IM2		_
VPM:IM3	Picture mode: Image 3	VPM:IM3	-	_
VPM:IM4	Picture mode: Image 4	VPM:IM4	-	-
AUU	Volume up	AUU	-	-
AUD	Volume down	AUD	-	_
OSH*1	AV mute	OSH -		-
DZU	Digital zoom: Enlargement	DZU –		-
DZD	Digital zoom: Reduction	DZD -		_

^{*1} Do not send PON, POF, or OSH commands continuously in a short period of time. Doing so may burst the lamp or shorten the lamp replacement cycle.

ment cycle.
*2 These commands are effective when the standby mode is set to eco. (Other commands are not effective.)

Status request commands

Command	Description		Callback
			<parameter></parameter>
QPW	Standby power status		<power condition=""></power>
Q\$S	Lamp status		<pre><lamp condition=""></lamp></pre>
QIN	Input signal status		<input signal=""/>
QAV	Volume adjustment value		<pl><pl>1></pl></pl>
QPM	Picture mode status	Standard	STD
		Dynamic	DYN
		Cinema	CIN
		Real	REA
		Blackboard	BBD
		Colorboard	CBD
		Image 1	IM1
		Image 2	IM2
		Image 3	IM3
		Image 4	IM4
QFZ	Freeze status		<off_on></off_on>
Q\$L	Lamp run time		<acctch></acctch>
QSH	AV mute function status		<off_on></off_on>

NOTE: If a wrong command is received, the projector will send an ER401 command to the computer.

Parameter format

Parameter format	Size (Byte)	Definition
<pl><p1></p1></pl>	3 (1 or 2 bytes also	Decimal without signs: 0 to 999 (000, 001, 002999)
	possible when	Decimal with signs: -99 to +99 (-9901, +00, +01, +02+99)
	under control)	Callback from the projector is 3 Byte.
<off on=""></off>	1	0 = off, 1 = on
<input signal=""/>	3	RG1 = computer 1, RG2 = computer 2, VID = video, SVD = S-Video
<pre><power condition=""></power></pre>	3	000 = power off (standby mode off), 001 = power on (standby mode on)
<pre><lamp condition=""></lamp></pre>	1	0 = standby, 1 = lamp on under control, 2 = lamp on,
		3 = lamp off under control
<acctch></acctch>	4	Decimal without signs: 0000-9999 hours

NOTE: If a wrong command is received, the projector will send an ER401 command to the computer.

Command example

To set the volume to +30, send the command as shown below.



NOTE: When sending commands without parameters, a colon (:) is not necessary.


LCD Projector

PT-LX26H


Notes on projector placement and operation

The projector uses a high-wattage lamp that becomes very hot during operation. Please observe the following precautions.

- Never place objects on top of the projector while it is operating.
- Make sure there is the unobstructed space as shown below or more around the projector's exhaust openings. In addition to this space, also ensure that there is a sufficient work space for removing and installing the lamp, filter and other parts.
- Make sure that nothing blocks the projector's air intake and exhaust openings. Also, install the projector so that cool or hot air from other air conditioning equipment does not flow directly toward the projector's air intake or exhaust openings.
- Do not install the projector in an enclosed space. If it is necessary to install it in an enclosed space, add a separate ventilation system. If ventilation is insufficient, hot air will accumulate at the intake opening. This may cause the projector's protective circuit to interrupt projector operation.



Direction of air intake and exhaust

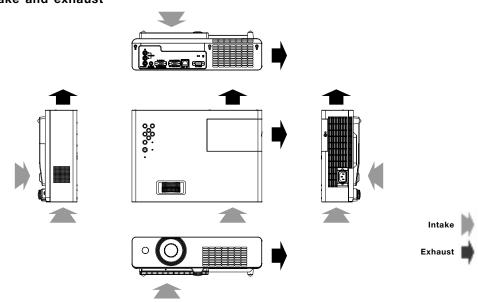

Operating the projector continuously

- If the projector is to be operated continuously 6 hours or more, lamp replacement cycle duration becomes shorter.
- 2. The lamp replacement cycle duration becomes shorter if the projector is operated repeatedly for short periods (one hour or less).

Weights and dimensions shown are approximate. Specifications and appearance are subject to change without notice. Product availability differs depending on region and country. This product may be subject to export control regulations.

PJLink is a registered trademark, or a trademark application has been filed, in Japan, the United States, and other countries and regions. All other trademarks are the property of their respective trademark owners.