


### A3 Bookedge Scanner

### **User's Manual**

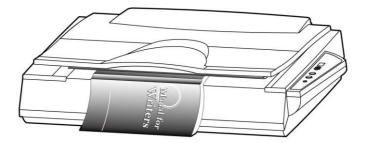

Regulatory model: BT-2202B

### **Avision Inc.**

### Trademarks

Microsoft is a U.S. registered trademark of Microsoft Corporation.

Windows 7, Windows 8, Windows 10, and Windows 11 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Energy Star<sup>®</sup> is a registered trademark of the U.S. government.

Other brands and product names herein are trademarks or registered trademarks of their respective holders.

### Copyright

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Avision Inc.

Material scanned by this product may be protected by governmental laws and other regulations, such as copyright laws, the customer is solely responsible for complying with all such laws and regulations.

### Warranty

The information contained in this document is subject to change without notice.

Avision makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of fitness for a particular purpose.

Avision shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

#### Federal Communications Commission (FCC) compliance information statement Part 15

The product has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received including interference that may cause undesired operation.

The FCC Class A limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual may cause harmful interference in which case the user will be required to correct the interference at his own expense.

# **European Union Regulatory Notice**

Products bearing the CE marking comply with the following EU Directives:

- Low Voltage Directive 2014/35/EC
- EMC Directive 2014/30/EC
- Restriction of the use of certain hazardous substances (RoHS) Directive 2011/65/EU

CE compliance of this product is valid if powered with the correct CE-marked AC adapter provide by Avision.

This product satisfies the Class B limits of EN55022, EN55024, safety requirements of EN 60950 and ROHS requirements of EN50581.

\*This machine is certified as Class 1 LED product.

### **CE Warning**

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Disposal of Waste Equipment by Users in Private Union



This symbol on the product or on its packaging indicates that the product can not be disposed of with your other household waste. Instead it should be sent to appropriate facilities for recovery and recycling in an effort to protect human health and the environment. Fore more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



As an ENERGY STAR<sup>®</sup> Partner, Avision Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

### **System Requirements**

CPU: Intel<sup>®</sup> Core<sup>™</sup> 2 Duo or higher

Memory:	32 bit: 2 GB 64 bit: 4 GB
USB Port:	USB 3.2 Gen 1x1 (compatible to USB 3.0/3.0)
	Microsoft Windows 7, Windows 8 (32 bits/64 bits), Windows 10 (32 bits/64 bits), Windows 11

### Product Safety Guide

Please clearly read all these instructions, and follow all instructions and warnings before installing and using the device.

The following indications are used in this document to obviate any chance of accident or damage to you and/or the device.

A WARNING	Indicates potentially hazardous situations, which if instructions are not followed, could result in death or serious injury.
⚠̀ CAUTION	Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

### 

- Use only the AC power adapter that came with your device.
   Using any other AC power adapter could cause fire, electrical shock, or injury.
- Use only the AC power cord and USB cable that came with your device and avoid abrasions, cuts, fraying, crimping, and kinking. Using any other AC power cord and USB cable could cause fire, electrical shock, or injury.
- Do not place objects on top of the AC power cord, and do not allow the AC power adapter or the AC power cord to be stepped on or run over.
- Place the device and its AC power adapter near an electrical outlet where the AC power adapter can easily be unplugged.
- If you use an extension cord with the device, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating.
- Place the device close enough to the computer so that the interface cable can easily reach between the device and the computer.

- Do not place or store the device or its AC power adapter:
  - Outdoors
  - Near excessive dirt or dust, water, or heat sources
  - In locations subject to shocks, vibrations, high temperature or humidity, direct sunlight, strong light sources, or rapid changes in temperature or humidity
- Do not use the device with wet hands.
- Never disassemble, modify, or attempt to repair the AC power adapter, device, or device option by yourself, except as specifically explained in the device's documentation. This could cause fire, electrical shock, or injury.
- Do not insert objects into any opening, as they may touch dangerous voltage points or short-out components. Beware of electrical shock hazards.
- Unplug the device and the AC power adapter, and refer servicing to qualified service personnel under the following conditions:
  - The AC power adapter or plug is damaged.
  - Liquid has entered the device or the AC power adapter.
  - Object has entered the device or the AC power adapter.
  - The device or the AC power adapter has been dropped, or the case has been damaged.
  - The device or the AC power adapter does not operate normally (i.e. appearance of smoke, strange smell, odd noise, etc.), or exhibits a distinct change in performance
- Unplug the device and the AC power adapter before cleaning.

### **▲** CAUTION:


- Do not locate the device on rackety or aslope tables. Do not locate the device on unstable surface. The device may fall down and this may result in injury.
- Do not place heavy objects on the unit. It may cause unbalance and the device may fall down. This may result in injury.
- Store the AC Power cord/USB cable bundled out of the reach of children to avoid the risk of injury.
- Keep plastic bags bundled out of the reach of children or throw them away to avoid the danger of suffocation.
- If you are not going to use the device for a long period, unplug the AC power adapter from the electrical outlet.

### **1. Introduction**

Congratulations on your purchase of the Avision's A3-sized bookedge scanner. Avision is one of the leading companies to make high quality color image scanner.

Before you install and operate the new scanner, please take a few minutes to read through this manual. It provides proper instructions for you to unpack, install, operate and maintain the scanner.

The following figure indicates the package contents. Please check all the items against your checklist. If you do not receive all the items, please contact your authorized local dealer immediately.

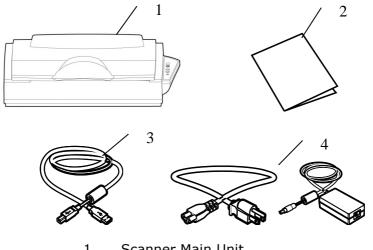

- 1. Scanner Main Unit
- 2. Quick Guide
- 3. USB Cable
- Power Adapter & Power Cord 4.

#### Note:

- 1. Only use the AC adapter ADS-65LSI-24-3 24048E by HONOR included in the machine. Using other AC adapters may damage the machine and void the warranty.
- 2. Please unpack the packing carefully, and check the contents against the checklist. If any items are missing or damaged, please contact your dealer immediately.
- 3. To access more service supports, visit www.avision.com to register your Avision's product.

### **2. Scanner Installation**

### 2.1 Precautions

- Keep the scanner out of direct sunlight. Direct exposure to the sun or excessive heat may cause damage to the unit.
- Do not install the scanner in a humid or dusty place.
- Be sure to use the proper AC power source.
- Place the scanner securely on an even, flat surface. Tilted or uneven surfaces may cause mechanical or paper-feeding problems.
- Retain the scanner box and packing materials for shipping purposes.

### 2.2 Unlocking your scanner

To protect the scanning unit from damage during transportation, a lock switch is designed at the back of the scanner to keep the scanning unit from moving. To unlock the scanner, move the lock switch down as shown in Fig. 2-1.




Figure 2-1 Unlocking the Scanner

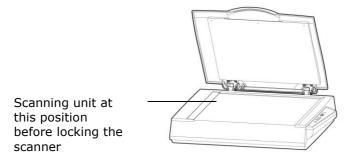


Figure 2-2 Home position


**Note:** If the scanning unit is not located at the front of the scanner before transporting the scanner, be sure to do the follows:

- 1. Turn on the scanner. The scanning unit should move to the front of the scanner.
- 2. Press the lock switch down to the "Lock position".
- 3. The scanner is now ready to transport.

### 2.3 Connecting to Power


### Before connecting, make sure the power switch is off.

Plug the small end of the power adaptor into the power jack of your scanner. Insert the other end to an appropriate power outlet.

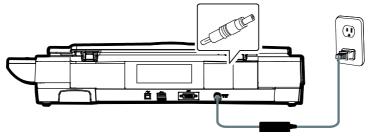

### 2.4 Turning on the Power

Press the Power Switch button on the front panel, the Power LED will be lit. To turn off the scanner, press the Power Switch button for about 3 seconds, the Power LED will be off.

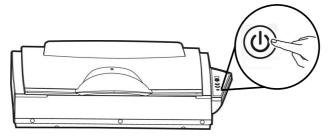


### **2.5** Connecting to the Computer

1. Connect the **square end** of the USB cable to the USB port of your scanner. Connect the **rectangle end** to the USB port of your computer.

#### NOTE:

The scanner is designed with a USB 3.2 Gen 1x1 interface to ensure the optimal speed. If your computer comes with a USB 3.2 Gen 1x1 port, make sure to connect the scanner to your computer to the USB 3.2 Gen 1x1 port which is distinguished in blue color at the back of your computer. The USB 3.2 Gen 1x1 port enhances your scanning speed and is also compatible with USB 2.0 and USB 1.1.

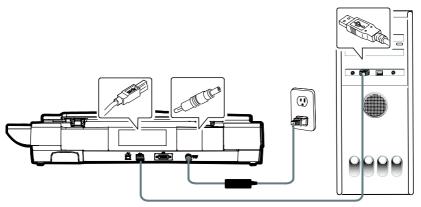

- Click the Next button to continue. When the certification screen appears, click Continue Anyway to complete the installation.
- 3. When the **Finish** dialog is prompted, click the **Finish** button.

### 2.6 Installing the Software

#### NOTE:

The scanner driver contains TWAIN, and WIA driver. After the installation of scanner driver is completed, this scanner allows you to scan via a TWAIN, or a WIA interface. Start your TWAIN-compliant image editing software application to select a TWAIN or WIA user interface. You may also launch Microsoft's Scanner and Camera Wizard to scan via a WIA user interface.

- 1. Download [**Avision Update**] at <u>http://www.avision.com/install</u>.
- 2. Run [Avision Update.exe].
- 3. The End User License Agreement screen will be prompted. Read the agreement and then choose [**I Agree**].



4. Click [**Next**] to continue.



5. The available software applications will be prompted. Select the applications to install. Click [**Install**] and follow the on-screen instructions to complete the installation.



\*The list of available software applications varies according to your product type.

### **Contents on the installation graphic:**

- **Driver:** To communicate with your scanner, you need to install the scanner driver.
- **Button Manager V2**: To use the buttons on the scanner, you need to install Button Manager V2.
- **AVScan X/PaperPort:** To scan and organize your multi-page document(s), you can install the software application to manage them easily and effectively.

Alternatively,


You may also download driver and manual at www.avision.com/download.

### 3. Completing Your First Scan

### 3.1 Loading Your Paper

Open the document cover then place your original face down on the document glass as shown in Fig. 3-1.

Make sure the top of your original near the document alignment mark.

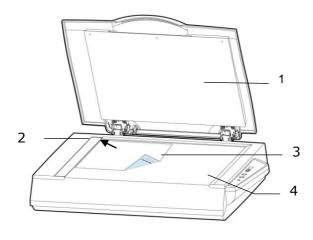

- 1. Document cover
- 2. Document alignment mark
- 3. Your original
- 4. Document glass

### Figure 3-1 Placing the original

### 3.2 Verifying Your Scanner Installation

To verify if your scanner installation is correct, Avision provides you a useful test program called Avision Capture Tool. With this tool, you can perform simple scans and view the captured images. In addition, it helps you complete your scan at a rated speed.


The following procedure describes how to verify your scanner installation. If the installation is not correct, please review the preceding section to check if the cable connection and scanner driver have been successfully installed.

Before you begin, be sure the scanner is on.

1. Select Start>Programs>Avision xxx Scanner>Avision Capture Tool. The Select Scanner Model dialog box will be displayed.

Driver Type:		
TWAIN		
Scanner Model:		
Avision xxx	^	
		OK

2. Select your driver type and scanner model and click OK. The following Avision Capture Tool dialog box will be displayed.

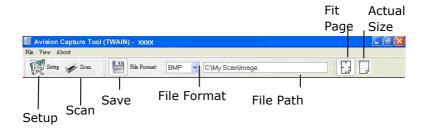

- Choose your desired file format from the File Format drop down list box. (Default is JPEG, other choice includes TIFF, MTIFF, PDF, MPDF, GIF, and BMP.) The supported file formats vary depending on your scanner model.
- Type your desired folder name and file name in the File Path box. (Default is C:\Documents and Settings\User Name\My Documents\My Scan\Image.)

**Note:** If you do not wish to save the scanned image, deselect the Save button since default is Save Enable. In this case, the thumbnail view will be disabled. And therefore, after viewing all the scanned images, only the last one will remain on the screen.

5. Click the Setup button (<sup>Setup</sup>) or choose Setup from the File menu to prompt the Scanner Properties dialog box.

	Scanner Properties	1		×
Image Selection Box	Front Auto Color Detection Front Color Front Gray Front BAW Bear Auto Color Detection Bear Auto Color Detection Rear Gray Rear BaW	Binatization: Senativity: Binjhiness Contrast: Resolution (dpi): Invert:	Dynamic Threehold	• • • • • • • • • • • • • • • • • • •
	Same settings for both aides Scan Source Profiles Defaults	Auto Document Feede	v •	Cancel

- 6. From the Image Selection Box, choose your desired image type for your scanned image. (Default is Front B&W) If you have a duplex scanner, choose Front and Rear to scan both sides of your document.
- 7. Click OK to quit the Scanner Properties dialog box. (To learn more details about the Scanner Properties dialog box, please see the subsequent chapter, *Using the Scanner Properties Dialog Box*.)
- 8. Place your document face down on the document glass or face up in the auto document feeder.
- 9. In the Scan Validation dialog box, click the Scan button

(<sup>Scan</sup>) or choose Scan from the File menu.

10. The document will be scanned and displayed in the Scan Validation screen. After the scanned images have been displayed, your scanner installation verification is completed.

Capture Tool (TWAIN) - X	ххх					
🛱 Setup 🍃 Scan	File Format:	JPEG 💌 C1/My Scan\/m	age	80		
	thirty-one shelves. Wha are to Friends, N. Ki Reversed, I. Reversed, I	I on puttls of chimneys smokes. In find cakes, dampened with whitekey, bi experiment of the second second second or persons which much maybe boots or persons which much maybe boots of the second second second second second of the second second second second second of the second second second second second of the second sec	ask on windowsils and deed, the larger share is perturbs not at all to perturb the second second second second second oncaries to Borneo who index who comes the second second second the driver of the six es with us every dry dry as any Watons, a California any Watons, a California the dry of the second second second any Watons, a California the second second second any Watons, a California the second second second any work of the second make us feel connected wire of a sky that dops. Inset the window. The day we carted the last of sense, but my finded serve far dry the last of maps turbed our purse sense, but my finded serve far dry the dry of any of the second of dry sing the works to mine, just the works to mine, just the more reach the dry laws.			
				<sup>I</sup> Displa	iy View	
	onail Vie	ew				

11. You can view the scanned image in Fit Page ( ) or Actual

Size (100%) button ()) from the Viewing toolbars at the right side.

12. Click the Close box or Quit from the File menu to exit the Scan Validation Tool.

### 3.3 A Glance of the Scanner Properties Dialog Box

			Front Auto Color Detection	Binarization:	Dynamic Threshold	•
		Front BBW     Biphrees:     0 *       Front BBW     Contrast:     *       Rear Auto Color Detection     Resolution (dpl):     200       Rear Color     Invert:     Black on White       Rear BBW     Invert:     Black on White		Sensitivity:	20 4	
Rear Auto Color Detection     Resolution (dpi):     200	Rear Auto Color Detection  Resolution (dpt):  Rear Gray  Rear Gray  Rear BaW  Same settings for both aides	Resr Auto Color Detection     Resolution (dp):     200			0 4	-
Rear B&W	Rear BBW	Rear B&W	Rear Color	Resolution (dpi):		
	Scan Source: Auto Document Feeder		Rear B&W			
	Profiles Custom	Profiles	Profiles	Custom	•	

1. Tab Options	Choice: Image, Compression, Color Dropout, Paper, Multi-Feed Detection, Preview, Options, Settings, Information.
2. Image Selection Box	Choose your image type and the side of document you wish to scan. Options vary based on type of scanner.
3. Brightness	Adjust the brightness level from $-100$ to $+100$ .
4. Contrast	Adjust the contrast level from $-100$ to $+100$ .
5. Resolution	Determine the quality of the scanned image. The industry standard is 200 dpi.
6. Invert	Reverse the color of your scanned image.
7. Scan Source	Choice: Auto Document Feeder, Flatbed, Flatbed (Book), Automatic (varies due to different scanner model)
8. Defaults	Reset all values on the tabs to the factory default settings.

### 3.4 Performing Auto Scan

If [Auto Scan from Flatbed] is enabled in the Scanner Properties dialog box, the scanner will perform auto scan each time when the document cover is closed.

	ting Information		
Cache	(		
Mode:	Memory Size	•	
Memory Size:	•	Default	
Energy Saving Con	trol		
	nable Energy Saver	4	15 minutes
ensites me	nable Power Off		
ENERGY STAR	nable Power Off	4	240 minutes
	from Flatbed	Multi-Feed Detection Preview Rotation	
Auto Scant		Separation Enhancement Imprinter	

The Setting tab dialog box

#### Note:

- 1. If Avision's bundled software Avision Capture Tool is opened, the auto scan will be started from Avision Capture Tool software application.
- 2. If Avision Capture Tool is not opened, the auto scan will be started from Avision's Button Manager V2 software application.
- 3. If your TWAIN-compliant software application and also the TWAIN user interface are opened, the auto scan will be started from your TWAIN-compliant software application.

### 4. Using the Scanner Properties Dialog Box

The Scanner Properties dialog box allows you to configure the scanner's settings. It consists of several tabbed windows each of which will be described in this chapter.

**Note:** In this chapter, all options are available based on a duplex (double-side) scanner. If you have purchased a simplex (single-side) scanner, all options are available for single sided only.

Front Auto Color Detection	Binarization:	Dynamic	Threshold	•
Front Color	] Sensitivity:	20	•	•
Front Gray	]			
Front B&W	Brightness:	0	4	Þ
200	Contrast:		*	Þ
Rear Auto Color Detection	Resolution (dpi):	200		•
Rear Color	]	Black on	54.0 ×	
Rear Gray	Invert:	Black on	vvnite	•
Rear B&W	]			
Same settings for both sides Scan Sourc	e: Auto Document Feede	r	•	
Profiles	Custom		•	

The Scanner Properties dialog box

Front Auto Color Detection	Binarization:	Dynamic	Threshold	▼]	
Front Color	Sensitivity:	20	•		۲
Front Gray	]				
Front B&W	Brightness:	0	4		+
	Contrast:		*		۲
Rear Auto Color Detection	Resolution (dpi):	200		•][	]
Rear Color		Black on			
Rear Gray	Invert:	Black on	White	•	
Rear B&W	]				
Same settings for both sides Scan Sourc	e: Auto Document Feede	r	•]		
Profiles	Custom		•		

### 4.1 Buttons on the Scanner Properties Dialog Box

The buttons on the Scanner Properties dialog box

Buttons	Description
Defaults	Click the <b>Defaults</b> button, the factory default settings will be shown on each tab.
Cancel	Click the <b>Cancel</b> button to leave the Scanner Properties dialog box.

The following table shows the default settings :

Tab name	Default settings
Image	Image : Front B&W Binarization : Dynamic Threshold
	Resolution : 200 dpi
	Invert : Blank on White
	Scan Source : Auto Document Feeder
	Threshold : None
	Brightness : None
	Contrast : None
Compression	None
Color Dropout	None
Paper	Cropping : Automatic
	Deskew : Yes
	Orientation : Portrait
	OverScan : 0.00
	Note: The availability of this option varies due to scanner model.
	Unit : Inch
Multi-Feed	None
Detection	
Preview	None
Options	Rotation Degrees : None
	Blank Page Removal : None
	Edge Fill: White, 0 mm
	Image Control Option : None
Setting	Enable Energy Saver : Enable, 15
	minutes after last scan action
	Show Scanning Progress : Yes
	Show Warning Message : Yes
	Save Settings after Closing : Yes
Imprinter	Digital Imprinter

### 4.2 Showing or Hiding Tabs

The [**Scanner Properties**] dialog box is displayed in default with three basic tabs - Image, Paper, and Information. To show more tabs, click the [**Scanner Properties**] icon to access more scan settings.

To show more tabs,

- Click the [Scanner Properties] icon () on the upper left corner, and choose [Tab] to show available tab names. The available tabs include Compression, Color Drop out, Preview, Rotation, Separation, Multi-Feed, Options, Settings, and Imprinter. (Note: the options vary based on scanner model.)
- Choose the tab you want to display. The selected tab will be shown with a check mark and then displayed in the [Scanner Properties] dialog box.
- **3.** To access the settings, click the selected tab on the top of the [**Scanner Properties**] dialog box. The page of the selected tab will be displayed.

To hide a tab window,

- 1. Click the [Scanner Properties] icon () on the upper left corner, and choose [Tabs] to show available tab names.
- 2. Choose the tab you want to hide. Then, the selected tab will be hided in the [Scanner Properties] dialog box.

Note: The [**Image**], [**Paper**], and [**Information**] tab can not be hided since they preprogrammed to be displayed by default.

#### User's Manual

Tabs Move	•	Compression Color Dropout	-				
	t+F4	Multi-Feed Detection	ynamic Threshold 👻				
Front Color		Preview Rotation Separation Enhancement	20			•	
Front Gray							
Front B&W			0	4		F	
		Setting		4		Þ	
	1	Imprinter					
Rear Auto Col	or Detect		00		•		
Rear Color		Invert:	Black on	White	•		
Rear Gray							
Rear B&W							
Rear B&W	or both sides Scan Sour	ce: Auto Document Feeder		•			
		ce: Auto Document Feeder		<b>•</b>			
	Scan Sou	The bocament recoor					
	Scan Sou	The bocament recoor					
	Scan Sou	The bocament recoor					
	Scan Sou	The bocament recoor					
	Scan Sou	The bocament recoor					

### 4.3 The Image Tab

The Image tab allows you to choose the front side and (or) the rear side of your document, the type of image, and to set several basic scan settings. Note that except for the resolution, you can set individual scan settings for the front side and the rear side. For example, all settings in the Image tab, Compression tab, Color Dropout tab can be set individually for the front and the rear side. However, the settings in the Paper tab, the Option tab, and the Setting tab have to be set the same for the front and rear side.

age Paper Setting Information	лт 				
Front Auto Color Detection	Binarization:	Dynamic	Threshold	•]	
Front Color	] Sensitivity:	20	4		۴
Front Gray	Brightness:	0	4		F
	Contrast:		*		۲
Rear Auto Color Detection	Resolution (dpi):	200		•	
Rear Color	] Invert:	Black on White			
Rear Gray					
Rear Gray					
Rear B&W					
Rear B&W	e: (Auto Document Feede	ı	•		
Rear B&W	e: [Auto Document Feede	if	•		
Rear B&W Same settings for both sides Scan Source		of	•		
Rear B&W Same settings for both sides Scan Source		ſ	•		
Rear B&W Same settings for both sides Scan Source		it	• •		


The Image tab dialog box

### 4.3.1 The Image Selection Box

Front Auto Color Detection	
Front Color	
Front Gray	
Front B&W	
Rear Auto Color Detection	
Rear Auto Color Detection     Rear Color	
Rear Color	

The Image Selection box includes the image type and document side option. If you wish to scan both the front side and the rear side of your color document, you can check both Front Color and Rear Color at the same time. Note the options vary based on type of scanner.

### Example 1 : Scanning a two-sided color document, both sides in color

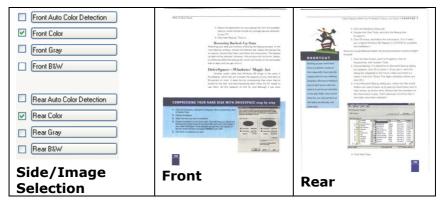

### Example 2 : Scanning a two-sided color document, one in B&W, the other in color

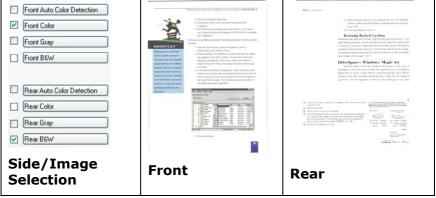


Image Type	Description
Color	Choose Color if you wish to scan a color image for your original in color.
Gray	Choose Gray image if your original contains actual shades of gray.
B&W	Choose B&W if your original contains only text, pencil or ink sketch.

<text>

B&W





Gray

Color

### Front/Rear Auto Color Detection:

Click to automatically detect and scan the front or the rear page of your color document in color image mode. If your document is in colors, the scanner will automatically scan the document into a color image. If your document is non-color, you can choose the output to be either B&W or Gray from the Non-Color Selection option. This option is useful when you have a mixture of color and non-color document.

Note: If you choose Front Rear Auto Color Detection, you can not specify the image mode of your rear page and vice versas.

#### **Modes of Auto Color Detection:**

If [**Front/Rear Auto Color Detection**] is selected, its modes will be displayed. **Choice includes Normal, Ignore Paper Color.** For paper with background color such as invoices, choosing [**Ignore Paper Color**] will automatically remove the background color and enhance the detection accuracy.

665e 0B-123-03 ENVOICE of 55mb Sears Parts for Automotion Sea	Bute: July 30, 2002	64No 0B 223 43 Bute : July 34, 2002 INVOICE of 55ats Syare Barls for Automotine Seats		
For account and risk of Mesors. ABC Manufacturing C		EvvOIC.E.01 53d6 Spare fulls for Automotive Seals		
1226 Hilled Average, Smille, WR 94041 U.S.A. Tel. 253-5				
The Hiller Avenue, Seattle, WK 91001 U.S.A. Int. 283-9 um, Mr. David Wara	73-6699 ed 2336 Pax 253-927-6648	3236 IBlieft Assesse, South, WR 90001 U.S.A. Tal. 253-923-6699 ext 2236 Fax. 253-922-6600		
Alls, Mr. Bond Wang Simpel by SST Technologies he.	Per U-Line Kurres	Atta: Mr. Benid Wang		
		Shippel by SST Technologies Inc. Per Uline Express		
		Sailing en er about July 30, 2002 from Taisun, R.O.C. to U.S.A.		
L/C NoCerdrart No.	A1233	L/C Ne. Contract No. A1233		
Marlo & Nes. Description of Goods	Quantity Unit Dice Ameunt	Marks & Nos. Description of Goods Oceanity Unit Drice Amount		
Amnet ( hen No. 100 )	3 cets USD-20.50 USD-60.00	Amaret ( hen Ho 100 ) 3 sets 00220.00 002560.0		
ABC Amrest ( Ben No. 101 ) Amrest ( Ben No. 102 )	3 cets USD20.00 USD60.00 3 cets USD20.00 USD60.00	ABC Ampet (hen Ho 101) 3 ces (0520.00) (050600 Ampet (hen Ho 102) 3 ces (0520.00) (050600		
Seuth	344 002000 002000	Septile		
P/O No. A1203 C/No. 1		P/0 No. A2233		
bide in Tamm		(200.1 Mode in Tairen		
R.O.C.		R.O.C.		
Total	5 rels USBL20.00	Total 5 sets USIBL20 #		
Sangla et No Cenonarcial Value. Value For Customs Jung-se Only. Country et Oxigin : Tainun, R.O.C. NWC : GWC : Manaramant :		Englisef Six Constraint Wass Wala Rei Calatta Mayan Bib Constry Majah, Tahan, B. S. C. 2007 : Diaramant Manamant		
rmal		Ignore single backgrou color		

### **Sensitivity of Auto Color Detection**

If your documents contain primarily B&W text and small amount of light or pale colors and you do not wish them to be recognized as color image to save the file size, you can increase the sensitivity value by moving the bar to the right to let these images to be detected as B&W. The value ranges from 1 to 100. The default is 37.



### Original

Wireless LAN				
Wireless LAN	1T1R Mode	Wireless LAN Frequency Range	1T1R Mode 2.400 ~ 2.4835GHz ( subject to local regulations) 802.11n: 20MHz/40MHz	
Frequency Range	2.400 ~ 2.4835GHz ( subject to local regulations)			
	802.11n: 20MHz/40MHz			
Number of Selectable Channels	USA,         Canada         (FCC):11         channels           2(21)26Hzr-2.462QEHz)         (C21)26Hzr-2.472GHz)         b/g:           1b/g:         Japan GFLEC):         14         channels           (24126Hzr-2.4433GHz)         14         channels         channels	Number of Selectable Channels	USA, Canade (FCC):11 channels (2.412GHz-2.442GHz) 202.1 1b/g: Europe (CE): 13 channels (2.412GHz-2.472GHz) 1apan (TELEC): 14 channels (2.412GHz-2.4835GHz)	
	802.11n: up to 150Mbps	$\frown$	802.11n: up to 150Mbps	
Data Rate	802.11b: 1, 2, 5,5, 11Mbps	Data Rate	802.11b: 1, 2, 5,5, 11Mbps	
	802.11g: 6, 9, 12, 18, 24, 36, 48, 54Mbps		802.11g: 6, 9, 12, 18, 24, 36, 48, 54Mbps	
	11n HT40 MCS7 : +13 dBm	$\sim$	11n HT40 MCS7 : +13 dBm	
Transmit Power(EIRP)	11g OFDM: +15 dBm	Transmit Power(EIRP)	11g OFDM: +15 dBm	
	11b CCK: +18 dBm	, , , , , , , , , , , , , , , , , , , ,	11b CCK: +18 dBm	
Security	WEP 64/128, TKIP, WPA, WPA2 mixed,802.1x and 802.11i	Security	WEP 64/128, TKIP, WPA, WPA2 mixed,802.1x and 802.11i	

## Sensitivity: 1Sensitivity: 100(The image is recognized<br/>as a color one)(The image is recognized<br/>as a black and white one)

### Same settings on both sides:

Click to apply same scan settings for both sides of your documents. After checking this option, any settings you have changed will automatically applied to both the front side and the rear side. For example, if you choose your ideal resolution to be 300 dpi, this will be applied both to the front side and rear side of your document.

### 4.3.2 Other Image Options

Binarization This is the process of converting a grayscale or color image to a bi-tonal image. There are several different methods of performing this conversion. Options: Dynamic Threshold, Dynamic Threshold (AD), Fixed Processing, Halftone 1~5, Error Diffusion.

**Dynamic Threshold:** Selecting **Dynamic Threshold** allows the scanner to dynamically evaluate each document to determine the optimal threshold value to produce the highest quality image. This is used to scan mixed document containing faint text, shaded background, or color background with a single setting. If Dynamic Threshold is selected, Threshold, Brightness, and Contrast are not available.

**Dynamic Threshold (AD):** Selecting **Dynamic Threshold (AD)** to perform the enhanced mode of the Dynamic Threshold feature. However, using this mode may slow down your scanning speed.

### Sensitivity of Dynamic Threshold

Occasionally your scanned image may contain small dots or speckles. To remove these spots, increase the sensitivity value by moving the bar to the right. The value ranges from 1 to 30. The default is 20. **Fixed Processing:** Used for black-andwhite and other high contrast documents. A single level is set to determine the blackand-white transition. The threshold is programmable over the entire density range. **Fixed Processing** sets Contrast to 0. If **Fixed Processing** is selected, Contrast is not available.

Halftone: In addition to the black and white display, Halftone can present a somehow gray shade of image by using different size of dots. Halftone image looks like the picture we have seen in the newspaper. Options include Halftone 1, Halftone 2, Halftone 3, Halftone 4, Halftone 5.


**Error Diffusion:** Error Diffusion is a type of Halftone. Error Diffusion gives good image texture and makes text in images more readable than Halftone.



**Halftone Image** 




**Error Diffusion Image** 

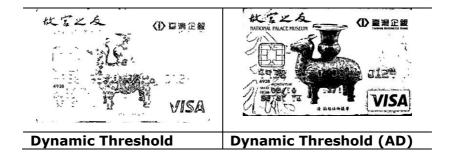

# **Threshold** Used to convert a grayscale image to a bi-tonal image. The value ranges from 0 to 255. A low threshold value produces a lighter image, and can be used to subdue backgrounds and subtle, unneeded information. A high threshold value produces a darker image, and can be used to help pick up faint images.

Adjust the threshold setting by dragging the Threshold sliding bar to the left or right to achieve the desired threshold setting.

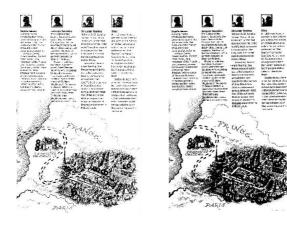

200 dpi, Threshold:50, Brightness: 0

200 dpi, Threshold:100, Brightness: 0

### Gray

**Document Type: Choice: Normal, Photo, Document** Three options of document type are provided when you choose Gray as the image type for your scanned document. **Choice: Normal, Photo, Document.** 

- **Document:** Choose Document if your original contains pure text or a mixture of text and graphic since it is an optimal setting for regular business document. When using Document, only Threshold can be adjusted.
- **Photo:** Choose Photo if your original contains photo to reproduce your photo in vivid grayscale image. When using Photo, no Threshold and Contrast can be adjusted.
- **Normal:** When using **Normal**, Threshold, Brightness, and Contrast can be adjusted.

**Threshold:** The value ranges from 0 to 255. The default is 230. A low threshold value produces a lighter image, and can be used to subdue backgrounds and subtle, unneeded information. A high threshold value produces a darker image, and can be used to help pick up faint images. Adjust the threshold setting by dragging the **Threshold** sliding bar to the left or right to achieve the desired threshold setting.

		Handback and handling and handl
Const.	Income Stating State	Particul and size strainford particular
	- MERCER	02 (Apr 14/80) 00 Ar
	Subset and day	Anna Tarwala
	a later and the second s	
	KCP was placed that	a loost a Advant (1000) mm (
	with their paper sen	8.21682 X 14 802 (315 x 365 896)
	Patter and paper and	E Strack of 10 and 10 feet and 10 feet and 10 million
	AP and	425 - 625 / Jack 105
	Reason and and and and and and and and and an	
		54
		All and the set of the
	STORE STORES	E 42 Case and 21 and 1000 11ml
	They play here	
	Star and A star	30 CPM
	Cate wanted	12010 91585
	fillenter (	10% +50%
	No.400 Pages	Bit sectors Operation Particular
	Carg and Marth	Bello 22/9740
		10 M
	Part Meddater	Mile POAL
	Prove Infalling	601 Minister Bill (Mercian 2000 200), VP
	Manager over the Art of the	
	Convention & Southern	Attornet foldere 3.410 Been TE Auto-registration
	Contraction of the local division of the loc	NP/9.8776.080.0952
	Comparent of the article of	SUIT LAND, FORS Back many, A Permit Days made 2-294
	Turnerson great	THE PROPERTY AND ADDRESS
	Transland .	
	Parameter seent	Bior receipe 2.97 W. Coppl Biolog. 11998

		Australiant Service Servi
See .	- Dualer fields and beinage beinage beinagest fields	District and asia structured basis CCD Integration USE Integration USE IN UTBE USE IN UTBE MINI
	Salar madder Salar madder Sciences (genet	CED Insign Sector Bill sp Light III (1975)

		Additional Control of Contro	Annual Part and Annual Constraints     Annual Part and An
incert Declarity	States Centry rook	Pathod and any mounter to CDD Instancement	eter

	Contracting	CCD Hope annual
	bitter mender	100 mg
	Bopping aged	Up to 10 PMA
	ANU	
	ACP into addid size	abouty 5 hard (mag target)
	ADF man paper state	
	Platent was paper was	
	AGR councily	
	Those environment	200 x 400 - 105-305
		stan.
	Distance of a D + D	
Sec entered		
En-forme	Calm later speed	
1988	Cotor pret speed	
Samplement .	MAN processed	
		1,765a Solitage
	Mannum mentils data parts	
Southanian		
		Balancia, Error, Oriencoa, airreg
	The instance	

Document (Threshold: 230)



Normal



Photo

Photo



Document (Threshold: 230)

Brightness Adjusts the lightness or darkness of an image. The higher the value, the brighter the image. Drag the slider to the right or left to increase or decrease the brightness. The range is from -100 to +100.
 Contrast Adjusts the range between the darkest and the lightest shades in the image. The higher the contrast, the bigger the different grayscale. Drag the slider to the right or left to increase or decrease the contrast. The range is from -100 to +100.

<section-header></section-header>	<section-header></section-header>	<section-header></section-header>
Brightness: -50	Brightness: 0 (Normal)	Brightness: +50
<section-header></section-header>	Image: Strategy and Strate	Participant       Participant
Contrast: -50	Contrast: 0	Contrast: +50

(Normal)

**Resolution** A good control of the resolution results a good detail of an image that scans. The resolution is measured by dots per inch (dpi). Normally, the greater the dpi number, the higher the resolution and the image file size. Be aware that greater resolution takes more time to scan, and more disk space for the scanning image. For your information, an A4 size color image scanned at 300 dpi at True Color mode consumes approximately 25 MB of disk space. A higher resolution (usually means over 600 dpi) is only recommended when you need to scan a small area at True Color mode.

Choose a resolution value from the drop down list. The default value is 200 dpi. Available resolutions are 75, 100, 150, 200, 300, 400 and 600. Or you may choose your desired value by clicking the box in the right side of the drop down list and press the arrow key to select your desired value and then click the Add button to include it in the drop down list. **Note:** The resolution is up to 300 dpi if an imprinter or a MICR reader is installed or connected to the scanner.



**Resolution: 75 dpi** 



Resolution: 150 dpi

**Invert** Reverses the brightness and the colors in the image. The default setting is Black on a White background. Reverse mode is White on a Black background. For color images, each pixel will be changed into its complementary color at the command of Invert.

#### "I am not worthy to have you enter my

that is God, I beg all my brothers - those w e who work manually, clerics and lay brothers ards being humble in all things; not to glorify r to become interforly proud because of good w sometimes says or does in them or through ti ord: "Do not rejoice... in the fact that the de : 10:20) Let us be firmly convinced of the fact

### **Black on White**

#### "I am not worthy to have you enter my

that is God, I beg all my brothers – those v e who work manually, clerics and lay brother rds being humble in all things; not to glorify to become interiorly proud because of good w sometimes says or does in them or through t rd; "Do not rejoice… in the fact that the de 10:20) Let us be firmly convinced of the fac

### White on Black

### Scan Choice:

- Source Auto Document Feeder: Used to scan multiple pages.
  - **Flatbed:** Used to scan a single page. For example, pages from newspaper clipping, paper with wrinkles or curls.
  - **Flatbed (book):** Used to scan several inside pages from book.
  - Automatic: Allow the scanner automatically set its scan source. If Automatic is selected and there is document in both the auto document feeder (ADF) and the flatbed, then the scan source will be automatically set to ADF. If Automatic is selected and there is document only in flatbed, then the scan source will be set to flatbed.
  - Merge Two Sides into One Image: If you have a sheet-fed duplex scanner with front input tray, you can scan an A3 size document with an innovative method. Thus, fold your A3 size document into A4, and then load the paper in the front tray. Choose Merge Two Sides from the Scan Source option and then the scanner is able to scan both sides of your document and merge two A4 images into one A3 image.


When you select Merge Two Sides into One Image, the Cropping or Multi-feed function will be disabled.

**Note:** This feature must be used with a carrier sheet. Regarding how to load a document with a Carrier Sheet, refer to Section 4.6.2, Other Paper Selection.

## Note the options vary based on type of scanner.

**Note:** If you have purchased a duplex sheet-fed scanner, choose [Merge Two Sides] on the [Scan Source], then the scanner is able to scan both sides of your document and merge them into a single image.

If "Merge Two Sides into One Image" is selected, its choice will be available including "Merge Horizontally", "Merge Vertically", "Merge Vertically (Back Side Flip)". If the reverse side of your document is upside down, choose "Merge Vertically (Back Side Flip)" and the back side will be automatically rotated 180 degrees and merged.

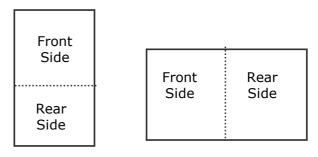

Merge Vertically

Merge Horizontally

Note the options vary based on type of scanner.

### Color Matching

The purpose of Color Matching is getting the accurate color. This option uses the default parameters (ICC profile) to adjust the colors of the image.

### **Choice: None, Document, Photo**

- None: Choose "None" to disable this option.
- **Document:** Choose "Document" if your original contains pure text or a mixture of text and graphic since it is an optimal setting for regular business document.
- **Photo:** Choose "Photo" if your original contains photo to reproduce your photo in vivid color image.



Normal



After Color Matching

### 4.3.3 Scanning color images

The following options are available for scanning color images.

- Brightness
- Contrast
- Resolution
- Invert

### 4.3.4 Scanning grayscale images

The following options are available for scanning gray images.

- Brightness
- Contrast
- Resolution
- Invert

### 4.3.5 Scanning B&W images

The following options are available for scanning B&W images.

- Binarization (Dynamic Threshold)
- Resolution
- Invert

Or

- Binarization (Fix Processing)
- Threshold
- Brightness
- Resolution
- Invert

### 4.3.6 Editing Profiles

The Scanner Properties dialog box allows you to change and save your frequently used scan settings into a profile. You can edit these profiles by renaming or deleting them.

### To add a new profile,

- 1. Customize your settings. (For example, change your resolution, image type, cropping method, scan size, or other scan settings.)
- 2. Click the Image tab and then choose "Profiles" to prompt the "Edit Your Profile" dialog box.

Imer data Cable Beetinn     Recular list     200       Imer data     Perceliar     Duplex, B&MV, 200 dpi       Imer data     Perceliar	Scanner Properties						
	Image Paper Setting Information	on					
	Front Auto Color Detection	Binatzation:	Dynamic Threshold	-			
Image: State	Front Color	Senstivity:	20 *				
Constant Constant III III IIII IIIIIIIIIIIIIIIIIIIIII		Brightness					
Imer Ada Color Beston     peak	V Pront B&W	Contrast:					
Base Sing         Profile         Duplex, BLMW, 200 dpi         Add.         Delete           Base single for base         Profile         Duplex, BLMW, 200 dpi         Reset           Base single for base         Profile         Delete         Reset           Base single for base         Profile         Delete         Reset	Rear Auto Color Detection	Resolution (dpl):	200	Edit Your Profile			
Base MU         Remaine         Reset           Sees seting for both side:         See Source Fleder         Exit           Publice:         Exit         Exit		Invert:	Black on White	Profile	Dupley B&&/ 200 doi	+ Add	Delete
Sene setiop for both sole.	the barrent of the second seco				(baptar, battin, boo ap		
Bon Source Feeder		1		_		Hename	Heset
		Auto Document Feeder	•				
	Burther	Custon	•]				
		2					Exit
	Delada		0	Cancel			

3. Click "Add" to enter the name of the profile and then choose "Save".



4. The new profile will be saved and shown in the "Profiles" dropdown list box.

### To load a profile,

1. From the Image tab dialog box, choose your favorable profile from the "Profiles" dropdown list box.

Profile:	Duplex, B&&W, 200 dpi	Add	Delete
	Duples: 884W/.200 dpi Duplex, Color, 200 dpi Duplex, Gray, 200 dpi Simplex, B&&W. 200 dpi Simplex, Color, 200 dpi Simplex, Gray, 200 dpi	Rename	Reset

2. Your favorable profile will be immediately loaded and displayed on Scanner Properties dialog box.

### To delete a profile,

1. From the Image tab dialog box, click "Profiles" to prompt the Edit Your Profile dialog box.

t Your Profile			
rofile:	Flatbed	• Add	Delete
		Rename	Reset
			Exit

- 2. Choose the profile you want to delete from the dropdown list box.
- 3. Click "Delete". A Confirm message "Are you sure you want to delete this profile?" is prompted.
- 4. Choose "Yes" to delete or "Cancel" to quit.

### To rename a profile,

1. From the Image tab dialog box, click "Profiles" to prompt the Edit Your Profile dialog box.

Profile:	Betsy	Add	Delete
	Eatry Duplex, B&&W, 200 dpi Duplex, Color, 200 dpi Duplex, Gray, 200 dpi Flatbed Simplex, B&&W, 200 dpi Simplex, Color, 200 dpi	Rename	Reset

- 2. Choose the profile you want to rename from the dropdown list box and then click the Rename button.
- 3. Enter new name for the profile.

Rename a Profile	×
Please enter the new	name of the profile:
Original Name: New Name:	Betsy
	Save

4. Choose "Save" to save the new profile or "Cancel" to quit.

#### Note:

- The preset default profiles include Flatbed, Simplex-B&W, 200 dpi, Simplex-Gray, 200 dpi, Simplex-Color, 200 dpi, Duplex-B&W, 200 dpi, Duplex-Gray, 200 dpi, Duplex-Color, 200 dpi. If you have a simplex or a sheetfed scanner, the duplex or the flatbed option will not be available.
- If any setting for a current profile has been changed, a [\*] sign will be marked before the name of current profile, for example, [\* Duplex, Color, 200 dpi]. If desire, click the [OK] or [Scan] button and a dialog box will be prompted to let you save the new profile.

### 4.4 The Compression Tab

The Compression tab allows you to compress your scanned image and choose the level of compression. Bi-tonal images are normally compressed using CCITT standard called Group 4 (G4). Color and grayscale images are often compressed using JPEG technology. Move the **JPEG Quality** slider to the right or left to increase or decrease the level of compression. Note the greater the compression level, the lower image quality. Default is 50%.

Note that the compression depends on your image editing application. If your image editing application does not support the type of compression format, then either a warning message will appear or the image quality of the compressed file will not be acceptable.

JPEG (Joint Photographic Editor Group). This group developed and lent their name to a file compression standard for color and grayscale images that is widely used by scanners, and software applications. On Microsoft Windows-based systems, a file with the extension .jpg has normally been compressed using this standard.

For scanning color or gray images, the following compressions are available:

- None
- JPEG

For scanning B&W images, the following compressions are available:


- None
- G4

nage Compression Paper Set	ting Information		
Front Auto Color Detection	Compression:	None	-
Front Color	JPEG Quality:	<u> </u>	
Front Gray	]		
Front B&W			
Rear Auto Color Detection	ř.		
Rear Color	]		
Rear Gray			
Rear B&W	1		

### The Compression tab dialog box

### Compression:

To complete your scan at a rated speed, the scanned image is compressed by default during transmission. However, if you wish to obtain the highest image quality, you can choose to uncompress the image data before it is output.



### To Application:

Choose if you wish to compress the image data and transfer it from the TWAIN driver to the application. Note Bi-tonal images are normally compressed using CCITT standard called Group 4 (G4). Color and grayscale images are often compressed using JPEG technology. Move the [**Image Quality**] slider to the right or left to increase or decrease your image quality. Note the greater the image quality, the lower the compression level. Default is 50%.

Note that the compression depends on your image editing application. If your image editing application does not support the type of compression format, then the image of the compressed file will look abnormal.

# From Scanner: (*Note: The availability of this feature varies due to scanner model.*)

Choose if you wish to compress the scanned image and transfer it from the scanner to the TWAIN driver.

Choice: Uncompressed, \*Best Image Quality (Low Compression Level), Better Image Quality (Normal Compression Level), Normal Image Quality (High Compression Level). (\*: Factory Default)

🍐 Scan	nner Properties	;			×
Image	Compression	Paper S	etting Information		
E	Front Auto Color Front Gray Front B&W Rear Auto Color Rear Color Rear Gray Rear B&W		To Application Compression:	None v	
			From Scanner Compression Mode:	Best Image Quality	
	Defaults			ОК С	ancel

### 4.5 The Color Dropout Tab

### 4.5.1 Color Dropout Selection


The [**Color Dropout**] tab allows you to select either green, red, blue, or a color of your choice to remove the details of the selected color from a scanned image. This feature is used to sharpen your text when using OCR (Optical Character Recognition) software. Note this feature applies only to the gray or black and white image.

## Choice: None, Auto, Remove Red, Remove Green, Remove Blue, Custom

- **None**: Does not remove any color.
- **Auto**: Automatically outputs the image with the details of the primary color removed.
- **Remove Red/Remove Green/Remove Blue**: Outputs the image with the details of the specified color removed.
- **Custom**: Specify the color you wish to remove by entering its RGB (Red, Green, and Blue) value respectively.

Advanced Options:

- Quality Mode: Range: 0~20. Default: 10
   When [Quality Mode] is selected, you can determine the color to be dropped out using the [Filter Threshold] slider. A lower value will drop more of the selected color out, while a higher value will leave more of the selected color in.
- **Normal Mode**: Use an optimized setting to determine the color.

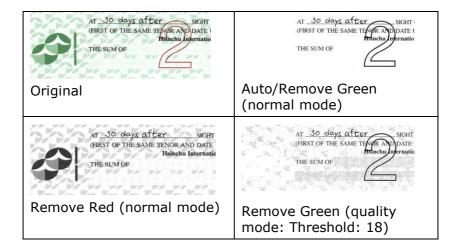

Preview the color dropout result:


To preview the color dropout result, please follow these steps:

- 1. Click the [**Scanner Properties**] icon (<sup>SSE</sup>) on the upper left corner, and choose [**Tab**] to show available tab names.
- 2. Choose [**Preview**] to show the Preview tab.
- 3. Click the [**Preview**] tab to show the Preview page.
- 4. Load your document to the scanner and click the [**Preview**] button to get a preview image.
- 5. On the [Image] tab, click [Gray] or [Black and White] image mode and then choose [Custom] on the [Color Dropout] tab. A [Preview window] button will be displayed.
- 6. Click the [**Preview window**] button to prompt the [**Preview**] window with the previewed image.

- 7. Move your cursor over the preview image. Your mouse cursor now becomes an Eyedropper.
- 8. Click to select a color which you wish to remove.
- 9. Click and hold your mouse button to view the result after removing the specified color. If the result is satisfactory, click [**OK**] to close the Preview window.



The Preview Window

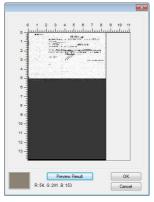


The Color dropout result

nage	Compression	Color Dropout	Paper I	Preview Se	tting Information		
	Front Auto Color	Detection	Color Drop	pout:	None		•
	Front Color				Advanced Pro	cessing	
	Front Gray		Mode:		Normal		*
	Front B&W	)	Filter Thre	shold:	10 4		F.
_			Red;		71		
	Rear Auto Color	Detection	Green:		184 🛓		
	Rear Color	]	Blue:		184		
	Rear Gray	)			<u></u>		
	Rear B&W						
	Defaults					ОК	Cancel

### The Color Dropout dialog box

To select a color on the Color palette,

1. Click the Color Dropout tab from the Scanner Properties dialog box.

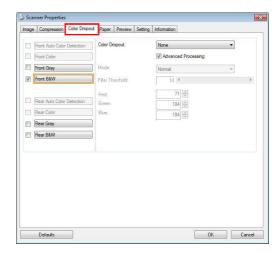

 Choose Gray or B&W from the Image Selection box and click "Custom" from the Color Dropout drop-down menu. The Color palette appears.

mage	Compression	Color Dropout	Paper	Preview 3	Setting	Information			
	Front Auto Color	Detection	Color Dr	opout:		Custom		•	
	Front Color				_ L	Advanced	Processing		
	Front Gray		Mode:			Normal		-	
☑ [	Front B&W		Filter Th	reshold:		10 4			۴
-	Rear Auto Color	Data	Red:			136	1000		
	Rear Color	Detection	Green:			129	and a second		
- 6			Blue:			119	A V		
	Rear Gray								
	Rear B&W					review Windor			
			_			TOTION TITLOU			

 Move your cursor over the palette. The cursor becomes a cross sign.

mage	Compression Color Drope	out Paper Preview Se	etting Information	_
	Front Auto Color Detection	Color Dropout:	Custom 👻	
	Front Color		Advanced Processing	
	Front Gray	Mode	Normal +	
☑	Front B&W	Filter Threshold:	10 <	1
		Red:	82 🚔	-
	Rear Auto Color Detection	Green:	193 🚭	
	Rear Color	Blue:	62 🌩	
<b>m</b>	Rear Gray			
	Rear B&W			
			Preview Window	

4. Click to choose a color. The RGB values are changed simultaneously.

### 4.6 The Paper Tab

The Paper tab allows you to define values relating to image output (i.e., Auto Crop or not, Scan Area, OverScan, Multi-Feed Detection).

Cartier Sheet Mode         None         Portrat         Ladscope         Xolfset:         0.00         Vridtr:         14.00         Adjustment:         Left:         0.00         Flight:         0.00         Background Setting:         Automatic         Vint:         Inches	Scanner Properties				
Carrier Street Mode  Scan Area:  Carrier Street Mode  None  Portrat Ladscope Vidtr: Street: COO Lengtr: Ladscope Vidtr: Lengtr: Left: COO Street: COO	age Paper Setting	Information			
Scan Area: None   Potrat Pofrat Pofra	Cropping:	Automatic		•	
• Portrat             • Landscape             ×Offset:             • 0.00             • Vidtre:             • 0.00             • Vidtre:             • 0.00             • Top:             • 0.00             • 0.00		Carrier Sheet	Mode		
X-Offset:         0.00 v         Widt:         8.50 v           Y-Offset:         0.00 v         Length:         14.00 v           Adjustment:         Left:         0.00 v         Top:         0.00 v           Background Setting:         Adtomatic         V         0.00 v         Bettom:         0.00 v           Feeding         Transport Timeout:           0 Seconds         V	Scan Area:	None		· · · · · · · · · · · · · · · · · · ·	
Y-Offset         0.00 +         Length:         14.00 +           Adjuatment:         Left:         0.00 +         Top:         0.00 +           Background Setting:         Automatic         •         0.00 +         Bottom:         0.00 +           Hit:         Inches         •         •         •         •         •         •           Feeding         Transport Timeout:         •         •         0 Seconds         •         •		Portrait	Landscap	e	
Adjustment: Left: 0.00 Top: 0.00 Bottom: 0.00 Control Bottom: 0.00 Contr		X-Offset:	0.00	Width:	8.50 🜲
Rght:     0.00 +     Bottom:     0.00 +       Background Setting:     Automatic     •       Unit:     inches     •   Feeding Transport Timeout:       •     •     0 Seconds		Y-Offset:	0.00	Length:	14.00
Background Setting: Automatic  Unit: Inches Feeding Transport Timeout:  O Seconds	Adjustment:	Left:	0.00	Top:	0.00
Unit: Inches  Feeding Transpot Timeout:		Right:	0.00	Bottom:	0.00
Feeding Transport Timeout:	Background Setting:	Automatic	•	]	
Transport Timeout:	Unit:	Inches	•	]	
	Feeding				
Tray Position:	Transport Timeout:	•	4	0 Seconds	
	Tray Position:		▼ sheets		
	Defaults				OK Cancel

### The Paper tab dialog box

### 4.6.1 Cropping

Cropping allows you to capture a portion of the document being scanned. Choice: Automatic, Automatic (36"), Fixed to Transport, EOP (End of Page) Detection, Automatic Multiple, Relative to Documents.

Options	Description
Automatic	Automatic adjusts the cropping window according to different document sizes and automatically straighten a skewed document. Use this option for batches of mixed-sized documents.
Automatic (36")	Automatically adjusts the cropping window according to different document sizes smaller than 36" and automatically straighten a skewed image. Use this option for batches of mixed-sized document.
	<i>Note: The availability of this feature varies due to scanner model.</i>
Fixed to Transport	This feature allows you to define the area or zone to be imaged. Use for batches of same-sized documents. If you select this option, you can use the arrow keys to define the x and y offset values, width and length to redefine your scanned area. The Display window will show image placement as you change the values.
EOP (End of Page) Detection	This feature allows you to define the area or zone to be imaged. Use for batches of same-width but different length documents. If you select this option, you can use the arrow keys to define the x and y offset values, width and length to redefine your scanned area. The Display window will show image placement as you change the values.

Automatic Multiple	This option allows you to place various sized documents such as photos, ID Cards, or business cards on the flatbed (if available) and lets you create multiple individually cropped images in one scan. Note: To correctly create multiple images, please make sure there is at least 12mm (0.5") of space between each document.
Relative to Document	This option allows you to crop different areas on your documents and deliver these images in B&W, Gray, or Color separately. For example, there are applications which require you to store the entire document in B&W and a part of the document in color to save storage space. This is useful for documents where a photograph or signature appears in a consistent area on the document such as resumes, and so on.

The following options are only available when **Fixed to Transport** is selected.

- **X-Offset** the distance from the left end of the scanner to the left edge of the scanning area.
- **Y-Offset** the position from the top end of the document to the top end of the scanning area.
- Width the width of the scanning area.
- **Length** the length of the scanning area.
- **Center:** automatically calculates the x-offset for center-fed feeding based upon document size selected.
  - <u>لے</u> اے


— relocate the scan area by click the arrow key on the cross sign while retain the scan size. View the result from the Display window. The Adjustment option is available when **Automatic** is selected.

 Adjustment —adds a positive/negative margin value Top/Bottom or toward left/right of the image.
 Adjustment is used when the automatic document feeder is used. Adjustment reduces the possibility of corner clipping on skewed images. To set Adjustment values, use the UP/Down buttons to select where you want to apply Adjustment values: Top/Bottom or Left/Right, and then select the amount of inches/mm/pixels applied. Select a value within the range of 0.00 to 1.00 / -1.00. **Relative to Document:** (used for batches of same-sized documents)

This option allows you to crop different areas on your documents and deliver these images in B&W, Gray, or Color separately. For example, there are applications which require you to store the entire document in B&W and a part of the document in color to save storage space. This is useful for documents where a photograph or signature appears in a consistent area on the document such as resumes, and so on.

The following procedure describes how to reproduce the entire document in B&W and a portion of document (picture) in color.


- 1. On the Paper tab, choose "Relative to Document" or "Fixed to Transport" from the Cropping option.
- Choose your scan size from the Scan Area option. The selected scan size will be displayed in a red rectangular box. This is also the scan size of your entire document. (For example, ISO B5. If you have not chosen a scan area and leave the selection as None, then the default area will be the scanner's maximum.)

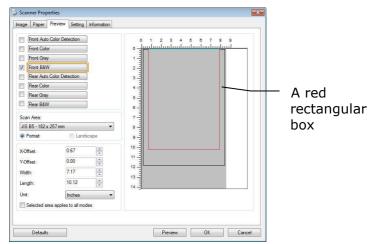


3. Click the Preview tab to display the Preview window. A black rectangular box appears to indicate the max. scan size your have just selected.

	🚽 Scanner Properties		
The Image — Selection Box	Prot Loba         -           Front Stary         -           Face Acta Caler Detectory         -           Bare Acta Caler Detectory         -           Bare Caler         -           Bare Caler <td></td> <td>A black rectangular</td>		A black rectangular
	Prenat     Lardicape     Penat     XOffset:     1/2     XOffset:     0.02     Voffset:     Voffs	er OK Enut	box

4. Click the Preview button to view the entire image in low resolution to correctly crop your relative scan area.

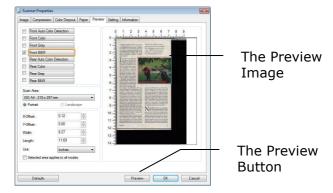

- 5. Select image type from the Image Selection box. The selected image will appear in highlighted color. (For example, Front Color)
- Place your cursor on the Preview window and click your left mouse button. A cross sign will appear as illustrated. Create your relative scan size diagonally by dragging the left mouse button to your preferable size. The selected area will appear in a red box as illustrated.

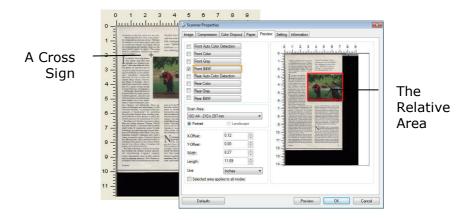

- 7. Check the B&W image from the Image Selection box to scan the entire document.
- 8. Click the Scan button to start scanning the document in two image types and sizes. (See the result in below.)





The relative area in color

### The entire document in B&W

### 4.6.2 Other Paper Selection

### **Carrier Sheet Mode:**

Check this option to automatically crop the scan window according to your document size when scanning non-standard document (fragile, irregular-size document) with a carrier sheet (optional). Note: The availability of this option varies due to scanner model.

### Loading Documents Using a Carrier Sheet

A Carrier Sheet is a plastic sheet specifically used for loading non-standard document onto the scanner. It allows you to scan document that can not be scanned in the regular way. Also, documents larger than A4 size, such as A3 and B4, can be scanned by folding in half, inserting into the Carrier Sheet, and scanning in duplex mode. You can also scan documents that can be damaged quite easily such as photographs, or irregular size documents that are difficult to load directly such as clippings.

### To scan document using a Carrier Sheet,

### For documents larger than A4/Letter size, such as A3

- a. Fold the sheet to be scanned in half.
- b. Fold the sheet tightly and smooth out crease. Otherwise, the sheet may be skewed during scanning.




# 1. Open the Carrier Sheet and place the document inside.


Align the top of the document to the top of the Carrier Sheet (the printed area).

For documents larger than A4/letter size, such as A3

Align the top of the document to the top of the Carrier Sheet (the printed section) and the folded portion to the right edge of the Carrier Sheet so that the document fits into the Carrier Sheet at the upper corner.



### **For non-standard document** Center your document in the Carrier Sheet.

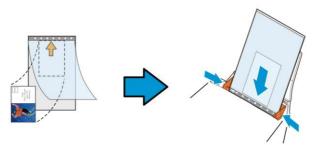

- 2. Load the Carrier Sheet with the gray section (printed section) facing downwards.
- 3. Adjust the paper guides to the width of the Carrier Sheet. Adjust the paper guides so that there is no space between the guides and the Carrier sheet. Space between the guides and Carrier Sheet may cause the Carrier Sheet to become unaligned during scanning, and skew the scanned image.
- 4. Start the scan.

### Notice:

- [Carrier Sheet] is available for the models that support the Carrier Sheet.
- Some functions are disabled when [Carrier Sheet] is checked.
- This option may not work properly on some applications.

### Scan Area

Choose your desired paper size with the drop-down list box. Or you may select a custom paper size by clicking the **Scan Area** box and then click **Add** to include in the choice.

### Choices are listed below:

None
None
US Letter- 8.5"x 11"
US Legal – 8.5" x 14"
ISO A4 – 21 x 29.7 cm
ISO A5 – 14.8 x 21 cm
ISO A6 – 10.5 x 14.8cm
ISO A7 – 7.4 x 10/5 cm
ISO B5 – 17.6 x 25 cm
ISO B6 – 12.5 x 17.6 cm
ISO B7 – 8.8 x 12.5 cm
JIS B5 – 18.2 x 25.7 cm
JIS B6 – 12.8 x 18.2 cm
JIS B7 – 9.1 x 12.8 cm
Scanner Maximum
Long Page (<118")

### Long Page (<118"):

When you need to scan documents whose length exceeds scanner maximum, please choose **Long Page**. Note if **Long Page** is selected, the **Multi-Feed Detection** will not be available. (Note: This option and the maximum allowable document length vary due to type of scanner.)

When **Long Page (<118")** is selected, be sure to specify your document size in the **Length** and **Width** field.

### Notice when scanning long page document:

- 1. Pull out the extension in the ADF Paper Tray.
- 2. Secure enough space around the Output Tray to prevent the ejected paper from falling off the Output Tray.
- 3. To ensure the performance, in color mode, set the resolution to be 300 dpi or lower; in Black and White mode, set the resolution to be 600 dpi or lower.
- 4. Depending on your system environments, application, or your specified paper size, there may be insufficient memory to perform scanning.

### OverScan

Overscan allows you to add a specific margin at top and bottom or right and left (Options vary based on the type of scanner) of the edge of the image. This is used to reduce possible corner clipping on the skewed images and often applied to a batch of skewed document to be scanned in the auto document feeder. Select a value between 0 and +5 mm. Note the overscan result will not be shown in the Display window and that the availability of the function varies based on type of scanner.

### **Pre-Feed**

Choice: Enable, Disable. If enable is selected, you can set the amount of time the scanner starts pre-feeding your paper after your documents has been loaded into the feeder. The default is disable. Note: The availability of this option varies due to scanner model.

### Transport Timeout

Set the amount of time the scanner will wait and then start auto scan after the first scan job is completed. If you have many separate documents need to be scanned at the same scan settings, this feature is especially useful. The default is 0. The value ranges from 0 to 30 seconds.

#### Note:

1	Within the specified timeout period, if you load your document to the feeder, the scanner starts scanning
	automatically.
2	If your scanner has a flatbed option and you place you

2 If your scanner has a flatbed option and you place your paper on the flatbed, after the timeout period, you need to click the Scan button on the TWAIN user interface to start scanning.

# BackgroundThis option allows you to set your scan<br/>background. Choice: White Background,<br/>Black Background.

Note: For a sheet-fed scanner with an auto document feeder, this option is currently available only in the "Auto crop" mode. For a scanner with a flatbed platen, this option is available either in the "Auto crop" or the "Fixed to Transport" mode.



White Background



Black Background

# 4.7 The Multi-Feed Detection Tab

### **Multi-Feed Detection**

Multi-Feed Detection allows you to detect overlapped document that go through the auto document feeder. Multi-Feed usually occurs due to stapled documents, adhesives on documents, or electro-statically charged document. Note : The availability of the function varies based on type of scanner.

age Paper Multi-Feed Detection	Preview Setting Information	
Multi-Feed Detection		
Additional Length Detection:	None	
Utrasonic Detection		
Stop Scanning after Multi-Feed	Auto	
Multi-Feed Alarm:	C.\Windows\Media\ding.wav	Browse
Unit: Inches	•	

# Additional Length Detection

Additional Length Detection allows you to define the length of document being multi-fed. This value indicates the additional length exceeding your scan area. The Display window will show the size of the document as you change the value. A value of 0 indicates no additional length detection. The Additional Length Detection is best used when scanning same-size documents in the auto document feeder.

# **Ultrasonic Detection**

Ultrasonic Detection allows you to set overlapped document by detecting paper thickness between documents. Note : The availability of the function varies based on type of scanner.

There are two options available if Multi-Feed is detected.

# • Stop Scanning after Multi-Feed

If this is selected, the scanner will stop the feeder and prompt a multi-feed warning message. In addition, the multi-feed paper will be ejected from the scanner automatically.

*Note: The availability of the* [*Auto Clear Multi-Feed Paper*] feature varies based on scanner type. If your scanner does not support this feature, remove the multi-feed paper manually.

If this is not selected, the scanner will continue scanning the entire document though multi-feed is detected. After the entire document has been scanned, a multi-feed dialog box will be prompted to indicate the page number which has been detected multi-feed and need to be rescanned.

#### • Multi-Feed Alarm

If a wave file is added, the scanner will make a sound alarm if multi-feed is detected yet no Warning dialog box will be displayed.

# How to add the sound alarm :

- 1. Click the Browse button on the right side of the speaker icon. The Open dialog box appears.
- 2. Choose your wave file.
- 3. Click the Open button. The wave file is added.

#### Units

Defines the primary measurement system. **Inches, Millimeters,** and **Pixels** are available.

### 4.8 The Preview Tab

The Preview tab allows you to preview (a low-resolution scan) your image before final scan. This preview image lets you allocate your scan area. You can choose your scan area by the "Scan Area" drop down list box or placing your cursor on the Display window and dragging it diagonally on the Display window. Then, a red rectangle box will appear to indicate the selected area.

Note: If you choose "Automatic Cropping" on the "Paper Tab", then to select a scan area on the Preview tab is not allowed.

mage	Compression	Color Dropout	Paper	Preview	Setting Information	
F	Front Auto Color	Detection			0 1 2 3 4 5 6 7 8 9	
- F	ront Color				• <u>huduuluuluuluuluuluul</u>	
E (F	ront Gray				1 - Here a final sector to an Here a secto	
	ront B&W				2 - 2	
E	Rear Auto Color	Detection			3 - There are a series and the series of the	
E (	Rear Color	)			4	
E 6	Rear Gray				5 Shink a characteristic and shink a s	The Display
E (F	Rear B&W					Window
Scan	Area				T	Window
_	A4 - 210 x 297	mm		-	B - Note and the second	
Po	ortrait	Candsca	вре		O -      O -	
X-Offs	set:	0.12	A V		10	
Y-Offs	set:	0.00				
Width	ŭ (	8.27			12	
Lengt	h:	11.69	-		14	
Unit:		Inches		-		
		plies to all modes	5			

#### **The Preview Tab**


# 4.9 The Enhancement Tab

The Enhancement tab allows you to set following additional image processing settings.

nage	Paper	Multi-Feed D	etection	Preview	Enhancement	Setting	Information	
	<b>h Hole F</b> Punch Ho	Removal ble Removal						
Back	ground \$	Setting						
Bac	kground	Processing:	None	i .	*			
Sen	sitivity:		4		Þ	0		
Fill C	Color		White	э	*			
	eckle e Numbe	ert	0	Pixels	1	Line Re None	emoval •	
Desp	eckle					Line Re	moval	
Nois	e Radius		1	÷ Pixels	3		100 Millimeters	

# The Option tab dialog box

PunchYou can remove punch holes from the output<br/>scanned image when scanning punched document.HoleNote the availability of this feature varies<br/>depending on your scanner model.

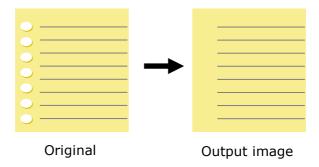

#### Punch holes can not be removed when:

- Resolution is set lower than 150dpi
- The hole is near the edge of the document
- The holes are not aligned along the edge of the document
- Punch Hole Removal is available only when "Auto Crop" is enabled. If either "Fixed to Transport", "EOP (End of Page) Detection", "Automatic Multiple", "Relative to Documents" is selected from the Cropping option on the Paper tab, the Punch Hole Removal option will be disabled.

Shadow RemovalWhen 「Flatbed」 on the 「Scan<br/>Source」 option is selected on the<br/>「Image」 tab, the 「Shadow<br/>Removal」 option will be enabled. Click<br/>to remove the shadow on the book spine<br/>when scanning a book.



# Background Processing: The [Background Processing]

option allows you to smooth background color or remove it to make image clearer. The option is especially useful for documents with color forms such as invoices.

### Choices: None (default), Smooth, Removal

- None no background processing will be performed (default)
- Smooth produces images with a more uniform background color. This option improves image quality.
- Removal identifies the background color and then removes it.

#### Sensitivity: Choice: 0, 1, 2, 3, 4. Default: 0

- The higher the value, the more background color will be kept.

# Mode: Auto, Moiré

If [**Smooth**] is selected in the [**Background Processing**] option, then the choices for the [**Mode**] option includes Auto, and Moiré.

- **Auto** uses the factory preprogrammed mode to proceed background smoothing.
- Moiré Remove the moiré patterns that appear on the background of the image when scanning printed material.

If [**Removal**] is selected in the [**Background Processing**] option, then the [**Mode**] option will be replaced with [**Fill Color**]. Choices: White, Auto.

- White identifies the background color and substitutes it with white.
- **Auto** identifies the background color and substitutes it with the color of the largest background zone.

Fedex. International Air Waybill /10011/0025/0011227182/5 1 Fran Plane Peer Pass prior and pass last for the Access function 1614+3382-9 B Express Package Service T Enter bet first 8865-872 EDD ----Sedara Nata Partie but Barrants Commy AVISION INC ----- SCIENCE BASED INDUSTRY PARK 8 Special Handling ---- 20 CREATION 1 RD Varuena 7 Payment WHERE CHU CITY TU ann TU Turin 30077 (Strate Chu - 0928 034 54) SMC Inc. Bit Adda and man to No. 16, RED Rd, ~ Tainan Taiwan, R.O.C. The - Taiwan, R.O.C. - 20647 
 National for the formation

 Instance of the formation

 Instance of the formation of For Currentian Instructions, see back of Contraction of the second seco B040 8360 0526 III 0402 Ship and track - Berleneritte beritana.

Background Processing: None




**Background Processing**: Smooth



**Background Processing**: Removal Fill Color: White

**Note:** Background color in small zone will not be processed or removed.

EdgeCheck White or Black if you wish to add white or<br/>black edge on the border of your scanned image.<br/>Enter the value from 0 to 5 mm. Default value is 0.

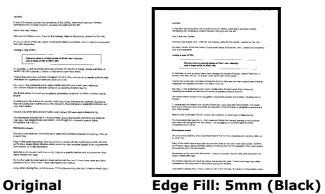


# Despeckle

Occasionally small dots or specks appear in the background of a scanned image. Remove unwanted speckles provides a cleaner image for OCR (Optical Character Recognition) processing, and also helps to reduce compressed file size.

Define the speckles (also known as image noise) you wish to remove by specifying its number (size) and radius (range). The measuring unit is pixel. The higher the number, the more speckles will be removed.

 $\mathcal{A}$  plague on thee! Hast thou never an eye in thy head? Canst not hear? -The First Part of King Henry the Fourth: 2.1.26-27 A carrier to Gadshill, the host of a tavern. Before Despeckle

(noise number:0, noise radius:1)

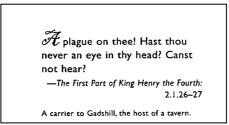

After Despeckle (noise number:22, noise radius:10)

#### Note:

- The function is currently available for Black and White image only.
- To scan at rated speed, it is recommended to set the noise radius up to 10 pixels.

**Line Removal:** When **Black and White** image mode is selected on the [**Image**] tab, the [**Line Removal**] option will be enabled. Line Removal erases lines on the image and then reconstructs characters so the OCR (Optical Character Recognition) accuracy can be improved.


#### **Choices: None, Form, Horizontal, Vertical**

None – the default mode which does not remove any line.

**Form** – remove any form in the document.

**Horizontal** – select [**Horizontal**] and then enter the length of horizontal line to remove only the horizontal line exceeding your specified length.

**Vertical** – select [**Vertical**] and then enter the length of vertical line to remove only the vertical line exceeding your specified length.

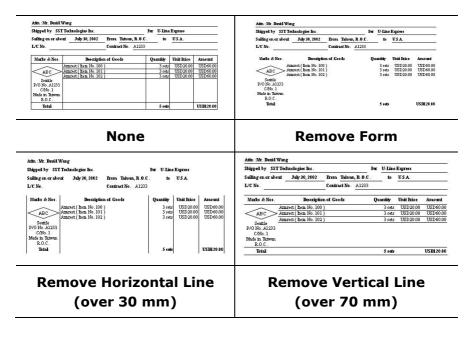

# 4.10 The Rotation Tab

The Rotation tab allows you to set the following image rotating options:

nage	Paper	Multi-Feed Detection	Preview	Rotation	Enhancement	Setting	Infor	mation	
Rotat	ion		· · · · ·		1 <u></u>	1005 - 566	Ch2	1.	
Rota	ation Deg	grees :	None			•	lode:	Quick	w
Image	e Control	Options							
Split	Image:		None			•			
Flip S	ide Rota	tion							
		Book     Options			AV OF	anfold			
1000									
1	Mirror								
	Mirror								
	Mirror								
	Mirror								
	Mirror								

RotateChoose the rotation angle from the drop downImagelist if you wish to rotate your scanned image.

Choice: None, 90°CW(clockwise), 90°CCW(counter clockwise), 180°, Auto based on contents. Auto rotate every even page.

123	1 2
	ΰ.
Original	Rotate 90°CW
$\tilde{\mathbf{\omega}}$	173
2	
<del>,                                     </del>	
Rotate 90°CCW	Rotate 180°

Auto based on contents: Automatically rotate images based on the contents of document. When <sup>¬</sup> Auto based on contents <sub>¬</sub> is selected, its modes will be enabled to let you select more options.

#### Mode: Quick, Full Text, Complexity

**Quick** – the default mode to let you rotate images at the fastest speed.

**Full Text** – the enhanced mode for documents with mixed text orientation.

**Complexity** – the enhanced mode yet at the slowest speed for document with complex image or text orientation.

#### Auto rotate every even page:

Automatically rotate 180° on every even page. This is especially useful when you scan the inside pages from a book. As a result, if you choose "Flatbed (book)" from the "Scan Source" option, "auto rotate every even page" will be selected as default.

# Note: This option varies based on type of scanner.



Split By splitting an image, two separate images are created horizontally or vertically. This is useful for documents containing two pages per image when you want to save them as two images (one page for one image). Choice: None, Horizontal, Vertical. Default is None.

**Horizontal:** Divide one image into the upper half and the lower half.

**Vertical:** Divide one image into the left half and the right half.





**Split Horizontally** 

**Split Vertical** 

# Flip Side<br/>RotationSelect "fanfold" to rotate the image of the<br/>reverse side to 180 degrees.

This is applied to double-sided document which are viewed in portrait are sometime fed into the scanner in landscape or vice versa.

# Choice: Book, Fanfold.

If "Book" is selected, the image of the reverse side will not be rotated.

The following illustration shows the documents which should be viewed in portrait are fed into the scanner in landscape



Image<br/>ControlCheck the Mirror box if you wish to reverse the right<br/>and left side of your image.Option



Original



**The Mirror Effect** 

# 4.11 The Separation Tab

The Separation tab allows you to enable the detection engine to detect the blank page, barcode, and patch code and then notify the software application which supports document separation to separate your multi-page documents. Choices: Blank Page Removal, Barcode Detection, Patch Code Detection.

nage	Paper	Multi-Fee	d Detection	Preview	Rotation	Separation	Enhancement	Setting	Informatio	n
Blank	Page R	emoval								
	Blank Pa	ge Remova	I Threshold:			1 10 10 1		1.0.1	5	ō %
Barco	de Dete	ction								
E	Inable			Select	Barcode Ty	/pe	Zone :	All		-
Patch	n code D	etection								
<b>E</b>	nable									
	Default							ОК		Cancel

 Blank Page Removal
 Choices: None, Blank Page Removal Threshold, Image Size.
 None – Do not remove the blank pages.
 Threshold - Move the slider to the left or right to define your threshold for the blank page.
 Image Size – Range: 1~ 10000 KB. Specify your desired image size to detect the page as a blank page. For example, if 3 KB is selected, any page less than 3 KB will be recognized as blank page.

#### **Barcode** Detection Check [Enable] to detect barcode and notify the software application for advanced processing. Please note the whole document will be checked and no specific detection area needs to be designated.

When the bar code has been detected successfully , a file [avbarcode.ini] will be created and stored in the following path:

Windows XP: C:\Documents and Settings\All Users\Application Data\%PRODUCTNAME%

#### Vista, Windows 7, Windows 8, Windows 10: C:\ProgramData\%PRODUCTNAME%

#### **Barcode Types:**

The following barcode types can be detected.

#### **Two-dimensional codes**

- Aztec
- DataMatrix
- PDF417
- QR Code

#### **One-dimensional barcodes:**

- Add-2
- Add-5
- Australian Post 4-State
- BCD Matrix
- Codabar
- Code 128
- Code 32
- Code 39
- Code 93
- DataLogic 2 of 5
- EAN 128
- EAN-13


- EAN-8
- GS1 DataBar
- Industrial 2 of 5
- Intelligent Mail
- Interleaved 2 of 5
- Inverted 2 of 5
- IATA 2 of 5
- Matrix 2 of 5
- PostNet
- Royal Post 4-State
- UPC-A
- UPC-E

# Barcode Zone:

Specify the barcode zone to be detected.

Select  $\lceil AII \rfloor$  to checks the whole document and detects barcodes. Or you may speed up the process by specifying a detection area since only the specified area is checked.

#### Choice: All, Top, Bottom, Left, Right, Bottom Right, Bottom Left, Top Right, Top Left

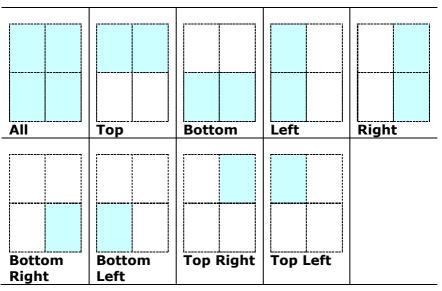

#### Choice for barcode zone on a page:

#### Note:


- Recommended resolution: 200~600 dpi for regular barcode, 300~600 dpi for QR code
- Skewed barcodes may not be recognized correctly.
- Using the same sheet repeatedly may decrease the recognition accuracy due to accumulated dirt on the sheets. If the sheet is not recognized correctly or gets smudged, replace it with a new sheet.

#### Patch code Detection:

Check [**Enable**] to detect patch codes and notify the software application for advanced processing.

A patch code is a pattern of parallel, alternating black bars and spaces (i.e. a barcode) that is printed on a document. Patch code sheet is most commonly used as a document separator in a stack of document. You can find various sizes of patch codes (PDF) by choosing [Start] menu>[All Programs]>[Avision Scanner Series]>[Patch code] in succession.

Simply print the PDF file to produce the patch code sheet. Insert the patch code sheets to wherever you want the file to separate.

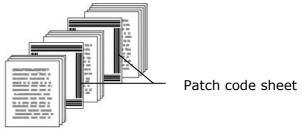

#### Notes to print the patch codes:

- Use blank white paper.
- Set the scaling to 100%. The sheet is not recognized correctly when printed in a size smaller than the original.
- Do not use toner saving mode. The sheet is not recognized correctly when the print is too light.
- Do not use thin paper in order to avoid bleed-through from the back.
- When you copy a patch code sheet that you printed out, make sure to copy by the same size and brightness as the original copy.
- Use the same sheet repeatedly may decrease the recognition accuracy due to accumulated dirt on the sheets. If the sheet is not recognized correctly or gets smudged, replace it with a new sheet.

# 4.12 The Setting Tab

The Setting tab allows you to set the following settings:

mage Paper Setting Information	
Cache Mode: Memory Size Memory Size: •	▼ Default
Energy Saving Control	
Enable Energy Saver	<
Enable Power Off	< > 240 minutes
Show Warning Message Auto Scan from Flatbed	Compression Color Dropout Multi-Feed Detection Preview Rotation Separation Enhancement Imprinter

The Setting tab dialog box

Energy Saving Control	Check the <b>Enable Energy Saver</b> box and move the slider to set the amount of time to start the energy saver after your last action. The range is from 1 to 60 minutes.
Enable Power Off	Check the <b>Enable Power Off</b> box and move the slider to set the amount of time to automatically turn off the scanner after your last action. The range is from 1 to 480 minutes. The default is 240 minutes (4 hours). Note the value of "Power Off" has to be greater than or equal to the value of "Energy Saving".

Cache	Mode: None, Page Number, Memory Size.
	This option allows you to assign a specified memory size from the available RAM to process the image data. By specifying a smaller memory size, you can free more memory for other applications you are running. By specifying a larger memory size, you can have more memory to process the image data especially when you have a large amount of documents needed to be scanned.
	You can also specify your memory size by the page number. For your information, an A4 color document scanning at 300 dpi consumes approximates 24MB.
	<b>Image Count</b> When the selected cache mode is "none", the image count option allows you to assign number of pages you need to scan. For example, if you wish to scan the first two pages, simply move the page slider to 2, and the scan action will be stopped when the scanning of the first two pages have been completed.

Show Scanning Progress	Check and the scanning progress bar will be shown during scanning.
Show Warning Message	Check to show the warning messages such as "ADF pad count exceeds 50,000 scans (the number varies based on type of scanner). Please replace the ADF pad and reset the pad count."
Auto Scan from Flatbed	If [Auto Scan from Flatbed] is enabled in the Scanner Properties dialog box, the scanner will perform auto scan each time when the document cover is closed.
	<ol> <li>If Avision's bundled software Avision Capture Tool is opened, the auto scan will be started from Avision Capture Tool software application.</li> <li>If Avision Capture Tool is not opened, the auto scan will be started from Avision's Button Manager V2 software application.</li> <li>If your TWAIN-compliant software application and also the TWAIN user interface are opened, the auto scan will be started from your TWAIN-compliant software application.</li> </ol>
Save Settings after Closing	Check to save your scanner properties settings after leaving the dialog box. Next time when you open the Scanner Properties dialog box, the previously saved settings will be shown.

# 4.13 The Imprinter Tab

The Imprinter tab allows you to print alphanumeric characters, date, time, document count and custom message on your scanned image if digital imprinter is selected or at the back of your document if external imprinter is selected.

nage	Paper	Setting	Imprinter	Information					
🔲 Di	gital Impi	inter							
Conte	ent								
V Pr	int All								
Custo	orn:								
Cour	iter:		0001	(	Þ	Date/Time:	None	v.	
Custo	om Font		Nom	nal		-			
Adva	nced						Print Position		
Font.	Attribute	s:	Nom	nal		-	Position:	Middle	Ŧ
String	) Orienta	tion:	Nom	nal		-	X Offset:	0 mm	
							Y Offset	0 mm	
	7								
Samp 000									
000									
								More	]

**Choice: External Imprinter, Digital Imprinter.** If you have installed an external imprinter, choose external imprinter. If you do not have an imprinter, choose digital imprinter. Note External Imprinter provides a vertical and rear-side print capability while digital printer provides a horizontal and front-side print capability.

# Contents

Print All	Check <b>Print All</b> to automatically print the text at all pages of your documents. Uncheck <b>Print All</b> to print the text for the first page of your documents only.
Custom	Enter your custom text to be included in your print string.
Counter	Show the document count for the scan session. This value is increased sequentially by the scanner.

Date/Time	Choose if you wish to include the date and time in your print string. Format: YYYYMMDDHHSS For example, 20090402170645-check0001 indicates year, month, date, hour, seconds, your custom text and the counter.
Custom Font	Choose your desired font. Choice: Normal, Fixed Width Fixed Width (Mono spaced) fonts have a fixed character spacing. So each character occupies the same width.

# Advanced

Font	Choose your font attributes. Choice:
Attributes	Normal, Underline, Double, and Bold.

String Orientation	Choose your string or Choice: Normal, Ro Vertical Inversion, degrees CCW	tated, Vertical,
	2010abc	2010abc
	Normal	Rotated
	2 0 1 0 a b c	с 2010 201
	Vertical	Vertical Inversion
	2010abc	2010abc
	90 degrees CW	90 degrees CCW

Print Position	Choose the position you wish to print your string. Move the slider to the right to increase the value or to the left to decrease the value. Range: 0~355mm, default:0 mm The value indicates the height from the bottom of your paper to the last letter of your string. This option is available only if an external imprinter is installed.		
		0001abc 2010 ←	The value of Print Position

# Print Position (for digital imprinter)

Choose the position of your printed string. **Choice: Top, Middle, Bottom, Custom.** If Custom is selected, enter the X and Y offset value to specify the position.

# 4.14 The Information Tab

The Information tab displays the following system and scanner information.

	aper Setting	Imprinter	Information	
nfo			*	
CPU:			Intel(R) Core(TM) i3-2120 CPU @ 3.30GHz	
RAM:			1023 MB	
DS:			Microsoft Windows 7 Enterprise Service Pack 1 (	Build 7601)
OS Langu	lage:		English (United States)	
Disk Drive	e:		Fixed drive C:\Total:30717MBFree:10439MB	
			Fixed drive Y:\Total:102398MBFree:10541MB	E
			Fixed drive Z:\Total:102398MBFree:23311MB	
Free Disk	Space:		10439 MB	
Application	n Name:		Avision Capture Tool 1.6 (1.9)	
TWAIN D	viver Version:		6.11.0329'16	
/O Driver	r Version:		0, 9, 2016, 324	
Port Type	e l		USB	
D / Addre	ess:		USB	
Optical Re	esolution:		600 dpi	
Scanner M	Model:		XXX	
Serial Nun	mber:		NO25	*


# The Information tab dialog box


### The "Report" button :

If you encounter any error message while using the scanner, click the Report button. A report.txt file [Windows XP: C:\Documents and Settings\All Users\Application Data\%PRODUCTNAME%; Vista, Windows 7, Windows 8, Windows 10: C:\ProgramData\%PRODUCTNAME% (C: system drive)] will be generated. Please send this file to the nearest service center for trouble shooting.

# **5. Using the Buttons**

The convenient buttons on the scanner is shown as below:

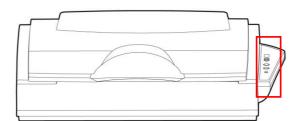

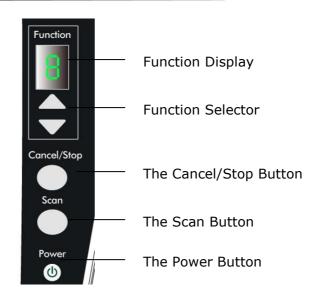


# 5.1 Installing Button Manager V2


Button Manager V2 provides you an easy way to scan your document and then link the scanned image to your designated software application. All this can be done by a simple touch of the button on the scanner. Yet, before you scan, it is recommended to check the button configurations first to ensure a proper file format and a destination application.

# 5.2 Checking the Button Configurations Before Scanning

- 1. Click the Scan button on the scanner.
- 2. The Button Panel is displayed in the Windows System Tray at the bottom right corner of your computer screen.

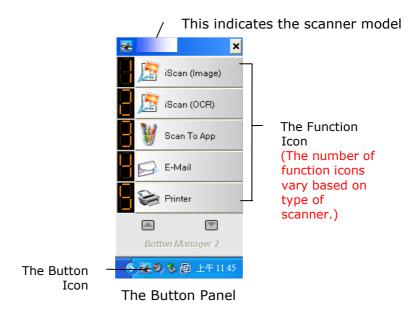

3. The Button Panel shows the first five scanning buttons. Right-click the button (function) you wish to check. The Button Properties window appears.

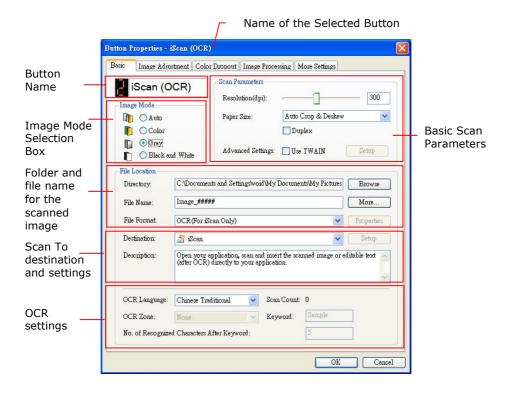

If you wish to change the setting, use this window to reset the setting for the file format, destination application, or other scan settings.

4. Click the OK button to leave the window.

# 5.3 Scanning From One Touch of the Buttons

- 1. Adjust the paper guide for the width of paper and load the document with their tops into the automatic document feeder.
- Check the number on LCD screen on the scanner to ensure if you are selecting the proper scan settings and destination application. (For example, if you wish to scan with button #3 "Scan to App" which opens Microsoft Paint and displays the scanned image in the window of Microsoft Paint, the LCD screen should show #3).
- 3. Press the **Scan** button on the scanner.
- 4. After the scanning is finished, the Microsoft Paint software will be launched and the scanned image appears in the main window of Microsoft Paint as below.

14	General	Document feeding mode	Flatbed
9	Specifications:	Technology	
		Optical resolution	
2		Scanning speed	
B		RAM	
0		ADF min. paper size	4.5 inch
		ADF max. paper size	8.5 inc
		Flatbed max. paper size	8.5 inch
		ADF capacity	
		Operation environment	10
		Storage environment	-20
		Noise	
		Dimensions(H x W x D)	
		Weight	
	Сору	First copy out	Color mod
	Specifications:	Color copy speed	
		B/W copy speed	
		Copy resolution	
		Copy scaling	
		Multiple copies	

#### Note:

- 1. For detailed information on how to use the Button Manager V2, please refer to the user's manual.
- 2. You may also use Button Manager V2 on your desktop by starting Button Manager V2 from All Programs or double clicking the Avision Scanner Utility from the Control Panel.

# 6. Maintenance

# 6.1 Cleaning the Glass

# The procedures

- Use a clean and lint-free cloth wet with isopropyl alcohol. (95%)
- 2) Open the document cover as shown in Figure 7-1. Wipe the document glass.
- 3) Close the document cover. Your scanner is now ready for use.

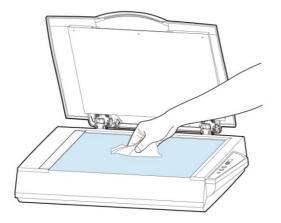


Figure 7-1 The cleaning area


# 7. Troubleshooting

#### 7.1 Removing the abnormal lines on your scanned image

If your scanned image is shown with abnormal lines on it, it is probably caused by the dust or toner particle on the strip of document glass.

To remove the dust or toner particle,

- 1. Dip a soft clean cloth with isopropyl alcohol (95%).
- 2. Wipe the strip of document glass as shown below.
- 3. Close the document cover. The product is now ready for use.

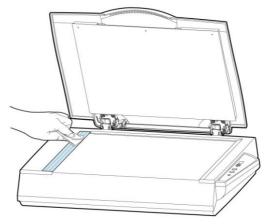

# 7.2 Questions and Answers

Question:	When the scanner is powered on, it makes noises and won't stand ready.	
Answer:	There are two possibilities:	
	1) You might fail to push the scanner shipping lock to its "unlocked" position. If this is the case, pull the scanner status switch to its "unlocked" position first.	
	2) The scanner is not placed on an even, flat desktop surface. This may cause the scanner to malfunction.	

Question:	The scanner is powered on, but the lamp does not light up.	
Answer:	The lamp is probably out of order. Contact your local dealer or distributor to replace the lamp. For your information, the average life time of the lamp is about 15,000 hours and the operating temperature for the scanner is between 10°C(50°F) and 40°C(104°F).	

Question:	While scanning, the scanner often makes noises, or it scans back and forth.
Answer:	Usually this means the memory of your computer is not enough or the speed of your CPU too slow. Please try to increase your memory to at least 32M or replace your CPU with Pentium or later.

Question:	Why is it that the scanned image always comes out to be too dark?
Answer:	1) Please adjust the screen settings to sRGB.
	<ol> <li>Please adjust the brightness settings on the screen from application software.</li> </ol>

Question:	The scanner works well except for the line art image. The lines in the image seem to be much thicker than the original one.
Answer: Increase the Brightness or adjust the Threshold setting to improve line art image	

# 7.3 Technical Service

Before contacting Avision, please prepare the following information:

- Scanner serial & revision number (located on the bottom of the scanner);
- Hardware configuration (e.g., your host CPU type, RAM size, free disk space, display card, interface card);
- The name and version of your scanning software application;
- The version of your scanner driver.

Please call us at:

### Headquarter

#### **Avision Inc.**

No. 20, Creation Road I, Science-Based Industrial Park, Hsinchu 300, Taiwan, ROC TEL: +886 (3) 578-2388 FAX: +886 (3) 577-7017 E-MAIL: service@avision.com.tw Web Site: http://www.avision.com.tw

#### **US and Canada Area**

#### Avision Labs, Inc.

6815 Mowry Ave., Newark CA 94560, USA TEL: +1 (510) 739-2369 FAX: +1 (510) 739-6060 E-MAIL: support@avision-labs.com Web Site: http://www.avision.com

#### **China Area**

#### Technical Support Center in Shanghai

7A,No.1010, kaixuan Road, Shanghai 200052 P.R.C. TEL :+86-21-62816680 FAX :+86-21-62818856 E-MAIL : sales@avision.net.cn Web Site: http://www.avision.com.cn

#### **Europe Area**

#### **Avision Europe GmbH**

Bischofstr. 101 D-47809 Krefeld Germany TEL: +49-2151-56981-40 FAX: +49-2151-56981-42 E-MAIL: info@avision-europe.com Web Site: http://www.avision.de

# 8. Specifications

# All specifications are subject to change without notice.

For the most up-to-date and detailed specifications, please refer to our web site at http://www.avision.com

Model Number	BT-2202B
Scanner Type	Flatbed
Scanning Mode	Color/Grey/Black & White
Optical Resolution	600 dpi
Output Resolution	72~1200 dpi (adjustable in 1 dpi increments)
Light Source	LED
Maximum Scanning Size	300 x 432 mm (11.8 x 17 in.)
Interface	USB 3.2 Gen 1x1
Power Requirement	24Vdc <sup>,</sup> 1.5A
Humidity	10~85% RH
Operation Temperature	10°C ~ 35°C
Dimension (WxDxH)	645 x 428 x 135 mm
	(25.4 x 16.9 x 5.3 in.)
Weight	7.6 Kg (16.8 lb.)