

GBC®

FUSION™ 5100L

A3 LAMINATORS

start here

commencer ici

hier beginnen

inizia da qui

beginnen hier

empieza aquí

começar aqui

buradan başlayın

ξεκινήσει εδώ

starter her

aloita tästä

starter her

börja här

zaczniij tutaj

začnēte zde

itt kezdődnek

начать здесь





FUSION™ 5100L

A3 LAMINATORS

GB instruction manual	4
F manuel d'utilisation	12
D bedienungsanleitung	20
I manuale d'istruzioni	28
NL gebruiksaanwijzing	36
E manual de instrucciones	44
P manual de instruções	52
TR kullanım kılavuzu	60
GR οδηγίες	68
DK brugsvejledning	76
FI käyttöopas	84
NO bruksanvisning	92
S bruksanvisning	100
PL instrukcja obsługi	108
CZ návod k obsluze	116
H használati útmutató	124
RUS руководство по эксплуатации	132



professional finish... automatically!

Welcome to the new GBC 5100L laminator which allows lamination to be completed quickly and simply with GBC quality lamination output. Perfect for novice users choosing automatic self setting to expert users with multiple pouch thicknesses and document sizes.

For best lamination results and performance, use only GBC branded pouches.

Please take a little time to study these instructions to ensure you get the best results out of your machine.

safety instructions



Your safety as well as the safety of others is important to ACCO® Brands. In this instruction manual and on the product are important safety messages. Read these messages carefully.



The safety alert symbol precedes each safety message in this instruction manual.

This symbol indicates a potential personal safety hazard that could hurt you or others, as well as cause product damage or property damage.

The following warning is found on the product in several languages.

This safety message means that you could be seriously hurt or killed if you open the product and expose yourself to hazardous voltage.



points to note

- Use this unit only for its intended use of laminating documents
- Only use 40mic (with carrier) 75mic, 125mic, 175mic or 250mic pouches with this laminator
- Do not laminate an empty pouch
- The unit must be connect to a supply voltage corresponding to the electrical rating shown on the unit
- Ensure the machine is clear of pouches prior to starting the next pouch
- Clean the lamination rollers on a regular basis
- Maximum A3 document pouch 426x303mm on GBC Fusion 5100L A3 Laminator
- Active anti jam feature may not detect issue on smaller items
- Failure to comply will result in damage and invalidate guarantee

service

Do not attempt to service or repair the pouch laminator yourself. Unplug the unit and contact an authorised GBC service representative for any required repairs.

technical specifications

Electrical	220-240V AC / 50Hz/60Hz / 6.5A / 1520W	Maximum Pouch Thickness	2x250micron (total 500)
Machine Dimensions	570x193x132mm	Maximum Thru-put Thickness	1.0mm
Machine Weight	4.6kg	Warm-Up Time	Approximately 1 minute
Maximum Pouch Width	A4: 241mm A3: 303mm	Speed	Variable (max.: 1000mm/min.)

getting ready to laminate

Easy Set Up

- 1 Remove the plastic exit tray from the box and place into the two holes on the back of the laminator and extend to use. Ensure that there is sufficient space behind the laminator for the item to be removed.
- 2 Take the electrical plug and place in an appropriate power source, which is near the table you intend to use.
- 3 The laminator will briefly flash the GBC logo on the control panel and will make an audible beep.
- 4 To use the laminator gently tap the 'power on' button.

NOTE: Your new laminator may emit a slight odour during the initial operation. Its is normal and will diminish after a few hours of operation.



Interactive Menu Selection

- 5 A GBC logo will show in the screen followed by the main menu:



NOTE: Use arrows to scroll up/down and left/right, use ENTER button to select.



Use at anytime to go back – one screen at a - time to the main menu.

BACK




Manual Select () – scroll through and select the required micron setting, i.e. 75mic.

NOTE: If 40mic setting is selected ALWAYS use a carrier

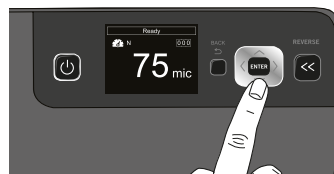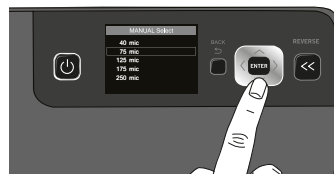


Intelligent Pouch Select

Auto Pouch Select () - the laminator automatically measures document and pouch thickness and self set accordingly.




NOTE: The machine will not take any pouch during warm up.

NOTE: In both Manual Select and Auto Pouch Select modes during warm up the Wait indicator will flash until ready.

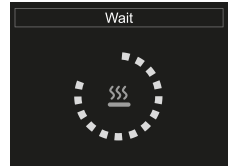

loading the pouch

- 1 Take your item to be laminated and place into the laminating pouch. Ensuring it is firmly placed along the sealed edge of the pouch. This is to help ensure that you get optimal quality output.

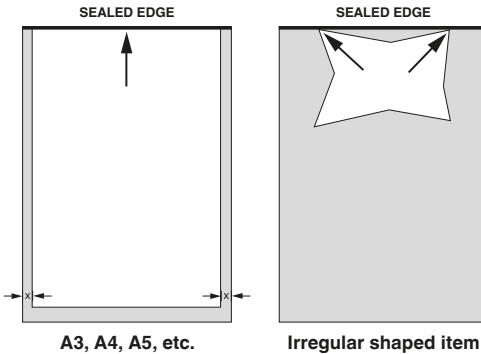


NOTE: Do not cut pouches prior to lamination.




Before laminating important or unique documents, always run a test pouch through the laminator using a similar type document.

laminating

- 1 On the front of the laminator there are adjustable guides to help you feed your pouch accurately. Move the guides to appropriate line which matches your pouch/ item to be laminated.

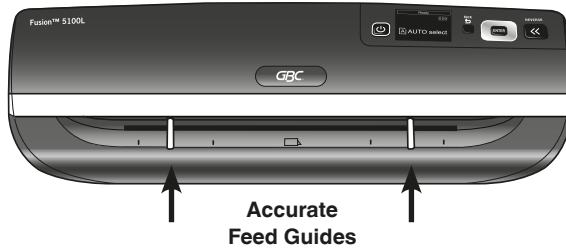

- 2 Feed the sealed edge of the pouch, into the laminator between the guides. The laminator will grip the pouch and guide it through to the exit tray.

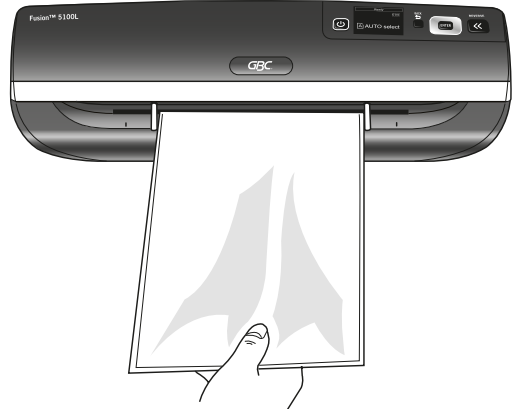


NOTE: Do not force guides against pouch

- 3 Do not force guides tightly against pouch. Move guides to an appropriate setting to allow pouch to be fed in without touching guides.
- 4 When you are finished laminating tap the 'power' button and if required remove the tray, unplug and store accordingly.




Upon exiting remove your laminated item immediately and lay on a flat surface to ensure optimal quality.

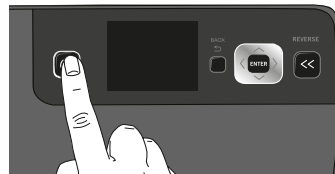

additional features


Intelligent Pouch Reverse

If pouch misfeed or jam starts to occur a constant beep will be emitted and the laminator will automatically reverse the document out.

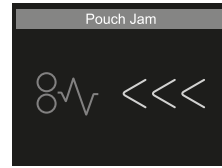


Intelligent Status Alert

If you try to laminate a 40mic pouch without a carrier the pouch will be automatically reversed out.

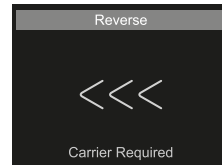

If you wish to recover a partially fed pouch press and hold the "Reverse" button and the pouch will be quickly reversed out of the laminator. You will hear a series of single beeps until Reverse button is released.

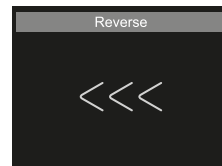


NOTE: Never reuse a misfed or jammed pouch

NOTE: Do not put partially laminated items back into the laminator.

settings



Professional Control

From the main menu select (⚙️) and the following options will appear:

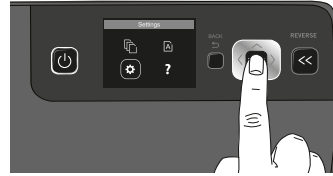

Scroll through the menu to select the required setting and press enter:


Speed Adjust - Allows you to fine tune speed if required for optimal results. Use arrows to adjust the speed, up (+) or down (-). Reducing the speed will slightly increase the exposure to heat. Increasing the speed will slightly decrease the exposure to heat.

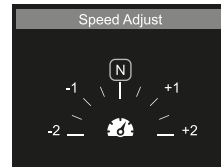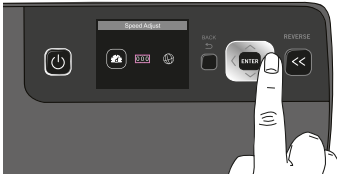

Job Counter – Allows you to count the number of documents laminated. Use the arrows to select Reset if required.



Language Select – Scroll up or down to select desired language and press enter.

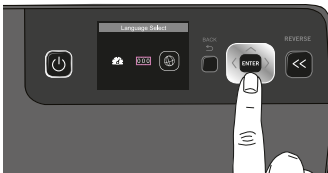


Help (?) – Scroll through to select country then either follow the link to the web address, scan the QR code. Alternatively contact the local service centre, see pXXX.



Intelligent Power Off

For added safety and environmental reasons the laminator will automatically go into sleep mode after 30 minutes of inactivity. You will hear a single beep before this occurs

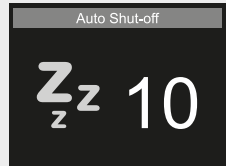

cleaning



WARNING: UNPLUG THIS PRODUCT BEFORE CLEANING THE EXTERIOR. WIPE EXTERIOR ONLY WITH A DAMP CLOTH AND DO NOT USE DETERGENTS OR SOLVENTS.

Regularly feed a cleaning card or sheet of paper through the laminator to clean the rollers. Cleaning sheet order code: EK50000.

guarantee

Operation of this machine is guaranteed for two years from date of purchase, subject to normal use. Within the guarantee period, ACCO Brands Europe will at its own discretion either repair or replace the defective machine free of charge. Defects due to misuse or use for inappropriate purposes are not covered under the guarantee. Proof of date of purchase will be required. Repairs or alterations made by persons not authorised by ACCO Brands Europe will invalidate the guarantee. It is our aim to ensure that our products perform to the specifications stated. This guarantee does not affect the legal rights which consumers have under applicable national legislation governing the sale of goods.




GBC Laminating / Plastifieuses / Laminiergeräte



Rexel Shredding / Destructeurs / Aktenvernichter



GBC Binding / Perforelieuses / Bindegeräte

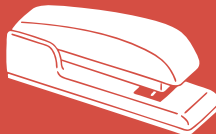

Rexel Stapling / Agrafage / Heftgeräte