



# LED Magic Flower

ORDERCODE 43080



**SHOWELECTRONICS FOR PROFESSIONALS**

## **Congratulations!**

You have bought a great, innovative product from Showtec.

The Showtec LED Magic Flower brings excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product provides the effect you need.

You can rely on Showtec, for more excellent lighting products.

We design and manufacture professional light equipment for the entertainment industry.

New products are being launched regularly. We work hard to keep you, our customer, satisfied.

For more information: [iwant@showtec.info](mailto:iwant@showtec.info)

You can get some of the best quality, best priced products on the market from Showtec.

So next time, turn to Showtec for more great lighting equipment.

Always get the best -- with Showtec !

Thank you!



<b>Warning</b> .....	2
Safety-instructions.....	2
Operating Determinations.....	4
Rigging.....	4
Return Procedure.....	5
Claims.....	5
<b>Description</b> .....	6
Features and Overview .....	6
Backside.....	6
<b>Installation</b> .....	7
<b>Set Up and Operation</b> .....	7
Control Modes.....	7
One LED Magic Flower (Built-in Programs 1-50 + Auto Run Mode).....	7
One LED Magic Flower (Sound Control).....	7
Multiple LED Magic Flower (Master/Slave control).....	7
Multiple LED Magic Flower (DMX control).....	8
Fixture Linking.....	8
Data Cabling.....	8
Control Panel.....	9
Control Mode.....	9
DMX addressing.....	9
MENU OVERVIEW .....	10
- Built-in Programs .....	11
- Auto Run Mode.....	11
- DMX Mode.....	11
- Master/Slave Mode.....	12
- Sound-control.....	12
- Static Color Mode.....	12
DMX Channels.....	13
2 Channels.....	13
3 Channels.....	14
256 Channels.....	14
<b>Maintenance</b> .....	15
Replacing the Fuse.....	15
<b>Troubleshooting</b> .....	15
No Light.....	15
No Response to DMX .....	15
<b>Product Specifications</b> .....	17

# WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE YOUR INITIAL START-UP!**

## Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

### Your shipment includes:

- LED Magic Flower with cable 1,5m and hanging-bracket.
- User manual



## LED Expected Lifespan



LEDs gradually decline in brightness over time. HEAT is the dominant factor that leads to the acceleration of this decline. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal or singular optimum conditions. For this reason when all color LEDs are used at their fullest intensity, life of the LEDs is significantly reduced. It is estimated that a viable lifespan of 40,000 to 50,000 hours will be achieved under normal operational conditions. If improving on this lifespan expectancy is of a higher priority, place care in providing for lower operational temperatures. This may include climatic-environmental and the reduction of overall projection intensity.

 **CAUTION!**  
**Keep this device away from rain and moisture!**  
**indoor use only!** 

## SAFETY INSTRUCTIONS

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual

 **CAUTION! Be careful with your operations.**  
**With a dangerous voltage you can suffer**  
**a dangerous electric shock when touching the wires!** 

Before your initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

## **IMPORTANT:**

*The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.*

- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never look directly into the light source.
- Never leave any cables lying around.
- Never use the device during thunderstorms, unplug the device immediately.
- Never leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within children's reach, as they are potential sources of danger.
- Never use the device during thunderstorms, unplug the device immediately.
- Do not insert objects into air vents.
- Do not open the device and do not modify the device.
- Do not connect this device to a dimmerpack.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Do not switch the device on and off in short intervals, as this would reduce the system's life.
- Only use device indoor, avoid contact with water or other liquids.
- Only operate the device after having familiarized with its functions.
- Only install the device with the hanging-bracket.
- Avoid flames and do not put close to flammable liquids or gases.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power-cord is never crimped or damaged. Check the device and the power-cord from time to time.
- Make sure that no side forces can impact on the truss system.
- The cable insert or the female part in the device must never be strained. There must always be sufficient cable to the device. Otherwise, the cable may be damaged which may lead to deadly electrical shocks.
- If the external cable is damaged, it has to be replaced by a qualified technician.
- If the lens is obviously damaged, it has to be replaced. So that its functions are not impaired, due to cracks or deep scratches.
- If device is dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. The device must be installed out of the reach of children. Never leave the unit running unattended.
- For replacement use fuses of same type and rating only.
- The user is responsible for correct positioning and operating of the LED Magic Flower. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- For replacement use fuses of same type and rating only.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- **WARRANTY:** Till one year after date of purchase.

# OPERATING DETERMINATIONS

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light-output and the illuminated surface must be more than 0,5 meters.
- The maximum ambient temperature  $t_a = 45^{\circ}\text{C}$  must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of  $45^{\circ}\text{C}$ .
- If this device is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash etc.

You endanger your own safety and the safety of others!

## Rigging

Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.

Do not attempt the installation yourself !  
Always let the installation be carried out by an authorized dealer !


### Procedure:

- If the LED Magic Flower is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the LED Magic Flower, with the mounting-bracket, to the trussing system.
- The LED Magic Flower must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety-cable.
- When rigging, derigging or servicing the device, always make sure, that the area below the installation place is blocked and staying in the area is forbidden.

Improper installation can cause serious damage to people and property !

## Connection with the mains

Connect the device to the mains with the power-plug.  
Always pay attention, that the right color cable is connected to the right place.

International	EU Cable	UK Cable	US Cable	Pin
L	BROWN	RED	YELLOW/COPPER	FASE
N	BLUE	BLACK	SILVER	NUL
	YELLOW/GREEN	GREEN	GREEN	EARTH

Make sure that the device is always connected properly to the earth!



## **Return Procedure**

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail [aftersales@highlite.nl](mailto:aftersales@highlite.nl) and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

**Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:**

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) A brief description of the symptoms

## **Claims**

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless otherwise agreed in writing.

Complaints against us must be made known in writing or by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement of which the obligation is resulting.

## Description of the device

### Features

The Showtec LED Magic Flower is a light effect with high output and great effects.

- Power Consumption: 35W
- LEDs: 256 RGB high intensity LEDs (Red 48, Green 56, Blue 68, White 40, Yellow 44)
- 2, 3 or 256 DMX channels
- ABC and number countdown effect
- Addressing by LCD menu
- Operation mode: DMX512, Master/Slave, Sound-controlled, Built-in Programs, Static Color
- music-controlled via built-in microphone
- Fuse F1A / 250V

### Overview



Fig. 1

1) Mountingbracket + Adjustment screw

### Backside

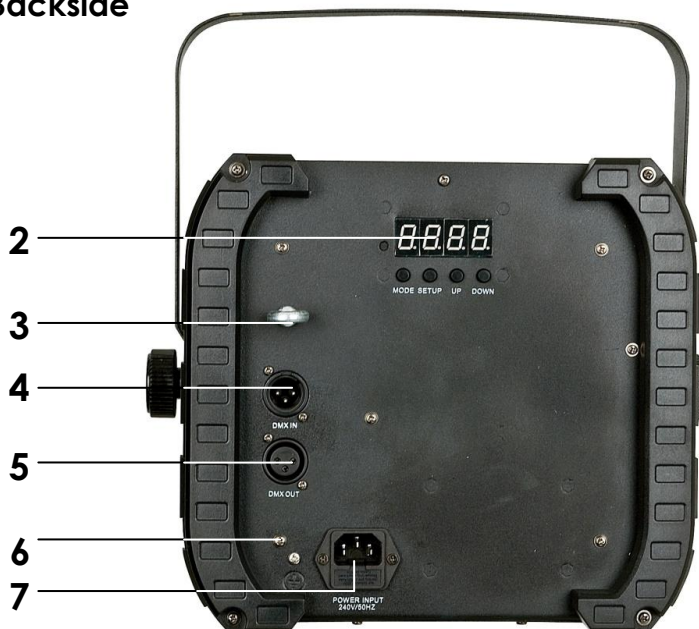


Fig. 2

2) Display + Menu buttons

3) Safety Eye

4) DMX Input

5) DMX Output

6) Earth

7) IEC Power Connector + Fuse F1A / 250V



## Installation

Remove all packing materials from the LED Magic Flower. Check that all foam and plastic padding is removed. Connect all cables.

**Do not supply power before the whole system is set up and connected properly.**

**Always disconnect from electric mains power supply before cleaning or servicing.**

**Damages caused by non-observance are not subject to warranty.**

## Set Up and Operation

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Remove all packing materials from the LED Magic Flower. Check that all foam and plastic padding is removed.

**Always disconnect from electric mains power supply before cleaning or servicing.**

**Damages caused by non-observance are not subject to warranty.**

## Control Modes

There are 6 Modes:

1) Built-in Programs 1-50	4) Master/Slave
2) Auto Program	5) Sound-controlled
3) DMX512	6) Static Color Mode

### One LED Magic Flower (Built-in Programs 1-50, Auto Program, Static Color)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. When the LED Magic Flower is not connected by a DMX-cable, it functions as a stand-alone device. Please see page 12 for more information about the sound-control options.

### One LED Magic Flower (Sound control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. When the LED Magic Flower is not connected by a DMX-cable, it functions as a stand-alone device. If device is set to **SOUND** (Audio), then the fixture will react to the beat of the music.

Please see page 13 for more information about the sound-control options.

### Multiple LED Magic Flowers (Master/Slave control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Use a 3-p XLR cable to connect the LED Magic Flower.

The pins:



1. Earth
2. Signal -
3. Signal +

3. Link the units as shown in (Fig. 3), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.



You can use the same functions on the master device as described on page 12 (Built-in Programs 1-50 and Music control)

This means on the master device you can set your desired operation Mode and all slave devices will react the same as the master device.

### Multiple LED Magic Flowers (Master/Slave control)

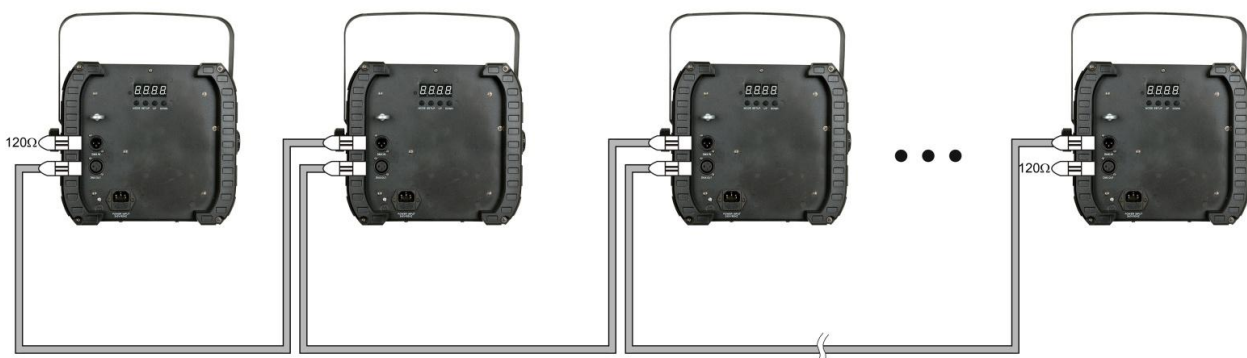


Fig. 3

## Multiple LED Magic Flowers (DMX control)

1. Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
2. Use a 3-p XLR cable to connect the LED Magic Flower.

The pins:



1. Earth
2. Signal -
3. Signal +

3. Link the units as shown in (Fig. 4), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
4. Supply electric power: Plug the end of the mains power cord into proper electric power supply sockets. Do so for all units and the controller.

### DMX-Set up

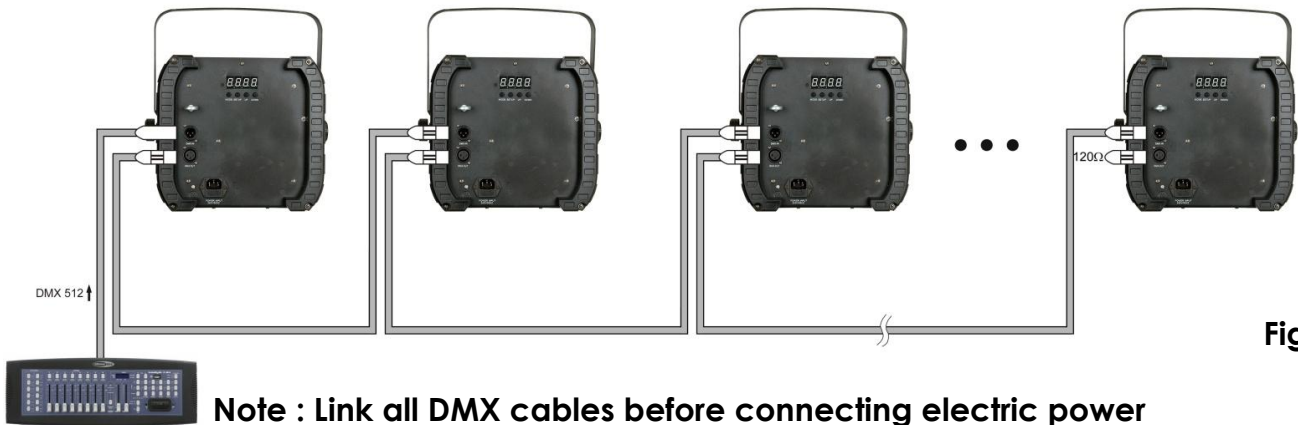


Fig. 4

**Note : Link all DMX cables before connecting electric power**

5. Do not supply power before the whole system is set up and connected properly. Design your show according to your DMX controller functions.

## Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

**Important:** Fixtures on a serial data link must be daisy chained in one single line. To comply with the EIA-485 standard no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.



Maximum recommended DMX data link distance: 100 meters  
Maximum recommended number of LED Magic Flowers on a DMX data link: 30 fixtures

## Data Cabling

To link fixtures together you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

### DAP Audio Certified DMX Data Cables

- DAP Audio cable for allround use. bal. XLR/M 3 p. > XLR/F 3 p.  
**Ordercode** FL01150 (1,5m.), FL013 (3m.), FL016 (6m.), FL0110 (10m.), FL0115 (15m.), FL0120 (20m.).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5m.), FL713 (3m.), FL716 (6m.), FL7110 (10m.).

The LED Magic Flower can be operated with a controller in **control mode** or without the controller in **stand-alone mode**.

## Control Panel



Fig. 5

A. LCD Display  
B. MODE button  
C. SETUP Button

D. Up Button  
E. Down Button

## DMX Control Mode

The fixtures are individually addressed    on a data-link and connected to the controller.

The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address the next time.)

## DMX Addressing

The control panel on the front side of the LED Magic Flower allows you to assign the DMX fixture address, which is the first channel from which the LED Magic Flower will respond to the controller.

Please note when you use the controller, the unit has **3** channels.

When using multiple LED Magic Flowers, make sure you set the DMX addresses right.

Therefore, the DMX address of the first LED Magic Flower should be **1(A001)**; the DMX address of the second LED Magic Flower should be **1+3=4 (A004)**; the DMX address of the third LED Magic Flower should be **4+3=7 (A007)**, etc. Please, be sure that you don't have any overlapping channels in order to control each LED Magic Flower correctly.

If two or more LED Magic Flowers are addressed similarly, they will work similarly.

For address settings, please refer to the instructions under "Addressing" (menu **A001**)

## Controlling:

After having addressed all LED Magic Flower fixtures, you may now start operating these via your lighting controller.


**Note:** After switching on, the LED Magic Flower will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "LED" on the control panel will not flash.

The problem may be:


- The XLR cable from the controller is not connected with the input of the LED Magic Flower.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

**Note:** It's necessary to insert a XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.

# Menu Overview

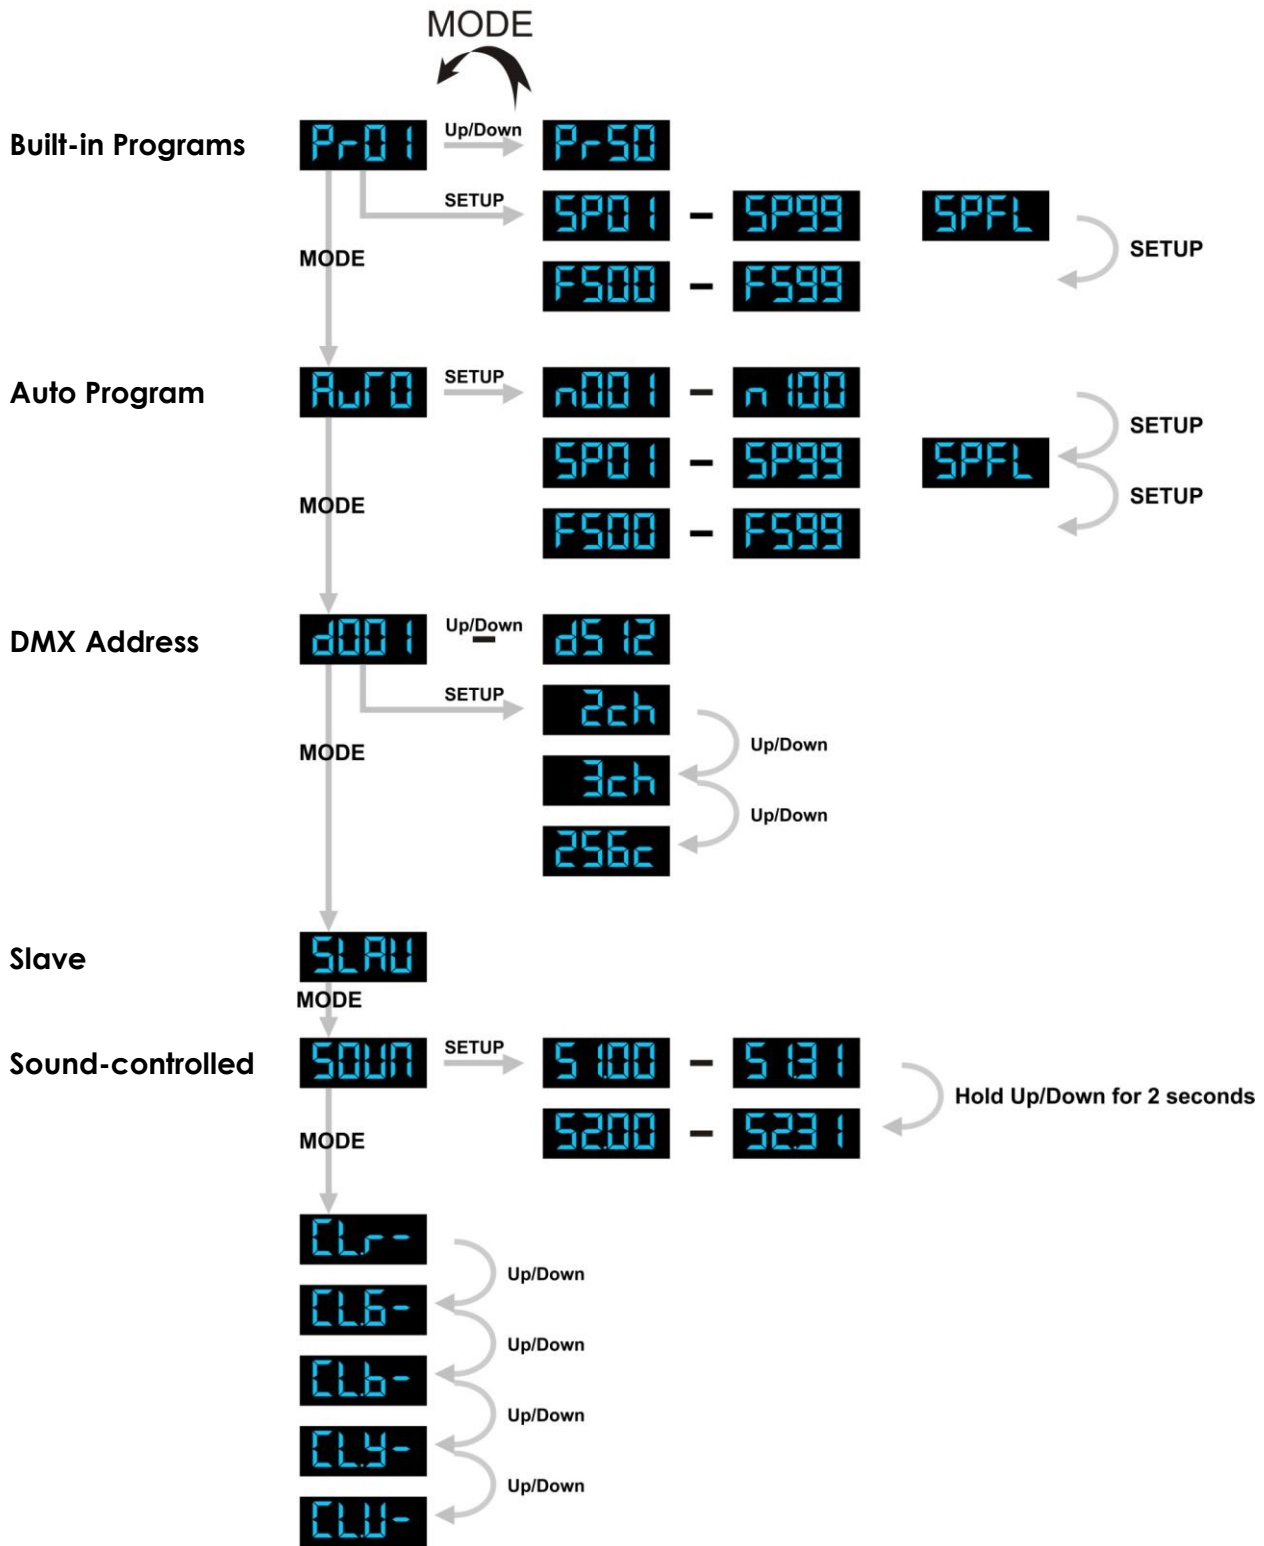


## Main Menu Options

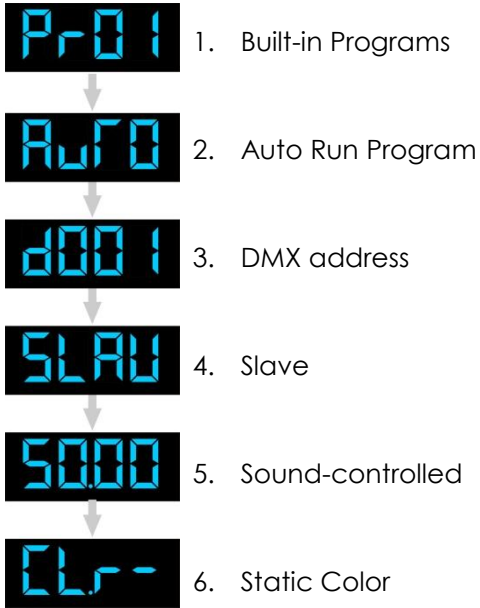

### 1. Built-in Programs


- 1) Press the **MODE** button on the device, until the display shows **Pr01**.
- 2) With this menu you can set the Built-in Program Mode of the LED Magic Flower.  
You can choose 50 built-in programs **Pr01**  $\xrightarrow{\text{Up/Down}}$  **Pr50**, by using the Up / Down buttons.
- 3) Press **Setup** to enter the built-in programs Menu. You can choose 2 different sub menus.

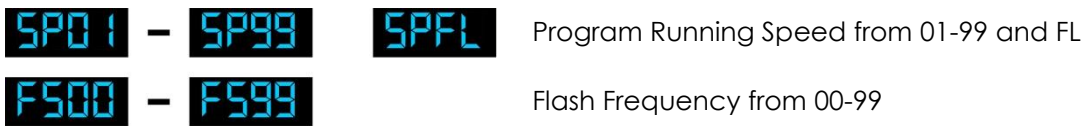

Use the **Setup** button to scroll through the menu.

### 2. Auto Run Program

- 1) Press the **MODE** button on the device, until the display shows **Auto**.
- 2) With this menu you can set the Auto Mode of the LED Magic Flower.
- 3) Press **Setup** to enter the AUTO Menu. You can choose 3 different sub menus.

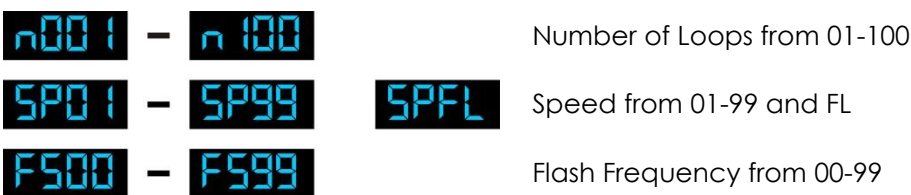

Use the **Setup** button to scroll through the menu.

### 3. DMX Mode

With this menu you can set the DMX address.

- 1) Press the **MODE** button, until the display shows **d001**.
- 2) You can choose 512 different DMX addresses.  
Use the Up / Down buttons to select the required address from **d001**  $\xrightarrow{\text{Up/Down}}$  **d512**.
- 3) Press **Setup** to select the number of channels, you want to use.  
You can choose 3 different channel settings.



Use the Up / Down buttons to scroll through the menu.

#### 4. Master/Slave Mode

When the display shows : **SLAV** , the device is a slave device. It will now react the same as its master.

#### 5. Sound control Mode

1) Press the **MODE** button on the device, until the display shows **SOUN** .

Turn on the music and the LED Magic Flower will react to the beat of the music.



The difference between **S1.00 - S1.31** and **S2.00 - S2.31**.

Menu **S1**: The LEDs will keep running for 5 seconds after the sound has stopped.

Menu **S2**: The LEDs immediately stop running when the sound stops.

2) Press the Up/Down buttons to adjust the sound sensitivity level from **S1.00 - S1.31**.

00 being the least sensitive and 31 being the most sensitive.

3) When you hold down the Up or Down button for 2 seconds the menu jumps to **S2.XX**.

Press the Up/Down buttons to adjust the sound sensitivity level from **S2.00 - S2.31**.

#### 6. Static Color Mode

1) Press the **MODE** button on the device, until the display shows **CLr-** .

2) Use the Up / Down buttons to scroll through the menu.

You can choose 5 different settings.

**CLr-** Red

**CLG-** Green

**CLb-** Blue

**CLY-** Yellow

**CLW-** White

# DMX Channels

2 CHANNEL MODE 

## Channel 1 - Programs

0	No Function
1-4	Program 1
5-9	Program 2
10-14	Program 3
15-19	Program 4
20-24	Program 5
25-29	Program 6
30-34	Program 7
35-39	Program 8
40-44	Program 9
45-49	Program 10
50-54	Program 11
55-59	Program 12
60-64	Program 13
65-69	Program 14
70-74	Program 15
75-79	Program 16
80-84	Program 17
85-89	Program 18
90-94	Program 19
95-99	Program 20
100-104	Program 21
105-109	Program 22
110-114	Program 23
115-119	Program 24
120-124	Program 25
125-129	Program 26
130-134	Program 27
135-139	Program 28
140-144	Program 29
145-149	Program 30
150-154	Program 31
155-159	Program 32
160-164	Program 33
165-169	Program 34
170-174	Program 35
175-179	Program 36
180-184	Program 37
185-189	Program 38
190-194	Program 39
195-199	Program 40
200-204	Program 41
205-209	Program 42
210-214	Program 43
215-219	Program 44
220-224	Program 45
225-229	Program 46
230-234	Program 47
235-239	Program 48
240-244	Program 49
245-249	Program 50
250-255	Sound-controlled Mode

**Channel 2 – No function (when CH1 is set to 0 ⚠ )**

**Channel 2 – Speed (when CH1 is set between 1-249 ⚠ )**

0-255	Speed from slow to fast
-------	-------------------------

**Channel 2 – Audio Sensitivity (when CH1 is set between 250-255 ⚠ )**

0-255	Audio sensitivity from less sensitive to highly sensitive
-------	---

**Channel 3 – No function (when CH1 is set to 0 ⚠ )**

**Channel 3 – Flash (when CH1 is set between 1-249 ⚠ )**

0-255	Speed from slow to fast
-------	-------------------------

**Channel 3 – No function (when CH1 is set between 250-255 ⚠ )**

### 3 CHANNEL MODE

#### Channel 1 - Programs

0	No Function
1-239	Program 38
240-255	Sound-controlled Mode

**Channel 2 – No function (when CH1 is set to 0 ⚠ )**

**Channel 2 – Flash (when CH1 is set between 1-249 ⚠ )**

0-255	Speed from slow to fast
-------	-------------------------

**Channel 2 – Audio Sensitivity (when CH1 is set between 250-255 ⚠ )**

0-255	Audio sensitivity from less sensitive to highly sensitive
-------	---

### 256 CHANNEL MODE

In DMX mode 256c, the total is 256 channels, each channel can control one fixture.  
DMX channel relevant value over 50 (CH\* > 50) and relevant fixture light up, otherwise no fixture light up.  
DMX channels have to over 256, otherwise it will fault.



## Maintenance

The Showtec LED Magic Flower requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light-output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents. Keep connections clean. Disconnect electric power, and then wipe the connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

1. All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
2. There may not be any deformations on housings, fixations and installation spots.
3. Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
4. The electric power supply cables must not show any damages or material fatigue.

## Replacing a Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below.

1. Unplug the unit from electric power source.
2. Insert a flat-head screwdriver into a slot in the fuse cover. Gently pry up the fuse cover. The fuse will come out.
3. Remove the used fuse. If brown or unclear, it is burned out.
4. Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Be sure to use a fuse of the same type and specification. See the product specification label for details.

## Troubleshooting

### No Light

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps. If the light effect does not operate properly, refer servicing to a technician.

Response: Suspect three potential problem areas: the power supply, the lamp, the fuse.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The LEDs. Return the LED Magic Flower to your Showtec dealer.
3. The fuse. Replace the fuse. See page 16 for replacing the fuse.

### No Response to DMX

Response: Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
2. Determine whether the controller or light effect is at fault. Does the controller operate properly with Other DMX products ? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

<b>Problem</b>	<b>Probable cause(s)</b>	<b>Remedy</b>
One or more fixtures are completely dead.	No power to the fixture	· Check that power is switched on and cables are plugged in.
	Primary fuse blown.	· Replace fuse.
Fixtures reset correctly, but all respond erratically or not at all to the controller.	The controller is not connected.	· Connect controller.
	3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed).	· Install a phase reversing cable between the controller and the first fixture on the link.
Fixtures reset correctly, but some respond erratically or not at all to the controller.	Poor data quality	· Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.
	Bad data link connection	· Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.
	Data link not terminated with 120 Ohm termination plug.	· Insert termination plug in output jack of the last fixture on the link.
	Incorrect addressing of the fixtures.	· Check address setting.
	One of the fixtures is defective and disturbs data transmission on the link.	· Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together. · Have the defective fixture serviced by a qualified technician.
	3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).	· Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.
No light	The power supply settings do not match local AC voltage and frequency.	· Disconnect fixture. Check settings and correct if necessary.

## Product Specification

Model: Showtec LED Magic Flower

Power: 240V-50Hz (CE)

Power Consumption: 35W

LEDs: 256 RGB high intensity LEDs (Red 48, Green 56, Blue 68, White 40, Yellow 44)

2, 3 or 256 DMX channels

ABC and number countdown effect

Addressing by LCD menu

Operation mode: DMX512, Master/Slave, Sound-controlled, Built-in Programs, Static Color music-controlled via built-in microphone

Fuse F1A / 250V

Dimensions: 320 x 285 x 365 mm

Weight: 4,5 kg



### Minimum distance:

Minimum distance from flammable surfaces: 0.5m

Minimum distance to lighted object: 0.8m

Design and product specifications are subject to change without prior notice.



Website: [www.Showtec.info](http://www.Showtec.info)

Email: [service@highlite.nl](mailto:service@highlite.nl)



© 2011 Showtec.