

AD-A032 333

NAVAL POSTGRADUATE SCHOOL MONTEREY CALIF


F/G 9/2

THE IMPLEMENTATION OF A FINITE ELEMENT COMPUTER CODE AND ASSOCI--ETC(U)
DEC 76 D M LOSH

UNCLASSIFIED

NL

1 OF 1
ADA032333

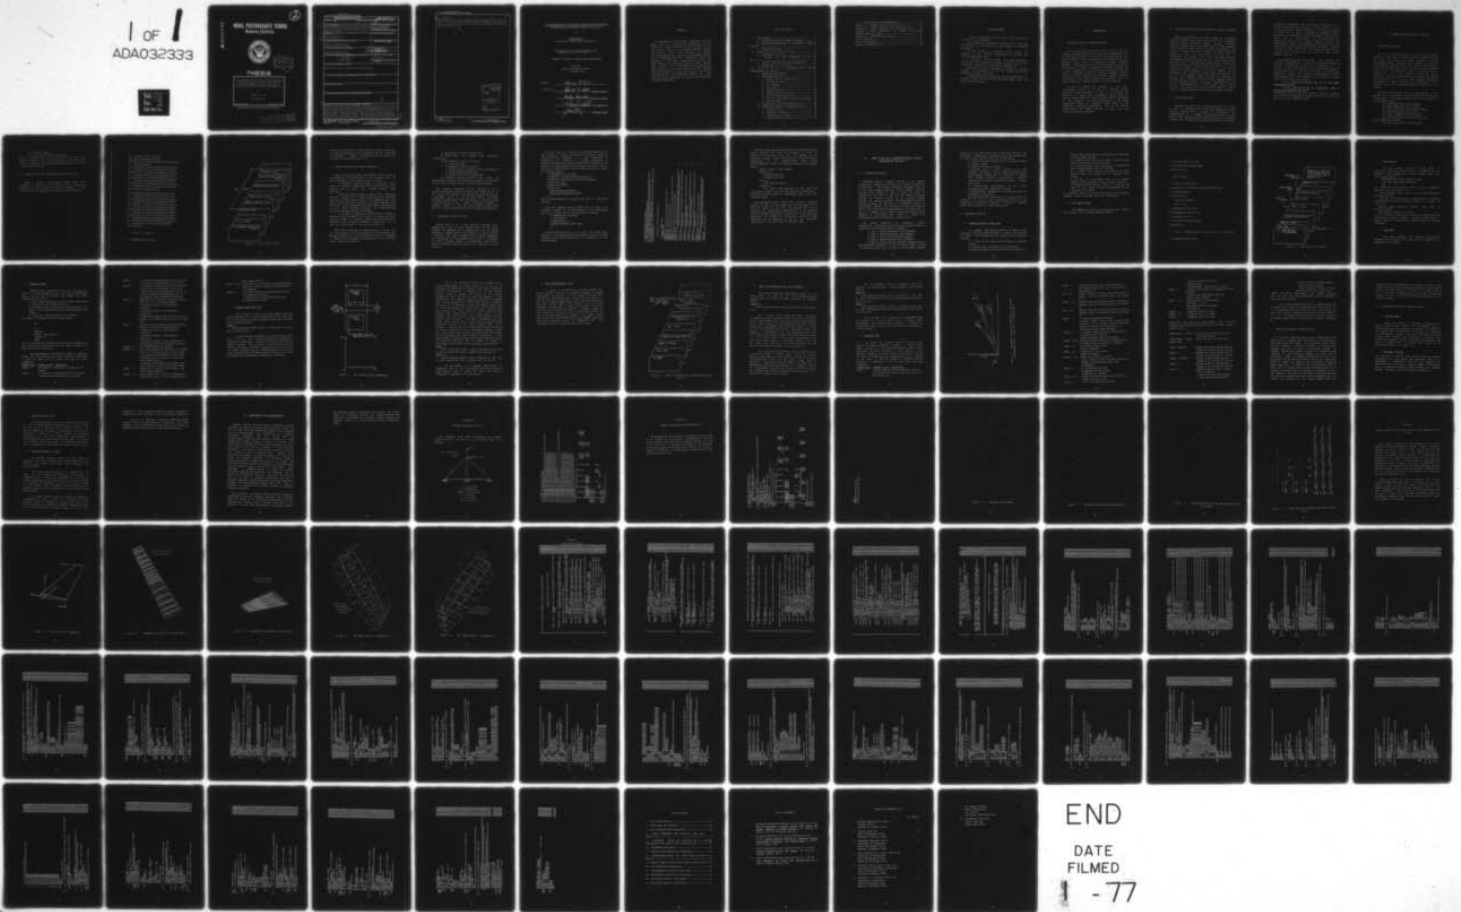

END
DATE
FILMED
-77

AD A U 3 2 3 3 3

2

NAVAL POSTGRADUATE SCHOOL

Monterey, California



DDC
RECEIVED
NOV 22 1976
RECEIVED

B

A

THESIS

THE IMPLEMENTATION OF A FINITE ELEMENT
COMPUTER CODE AND ASSOCIATED PRE-AND
POSTPROCESSOR INTO AE4101 AND AE4102
(FLIGHT VEHICLE STRUCTURAL ANALYSIS I AND II)

by

Dennis M. Losh

December 1976

Thesis Advisor:

Robert E. Ball

Approved for public release; distribution unlimited.

COPY AVAILABLE TO DDC DOES NOT
PERMIT FULLY LEGIBLE PRODUCTION

Unclassified

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER 9
4. TITLE (and Subtitle) The Implementation of a Finite Element Computer Code and Associated Pre- and Postprocessor Into AE4101 and AE4102 (Flight Vehicle Structural Analysis I and II)		5. TYPE OF REPORT & PERIOD COVERED Master's Thesis December 1976
7. AUTHOR(s) Dennis M. Losh		6. PERFORMING ORG. REPORT NUMBER
9. PERFORMING ORGANIZATION NAME AND ADDRESS Naval Postgraduate School Monterey, California 93940		8. CONTRACT OR GRANT NUMBER(s)
11. CONTROLLING OFFICE NAME AND ADDRESS Naval Postgraduate School Monterey, California 93940		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office) 12 90p.		12. REPORT DATE December 1976
		13. NUMBER OF PAGES 91
		15. SECURITY CLASS. (of this report) Unclassified
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE
16. DISTRIBUTION STATEMENT (of this Report) Approved for public release; distribution unlimited.		
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		
18. SUPPLEMENTARY NOTES		
19. KEY WORDS (Continue on reverse side if necessary and identify by block number)		
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) The objectives of the project described in this thesis were to: 1) provide the documentation that is needed for a Naval Postgraduate School student to use the general purpose finite element computer program called SAP IV, and 2) to make available, and prepare the users manual for a pre- and postprocessor program called SUBROUTINE PSAP. This subroutine, which was developed at the NASA Langley Research Center, has been modified to specifically plot the finite element model geometry for SAP IV models and to postprocess		

251 450 4B

Unclassified

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

20. (continued)

displacement data for those models on the NPS Calcomp Model 765 Plotter. The input and output for SAP IV and SUBROUTINE PSAP are discussed in detail. The codes have been used successfully in AE 4102, Flight Vehicle Structural Analysis II.

2 4

ACCESSION for	
NTIS	White Section <input checked="" type="checkbox"/>
DOC	Buff Section <input type="checkbox"/>
UNANNOUNCED	<input type="checkbox"/>
JUSTIFICATION	
BY	
DISTRIBUTION/AVAILABILITY CODES	
Dist.	AVAIL. and/or SPECIAL
A	

THE IMPLEMENTATION OF A FINITE ELEMENT COMPUTER CODE AND
ASSOCIATED PRE-AND POSTPROCESSOR INTO AE4101 AND AE4102
(FLIGHT VEHICLE STRUCTURAL ANALYSIS I AND II)

by

Dennis M. Losh
Lieutenant
B.S., United States Naval Academy, 1970

Submitted in partial fulfillment of the
requirements for the degree of

MASTER OF SCIENCE IN AERONAUTICAL ENGINEERING

from the
NAVAL POSTGRADUATE SCHOOL
December 1976

Author:

Dennis M Losh

Approved by:

Robert E Ball

THESIS ADVISOR

Gilles Courcier

Second Reader

Richard W Bell

Chairman, Department of Aeronautics

J. B. Bentley

Academic Dean

ABSTRACT

The objectives of the project described in this thesis were to : 1) provide the documentation that is needed for a Naval Postgraduate School student to use the general purpose finite element computer program called SAP IV, and 2) to make available, and prepare the users manual for, a pre-and postprocessor program called SUBROUTINE PSAP. This subroutine, which was developed at the NASA Langley Research Center, has been modified to specifically plot the finite element model geometry for SAP IV models and to postprocess displacement data for those models on the NPS Calcomp Model 765 Plotter. The input and output for SAP IV and SUBROUTINE PSAP are discussed in detail. The codes have been used successfully in AE 4102, Flight Vehicle Structural Analysis II.

TABLE OF CONTENTS

I. INTRODUCTION.....	8
A. STRUCTURAL ANALYSIS SOFTWARE PACKAGES.....	8
B. PRE-AND POSTPROCESSORS FOR STRUCTURAL ANALYSIS PROGRAMS.....	9
C. THESIS MOTIVATION.....	9
II. GUIDE TO THE USE OF SAP IV AT NPS.....	11
A. DESCRIPTION OF SAP IV.....	11
B. COMPUTER CARD DECK PREPARATION AT NPS FOR SAP IV.....	12
C. HELPFUL POINTS ON DATA DECK PREPARATION.....	15
D. ALTERATION OF SAP IV AT NPS.....	16
III. GUIDE TO THE USE OF SUBROUTINE PSAP, A PRE-AND POSTPROCESSOR FOR SAP IV.....	20
A. SUBROUTINE DESCRIPTION.....	20
B. SUBROUTINE PSAP USE.....	21
1. General Set-up of Input Deck.....	21
2. Job Control Cards.....	22
3. Main Program.....	25
4. Title Card.....	25
5. Namelist OPTION.....	26
6. Geometry Input Data Deck.....	28
7. Case Identification Card.....	31
8. Deck of Displacement Data to be Plotted..	33
9. Namelist PICT.....	34
C. METHOD FOR ALTERING SUBROUTINE PSAP.....	38
D. SIGNIFICANT ASPECTS OF SUBROUTINE PSAP.....	39
1. Exploded Plots.....	39
2. Portions of Models.....	39
3. Specification of View.....	40
4. Possible Sources of Errors.....	40

IV. CONCLUSIONS AND RECOMMENDATIONS.....	42
Appendix A: EXAMPLE PROBLEM USING SAP IV.....	44
Appendix B: EXAMPLE PROBLEM USING SUBROUTINE PSAP.....	46
Appendix C: SAMPLE SUBROUTINE PSAP OUTPUTS FOR A FINITE ELEMENT MODEL OF A WING.....	53
Appendix D: SUBROUTINE PSAP LISTING.....	59
LIST OF FIGURES.....	60
LIST OF REFERENCES.....	89
INITIAL DISTRIBUTION LIST.....	90

ACKNOWLEDGEMENT

I wish to acknowledge the help that I have received in the course of my research.

I am particularly indebted to Professor R. E. Ball, who provided me with the guidance and aid necessary to complete the project.

I am also grateful to Professor Gilles Cantin, who provided me with valuable information in starting and carrying through my work.

I also wish to give credit to the NPS programming consultants, and in particular Sharon D. Raney, for the fine assistance I received in debugging my computer runs.

My gratitude is also heartfully extended to Richard Citerley for providing me with the computer card decks necessary to begin my project.

I especially want to express my sincere appreciation to my wife, Karen, for her patience and perseverance with the typing of this thesis.

I. INTRODUCTION

A. STRUCTURAL ANALYSIS SOFTWARE PACKAGES

The past decade has seen great strides in the field of computer software packages that have been developed for use in structural analysis. A great deal of time and effort has been expended in the development and distribution of these packages. Today there are structural analysis computer programs for almost every conceivable structure an engineer could desire to analyze. The types of analyses performed by a given package vary widely and may include features for linear or nonlinear materials, static analysis, dynamic analysis, buckling analysis, and nonlinear dynamic analysis, to name only a few. These programs can be grouped into two major categories - special purpose or general purpose.

In order to expose the students at the Naval Postgraduate School to the use of a general purpose structural analysis program, as well as to provide the capability of using such a program in research work, the finite element structural analysis program SAP IV (Reference 1) was acquired and made operational at the Naval Postgraduate School by Professor Gilles Cantin of the Mechanical Engineering Department. SAP IV can perform linear static and dynamic analyses on one-, two-, and three-dimensional structures.

B. PRE-AND POSTPROCESSORS FOR STRUCTURAL ANALYSIS PROGRAMS

After the development of a large number of structural analysis programs, users began to recognize that a disparity existed between efficient general purpose structural analysis programs and optimum utilization of these programs. Many of today's software structural analysis packages, such as SAP IV, require the user to prepare and reduce tremendous amounts of data. The need existed for some aids in processing and reducing these large quantities of data. Consequently, there have been many pre- and postprocessors developed for a specific use as well as for a general use basis during the past several years. The value of a given processing package lies in its ability to aid the user in preparing his model geometry, in his data checks, and in processing the output in an easily understood fashion. One of the most effective means utilized in preparing or reducing data is through the use of visual displays, whether they be designed primarily for graphic presentations, such as the Stromberg-Carlson, or for paper plots, such as Calcomp. This ability to visually display input and output data is a highly valuable tool for the structural analyst.

C. THESIS MOTIVATION

The desire to have a pre- and postprocessor that could be used in conjunction with the general purpose structural analysis program SAP IV prompted the acquisition and implementation of a general use plotting package by this author. After researching the possible options, an existing program was obtained from Anamet Laboratories, San Carlos,

California. The program was originally developed at the Langley Research Center, Hampton, Virginia by Gary L. Giles for use with modern digital computers. The program, details of which can be found in Reference 2, generates oblique orthographic projections of three-dimensional finite element models and is distinguished by its provisions for generality, ease of use, different display options, and computational speed. The computer code was written for use on CDC 6000 series machines and had to be modified somewhat for use on the NPS 360/67. The modified version of the program is now available for use with the NPS Calcomp Plotter Model 765.

The primary purpose of this thesis is to provide the necessary documentation in order that students enrolled at the Naval Postgraduate School, and specifically in the courses AE 4101, 4102 (Flight Vehicle Structural Analysis I and II respectively), can, with a minimum of difficulty, effectively utilize SAP IV and its now-functional pre-and postprocessor PSAP. The remainder of this thesis is broken down into two major subdivisions,

1) II. GUIDE TO THE USE OF SAP IV AT THE NAVAL POSTGRADUATE SCHOOL

2) III. GUIDE TO THE USE OF SUBROUTINE PSAP, A PRE-AND POSTPROCESSOR FOR SAP IV

Appendices A and B of this work provide detailed examples for the input preparation and output reduction of data using both SAP IV and SUBROUTINE PSAP.

II. GUIDE TO THE USE OF SAP IV AT NPS

A. DESCRIPTION OF SAP IV

SAP IV is a general purpose structural analysis digital computer program that can provide a finite element solution for both the static and dynamic analysis of linear structural systems. A detailed user's manual is contained in Reference 1. The program has the capacity to analyze very large three-dimensional systems, as well as small systems, with no loss in efficiency. SAP IV, which is coded in FORTRAN IV, is a very flexible program and can be considered a very efficient aid to the analyst. The purpose of this section is to provide the necessary additional documentation, above that provided in Reference 1, for a student at the Naval Postgraduate School to make use of the program.

The methods of analysis and the construction of the program are not included in this section, but can be found in Reference 1. The program contains nine finite elements of the following types:

- (a) three-dimensional truss element,
- (b) three-dimensional beam element,
- (c) plane stress and plane strain element,
- (d) two-dimensional solid element,
- (e) three-dimensional solid element,
- (f) variable-number-nodes thick shell and three-dimensional element,
- (g) thin plate or thin shell element,

(h) boundary element,

(i) pipe element (tangent and bend).

There are numerous options and combinations of static and dynamic analysis that are available to the user of the program. Reference 1 provides specific details of the many available user options.

B. COMPUTER CARD DECK PREPARATION AT NPS FOR SAP IV

Figure 1 outlines the overall computer card deck necessary to access and utilize SAP IV as it is currently operational at NPS. A complete detailed breakdown of the necessary IBM job control cards follows on the next page.

```
// ( STANDARD GREEN JOB CARD )
//GO EXEC PGM=SAP,REGION=260K
//STEPLIB DD UNIT=2321,VOL=SER=CELO02,DISP=SHR,
// DSN=F0559.SAPLM
//GO.FTC1F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FTC2F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FTC3F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FTC4F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FTC5F001 DD DDNAME=SYSIN

//GO.FTC6F001 DD SYSOUT=A,SPACE=(CYL,(3,1)),
// DCB=(RECFM=FBA,LRECL=133,BLKSIZE=1330)
//GO.FTC7F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FTC8F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FTC9F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT10F001 DD UNIT=SYSDA,SPACE=(CYL,(6,6)),
// DCB=(RECFM=VSB,LRECL=1284,BLKSIZE=2572)
//GO.FT11F001 DD SYSOUT=B,SPACE=(TRK,(20,2)),
// DCB=(RECFM=FB,LRECL=80,BLKSIZE=7200)
//GO.SYSIN DD *
```

(SAP IV --- DATA)

/ (STANDARD NPS EOF CARD)

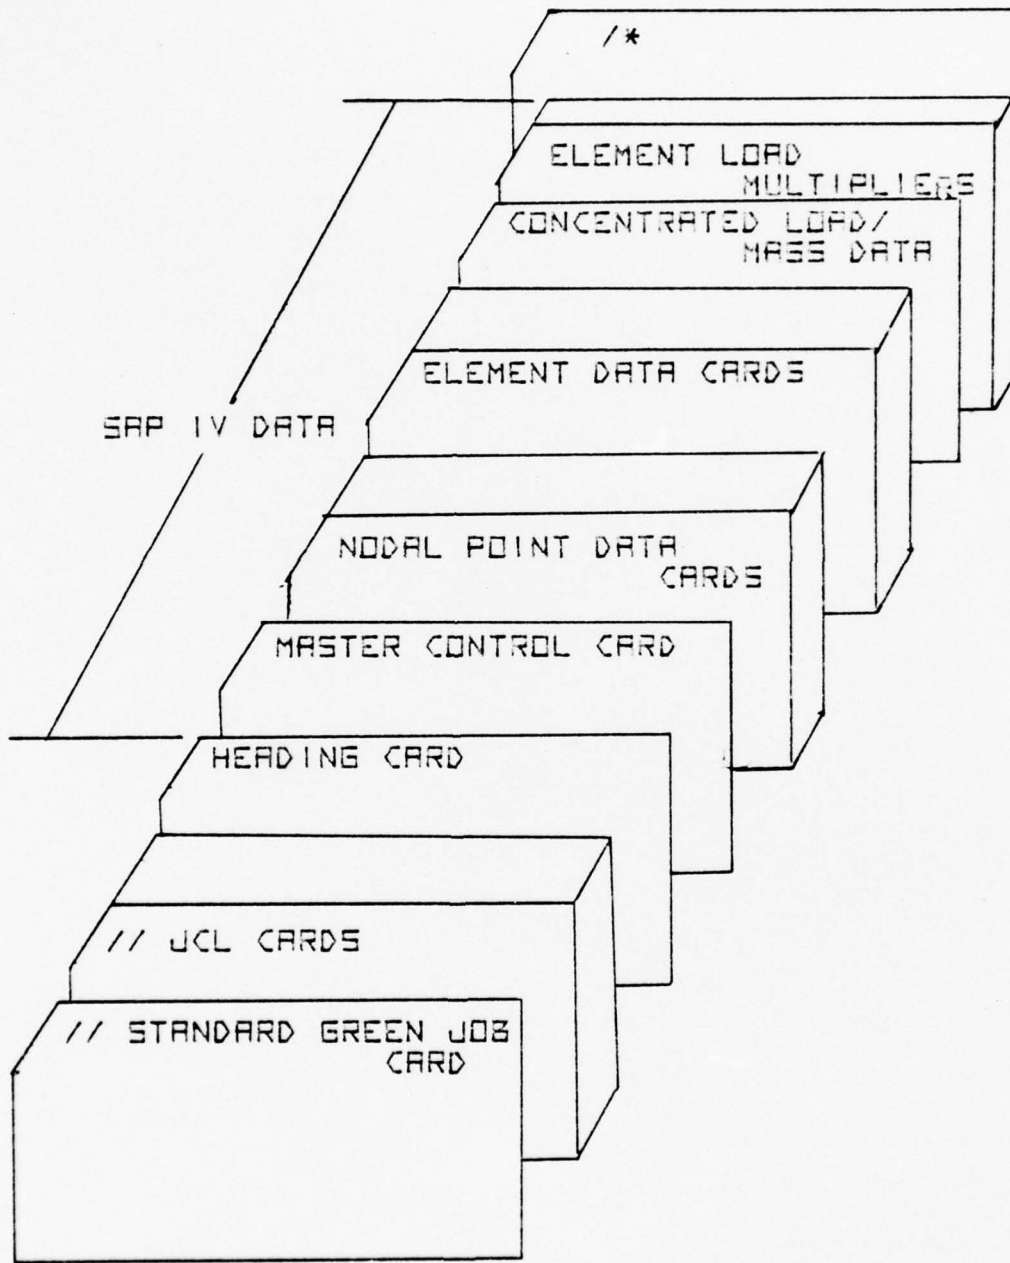


Figure 1 - SAP IV DECK SET-UP

After the //GO.SYSIN DD * card, the deck of SAP IV data that is prepared according to the instructions in the appendices of Reference 1 follows. Following the SAP IV data is the standard NPS end-of-file card (/*).

C. HELPFUL POINTS ON DATA DECK PREPARATION

There are several possible areas where a user can err in his preparation of data for SAP IV. The following items are representative of a few common sources of error.

1) Particular attention should be directed toward using the correct formats and correct card columns in key punching data on cards. (i.e., integer formats, right justified)

2) The program has several internal data generation features inherent in it. Simply because data were generated during the program execution does not necessarily mean they were generated correctly. Errors in the user-prepared input cards used in data generation can cause severe discrepancies to occur during program execution. The generated data should be carefully checked for accuracy.

3) In order to terminate a given problem a number of blank cards are necessary at the end of the input data deck. Specific points of interest pertaining to the problem of termination can be found in Reference 1 under note (1) on page II.1 and in note (1) on the top of page V.2.

SAP IV has a wide range of options where a clever user can fully exploit the full capabilities of the program. The detailed description of these features is found in Reference 1; however, the following list summarizes a few of the more useful options and features.

- 1) Data check only mode of execution.
- 2) Nodal point and element data generation capabilities.
- 3) Five different types of analysis.
 - a. static analysis
 - b. eigenvalue /vector solution
 - c. forced dynamic response by mode superposition
 - d. response spectrum analysis
 - e. direct step by step integration
- 4) Automatic punched computer card output of displacement results. This feature was added to the program by this author to make possible graphic postprocessing.

The foregoing discussion is not intended to be a complete diagnostic summary of SAP IV, but rather an aid to the student who desires to get started using the program as it currently exists on the NPS IBM 360/67. The above discussion, along with a copy of Reference 1, should provide a jumping off place for a novice structural analyst. A complete example of the job control cards and input data deck for a static truss analysis can be found in Appendix A.

D. ALTERATION OF SAP IV AT NPS

Because SAP IV is a very flexible program, it is possible for a user to make modifications to the basic program. The computer code is complex, but it is not overly difficult to modify parts of the program in order to satisfy a specific user need. A method that has proven successful for this author, in the modification of a SAP IV subroutine to provide punched output of displacement data, and to create a personal version of SAP IV, is outlined in this section.

The first step is to define the subroutine name that the user wishes to modify. A listing of the source program is available through Professor R. E. Ball, Department of Aeronautics, or Professor G. Cantin, Department of Mechanical Engineering. Having defined those portions of the program for which modification is desired, the next step is to obtain a punched copy of those desired routines by using the following format.

```
// (STANDARD NPS JOB CARD)
//SYSPRINT DD SYSOUT=A,SPACE=(TRK,(10,1))
//SYSUT1 DD DISP=SHR,UNIT=2321,VOL=SER=CEL001,
// DSN=F0099.SAPSR
//SYSUT2 DD SYSOUT=B
//SYSIN DD *
    PUNCH TYPORG=PO,MAXNAME=2
    MEMBER NAME=(SUBROUTINE NAME)
/*
```

NOTE: SUBROUTINE NAME is the name of the SAP IV subroutine required.

With the desired routine decks now in hand, the necessary changes can be incorporated into the subroutine deck and an object deck is then obtained as follows:

```
// (STANDARD NPS JOB CARD)
// EXEC FORTCD
// FORT.SYSIN DD *
(MODIFIED FORTRAN SOURCE DECK)
/*
```

The next and final step is to take the object deck obtained in the previous step and insert it into the proper position in the control cards that are illustrated on the following page.

```

// (STANDARD GREEN JOB CARD)
// EXEC LGO, PARM, LINK=.OVLY, XREF, LIST,
// LINK, SYSLMOD DD DSN=F0559, SAPLM(SAP), UNIT=2321, VOL=SER=CELO02,
// DISP=(NEW,KEEP), SPACE=(CYL,(35,2,2)), LABEL=RETPD=90
// LINK, SYSUT1 DD SPACE=(CYL,(2,1))
// LINK, LIBRARY DD DSN=F0099, SAPLM, UNIT=2321, VOL=SER=CELO01, DISP=SHR
// LINK, SYSIN DD *

```

(MODIFIED FORTRAN OBJECT DECK)

```

INCLUDE LIBRARY(SAP)
ENTRY MAIN
OVERLAY A
INSERT ADDSTF, BOUND, CLAMP, INL, RUSS, SESOL, TRUSS
OVERLAY A
INSERT BEAM, NEWBM, SLAVE, TEAM, NEWB
OVERLAY A
INSERT CROSS, DOT, ELAW, FORMB, PLANE, PLNAX, POSINV, GUAD, VECTOR
OVERLAY A
INSERT BRICK8, DERIV, LOAD, LOSTR, PRIST, THREED
OVERLAY A
INSERT CSTSTR, LCTMOM, LCT9ST, LSTSTR, QDCOS, QTSHEL, SHELL, SLCCT, SLST,
STRETR, TDCOS, TPLATE, TRFPRD, QTSARG, TRIARG, TRANSF
OVERLAY A
INSERT CROSS2, DER3DS, FACEPR, FNCT, INP21, SOL21, SSLAW, ST8R21, THDFE,
VECTR2, GAUSS
OVERLAY A
INSERT BENDDC, BENDKS, PINVER, PIPE, PIPEK, PIPES2, PIPES3, SELECT,
TANGDC, TANGKS, PIPEC
OVERLAY A
INSERT BANDET, DECOMP, EIGSOL, INVECT, JACOBI, MODES, REDBAK, SBLOCK,
SCHECK, SECNTD, SOLEIG, SSPCEB
OVERLAY A
INSERT DISPLR, DISPLY, ELOUTH, EMID, GMTN, HISTRY, LOAD1, LOAD2, PPLOT,
RESPON, STRSOL
OVERLAY A
INSERT ELOUTR, EMIDR, RESPEC, SD, SPECTR, STRESR
OVERLAY A
INSERT ADDMAS, ELOUTS, EMIDS, GROUND, INCLY, INOUT, INTNIS, LGADV,
PLOAD, REDVK, SDSPLY, SOLSTP, SPLOT, STEP, TRIFAC
NAME SAP
/ ( STANDARD NPS EOF CARD )

```

There are many options available in the creation of load module libraries and they are discussed in detail in Reference 4, sections II. and III. The portion of the preceding example control card deck that would necessitate modification is the //LINK.SYSLMOD card, where F0559.SAPLM(SAP) should be changed according the following format :

General format: Lnnnn. anyname

where L is :

S-student data set

F-faculty data set

nnnn is :

user number assigned

anyname is :

any unique name assigned by the user (1-6 characters in length with the first character alphabetic), and CEL002, should reflect an appropriate data cell with available space.

The procedure outlined above will create a modified version of SAP IV on a chosen data cell available to the user for a period of 90 days. The program can now be executed with appropriate modifications to the //STEPLIB card as discussed previously in section II. B. Any questions concerning the creation of load module libraries or their execution can be answered by any of the programing consultants on the first floor of Ingersoll Hall.

III. GUIDE TO THE USE OF SUBROUTINE PSAP, A PRE-AND POSTPROCESSOR FOR SAP IV

A. SUBROUTINE DESCRIPTION

SUBROUTINE PSAP is a modified version of the oblique orthographic projection program that is found in Appendix B of Reference 2. The program, originally developed for use at the NASA Langley Research Center, Hampton, Virginia, required some changes so that it could be used in conjunction with SAP IV and the NPS Model 765 Calcomp Plotter. The original version of the plotting package allowed for various geometry and displacement data input options. However, the subroutine, as currently filed, is constructed strictly for use with the input and output of SAP IV. With some slight modifications to the subroutine, it could be adapted to any number of different types of input geometry or displacement data decks. A method for accomplishing this is outlined in section III. C.

The current capability for generating oblique orthographic projections of SAP IV finite element models is limited to the following types of elements:

- 1) Type 1, Three-Dimensional Truss Elements
- 2) Type 2, Three-Dimensional Beam Elements
- 3) Type 3, Plane Stress Membrane Elements
- 4) Type 4, Two-Dimensional Finite Elements
- 5) Type 6, Plate and Shell Elements (Quadrilateral).

The undeformed topology of the finite element model, useful in checking input data, as well as the displaced topology

projection of the same model, can be obtained from PSAP. The subroutine contains many different options and permutations of those options, some of which are listed below.

- 1) plots of models annotated with grid point numbers of element numbers
- 2) plots of portions of models
- 3) exploded plots of model sections (i.e., line elements coincident with the edges of triangular or quadrilateral elements may be difficult to single out; program provides a capability to separate elements so that their absence or presence is easily detectable)
- 4) displacements superimposed on grid point coordinates of the undeformed structure
- 5) displacements represented as vectors extending the undisplaced grid points.

There are many more combinations of options that are available and will be more specifically outlined in the remainder of this section. Appendix B details a complete input-output example of a pin-jointed truss.

B. SUBROUTINE PSAP USE

1. General Set-up of Input Deck

In general, the correct sequence of computer cards required to utilize SUBROUTINE PSAP is shown schematically in Figure 2 and consists of eight separate major groups as follows:

- 1) a group of JCL cards and main program to allocate storage
- 2) a single card containing title information
- 3) Namelist OPTION containing values to determine if

proper storage allocation is available and specifying various program options

4) a geometry deck (SAP IV data deck) containing grid points and connectivity of the model

5) an optional single title card used to identify the deck of displacement data to be plotted

6) a single card containing the value of the total number of SAP IV load cases and an optional scale factor

7) the deck of displacement data to be plotted (output of the execution of SAP IV-static analysis)

8) Namelist PICT containing values to specify the type of plot desired and what information is to be included on the plots.

By repeating parts of the basic input data to the program, different plots of the same data can be generated.

2. Job Control Cards

The sequence of cards on the following page depicts the necessary JCL to execute SUBROUTINE PSAP.


```
// (STANDARD GREEN JOB CARD)
// EXEC FORTCLGP,REGION.GO=180K
//FCRT.SYSIN DD *

    ( MAIN PROGRAM )

/ ( STANDARD NPS EOF CARD )
//LINK.USDD DD UNIT=2321,VOL=SER=CEL002,DISP=SHR,
// DSN=F0559.PSAPLM
//LINK.SYSIN DD *
    INCLUDE USDD(P SAP)
    ENTRY MAIN
/ ( STANDARD NPS EOF CARD )
//GO.FT10F001 DD UNIT=SYSDA,
// SPACE=(CYL,(3,1)),
// DCB=(RECFM=VS,BLKSIZE=3520)
//GO.SYSIN DD *

    ( DATA --- STARTING WITH THE TITLE CARD --- SEE FIGURE 2)

/ ( STANDARD NPS EOF CARD )
```

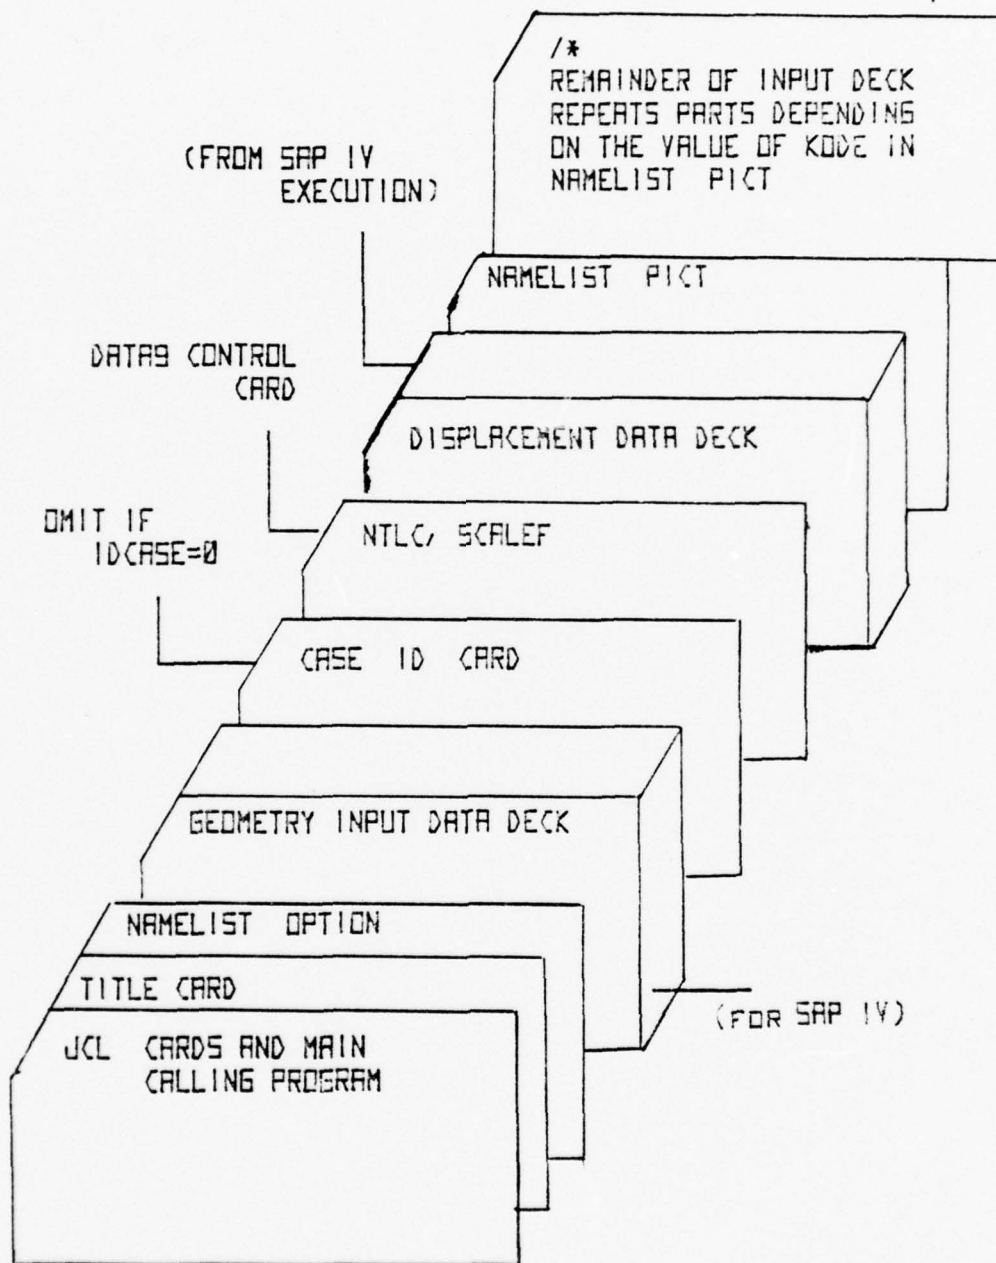


Figure 2 - PSAP INPUT CARD SEQUENCE

3. Main Program

The main program consists of three cards. It allocates the proper storage and calls SUBROUTINE PSAP. An example of a main program for a finite element model that contains 400 nodes is :

```
DIMENSION ZZZ (2800), DISPD (5,3,400)
CALL PSAP (ZZZ, 2800,DISPD,400)
END
```

The definition of the arguments used in calling SUBROUTINE PSAP (ZZZ, NZ, DISPD, NON) are :

ZZZ-blankcommon array used to store nodal coordinates and displacements

NZ-length of array ZZZ (NZ is determined by multiplying the number of nodes in the model by seven, i.e., NZ=no. of nodes * 7)

DISPD-a three dimensional working array used in subroutine DATA9

NON-number of nodes in the model

It is crucial to dimension ZZZ (7*NON) and DISPD (5,3,NON) correctly in the main program. Improper dimensioning of these arrays can cause output errors that are not readily traceable.

4. Title Card

This card contains any desired alphanumeric information in columns 1 to 80. The title will appear at the beginning of the plots.

5. Namelist OPTION

Namelists are a convenient means of inputting the names of several parameters along with their corresponding values. For the NPS IBM 360/67, the format for using namelists is as follows:

- 1) card 1-&name-beginning in card column 2 where name is the name of the subject namelist
- 2) succeeding cards- beginning in card column 2, the names of the variables and their values separated by commas
- 3) final card -&END-starting in card column 2.

An example of a namelist format is shown below:

```
col
  2
  ↓
  &OPTION
  NNDEST = 400,NUDISP =1,
  PSIZE =8.0
  &END
```

Any or all parts of a defined namelist may be included, and each parameter may be specified in any order between the &name card and the &END card.

The description of the variable names in Namelist OPTION and their default values are contained in Reference 2. They are given here to assist the user in data preparation.

FORTTRAN name - Default value - Description

NNDEST - 1	The number of nodes(NON) as defined in the program
NUDISP - 1	0 x-direction displacements not to be input 1 x-direction displacements to be input

NVDISP - 1 0 y-direction displacements not to be input
 1 y-direction displacements to be input
 NWDISP - 1 0 z-direction displacements not to be input
 1 z-direction displacements to be input
 (NOTE: when SAP IV displacement data is to
 be used, NUDISP=NVDISP=NWDISP=1; for no
 displacement data NUDISP=NVDISP=NWDISP=0)
 KGEOM - 9 Specifies the subroutine and corresponding
 method of input for model geometry
 1 subroutine GEOM1, a user-supplied
 subroutine
 2 subroutine GEOM2, a user-supplied
 subroutine
 9 subroutine GEOM9, reads in grid points and
 element data specifically from a SAP IV data
 deck
 KATA - 9 Specifies the subroutine and corresponding
 method of input for displacement data
 1 subroutine DATA1, a user-supplied
 subroutine
 2 subroutine DATA2, a user-supplied
 subroutine
 9 subroutine DATA9, reads a punched output
 displacement deck from execution of SAP IV
 NVALUS - 0 NOT INCORPORATED-ALLOW DEFAULT
 IRESEQ - 1 Grid point numbers are stored in the program
 from 1 to the total number of grid points
 0 no internal resequencing of grid points
 necessary; they are already in ascending
 order starting with 1
 1 resequence grid points from lowest grid
 point number to highest grid point number
 KPLOT - 1 Specifies the type of output device to be
 used (ALLOW DEFAULT)
 XSPACE - 5.0 Space between plots in the y-direction, in
 inches(see Figure 3 for an explanation of

axis orientation)

PSIZE - 10.0 Paper size in x-direction, in inches(used in scaling of plots to insure this dimension is not exceeded)

IDCASE - 0 0 no identification card preceeds the deck of displacement values
1 identification card preceeds the deck of displacement values

6. Geometry Input Data Deck

This portion of the input deck contains the grid point locations and the element connectivity. The deck has one of the following forms, depending on the value of KGEOM in the Namelist OPTION.

KGEOM = 9

Calls subroutine GEOM9, which is constructed to read SAP IV geometry data.

(a) When KGEOM is specified as 9, the complete input deck of SAP IV data, prepared according to Appendices I through IV of Reference 1, is placed after the &END card of Namelist OPTION. The portions of SAP IV data deck that involve load, mass, or dynamic analysis data are not part of the input geometry data to SUBROUTINE PSAP. Only the grid point locations and the element connectivity data are used to generate the orthographic projection of the model.

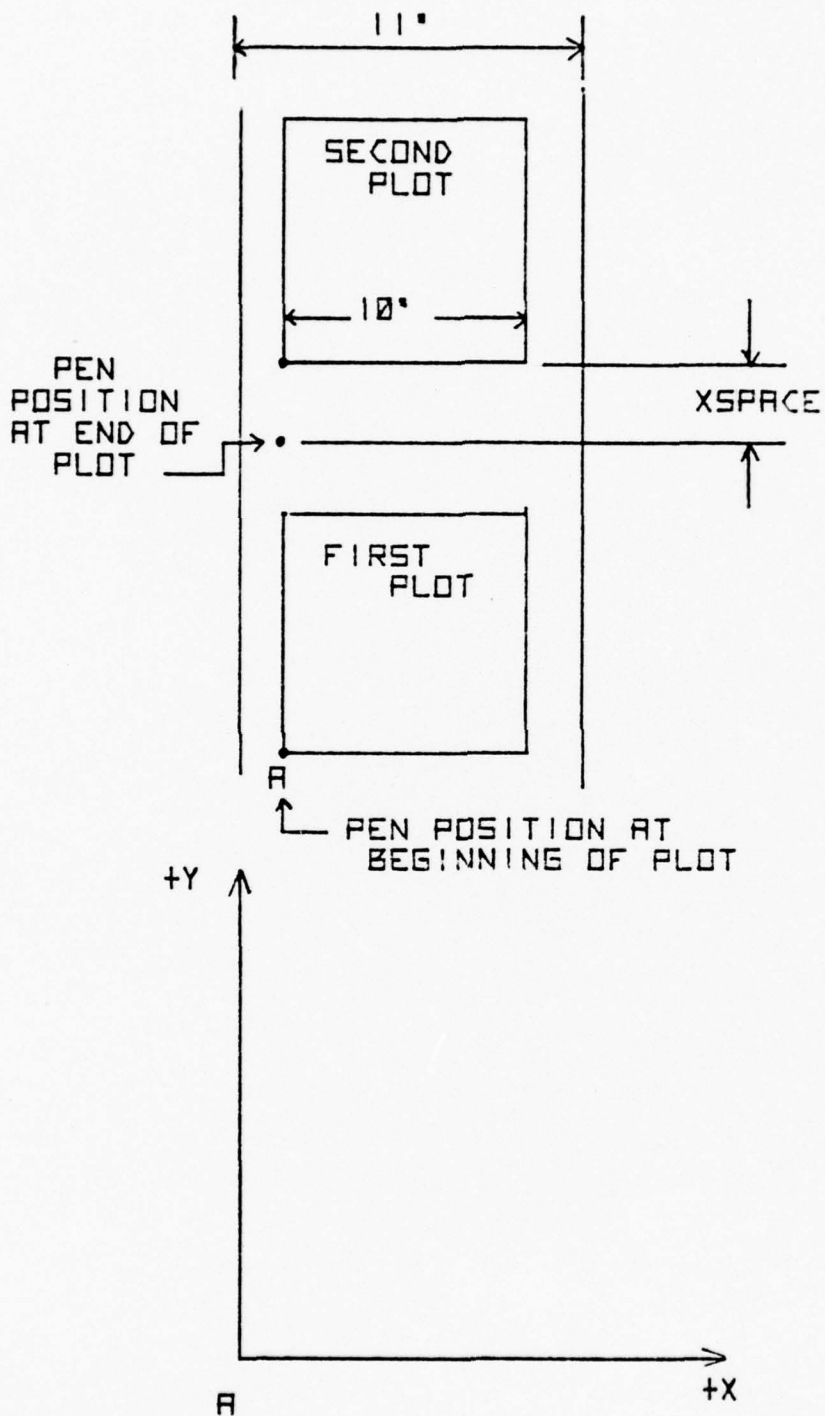


Figure 3 - NPS CALCOMP PLOTTER ORIENTATION

(b) It is possible to input only a portion of the finite element model for a data check. To do so, it is necessary to modify SAP IV element control cards (described in detail in Reference 1, Appendix IV) for the desired element types to reflect the portion of the element connectivity cards that will be input. For example, if only connectivity for element numbers 15 through 50 of element type 1 (truss elements) of a SAP IV data deck are available for input, it is necessary to alter the element control card for the truss elements. The field on the SAP IV control card that defines the total number of truss elements (card columns 6-10) would reflect the upper bound, in this case-50, and card columns 65-70 would reflect the lower bound, in this case-15. All nodal coordinates for the entire model may be input, or only those that specifically define the portion of the finite element model to be plotted. In either case, the nodal coordinates that relate to element numbers 15-50 must be specified. Unknown results will occur when trying to plot an element whose node points are not specified. The above feature is valuable in a case where several different people are preparing different parts of a large data base for a SAP IV problem and desire to individually check their inputs graphically for accuracy.

KGEOM = 1

Calls subroutine GEOM1, which is prepared by the user to read geometry data from a program other than SAP IV.

KGEOM = 2

Calls subroutine GEOM2, which is prepared by the user to read geometry data from a program other than SAP IV.

Use of KGEOM=1 or 2 requires modification of SUBROUTINE PSAP to fit the specific format of the user's input geometry data. A method for doing this will be discussed in paragraph C. of this section.

7. Case Identification Card

If IDCASE =0 is specified in Namelist OPTION, this card is omitted. The card, if present, contains any desired alphanumeric information in card columns 1-80 which will identify all displacements for a given case. For IDCASE = 1 and SAP IV punched displacement data, a case identification card must appear before each Namelist PICT for every different load case that is plotted in addition to load case one. This is illustrated in Figure 4. A maximum number of five different load cases can be obtained from SAP IV. The case ID card information, if present, will appear before each load case's DISPLACEMENT DATA TO BE PLOTTED section in the printed computer output from SUBROUTINE PSAP. This information does not appear on any Calcomp plots.

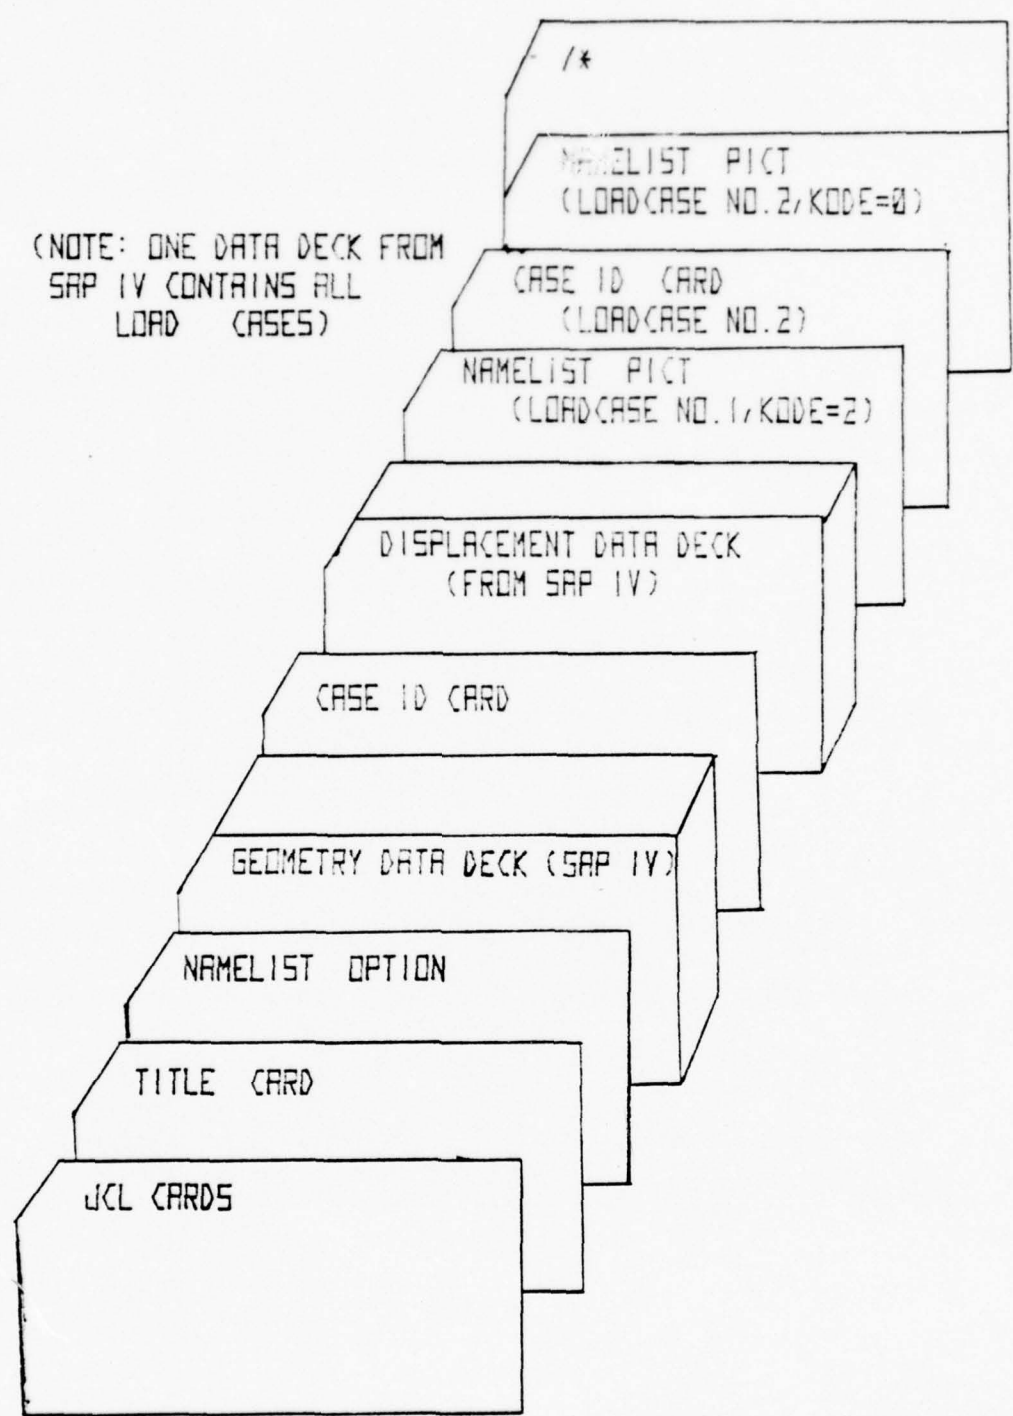


Figure 4 - SAMPLE SUBROUTINE PSAP EXECUTION DECK WITH
IDCASE=1

8. Deck of Displacement Data to be Plotted

This deck contains the displacement values of the nodal points. The deck has one of the following forms, depending on the value of KDATA specified in Namelist OPTION.

KDATA = 9

Calls subroutine DATA9, which reads SAP IV displacement data.

(a) A single card, format (I5,F10.0), containing the number of total load cases (NTLC) that are in the SAP IV output displacement data deck, and a scale factor (SCALEF) that is used in scaling the displacement data, must be input before the displacement deck. This card controls the input of SAP IV displacement data through subroutine DATA9. For example, a displacement deck from an execution of SAP IV that contains the maximum of five load cases would have NTLC = 5. The scale factor could be any value desired by the user, with default equal to 1. The DATA9 control card for the above case would be a 5 in card column five and the desired scale factor (SCALEF) in card columns 6-15.

(b) The deck of displacement data obtained from SAP IV follows the DATA 9 control card. Since the maximum number of load cases that are punched out by SAP IV is five, the maximum NTLC is five and the actual number must be specified. Note that if NUDISP, NVDISP, and NWDISP are all specified as zeroes through default or in Namelist OPTION, the displacement data deck and the DATA 9 control card are not required. This feature enables preprocessing only of a given finite element model by PSAP.

(c) The parameter DMAGS in Namelist PICT also provides for magnification of displacements. (See section III.B.9)

KDATA = 1

Calls subroutine DATA1, which is prepared by the user to read displacement data from a program other than SAP IV to be plotted.

KDATA = 5

Calls subroutine DATA 5, which is prepared by the user to read displacement data from a program other than SAP IV to be plotted.

Use of KDATA =1 or 5 requires that SUBROUTINE PSAP be modified to fit the format that the user's input displacement data specifically requires. A method for accomplishing this change will be discussed in paragraph C. of this section.

9. Namelist PICT

The format for Namelist PICT is the same as that required for Namelist OPTION. It requires a single card, &PICT, followed by the specified parameter cards and the &END cards, all cards beginning in card column 2. This namelist contains the values needed to specify the type of plot that is desired and what information is to be included on the plots. A detailed summary of Namelist PICT is contained in Reference 2 and is given here for user convenience.

<u>FORTTRAN name</u>	<u>-</u>	<u>Default value</u>	<u>-</u>	<u>Description</u>
KHORZ	-	1		Integer designating the horizontal axes of the viewing plane where 1=X ₀ , 2=Y ₀ , and 3=Z ₀ . (see Figure 5.)

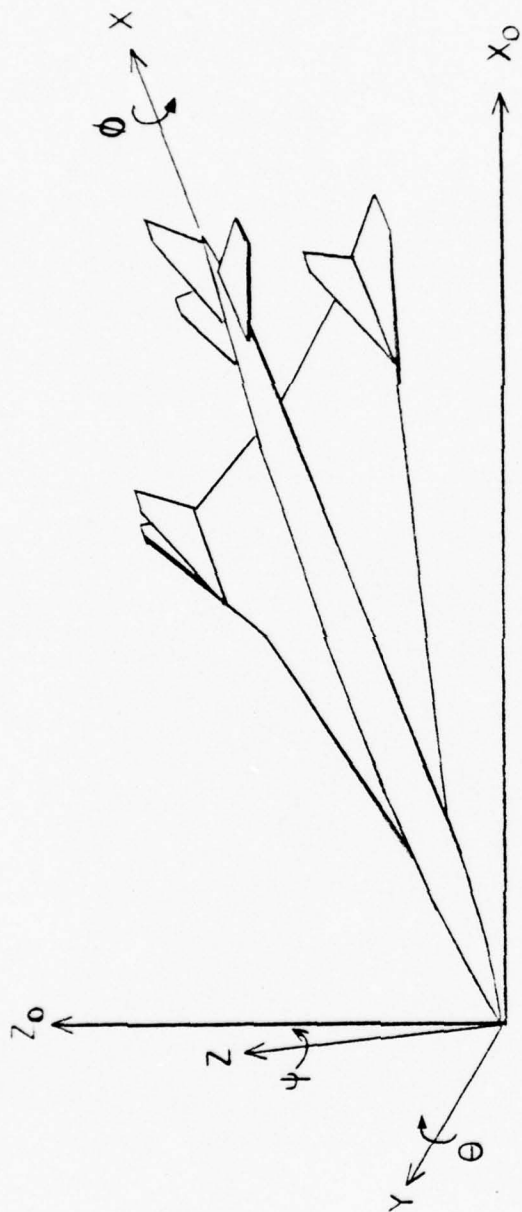


Figure 5 - COORDINATE SYSTEM AND ROTATIONS FOR AN OBLIQUE ORTHOGRAPHIC PROJ. SHOWN IN X - Z VIEWING PLANE

KVERT - 2 Integer designating the vertical axes of
 the viewing plane where 1=X₀, 2=Y₀, and 3=Z₀.
 (see Figure 5.)

PHI - 0.0 Angular rotation of model about its X-axis in
 degrees (must be performed third, see Figure
 5.)

THETA - 0.0 Angular rotation of model about its Y-axis in
 degrees (must be performed second, see Figure
 5.)

PSI - 0.0 Angular rotation of model about its Z-axis in
 degrees (must be performed first, see Figure
 5.)

NEWFR - 1 1 Frame change before plotting
 (a frame change resets the Y-origin past
 previous plot by XSPACE given in Namelist
 OPTION and resets the X-origin at 0.0)
 0 no frame change before plotting

ISCALE - 1 1 automatic scaling of plot and computation
 of proper origin location
 2 user-specified origin and scaling

PLOTSZ - 10.0 Maximum dimension desired on completed plot,
 in inches (used for scaling if ISCALE=1)

XORGN - 0.0 X-location of plot origin
 (used if ISCALE=2)

YORGN - 0.0 Y-location of plot origin
 (used if ISCALE=2)

PSCALE - 1.0 Model size reduction factor
 (i.e., PSCALE is equal to actual model size
 divided by desired plot size, used
 if ISCALE=2)

NOTAT - 0 0 no numbering on plots
 1 numbering of grid points
 2 numbering of elements

XLHT - 0.15 Height of integers specified by NOTAT, in
 inches (must be ≥ 0.07)

KDISP - 0 0 plot of undeformed structure

	1 plot of deformed structure
	2 exploded plot
	3 displacements represented by vectors
IDMAG - 2	1 direct magnification of displacement data by DMAGS
	2 scaling of displacement data to a maximum value of DMAGS
DMAGS - 1.0	Magnification of displacements (if KDISP= 1 or 3)
	Reduction factor of elements (if KDISP=2)
KSYMXY - 0	1 symmetry about X-Y plane
KSYMxz - 0	1 symmetry about X-Z plane
KSYMZY - 0	1 symmetry about Y-Z plane

Symmetries are performed consecutively (i.e., a plate quadrant with KSYMxz and KSYMZY equal to one would yield a complete plate).

XXMAX,XXMIN - 1.0E+20	Locate cutting planes parallel to principal planes
YYMAX,YYMIN - 1.0E-20	(X-Y, X-Z, Y-Z) to limit plot
ZZMAX,ZZMIN	
NDMAX - 9999999	Maximum grid point identification number to be included in the plot
NDMIN - 0	Minimum grid point identification number to be included in the plot
NELMAX - 9999999	Maximum element identification number to be included in the plot
NELMIN - 0	Minimum element identification number to be included in the plot
KODE - 0	Specifies control option after a plot is complete
	0 last plot, exit from program
	1 read another Namelist PICT

2 read a new set of displacement
data (see NOTE 1 below)

3 read a complete new set of input
data starting with a title card.

(NOTE 1: For SAP IV displacement data, KODE=2 signifies that the next load case displacements will be assigned to the model nodal points.)

The previous sections describe a complete basic set of input data, if KODE =0 in Namelist PICT. For KODE =1, 2, or 3, additional sections of the deck must be repeated. The deck must end with a Namelist PICT having a value of KODE = 0 in it. An example input data deck and output plots for the simple truss problem of Appendix A is found in Appendix B.

C. METHOD FOR ALTERING SUBROUTINE PSAP

In the event a user has geometry and displacement data decks from a program other than SAP IV, it is possible to plot those decks with PSAP. The subroutine will handle rod-like elements, triangular elements, or quadrilateral elements when they are input in acceptable format. By studying subroutines GEOM9 and DATA9, and SUBROUTINE PSAP (Appendix D), the necessary sequence of input can be determined. PSAP is presently constructed so that a user may supply his own routines through the use of subroutines GEOM1 or GEOM2 for geometry data and DATA1 or DATA5 for displacement data. In order to add a subroutine to PSAP, it need only be placed after the main calling program in the sequence of control cards as discussed in paragraph II.B.2. The essential features for the input of the geometry data are the nodal points, with their X,Y,Z coordinates, and the connectivity sequence for the finite element model. The

necessary part of displacement data input is the node point number, with the U,V,W displacements. Adding a user-prepared subroutine through GEOM1 or 2 and DATA1 or 5 should prove to be a relatively straight-forward task for the user who desires to do so. The listing of GEOM9 in Appendix D can be used as a guide.

D. SIGNIFICANT ASPECTS OF SUBROUTINE PSAP

1. Exploded Plots

Often the absence or presence of elements in a finite element model cannot be determined from a conventional oblique orthographic projection. For example, a line element that is coincident with an edge of a triangular or quadrilateral element could not be detected. To show clearly each element, PSAP contains an algorithm for generating exploded oblique orthographic projections. This can be a valuable tool in checking the topology of an analytical model. (i.e., KDISP = 2)

2. Portions of Models

The ability to isolate a portion of a model for detailed examination is a very useful and desirable asset of a preprocessor. SUBROUTINE PSAP has the capability of specifying cutting planes (i.e., XXMIN ,XXMAX ,YYMIN,YYMAX, etc.) or maximum and minimum element numbers (i.e., NELMIN, NELMAX). Examples of this are shown in Appendix D.

3. Specification of View

The specification of view of a model is done through the use of the parameters KVERT, KHORZ, PSI, THETA, and PHI that are found in Namelist PICT (Section III.B.9). The specific details of how this is accomplished can be found in Reference 2. There are a great number of possible combinations of the above parameters, and Appendix C illustrates various combinations that were used on a section of a finite element wing model. The Calcomp plots, along with the parameters as specified, are found in each figure.

4. Possible Sources of Errors

(a) The most probable source of error could be incorrect data deck preparation or deck sequencing. It is important to use Figure 2 as a guide while preparing the input for PSAP.

(6) Other errors may occur if the arrays ZZZ and DISPD are not dimensioned correctly as discussed in paragraph III.B.3. During the execution of the program several manipulations are performed with the two arrays, and it is possible for addresses of the data to be lost within the IBM 360/67. The 360 System error messages may not directly indicate that the dimensions of the arrays have been exceeded.

(c) A most important point to remember in generating a sequence of plots is that once a parameter has been assigned a value in a namelist, it retains that value until it is reassigned. For example, if PLOTSZ is assigned a value of 8.0 for the first in a series of plots and it is not

redefined in any subsequent Namelists PICT , the value of PLOTSZ will retain the value (8.0), as originally specified.

(d) It is possible to make any number of errors, however, and all of them cannot be anticipated. The error messages from the IBM 360/67 System will, in most cases, be straight-forward and facilitate easy trouble-shooting.

IV. CONCLUSIONS AND RECOMMENDATIONS

General purpose finite element structural analysis programs like SAP IV are significant analytical tools that can be used most effectively when coupled with a flexible pre- and postprocessor. The availability of a powerful structural analysis tool with partial pre- and postprocessing capability has now been provided for Naval Postgraduate School Students. However, at present this capability is limited to pre- and postprocessing the data of only five of the SAP IV elements. It does not appear feasible, at this time, to add any more capability as far as the number of SAP IV elements goes. However, other additional improvements to postprocessing at NPS should be made. For example, Appendix C of Reference 2 lists a program developed to produce contour plots of stress data from finite element models. The program, in all probability, could be adapted to SAP IV and the NPS IBM 360/67. This represents a possible avenue to further the present structural analysis capability for NPS students. SAP IV itself can be expanded. There is a great deal of work being done in the area of composite materials, and SAP IV possesses only very limited orthotropic material capability. However, there are subroutines within SAP IV that could be modified to reflect more current methods in handling composite materials.


In conclusion, the finite element method in structural engineering is the most powerful analysis tool available today and needs to be exploited by NPS students in both classroom and research work. Programs like SAP IV are available at many Navy laboratories, development centers,

and aerospace companies throughout the country. The current trends in structural analysis are toward computer-aided techniques, and exposure to a general purpose package for students enrolled in AE 4101 and AE 4102 is a significant asset.

APPENDIX A

EXAMPLE PROBLEM USING SAP IV

The schematic given below illustrates the example problem for which the data on the following page were prepared.

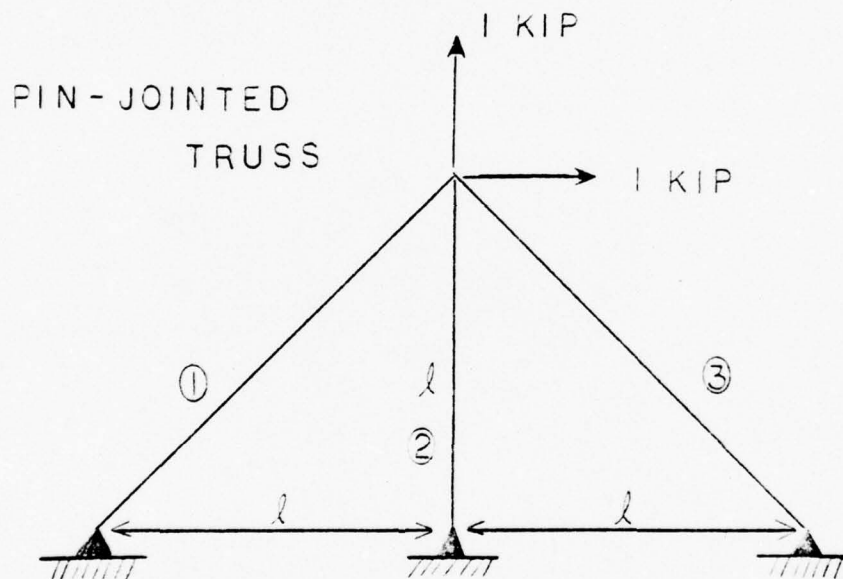

$l = 100$ inches
 $E = 10.1E+06$ psi
 $ALPHA = 12.6E-06$ psi
 $A = 0.5$ sq.in.
 $A = 1.0$ sq.in.
 $A = 0.75$ sq.in.

APPENDIX B

EXAMPLE PROBLEM USING SUBROUTINE PSAP

The pin-jointed truss problem in Appendix A is also used as an example in illustrating SUBROUTINE PSAP use. The entire computer card deck used to generate Figures 6, 7, and 8 is listed on the following two pages of this appendix. The printed computer output for this problem is shown in Figure 9. Note that the displacements of node number 4 have been magnified by 1000.

&PICT
NOTAT=1,KDIS P=3,KODE=0
&END
/ (STANDARD NPS EOF CARD)

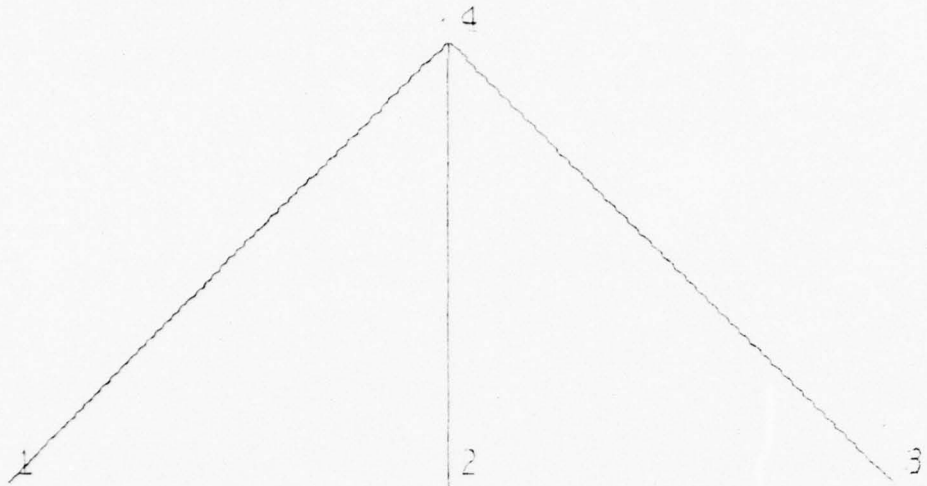


Figure 6 - UNDEFORMED TRUSS MODEL

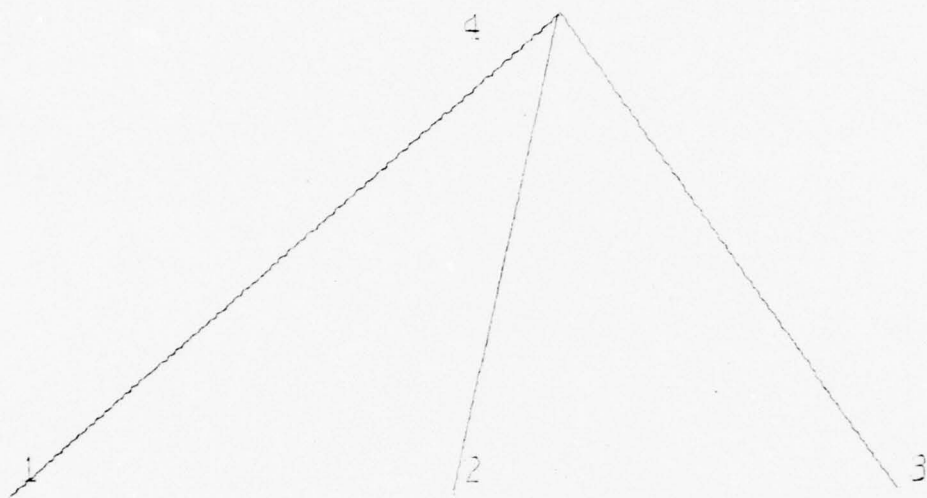


Figure 7 - DEFORMED TRUSS MODEL(NODE4 DISPLACED)

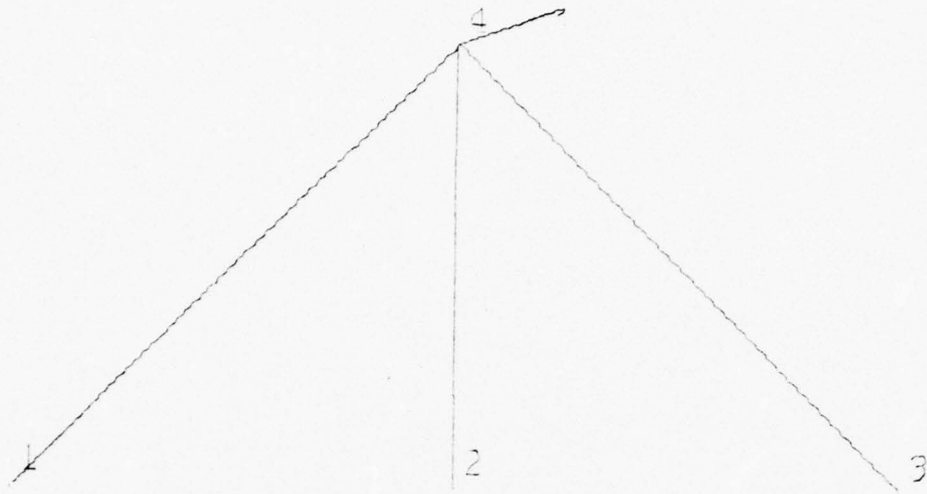


Figure 8 - DISPLACEMENTS(NODE4) FOR TRUSS MODEL PLOTTED AS A VECTOR

APPENDIX C

SAMPLE SUBROUTINE PSAP OUTPUTS FOR A FINITE ELEMENT MODEL OF A WING

The figures contained in this appendix are of a finite element wing model developed in Flight Vehicle Structural Analysis II (AE 4102, QFR.IV, 1976). The original wing was designed in AE 4274, which is the latter half of the subsonic structural design sequence in the Department of Aeronautics. The finite element model of the wing was developed in AE 4102 as a class project. (The structural analysis and design sequences in the the Department of Aeronautics are constructed so that they interrelate the two different areas.) Each student was assigned responsibility for a portion of the wing and the student whose design was used was the analysis leader.

Figure 10 shows the axis orientation used in the original definition of the wing as designed in AE 4274. Figure 11 and 12 show the entire model with over four hundred membrane elements and with different views of the model specified. In Figures 13 and 14 a single portion of the wing is shown with different rotation angles. The significant Namelist PICT values used to orient the model are included in the figures.


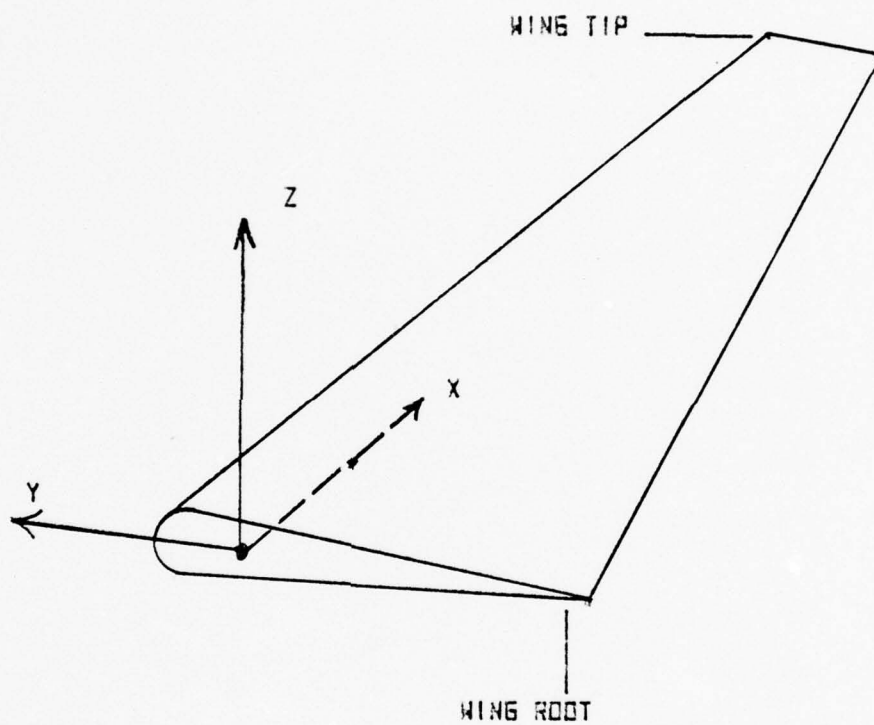


Figure 10 - WING MODEL AXIS ORIENTATION

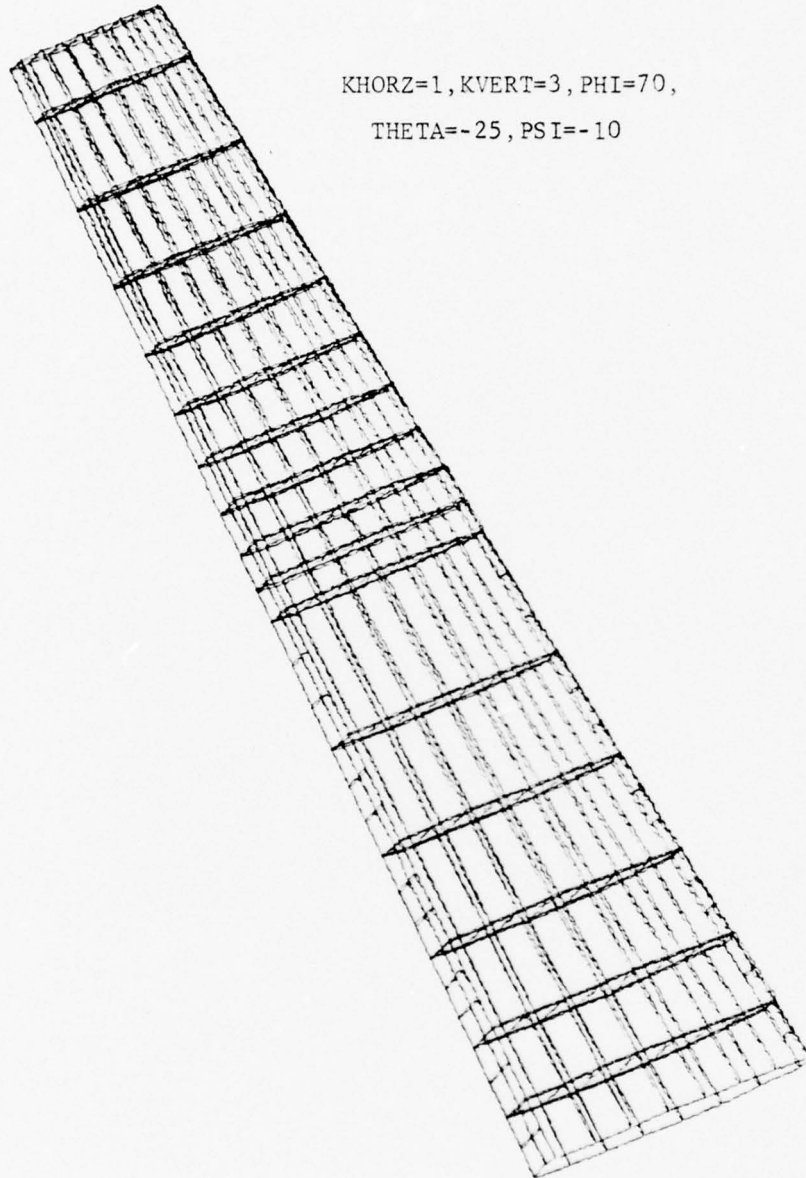

KHORZ=1, KVERT=3, PHI=70,
THETA=-25, PSI=-10

Figure 11 - ORTHOGRAPHIC PROJECTION OF WING MODEL -1

KHORZ=2, KVERT=3, PHI=60,
THETA=-25, PSI=-10


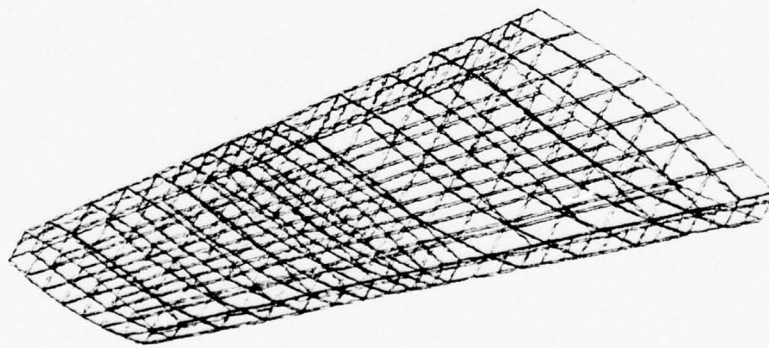


Figure 12 - ORTHOGRAPHIC PROJECTION OF WING MODEL -2

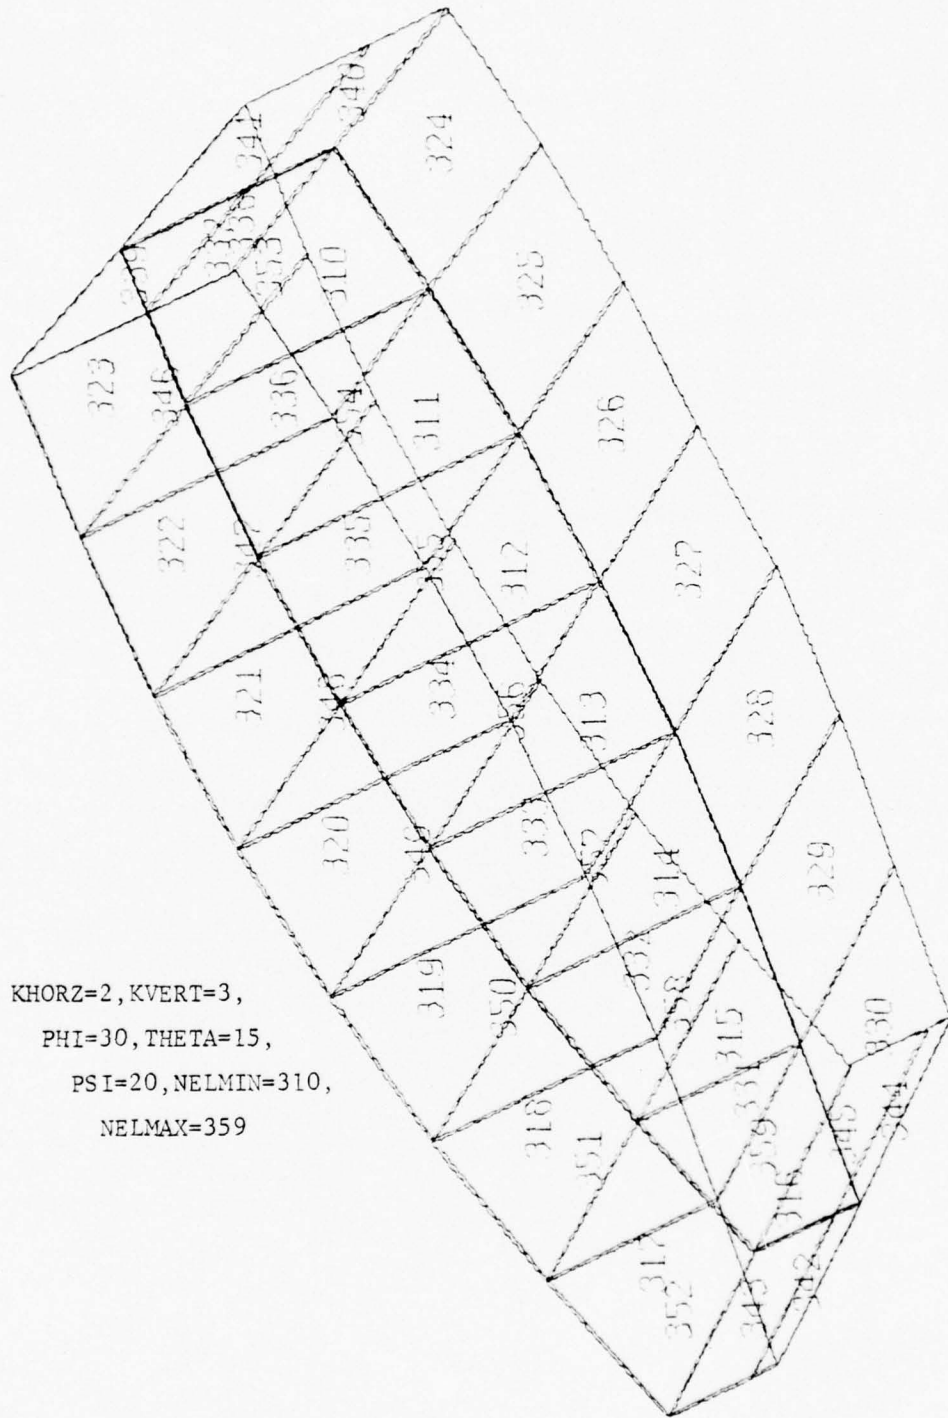

KHORZ=2, KVERT=3,
 PHI=30, THETA=15,
 PSI=20, NELMIN=310,
 NELMAX=359

Figure 13 - WING MODEL SECTION - ORIENTATION -1

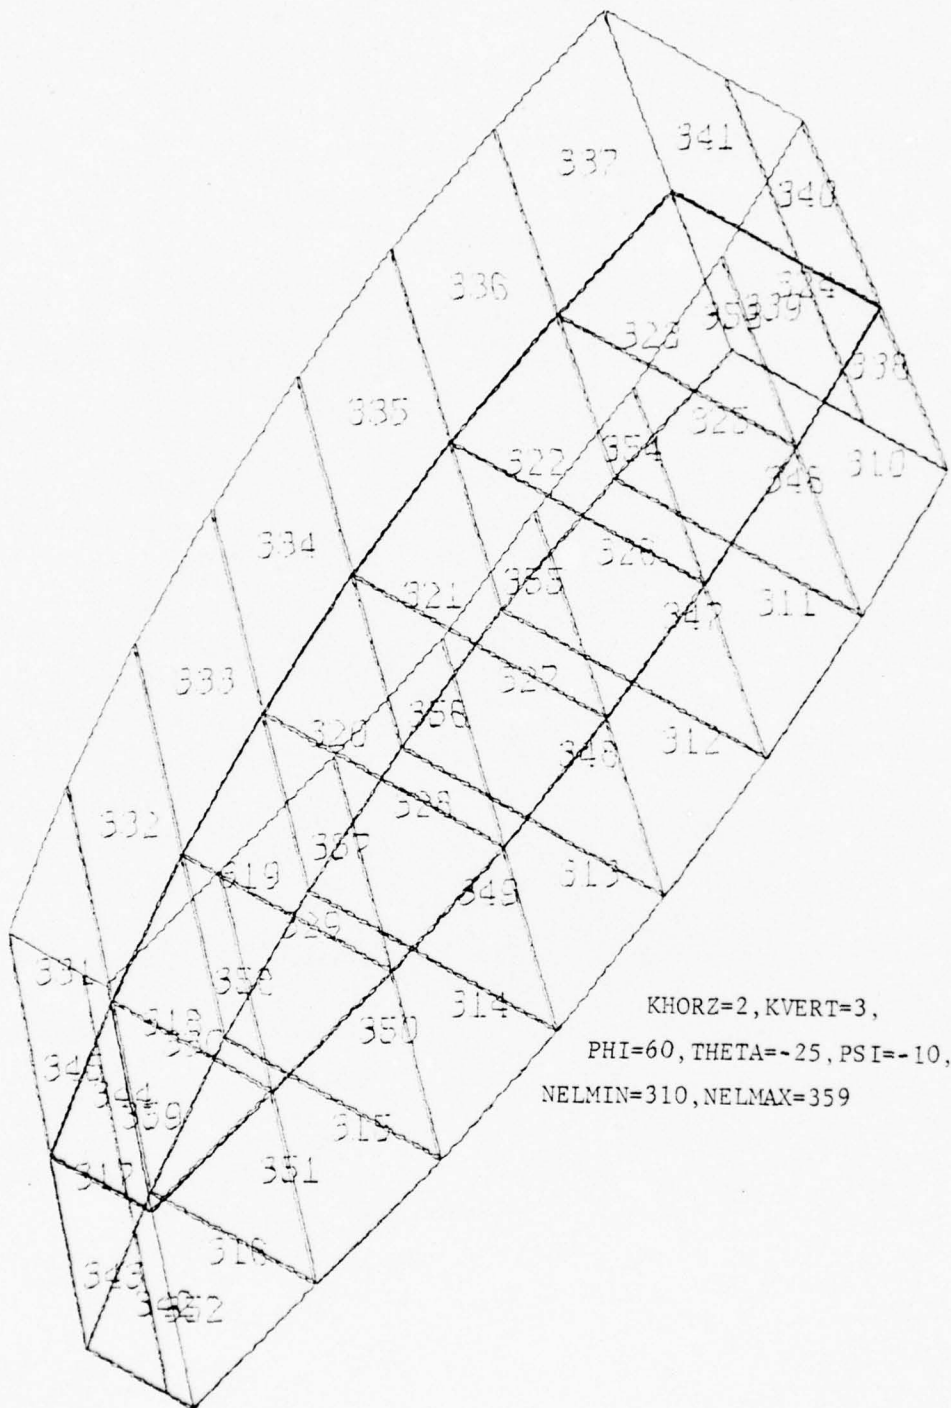


Figure 14 - WING MODEL SECTION - ORIENTATION -2

DDC02410
 DDC02420
 DDC02430
 DDC02440
 DDC02450
 DDC02460
 DDC02470
 DDC02480
 DDC02490
 DDC02500
 DDC02510
 DDC02520
 DDC02530
 DDC02540
 DDC02550
 DDC02560
 DDC02570
 DDC02580
 DDC02590
 DDC02600
 DDC02610
 DDC02620
 DDC02630
 DDC02640
 DDC02650
 DDC02660
 DDC02670
 DDC02680
 DDC02690
 DDC02700
 DDC02710
 DDC02720
 DDC02730
 DDC02740
 DDC02750
 DDC02760
 DDC02770
 DDC02780
 DDC02790
 DDC02800
 DDC02810
 DDC02820
 DDC02830
 DDC02840
 DDC02850
 DDC02860
 DDC02870
 DDC02880

```

COMMON/VALUES/ NVALU
COMMON/CASEID/ I0CASE
DIMENSION ZZZ(NZ),DISPD(5,3,NN)
DIMENSION DSAV(3)
REAL#8 ABCD(10)
NAMELIST/PIC/ KHORZ,KVEKT,PHI,THETA,PSI,NEWFR,ISCALE,
1PLCTSZ,XORGN,YORGN,PSCALE,NOTA,KDISP,DMAG,DMAGS,KODE,
2KSYMXY,KSYMZY,KSYMZX,XXMAX,YYMAX,ZZMAX,XXMIN,
3YYMIN,ZZMIN,NDMAX,NDMIN,NELMAX,NELMIN,XLHT

C *** TC ZERO NODE AND ELEMENT SUMMATION COUNTERS
C
C
ILOOP = 0
NNODE = 0
XCABS = 0.0
YCABS = 0.0
XFMAX = 0.0
CCNTINUE
500 REWIND 10
XSTRT = 0.0
YSTRT = 0.0
WRITE(6,8)
FCRMT(1H1)
8
C *** TO READ TITLE CARD FOR RUN
C
C
READ(5,10,END=999) ABCD
FCRMT(10A8)
WRITE(6,11) ABCD
FCRMT(//,20X,10A8,///)
CALL INITIAL
HEIGHT = 0.15
XSTRT = XSTRT+2.0*HEIGHT
YSTRT = 1.0
CALL NOTATE(XSTRT,YSTRT,HEIGHT,ABCD, 0.0,80)
CALL CALPLT(-.5,0.0,-3)

C *** TO SET POINTERS FOR BLANK COMMON STORAGE ZZZ
C *** (WITH INTEGER NAMES OF ARRAYS USED IN CALLED SUBROUTINES)
C
NUMPT = 1
XPT = NUMPT+NNDEST
YPT = XPT+NNDEST
ZPT = YPT+NNDEST
LPT = ZPT+NNDEST
IF(NUDISP.EQ.0) VPT = UPT+1
IF(NUDISP.NE.0) VPT = VPT+1
IF(NVDISP.EQ.0) WPT = VPT+1
  
```

```

IF(NVDISP.NE.0) WPT = VPT+NNDEST
IF(NWDISP.EQ.0) NEND = WPT+1-1
IF(NWDISP.NE.0) NEND = WPT+NNDEST-1
WRITE(6,15) NEND
15 FORMAT(//,20X,'BLANK COMMON STORAGE ZZZ REQUIRES AT LEAST ',I6,
1, LOCATIONS FOR THIS CASE'////)
IF(KGEQM.EQ.1) CALL GEOM1
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(KGEOM.EQ.2) CALL GEOM2
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(KGEOM.EQ.9) CALL GEOM9
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
CALL PNTOUT(1)
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
600 CONTINUE
IF(ICCASE.EQ.0) GO TO 650
READ(5,10) ABCD
WRITE(6,11) ABCD
650 CCNTINUE
CALL ZEROD
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(KDATA.EQ.1) CALL DATA1
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(KDATA.EQ.5) CALL DATA5
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(KDATA.EQ.9) CALL DATA9
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
2DISPD,NON)
CALL PNTOUT(2)
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
700 CCNTINUE
IF(KPLOT.EQ.4.AND.ILOOP.NE.0) GO TO 6000
WRITE(6,1000)
FORMAT(//)
READ(5,PICT)
WRITE(6,PICT)
6000 CCNTINUE
CALL DSCALE
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
CALL BOUND
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
CALL ROTAT
CALL PLOTX
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(NOTAT.EQ.1) CALL NDLET
1(ZZZ(NUMPT),ZZZ(XPT),ZZZ(YPT),ZZZ(ZPT),ZZZ(VPT),ZZZ(WPT))
IF(KPLOT.EQ.4) CALL CALPLT(0.0,0.0,-3)
IF(KPLOT.EQ.4) CALL CCRT2
DCC02890
DCC02900
DCC02910
DCC02920
DCC02930
DCC02940
DCC02950
DCC02960
DCC02970
DCC02980
DCC02990
DCC03000
DCC03010
DCC03020
DCC03030
DCC03040
DCC03050
DCC03060
DCC03070
DCC03080
DCC03090
DCC03100
DCC03110
DCC03120
DCC03130
DCC03140
DCC03150
DCC03160
DCC03170
DCC03180
DCC03190
DCC03200
DCC03210
DCC03220
DCC03230
DCC03240
DCC03250
DCC03260
DCC03270
DCC03280
DCC03290
DCC03300
DCC03310
DCC03320
DCC03330
DCC03340
DCC03350
DCC03360

```

```

ILOOP = ILOOP+1
IF(KODE.EQ.0) GO TO 800
GO TO (700,600,500), KODE
CONTINUE
800 CALL PSTOP
959 RETURN
END
SLROUTINE PSTOP
C *** TC TERMINATE JOB.
C
CCMMGN/CONTRL/ KGEOM, KDATA, KPLOT, KSYMXY, KSYMZX, KSYMZY, NOTAT, XLHT,
1KHORZ, KVERT, PHI, THETA, PSI, NEWFR, ISCALE, PLOTSZ, XORGN, YORGN,
2PSCALE, KDISP, DMAG, KODE
CALL CALPLT(0.0,0.0,-3)
STOP
END
SUBROUTINE INITIAL
C *** TO SET UP VALUES FOR CONTROL PARAMETERS
C
CCMMGN/CDATA/NTIME,NTLC
CCMMGN/CONTRL/ KGEOM, KDATA, KPLOT, KSYMXY, KSYMZX, KSYMZY, NOTAT, XLHT,
1KHORZ, KVERT, PHI, THETA, PSI, NEWFR, ISCALE, PLOTSZ, XORGN, YORGN,
2PSCALE, KDISP, DMAG, KODE
CCMMGN/LIMITS/ XXMAX, YYMAX, ZZMAX, XXMIN, YYMIN, ZZMIN, NDMAX, NDMIN,
1NELMAX, NELMIN
CCMMGN/CORGN/ XOABS, YOABS, XPMAX, XSPACE, PSIZE
CCMMGN/SAVEV/ DMAGS, IDMAG
CCMMGN/KOUNT/ NNODE, NNDEST, NUDISP, NVDISP, NWCISP
CCMMGN/SEQNCE/ IRESEQ
CCMMGN/VALUES/ NVALUS
CCMMGN/CASEID/ IDCASE
NAMELIST/OPTION/ NNDEST, NUDISP, NVDISP, NWDISP,
1KGEOM, KDATA, NVALUS, IRESEQ, KPLOT, XSPACE, PSIZE, IDCASE
C *** DESCRIPTION OF VALUES IN $OPTION GIVEN IN SUBROUTINE DOCMNT
C
C *** TO SET DEFAULT VALUES FOR $OPTION
NNDEST = 200
NUDISP = 1
NVDISP = 1
NWDISP = 1
KGEOM=9
KDATA=9

```

```

D0C03370
D0C03380
D0C03390
D0C03400
D0C03410
D0C03420
D0C03430
D0C03440
D0C03450
D0C03460
D0C03470
D0C03480
D0C03490
D0C03500
D0C03510
D0C03520
D0C03530
D0C03540
D0C03550
D0C03560
D0C03570
D0C03580
D0C03590
D0C03600
D0C03610
D0C03620
D0C03630
D0C03640
D0C03650
D0C03660
D0C03670
D0C03680
D0C03690
D0C03700
D0C03710
D0C03720
D0C03730
D0C03740
D0C03750
D0C03760
D0C03770
D0C03780
D0C03790

D0C03830
D0C03840

```

DDC03850
 DDC03860
 DDC03870
 DDC03880
 DDC03890
 DDC03900
 DDC03910
 DDC03920
 DDC03930
 DDC03940
 DDC03950
 DDC03960
 DDC03970
 DDC03980
 DDC03990
 DDC04000
 DDC04010
 DDC04020
 DDC04030
 DDC04040
 DDC04050
 DDC04060
 DDC04070
 DDC04080
 DDC04090
 DDC04100
 DDC04110
 DDC04120
 DDC04130
 DDC04140
 DDC04150
 DDC04160
 DDC04170
 DDC04180
 DDC04190
 DDC04200
 DDC04210
 DDC04220
 DDC04230
 DDC04240
 DDC04250
 DDC04260
 DDC04270
 DDC04280
 DDC04290
 DDC04300
 DDC04310
 DDC04320

```

    NTIME=0
    NVALUS = 0
    IRESEQ = 1
    KFLOT = 1
    XSPACE=5.0
    PSIZE=10.0
    ICCASE = 0

C *** TO SET DEFAULT VALUES FOR $PICT
C
    KFORZ = 1
    KVERT = 2
    PF1 = 0.0
    PF2 = 0.0
    PSI = 0.0
    NEWFR = 1
    ISCALE = 1
    PLUTSZ = 10.0
    XORGN = 0.0
    YCRGN = 0.0
    PSCALE = 1.0
    NLTAT = 0
    XLHT = 0.15
    KDISP = 0
    ICMAG = 2
    DMAGS = 1.0
    KSYMXY = 0
    KSYMXZ = 0
    KSYMZY = 0
    XXMAX = 1.0E20
    YYMAX = 1.0E20
    ZZMAX = 1.0E20
    XXMIN = -1.0E20
    YYMIN = -1.0E20
    ZZMIN = -1.0E20
    NCMAX = 99999999
    NDMIN = 0
    NELMAX = 99999999
    NELMIN = 0
    KCDE = 0
    READ(15,OPTION,END=999)
    IF(KPLDT.LE.2) CALL CALCMP
    RETURN
    CALL PSTOP
    RETURN
    END
    SUBROUTINE BOUND(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)
  
```

959

C

```

C *** TO DETERMINE MAXIMUM DIMENSIONAL LIMITS OF EDDY FOR USE
C IN SCALING PLOTS
C
CCOMON/CONTRL/ KGEOM,KDATA,KPLUT,KSYMXY,KSYMZX,KSYMZY,NOTAT,XLHT,
1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,
2PSCALE,KDISP,DMAG,KODE
CCOMON/LIMITS/ XXMAX,YYMAX,ZZMAX,XXMIN,YYMIN,ZZMIN,NDMAX,NDMIN,
1NELMAX,NELMIN
CCOMON/XYZLIM/ XYZMAX(3),XYZMIN(3)
CCOMON/KOUNT/ NNODE,NNDEST,NVDISP,NWDISP
DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),VPT(1),WPT(1)
DIMENSION NODE(4)
DO 5 I=1,3
XYZMIN(I) = +1.0E20
XYZMAX(I) = -1.0E20
5 CONTINUE
REWIND 10
CONTINUE
READ(10,END=100) NUMEL,NODEL,NODE2,NODE3,NCDE4
IF(NUMEL.LT.NELMIN.OR.NUMEL.GT.NELMAX) GO TO 100
NODE(1) = NODE1
NODE(2) = NODE2
NODE(3) = NODE3
NODE(4) = NODE4
DO 10 I=1,4
ND = NODE(I)
IF(NODE(I).EQ.0) GO TO 15
IF(NUMPT(ND).LT.NDMIN.OR.NUMPT(ND).GT.NDMAX) GO TO 100
CONTINUE
DO 20 I=1,4
IF(NODE(I).EQ.0) GO TO 25
ND = NODE(I)
IF(XPT(ND).GT.XXMAX) GO TO 20
IF(XPT(ND).LT.XXMIN) GO TO 20
IF(YPT(ND).GT.YYMAX) GO TO 20
IF(YPT(ND).LT.YYMIN) GO TO 20
IF(ZPT(ND).GT.ZZMAX) GO TO 20
IF(ZPT(ND).LT.ZZMIN) GO TO 20
IF(XPT(ND).GT.XYZMAX(1)) XYZMAX(1) = XPT(ND)
IF(XPT(ND).LT.XYZMIN(1)) XYZMIN(1) = XPT(ND)
IF(YPT(ND).GT.XYZMAX(2)) XYZMAX(2) = YPT(ND)
IF(YPT(ND).LT.XYZMIN(2)) XYZMIN(2) = YPT(ND)
IF(ZPT(ND).GT.XYZMAX(3)) XYZMAX(3) = ZPT(ND)
IF(ZPT(ND).LT.XYZMIN(3)) XYZMIN(3) = ZPT(ND)
CONTINUE
20 CONTINUE
25 GO TO 100
DCC04330
DCC04340
DCC04350
DCC04360
DCC04370
DCC04380
DCC04390
DCC04400
DCC04410
DCC04420
DCC04430
DCC04440
DCC04450
DCC04460
DCC04470
DCC04480
DCC04490
DCC04500
DCC04510
DCC04520
DCC04530
DCC04540
DCC04550
DCC04560
DCC04570
DCC04580
DCC04590
DCC04600
DCC04610
DCC04620
DCC04630
DCC04640
DCC04650
DCC04660
DCC04670
DCC04680
DCC04690
DCC04700
DCC04710
DCC04720
DCC04730
DCC04740
DCC04750
DCC04760
DCC04770
DCC04780
DCC04790
DCC04800

```

```

1000 CONTINUE
      DO 300 I=1,3
      IF(I.EQ.1.AND.KSYMZY.NE.1) GO TO 300
      IF(I.EQ.2.AND.KSYMZX.NE.1) GO TO 300
      IF(I.EQ.3.AND.KSYMXY.NE.1) GO TO 300
      XYZBIG = ABS(XYZMAX(I))
      IF(ABS(XYZMIN(I)).GT.XYZBIG) XYZBIG = ABS(XYZMIN(I))
      XYZMAX(I) = XYZBIG
      XYZMIN(I) = -XYZBIG
      CCNTINUE
      RETURN
      END
300 SLROUTINE ZERO0(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)
      C *** INITIALIZES ALL DISPLACEMENTS TO ZERO.
      C
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)
      DO 150 I=1,NUDISP
      UPT(I) = 0.0
      CCNTINUE
150 IF(NVDISP.EQ.0) GO TO 300
      DO 250 I=1,NVDISP
      VPT(I) = 0.0
      CCNTINUE
200 IF(NWDISP.EQ.0) GO TO 400
      DO 350 I=1,NWDISP
      WPT(I) = 0.0
      CCNTINUE
300 RETURN
      END
      SLROUTINE PNTOUT(IOUT,NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT;
      C *** FOR PRINTED OUTPUT OF INFORMATION IN BLANK COMMON - ZZZ
      C
      COMMON/KOUNT/ NNODE,NNDEST,NUDISP,NVDISP,NWDISP
      DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)
      GC TO (1000,2000), IOUT
      CONTINUE
1000
      C *** FOR OUTPUT OF GEOMETRY INFORMATION
      C
      WRITE(6,16)
      FCORMAT(//,5X,'GRID PCINT INFORMATION',//)
      16

```

```

DCC04810
DCC04820
DCC04830
DCC04840
DCC04850
DCC04860
DCC04870
DCC04880
DCC04890
DCC04900
DCC04910
DCC04920
DCC04930
DCC04940
DCC04950
DCC04960
DCC04970
DCC04980
DCC04990
DCC05000
DCC05010
DCC05020
DCC05030
DCC05040
DCC05050
DCC05060
DCC05070
DCC05080
DCC05090
DCC05100
DCC05110
DCC05120
DCC05130
DCC05140
DCC05150
DCC05160
DCC05170
DCC05180
DCC05190
DCC05200
DCC05210
DCC05220
DCC05230
DCC05240
DCC05250
DCC05260
DCC05270
DCC05280

```

```

17 WRITE(6,17)
   FORMAT(5X,'RESEQUENCED',4X,'USER INPUT',/
15X,'GRID POINT',5X,'GRID POINT',/
25X,'NUMBER',9X,'NUMBER',13X,'X',14X,'Y',14X,'Z',//)
   DO 30 I=1,NNODE
18 WRITE(6,18) I,NUMPT(I),XPT(I),YPT(I),ZPT(I)
30 CONTINUE
19 WRITE(6,19)
   FORMAT(//,5X,'ELEMENT INFORMATION - WITH RESEQUENCED GRID POINTS
1',//)
21 WRITE(6,21)
   FORMAT(5X,'RESEQUENCED',4X,'USER INPUT',19X,'GRID POINTS',/
15X,'ELEMENT',9X,'ELEMENT',/
25X,'NUMBER',9X,'NUMBER',13X,'1',9X,'2',9X,'3',9X,'4',//)
   I = 0
35 CONTINUE
   I = I+1
   READ(10,END=99) NUMEL,NODE1,NODE2,NODE3,NODE4
   WRITE(6,22) I,NUMEL,NODE1,NODE2,NODE3,NODE4
22 FCFORMAT(2X,110,5X,110,4X,4110)
   GO TO 35
2000 CONTINUE
C *** FCR OUTPUT OF DISPLACEMENT DATA
C
210 WRITE(6,210)
   FCFORMAT(//,5X,'DISPLACEMENTS TO BE PLOTTED',//)
   DO 250 I=1,NNODE
   U = 0.0
   IF(NUDI$P.NE.0) U = UPT(I)
   V = 0.0
   IF(NVDI$P.NE.0) V = VPT(I)
   W = 0.0
   IF(NWDI$P.NE.0) W = WPT(I)
   WRITE(6,18) I,NUMPT(I),U,V,W
230 CONTINUE
   RETURN
   END
SLEROUT INE PLOTX(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)
C *** FOR GENERATING PLOTS.
C
CCMMGN/CONTROL, KGEOM, KDATA, KPLOT, KSYMXY, KSYMZX, KSYMZY, NOTAT, XLHT,
1KFORZ, KVERT, PHI, THETA, PSI, NEWFR, ISCALE, PLOTSZ, XORGN, YORGN,
2PSCALE, KDISP, DMAG, KODE

```

```

DCC05290
DCC05300
DCC05310
DCC05320
DCC05330
DCC05340
DCC05350
DCC05360
DCC05370
DCC05380
DCC05390
DCC05400
DCC05410
DCC05420
DCC05430
DCC05440
DCC05450
DCC05460
DCC05470
DCC05480
DCC05490
DCC05500
DCC05510
DCC05520
DCC05530
DCC05540
DCC05550
DCC05560
DCC05570
DCC05580
DCC05590
DCC05600
DCC05610
DCC05620
DCC05630
DCC05640
DCC05650
DCC05660
DCC05670
DCC05680
DCC05690
DCC05700
DCC05710
DCC05720
DCC05730
DCC05740
DCC05750
DCC05760

```



```

COMMON/LIMITS/ XXMAX, YYMAX, ZZMAX, XXMIN, YYMIN, ZZMIN, NDMAX, NDMIN,
1 NELMAX, NELMIN      XYZMAX(3), XYZMIN(3)
COMMON/XYZLIM/      XZMAX, XZMIN, XZMIN(3)
COMMON/CORGN/  XOABS, YOABS, XPMAX, XSPACE, PSIZE
COMMON/GLOOP/  ILOOP
COMMON/ABLK/  A(3,3)
COMMON/KOUNT/  NNODE, NNDEST, NUDISP, NVDISP, NWDISP
COMMON/PODELS/  DELX, DELY
DIMENSION NUMPT(1), XPT(1), YPT(1), ZPT(1), UPT(1), VPT(1), WPT(1)
DIMENSION NODE(4), X(4), Y(4), Z(4), XDISP(4), YDISP(4), ZDISP(4),
1 XROT(4), YROT(4)
1 FFORMAT(8A10)
2 FFORMAT(1X,8A10)

C *** TC MAKE ALL GRID POINT NUMBERS NEGATIVE
C
C
50 I=1, NNODE
NUMPT(I) = -NUMPT(I)
CONTINUE
PI = 3.1415926
XMOVE = 0.0
IF(NEWFR.EQ.1) XMOVE = XPMAX+XSPACE
YMCVE = -YOABS
CALL CALPLT(YMOVE, XMOVE, -3)
XCABS = XOABS+XMOVE
YCABS = YOABS+YMOVE
GO TO (701,701,703,701), KPLOT
701 CONTINUE
GC TO 710
703 CONTINUE
IF(NEWFR.EQ.1) CALL NFRAME
710 CONTINUE
DELX = 0.0
DELY = 0.0
IF(ISCAL.EQ.1) CALL XYSCAL
CALL CALPLT(XORGN, YORGN, -3)
XCABS = XOABS+XORGN
YCABS = YOABS+YORGN
XSHIFT = 0.0
YSHIFT = 0.0
ZSHIFT = 0.0
XFMAX = -1.0E20

C *** LCCPS TO ACCOUNT FOR SYMMETRY
C
C
ZSIGN = +1.0
DO 500 I=1,2
IF(II.EC.2.AND.KSYMXY.NE.1) GO TO 500

```

```

DCC05770
DCC05780
DCC05790
DCC05800
DCC05810
DCC05820
DCC05830
DCC05840
DCC05850
DCC05860
DCC05870
DCC05880
DCC05890
DCC05900
DCC05910
DCC05920
DCC05930
DCC05940
DCC05950
DCC05960
DCC05970
DCC05980
DCC05990
DCC06000
DCC06010
DCC06020
DCC06030
DCC06040
DCC06050
DCC06060
DCC06070
DCC06080
DCC06090
DCC06100
DCC06110
DCC06120
DCC06130
DCC06140
DCC06150
DCC06160
DCC06170
DCC06180
DCC06190
DCC06200
DCC06210
DCC06220
DCC06230
DCC06240

```

```

IF(II.EQ.2.AND.KSYMXY.EQ.1) ZSIGN = -1.0
YSIGN = +1.0
CC 510 JJ=1,2
IF(JJ.EQ.2.AND.KSYMZX.NE.1) GO TO 510
IF(JJ.EQ.2.AND.KSYMZY.EQ.1) YSIGN = -1.0
XSIGN = +1.0
CC 520 KK=1,2
IF(KK.EQ.2.AND.KSYMZY.NE.1) GO TO 520
IF(KK.EQ.2.AND.KSYMZX.EQ.1) XSIGN = -1.0
C *** TC DETERMINE PROJECTED COORDINATES OF ELEMENTS
C
      REWIND 10
      CONTINUE
      READ(10,END=1000) NUMEL,NODE1,NODE2,NODE3,NCDE4
      IF(NUMEL.LT.NELMIN.OR.NUMEL.GT.NELMAX) GO TO 100
      NCDE(1) = NODE1
      NCDE(2) = NODE2
      NCDE(3) = NODE3
      NCDE(4) = NODE4
      DO 10 I=1,4
      ND = NCDE(I)
      IF(NCDE(I).EQ.0) GO TO 11
C *** TC MAKE GRID POINT NUMBERS CONNECTED BY ELEMENTS POSITIVE
      NUMPT(NC) = IABS(NUMPT(ND))
      IF(NUMPT(ND).LT.NDMIN.OR.NUMPT(ND).GT.NDMAX) GO TO 100
      NEND = I
      CONTINUE
      I = KVERT
      J = KVERT
      DO 20 N=1,NEND
      ND = NODE(N)
      IF(XPT(ND).GT.XXMAX) GO TO 100
      IF(XPT(ND).LT.XXMIN) GO TO 100
      IF(YPT(ND).GT.YYMAX) GO TO 100
      IF(YPT(ND).LT.YYMIN) GO TO 100
      IF(ZPT(ND).GT.ZZMAX) GO TO 100
      IF(ZPT(ND).LT.ZZMIN) GO TO 100
      XDISP(N) = 0.0
      YDISP(N) = 0.0
      ZDISP(N) = 0.0
      IF(KDISP.EQ.1.AND.NUDISP.NE.0) XDISP(N) = UPT(ND)
      IF(KDISP.EQ.1.AND.NVDISP.NE.0) YDISP(N) = VPT(ND)
      IF(KDISP.EQ.1.AND.NWDISP.NE.0) ZDISP(N) = WPT(ND)
      X(N) = XSIGN*(XPT(ND)+XDISP(N)*DMAG+XSHIFT)/PSCALE
      Y(N) = YSIGN*(YPT(ND)+YDISP(N)*DMAG+YSHIFT)/PSCALE

```

```

DCC06250
DCC06260
DCC06270
DCC06280
DCC06290
DCC06300
DCC06310
DCC06320
DCC06330
DCC06340
DCC06350
DCC06360
DCC06370
DCC06380
DCC06390
DCC06400
DCC06410
DCC06420
DCC06430
DCC06440
DCC06450
DCC06460
DCC06470
DCC06480
DCC06490
DCC06500
DCC06510
DCC06520
DCC06530
DCC06540
DCC06550
DCC06560
DCC06570
DCC06580
DCC06590
DCC06600
DCC06610
DCC06620
DCC06630
DCC06640
DCC06650
DCC06660
DCC06670
DCC06680
DCC06690
DCC06700
DCC06710
DCC06720

```

```

20 Z(N) = ZSIGN*(ZPT(ND)+ZDISP(N)*DMAG+ZSHI FT)/PSCALE
   CCNTINUE
   IF(KDISP.EQ.2) CALL XPLOD(NEND,X,Y,Z)
   XCENT = 0.0
   YCENT = 0.0
   DC 25 N=1,NEND
   XROT(N) = A(I,1)*X(N)+A(I,2)*Y(N)+A(I,3)*Z(N)
   YROT(N) = A(J,1)*X(N)+A(J,2)*Y(N)+A(J,3)*Z(N)
   XCENT = XCENT+XROT(N)
   YCENT = YCENT+YROT(N)
   XROT(N) = XROT(N)+DELY
   YROT(N) = YROT(N)+DELY
   IF(XROT(N).GT.XPMAX) XPMAX = XROT(N)
25 CCNTINUE
   XCENT = XCENT/FLOAT(NEND)-(6.0/7.0)*XLHT
   YCENT = YCENT/FLOAT(NEND)-XLHT/2.0
   XCENT = XCENT+DELY
   YCENT = YCENT+DELY
   AL = NUMEL
   IF(NOTAT.EQ.2) CALL NUMBER(XCENT,YCENT,XLHT,AL,0.0,-1)
C *** TC PLOT ELEMENTS
C
CALL CALPLT(XROT(1),YROT(1),3)
DO 30 N=2,NEND
CALL CALPLT(XROT(N),YROT(N),2)
30 CCNTINUE
CALL CALPLT(XROT(NEND),YROT(NEND),3)
IF(NEND.LE.2) GO TO 36
CALL CALPLT(XROT(1),YROT(1),2)
CALL CALPLT(XROT(1),YROT(1),3)
36 CCNTINUE
GO TO 100
1000 CONTINUE
IF(KDISP.NE.3) GO TO 650
600 CONTINUE
C *** TC PLOT VECTORS AT GRID POINTS
C
DC 601 ND=1,NNUDE
IF(NUMPT(ND).LE.0) GO TO 601
IF(XPT(ND).LT.XZMAX(1)) GO TO 601
IF(XPT(ND).GT.XZMAX(1)) GO TO 601
IF(YPT(ND).LT.XYZMIN(2)) GO TO 601
IF(YPT(ND).GT.XYZMIN(2)) GO TO 601
IF(ZPT(ND).LT.XYZMAX(3)) GO TO 601
IF(ZPT(ND).GT.XYZMIN(3)) GO TO 601

```

```

DCC06730
DCC06740
DCC06750
DCC06760
DCC06770
DCC06780
DCC06790
DCC06800
DCC06810
DCC06820
DCC06830
DCC06840
DCC06850
DCC06860
DCC06870
DCC06880
DCC06890
DCC06900
DCC06910
DCC06920
DCC06930
DCC06940
DCC06950
DCC06960
DCC06970
DCC06980
DCC06990
DCC07000
DCC07010
DCC07020
DCC07030
DCC07040
DCC07050
DCC07060
DCC07070
DCC07080
DCC07090
DCC07100
DCC07110
DCC07120
DCC07130
DCC07140
DCC07150
DCC07160
DCC07170
DCC07180
DCC07190
DCC07200

```

```

X(1) = XSIGN*(XPT(ND)+XSHIFT)/PSCALE
Y(1) = YSIGN*(YPT(ND)+YSHIFT)/PSCALE
Z(1) = ZSIGN*(ZPT(ND)+ZSHIFT)/PSCALE
XCISP(1) = 0.0
YDCISP(1) = 0.0
ZDCISP(1) = 0.0
IF(NVDISP.NE.0) XDISP(1) = UPT(ND)
IF(NVDISP.NE.0) YDISP(1) = VPT(ND)
IF(NWDISP.NE.0) ZDISP(1) = WPT(ND)
X(2) = XSIGN*(XPT(ND)+XDISP(1)+XSHIFT)/PSCALE
Y(2) = YSIGN*(YPT(ND)+YDISP(1)+XSHIFT)/PSCALE
Z(2) = ZSIGN*(ZPT(ND)+ZDISP(1)+XSHIFT)/PSCALE
I = KHORZ
J = KVERT
DC 605 N=1,2
XROT(N) = A(I,1)*X(N)+A(I,2)*Y(N)+A(I,3)*Z(N)
YROT(N) = A(J,1)*X(N)+A(J,2)*Y(N)+A(J,3)*Z(N)
XROT(N) = XROT(N)+DELX
YROT(N) = YROT(N)+DELY
CCNTINUE
605 XARW = 0.06
YARW = XARW/3.0
CALL GARROW(XROT(1),YROT(1),XROT(2),YROT(2),1,XARW,YARW)
CCNTINUE
601
650 CCNTINUE
520 CCNTINUE
510 CCNTINUE
500 CCNTINUE
RETURN
END
SUBROUTINE DSCALE(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)
C *** THIS SUBROUTINE DETERMINES THE SCALE FACTOR FOR DISPLACEMENTS
C
COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMxz,KSYMZY,NOTAT,XLHT,
1KFORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,
2PSCALE,KDISP,DMAG,KODE
COMMON/SAVEV/ DMAGS,DMAG
COMMON/KOUNT/ NNODE,NNDIST,NVDISP,NVDISP,NWCISP
DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)
IF(KDISP.EQ.0.OR.KDISP.EQ.2) GO TO 10
GO TO (10,20), DMAG
CCNTINUE
10 DMAG = DMAGS
GO TO 30
20 CCNTINUE
DMAX = 0.0
DC 100 I=1,NNODE

```

```

DCC07210
DCC07220
DCC07230
DCC07240
DCC07250
DCC07260
DCC07270
DCC07280
DCC07290
DCC07300
DCC07310
DCC07320
DCC07330
DCC07340
DCC07350
DCC07360
DCC07370
DCC07380
DCC07390
DCC07400
DCC07410
DCC07420
DCC07430
DCC07440
DCC07450
DCC07460
DCC07470
DCC07480
DCC07490
DCC07500
DCC07510
DCC07520
DCC07530
DCC07540
DCC07550
DCC07560
DCC07570
DCC07580
DCC07590
DCC07600
DCC07610
DCC07620
DCC07630
DCC07640
DCC07650
DCC07660
DCC07670
DCC07680

```

```

500 IF (NUDISP.EQ.0) GO TO 500
CONTINUE IF (ABS(UPT(I)).GT.DMAX) DMAX = ABS(UPT(I))
501 IF (NVDISP.EQ.0) GO TO 501
CONTINUE IF (ABS(VPT(I)).GT.DMAX) DMAX = ABS(VPT(I))
502 IF (NWDISP.EQ.0) GO TO 502
CONTINUE IF (ABS(WPT(I)).GT.DMAX) DMAX = ABS(WPT(I))
100 CCNTINUE DMAG = DMAGS/DMAX
30 RETURN
ENC
SUBROUTINE ROTAT
C *** SETS UP COEFFICIENTS OF ROTATION MATRIX
CCMMON/CONTRL/ KGEOM, KDATA, KPLOT, KSYMXY, KSYMXYZ, KSYMZY, NQTAT, XLHT,
1KHORZ, KVERT, PHI, THETA, PSI, NEWFR, fSCALE, PLOTSZ, XORGN, YORGN,
2PSCALE, KDISP, DMAG, KODE
CCMMON/ABLK/ A(3,3)
PI = 3.1415926536
SINPHI = SIN(PHI*PI/180.0)
COSPHI = COS(PHI*PI/180.0)
SINTHE = SIN(THETA*PI/180.0)
COSTHE = COS(THETA*PI/180.0)
SINPSI = SIN(PSI*PI/180.0)
COSPSI = COS(PSI*PI/180.0)
A(1,1) = COSTHE*COSPSI
A(1,2) = SINTHE*COSPSI
A(1,3) = SINPSI*COSPSI
A(2,1) = SINTHE*COSTHE
A(2,2) = SINTHE*SINPSI
A(2,3) = SINTHE*COSPSI
A(3,1) = -SINTHE
A(3,2) = COSTHE*SINPHI
A(3,3) = COSTHE*COSPHI
RETURN
END
SUBROUTINE XYSICAL
C *** TO DETERMINE SCALE FACTOR FOR MODEL GEOMETRY.
CCMMON/CONTRL/ KGEOM, KDATA, KPLOT, KSYMXY, KSYMXYZ, KSYMZY, NQTAT, XLHT,
1KHORZ, KVERT, PHI, THETA, PSI, NEWFR, fSCALE, PLOTSZ, XORGN, YORGN,
2PSCALE, KDISP, DMAG, KODE
CCMMON/XYZLIM/ XYZMAX(3), XYZMIN(3)

```

```

DCC07690
DCC07700
DCC07710
DCC07720
DCC07730
DCC07740
DCC07750
DCC07760
DCC07770
DCC07780
DCC07790
DCC07800
DCC07810
DCC07820
DCC07830
DCC07840
DCC07850
DCC07860
DCC07870
DCC07880
DCC07890
DCC07900
DCC07910
DCC07920
DCC07930
DCC07940
DCC07950
DCC07960
DCC07970
DCC07980
DCC07990
DCC08000
DCC08010
DCC08020
DCC08030
DCC08040
DCC08050
DCC08060
DCC08070
DCC08080
DCC08090
DCC08100
DCC08110
DCC08120
DCC08130
DCC08140
DCC08150
DCC08160

```

```

CCMMCN/CORGN/ XOABS, YOABS, XPMAX, XSPACE, PSIZE
COMMON/ABLK/ A(3,3)
COMMON/PDELS/ DELX, DELY
I = KHORZ
J = KVERT
DMAX = 0.0
DO 5 N=1,3
VDUM = ABS(XYZMAX(N)-XYZMIN(N))
IF (VDUM.GT.DMAX) DMAX = VDUM
5 CONTINUE
PSCALE = DMAX/PLOTSZ
DO 10 L=1,2
DO 10 M=1,2
DO 10 N=1,2
X = XYZMIN(1)
IF(L.EQ.2) X = XYZMAX(1)
Y = XYZMIN(2)
IF(M.EQ.2) Y = XYZMAX(2)
Z = XYZMIN(3)
IF(N.EQ.2) Z = XYZMAX(3)
XRCT = A(I,1)*X+A(I,2)*Y+A(I,3)*Z
YRCT = A(J,1)*X+A(J,2)*Y+A(J,3)*Z
IF(L*M*N.NE.1) GO TO 30
20 CONTINUE
XRMIN = XRCT
XRMAX = XRCT
YRMIN = YRCT
YRMAX = YRCT
30 CONTINUE
GT.XRMAX) XRMAX = XRCT
IF(XRGT.LT.XRMIN) XRMIN = XRCT
IF(YRGT.GT.YRMAX) YRMAX = YRCT
IF(YRGT.LT.YRMIN) YRMIN = YRCT
10 CONTINUE
YR = ABS(YRMAX-YRMIN)
IF(YR/PSCALE.GT.PSIZE) PSCALE = YR/PSIZE
XRMAX = XRMAX/PSCALE
YRMAX = YRMAX/PSCALE
XRMIN = XRMIN/PSCALE
YRMIN = YRMIN/PSCALE
DELY = -XRMIN
DELY = -YRMIN
XORGN = 0.0
YORGN = 0.0
RETURN
END
SUBROUTINE XPLGD(NEND,X,Y,Z)

```

```

DCC08170
DCC08180
DCC08190
DCC08200
DCC08210
DCC08220
DCC08230
DCC08240
DCC08250
DCC08260
DCC08270
DCC08280
DCC08290
DCC08300
DCC08310
DCC08320
DCC08330
DCC08340
DCC08350
DCC08360
DCC08370
DCC08380
DCC08390
DCC08400
DCC08410
DCC08420
DCC08430
DCC08440
DCC08450
DCC08460
DCC08470
DCC08480
DCC08490
DCC08500
DCC08510
DCC08520
DCC08530
DCC08540
DCC08550
DCC08560
DCC08570
DCC08580
DCC08590
DCC08600
DCC08610
DCC08620
DCC08630
DCC08640

```

```

C *** FCR GENERATING EXPLODED PLOTS.
C
C CCMGN/CONTRL/ KGEOM, KDATA, KPLOT, KSYMXY, KSYMXYZ, KSYMZY, NOTAT, XLHT,
1KHORZ, KVERT, PHI, THETA, PSI, NEWFR, ISCALE, PLOTSZ, XURGN, YORGN,
2PSCALE, KDISP, DMAG, KODE
C DIMENSION X(4), Y(4), Z(4)
C
C *** TO CALCULATE THE INCENTER OF TRIANGLES
C
C IF(NEND.NE.3) GO TO 20
C CONTINUE
10 A = SQRT((X(2)-X(3))**2+(Y(2)-Y(3))**2+(Z(2)-Z(3))**2)
B = SQRT((X(1)-X(3))**2+(Y(1)-Y(3))**2+(Z(1)-Z(3))**2)
C = SQRT((X(1)-X(2))**2+(Y(1)-Y(2))**2+(Z(1)-Z(2))**2)
AC1 = A/(A+B+C)
AC2 = B/(A+B+C)
AC3 = C/(A+B+C)
XCC = AC1*X(1)+AC2*X(2)+AC3*X(3)
YCC = AC1*Y(1)+AC2*Y(2)+AC3*Y(3)
ZCC = AC1*Z(1)+AC2*Z(2)+AC3*Z(3)
GC TO 190
20 CCNTINUE
C
C *** TO CALCULATE THE CENTROID OF RODS, BARS, AND QUADS
C
XCC = 0.0
YCC = 0.0
ZCC = 0.0
DO 100 I=1, NEND
XCC = XCC+X(I)
YCC = YCC+Y(I)
ZCC = ZCC+Z(I)
CCNTINUE
100 XCC = XCC/FLOAT(NEND)
YCC = YCC/FLOAT(NEND)
ZCC = ZCC/FLOAT(NEND)
CCNTINUE
190
C *** TO REDUCE THE SIZE OF THE ELEMENT
C
DO 200 I=1, NEND
X(I) = X(I)*DMAG
Y(I) = Y(I)*DMAG
Z(I) = Z(I)*DMAG
200 CCNTINUE
C
C *** TO CALCULATE THE CENTROID OF THE REDUCED ELEMENT
C

```

```

DCC08650
DCC08660
DCC08670
DCC08680
DCC08690
DCC08700
DCC08710
DCC08720
DCC08730
DCC08740
DCC08750
DCC08760
DCC08770
DCC08780
DCC08790
DCC08800
DCC08810
DCC08820
DCC08830
DCC08840
DCC08850
DCC08860
DCC08870
DCC08880
DCC08890
DCC08900
DCC08910
DCC08920
DCC08930
DCC08940
DCC08950
DCC08960
DCC08970
DCC08980
DCC08990
DCC09000
DCC09010
DCC09020
DCC09030
DCC09040
DCC09050
DCC09060
DCC09070
DCC09080
DCC09090
DCC09100
DCC09110
DCC09120

```

DCC09130
 DCC09140
 DCC09150
 DCC09160
 DCC09170
 DCC09180
 DCC09190
 DCC09200
 DCC09210
 DCC09220
 DCC09230
 DCC09240
 DCC09250
 DCC09260
 DCC09270
 DCC09280
 DCC09290
 DCC09300
 DCC09310
 DCC09320
 DCC09330
 DCC09340
 DCC09350
 DCC09360
 DCC09370
 DCC09380
 DCC09390
 DCC09400
 DCC09410
 DCC09420
 DCC09430
 DCC09440
 DCC09450
 DCC09460
 DCC09470
 DCC09480
 DCC09490
 DCC09500
 DCC09510
 DCC09520
 DCC09530
 DCC09540
 DCC09550
 DCC09560
 DCC09570
 DCC09580
 DCC09590
 DCC09600

```

XRC = XCC*DMAG
YRC = YCC*DMAG
ZRC = ZCC*DMAG

C *** SHIFT CORNERS OF ORIGINAL AND REDUCED TO MAKE CENTROIDS MATCH
C
C
DO 400 I=1, NEND
  X(I) = X(I) + (XCC - XRC)
  Y(I) = Y(I) + (YCC - YRC)
  Z(I) = Z(I) + (ZCC - ZRC)
CONTINUE
400 RETURN
END
SUBROUTINE GARRON(X1, Y1, X2, Y2, NC, XHEAD, YHEAD)
C *** TC DRAW ARROWS FROM X1, Y1 TO X2, Y2.
DEN = SQRT((X2 - X1)**2 + (Y2 - Y1)**2)
IF(DEN.EQ.0.0) GO TO 5000
C = (X1 - X2)/DEN
S = (Y1 - Y2)/DEN
CALL CALPLT(X1, Y1, 3)
CALL CALPLT(X2, Y2, 2)
IF(NC.LT.1) GO TO 1000
XA = X2 + (C*XHEAD - S*YHEAD)
YA = Y2 + (S*XHEAD + C*YHEAD)
CALL CALPLT(XA, YA, 2)
IF(NC.LT.2) GO TO 1000
XB = X2 + (C*XHEAD - S*(-YHEAD))
YB = Y2 + (S*XHEAD + C*(-YHEAD))
CALL CALPLT(XB, YB, 2)
IF(NC.LT.3) GO TO 1000
CALL CALPLT(X2, Y2, 2)
IF(NC.LT.4) GO TO 1000
XC = X2 + (-S*YHEAD)
YC = Y2 + (C*YHEAD)
CALL CALPLT(XC, YC, 2)
IF(NC.LT.5) GO TO 1000
XD = X2 + (-S*(-YHEAD))
YD = Y2 + (C*(-YHEAD))
CALL CALPLT(XD, YD, 2)
CONTINUE
1000 CALL CALPLT(X2, Y2, 3)
5000 CCNTINUE
RETURN
END
SUBROUTINE NDLET(NUMPT, XPT, YPT, ZPT, UPT, VPT, hPT)
C
  
```



```

C *** FOR ANNOTATING GRID POINT NUMBERS ON PLOTS.
C
CCMMON/CONTRL/ KGEOM, KDATA, KPLOT, KSYMXY, KSYMXYZ, KSYMZY, NOTAT, XLHT,
1KHORZ, KVERT, PHI, THETA, PSI, NEWFR, fSCALE, PLOTSZ, XORG, YORG,
2PSCALE, KDISP, DMAG, KODE
CCMMON/LIMITS/ XXMAX, YYMAX, ZZMAX, XXMIN, YYMIN, ZZMIN, NDMAX, NDMIN,
1NELMAX, NELMIN
CCMMON/XYZLIM/ XYZMAX(3), XYZMIN(3)
CCMMON/ABLK/ A(3,3)
CCMMON/KOUNT/ NNJDE, NNDEST, NUDISP, NVDISP, NWCISP
CCMMON/PDELS/ DELX, DELY
DIMENSION NUMPT(1), XPT(1), YPT(1), ZPT(1), UPT(1), VPT(1), WPT(1)
II = KHCZRZ
JJ = KVERT
XSHIFT = 0.0
YSHIFT = 0.0
ZSHIFT = 0.0
DO 500 I=1, NNODE
IF(NUMPT(I)).LE.0) GO TO 500
IF(XPT(I)).GT.XYZMAX(1)) GO TO 500
IF(YPT(I)).GT.XYZMIN(1)) GO TO 500
IF(ZPT(I)).GT.XYZMAX(2)) GO TO 500
IF(UPT(I)).GT.XYZMIN(2)) GO TO 500
IF(VPT(I)).GT.XYZMAX(3)) GO TO 500
IF(WPT(I)).GT.XYZMIN(3)) GO TO 500
X = (XPT(I))+XSHIFT/PSCALE
Y = (YPT(I))+XSHIFT/PSCALE
Z = (ZPT(I))+XSHIFT/PSCALE
XROT = A(I,I,1)*X+A(I,I,2)*Y+A(I,I,3)*Z
YL = XROT+XLHT/2.0
YL = YROT+XLHT/2.0
XL = XL+DELY
YL = YL+DELY
AL = NUMPT(I)
CALL NUMBER(XL, YL, XLHT, AL, 0.0, -1)
CONTINUE
RETURN
END
SUBROUTINE DATA1(NUMPT, XPT, YPT, ZPT, UPT, VPT, WPT)
RETURN
END
SUBROUTINE DATA5(NUMPT, XPT, YPT, ZPT, UPT, VPT, WPT)
RETURN
END
SUBROUTINE GEOM1(NUMPT, XPT, YPT, ZPT, UPT, VPT, WPT)
RETURN
END

```

500

DCC09610
DCC09620
DCC09630
DCC09640
DCC09650
DCC09660
DCC09670
DCC09680
DCC09690
DCC09700
DCC09710
DCC09720
DCC09730
DCC09740
DCC09750
DCC09760
DCC09770
DCC09780
DCC09790
DCC09800
DCC09810
DCC09820
DCC09830
DCC09840
DCC09850
DCC09860
DCC09870
DCC09880
DCC09890
DCC09900
DCC09910
DCC09920
DCC09930
DCC09940
DCC09950
DCC09960
DCC09970
DCC09980
DCC09990
DCC10000
DCC10010
DCC10020
DCC10030
DCC10040
DCC10050
DCC10060
DCC10070
DCC10080

```

END
SUBROUTINE GEOM2(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)
RETURN
END
SUBROUTINE NFRAME
RETURN
END
SUBROUTINE CCRT2
RETURN
END
C ***** ADAPT FOR NPS SYSTEM
C
C
SUBROUTINE CALCMP
COMMON/PLOT/IBUFF(1024)
CALL PLOTS
RETURN
END
C ***** ADAPT FOR NPS SYSTEM
C
C
SUBROUTINE CALPLT(X,Y,IPEN)
CALL PLOT(X,Y,IPEN)
RETURN
END
C ***** ACAPT FOR NPS SYSTEM
C
C
SUBROUTINE NOTATE(X,Y,HT,BCD,THETA,N)
DIMENSION BCD(1)
CALL SYMBOL(X,Y,HT,BCD,THETA,N)
RETURN
END
SUBROUTINE GEOM9(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT)
C
C
C ***** USER SUPPLIED GEOMETRY INPUT SUBROUTINE.
COMMON/CTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMZX,KSYMZY,NOTAT,XLHT,
1KHORZ,KVERT,P,I,THETA,PSI,NEWFR,I,SCALE,PLOTSZ,XORGN,YORGN,
2PSCALE,KDISP,DMAG,KODE
COMMON/KOUNT/ NNODE,NNDIST,NUDISP,NWDISP
COMMON/GCONT/NUMNP,NPAR(14),NELTY,P,NUMEL
DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)
C
C
C ***** INSERT ROUTINE HERE
C
C
READ(5,100) HED
FORMAT(12A6)
100

```

```

DCC10090
DCC10100
DCC10110
DCC10120
DCC10130
DCC10140
DCC10150
DCC10160
DCC10170
DCC10180
DCC10190
DCC10200
DCC10210
DCC10220
DCC10230
DCC10240
DCC10250
DCC10260
DCC10270
DCC10280
DCC10290
DCC10300
DCC10310
DCC10320
DCC10330
DCC10340
DCC10350
DCC10360
DCC10370
DCC10380
DCC10390
DCC10400
DCC10410
DCC10420
DCC10430
DCC10440
DCC10450
DCC10460
DCC10470
DCC10480
DCC10490
DCC10500
DCC10510
DCC10520
DCC10530
DCC10540
DCC10550
DCC10560

```

```

C *****READ MASTER CONTROL CARD
C
  READ(5,200)NUMNP,NELTYP
  200 FORMAT(2I5)
  NNODE=NUMNP
C *****READ OR GENERATE NODAL POINT DATA
C
  NOLD=0
  10 READ(5,300) N,XPT(N),YPT(N),ZPT(N),KN
  NUMPT(N)=N
  300 FORMAT(I5,30X,3F10.0,I5)
  IF (NOLD.EQ.0) GO TO 50
C *****CHECK IF GENERATION IS REQUIRED
C
  IF (KN.EQ.0) GO TO 50
  NUM=(N-NOLD)/KN
  NUMN=NUM-1
  IF (NUMN.LT.1) GO TO 50
  XNUM=NUM
  DX=(XPT(N)-XPT(NOLD))/XNUM
  DY=(YPT(N)-YPT(NOLD))/XNUM
  DZ=(ZPT(N)-ZPT(NOLD))/XNUM
  K=NOLD
  DC 30 J=1,NUMN
  KK=K
  K=K+KN
  XPT(K)=XPT(KK)+DX
  YPT(K)=YPT(KK)+DY
  ZPT(K)=ZPT(KK)+DZ
  NUMPT(K)=K
  CONTINUE
  30 50 NOLD=N
  IF (N.NE.NUMNP) GO TO 10
  CONTINUE
  NUMEL=0
C *****READ ELEMENT CONTROL CARDS
  DO 900 M=1,NELTYP
  1001 READ(5,1001,END=999) NPAR
  FORMAT(I4I5)
  MTYPE=NPAR(1)
  CALL ELTYPE(MTYPE)
  900 CONTINUE
  959 ENDFILE 10
  RETURN
  END

```

```

D0C10570
D0C10580
D0C10590
D0C10600
D0C10610
D0C10620
D0C10630
D0C10640
D0C10650
D0C10660
D0C10670
D0C10680
D0C10690
D0C10700
D0C10710
D0C10720
D0C10730
D0C10740
D0C10750
D0C10760
D0C10770
D0C10780
D0C10790
D0C10800
D0C10810
D0C10820
D0C10830
D0C10840
D0C10850
D0C10860
D0C10870
D0C10880
D0C10890
D0C10900
D0C10910
D0C10920
D0C10930
D0C10940
D0C10950
D0C10960
D0C10970
D0C10980
D0C10990
D0C11000
D0C11010
D0C11020
D0C11030
D0C11040

```

```

SUBROUTINE ELTYPE(MTYPE)
GO TO (1,2,3,4,5,6,7,8,9,10,11,12), MTYPE
1 CALL TRUSS
2 GO TO 900
3 CALL BEAM
4 GO TO 900
5 CALL PLANE
6 GO TO 900
7 CALL SHELL
8 GO TO 900
9 CALL ERROR
10 GO TO 900
11 CALL ERROR
12 GO TO 900
900 RETURN
END
SUBROUTINE ERROR(MTYPE)
C ***** THIS SUBROUTINE TERMINATES THE PROGRAM DUE ERROR IN INPUT
C
WRITE(6,100) MTYPE
100 FORMAT('ELEMENT TYPE',I4,'CANNOT BE PLOTTED')
CALL PSTOP
RETURN
END
SUBROUTINE TRUSS
C *** THIS SUBROUTINE READS TRUSS(ELTYPE 1) CONNECTIVITY
COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL
NUME=NP(2)
NUMMAT=NP(3)
C ***** READ MATERIAL PROPERTY CARDS (DUMMY)
DO 10 I=1,NUMMAT
1001 READ(5,1001) DUMMY
10 FORMAT(10A8)
CONTINUE
C ***** READ ELEMENT LOAD MUL. (DUMMY1)

```

```

D0C11050
D0C11060
D0C11070
D0C11080
D0C11090
D0C11100
D0C11110
D0C11120
D0C11130
D0C11140
D0C11150
D0C11160
D0C11170
D0C11180
D0C11190
D0C11200
D0C11210
D0C11220
D0C11230
D0C11240
D0C11250
D0C11260
D0C11270
D0C11280
D0C11290
D0C11300
D0C11310
D0C11320
D0C11330
D0C11340
D0C11350
D0C11360
D0C11370
D0C11380
D0C11390
D0C11400
D0C11410
D0C11420
D0C11430
D0C11440
D0C11450
D0C11460
D0C11470
D0C11480
D0C11490
D0C11500
D0C11510
D0C11520

```

DDC11530
 DDC11540
 DDC11550
 DDC11560
 DDC11570
 DDC11580
 DDC11590
 DDC11600
 DDC11610
 DDC11620
 DDC11630
 DDC11640
 DDC11650
 DDC11660
 DDC11670
 DDC11680
 DDC11690
 DDC11700
 DDC11710
 DDC11720
 DDC11730
 DDC11740
 DDC11750
 DDC11760
 DDC11770
 DDC11780
 DDC11790
 DDC11800
 DDC11810
 DDC11820
 DDC11830
 DDC11840
 DDC11850
 DDC11860
 DDC11870
 DDC11880
 DDC11890
 DDC11900
 DDC11910
 DDC11920
 DDC11930
 DDC11940
 DDC11950
 DDC11960
 DDC11970
 DDC11980
 DDC11990
 DDC12000

```

DO 20 I=1,4
  READ(5,1001) DUMMY1
  CONTINUE
  IF(NPAR(14).EQ.0) NPAR(14) = 1
  N = NPAR(14)
  READ ELEMENT CONNECTION INFORMATION OR GENERATE
  100 READ(5,1004) M,II,JJ,MTYP,TEM,KK
  1004 FORMAT(4I5,F10.0,I5)
  IF(KK.EC.0) KK=1
  IF (M.NE.N) GO TO 200
  I=II
  J=JJ
  KKK=KK
  CONTINUE
  200 NUMEL=NUMEL+1
  K=0
  L=0
  WRITE (10) N,I,J,K,L
  IF(N.EQ.NUMEL) RETURN
  N=N+1
  I=I+KKK
  J=J+KKK
  IF(N.GT.M) GO TO 100
  GO TO 120
END
SUBROUTINE PLANE
C ***** THIS SUBROUTINE READS MEMBRANE CARDS
C
  DIMENSION EMUL(4,5),IE(5),IX(4)
  COMMON/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL
  NUMMAT = NPAR(2)
  C ***** READ MATERIAL PROPERTIES
  DC 60 M=1,NUMMAT
  READ(5,1010) MAT,NT
  1010 FORMAT(2I5)
  IF(NT.EQ.0) NT=1
  NTC=2* NT
  DO 50 K=1,NTC
  READ(5,1005) DUMMY
  1005 FORMAT(10A8)
  50 CONTINUE
  60 CONTINUE
C ***** READ ELEMENT LOAD FACTORS
C
  READ(5,1002) ((EMUL(I,J),J=1,5),I=1,4)
  
```

DDC12010
 DDC12020
 DDC12030
 DDC12040
 DDC12050
 DDC12060
 DDC12070
 DDC12080
 DDC12090
 DDC12100
 DDC12110
 DDC12120
 DDC12130
 DDC12140
 DDC12150
 DDC12160
 DDC12170
 DDC12180
 DDC12190
 DDC12200
 DDC12210
 DDC12220
 DDC12230
 DDC12240
 DDC12250
 DDC12260
 DDC12270
 DDC12280
 DDC12290
 DDC12300
 DDC12310
 DDC12320
 DDC12330
 DDC12340
 DDC12350
 DDC12360
 DDC12370
 DDC12380
 DDC12390
 DDC12400
 DDC12410
 DDC12420
 DDC12430
 DDC12440
 DDC12450
 DDC12460
 DDC12470
 DDC12480

```

1002 FORMAT(5F10.0)
C *** READ ELEMENT PROPERTIES
C
IF(NPAR(14).EQ.0) NPAR(14) = 1
N=NPAR(14)-1
READ(5,1003) M,(IE(I),I=1,4),KG
1003 FORMAT(5I5,30X,15)
IF(KG.EQ.0) KG=1
IF(IE(3).EQ.IE(4)) IE(4)=0
140 N=N+1
IF(M.EQ.N) GO TO 145
DO 142 I=1,4
142 IX(I)=IX(I)+KG
GO TO 150
145 DC 148 I=1,4
148 IX(I)=IE(I)
150 CCNTINUE
I = IX(1)
J = IX(2)
K = IX(3)
L = IX(4)
NUMEL=NUMEL+1
WRITE(10,N) I,J,K,L
IF(N.EQ.NUMEL) RETURN
IF(N.EQ.M) GO TO 130
GO TO 140
END
SUBROUTINE BEAM
C *** THIS SUBROUTINE READS BEAM(ELTYP 2) CONNECTIVITY
C
CCMMON/GCUNT/NUMNP,NPAR(14),NELTYP,NUMEL
NUME=NPARG(2)
NUMEPC=NPARG(3)
NUMEEF=NPARG(4) * 2
NUMMAT=NPARG(5)
READ MATERIAL PROPERTY CARDS ( DUMMY)
DO 10 I=1,NUMMAT
1001 READ(5,1001) DUMMY
CCNTINUE
READ ELEMENT PROPERTY CARDS ( DUMMY1)
DO 20 J=1,NUMEPC
2001 READ(5,1001) DUMMY1
CCNTINUE
READ ELEMENT LOAD MULTIPLIERS(DUMMY2)
DO 30 K=1,3
  
```

```

30 ***      READ (5,1001) DUMMY2
C          READ FIXED-END FORCE CARDS(DUMMY3)
          DC 40 L=1,NUMFEF
          READ(5,1001) DUMMY3
          CCNTINUE
          IF(NPAR(14).EQ.0) NPAR(14) = 1
          N=NPARG(14)
          READ ELEMENT CONNECTION INFO
          100 READ(5,1002) M,II,JJ,KK
          1002 FORMAT(3I5,47X,18)
          IF (KK.EQ.0) KK=1
          120 IF (M.NE.N) GO TO 200
              I = II
              J = JJ
              KKK = KK
          200 CCNTINUE
              NUMEL = NUMEL+1
              K = 0
              L = 0
              WRITE (10) N, I, J, K, L
              IF (N.EQ.NUMEL) RETURN
              N = N + 1
              I = I + KKK
              J = J + KKK
              IF (N.GT.M) GO TO 100
              GO TO 120
          END
          SUBROUTINE SHELL
C          *** THIS SUBROUTINE READS ELTYPE 6 CARDS
C          DIMENSION IY(7),IX(4)
          CMMGN/GCONT/NUMNP,NPAR(14),NELTYP,NUMEL
          ISTOP=0
          NUME = NPAR(2)
          NUMMAT = NPAR(3)
          N=2*NUMMAT
          READ MATERIAL PROPERTIES (DUMMY)
          1000 DO 10 N=1,NUMAT
          10 FCFORMAT(10A8)
          C          *** READ ELEMENT LOAD FACTORS (DUMMY1)
          20 READ(5,1000) DUMMY1
          IF(NPAR(14).EQ.0) NPAR(14) = 1

```

```

DDC12490
DDC12500
DDC12510
DDC12520
DDC12530
DDC12540
DDC12550
DDC12560
DDC12570
DDC12580
DDC12590
DDC12600
DDC12610
DDC12620
DDC12630
DDC12640
DDC12650
DDC12660
DDC12670
DDC12680
DDC12690
DDC12700
DDC12710
DDC12720
DDC12730
DDC12740
DDC12750
DDC12760
DDC12770
DDC12780
DDC12790
DDC12800
DDC12810
DDC12820
DDC12830
DDC12840
DDC12850
DDC12860
DDC12870
DDC12880
DDC12890
DDC12900
DDC12910
DDC12920
DDC12930
DDC12940
DDC12950
DDC12960

```

```

100  NA = NPAR(14)-1
1001 FCRMAT(815)
110  NN = NN + 1
50  IF (MM - NN) 440,50,60
45  DO 45 I=1,7
    IX(I) = IY(I)
    INCL = IY(7)
    IF (INCL.EQ.0) INCL=1
    GO TO 70
60  DO 65 I=1,4
65  IX(I) = IX(I) + INCL
70  CONTINUE
    I = IX(1)
    J = IX(2)
    K = IX(3)
    L = IX(4)
    NLMELE = NUMEL + 1
    WRITE(10) NN, I, J, K, L
    GO TO 500
440  WRITE(6,2005) MM
2005 FCRMAT(19)HOCARD FOR ELEMENT(,15,14H) IS IN ERROR.,1X)
500  ISTOP = 1
    IF(NN.LT.MM) GO TO 110
    IF(NN.EQ.NUME) RETURN
    IF(ISTOP.EQ.1) STOP
    GO TO 100
END
SUBROUTINE DATA9(NUMPT,XPT,YPT,ZPT,UPT,VPT,WPT,DISPD,NON)
C *** USER SUPPLIED DISPLACEMENT INPUT SUBROUTINE.
C
COMMON/CDATA/NTIME,NTLC
COMMON/CONTRL/ KGEOM,KDATA,KPLOT,KSYMXY,KSYMZX,KSYMZY,NOTAT,XLHT,
1KHORZ,KVERT,PHI,THETA,PSI,NEWFR,ISCALE,PLOTSZ,XORGN,YORGN,
2PSCALE,KDISP,DMAG,KODE
COMMON/KOUNT/ NNODE,NNDIST,NVDISP,NWDISP
DIMENSION NUMPT(1),XPT(1),YPT(1),ZPT(1),UPT(1),VPT(1),WPT(1)
DIMENSION DISPD(5,3,NON)
IF(NVDISP.EQ.0) GO TO 25
IF(NTIME.NE.0) GO TO 100
READ(5,1000) NTLC,SCALEF
FORMAT(15,F10.0)
IF(SCALEF.EQ.0) SCALEF=1.0
READ(5,2000) N,NLCAS,U,V,W
FCRMAT(214,3E12.5)
DISPD(NLCAS,1,N) = U*SCALEF

```

```

DCC12970
DCC12980
DCC12990
DCC13000
DCC13010
DCC13020
DCC13030
DCC13040
DCC13050
DCC13060
DCC13070
DCC13080
DCC13090
DCC13100
DCC13110
DCC13120
DCC13130
DCC13140
DCC13150
DCC13160
DCC13170
DCC13180
DCC13190
DCC13200
DCC13210
DCC13220
DCC13230
DCC13240
DCC13250
DCC13260
DCC13270
DCC13280
DCC13290
DCC13300
DCC13310
DCC13320
DCC13330
DCC13340
DCC13350
DCC13360
DCC13370
DCC13380
DCC13390
DCC13400
DCC13410
DCC13420
DCC13430

```



```

DISPD(NLCAS,2,N) = V*SCALEF
DISPD(NLCAS,3,N) = W*SCALEF
IF( (NLCAS.EQ.NTLC).AND.(N.EQ. 1 ) ) GO TO 100
GO TO 10
NTIME = NTIME + 1
200 CC 20 I=1,NNODE
    VPT(I) = DISPD(NTIME,1,I)
    WPT(I) = DISPD(NTIME,2,I)
    20 CONTINUE
    RETURN
END

```

```

DOCI3440
DOCI3450
DOCI3460
DOCI3470
DOCI3480
DOCI3490
DOCI3500
DOCI3510
DOCI3520
DOCI3530
DOCI3540
DOCI3550

```

LIST OF FIGURES

1. SAP IV Deck Set-up.....	14
2. PSAP Input Card Sequence.....	24
3. NPS Calcomp Plotter Orientation.....	29
4. Sample SUBROUTINE PSAP Execution Deck With IDCASE = 1.....	32
5. Coordinate System and Rotations for an Oblique Orthographic Proj. Shown in X-Z Viewing Plane.....	35
6. Undeformed Truss Model.....	49
7. Deformed Truss Model(Node4 Displaced).....	50
8. Displacements(Node4) for Truss Model Plotted as a Vector.....	51
9. Sample Computer Printout from PSAP of Truss Model...	52
10. Wing Model Axis Orientation.....	54
11. Orthographic Projection of Wing Model -1.....	55
12. Orthographic Projection of Wing Model -2.....	56
13. Wing Model Section - Orientation - 1.....	57
14. Wing Model Section - Orientation - 2.....	58

LIST OF REFERENCES

1. Earthquake Engineering Research Center Report No. 73-11, SAP IV A Structural Analysis Program for Static and Dynamic Response of Linear Systems, by K. Bathe, E. L. Wilson, and F. E. Peterson, June 1973.
2. National Aeronautics and Space Administration TN D-7797, Digital Computer Programs for Generating Oblique Orthographic Projection and Contour Plots, by Gary L. Giles, January 1975.
3. Naval Postgraduate School Technical Note No. 0211-03, Plotting Package for NPS IBM 360/67, by Patricia C. Johnson, January 1974.
4. Naval Postgraduate School Technical Note No. 0211-05, User Libraries and Source Code Editing Under OS, by Sharon D. Raney, January 1976.

INITIAL DISTRIBUTION LIST

	No. Copies
1. Defense Documentation Center Cameron Station Alexandria, Virginia 22314	2
2. Library, Code 0212 Naval Postgraduate School Monterey, California 93940	2
3. Department Chairman, code 67 Department of Aeronautics Naval Postgraduate School Monterey, California 93940	2
4. Assoc Professor R. E. Ball, Code 67 Bp Department of Aeronautics Naval Postgraduate School Monterey, California 93940	4
5. Professor Gilles Cantin, Code 59 Ci Department of Mechanical Engineering Naval Postgraduate School Monterey, California 93940	2
6. Professor D. A. Collins, Code 67 Co Department of Aeronautics Naval Postgraduate School Monterey, California 93940	1

7. Mr. Richard Citerley 2
Anamet Laboratories
P.O. Box 831
San Carlos, California 94070
8. LT Dennis M. Losh, USN 1
2583 E. 38th ST.
Lorain, Ohio 44055