

# Documentation

OpenScape Voice

OpenStage15

Operating Manual






Communication for the open minded

Siemens Enterprise Communications  
[www.siemens.com/open](http://www.siemens.com/open)

**SIEMENS**

### Important information

	<p>For safety reasons, the telephone should only be supplied with power:</p> <ul style="list-style-type: none"><li>• using the original power supply unit. Part number: L30250-F600-C14x (x: 1=EU, 2=US, 3=UK) or</li><li>• in a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.</li></ul>
	<p>Never open the telephone or a key module. Should you encounter any problems, contact the responsible service personnel.</p>
	<p>Use only original Siemens accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.</p>

### Trademarks



The device conforms to the EU directive 1999/5/EC as attested by the CE marking.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.

The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.

## Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments such as bathrooms.

## Product support on the Internet

Information and support for our products can be found on the Internet:  
<http://siemens-enterprise.com/>.

To view and print PDF documents you require the free software Acrobat Reader:  
<http://www.adobe.com/>

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at:  
<http://wiki.siemens-enterprise.com/>.

# Contents

## Important information .....2

Trademarks .....	2
Location of the telephone .....	3
Product support on the Internet .....	3

## General information.....10

About this manual .....	10
Symbols used in the manual .....	10
Service .....	11
Intended use .....	11
Telephone type .....	11
Speakerphone quality and display legibility .....	11
Single-line telephone/multi-line telephone.....	12

## Getting to know your OpenStage phone .....13

The user interface of your OpenStage 15 .....	13
Ports on the underside of the phone.....	14
Using network ports more efficiently .....	15
OpenStage Key Module 15 .....	16
Keys.....	17
Audio keys.....	17
Mailbox key and menu key .....	17
Navigation keys .....	17
Programmable function keys .....	18
Trunk keys (on multi-line phones only).....	19
Keypad .....	21
Display.....	23
Idle mode.....	23
Context-dependent displays .....	24
Records .....	26
Messages .....	26
Calls.....	26
Program/Service menu .....	27
User settings .....	27
Administration .....	29
Control and monitoring function .....	29

<b>Basic functions</b> .....	<b>30</b>
Secure voice transmission .....	30
Answering a call .....	30
Answering a call via the handset .....	31
Answering a call via the loudspeaker (speakerphone mode) .....	31
Directed pickup .....	32
Picking up call .....	32
Picking up the held call: .....	33
Switching from handset to speakerphone mode .....	34
Switching from speakerphone mode to the handset .....	35
Open listening .....	35
Activating/deactivating the microphone .....	36
Ending a call .....	36
Group call .....	37
Making calls .....	39
Off-hook dialing .....	39
On-hook dialing .....	40
Immediate dialing .....	41
Dialing using the hot or warm line function .....	42
Redial .....	43
Consulting a second party .....	44
Switching to the held party (alternating) .....	44
Connecting parties .....	45
Call forwarding .....	46
Programming call forwarding .....	47
Activating/deactivating call forwarding .....	51
Call forwarding chain .....	52
Callback .....	53
Requesting callback .....	53
Responding to a callback .....	53
Permitting callback on busy/no reply .....	54
Calling back missed calls .....	55
<b>Programmable keys</b> .....	<b>56</b>
List of available functions .....	56
Programming a key .....	57
Programming enhanced functions .....	58
Repertory dial .....	58
Feature toggle .....	59
Forwarding .....	59
Immediate ring .....	60
Activate/deactivate call waiting .....	60
Using programmed keys .....	60
Example 1: Accessing a stored contact or phone number .....	60
Example 2: Deactivate call waiting .....	60
Resetting programmable keys .....	61

<b>Enhanced phone functions . . . . .</b>	<b>62</b>
Incoming calls . . . . .	62
Deflecting a call . . . . .	62
Rejecting a call . . . . .	63
Placing a call on hold . . . . .	64
Call waiting (second call) . . . . .	67
Transferring a call . . . . .	72
CTI calls . . . . .	75
Making calls . . . . .	77
Dialing with the DDS key . . . . .	77
Dialing a phone number from a list . . . . .	77
Using autodial delay . . . . .	78
Conference . . . . .	81
Local conference . . . . .	81
System-based conference . . . . .	84
Call lists . . . . .	86
Editing entries . . . . .	86
Delete all entries . . . . .	86
<b>Making calls with multiple lines . . . . .</b>	<b>87</b>
Incoming calls . . . . .	87
Accepting calls for the primary line . . . . .	87
Accepting calls for secondary lines . . . . .	87
Making calls . . . . .	88
Manual trunk seizure . . . . .	88
Automatic trunk seizure . . . . .	88
Dialing the last dialed number . . . . .	89
Forwarding calls on primary line . . . . .	89
During calls . . . . .	90
Making and receiving calls on a single line . . . . .	90
Making and receiving calls with multiple lines . . . . .	90
Putting a line on hold . . . . .	91
Lines with hot or warm line function . . . . .	92
Busy override . . . . .	93
Direct station selection keys . . . . .	94
Calling a station directly . . . . .	94
Call pickup . . . . .	95
Deflecting a call to a DSS station . . . . .	96
LED display on DSS keys . . . . .	96
Making calls in an executive-secretary team . . . . .	97
Sample scenarios . . . . .	97
Accepting a call . . . . .	98
Connecting a call . . . . .	99
DSS keys can be used . . . . .	100

Settings for MultiLine (keyset) . . . . .	101
Setting the time for a delayed ringer . . . . .	101
Line preview . . . . .	102
Rollover for a line . . . . .	103

## **Privacy/security . . . . . 104**

Deactivating the ringer . . . . .	104
Do not disturb . . . . .	105
Enabling do not disturb via a key . . . . .	105
Enabling do not disturb via the idle menu . . . . .	105
Allowing "Do not disturb" . . . . .	106
Security . . . . .	107
User password . . . . .	107
Locking the phone . . . . .	109

## **Mobility . . . . . 111**

Mobility scenarios . . . . .	111
Logging on and off at the same phone . . . . .	111
Logging on and off at different phones . . . . .	111
Logging on and off at the same phone . . . . .	112
Logging on to the phone . . . . .	112
Logging off from the phone . . . . .	113
Logging on at different telephones . . . . .	114
Logging on with forced logoff at a remote phone . . . . .	114
Logging on with forced, delayed logoff at a remote - phone . . . . .	115

## **OpenScape Voice functions . . . . . 116**

Feature toggle key . . . . .	116
Making anonymous calls . . . . .	117
Deactivating . . . . .	117
Activating . . . . .	118
Temporarily activating anonymous calling for the next call . . . . .	118
Temporarily deactivating anonymous calling for the next call . . . . .	119
Creating a list for selective calls . . . . .	120
For call acceptance . . . . .	120
For call rejection . . . . .	121
Anonymous calls . . . . .	122
Rejecting . . . . .	122
Accepting . . . . .	122
Using abbreviated dialing . . . . .	123
Call tracing . . . . .	123

Hunt group functions . . . . .	124
Making a line busy . . . . .	124
Marking the last line in the hunt group chain . . . . .	125
Reachability . . . . .	126
Serial call . . . . .	126
Parallel call . . . . .	127
Parking a call . . . . .	129
Park a call . . . . .	129
Unparking . . . . .	129
Silent Monitoring . . . . .	130
Active silent monitoring . . . . .	130
Muted silent monitoring . . . . .	131
Code table for OpenScope Voice functions . . . . .	132

## Individual phone configuration . . . . .133

Display . . . . .	133
Setting contrast . . . . .	133
Date and Time . . . . .	134
Setting the time . . . . .	134
Setting the date . . . . .	134
Setting daylight saving time . . . . .	135
Automatic daylight saving time . . . . .	136
Time display format . . . . .	137
Date display format . . . . .	138
Audio . . . . .	139
Volumes . . . . .	139
Settings . . . . .	140
Tone and indication with an unsecured voice connection . . . . .	143
Setting the language and country . . . . .	144
Selecting a language . . . . .	144
Locality . . . . .	146
Network information . . . . .	147
Resetting user data . . . . .	148
Initiating the reset . . . . .	148

## Web interface . . . . .149

General . . . . .	149
Calling up the Web interface . . . . .	149
Administrator Pages . . . . .	149
User pages . . . . .	150
User menu . . . . .	151



<b>Fixing problems</b> .....	<b>153</b>
Caring for your telephone .....	153
Troubleshooting .....	153
Contact partner in the case of problems .....	153
Labeling keys .....	154

<b>Index</b> .....	<b>155</b>
--------------------	------------

## General information

### About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your Siemens sales partner for information on how to upgrade.

This user guide is intended to help you familiarize yourself with OpenStage and all of its functions. It contains important information on the safe and proper operation of your OpenStage phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

These instructions should be read and followed by every person installing, operating or programming an OpenStage phone.



For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

---

This user guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating your OpenStage phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

### Symbols used in the manual

Operations and settings that can be made both at the phone and over the Web interface are indicated by an icon and page reference.



is a reference to an operation or setting performed directly on the phone



is a reference to an operation or setting performed via the Web-interface

## Service



The Siemens service department can only help you if you experience problems or defects with the phone.

Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.

For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

## Intended use

The OpenStage phone is a desktop unit designed for voice transmission and for connection to the LAN. It can also be used as a workstation device. Any other use is regarded as unauthorized.

## Telephone type

The phone name data can be found on the name plate on the base of the device; The exact product name and serial number are specified here. Specific details concerning your communications platform can be obtained from your service technician.

Please have this information ready when you contact our service department regarding faults or problems with the product.

## Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear). The optimum distance is approx. 50 cm.
- Proceed as follows to optimize display legibility:
  - Turn the phone to tilt the display to ensure you have a frontal view of the display while eliminating light reflexes
  - Adjust the contrast as required → page 133

## Single-line telephone/multi-line telephone

Your OpenStage 15 is a "multi-line telephone". This means that multiple lines can be configured, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls.

The programmable keys function as line keys on multi-line phones  
→ page 19.


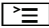
A number of specific features must be considered when using a multi-line phone to make and receive calls → page 90.

## Getting to know your OpenStage phone


The following sections describe the most frequently used operating elements and the displays on your OpenStage phone.

### The user interface of your OpenStage 15



1	You can make and receive calls as normal using the <b>handset</b> .
2	The <b>display</b> provides intuitive support for telephone operation (two lines with up to 33 characters each).
3	<b>Audio keys</b> are also available, allowing you to optimally configure the audio features on your telephone → page 17.
4	 <b>mailbox key</b> and  <b>menu key</b> .
5	The <b>keypad</b> is provided to input phone numbers/codes.
6	The <b>navigation keys</b> is used to operate the phone → page 17.
7	The <b>programmable sensor keys</b> can be programmed with functions → page 56.

## Ports on the underside of the phone

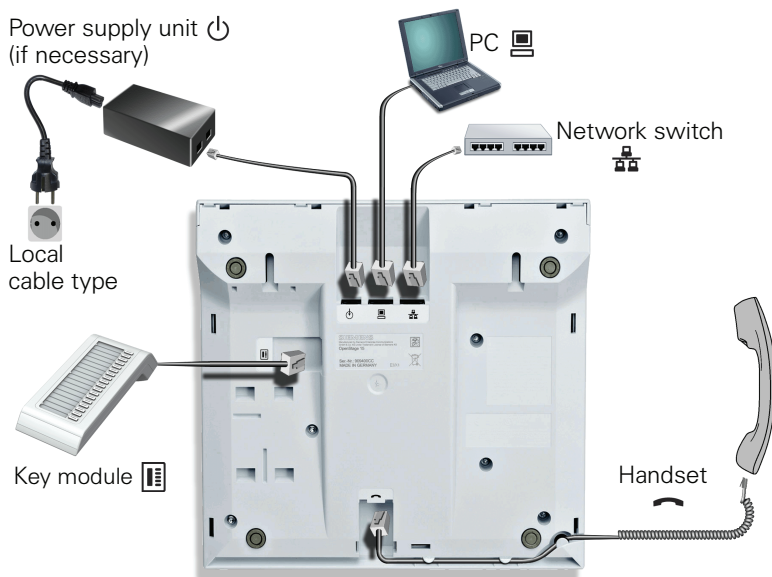


### Properties of your OpenStage 15

Display type	LCD display, 24 x 2 characters
Full-duplex speakerphone function	✓
10/100 Mbps Ethernet switch → page 15	✓
Wall mounting	✓

## Using network ports more efficiently

OpenStage 15 has a built-in 10/100 Mbps Ethernet switch. This means that you can connect a PC to the LAN directly via the phone. The telephone-PC connection option must first be activated on the telephone by service personnel.

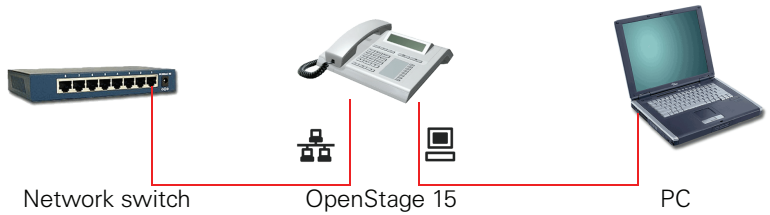

Using this connection option saves one network port for each switch used and requires fewer or shorter network cables when arranged correctly.

## OpenStage Key Module 15

The OpenStage Key Module 15 is a key module attached to the side of the phone that provides an additional 18 illuminated, programmable sensor keys.

Like keys on the phone, these keys can be programmed and used according to your needs → page 18.



You can only attach one OpenStage Key Module 15 to your OpenStage 15.



## Keys

### Audio keys



Key	Function when key is pressed
	Set the volume lower → page 139.
	Turn loudspeaker on/off (with red LED key) → page 35.
	Set the volume higher → page 139.

### Mailbox key and menu key



Key	Function when key is pressed
	Open the menu for voicemail or missed calls (with red LED key).
	Open the phone's main menu (with red LED key).

### Navigation keys


These are used to manage most of your phone's functions and display.



Key	Function when key is pressed
	In lists and menus: Scroll up. Set lighter contrast → page 133
	<ul style="list-style-type: none"> <li>• Confirm input</li> <li>• Perform action</li> </ul>
	In idle mode: Open the idle menu → page 23 In lists and menus: Scroll down. Set lighter contrast → page 133

## Programmable function keys

Your OpenStage 15 has eight illuminated keys to which you can assign functions or numbers.

 Increase the number of programmable function keys by connecting a OpenStage Key Module 15 → page 16.



Depending on how they are programmed, you can use the keys as:

- Function keys → page 56
- Selected dialling → page 58

Each key can be programmed with one function.




Press the key briefly to activate the programmed function or dial the stored number.

Hold the key to open the key programming menu → page 57.

Your OpenStage is delivered with label strips. Write functions or names in the white fields on the label strips.

The status of a function is shown by the LED on the corresponding function key.

### Meaning of LED displays on function keys

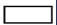LED	Meaning of function key
 Off	The function is deactivated.
 Flashing <sup>1</sup>	Indicates the function status.
 On	The function is activated.

[1] In this manual, flashing keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

 The programmable keys on multi-line phones function as trunk keys → page 19.

## Trunk keys (on multi-line phones only)

The programmable keys on multi-line phones function as line keys. Each key that is assigned the function "line" is handled as a line. This means up to seven lines can be configured.

A distinction is drawn here between primary, secondary and phantom lines. Each of these line types can be used on a private or shared basis → page 19.

### Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signaled on this line.



To avoid conflict between individual multi-line phones, the functions "Do not disturb" and "Call forwarding" can only be used for the primary line.

### Secondary line

The secondary line on your phone is used as a primary line by another subscriber of the line trunk group. Your primary line, which is configured on another telephone in the line trunk group, simultaneously functions as the secondary line on that telephone.

### Phantom line




Phantom lines are not used as primary lines by any telephones in the line trunk group. Phantom lines are established when the number of lines provided by a communications system exceeds the number of available telephones.

### Line utilization


- **Private line:** A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.
- **Shared line:** A line that is configured on multiple telephones. The line status is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones (→ page 20).
- **Direct call line:** A line with a direct connection to another telephone.

You can see the status of the line from the LED:


### LED display

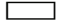LED		Explanation
	<b>Not lit</b>	The phone is in idle mode.
	<b>Flashing</b>	<ul style="list-style-type: none"> <li>• Incoming call on the line (→ page 87)</li> <li>• "Hold reminder" is activated (→ page 65)</li> </ul>
	<b>Flickering</b>	<ul style="list-style-type: none"> <li>• Outgoing call on the line</li> <li>• The incoming call was prioritized and selected in accordance with the "Automatic line selection for incoming calls" option</li> </ul>
	<b>Fast blinking</b>	The line is on "Hold".
	<b>Blinking</b>	Call forwarding is activated.
	<b>Illuminated</b>	The line is busy.

## Keypad

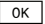You can only use the digits 1 to 9 and 0 as well as the \* and # characters when dialing a number. To delete digits, select "Back" with the navigation keys and confirm with .

In situations where text input is possible, for example, when entering the user password, you can also use the dial keys to enter text in addition to the digits and special characters mentioned. To do this, press the numerical keys repeatedly.

Example: To enter the letter "h", press the number  key on the keypad twice. When entering text, all characters available for the key pressed and the character selected are briefly displayed.

### Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x
	] 1					
	a	b	c	2	ä	
	d	e	f	3		
	g	h	i	4		
	j	k	l	5		
	m	n	o	6	ö	
	p	q	r	s	7	ß
	t	u	v	8	ü	
	w	x	y	z	9	
	0					
	1	2				

[1] Next letter in upper case (active for maximum one second)

[2] Switch to digit input

	.	,	?	!	'	"	-	(	)	@	/	:	_							
---	---	---	---	---	---	---	---	---	---	---	---	---	---	--	--	--	--	--	--	--

### Multi-function keys

Key	Function during text input	Function when held down
<b>*</b>	Write special characters.	Deactivate the ring tone.
<b>#</b>	Switch between upper and lower case.	Activate the telephone lock.

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).

### Text editor

Additional options are available in the text editor. This is used when programming a forwarding destination, for example. In this way, you can, for example, move the cursor freely and copy or insert text.

You can select further editor functions via the navigation keys and confirm each one using **OK**:

- **OK**: Applies changes and closes the editor
- **Delete**: Deletes characters from right to left
- **Cancel**: Discards changes and exits the editor
- **Mode** (here **#** can also be used to switch):
  - **123**: Digits only
  - **ABC**: Upper-case letters only
  - **Abc**: First letter in upper case, subsequent letters in lower case
  - **abc**: Lower case letters only
- **Move cursor left**: Moves the cursor to the left
- **Move cursor right**: Moves the cursor to the right
- **Copy**: Copies the entire content to the clipboard
- **Paste**: Inserts the entire content from the clipboard to the cursor position


## Display

Your OpenStage 15 comes with a black-and-white LCD display. Adjust the contrast to suit your needs (→ page 133).

### Idle mode

If there are no calls taking place or settings being made, your OpenStage 15 is in idle mode.

Example:

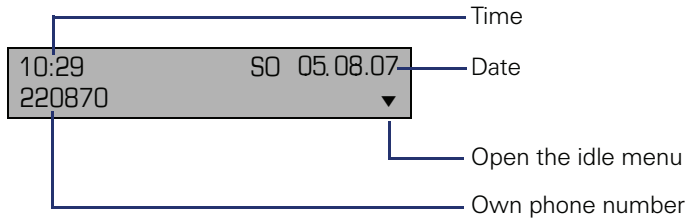

### Idle menu

In idle mode press navigation keys or → page 17, then the idle menu opens. You can call up various functions here. Entries may vary.

The idle menu may contain the following entries:

- Redial?
- Ringer off?
- Do not disturb on?
- Mobile logon?
- Cancel callbacks?
- Directed pickup
- Back?

### Icons in the idle display

In the first and second line, the time, weekday, and date are displayed in addition to icons for different situations and switches:

Icon	Explanation
	The ring tone is deactivated.
	The phone lock is activated.
	The "Do not disturb" function is activated.
	A mobile user is logged on to the telephone.


## Context-dependent displays


Depending on the situation at hand, the display on your OpenStage phone displays different content, to which you can respond intuitively.

### Information on actual events



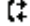
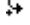
The following icons appear centered on the display when your phone is idle and signal current properties or events.

Example: You missed two calls in your absence.






You have two new voice messages that you can open by pressing  → page 26.

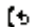Icons for events

Icon	Explanation
	Callback requests are active.
	You received new voice messages.
	New entries have been added to the call lists.
	Local call forwarding is active.

### Context menus


If an arrow appears beside an entry in the second line, a context menu whose options you can select using navigation keys  or  (→ page 17) The range of functions available is situation-specific.

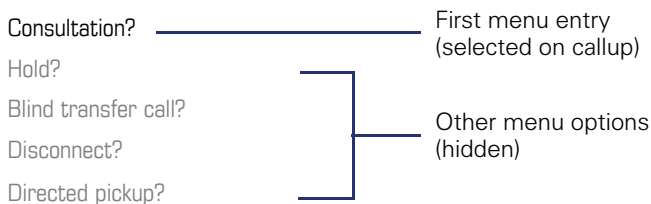



## Idle display context menu


You receive the following functions (if activated) by pressing navigation keys  or . The current function is displayed in the second display line. The other functions are hidden and can be selected using navigation keys  or .

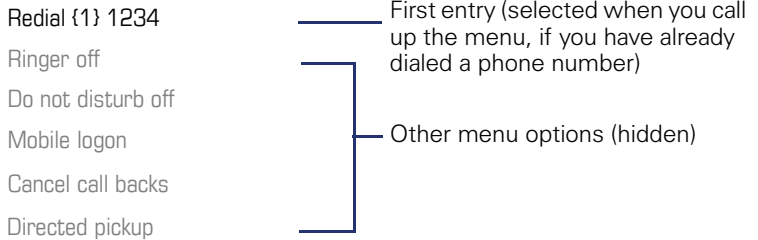

## Functions during a call

In many operating situations you are offered appropriate functions or notes in the second line of the display. Other available functions remain hidden and can be selected using navigation keys  or .

Example: You set up a consultation call. The second line displays the first of three dependant functions. Select the appropriate function and confirm this with .

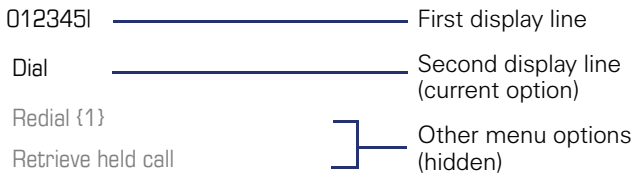


The menu with the functions closes automatically after you have executed an action.

To delete info-only messages, press navigation key .

### Records

Entries in the call list and messages in your mailbox system (if configured) are known as records.

The LED on the  → page 17 key lights up to signal new missed calls.

Press the  key and use the navigation keys to select the required sub-menu.

- **Messages**
- **Calls**

You can use the navigation keys to navigate through the menus as described on → page 17.

### Messages

If configured (contact the relevant service personnel), this provides you with access to your mailbox system e.g. HiPath Xpressions.

If your system is appropriately configured, activating this function calls the mailbox. Follow the voice mailbox instructions.

### Calls

This list appears as soon as you receive **new** missed calls if you select the option **Calls** in the Records menu. You can then scroll up or down to reach the **Calls** menu. The following calls or call attempts are logged as call lists:

- Missed: Missed calls
- Dialed: Dialed calls (with or without connection)
- Received: Answered calls
- Forwarded: Forwarded calls

The number of missed calls and unchecked calls is shown on the idle display.

#### Call lists


Each call list may contain up to 30 entries. Once this limit is reached, the oldest entry in the log is deleted. Multiple calls from the same number are only listed once.

The following call details are stored:

- Phone number/name depending on available data.
- Number of call attempts.
- The date and time of the last call attempt from each user listed.

Entries can only be saved if the caller ID is displayed as a name, number or both. If the caller ID is not transferred, the call is saved as "Unknown".


In each call list, you can use **Options** to delete the entire content of the relevant call list → page 86.

Once you have selected an entry, the following functions are available for selection using the  key:

- Dial → page 86
- Details → page 86
  - Call attempts with date and time (up to ten can be saved)
- Delete → page 86

## Program/Service menu

You can make local settings here.

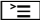Press the  key and confirm the **User** menu. If configured, enter and confirm your personal user password.

You can use the navigation keys to navigate through the menus as described on → page 17. Once the admin password has been entered, the **Admin** menu is available to the relevant service personnel.


## User settings

In the **User** menu, settings options are provided that allow you to adapt the telephone to your individual requirements.

Select a menu using the navigation keys:

- "Date and time" → page 134
- "Audio" → page 139
- "Configuration" e.g. → page 106 or → page 62
- "Phone" → page 133
- "Locality" → page 139
- "Security" → page 107 or → page 109
- "Network information" → page 147
- "Reset"

If you are in one of these menus or submenus, depending on the situation, you have the following options to leave the menus:

- **Save & exit** (If you have made a setting and want to keep it)
- **Exit (no save)** (If you have made a setting which you do not want to use after all or if you do not want set any of the options)
- **Back** (If you want to leave the main menu or submenu)
- **Cancel** (If you do not want to perform any of the actions offered on the submenu)
- Press and hold the  key to access the option to leave the menu.

### Network information



Information about the IP address or name which was assigned to the phone in the network and therefore the HTML address of the web interface. View information on the phone → page 147

---



Contact your service personnel or refer to the OpenStage Administration Manual for more on the network information values listed here.

---



### Reset phone

Personal settings made via the telephone menu or the web interface can be reset to factory settings. → page 148

## Administration

You can access the administration area via the "Admin" function and by entering the administration password.

Refer to the administration manual supplied with your phone for more detailed information on this topic.

## Control and monitoring function


A control or monitoring function can be activated on your phone for service purposes by remote maintenance.

### Control function

Service personnel have the option to activate and deactivate features of the phone via remote maintenance. During maintenance the handset, microphone, loudspeaker and headset are deactivated. You are additionally informed on the display that the control function is active.

### Monitoring function

In order to detect malfunctioning of a phone for example, the service personnel install a monitoring function. You can use your phone as normal during monitoring. However you will first be informed about the operation with a message on the display and prompted to allow monitoring.

If service personnel have activated a function on your phone, which continuously transmits operating data to a server, you will see the flashing icon  in the upper display line.

### Step by step

## Basic functions

---



Please read carefully the introductory chapter "Getting to know your OpenStage phone" → page 13 before performing any of the steps described here on your phone.

---

## Secure voice transmission

**Prerequisite:** The secure voice communication option must be activated by your service personnel.

If you call a party or receive a call from a party over a secure connection, a padlock icon appears on the display.<sup>1</sup> appears on the other party's line. You can opt to have voice connections that are no longer secure indicated by a brief alerting tone and the message "Unencrypted call" appears on the second line for two seconds (see → page 143).

## Answering a call


Your OpenStage phone rings with the tone signal set when an incoming call is received. The call is also visually signaled on the call display.

If transmitted, calling party information (name, phone number) appears on the display.

---



If you have set a pattern melody → page 141 on your phone, it is possible that service personnel have preset a different pattern melody or pattern sequence or deactivated the ringtone, depending on the call type (e.g. an external or internal call).

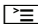An incoming call will interrupt any ongoing telephone setting operations. When the call ends, you can press the  key to return to the point in the menu structure where you were interrupted.

---

1. Closed for secure or open for nonsecure voice communication

## Step by step

**Answering a call via the handset**

The phone is ringing. The caller is displayed.



Lift the handset.

if nec.  or

Set the call volume.

**Answering a call via the loudspeaker (speakerphone mode)**

The phone is ringing. The caller is displayed.

Accept?

Confirm the option shown. The  key lights up.

or



Press the key shown. The key lights up. The speakerphone function is activated.

if nec.  or

Set the call volume.

**Suggestions for using speakerphone mode:**

- Tell the other party that speakerphone mode is active.
- Adjust the call volume while speakerphone mode is active.
- The ideal distance between the user and the phone in speakerphone mode is about 50 cm.

## Step by step

### Directed pickup

You can pick up a call signaled at an absent coworker's phone. If a colleague has placed a call on hold on their multi-line phone you can also pick up this call.

### Picking up call

**Prerequisite:** You know the coworker's internal phone number and the function is configured for you in OpenScape Voice.

A coworker's phone rings.

Directed pickup? ▾

Select and confirm the option shown in the idle phone's context menu.

or



Lift the handset.

or



Press the key shown.

Directed pickup? ▾

Select and confirm the option shown.




Enter and confirm the relevant phone's internal number. You are connected to the calling party either via the handset or in speakerphone mode.



## Step by step

## Picking up the held call:

**Prerequisite:** Your colleague has placed a call on hold on their multi-line phone → page 91. You know the co-worker's internal phone number and the function is configured for you in OpenScape Voice.

Directed pickup? 

Select and confirm the option shown in the idle phone's context menu.

or




Lift the handset.

or



Press the key shown.

Directed pickup? 

Select and confirm the option shown.



Enter and confirm the relevant phone's internal number. You are connected to your colleague's held call either via the handset or in speakerphone mode.

## Step by step

### Switching from handset to speaker-phone mode



Make note of the two different processes and activate, if necessary, your preferred setting  
→ page 142.

**Prerequisite:** You are conducting a call via the handset and the microphone and loudspeaker functions have been activated by service personnel.

#### Standard mode



and



Hold down the key and replace the handset. Then release the key and proceed with your call.

#### US mode

If the country setting is set to US, you do not have to hold down the loudspeaker key when replacing the handset to switch to speakerphone mode.



Press the key shown.



Replace the handset. Proceed with your call.



A secure voice communication is indicated by a closed padlock icon on the graphic display; a non-secure voice communication is indicated by an open padlock icon on the graphic display (see also → page 30)

## Step by step

## Switching from speakerphone mode to the handset

**Prerequisite:** You are conducting a call in speakerphone mode.



Lift the handset. The  key goes out.

## Open listening

You can let other people in the room join in on the call. Let the other party know that you have turned on the loudspeaker.

**Prerequisite:** You are conducting a call via the handset.

### Activating



Press the key shown.

### Deactivating



Press the lit key.

### Switch to speakerphone mode.



and



Hold down the key and replace the handset. Then release the key and proceed with your call.


## Step by step

### Activating/deactivating the microphone

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone.

**Prerequisite:** You are conducting a call. The **"Mute"** key is configured.

#### Deactivating the microphone

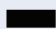 Press the **"Mute"** key.

#### Activating the microphone


 Press the illuminated **"Mute"** key.

### Ending a call

Disconnect? ▲

Select and confirm the option shown.

**or** If you are conducting a call via the handset:

 Replace the handset.

**or** In speakerphone mode:

 Press the lit key.

## Step by step

## Group call

Your service personnel can incorporate multiple telephones in a call pickup group. If your telephone belongs to a pickup group, you can also accept calls intended for other members of the group.

A group call is displayed on the phone. Service personnel may have made the following settings for signaling:

Telephone status			Ring on group call = Yes	Ring on group call = No
Ringer on	Silent		Ringer Loudspeaker	Beep Loudspeaker
	in Connection	Handset	Ringer Loudspeaker	Beep Handset
		Handset Open listening	Beep Handset and loudspeaker	Beep Handset and loud- speaker
		Open listening	Beep Loudspeaker	Beep Loudspeaker
		Speaker- phone mode	Beep Loudspeaker	Beep Loudspeaker
Ringer off	Silent		Nothing	Nothing
	in Connection	Handset	Nothing	Beep Handset
		Handset Open listening	Beep Handset and loudspeaker	Beep Handset and loud- speaker
		Open listening	Beep Loudspeaker	Beep Loudspeaker
		Speaker- phone mode	Beep Loudspeaker	Beep Loudspeaker

The volume settings can be found from → page 139.

## Step by step

Further service personnel settings for group calls:

- The group call can be picked up both by lifting the handset and via the "Pickup call" menu option.
- The group call be picked up via the "Pickup call" menu option but **not** by just lifting the handset.
- A key is programmed for call pickup.

A group call is waiting is displayed with

**Pickup:** *Caller*

**for:** *Station*

### Picking up a group call

The pop-up menu opens:

Pickup call? ▾

Confirm the option shown.

or



Lift the handset (only if the appropriate function is set by your service personnel)

or



Press the key programmed with the "Call pickup" function (if configured) Speakerphone mode is activated.

Ignore? ⚡

### Ignoring a group call

Select and confirm the option shown. The phone stops signaling the group call.

## Step by step

## Making calls



If you selected the option "Busy When Dialing" → page 80, you will not be interrupted by an incoming call. In this case, the caller hears the busy signal.

## Off-hook dialing



Lift the handset.



Enter the station number. If nec. Correct input using the navigation keys → page 17.

Confirm or wait until the dial delay expires (see → page 78).

or

Confirm the option shown. ## represents the last number dialed.

The connection is set up.



If you are using a dial plan and **Immediate dialing** is set (see → page 41, dialing is automatically performed as soon as the character string entered matches an entry in the dial plan.

## Step by step

### On-hook dialing

The connection is set up with on-hook dialing via the loudspeaker (speakerphone mode).



Press the key shown.



Enter the station number. If nec. Correct input using the navigation keys → page 17.



Press or wait until the dial delay expires (see → page 78).

or

Redial {1} ##? ▾

Confirm the option shown. ## represents the last number dialed.

### First enter the number

First enter the number. The loudspeaker key illuminates when you enter the first digit.



Enter the station number. If nec. Correct input using the navigation keys → page 17.

Dial

Confirm or wait until the dial delay expires (see → page 78).

The connection is set up.



If you are using a dial plan and is set (**Immediate dialing** see→ page 41, dialing is automatically performed as soon as the character string entered matches an entry in the dial plan.



## Step by step

## Immediate dialing

Immediate dialing should only be activated if service personnel has configured and approved a dial plan.

The default setting Immediate dialing is deactivated. For this reason after entering the number you must either confirm the "Dial" option or wait until the dial delay expires to set up the connection. If **Immediate dialing** is configured, your call is automatically dialed as soon as the string entered matches an entry in the dial plan.

### Activating or deactivating immediate dialing



You can also configure this setting via the Web interface → page 149.



Press the key shown.

Select and confirm the option shown.

if nec.



Enter and confirm the User password.

Select and confirm the option shown.

Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.



Confirm the option shown.

### Step by step

#### Dialing using the hot or warm line function

Your service personnel can configure a hot or warm line for your phone.

If you lift the handset of the phone or press the loud-speaker key

- with a hot line immediately or
- with a warm line after a defined period of time,

a number specified by service personnel is dialed.

Examples:

- The phone in the lift immediately dials the reception number.
- The phone at a patient's bed dials the ward number e.g. after a minute if no other number is dialed.

## Step by step

## Redial

## Redialing from the call list



Only calls to the primary line are received on multi-line phones (→ page 12).



Press the key. The "Records" menu opens.

Calls ▾

Select and confirm (see also → page 26).

Dialed ▾

Select and confirm the option shown. The Dialed call list opens

998324 01.01 ▾

If entries are saved, select and confirm the required entry.

Dial ▾

Confirm the option shown. The phone number associated with the list entry is dialed.

## Redialing from the display dialog



Lift the handset.

or



Press the key shown.

Redial {1} ##? ▾

Confirm the option shown. The last phone number entered is dialed.

## Redialing from the idle menu

▾ or OK

press the key shown to open the idle menu

Redial {1} ##? ▾

Confirm the option shown. The last phone number entered is dialed.



A secure voice communication is indicated by a closed padlock icon on the graphic display; a non-secure voice communication is indicated by an open padlock icon on the graphic display (see also → page 30)

## Step by step

Consult? ▼



Disconnect & return? ▲

Disconnect

Alternate? ▼

Disconnect & return? ▲

## Consulting a second party

You can call a second party while a call is in progress. The connection to the first party is on hold.

**Prerequisite:** You are conducting a call.

Confirm the option shown.

Enter and confirm the second party's phone number.

### Ending or canceling a consultation call

Select and confirm the option shown.

The call with the first party is resumed.

### Ending the first call

Select and confirm the option shown in the first call's context menu.

The connection to the second party remains active.

## Switching to the held party (alternating)

**Prerequisite:** You are conducting a consultation call.

Select and confirm the option shown.

In the first display line, the phone number or name and the duration of the active connection are displayed.



You can switch back and forth between two subscribers by repeatedly selecting and confirming "Alternate".

### Ending an alternate operation

Select and confirm the option shown.

The active call is disconnected and the held call is restored.

## Step by step

## Connecting parties

You can connect the first party with the party you consulted, clearing down your connection to both parties in the process.

**Prerequisite:** You are conducting a consultation call → page 44 and call joining is allowed → page 45.

Select and confirm the option shown.

The active and held calls are joined. You are disconnected from the call.

or



or



### Connect by hanging up

Replace the handset or, if you are in speakerphone mode, press the loudspeaker key. The other two parties are now connected to one another.

### Allowing call joining

You can also configure this setting via the Web interface → page 149.



Press the key shown.




Confirm the option shown.

if nec.



Enter and confirm the User password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

## Step by step

### Call forwarding

You can forward calls for your phone to another phone.

**Prerequisite:** The call forwarding function is programmed (→ page 47).

Three forwarding conditions can be programmed in the forwarding menu:

- All Calls
- Busy
- On no reply

Because of its direct impact, "All Calls" call forwarding has the highest priority followed by "No reply" and "Busy".

If active, "All Calls" call forwarding is indicated on the display when the phone is idle.

Forwarded calls can be logged in a call list (see → page 26).

The **Edit call forwarding** menu offers you three Destination options. These destination options are assigned to the forwarding types.

All calls (off/on)

**Destination**

Busy (off/on)

**Destination**

No reply (off/on)

**Destination**

One phone number may already be assigned to each destination. The destination option could then be Destination 12345, for instance.

## Step by step

## Programming call forwarding

## Saving destination phone numbers for call forwarding

You can save up to five destination phone numbers for call forwarding. These destination phone numbers can then be assigned different forwarding types. You can then enable one of the forwarding types (→ page 51).



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls

Select and confirm the option shown.

Forwarding?

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Destination =



Select the destination option for one of the following forwarding types:

- All calls
- Busy
- No reply

Confirm the destination selected.



You can use each of the three **Destination** options to save destination phone numbers for the relevant forwarding type.

Edit favorites



Select and confirm the option shown.

Destination 1 =



Select and confirm the option shown.



Enter and confirm the destination phone number.

### Step by step

Options = Save & exit

Define additional destination phone numbers for destination 2 to 5, as necessary.

Select and confirm the option shown.

### Assigning a destination phone number to a call forwarding instruction

You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls

Select and confirm the option shown.

Forwarding?

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Destination =

Select the destination option for one of the following forwarding types:

- All calls
- Busy
- No reply

Confirm the destination selected.

089008844

Select and confirm a destination number from the list.

Options = Save & exit

Select and confirm the option shown.



## Step by step

**Defining the ring duration before call forwarding on no reply**

You can define how often the phone should ring before the "No reply" form of call forwarding activates.



This setting is only available if the "Server features" function was deactivated by the service personnel.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls

Select and confirm the option shown.

Forwarding?

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Duration ▲

Select and confirm the option shown.



Enter a value for the duration.

Options = Save & exit ▼

Select and confirm the option shown.

## Step by step

### Setting alerts

Use the Call forward alerts menu to enable and disable visual and audible alerts for call forwarding (not possible with the Forwarding key).



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls

Select and confirm the option shown.

Forwarding?

Select and confirm the option shown.

Alerts

Select and confirm the option shown.

Visual alerts= No

Select and confirm the option shown.

Yes

Select and confirm the option shown in the Yes/No context menu.

or

Audible alerts= No

Select and confirm the option shown.

Yes

Select and confirm the option shown.

or

Forwarding station...

Select the option shown.

Display last

Select and confirm **Display last/Display first**.

Options = Save & exit

Select and confirm the option shown.

## Step by step

## Activating/deactivating call forwarding



You can also configure this setting via the Web interface  
→ page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls

Select and confirm the option shown.

Forwarding?

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Select the appropriate call forwarding type.

All calls = Off



Select and confirm the option shown.

or

Busy = Off



Select and confirm the option shown.

or

No reply = Off



Select and confirm the option shown.

On



Select and confirm "On" or "Off".

Options = Save & exit



Select and confirm the option shown.

### Step by step

#### Call forwarding chain

Sometimes calls to a station are forwarded to another station which also has call forwarding or DND activated. This can create a call forwarding chain consisting of several telephones where the last member of the chain is your phone.

A popup window opens on your phone's screen with the following information:

- Who is calling
- Who forwarded first or last.
- The reason for the forwarding is displayed by an icon.

You can set whether the station that forwarded first or last is displayed (see → page 50).

## Step by step

## Callback

You can request a callback if the station called is busy or if nobody answers.

You receive a callback when the other party's line becomes free.



This option must be activated by your service personnel.



On multi-line telephones → page 12, only the callback requests for your primary line are logged.

 ▲

Select and confirm the option shown.

### Deleting callback requests

You can delete scheduled callback requests if you no longer need to return a call, for example, at the end of the working day.

**Prerequisite:** At least one callback was requested. The phone is idle.

 ▼

Select and confirm the option shown.

 ▲

All callback requests are deleted.

## Responding to a callback

**Prerequisite:** A callback was requested. Your phone rings and station information appears on the display with the callback icon.

### Accepting a callback

 ▼

Select and confirm the option shown.

### Rejecting a callback

 ▼

Select and confirm the option shown.

### Step by step

The callback request is deleted. The caller hears the busy signal. The caller's phone number is added to the missed calls list.

#### Forwarding a callback

Deflect? ▲

Select and confirm the option shown.



Enter and confirm the phone number.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Confirm the option shown.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Outgoing calls?

Confirm the option shown.

Callback: busy = No ◆

Select and confirm the option shown.

**or**

Callback: no reply = No ◆

Select and confirm the option shown.

Yes ▼


Select and confirm to activate the callback function.

Options = Save & exit ▼

Select and confirm the option shown.

## Step by step

## Calling back missed calls

Calls received while you are absent are indicated by a message on the idle display (→ page 23). The  function key also lights up.

Missed calls are logged in the missed calls list. This list provides information on the missed call and lets you call back the number directly (call lists → page 26).



Press the key shown.

Calls ▲

Select and confirm the option shown.

Missed ▼

Select and confirm the option shown.

998324 01.01 ▲

Select and confirm the entry you want.

Dial ▼

Confirm the option shown.

The phone number associated with the entry is dialed.

### Step by step

## Programmable keys

The phone features a range of functions that can, if required, be stored on programmable keys.

The phone comes with eight programmable sensor keys, all of which can be programmed on two separate levels.

The "Shift" programmable key to switch between the two key levels is already preassigned. You should keep this key if possible to be able to switch between the two key levels.

The keys can also be programmed via the Web interface (→ page 149).

## List of available functions

- |                         |                         |
|-------------------------|-------------------------|
| 1. Unallocated          | 16. Headset             |
| 2. Selected dialing     | 17. Do not disturb      |
| 3. Repeat dialing       | 18. Group pickup        |
| 4. Forward all calls    | 19. Repertory dial      |
| 5. Forward no reply     | 20. Feature toggle      |
| 6. Forward busy         | 21. Mobility            |
| 7. Mute                 | 22. Directed pickup     |
| 8. Ringer off           | 23. Callback            |
| 9. Hold                 | 24. Cancel callbacks    |
| 10. Alternate           | 25. Consultation        |
| 11. Blind transfer call | 26. Call Waiting toggle |
| 12. Transfer call       | 27. Immediate ring      |
| 13. Deflecting          | 28. Preview             |
| 14. Shift               | 29. Start application   |
| 15. Conference          | 30.                     |



Step by step

## Programming a key



Press the programmable key you want to program until the input field opens. The key illuminates continuously



You can also configure this setting via the Web interface → page 149.

or



You can also program keys via the user menu.

Press the key shown.

Select and confirm the option shown.

if nec.

Enter and confirm the User password.

Select and confirm the option shown.

Select and confirm the option shown. You are prompted to press the key you wish to program.



Press the key you want to program until the input field opens. The key illuminates continuously.

Select and confirm the option shown to program the first level.

or

Select and confirm the option shown to program the second level.

Select and confirm the required function in the list (for instance, Do not disturb).

Select and confirm the option shown.

## Step by step

# Programming enhanced functions

## Repertory dial



Press the key you want to program until the input field opens. The key illuminates continuously



You can also configure this setting via the Web interface → page 149.

Normal = ▾

Select and confirm the option shown to program the first level for instance.

Repertory dial ▾

Select and confirm the required function.

Setting ▾

Select and confirm this option to enter a destination phone number.



Enter and confirm a stations's destination phone number.

You can select and insert special characters in the dialing sequence:

- « Clear call
- ~ Make consultation
- » Make normal call
- ↵ Pause

The menu also offers the following functions:

- Move cursor right and left
- Copy
- Paste
- Mode selection
- Cancel
- OK

Save & exit ▾

Select and confirm the option shown.



The repertory dial can be up to 40 characters long.

## Step by step

### Feature toggle

Only available for Hunt group functions (→ page 124).



Press the sensor key you want to program until the field opens. The programmable sensor key lights up.



You can also configure this setting via the Web interface → page 149.

Normal =



Select and confirm the option shown to program the first level for instance.

Feature toggle



Select and confirm the required function.

Setting



Select and confirm this option to enter a code.



Enter and confirm the code (see → page 132).

Save & exit



Select and confirm the option shown.

### Forwarding



Press the programmable key you want to program until the input field opens. The key lights up.



You can also configure this setting via the Web interface → page 149.

Normal =



Select and confirm the option shown to program the first level for instance.

Forward all calls



Select a forwarding type:

- Forward all calls
- Forward no reply
- Forward busy

Select and confirm the function in the context menu.

Setting



Select and confirm this option to enter the forwarding destination.



Enter and confirm the phone number of the forwarding destination.

Save & exit



Select and confirm the option shown.

### Step by step

#### Immediate ring

This function allows you to switch the preset delay (→ page 101) on and off for all line keys.

#### Activate/deactivate call waiting

You can press a key to activate or deactivate call waiting functionality, even during a call. This requires that call waiting is permitted in principle (→ page 70) and that the key has been configured(→ page 60).

#### Using programmed keys

The use of programmed functions depends on the phone's status. The relevant display appears once you have pressed a key.

#### Example 1: Accessing a stored contact or phone number

**Prerequisite:** The idle menu is displayed on the graphic display.

■ Press key for stored contact. Connection setup is shown in the display.

#### Example 2: Deactivate call waiting

■ Press "Call waiting on" key. The key lights up.

The second call function is deactivated. The call is rejected or forwarded.

Step by step

## Resetting programmable keys

Here you can reset keys you configured back to factory settings (see also → page 148).



User

Press the key shown.

Confirm the option shown.

if nec.

Enter and confirm the user password.

Reset

Select and confirm the option shown to switch to the **Reset user data** menu.

Function key data ▲

Select the option shown.

Yes ▼

Select and confirm the option shown to delete the content of all keys.

Reset phone

Select and confirm "Reset selected user data." The contents of the keys you configured are deleted.



Keys which can only be configured by service personnel remain unchanged.

Step by step

## Enhanced phone functions

### Incoming calls

#### Deflecting a call

##### Using call deflection

**Prerequisite:** An incoming call is displayed or signaled.

Select and confirm the option shown.

If a destination phone number is stored (→ page 62), you can select and confirm it. The call is deflected.

or

If you did not set a phone number when programming call deflection, you are now prompted to enter a destination phone number for call deflection.



Enter and confirm the destination phone number. The call is deflected.



##### Permitting call deflection

You can also configure this setting via the Web interface → page 149.



Press the key shown.

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

Confirm the option shown.

## Step by step

Default destination =

Select and confirm the option shown.



Enter and confirm the phone number to which the station should be deflected.



Entering a destination phone number is not mandatory when call deflection is active. If you want to deflect an incoming call, you are prompted to enter a destination phone number if there is none stored.

### or Deflecting to a DSS number

A call can be deflected to a direct station selection (DSS) subscriber using the DSS key, if the key is configured and the deflect function is activated by your service personnel → page 96.

Deflect to DSS?

Select and confirm the option shown.

Yes

Select and confirm the option shown.

Options = Save & exit

Select the option shown and confirm twice.

Reject?

Select and confirm the option shown.  
The caller hears a busy signal.



If the rejected caller's phone number is transmitted, it is saved in the call list. You can then call this party back at a later time.

## Rejecting a call

You can reject an incoming call.

**Prerequisite:** An incoming call is displayed or signaled.

Select and confirm the option shown.  
The caller hears a busy signal.



If the rejected caller's phone number is transmitted, it is saved in the call list. You can then call this party back at a later time.

## Step by step

Hold ?

Reconnect ?

### Placing a call on hold

You can use this function to place an ongoing call on hold, for instance, to prevent the other party overhearing a conversation with a colleague in the same room. The "Hold" function must be activated by the service personnel.

**Prerequisite:** You are conducting a call.

Select and confirm the option shown.

### Retrieving a held call

Select and confirm the option shown.

### Using line keys

On multi-line telephones you can use the line keys to place ongoing calls on hold.



Press the corresponding line key. The line key LED starts flickering. The call is now on hold.



### Retrieving a held call:

Press the corresponding line key. The line key LED lights up. The call is retrieved.



The LED display → page 20 indicates that the call is on hold to other multi-line telephones where this line is also configured. These phones can then pick up the call.

### Held call wait status

After placing a call on hold, you can replace the handset and then decide if the call should be retrieved or disconnected.

**Prerequisite:** You placed a call on hold and replaced the handset.

Retrieve held call ?

or

Disconnect ?

Select and confirm the option shown to resume the call in speakerphone mode.

Select and confirm the option shown to disconnect the call.



## Step by step



The held call is signaled as an incoming call after a specified period of time.

**Activating/deactivating the hold reminder tone**

You can also configure this setting via the Web interface → page 149.



Press the key shown.

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.

**Setting the hold reminder time**

Use the "Hold reminder" function to set the time after which you want to receive an automatic reminder about a held call.

The minimum value is 1, that is, the reminder is output after one minute. The maximum value is 99 minutes. Press 0 to deactivate the delay.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

### Step by step

Connected calls?

Select and confirm the option shown.

Hold rem. delay=3

Select and confirm the option shown.



Enter a value between 1 and 99 in the input mask and confirm.

Options = Save & exit

Select and confirm the option shown.

### Music on hold

If the Music on hold option is active, music is played back when you are placed on hold by another party.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

**if nec.**

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Connected calls?

Select and confirm the option shown.

Music on hold

Select and confirm the option shown

Yes

Select and confirm the option shown.

Options = Save & exit

Select and confirm the option shown.

## Step by step

## Call waiting (second call)

You can accept a second incoming call in the course of an ongoing call. The caller hears the on-hook signal while you hear a call-waiting signal tone. A bell appears on the display and next to it the phone number of the caller is shown.

You can ignore or accept the second call. Before you accept the second call, you can end the first call or place it on hold for subsequent retrieval.

You can block the second call or the signal tone (→ page 70).

### Accepting a second call

**Prerequisite:** You are conducting a call and call waiting is allowed (→ page 70).

Accept ▼

Select and confirm the option shown.

You can talk to the second party.  
The connection to the first party is on hold.

During the call with the second party, additional functions are available for selection:

Alternate (see → page 44),  
Complete transfer (see → page 45),  
Conference (see → page 81),  
Blind transfer (see → page 72),  
Hold (see → page 64).

### Consultation call from second call

If the second call is your active call you can initiate a consultation call from it.

From a consultation call in the second call you can

- initiate a conference
- toggle between the second call and a consultation call
- transfer a call
- disconnect the calls again

During a consultation in the second call, the first call is parked and can only be unparked when the consultation or second call ends or these calls were connected.

### Step by step

Disconnect & return? ▲

Select and confirm the option shown.

The call with the second party is disconnected and the connection to the first party is retrieved.

#### Ignoring second call

**Prerequisite:** You are conducting a call and call waiting is allowed (→ page 70).

Ignore? ▼

Select and confirm the option shown.

The caller still hears the on-hook signal. You can subsequently Accept, Reject or Deflect the second call.

While the ignored second call continues to wait, from the active call you can:

- make a consultation call
- initiate a conference
- toggle between the consultation call and your call party
- transfer a call

A third call would be rejected with the busy signal

If you have disconnected the first call, the ignored second call rings like a normal call.

#### Rejecting a second call

**Prerequisite:** You are conducting a call and call waiting is allowed (→ page 70).

Reject? ▼

Select and confirm the option shown.

The second call is rejected. The caller hears the busy signal. The caller's phone number is added to the missed calls list.

## Step by step

Deflect? ▲

**Deflecting a second call**

**Prerequisite:** You are conducting a call and call waiting is allowed (→ page 70).

Select and confirm the option shown.

If a destination phone number is stored (→ page 62), you can select and confirm it. The call is deflected.

**or** If you did not set a phone number when programming call deflection, you are now prompted to enter a destination phone number for call deflection.



Enter and confirm the destination phone number.

The second call is deflected to the destination specified. You are reconnected with the first party.

Complete Xfer

**Connecting parties**

Select and confirm the option shown. The other two parties are now connected to one another. You can now hang up or dial another number for instance.

**or** **Connect by hanging up**

**Prerequisite:** Connecting by hanging up is activated (ask your service personnel) and "Toggle associate" must be set to "Yes" (→ page 71). Before you can be connected by hanging up you must have toggled at least twice (→ page 44).



or



Replace the handset or, if you are in speakerphone mode, press the loudspeaker key. The other two parties are now connected to one another.

## Step by step

### Allowing call waiting



If the Call waiting (second call) function is deactivated, a caller hears the busy signal if you are already conducting a call.



You can also configure this setting via the Web interface → page 149.

**Prerequisite:** The option was programmed by your service personnel.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls?

Select and confirm the option shown.

Handling?



Select and confirm the option shown.

Allow call waiting = No



Select and confirm the option shown.

Yes



Select and confirm the option shown.

Options = Save & exit



Select and confirm the option shown.

Assuming **Allow call waiting** is generally activated, you can toggle the configured sensor key to switch call waiting on/off (→ page 60).

## Step by step

**Toggling associate**

Set the "Toggle associate" function to Yes if you want to connect to a second or pickup call by hanging up.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

Select and confirm the option shown.

if nec.



User passwordEnter and confirm the .

Select and confirm the option shown.

Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.




Select and confirm the option shown.

### Step by step

Blind transfer call? 



Start transfer? 

Consultation? 



Dial

Complete Xfer? 

## Transferring a call

You can transfer your current call to another party with or without consultation.

### Blind transfer

**Prerequisite:** You are conducting a call. The options "Allow Call Transfer" and "Transfer on Ring" were selected (→ page 73).

Select and confirm the option shown.

Enter the phone number of the second party to whom you want to transfer the call.

Confirm or wait until the autodial delay expires.



The display returns to idle following successful transfer.

### Transferring with consultation

You can announce a call to a recipient before transferring it.

**Prerequisite:** You are conducting a call. The options "Allow Call Transfer" and "Transfer on Ring" were selected (→ page 73).

Select and confirm the option shown. The call is placed on hold.

Enter the phone number of the party to whom you want to transfer the call.

Confirm the option shown.

### If the party answers:

Announce the call you want to transfer.


Select and confirm the option shown.



## Step by step

### If the party does not answer:

You do not have to wait for the second party to answer before you can transfer the call.

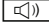Replace the handset or, if speakerphone mode is active, press the lit  key to transfer the call.

If the party does not answer, you will be called back by the first party.

### Allowing call transfer

You can also configure this setting via the Web interface → page 149.



Press the key shown.



Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.

## Step by step

### Allowing "Transfer on Ring"

If this option is allowed, you can activate call transfer by replacing the handset even before the called party answers.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Outgoing calls

Select and confirm the option shown.

Transfer on ring = No ▲

Select and confirm the option shown.

Yes ▼

Confirm the option shown to activate the callback function.

Options = Save & exit ▼

Select and confirm the option shown.

## Step by step

## CTI calls

## Beep on auto-answer

Speakerphone mode activates automatically on your phone if you use a CTI application (such as Outlook) to dial a number when Auto Answer is active. If Auto Answer is not active, the phone rings first and you have to press the loudspeaker key or lift the handset to set up the call. This setting also defines whether or not incoming calls are automatically accepted. If the function is active, an alert beep sounds when an incoming call is automatically accepted.

Information on the operation of the configured CTI application can be found in the corresponding user guide.



You can also configure this setting via the Web interface → page 149.

**Prerequisite:** The option was programmed by your service personnel.



Press the key shown.

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.

Select and confirm the option shown.



Select and confirm the option shown.



Select and confirm the option shown.

## Step by step

### Beep on auto-reconnect

You can reconnect a held call both via the CTI application and via the phone. A beep sounds when you toggle between an active call and a held call when the function is active.

**Prerequisite:** The option was programmed by your service personnel.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls?

Select and confirm the option shown.

CTI calls?

Select and confirm the option shown.

AutoReconnect beep = No

Select and confirm the option shown.

Yes

Select and confirm the option shown.

Options = Save & exit

Select and confirm the option shown.

## Step by step

## Making calls

### Dialing with the DDS key

You can program frequently used phone numbers on programmable keys (→ page 56). If you press a direct destination selection key briefly, the associated contact or phone number appears and dialing is initiated.

**Prerequisite:** A direct destination key is programmed → page 56.



Press the programmed DDS key. Dialing is initiated.

### Dialing a phone number from a list

The following call lists are available in the "Calls" directory:

- Missed
- Dialed
- Received
- Forwarded



For a detailed description of the call lists, see → page 26.



Press the key shown.

Calls ▲

Select and confirm the option shown.

Dialed ▼

Select and confirm the option shown.

Niels, Bohr 30.05. 07:06am

Select and confirm the appropriate list entry.

Dial ▼

Select and confirm the option shown.

The phone number associated with the list entry is dialed. If you have not already lifted the handset, conduct the call now in speakerphone mode.




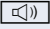
### Step by step

#### Using autodial delay

A number is automatically dialed after a set delay starting from the entry of the number's last digit. The autodial delay can be used:

- when dialing in idle mode
- Consultation
- when transferring an answered call.

The delay can be reduced by performing one of the following activities:

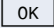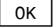-  • Pressing the key . This always works.
-  • lifting the handset. This only works if the phone number was entered when the phone was idle or if it was entered for a consultation call when the handset was off hook.
-  • pressing the loudspeaker key. This only works if the phone number was entered when the phone was idle and the loudspeaker key was not lit or if the phone number was entered for a consultation call and the loudspeaker key was not lit.



If an emergency number is preset by your service personnel, the autodial delay for this phone number is reduced to one second.

---



Automatic dial delay does not work if you are using a dial plan and **Immediate dialing** is configured (see → page 41). The number is automatically dialed as soon as the string entered matches an entry in the dial plan.

---

## Step by step

## Settings for autodial delay



The setting does not affect automatic emergency number dialing.

If you select **Autodial delay**, you must either confirm the "Dial" option, press the loudspeaker key or wait until the autodial delay expires to set up a call when dialing with the handset on hook.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

Select and confirm the option shown.

**if nec.**

Enter and confirm the user password.

Select and confirm the option shown.


Select and confirm the option shown.



Select and confirm the option shown.



Enter a value in the input mask and confirm.



Select and confirm the option shown.

## Step by step

### Allowing "Busy When Dialling"

If you activate this function, an incoming call received while you are performing dialling is rejected. The caller then hears the busy signal.




You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Outgoing calls

Select and confirm the option shown.

Busy when dialing = No ▲

Select and confirm the option shown.

Yes ▼

Select and confirm the option shown.

Options = Save & exit ▼

Select and confirm the option shown.



## Step by step

## Conference

### Local conference

This type of conference is also referred to as a three-party conference. It involves up to three participants.

**Prerequisite:** You are conducting a consultation call → page 44 or have accepted a second call → page 67, and the conference function is active → page 82.

#### Initiating a local conference

Conference?

Select and confirm the option shown in the menu. You are connected to both parties at once.

1: Party

On the display, select and confirm the first connection you want to clear down.

or

2: Party

On the display, select and confirm the second connection you want to clear down.

Disconnect?

Select and confirm the option shown. You are now involved in a one-to-one call with the remaining call party.



If you already are involved in a secure connection with a party when you initiate a consultation call, the original party is placed on hold. The new consultation connection can be either secure or non-secure. However, the first connection remains secure even if all three parties are now joined together in a conference.

The entire conference is nonsecure if the connection to at least one of the parties is not secure (see also → page 30).

The relevant padlock icon appears on the "Conference" row.

## Step by step

Exit Conf? ▾


### Ending a local conference

Allowing call partners to continue a conference after you exit

**Prerequisite:** The "Allowing joining in a local conference" function is activated.

Select and confirm the option shown in the menu. Both call partners remain connected. You are disconnected from the conference call.

or



Replace the handset or, if you are in speakerphone mode, press the loudspeaker key. Both call partners remain connected. You are disconnected from the conference call.

Disconnecting a party

End Conf? ▾

Select and confirm the option shown in the menu. Both connections are cleared down – the conference is cleared down.

### Allowing a local conference

This option allows or blocks the "Conference" function.

You can also configure this setting via the Web interface → page 149.



Press the key shown.



User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Connected calls?

Select and confirm the option shown.

Allow conferences = No ▲

Select and confirm the option shown.

Yes ▾

Select and confirm the option shown.

Options = Save & exit ▾

Select and confirm the option shown.

## Step by step

**Allowing joining in a local conference**

You can use this option to decide whether or not your call partners are allowed to join calls after you exit the conference call.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

**if nec.**



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Connected calls?

Select and confirm the option shown.

Allow exit conf = N



Select and confirm the option shown.

Yes



Select and confirm the option shown.

Options = Save & exit



Select and confirm the option shown.

### Step by step

Conference? ▾

## System-based conference

This type of conference is also referred to as a large conference. It can include up to ten parties.

**Prerequisite:** You are conducting a consultation call → page 44 or you have accepted a second call → page 67, and the "System conference" feature was configured by your service personnel.

### Establishing a conference

Select and confirm the option shown in the connection's context menu. You are connected to the first two parties at once. The conference is displayed with the current participants. You can now:

- initiate a consultation call
- put the conference on hold
- leave the conference.

Consult? ▾

### Conducting a consultation call

Select and confirm the option shown in the "Conference" context menu. If the party answers, you can:

- toggle between the party and the conference
- connect the consultation call to another called party
- end the consultation call and return to the conference
- add the consultation call party to the conference.

Conference? ▾

### Adding a party

**Prerequisite:** You are conducting a consultation call and the conference is on hold.


Select and confirm the option shown in the consultation call's context menu. The party is added to the conference. Only the conference and all current participants are now displayed. You can scroll through the list of participants.

Hold? ▾

### Putting the conference on hold

Select and confirm the option shown in the "Conference" context menu. The conference is placed on hold and you can consult with someone in your office, for instance.

## Step by step

Exit Conf? 



If using the "System conference" option, the Conference line contains a closed padlock icon for a secure voice connection and an open padlock icon for a nonsecure voice connection → page 30).

The display depends on whether the conference server supports secure voice communication. The appropriate display is set by the conference server.

### Step by step

## Call lists

For a detailed description of the different call lists, see → page 26.

## Editing entries

### Selecting an entry



Press the key shown.

Calls ▲

Select and confirm the option shown.

Missed ▼

For instance, select and confirm the list of missed calls.

The list is sorted chronologically; the last caller entered is listed as the first entry. You can use the Navigator keys to browse through the list.

Niels, Bohr 13:22

Select and confirm the appropriate list entry.

Details ◆

Select and confirm the option shown.

For display and information shown → page 26.

Delete ◆

### Delete the entry

Select and confirm; the entry is deleted.

## Delete all entries



Press the key shown.

Calls ▲

Select and confirm the option shown.

Dialed ▼

For instance, select and confirm the list of dialed numbers.

Options → ▼

Select and confirm the option shown.

Delete All ▼

Select and confirm the option shown. All entries in the list displayed are deleted.

## Step by step

## Making calls with multiple lines

You can use your OpenStage 15 as a multi-line phone. If you have any questions regarding how to configure your OpenStage phone as a multi-line phone, please contact your service personnel.

The following is a description of the telephony scenarios for multi-line phones. To facilitate comprehension, you should familiarize yourself with the enhanced telephony application and how to use the line keys beforehand. You can make further individual settings for your multi-line phone. Refer to the following sections for a detailed description of the individual components:

- Introduction to multi-line phones → page 12
- Lines and line keys → page 19

## Incoming calls

Depending on your individual settings, you will be notified of incoming calls → page 140.

## Accepting calls for the primary line

In this case, the telephone behaves in the same way as a single-line telephone. See → page 30 and → page 62.

## Accepting calls for secondary lines

**Prerequisite:** The secondary line is configured on your multi-line telephone.

### Using the handset



Lift the handset.



Conduct call.



The line that rings is automatically selected. If calls are ringing on more than one line, you will be connected to the line that has been ringing the longest.

### Step by step



or

Accept?

#### Using the line keys

Press the flashing line key. Speakerphone mode.

Confirm the option shown. Speakerphone mode.


### Making calls

You must seize a line before you can make calls on a multi-line telephone.

Trunk seizure can be configured on an individual basis. Your service personnel can determine if the lines on your telephone can be automatically seized and with which priority.



If you have seized a secondary line, this line is reserved for you for making calls for a specific period as defined by the service personnel. No other user can seize this line during this period, even if the line is also assigned to this user's telephone.



or



Lift the handset or press speakerphone key.




Press the required line key.



Enter the phone number or use redial, for example. The connection is set up.

#### Automatic trunk seizure

**Prerequisite:** Your service personnel has configured automatic trunk seizure.



or



Lift the handset or press speakerphone key.




The line defined during configuration is seized.



Enter the station number. The connection is set up.



## Step by step



or



Redial {1} 12345?

### Dialing the last dialed number

Regardless of the line used, the last number dialed on your telephone is displayed for redialing in the selected number's context menu.

Lift the handset or press speakerphone key.

Press the required line key (→ page 88).

Redial is offered on the display as long as a number has been dialed previously:

Confirm the option shown. The connection is set up.

### Forwarding calls on primary line

The call forwarding can only be activated for the primary line. Which call forwards are possible, how they are configured and activated can be found from → page 46.

#### Call forwarding information

**Prerequisite:** Your service personnel has activated "Forwarding shown".

If you have activated one of the forwarding types on your phone for the primary line and a station calls, a popup window with the following information opens:

- Who is calling
- The forwarding destination.

### Step by step

## During calls

### Making and receiving calls on a single line

If you only use one line on your multi-line telephone to make calls, and you receive calls on the same line, the phone operates in the same way as a single-line telephone:

- Redial → page 43
- Consultation → page 44
- Toggle/Connect → page 44
- Callback → page 53
- Hold → page 64
- Call waiting (second call) → page 67
- Transferring a call → page 72
- Conference → page 81

Functions available exclusively for the primary line:

- Call lists → page 26
- Voicemail → page 26
- Call forwarding → page 46
- Do not disturb → page 105



Depending on your individual settings, you will be notified of incoming calls → page 139.

### Making and receiving calls with multiple lines

#### Accepting a waiting call



Depending on the settings for "Rollover", you will be notified of incoming calls → page 103.

**Prerequisite:** You are conducting a call. At the same time, a call is incoming on another line.



Call on line 1.



Press the line key for line 2. The call on line 1 is placed on hold.

## Step by step



All multi-line users that share the line on which the call is being held (→ page 19) can now pick up the held call. To prevent other users from answering the held call, you must place the call on "Consultation" hold → page 44.

Depending on the setting made by your service personnel, you may have to press the trunk key twice to accept the call on the other line. The first call is either placed on hold or released depending on the setting.



Conduct call on line 2.



End call on line 2.



Press line key for line 1.



Retrieve call on line 1.

## Putting a line on hold

On a multi-line telephone you can use the line keys to place calls on hold.

**Prerequisite:** You are conducting a call.



Press the call-line sensor key.



- The LED line key flashes.
- The LED line displays the hold status on all multi-line phones to which the line is connected.
- On phones connected to the line, a user can press the relevant line key and accept the held call.

During a consultation call or after accepting a waiting call the hold function cannot be used.

## Step by step

### Lines with hot or warm line function

Your service personnel can configure a hot or warm line for the primary and secondary line.

The function is activated when on

- The Primary line  
you pick up the phone's handset or press the line or loudspeaker key
- the secondary line  
you press the line key.

A number specified by you is dialed with a hot line immediately and with a warm line after a specific time.

Examples:

- The phone in the lift immediately dials the reception number.
- The phone at a patient's bed dials the ward number e.g. after a minute if no other number is dialed.

### Entering a number for the hot and warm line function

Specify which number should be dialed when the hot or warm line function is activated.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.



Enter and confirm the User password.

Configuration

Select and confirm the option shown.

Keyset

Select and confirm the option shown.

Lines?

Select and confirm the option shown.

Line

Select and confirm the line you want.

Hot warm dest?

Select and confirm the option shown.

## Step by step



Enter and confirm the destination.

Options = Save & exit

Select and confirm the option shown.

## Busy override

A station of a line trunk group is on a call. It's primary line is configured as a secondary line on your phone. This line now has the status "busy." You can join in the call by pressing the illuminated key of this line (see also → page 19).

**Prerequisite:** A secondary line is configured on your multi-line phone and busy override is enabled for you.

The key of secondary line illuminates – it is busy. You want to join in the call.



Press the lit key. A conference is established. You are connected to the parties on the secondary line. The key continues to illuminate and the conference is shown on the display.



If there is already a conference on the secondary line you are connected to this conference. The conference is shown on the display.

You can now:

- Put the secondary line on hold
- Leave the conference on the secondary line
- Make consultation call
- Accept a second call
- Alternate between a new call party and a conference on the secondary line.
- Include a call party from a consultation call or a second call in the conference.

### Step by step

## Direct station selection keys

Apart from line keys, service personnel can also configure direct station selection (DSS) keys. You can use a DSS key to call an internal station directly, pick up calls for this station or forward calls directly to it.

### Calling a station directly

You cannot use DSS if the user is on another call (flashing LED).

#### Calling from the idle menu

Press the relevant DSS key. The key lights up and a connection is established.



Service personnel can configure the DSS key so that the connection is also established when the DSS station has activated do-not-disturb or call forwarding.

### Consultation with the DSS station

**Prerequisite:** You are conducting a call and service personnel have configured the DSS key for consultation.

Press the relevant DSS key for the consultation. The key lights up and a connection is established. If the station answers, you can toggle, transfer the first call or initiate a conference.



If service personnel have configured transfer instead of consultation, you can only transfer the current call to the DSS station.

Step by step

### Call pickup


You can pick up calls for another DSS station. If a call is waiting on their line, the LED flashes.

#### Indirect pickup

**Prerequisite:** The auto-answer function must be deactivated → page 75.



Press the DSS key. The call is routed to your primary line and rings.



Lift the handset or press speakerphone key. You are connected with the other party.

#### Rejecting a call

**Prerequisite:** Service personnel must activate the reject option for DSS keys and auto-answer must be deactivated → page 75.



Press the DSS key. The call is routed to your primary line and rings.

Reject



Select and confirm the option shown in the pop-up menu. The caller hears a busy signal.

#### Direct pickup

**Prerequisite:** The auto-answer function must be activated → page 75.



Press the DSS key. The call is routed to your primary line and you are immediately connected with the other party via speakerphone.

Step by step

## Deflecting a call to a DSS station

**Prerequisite:** The deflect function must be approved for DSS keys (see → page 63).

If you receive a call on one of your lines, you can immediately deflect it to the DSS station.






Your phone rings and a line key flashes.



Press the relevant DSS key. The call is deflected to the DSS station. If the DSS station does not answer, you can pick up the call by pressing the DSS key.

## LED display on DSS keys

DSS Key	Explanation
	<b>Off:</b> The line is in idle mode.
	<b>Flashes:</b> You can accept a call for the DSS station via the key. The call is routed to your primary line when the call is accepted.
	<b>Illuminates:</b> The line is busy. Provided that second call is activated you can still reach the DSS station via the key. It can accept your call as a second call.




## Making calls in an executive-secretary team

An executive-secretary team is configured by the relevant service personnel and may include up to four executive and up to two secretary telephones.

### Sample scenarios

This example assumes that two executive and two secretary phones are configured. Calls for the executives are forwarded immediately to the respective secretary phone. A secretary then connects the call with or without consultation to the responsible executive using the direct station selection key.

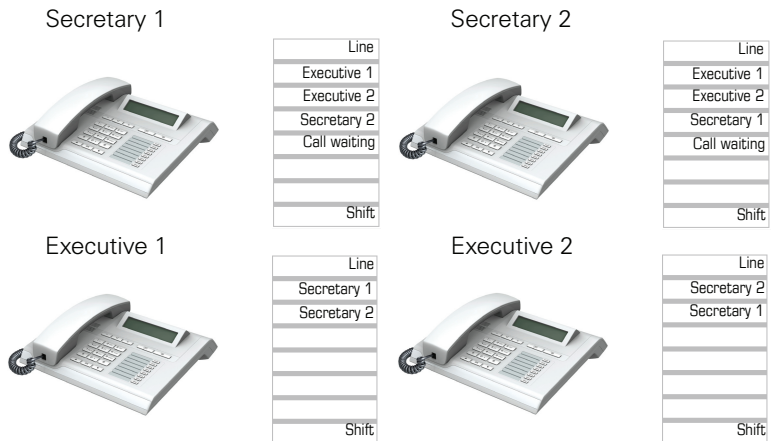

### Prerequisites:

The following call forwards are configured (→ page 46):

- For All calls from Executive 1 to Secretary 1
- For All calls from Executive 2 to Secretary 2
- Forward on Busy and forward on No reply from Secretary 1 to Secretary 2
- Forward on Busy and forward on No reply from Secretary 2 to Secretary 1

"Allow call waiting" should be activated on the secretaries' phones (→ page 70). This function can optionally be activated and deactivated using a key if a key has been configured for it.

Line and direct station selection keys have been configured by service personnel and "Transfer on hangup" and server features have been activated.

### Step by step

#### Accepting a call

Incoming calls for the executives should be forwarded immediately to the assigned secretary and answered there.

#### Accepting calls at the secretary phone

An incoming call for "Executive 1" rings at the assigned "Secretary 1".

The line key of the "Secretary 1" phone flashes.



The "Secretary 1" direct station selection key on the "Executive 1" phone also flashes.



Press the line key to answer the call. The station answers. The line key flashes **rapidly**.



The "Secretary 1" direct station selection key on the "Executive 1" phone illuminates.

#### Early call pickup by Executive 1

An incoming call for "Executive 1" rings on "Secretary 1". The "Secretary 1" direct station selection key on the "Executive 1" phone flashes. The "Secretary 1" has not yet answered the call. Before the call is forwarded to "Secretary 2", "Executive 1" picks up the call early.



Press the "Secretary 1" direct station selection key on the "Executive 1" key to answer the call.



If for example a call for "Executive 2" on "Secretary 2" is not answered, "Secretary 1" or "Executive 1" can pick up the call early

## Step by step

### Forward to Secretary 2

An incoming call for "Executive 1" rings at the assigned "Secretary 1". The call is **not** answered. After a specified period the call is forwarded to "Secretary 2". The line key of the "Secretary 2" flashes and it rings.



Press the line key on the "Secretary 2" phone to answer the call. The station answers. The "Secretary 2" direct station selection key on the "Executive 1" phone illuminates.



If "Secretary 1" is busy, the call is forwarded immediately to "Secretary 2" if:

- a consultation call is being made or
- "Allow call waiting" is deactivated.

### Second call

If "Secretary 1" receives a second call, this can be accepted, ignored, forwarded or rejected. Detailed information on this can be found from → page 67.

If the second call is ignored, it is forwarded to "Secretary 2" after a certain period of time.

If the second call was answered, it can be forwarded using consultation or the direct station selection keys.

### Connecting a call

If e. g. the "Secretary 1" answered a call, it can forward the call using the direct station selection keys to the following telephones:

- Executive 1
- Executive 2
- Secretary 2.

The following examples show connections to "Executive 1".

#### Connecting with consultation

Press the DSS "Executive 1" key. "Executive 1" answers. Announce the call.



or




Hang up or press the loudspeaker key.



You can also select "Complete Xfer" from the context menu.

### Step by step

Complete transfer



#### Connecting without consultation

Press the DSS "Executive 1" key. "Executive 1" does not answer.

Select and confirm the option shown in the pop-up menu.

Hang up or press the loudspeaker key. The "Executive 1" phone rings.

If "Executive 1" does not answer the call, so erfolgt ein Wiederanruf ( see also → page 72) nach einer eingestellten Zeit.



The "Executive 1" direct station selection key on the "Secretary 1" phone illuminates.

#### Consultation without connecting

Press the DSS "Executive 1" key. "Executive 1" answers. Transferring is **not** required. The "Secretary 1" takes the call back

Disconnect & return?

Select and confirm in the options menu. The "Secretary 1" is reconnected with the caller.

#### Toggle, disconnect or conference

During a consultation call "Secretary 1" can toggle between "Executive 1" and the caller, can initiate a conference or disconnect one of the two call parties. More on this subject can be found on pages → page 44 and → page 81.

#### DSS keys can be used

These keys are configured in such a way that every phone can be reached by every phone in the group. The DSS keys are also used for consultation calls.

Press a team member's DSS key. The relevant phone rings and the party answers.

Step by step

## Settings for MultiLine (keyset)

The details for each keyset line contain supplementary information for the user. The following uneditable fields are displayed:

- Address
  - Displays the phone number for the line
- Ringtone on/off
  - Displays whether this line's ringtone is active
- Selection sequence
  - Displays the priority of each line seizure when the handset is lifted or the loudspeaker key for this line is pressed

### Setting the time for a delayed ringer

Specify the length of time before a held call should be signaled on a line.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the User password.

Configuration

Select and confirm the option shown.

Keyset

Select and confirm the option shown.

Lines

Select and confirm the option shown.

Line 1

Select and confirm the required line (for example, line 1).

Ring delay

Select and confirm the option shown.



Enter and confirm a delay value.

Options = Save & exit

Select and confirm the option shown.

You can activate and deactivate the set delay time for all line keys using a function key → page 60.

### Step by step

## Line preview

### Activating via the line keys

**Prerequisite:** You are already on a call on one line and a further call rings on the secondary line. Service personnel have activated line preview.



Press the flashing line key. A popup window opens and you receive information about the caller.



Press the flashing line key to answer the second call.



If service personnel have deactivated the line preview, a call is answered immediately on a second line when the line key is pressed, without showing caller information.

### Activating via preview key

**Prerequisite:** You have programmed a sensor key with the "Preview" → page 56 . Your service personnel have activated the preview function.

Preview for a call:

You are already conducting a call on one line. A further call rings on a secondary line.



Press the "Preview" sensor key. A popup window opens and you receive information about the caller.



Press the "Preview" sensor key again to hide the preview or wait until the popup closes itself after a specified period of time.

Permanent preview



Press the "Preview" key in idle mode. This way the preview for all lines with "preview mode" remains active until you press the "Preview" sensor key again.

## Step by step

## Rollover for a line

Your service personnel can determine how rollover calls are to be signaled.



or



You hear a **special advisory tone** via the currently active microphone and the corresponding line key blinks.

or



The **ringer melody set sounds briefly** (approx. 3 seconds) via the loudspeaker and the corresponding line key blinks.

or



You hear a short **notification tone**



The ringer melody is not played in speakerphone mode.



The telephone rings using the configured call signal, the corresponding line key blinks, and a pop-up menu containing the available information is displayed.

Step by step

## Privacy/security

### Deactivating the ringer

You can deactivate your ring tone if you do not want to be disturbed by your phone ringing.



Hold down the key in idle mode until the "Ringer off" icon appears on the display.

**or** You can also deactivate the function using the option in the idle menu (→ page 23).



Select and confirm the option shown.

### Reactivating the ringer



Hold down the key in idle mode until the "Ringer off" icon disappears from the display.  
The ringer is reactivated.

**or** You can also activate the function using the option in the idle menu (→ page 23).



Select and confirm the option shown.

**or**

### Deactivating the ringtone with a key

**Prerequisite:** The "Ringer off" key must be programmed (→ page 56).



Press the "Ringer off" key.

An incoming call is signaled by a single ring tone burst.



Press the illuminated key once more to deactivate the "Ringer off" function.



## Step by step

## Do not disturb

If "Do not disturb" is activated, your telephone will not ring. The caller hears the busy signal. The "Do not disturb" function is activated/deactivated via the idle menu. → page 23



On multi-line telephones (→ page 12) you can only activate the "Do not disturb" function for your primary line.

**Prerequisite:** A programmable key is assigned the function "Do Not Disturb" (see → page 56). "Do not disturb" must be activated (→ page 106).

### Enabling do not disturb via a key



Press the "Do not disturb" programmable key.



Press the lit programmable key once more to deactivate the "Do not disturb" function.



You can also use the programmable key to activate the "Do not disturb" function during a call or deactivate it when an incoming call is being signaled.

or

### Enabling do not disturb via the idle menu

Do not disturb onf

Select and confirm the option shown in the idle menu. The "Do not disturb" icon appears → page 23.

or

Do not disturb off

Select and confirm the option shown. The do not disturb icon is deleted.

## Step by step

### Allowing "Do not disturb"



You can also configure this setting via the Web interface  
→ page 149.



Press the key shown.

User

Select and confirm the option shown.

**if nec.**

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Incoming calls?

Select and confirm the option shown.

Handling?

Select and confirm the option shown.

Allow DND = No

Select and confirm the option shown.

Yes

Select and confirm the option shown.

Options = Save & exit

Select and confirm the option shown.

## Step by step

## Security

## User password

Your User password protects your individual configurations, including your language settings. You can also use the User password to lock your telephone → page 109.



The preset password "000000" corresponds to a blank password. In other words, the phone cannot be locked and the user menu is **not** password-protected. (see also → page 108)



The User password can also be modified via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Security?

Select and confirm the option shown.

User password =



Select and confirm the option shown.



Enter a new password (at least six characters) and confirm (text entry, see → page 21).

Confirm password =



Select and confirm the option shown.



Enter the new password again and confirm with OK.

Options = Save & exit




Select and confirm the option shown.

## Step by step

### Deactivating the user password

You can deactivate the phone's password prompt if a password has already been configured.

 The deactivation of the password prompt does not affect the Web interface → page 149, Open-Stage Manager or CTI applications that use a password prompt. The password "000000" must be entered here.

If you deactivate the user password, you are **not** able to lock the phone → page 109 and the user menu is **not** password-protected.



Press the key shown.

User


Select and confirm the option shown.

if nec. 

Enter and confirm the user password.

Security?

Select and confirm the option shown.

User password = 

Select and confirm the option shown.


if applicable

Deletef

Select the option shown and use OK to erase characters from right to left in order to delete the old password.




Enter six zeros ("000000") to deactivate the password (for text input, see → page 21) and confirm.

Confirm password = 

Select and confirm the option shown.



Enter six zeros ("000000") once again and confirm.

Options = Save & exit 

Select and confirm the option shown.

## Step by step

## Locking the phone

You can lock your phone to protect it against unauthorized access. In this way, no one can make calls or change your user settings unless they know your user password.

Predefined numbers from the dial plan can still be dialed when the phone is locked - for more information consult your service personnel.

If an emergency number is entered by service personnel, "Emergency call" appears on the display when you use the line on a locked phone.



You can only lock the phone if you set a user password (→ page 107). The password for this must not be the default setting "000000".

### Activating the phone lock



Hold down the key shown.

Confirm lock?

Confirm the option shown. The "Locked phone" icon appears on the display → page 23.

or



Press the key shown.

User

Select and confirm the option shown.



Enter and confirm the user password.

Security?

Select and confirm the option shown.

Phone lock = No ▲

Select and confirm the option shown.

Yes ▼

Select and confirm the option shown.

Options = Save & exit ▼

Select and confirm the option shown. The phone is locked.

## Step by step

Unlock phone?



### Unlocking the phone

Confirm the option shown.

Enter the User password and confirm. The phone is unlocked if the password is correct.

---



Emergency numbers and predefined numbers from the dial plan can be dialed from a locked phone.

If the telephone is locked redial keys cannot be used. This also applies when emergency numbers or predefined numbers from the dial plan are stored on them.

---

## Step by step

## Mobility

**Prerequisite:** Your phone is configured to support mobility by service personnel. A DLS server is available in the LAN and its address is entered in the phone.

### Mobility scenarios

When you log on to your phone, or any other mobility-enabled phone, the following scenarios are possible:

#### Logging on and off at the same phone

- Log on as a mobility user → page 112.
- Log off as a mobility user → page 113.

#### Logging on and off at different phones

In these cases, service personnel may have made the following settings:

- Log on at a remote phone with forced logon, when the user is still logged on at that phone → page 114.
- Delayed logon at a remote phone with forced logon, when the user is still logged on at that phone and the phone is busy → page 115.

Step by step

## Logging on and off at the same phone

### Logging on to the phone

**Prerequisite:** No other mobility user is logged on.

#### Logon via a key

If one of the program keys is configured for the mobility function.

Press the "Mobility" program key.

or **Logon via a menu**

Mobile logon? ▾

Select from the idle display menu and confirm (→ page 23).

Mobility ID? ▾

Select and confirm the option shown.



Enter and confirm the mobility code (generally your official phone number: text editor, see → page 22).

User password= ▾

Select and confirm the option shown.



Enter the user password and confirm with OK (text editor, see → page 22).


Options = Logon ▾

Select and confirm the option shown.

Logon ▾

Select and confirm the option shown.

The following messages appear on the display: "Logging on mobile user Validating"

Once you have completed logon, the mobility icon is shown in the display.  .



## Step by step

## Logging off from the phone

**Prerequisite:** You are logged on as a mobility user.


 Press the "Mobility" program key.

**or** Logon via the phone menu.

 Mobile logoff?

Select from the idle display menu and confirm (→ page 23). The logoff procedure starts immediately.


**or** If you need to enter a password, you are given the option of selecting "Cancel".

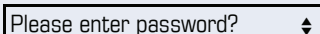 Please enter password?

Select and confirm the option shown.



Enter user password. **Attention:** Do not confirm your entry. (for a text editor, see → page 22).

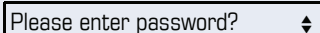
 Please enter password?

Select and confirm the option shown.



If you enter the password incorrectly, the following message appears: "User password invalid". You can cancel the function or retry the user password.

The logoff procedure begins. In the display, the following messages appear: Logging off mobile user.

After you have logged off, the mobility icon  is hidden.

Step by step

## Logging on at different telephones

An attempted login is rejected if the user is already logged on to another phone and "Logon with forced logoff" is disabled for the mobility user.

## Logging on with forced logoff at a remote phone

If the user is already logged on at another phone and the remote phone is busy, the logon is rejected.

If, however, your service personnel enabled "Forced logoff during call" without setting a time, the system does not consider whether or not the remote phone is busy.

### Logon via a key

If one of the program keys is configured for the mobility function.

Press the "Mobility" program key.

or **Logon via a menu**

Select from the idle display context menu (→ page 23) and confirm.

The **Mobility logon** dialog appears.

Select and confirm the option shown.



Enter and confirm the mobility code (generally your official phone number: text editor, see → page 22).


Select and confirm the option shown.



Enter and confirm the user password (text editor, see → page 22).

Select and confirm the option shown.

The following mobility messages appear in the display: Logging on mobile user Validating


The logoff is simultaneously displayed on the remote phone. Once logon is complete, the "Mobility" program key LED lights up and the mobility icon appears in the display .

## Step by step

## Logging on with forced, delayed logoff at a remote - phone

If the remote phone is busy and your service personnel enabled "Forced logoff during call" with a set timeout, forced logoff does not occur until this timeout expires.

### Logon via a key

 Press the "Mobility" program key. You are prompted to enter your mobility password.

### or Logon via a menu

Mobile logoff? 


Select from the idle display menu and confirm (→ page 23).

Mobility ID? 

Select and confirm the option shown.



Enter and confirm the mobility code (generally your official phone number: text editor, see → page 22).

User password = 

Select and confirm the option shown.



Enter and confirm the user password (text editor, see → page 22).


Logon 

Select and confirm the option shown

- The mobility message appears on the display:  
Logging on mobile user Validating



At the same time, the display on the busy remote phone shows "Forced logoff pending." After the timeout set by your service personnel, the active call is ended and remote logoff is performed.

Once logon is complete, the "Mobility" program key LED lights up and the mobility icon appears in the display .

## Step by step

### OpenScape Voice functions

The OpenScape Voice supports a number of functions that you can activate and deactivate from your phone.



On multi-line telephones, the full scope of OpenScape Voice functions is only available for the primary line.

### Feature toggle key

You can pick a programmable sensor key and program it as a feature toggle key for activating the "make line busy" and "stop hunt" functions.

You can then use the programmable sensor key to activate or deactivate the relevant OpenScape Voice function on the server for this phone.

You can only program first-level programmable sensor keys because those linked to LEDs are used to display function status as either **on** (LED on) or **off** (LED off). The LED indicates the status of the function on the server and can therefore change without any of the programmable sensor keys being pressed.

#### Example:

Switching between "Line busy" and "Line free" (see also → page 124).

**Prerequisite:** Your service personnel configured a programmable sensor key with the function "Busy" ("make line busy" for the hunt group) → page 59.



Press the programmable sensor key – the key lights up.



Press the illuminated programmable sensor key once again to release the line - the keys stops illuminating.

## Step by step

## Making anonymous calls

Your service personnel decides whether or not your caller ID (name and phone number) is displayed on a called party's station. **Anonymous** calling is when your data is not transmitted. The settings configured can be deactivated, however, for specific calls.



- If your caller ID is transmitted: your caller ID is displayed.
- If your caller ID is suppressed: "unknown" is displayed.

## Deactivating

If your service personnel permanently activated **anonymous calling** for your phone, you can deactivate this setting as follows:



Lift the handset.



Enter the code (see the table of codes → page 132) to transmit the caller information.



You hear a confirmation tone.

## Step by step

### Activating

If your service personnel activated caller ID transmission for your phone, you can deactivate this setting as follows:



Lift the handset.



Enter the code (see the table of codes → page 132) to suppress the caller ID.



Wait until you hear the confirmation tone.

Caller ID transfer is suppressed. "Private/Anonymous" appears on the called party's display instead of the caller ID.

### Temporarily activating anonymous calling for the next call

If your service personnel activated caller ID transmission for your phone, you can deactivate this setting for the next call as follows:



Lift the handset.



Enter the code (see the table of codes → page 132).



Wait until you hear the confirmation tone.



Dial the phone number of the party you want to contact.

Caller ID transmission is reactivated after this call.

**Step by step****Temporarily deactivating anonymous calling for the next call**

If your service personnel suppressed caller ID transmission for your phone, you can enable this setting for the next call as follows:



Lift the handset.



Enter the code (see the table of codes → page 132).



Wait until you hear the confirmation tone.



Dial the phone number of the party you want to contact. When you end this call, caller ID transmission is suppressed once again for the next call.

## Step by step

### Creating a list for selective calls

#### For call acceptance

You can create a list of the phone numbers from which you are willing to accept calls (also known as a selection list). Your service personnel know how long this list may be in the OpenScape Voice used on site in your facility.

A connection is set up if a caller's phone number matches a number in the selection list. If the caller's number does not appear in the list:

- the caller receives a message that the party refuses to accept any calls from this number,
- or**
- the call is forwarded to an external phone number.

Contact your service personnel for information on how your OpenScape Voice is configured on site.



Lift the handset.



Enter the code (see the table of codes → page 132).

Various announcements deliver the following information:

- the name of the feature (selective call acceptance)
- the current status (active or inactive)
- the current scope of the selection list.

These announcements are followed by verbal user prompts that let you:

- add entries to the selection list
- delete entries in the selection list
- check the selection list
- activate or deactivate the function.



## Step by step

## For call rejection

As for selective call acceptance, you can create a selection list with the phone numbers of parties from whom you are not willing to accept calls. Your service personnel know how long this list may be in the OpenScape Voice used on site in your facility.

A call is not connected if the caller's phone number matches a number in the selection list; the caller is notified that the called party rejects calls from this number. If the caller's number is not in the selection list, the call is to you as usual.



Lift the handset.



Enter the code (see the table of codes → page 132).

Various announcements deliver the following information:

- the name of the feature (selective call rejection)
- the current status (active or inactive)
- the current scope of the selection list.

These announcements are followed by verbal user prompts that let you:

- add entries to the selection list
- delete entries in the selection list
- check the selection list
- activate or deactivate the function.

## Step by step

### Anonymous calls

#### Rejecting

You can reject all calls from parties that activated a data protection feature (for example, caller ID suppression) to prevent their phone number from being transmitted. In this case, you are not informed that a call was rejected.



Lift the handset.



Enter the code (see the table of codes → page 132).

#### Accepting

You can also accept calls from parties that activated a data protection feature (for example, caller ID suppression) to prevent their phone number from being transmitted.



Lift the handset.



Enter the code (see the table of codes → page 132).

## Step by step

## Using abbreviated dialing

Abbreviated dialing gives you access to a central list of frequently dialed phone numbers.

You can dial a specific phone number by simply entering a digit string. As these are three-digit numbers, you can store up to 1000 phone numbers. This list is stored centrally and managed by your service personnel.



Lift the handset.



Enter the code (see the table of codes → page 132) followed by a number between 0 and 999 for the phone number you want to dial.

The number is automatically dialed.

## Call tracing

You can request automatic tracing of the last received internal call. This is particularly suitable for identifying malicious, irritating or troublesome calls.



Lift the handset.



Enter the code (see the table of codes → page 132). The phone number is determined. Ask your service personnel for the result.

## Step by step

### Hunt group functions

To ensure optimum handling of specific calls, your telephone can be assigned to a pickup group → page 37 and/or a hunt group.

Your service personnel can incorporate multiple telephones in a hunt group. If your telephone is assigned to a hunt group, OpenScape Voice forwards calls for the members of your group in accordance with specific rules defined by your service personnel. Hunt groups are a simple solution for distributing calls to a group of telephones.

If you want another member of the group to pick up an incoming call, you can set your telephone to signal the busy status for your line to the other members of the hunt group. Hunt group calls will then no longer be forwarded to your telephone.

### Making a line busy

This prevents this line being used for calls in a hunt group.

#### Activating



Lift the handset.



Enter the code (see the table of codes → page 132).



Wait until you hear the confirmation tone.

#### Deactivating

Make the line free once more for the hunt group.



Lift the handset.



Enter the code (see the table of codes → page 132).



Wait until you hear the confirmation tone.

**Step by step****Marking the last line in the hunt group chain**

Sets the "stop hunt" line in the hunt group chain. The system will stop looking for a free line in the hunt group chain after it reaches this line.

**Activating**

Lift the handset.



Enter the code (see the table of codes → page 132).



Wait until you hear the confirmation tone.

**Deactivating**

Unmark the line as the end of the hunt group chain.



Lift the handset.



Enter the code (see the table of codes → page 132).



Wait until you hear the confirmation tone.

## Step by step

## Reachability

You can make either serial calls or simultaneous calls on several sites. The features for this are

- Serial call
- Parallel call

**Prerequisite:** The service personnel has configured the respective feature for your main number in OpenScape Voice.

### Serial call

#### Managing number lists/activating serial call

Before the serial call number can be activated, a serial call list must be created. This can be prepared either by service personnel or you can create it yourself later. Up to six numbers can be entered in the list for sites on which incoming calls including your main number should be signaled sequentially. Each number can consist of up to 30 digits.



Lift the handset.

Enter the code for the edit mode (see code table → page 132).

The edit mode opens and you hear an announcement with the following information:

- Feature name
- Current status (active/inactive)
- Number of numbers currently on the serial call list

You are prompted to do one of the following:

- Activate/deactivate the feature (only if numbers are already entered in the list)
- Call up the numbers currently entered in the list.
- Add or delete numbers
- Repeat the options in edit mode

If the serial call list is still empty, you are prompted to enter numbers in the list. As soon as you have entered a valid number, the serial call can be activated.

If the serial call is activated, incoming calls are first routed to your phone. If you do not answer within the time-frame defined by the service personnel, the next destination phone rings for the configured period of time.

## Step by step

The caller is informed that the call is being routed to another station. The connection is established with the first phone that accepts the call.

If the call is not answered by any phone, it is forwarded to the configured forwarding destination (on no reply) or to a "rejection announcement".

## Parallel call

### Managing number lists/activating parallel call

Before the parallel call feature can be activated, a parallel call list must be created. This can be prepared either by service personnel or you can create it yourself later. Up to six numbers can be entered in the list for sites on which incoming calls including your main number should be signaled sequentially. Each number can consist of up to 30 digits.



Lift the handset.



Enter the code for the edit mode (see code table → page 132).

The edit mode opens and you hear an announcement with the following information:

- Feature name
- Current status (active/inactive)
- Number of numbers currently on the parallel call list

You are prompted to do one of the following:

- Activate/deactivate the feature (only if numbers are already entered in the list)
- Call up the numbers currently entered in the list.
- Add or delete numbers
- Repeat the options in edit mode

If the parallel call list is still empty, you are prompted to enter numbers in the list. As soon as you have entered a valid number, the parallel call can be activated.

If the parallel call is activated, incoming calls are routed to your phone and all other destination phones in the parallel call list. The connection is established with the first phone that accepts the call.

If the call is not answered by any phone, it is forwarded to the configured forwarding destination (on no reply) or to a "rejection announcement".

## Step by step

### Activating/deactivating parallel call via code

You can activate/deactivate the parallel call without having to change to edit mode.

**Prerequisite:** You have already entered numbers in the parallel call list.



Lift the handset.



Enter the code to activate or deactivate the parallel call (see code table → page 132).



## Step by step

## Parking a call

If you have answered a call for a colleague and cannot forward it to him, you can park the call.

### Park a call



You are conducting the call. Let the other party know, e.g. that you are trying to connect him.



Enter the code for parking followed by a line number (see code table → page 132).

You receive a confirmation tone. The caller hears a waiting melody.



Replace the handset

Tell your colleague that a call for him is parked and give him the line number.

### Unparking

To unpark the call, your colleague must proceed as follows:



Lift the handset.



Enter the unparking code (see code table → page 132). He is prompted to enter a line number.



Enter the specified line number.



Your colleague is now connected with the waiting caller.


## Step by step

## Silent Monitoring

If this function has been configured by service personnel and enabled for the destination phone, you can join an active call of an internal station and listen in unnoticed (muted) or with the knowledge of the target station (active).

### Active silent monitoring

Station A and B are on a call. You want to listen to the call but so that Station B does not notice but so that you can still talk to Station A.

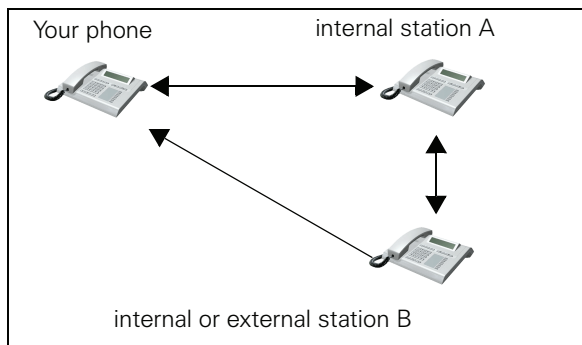

- You can hear and talk to station A.
- You can hear station B but cannot talk to him because he cannot hear you.
- Station A and B can hear and speak to each other.



Lift the handset.



Enter the code for active silent monitoring and the destination number (see code table → page 132). You are connected to the call and can listen. If necessary notify station A.




End the silent monitoring unnoticed by replacing the handset.

## Step by step

**Muted silent monitoring**

Station A and B are on a call. You want to monitor a call but so that neither station notices.

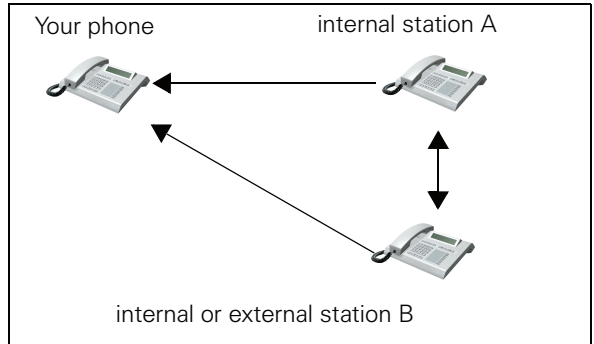

- You can hear station A but cannot talk to him because he cannot hear you
- You can hear station B but cannot talk to him because he cannot hear you.
- Station A and B can hear and speak to each other



Lift the handset.



Enter the code for active silent monitoring and the destination number (see code table → page 132). You are connected to the call and can listen.



End the silent monitoring unnoticed by replacing the handset.

## Code table for OpenScape Voice functions

Ask your service personnel to enter the latest codes in the following table. Print this page as an overview.

Function	Code	Description
Making anonymous calls off		→ page 117
Making anonymous calls on		→ page 118
Making anonymous calls temporarily on		→ page 118
Making anonymous calls temporarily off		→ page 119
List for selective call acceptance		→ page 120
List for selective call rejection		→ page 121
Rejecting anonymous calls		→ page 122
Accepting anonymous calls		→ page 122
Using abbreviated dialing		→ page 123
Call tracing		→ page 123
Making a line busy on		→ page 124
Making a line busy off		→ page 124
End of hunt group chain on		→ page 125
End of hunt group chain off		→ page 125
Edit mode for serial call		→ page 126
Edit mode for parallel call		→ page 127
Activating a parallel call		→ page 128
Deactivating a parallel call		→ page 128
Parking a call		→ page 129
Unparking a call		→ page 129
Active silent monitoring		→ page 130
Muted silent monitoring		→ page 131

## Step by step


## Individual phone configuration

## Display

## Setting contrast

The display has multiple contrast levels that you can set according to your light conditions.



You can also configure this setting via the Web interface  → page 149.



Press the key shown.

Select and confirm the option shown.



if nec. 

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.

 or 

Set and confirm the contrast

Select and confirm the option shown.

### Step by step

## Date and Time

This function allows you to select one of three different display modes for the date and manually set the time if necessary.



You can also configure these settings via the Web interface → page 149.

### Setting the time



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Date and time?

Select and confirm the option shown.

Time = 14:44



Select and confirm the option shown. The time set is displayed.



Enter and confirm the time.

Options = Save & exit



Select and confirm the option shown.

### Setting the date



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Date and time?

Select and confirm the option shown.

Date = 20.02.2007



Select and confirm the option shown. The date set is displayed.



Enter and confirm the date.

Options = Save & exit



Select and confirm the option shown.

## Step by step

## Setting daylight saving time

**Prerequisite:** **Auto DST** is deactivated → page 136.

You can also configure this setting via the Web interface → page 149.



Press the key shown.



Select and confirm the option shown.

User

if nec.



Enter and confirm the user password.

Date and time?

Select and confirm the option shown.

Daylight saving = No



Select and confirm the option shown. The time set is displayed.

Yes



Confirm the option shown.

Options = Save & exit



Select and confirm the option shown.

## Setting the difference between daylight saving and standard time

**Prerequisite:** **Auto DST** is deactivated → page 136.

Enter the difference to be used for daylight saving time.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Date and time?

Select and confirm the option shown.

Difference (mins) = 60



Select and confirm the option shown. The difference set is displayed.



Enter and confirm the difference between daylight and standard time in minutes.

Options = Save & exit



Select and confirm the option shown.

## Step by step

### Automatic daylight saving time

The **Auto DST** setting is provided for information purposes and can only be changed by your service personnel.



You can also access this information via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec. 

Enter and confirm the user password.

Date and time?

Select and confirm the option shown.

Daylight saving time must be manually set if a **No** is entered for **Auto DST** → page 135.



## Step by step

## Time display format



You can also configure this setting via the Web interface  
→ page 149.



Press the key shown.

Select and confirm the option shown.

**if nec.**



Enter and confirm the user password.

Select and confirm the option shown.

 ▲

Select and confirm the option shown. The format set is displayed.

 ▼

Select and confirm the time format (12- or 24-hour display).

 ▼

Select and confirm the option shown.

### Step by step



You can also configure this setting via the Web interface  
→ page 149.



Press the key shown.

User

Select and confirm the option shown.

**if nec.**

Enter and confirm the user password.

Locality?

Select and confirm the option shown.

Date format = dd/mm/yyyy

Select and confirm the option shown. The format set is displayed.

yyyy/mm/dd

Select and confirm the format you want.

Options = Save & exit

Select and confirm the option shown.

### Date display format

## Step by step

## Audio

## Volumes

Use this selection to set the following volumes:

- Loudspeaker
- Ringer
- Handset
- Handsfree



You can also configure this setting via the Web interface  
→ page 149.

Example: **Handset**:



Press the key shown.

Select and confirm the option shown.

if nec.




Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select and confirm the option shown.



or



Set and confirm the volume.

Select and confirm the option shown.

## Step by step

### Settings

#### Room character

To ensure that the other party can hear you properly in speakerphone mode, you can adjust the phone to the room acoustics by choosing one of the following room character conditions: "Normal", "Echoing", "Muffled" .



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Room character = Normal

Select and confirm the room character in the context menu (for example, "Normal").

Options = Save & exit

Select and confirm the option shown.

#### Ringtone

If your service personnel has loaded suitable files to the phone, you can select a realtone file in \*.mp3 or \*.wav format for the ringer tone. If no individual audio files are available the "pattern" ringtone is preset.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

## Step by step

Ringer file

Select and confirm the option shown.

ABC.wav

Select required ringtone file<sup>[1]</sup> or "pattern". You will immediately hear the associated ringer melody. Confirm current ringtone file.

Options = Save & exit

Select and confirm the option shown.



You can also configure this setting via the Web interface → page 149.

**Prerequisite:** You have chosen the "pattern" ringtone, see → page 140.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Ringer melody = 2

Select the required pattern melody<sup>[2]</sup> between 1 and 8 (e. g. **4**). You will immediately hear the corresponding Ringer melody. Confirm the selected Ringer melody.

Save & exit

Select and confirm the option shown.

### Pattern sequence



You can also configure this setting via the Web interface → page 149.

**Prerequisite:** You have chosen the "pattern" ringtone, see → page 140.



Press the key shown.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

1. The phone displays the current setting.
2. The phone displays the current setting.


### Step by step

Audio


Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Ringer tone sequence = 2 

Select the required Ringer tone sequence between 1 and 3 (e. g. **2**) You immediately hear the set Ringer melody with the select Ringer tone sequence. Confirm the selected setting.

Options = Save & exit 

Select and confirm the option shown.

### Country setting for speakerphone mode

Enter the country setting you prefer for speakerphone mode here (see → page 34).



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

**if nec.** 

Enter and confirm the user password.

Audio


Select and confirm the option shown.

Settings?

Select and confirm the option shown.

Open listening = Standard mode

Select and confirm the setting you want in the context menu ("Standard mode" or "US mode).

Options = Save & exit 

Select and confirm the option shown.

## Step by step

## Tone and indication with an unsecured voice connection

Use this option to activate an alerting tone that you hear when a secure voice connection with the party you are currently talking to ceases to be secure. The message "Nonsecure connection" also appears.

**Prerequisite:** Secure connection setup is the preference set by your service personnel.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the User password.

Configuration

Select and confirm the option shown.

Connected calls

Select and confirm the option shown.

Secure call alert

Select and confirm the option shown.

Yes

Select and confirm the option shown in the context menu.

Save & exit

Select and confirm the option shown.

## Step by step

# Setting the language and country

## Selecting a language

Use this menu option to select the language for operator prompting.



You can also configure this setting via the Web interface → page 149.



Press the key shown.

User

Select and confirm the option shown.

**if nec.**

Enter and confirm the user password.

Locality?

Select and confirm the option shown.

Speech = Deutsch

Select and confirm the option shown. The language set is displayed.

English

Select and confirm to set the required language, in our example, English.

Options = Save & exit

Select and confirm the option shown.



**Step by step****You may choose from the following languages:**

1. Bahasa Indonesia
2. Bahasa Malaysia
3. Brasileiro
4. Català
5. Čeština
6. Dansk
7. Deutsch
8. English
9. English(US)
10. Español
11. Français
12. Hrvatski
13. Italiano
14. Latviešu Valoda
15. Lietuvių Kalba
16. Magyar
17. Nederlands
18. Norsk
19. Polski
20. Português
21. Română
22. Slovenčina
23. Slovenski Jezik
24. Srpski Jezik
25. Suomi
26. Svenska
27. Tiếng Việt
28. Türkçe
29. Ελληνικά
30. Български
31. Македонски Јазик
32. Русски
33. Српски Језик
34. 中文

## Step by step



User

if nec.

Locality?

Country = Germany

United States

Options = Save & exit

## Locality

Adapt your phone settings to suit the relevant country-specific conditions (for example, transmission parameters).

You can also configure this setting via the Web interface → page 149.

Press the key shown.

Select and confirm the option shown.

Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown. The country set is displayed.

Select and confirm to set the country<sup>[1]</sup>, here US, for instance.

Select and confirm the option shown.

You may choose from the following countries:

- |                    |                        |
|--------------------|------------------------|
| 1. Argentina       | 20. Luxembourg         |
| 2. Australia       | 21. Mexico             |
| 3. Austria         | 22. Netherlands        |
| 4. Belgium         | 23. New Zealand        |
| 5. Brazil          | 24. Norway             |
| 6. Canada          | 25. Poland             |
| 7. China           | 26. Portugal           |
| 8. Chile           | 27. Russian Federation |
| 9. Croatia         | 28. Singapore          |
| 10. Czech Republic | 29. Slovakia           |
| 11. Denmark        | 30. South Africa       |
| 12. Finland        | 31. Spain              |
| 13. France         | 32. Sweden             |
| 14. Germany        | 33. Switzerland        |
| 15. Hungary        | 34. Thailand           |
| 16. India          | 35. United Kingdom     |
| 17. Ireland        | 36. United States      |
| 18. Italy          | 37. Vietnam            |
| 19. Japan          |                        |

1. The phone displays the current setting.

## Step by step

## Network information

This overview in the user area of the Service menu provides you with information about the IP address of the phone and the HTML address of the Web interface. It also provides real-time data about the network activity of the phone.



Press the key shown.

User

Select and confirm the option shown.

if nec.

Enter and confirm the user password.

Network information

Select and confirm the option shown. You can browse the following overview:

**IP Address:** Displays the IP address or name which was assigned to the phone in the network.

**WBM URL:** HTTP address of the Web interface. This address is specified in the address line of the Internet browser and is used to call the Web interface of the phone in the browser.

**DNS domain:** The DNS domain that can be assigned to the telephone in addition to the IP address (e.g. http://my-openStage.phone/).

**LAN/PC-RX:** The network or PC interface data packets received are illustrated dynamically as columns.

**LAN/PC-TX:** The network or PC interface data packets sent are illustrated dynamically as columns.

**LAN/PC autonegotiated: [Yes|No]:** Displays whether the network or PC interface data transfer rate is set to automatic (**Yes**) or manual (**?No**).

**LAN/PC information: [10|100|1000] Mbit/s:** Data transfer rate of the network or PC interface. If an interface is not in use, **Link down** is displayed.

## Step by step

### Resetting user data

The following user-specific settings changed via the phone menu or the Web interface can be reset to factory settings.

- Display contrast
- Language setting
- Audio settings
  - Volumes
  - Settings
- Call lists
  - All entries are deleted.
- Programmable keys
  - All personalized programming is deleted (see also → page 61).

**Important:** All data is reset **without** a warning tone.

### Initiating the reset



Press the key shown until the "Einstellungen" tab is active.

User

Confirm the option shown.

if nec.



Enter and confirm the user password.

Reset

Select and confirm the option shown.

Reset all user data

Select and confirm the option shown. The user data is reset to factory settings.

# Web interface

## General

You can configure a number of settings for your phone via the Web interface. Communication is via a secure HTTPS connection.

## Calling up the Web interface



For more information on the IP address, the Web interface address, and how to connect the telephone to the network, refer to the section entitled "Network information" → page 147.

To call up the interface, open a Web browser and enter the following:

**https://[IP address of the phone]**

[IP address of the phone] is the IP address of your phone.

**https://[Name of the phone]**

[Name of the phone] which was assigned by service personnel.



You might receive a certificate notification from the browser. Follow the instructions to download the certificate.

You will be prompted to configure a user password the first time you call up the Web interface → page 107. You must log on with this password in future every time you want to open the User Pages.

## Administrator Pages

This area lets you configure settings for administering your phone and the network environment. Access to the Administrator Pages is protected by the admin password. For more information, contact your service personnel or refer to the administration manual.

## User pages

The Web interface homepage opens once you have entered and confirmed the phone's IP address:

The screenshot displays the Siemens web interface. At the top, the Siemens logo is on the left, and the phone's status is shown on the right: "Phone number 1565", "Phone IP address 192.168.1.201", and "DNS name 192.168.1.201". Below the header, there are two tabs: "User Pages" (highlighted) and "Administrator Pages". A "Logout" button is located in the top right corner. The main content area is divided into two sections. On the left is a "User login" menu with categories: "Date and Time", "Audio", "Configuration", "Outgoing calls", "Incoming calls" (with sub-entries: "Deflecting", "Forwarding", "Handling", "CTI calls", "Connected calls", "BLF"), and "Phone" (with sub-entries: "Display", "Program keys", "Locality", "Authentication"). The "Incoming calls" category is highlighted. On the right is a "User login" form with the label "Enter User password:" and two buttons: "Login" and "Reset". Below the form is a small text block: "Manufactured by Siemens Enterprise Communications GmbH & Co. KG under Trademark License of Siemens AG".

Labels in the diagram point to various elements:

- User menu**: Points to the left-hand menu.
- User selection**: Points to the "User Pages" tab.
- Phone information**: Points to the phone status text in the top right.
- Highlighted entry (current page)**: Points to the "User Pages" tab.
- Menu heading**: Points to the "Incoming calls" category in the menu.
- Menu entry**: Points to the "Deflecting" sub-entry.
- User login**: Points to the "User login" form.

1. Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
2. Click a menu entry to open the corresponding form.
3. Make the desired changes.
4. Click the corresponding button to save or discard your changes.

### Button functions

- "Login": Log on to the phone after you have entered the user password
- "Submit": Apply changes
- "Reset": Reset original values
- "Refresh": Update the values.
- "Logout": Log off the phone






## User menu

All settings that you can make via the Web interface's user menu can also be made via the phone's user menu


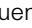



### User Pages

User login  → page 107


















#### Date and Time

















- Local time  → page 134
- Local date (day, month, year)  → page 134
- Use daylight saving  → page 135
- Difference (minutes)  → page 135
- Auto time change  → page 136

#### Audio

- Ringer melody ( → page 141)
- Ringer tone sequence ( → page 141)
- Ring file ( → page 140)
- Room Character ( → page 140)
- Open listening ( → page 142)

### Configuration

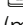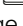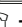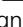



- Outgoing calls
  - Autodial delay (seconds)  → page 78
  - Allow callback: busy  → page 54
  - Allow callback: no reply  → page 54
  - Allow busy when dialing  → page 80
  - Allow transfer on ring  → page 74
  - Allow immediate dialing → page 41
- **Incoming calls**
  - Deflecting
    - Allow deflection ( → page 62)
    - Default deflect destination  → page 62
  - Forwarding
  - Settings
    - Forwarding Favorites Destination 1 to Destination 5  → page 47
    - Forward all calls allowed  → page 51
    - to  → page 48
    - Forward on busy allowed  → page 51
    - to  → page 48
    - Forward on no reply allowed  → page 51
    - to  → page 48
    - No reply delay (seconds)  → page 49
  - Alerts
    - Visual alerts  → page 50
    - Audible alerts  → page 50
    - Forwarding party → page 52

- Handling
  - Allow call waiting  → page 70
  - Allow DND  → page 106
  - Allow busy when dialing  → page 80
- CTI-Calls
  - Allow auto-answer  → page 75
  - Allow beep on auto-answer  → page 75
  - Allow auto-reconnect  → page 76
  - Allow beep on auto-reconnect  → page 76
- Connected calls
  - Allow call transfer  → page 73
  - Allow call joining  → page 45
  - Allow exit conference  → page 83
  - Allow hold reminder  → page 65
  - Hold reminder delay (minutes)  → page 65
  - Allow music on hold  → page 66
  - Allow conferences  → page 82
  - Allow secure call signaling  → page 143
  - Toggle associate → page 71
- Keypad
  - Lines
    - Ring delay (seconds) 
    - Address<sup>[1]</sup>
    - Primary line<sup>[1]</sup>
    - Ring on/off<sup>[1]</sup>
- BLF
  - Busy Lamp Field: **not** for OpenScope Voice

### Phone

- Display
  - Contrast  → page 133
- Program keys
  - Normal
    - Edit.  → page 57 .
  - Shifted
    - Edit.  → page 57.
- Key Module (if available such as Program keys)

### Locality

- Country  → page 146
- Language  → page 144
- Date format  → page 138
- Time format  → page 137

### Authentication

- Old password
- New password V → page 107
- Confirm password

[1]. Information - read only



## Fixing problems

### Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use cleaning fluids containing alcohol or plastic-damaging detergents to clean the telephone. The use of scouring agents is also forbidden.

### Troubleshooting

#### **Pressed key does not respond:**

- Check if the key is stuck.
- If the telephone is locked redial keys cannot be used. This also applies when emergency numbers or predefined numbers from the dial plan are stored on them.

Check whether your telephone is locked ("Phone locked. To unlock enter the PIN" appears on the screen). If the phone is locked unlock it.

#### **The phone does not ring on call:**

Check whether the ringtone is deactivated (see icon in the status bar on the display → page 105). If it is deactivated, activate the ringtone.

#### **You cannot dial a number:**

Check whether your telephone is locked ("Phone locked" appears on the screen. To unlock enter the PIN. ). If the phone is locked, unlock it.

#### **To correct any other problems:**

First contact the relevant service personnel. If the service personnel are unable to correct the problem, contact Customer Service.

### Contact partner in the case of problems

Contact your service personnel if a fault persists for more than five minutes, for example.

### Labeling keys

The following options are available for labeling keys of the OpenStage 15 and/or OpenStage Key Module 15 with the functions assigned to them or the saved numbers on them:

#### Labeling

- By hand:  
Labeling strips are supplied with your OpenStage 15 and OpenStage Key Module 15. Note the function or name in the white field on the strip and insert the strip on your OpenStage 15 or OpenStage Key Module 15.
- With a computer via the Internet:  
You can find the "online labeling tool" together with the user interface at [http://wiki.siemens-enterprise.com/index.php/Key\\_Labeling\\_Tool](http://wiki.siemens-enterprise.com/index.php/Key_Labeling_Tool) .
- Select the appropriate key labeling tool in your language. You can use the tool online via the browser or you can download it for local use.

# Index

## A

Accepting calls	
multi-line	87
Administration	29
Allowing call joining	45
Alternating	44
Application	75
Audio	
room character	140
Autodial delay	78
AutoReconnect	76

## B

Busy override	93
---------------	----

## C

Call	
accepting	31
deflect	62
ending	36
forwarding	46
holding	64
incoming	30
rejecting	63
transfer	72
Call forwarding	
activating/deactivating	51
programming	47
Call forwarding chain	52
Call forwarding information	89
Call list	55
Call lists	86
Call log	26, 55
Call settings	
CTI calls	140
multi-line	101
Call waiting	67
Call waiting (second call)	67

Callback	53
Calls	75
CE marking	2
Conference	81
Connecting parties	45
Connection options	14
Consultation	44
Consultation call from second call	67
Context	41
Context menus	24
Contrast	133
CTI	75

## D

Date and Time	134
Date format	138
Daylight saving	135
Dial plan	78
Display contrast	133
Do not disturb	105
DSS call	
call deflection	96
DSS key	
consultation	94
indirect pickup	95
reject call	95
During calls	
multi-line	90

## F

Forced logoff	115
Forwarding	46
Forwarding primary line	89
Function key	
programmable	18

## G

General information	10
Group call	37

**H**

Hold function ..... 64  
 Hold reminder tone ..... 65  
 Hot line ..... 42  
     for lines ..... 92

**I**

Idle mode ..... 23  
 Immediate dialing ..... 41, 78  
 Important information ..... 2, 3  
 Incoming calls  
     multi-line ..... 87

**K**

Keypad ..... 21

**L**

Language settings ..... 144  
 LED display  
     direct station selection keys ..... 18  
     function keys ..... 18  
 Line preview ..... 102  
 Line utilization ..... 19  
 Lines  
     hot/warm line ..... 92  
 Locality ..... 142, 146  
 Location of the telephone ..... 3  
 Locking the phone ..... 109  
 Logging on and off  
     as a mobility user ..... 112, 114

**M**

Mailbox key ..... 13, 17  
 Making calls  
     multi-line ..... 88  
 Menu key ..... 13, 17  
 Microphone ..... 36  
 Missed calls ..... 55  
 Mobility ..... 111  
     forced logoff ..... 115  
     logon, logoff ..... 112, 114

Multi-line

    accepting calls ..... 87  
     busy override ..... 93  
     LED display ..... 20, 96  
 Multi-line telephone ..... 12  
 Music on hold ..... 66

**N**

Normal dialing ..... 41

**O**

Open listening ..... 35  
 OpenScape Voice ..... 116  
     accepting anonymous calls ..... 122  
     call tracing ..... 123  
     creating a list for selective calls ..... 120  
     feature toggle key ..... 116  
     functions ..... 116  
     hunt group ..... 124  
     making anonymous calls ..... 117  
     parallel call ..... 127  
     parking ..... 129  
     reachability ..... 126  
     rejecting anonymous calls ..... 122  
     serial call ..... 126  
     silent monitoring ..... 130  
 Operating instructions ..... 2

**P**

Padlock icon ..... 30  
 Parallel call ..... 127  
 Parking ..... 129  
 Party connection ..... 45  
 Phantom line ..... 19  
 Phone settings ..... 133  
 Picking up the held call ..... 33  
 Primary line ..... 19  
 Privacy ..... 104  
 Private line ..... 19  
 Program/Service menu ..... 27  
 Programmable function key ..... 18  
 Programmable sensor keys ..... 56  
 Programming call forwarding ..... 47

**R**

Reachability .....	126
Redial .....	43
Redialing	
multi-line .....	89
Redial keys .....	77
Ringer melody .....	141
Ringer off .....	104
Ringtone sequence .....	141

**S**

Second call	
ignoring .....	68
Second call with consultation call .....	67
Secondary line .....	19
Security .....	104, 107
Sensor keys	
immediate ring .....	60
Serial call .....	126
Service menu .....	27
Setting the time .....	134
Settings .....	27, 133
Shared line .....	19
Silent monitoring .....	130
Single-line telephone .....	12
Speakerphone distance .....	3
Speakerphone mode .....	31, 34

**T**

Telephone maintenance .....	153
Time display format .....	137
Troubleshooting .....	153

**U**

User interface	
OpenStage 15 .....	13
User password .....	107
User support .....	11
Using Ethernet switches .....	15
Using network ports more efficiently .....	15

**W**

Warm line .....	42
for lines .....	92
Web interface .....	149

## Communication for the open minded

**Siemens Enterprise Communications**  
[www.siemens.com/open](http://www.siemens.com/open)

Copyright © Siemens Enterprise  
Communications GmbH & Co. KG  
Hofmannstr. 51  
80200 München  
Deutschland

Siemens Enterprise  
Communications GmbH & Co. KG  
is a Trademark Licensee of Siemens AG

Reference No:  
A31003-S2000-U132-3-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract. Availability and technical specifications are subject to change without notice. OpenScape, OpenStage and HiPath are registered trademarks of Siemens Enterprise Communications GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.