

PS20

Personal Shopper



ZEBRA

Product Reference Guide for Android™

2024/02/28

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. Google, Android, Google Play and other marks are trademarks of Google LLC. All other trademarks are the property of their respective owners. ©2023 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements.

For further information regarding legal and proprietary statements, please go to:

SOFTWARE: zebra.com/linkoslegal.

COPYRIGHTS: zebra.com/copyright.

PATENTS: ip.zebra.com.

WARRANTY: zebra.com/warranty.

END USER LICENSE AGREEMENT: zebra.com/eula.

Terms of Use

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Contents

About this Guide.....	11
Configurations.....	11
Notational Conventions.....	12
Icon Conventions.....	12
Service Information.....	12
Determining Software Versions.....	13
Determining the Serial Number.....	13
Getting Started.....	14
Unpacking the Device.....	14
Device Features.....	15
Setting Up the Device.....	16
Scan Key.....	17
Charging the Battery.....	17
Replacing the Battery.....	20
Powering On the Device.....	22
Zebra Visibility Services.....	22
Using the Device.....	23
Home Screen.....	23
Setting Home Screen Rotation.....	24
Status Bar.....	25
Managing Notifications.....	28
Opening the Quick Access Panel.....	29
Battery Management.....	32

Checking Battery Status.....	33
Monitoring Battery Usage.....	33
Low Battery Notification.....	33
Interactive Sensor Technology.....	33
Waking the Device.....	34
USB Communication.....	34
Transferring Files.....	34
Transferring Photos.....	34
Disconnecting from the Host Computer.....	35
Settings.....	36
Accessing Settings.....	36
Display Settings.....	36
Setting the Screen Brightness Manually.....	36
Setting the Screen Brightness Automatically.....	36
Setting Night Light.....	37
Setting Screen Rotation.....	37
Setting Screen Timeout.....	37
Setting Dark Theme.....	38
Setting Colors.....	38
Setting Charging LED Light.....	38
Setting the Screen Saver.....	39
Setting Ambient Display.....	39
Setting Font Size.....	39
Setting Touch Panel Mode.....	40
Setting the Date and Time.....	40
General Sound Settings.....	40
Sound Options.....	41
Remapping a Button.....	41
Keyboards.....	42
Keyboard Configuration.....	42
Using the Android and Gboard Keyboards.....	42
Enterprise Keyboard.....	43
Language Usage.....	44

Notifications.....	44
Setting App Notifications.....	45
Viewing Notifications.....	46
Controlling Lock Screen Notifications.....	46
Applications.....	47
Installed Applications.....	47
Accessing Apps.....	48
Switching Between Recently Used Apps.....	48
Battery Manager.....	49
Opening Battery Manager.....	49
Battery Manager Information.....	49
Camera.....	51
Taking Photos on Android 11.....	51
Taking Photos on Android 13.....	53
Recording Videos on Android 11.....	54
Recording Videos on Android 13.....	55
Camera Settings on Android 11.....	56
Camera Settings on Android 13.....	58
Updating Cradle Firmware.....	59
Sending the File Using the Recovery Method.....	61
Cradle Utility.....	62
Controlling the Cradle.....	62
Setting the Cradle.....	63
Performing Cradle Diagnostics.....	65
Viewing Cradle Information.....	66
Smart Cradle Configuration.....	66
Support.....	66
Prerequisites and Assumptions.....	67
Error Prevention.....	67
Accessing CradleSmartConfig.....	67
Using CradleSmartConfig.....	67
Auditing.....	71
Wall Map Examples.....	74

DataWedge Demonstration.....	75
DataWedge Demonstration Icons.....	75
Selecting a Scanner.....	75
Enterprise Browser.....	76
Enterprise Browser Application.....	76
RxLogger.....	77
RxLogger Configuration.....	77
Configuration File.....	77
Enabling Logging.....	78
Disabling Logging.....	78
Extracting Log Files.....	78
Backing Up Data.....	78
RxLogger Utility.....	78
Data Capture.....	80
Scanning Considerations.....	80
Scanning Barcodes.....	81
Decode Screen Notification.....	83
Hands-Free Scanning.....	84
Scanning Mode.....	85
Proximity Range.....	86
DataWedge.....	86
Enabling DataWedge.....	86
Disabling DataWedge.....	87
Supported Decoders.....	87
SE2100 Internal Imager Supported Decoders.....	87
SE4710 Internal Imager Supported Decoders.....	88
Wireless.....	89
Wireless Local Area Networks.....	89
Connecting to a Wi-Fi Network.....	90
Removing a Wi-Fi Network.....	91
WLAN Configuration.....	91

Configuring a Secure Wi-Fi Network.....	91
Manually Adding a Wi-Fi Network.....	92
Configuring for a Proxy Server.....	94
Configuring the Device to Use a Static IP Address.....	94
Wi-Fi Preferences.....	95
Additional Wi-Fi Settings.....	95
Wi-Fi Direct.....	96
Bluetooth.....	96
Adaptive Frequency Hopping.....	97
Security.....	97
Bluetooth Profiles.....	98
Bluetooth Power States.....	98
Bluetooth Radio Power.....	98
Discovering Bluetooth Device(s).....	99
Changing the Bluetooth Name.....	99
Connecting to a Bluetooth Device.....	99
Selecting Profiles on the Bluetooth Device.....	100
Unpairing a Bluetooth Device.....	100
Cast.....	100
Accessories.....	101
Device Accessories.....	101
Installing the Single Slot Cradle.....	104
Charging Modes.....	104
Mounting the Single Slot Cradle on a Dispenser Wall.....	105
Wiring.....	107
Assembly.....	108
System Cabling.....	110
Installing the Three Slot Cradle.....	111
Mounting Configurations.....	111
Charging Modes.....	113
Mounting the Three Slot Cradle on a Dispenser Wall.....	116
Releasing the Device from the Charging Cradles.....	121
Software Release Using the Menu.....	122

Software Release Using the Cradle Utility.....	122
Manual Release Using a Release Key.....	122
USB Programming Cable.....	124
Installing the USB Programming Cable.....	124
Connecting the Device to the Host Computer.....	125
Removing the USB Programming Cable.....	125
Soft Holster.....	126
Using the Belt Clip.....	126
Using the Shoulder Strap.....	128
Application Deployment.....	130
Security.....	130
Secure Certificates.....	130
Installing a Secure Certificate.....	130
Configuring Credential Storage Settings.....	131
Android Development Tools.....	131
Android Development Workstation.....	131
Enabling Developer Options.....	131
EMDK for Android.....	132
StageNow for Android.....	132
GMS Restricted.....	132
ADB USB Setup.....	133
Enabling USB Debugging.....	133
Application Installation Methods.....	134
Installing Applications Using the USB Connection.....	134
Installing Applications Using the Android Debug Bridge.....	134
Installing Applications Using the Wireless Android Debug Bridge.....	135
Uninstalling an Application.....	136
Android System Update.....	137
Performing a System Update Using ADB.....	137
Entering into Recovery Mode.....	138
Verifying System Update Installation.....	138
Android Enterprise Reset.....	138
Performing an Enterprise Reset from Device Settings.....	138

Performing an Enterprise Reset Using ADB.....	139
Android Factory Reset.....	140
Performing a Factory Reset Using ADB.....	140
Android Storage.....	141
Random Access Memory.....	141
Internal Storage.....	142
Enterprise Folder.....	142
Managing Apps.....	142
Managing Downloads.....	143
Maintenance and Troubleshooting.....	144
Maintaining the Device.....	144
Battery Safety Guidelines.....	144
Cleaning Instructions.....	145
Approved Cleanser Active Ingredients.....	145
Harmful Ingredients.....	146
Device Cleaning Instructions.....	146
Special Cleaning Notes.....	146
Cleaning Materials Required.....	146
Cleaning Frequency.....	147
Cleaning the Device.....	147
Cleaning Battery Connectors.....	147
Cleaning Cradle Connectors.....	147
Troubleshooting.....	148
Resetting the Device.....	148
Entering into Recovery Mode.....	149
Troubleshooting the Device.....	150
Cradle Troubleshooting.....	151
Specifications.....	152
Data Capture Supported Symbologies.....	152
Interface Connector Pin-Outs.....	152
Accessory Specifications.....	153

Contents

1-Slot Cradle Technical Specifications.....	153
3-Slot Cradle Technical Specifications.....	153
Cable Specifications.....	154
Power Supply Cable, Y-type Specifications.....	154
Cradle Interconnection Cable Specifications.....	154

About this Guide

This guide provides information about setting up and using the PS20 mobile computer. Some screens shown in this guide may differ from the screen images shown on the device.

This guide includes Android operating system (OS) 11 and above. This guide's baseline is Android 11, and indicates changes to the OS where applicable.

Configurations

This document refers to all configurations as "PS20" except where noted otherwise. This table lists all of the configurations of the PS20.

Table 1 Configurations

Configuration	Radios	Display	Memory	Data Capture Options	Operating System
PS20 Base	WLAN: 802.11 a/b/g/n/d/h/i/k/r/v/ac WPAN: Bluetooth v5.0	WVGA 4.0" color	4 GB RAM/ 16 GB Flash	SE2100	Android Open Source Project (AOSP) Google™ Mobile Services (GMS)
PS20 Plus	WLAN: 802.11 a/b/g/n/d/h/i/k/r/v/ac WPAN: Bluetooth v5.0	WVGA 4.0" color	4 GB RAM/ 16 GB Flash 4 GB RAM/ 32 GB Flash	SE4710 + Digimarc	Android Open Source Project (AOSP) Google™ Mobile Services (GMS)

Notational Conventions

The following notational conventions make the content of this document easy to navigate.

- **Bold** text is used to highlight the following:
 - Dialog box, window, and screen names
 - Dropdown list and list box names
 - Checkbox and radio button names
 - Icons on a screen
 - Key names on a keypad
 - Button names on a screen
- Bullets (•) indicate:
 - Action items
 - List of alternatives
 - Lists of required steps that are not necessarily sequential.
- Sequential lists (for example, those that describe step-by-step procedures) appear as numbered lists.

Icon Conventions

The documentation set is designed to give the reader more visual clues. The following visual indicators are used throughout the documentation set.



NOTE: The text here indicates information that is supplemental for the user to know and that is not required to complete a task.



IMPORTANT: The text here indicates information that is important for the user to know.



CAUTION: If the precaution is not heeded, the user could receive a minor or moderate injury.



WARNING: If danger is not avoided, the user CAN be seriously injured or killed.



DANGER: If danger is not avoided, the user WILL be seriously injured or killed.

Service Information

If you have a problem with your equipment, contact Zebra Global Customer Support for your region. Contact information is available at: zebra.com/support.

When contacting support, please have the following information available:

- Serial number of the unit
- Model number or product name
- Software type and version number


Zebra responds to calls by email, telephone, or fax within the time limits set forth in support agreements.

If your problem cannot be solved by Zebra Customer Support, you may need to return your equipment for servicing and will be given specific directions. Zebra is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty.

If you purchased your Zebra business product from a Zebra business partner, contact that business partner for support.

Determining Software Versions

Before contacting Customer Support, determine the current software version on your device.

1. Swipe down from the Status bar with two fingers to open the Quick Access panel, and then touch .
2. Touch **About phone**.
3. Scroll to view the following information:
 - Model
 - Android version
 - Build number

Determining the Serial Number

Before contacting Customer Support, determine the serial number of your device.

1. Touch **About phone**.
2. Touch **Status**.
3. Touch **Serial number**.

Getting Started

This section provides information to get the device up and running for the first time.

Unpacking the Device

Locate and inspect every item when you unpack the device from the box.

1. Carefully remove all protective material from the device and save the shipping container for later storage and shipping.
2. Verify the following items are in the box:
 - PS20 Personal Shopper
 - Lithium-ion battery
 - Regulatory Guide.
3. Inspect the equipment for damage. If any equipment is missing or damaged, contact the Global Customer Support Center immediately.
4. Before using the device for the first time, remove the protective shipping film that covers the display.

Device Features

This section lists the features of the PS20 personal shopper.

Figure 1 Front View

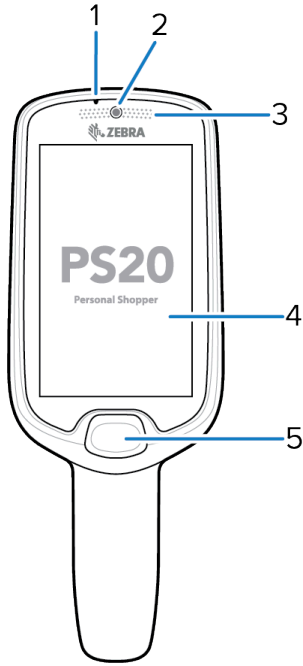
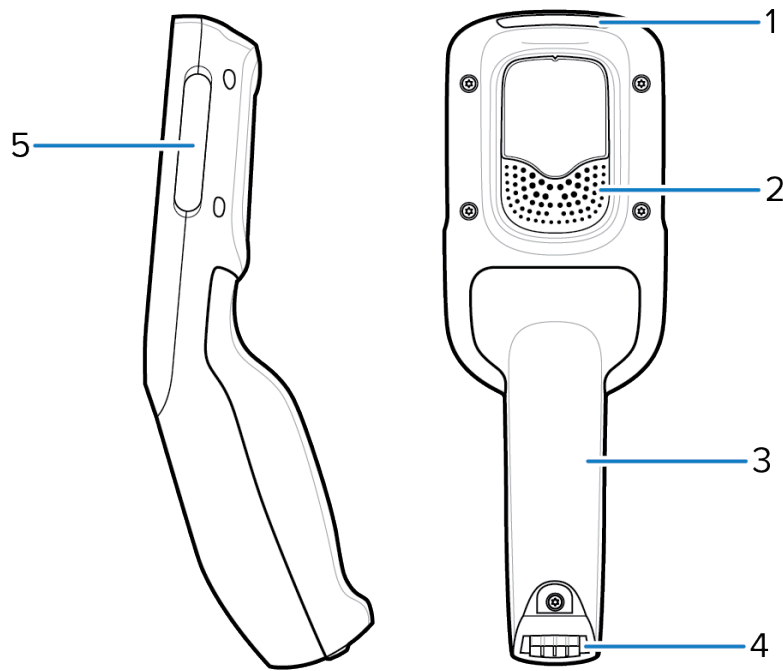


Table 2 Device Front View

Number	Item	Description
1	Microphone	Use for audio input and SmartLens locationing. Allows shoppers to speak to a store associate via push-to-talk or to a virtual assistant via speech-to-text.
2	Camera	With the front-facing camera, the device supports Visible Light Communications (VLC) indoor positioning/locationing applications. In addition, the camera is used for image/face recognition. Available on Plus configurations.
3	LED status	Indicates the battery charge state while charging or the scan/decode status. Red: Barcode scan in progress (Scan key is pressed). Single Green Blink: Successful decode.
4	Touch screen	Displays all information needed to operate the device.
5	Scan key	Use for trigger input for scanner or as a Select/Enter key. Operates the imager when a scanning application is active.

Figure 2 Side and Rear View**Table 3** Device Rear and Side View

Number	Item	Description
1	Scan exit window	Provides data capture using the scanner.
2	Speaker	Provides audio output for video, music, notifications, and PTT.
3	Battery cover	Encloses the battery and attaches to the device's handle.
4	Power/Cradle I/O Connector	Provides charging via cradle and cradle communication to lock/unlock the cradle slots. Use to perform a hard reset with the terminal reboot tool.
5	Branding plate slot	Provides space for custom logo.

Setting Up the Device

To start using the device for the first time, you must set it up.

1. Charge the device to at least 30% capacity.
2. Power on the device.

When the device is shipped from the factory, it is placed into Ship Mode, where the device enters its lowest possible power state. The device can exit Ship Mode by docking it in a powered cradle. Fully charging the battery pack to 100% is recommended immediately after exiting Ship Mode to calibrate the state of charge.

Scan Key

The Scan key operates the imager when a scanning application is active. When the device is turned off, press the Scan key for three seconds to power on the device.

Figure 3 Scan Key



1	Scan key
---	----------

Charging the Battery

Use one of the following accessories to charge the PS20.

Table 4 Charging Cradles

Description	Part Number	DC Cable	Interconnect Cable	Extension Cable
Single Slot Cradle	CRD-MC18-1SLOT-01	CBL-DC-394A1-01 CBL-DC-393A1-02 CBL-DC-392A1-02	25-66431-01R 25-66430-01R	_____
High Density (HD) Three Slot Cradle (Locking)	CRD-MC18-3SLCKH-01	CBL-DC-394A1-01 CBL-DC-393A1-02 CBL-DC-392A1-02	25-66431-01R 25-66430-01R	CBL-MC18-EXINT1-01
High Density (HD) Three Slot Cradle (Non-Locking)	CRD-MC18-SLOTH-01	CBL-DC-394A1-01 CBL-DC-393A1-02 CBL-DC-392A1-02	25-66431-01R 25-66430-01R	CBL-MC18-EXINT1-01
Super High Density (HD) Three Slot Cradle (Locking)	CRD-MC18-3SLCKS-01	CBL-DC-394A1-01 CBL-DC-393A1-02 CBL-DC-392A1-02	25-66431-01R 25-66430-01R	CBL-MC18-EXINT1-01



NOTE: Ensure that you follow the guidelines for battery safety described in the PS20 Product Reference Guide.

1. To charge the battery, connect the charging accessory to the appropriate power source.

2. Insert the PS20 into a cradle. The PS20 turns on and begins charging.

Figure 4 Single Slot Cradle


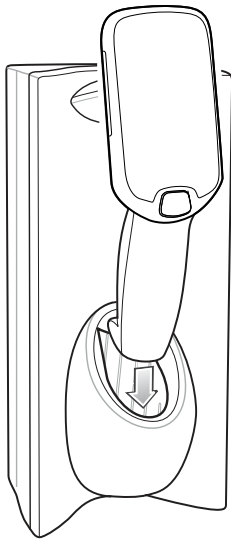


Figure 5 Three Slot Cradle



The battery charges 0 to 90% depending on the following conditions, measured at room temperature:

- When connected to a 1.0 cradle (normal charge mode), charge time is less than four hours.
- When connected to a 1.5 cradle (fast charge mode), charge time is less than three hours.

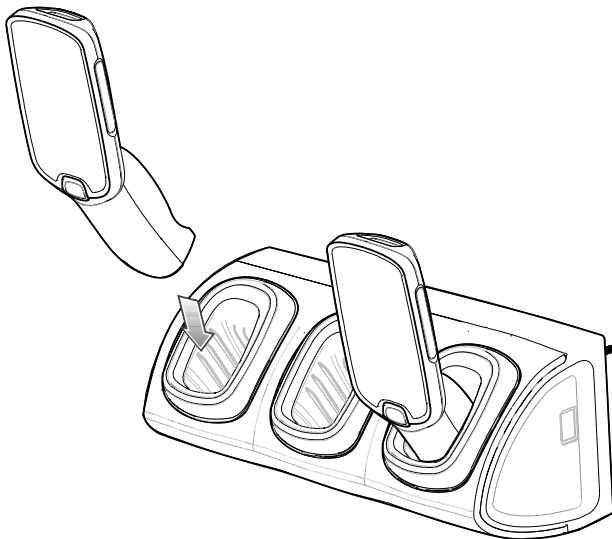

NOTE: To charge the battery in the device, it is recommended to use a charging cradle instead of the USB cable, since it is more time efficient.

Charging Temperature

Charge batteries in temperatures from 0°C to 40°C (32°F to 104°F). The device or cradle always performs battery charging safely. At higher temperatures (e.g. approximately +37°C (+98°F)), the device or cradle may charge for small periods of time, or enable and disable battery charging to keep the battery at acceptable

temperatures. The device and cradle indicate when charging is disabled due to abnormal temperatures with LED indications.

Charging Indicators

The Status LED indicates imaging and charging status.

Figure 6 Status LED



1	LED charge indicators
---	-----------------------

Table 5 LED Charge Indicators

Status	Indications
Imaging	
Off	<ul style="list-style-type: none"> • Normal operation or PS20 is turned off.
Red	<ul style="list-style-type: none"> • Imaging in progress (Scan key is pressed).
Single Green Blink	<ul style="list-style-type: none"> • Successful decode.
Charging (PS20 docked in cradle)	
Off	<ul style="list-style-type: none"> • Power not applied to cradle. • PS20 not inserted properly. • Charging LED feature disabled.
Blinking Green	<ul style="list-style-type: none"> • Charging.
Solid Green	<ul style="list-style-type: none"> • Charging complete.

Table 5 LED Charge Indicators (Continued)

Status	Indications
Blinking Red	Charging error. For example: <ul style="list-style-type: none"> • Temperature is too low or too high. • Charging has gone on too long without completion (typically eight hours).

Replacing the Battery


Replace a low-level or bad battery with a fresh battery to continue using the scanner.

1. Touch and hold the soft power button until the menu appears.
2. Touch Power Off.
3. Touch OK.




CAUTION: The PS20 must be off before removing the battery. Failing to turn off the PS20 before removing the battery may damage the data stored on flash memory or corrupt the operating system files.

4. Loosen the captive screw that secures the battery cover using a Phillips (PH00) screwdriver.
5. Lift the battery cover from the handle.
6. Inside the battery compartment, press down the plastic tab of the battery cable connector and slide it out of the shrouded male pin connector.
7. Press down the plastic tab to release the battery, and remove the battery from the battery compartment.

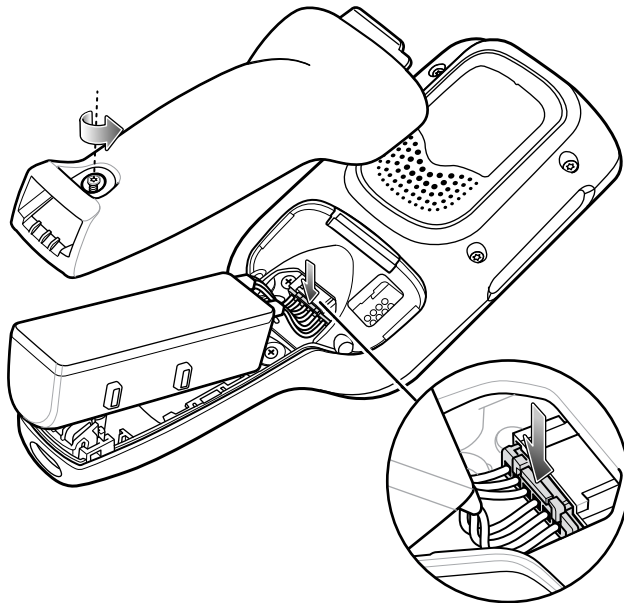

8. With the replacement battery, guide and press the battery cable connector into the shrouded male pin connector inside the battery compartment. The connector is designed to fit only one way.

9. Place the battery inside the battery compartment.
10. Place the battery cover onto the handle.
11. Secure the battery cover with the screw using a Phillips (PH00) screwdriver.

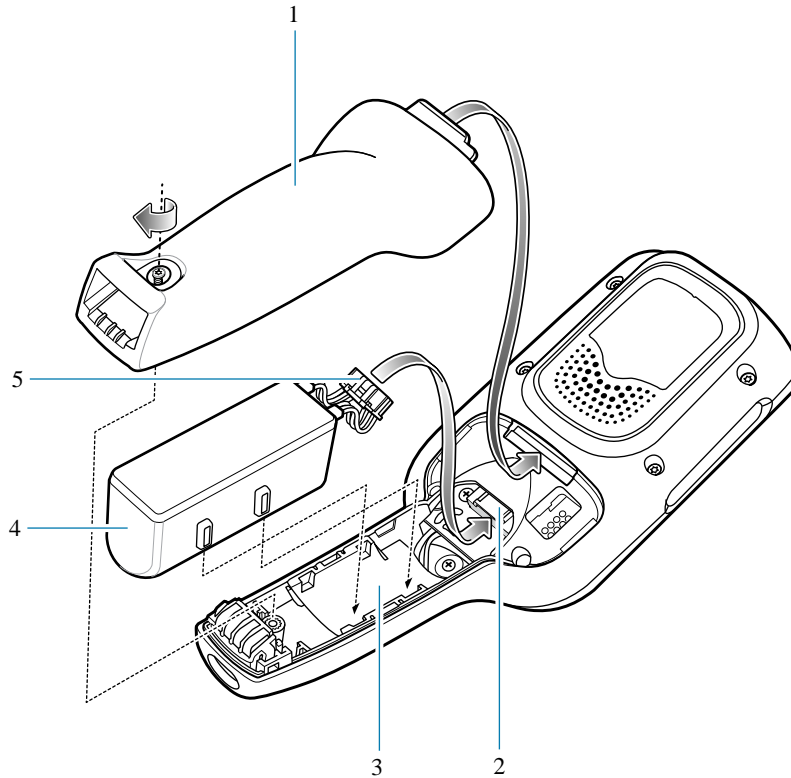

1	Battery cover
2	Shrouded male pin connector
3	Battery compartment
4	Battery
5	Battery cable connector

Compatibility with MC18

The table displays compatibility between the PS20 and MC18 devices and accessories.

Table 6 Compatibility with MC18

	PS20 Batteries	MC18 Batteries	MC18 Cradles
PS20	Yes	No	Yes
MC18	No	Yes	Yes

- PS20 PowerPrecision+ batteries are compatible with all PS20 devices and MC18 Single Slot and Three Slot cradles.

- PS20 PowerPrecision+ batteries are not compatible with MC18 devices.
- MC18 PowerPrecision+ batteries are not compatible with PS20 devices.

Battery Comparison with MC18

The table displays a comparison of the PS20 batteries with the MC18 batteries.

Table 7 Battery Comparison

Feature	MC18	PS20
Battery Type	PowerPrecision+	PowerPrecision+
Battery Capacity	2,275 mAh	3,500 mAh
Charging Mode	Standard and Fast	Standard and Fast

Powering On the Device

The device starts automatically as soon as power is applied; either with a charged battery installed or when inserted into the cradle.

- If a charged battery is installed and the device is turned off, press the Scan key to turn it on.

When the device is powered on for the first time, it initializes its system. The splash screen appears for a short period of time followed by the Home screen.

Zebra Visibility Services

The device captures and provides device analytics to a system administrator. The first time the device boots (or after a Factory reset), the **Zebra Services** agreement screen displays.

1. Leave **Device Data** enabled if you want the device to send analytics data. Zebra recommends keeping this option enabled.
2. Touch the **Device Data** switch to disable the device from sending analytics data.
3. Touch **OK** to confirm your selection.

Using the Device

This section explains how to use the device.

Home Screen

Turn on the device to display the Home screen. Depending on how your system administrator configured your device, your Home screen may appear differently than the graphics in this section.

Figure 7 Android 11 Home Screen


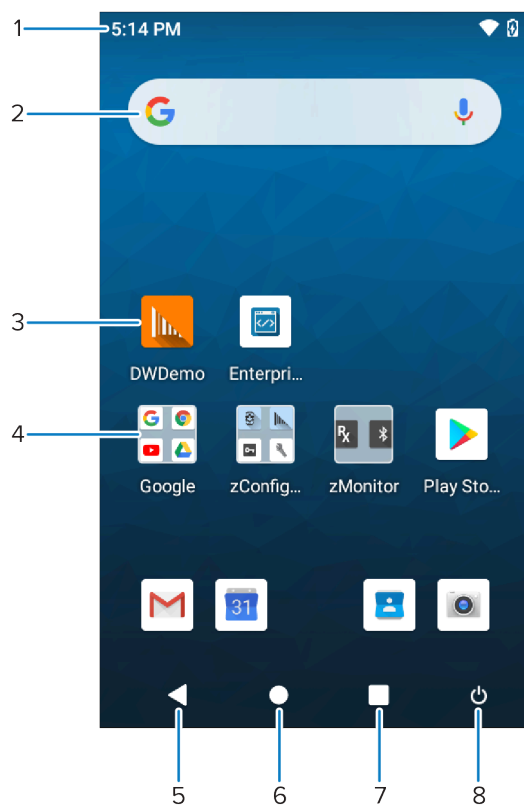


Figure 8 Android 13 Home Screen

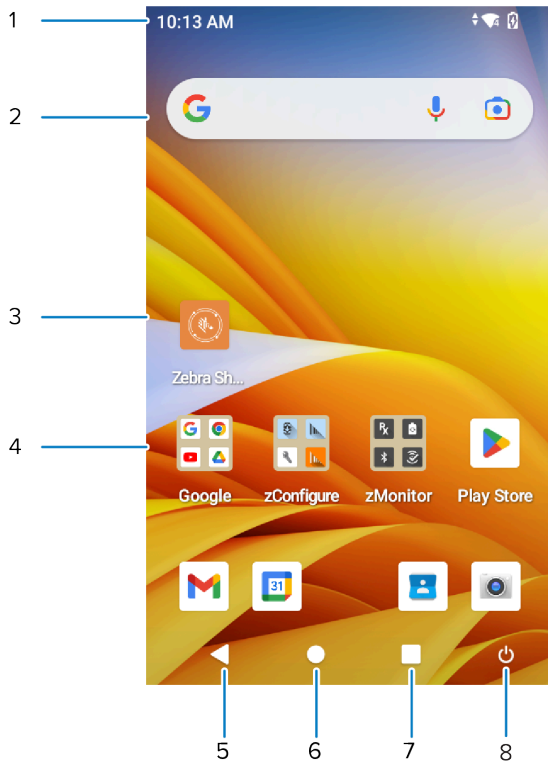

1	Status bar	Displays the time, status icons (right side), and notification icons (left side).
2	Widgets	Launches stand-alone apps that run on the Home screen.
3	Shortcut icons	Opens apps installed on the device.
4	Folder	Contains apps.
5	Back	Displays the previous screen.
6	Home	Displays the Home screen.
7	Recent	Displays recently used applications.
8	Power	Turns off the screen display.

Setting Home Screen Rotation

Screen rotation allows the screen to display vertically or horizontally. By default, screen rotation is disabled on the PS20.

1. Touch and hold anywhere on the Home screen until the options appear.
2. Touch **Home settings**.
3. Touch the **Allow Home screen rotation** switch.
4. Touch **Home**.

5. Rotate the device.

Status Bar

The Status bar displays the time, notification icons (left side), and status icons (right side).

If there are more notifications than can fit in the Status bar, a dot displays, indicating that more notifications exist. Swipe down from the Status bar to open the Notification panel and view all notifications and status.

Figure 9 Notifications and Status Icons



1	Notification icons
2	Status icons








Notification Icons

Notification icons indicate app events and messages.

Table 8 Notification Icons

Icon	Description
	Main battery is low.
	More notifications are available for viewing.
	Data is syncing.
	Indicates an upcoming event. AOSP devices only.
	Indicates an upcoming event. GMS devices only.
	Open Wi-Fi network is available.
	Audio is playing.
	Problem with sign-in or sync has occurred.
	Device is uploading data.

Table 8 Notification Icons (Continued)

Icon	Description
	Animated: the device is downloading data. Static: the download is complete.
	Device is connected to or disconnected from a virtual private network (VPN).
	Preparing internal storage by checking it for errors.
	USB debugging is enabled on the device.
	Indicates the RxLogger app is running.
	Indicates the Bluetooth scanner is connected to the device.
	Indicates the ring scanner is connected to the device in HID mode.

Status Icons

Status icons display system information for the device.

Table 9 Status Icons
















Icon	Description
	Alarm is active.
	Main battery is fully charged.
	Main battery is partially drained.
	Main battery charge is low.
	Main battery charge is very low.
	Main battery is charging.
	All sounds, except media and alarms, are muted. Vibrate mode is active.

Table 9 Status Icons (Continued)

Icon	Description
	Do Not Disturb mode active.
	Airplane Mode is active. All radios are turned off.
	Bluetooth is on.
	Connected to a Bluetooth device.
	Connected to a Wi-Fi network. Indicates the Wi-Fi version number.
	Not connected to a Wi-Fi network or no Wi-Fi signal.
	Connected to an Ethernet network.
	Speakerphone enabled.

Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, and ongoing events. When a notification occurs, an icon appears in the Status bar with a brief description.

Figure 10 Quick Settings Bar


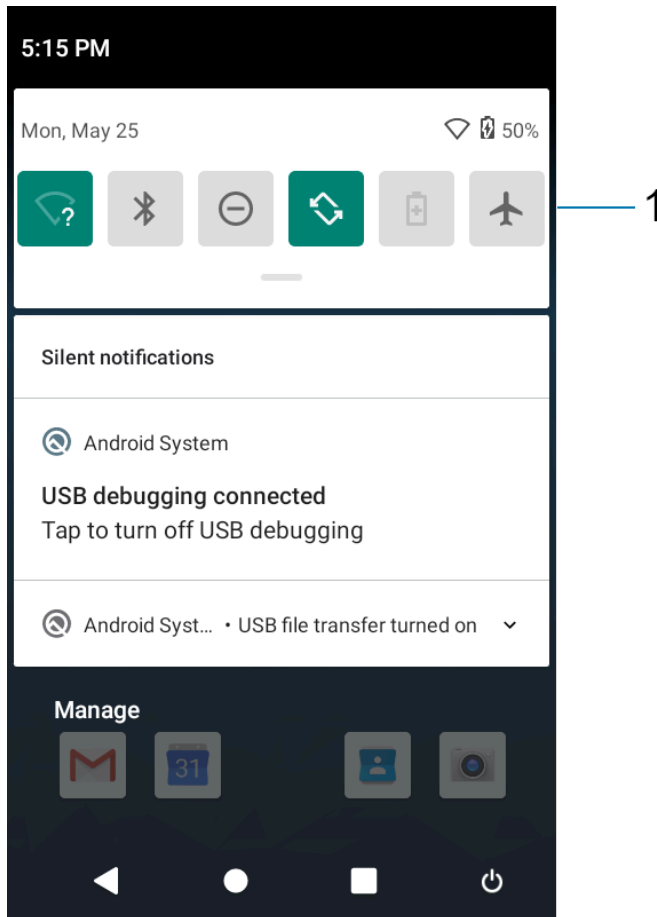


Figure 11 Quick Settings Bar

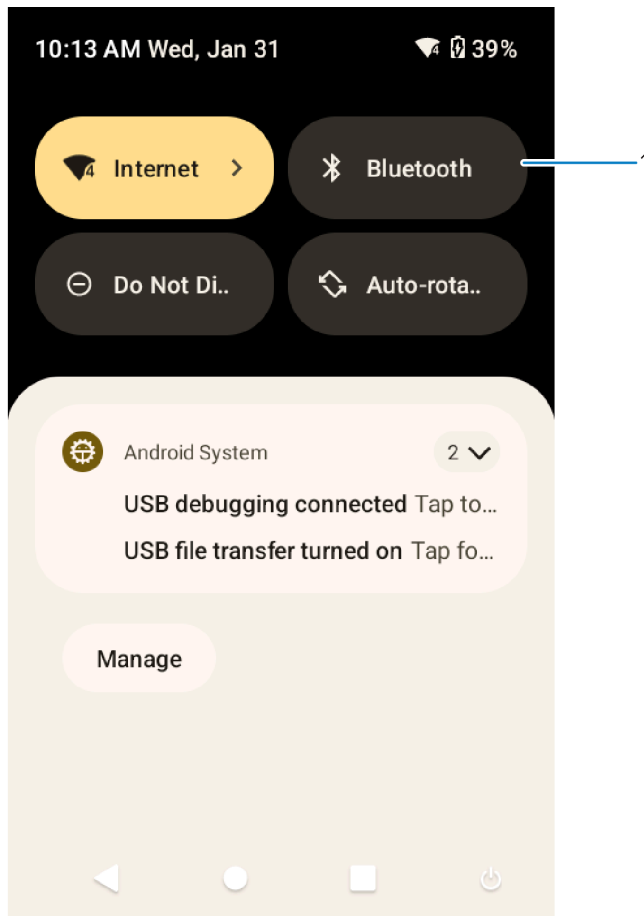

1	Quick settings bar
---	--------------------

- To view a list of all notifications, open the Notification panel by dragging the Status bar down from the top of the screen.
- To respond to a notification, open the Notification panel and then touch a notification. The Notification panel closes and the corresponding app opens.
- To manage recent or frequently used notifications, open the Notification panel and then touch Manage notifications. Touch the toggle switch next to an app to turn off all notifications, or touch an app for more notification options.
- To clear all notifications, open the Notification panel and then touch CLEAR ALL. All event-based notifications are removed. Ongoing notifications remain in the list.
- To close the Notification panel, swipe the Notification panel up.

Opening the Quick Access Panel

Use the Quick Access panel to access frequently used settings (for example, Airplane mode).



NOTE: Not all icons are pictured. Icons may vary.

Figure 12 Android 13 Quick Access Panel

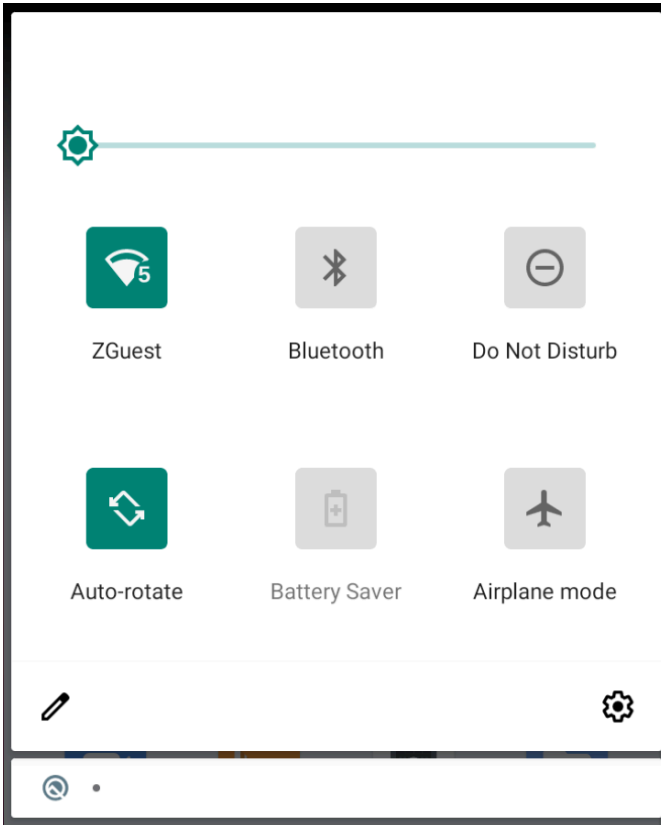
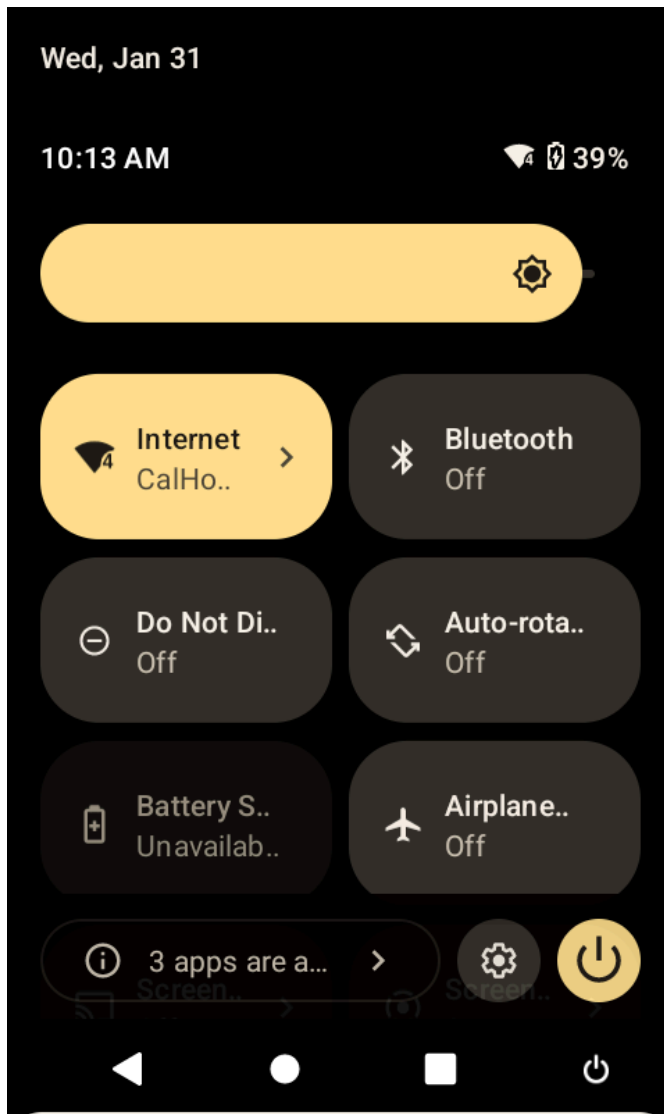


Figure 13 Android 13 Quick Access Panel

- If the device is locked, swipe down once.
- If the device is unlocked, swipe down once with two fingers, or twice with one finger.
- If the Notification panel is open, swipe down from the Quick Settings bar.

Quick Access Panel Icons

Quick Access panel icons indicate frequently used settings (for example, Airplane mode).

Table 10 Quick Access Panel Icons











Icon	Description
	Display brightness - Use the slider to decrease or increase the brightness of the screen. (A11 only)

Table 10 Quick Access Panel Icons (Continued)

Icon	Description
	Display brightness - Use the slider to decrease or increase the brightness of the screen. (A13 only)
	Internet/Wi-Fi network - Turn Wi-Fi on or off. To open Wi-Fi settings, touch the Wi-Fi network name.
	Bluetooth settings - Turn Bluetooth on or off. To open Bluetooth settings, touch Bluetooth.
	Do not disturb - Control how and when to receive notifications.
	Auto-rotate - Lock the device's orientation in portrait or landscape mode or set to automatically rotate.
	Battery saver - Turn Battery saver mode on or off. When Battery saver mode is on the performance of the device is reduced to preserve battery power (not applicable).
	Airplane mode - Turn Airplane mode on or off. When Airplane mode is on the device does not connect to Wi-Fi or Bluetooth.
	Screen Cast - Share phone content on Chromecast or a television with Chromecast built-in. On the Cast screen, check the "enable wireless display" option, and then touch "cast screen" to display a list of devices. Touch a device in the list to begin casting.
	Screen Record - Makes a video recording of everything that happens on the screen, with options to include audio and screen touches.

Battery Management

Observe the recommended battery optimization tips for the device.

- Set the screen to turn off after a short period of inactivity.
- Reduce screen brightness.
- Turn off all wireless radios when not in use.
- Turn off automatic syncing for Email, Calendar, Contacts, and other apps.
- Minimize the use of apps that keep the device from sleeping, for example, music and video apps.



NOTE: Before checking the battery charge level, remove the device from any AC power source (cradle or cable).

Checking Battery Status

Check the battery status through the Battery Information settings, the Battery Manager app, or the quick access panel.

- Open **Settings** and touch **About phone > Battery Information**. Or swipe up from the bottom of the screen and touch  to open the **Battery Manager** app.

Battery present status indicates if the battery is present.

Battery level lists the battery charge (as a percentage of fully charged).

- Swipe down with two fingers from the status bar to open the quick access panel.

The **battery percentage** is displayed next to the battery icon.

Monitoring Battery Usage

The Battery screen provides battery charge details and power management options to extend battery life. Different apps display different information. Some apps include buttons that open screens with settings to adjust power use. Use the **DISABLE** or **FORCE CLOSE** buttons to turn off apps that consume too much power.

- Touch **Battery**.
- Go to **Settings**.

To display battery information and power management options for a specific app:

- On Android 11, touch **Apps & notifications**. Select an app, then touch **Advanced > Battery**.
- On Android 13, touch **Apps > All Apps**. Select an app, then touch **App Battery Usage**.

Low Battery Notification

When the battery charge level drops below the change level in the table below, the device displays a notice to connect the device to power. Charge the battery using one of the charging accessories.

Table 11 Low Battery Notification

Charge Level Drops Below	Action
18%	The user should charge the battery soon.
10%	The user must charge the battery.
6%	The device turns off. The user must charge the battery.

Interactive Sensor Technology

To take advantage of these sensors, applications use API commands. Refer to the Google Android Sensor APIs for more information. For information on the Zebra Android EMDK, go to: techdocs.zebra.com.

The device contains sensors that monitor movement, orientation, and ambient light.

- Gyroscope - Measures angular rotational velocity to detect rotation of the device.
- Accelerometer - Measures the linear acceleration of movement to detect the orientation of the device.

Waking the Device

The device goes into Suspend mode when you press **Scan** or after a period of inactivity (if the Never setting is changed to something else in **Settings > Display > Advanced > Sleep**).

1. To wake the device from Sleep mode, press **Power** or the configured wake-up sources.

The Lock screen displays.

2. Swipe the screen up to unlock.
 - If the screen option is set to Swipe, the Home screen displays.
 - If either the PIN or Password screen unlock feature is enabled, a prompt displays. Enter the PIN or password to unlock the device and move to the Home screen.
 - If the Pattern screen unlock feature is enabled, the Pattern screen displays. Swipe the correct pattern between the dots to unlock the device and move to the Home screen.



NOTE: If you enter the PIN, password, or pattern incorrectly five times, you must wait 30 seconds before trying again.

- If you forget the PIN, password, or pattern, contact your system administrator.

USB Communication

Connect the device to a host computer to transfer files between the device and the host computer.

When connecting the device to a host computer, follow the host computer's instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting files.

Transferring Files

Use Transfer files to copy files between the device and the host computer.

1. Connect the device to a host computer using a USB accessory.
2. On the device, pull down the Notification panel and touch **Charging this device via USB**.
By default, **No data transfer** is selected.
3. Touch **File Transfer**.

Transferring Photos

Use PTP to copy photos from the device to the host computer.

It is recommended to install a microSD card in the device for storing photos due to limited internal storage.

1. Connect the device to a host computer using a USB accessory.
2. On the device, pull down the Notification panel and touch **Charging this device via USB**.
3. Touch **PTP**.
4. Touch **Transfer photos PTP**.
5. On the host computer, open a file explorer application.
6. Open the **Internal storage** folder.
7. Open the SD card or the Internal storage folder.

8. Copy or delete photos as required.

Disconnecting from the Host Computer



CAUTION: Carefully follow the host computer's instructions to disconnect USB devices correctly to avoid losing information.



1. On the host computer, unmount the device.
2. Remove the device from the USB accessory.

Settings

This section describes the settings on the device.

Accessing Settings

There are multiple ways to access settings on a device.


- Swipe down with two fingers from the top of the Home screen to open the Quick Access panel and touch .
- Double-swipe down from the top of the Home screen to open the Quick Access panel and touch .
- Swipe up from the bottom of the Home screen to open APPS and touch **Settings**.

Display Settings

Use Display settings to change the screen brightness, enable night light, change the background image, enable screen rotation, set screen timeout, and change font size.

Setting the Screen Brightness Manually

Manually set the screen brightness using the touchscreen.

1. Swipe down with two fingers from the Status bar to open the Quick Access panel.
2. Slide  left or right to adjust the screen brightness level.

Setting the Screen Brightness Automatically

Automatically adjust the screen brightness using the built-in light sensor.

1. Go to **Settings**.
2. Touch **Display**.
3. If disabled, touch **Adaptive brightness** to automatically adjust the brightness.

By default, **Adaptive brightness** is enabled. Toggle the switch to disable.

Setting Night Light

The Night Light setting tints the screen amber, making the screen easier to look at in low light.

1. Go to **Settings**.
2. Touch **Display**.
3. Touch **Night Light**.
4. Touch **Schedule**.
5. Select one of the schedule values:
 - None (default)
 - Turns on at custom time
 - Turns on from sunset to sunrise.
6. **Night Light** is disabled by default.
 - On Android 11, touch **TURN ON NOW**.
 - On Android 13, touch **Use Night Light** to enable.
7. Adjust the tint using the **Intensity** slider.

Setting Screen Rotation

By default, screen rotation is enabled.



NOTE: To change the Home screen rotation, see [Setting Home Screen Rotation](#).

1. Go to **Settings**.
2. On Android 11, touch **Display > Advanced**.
3. On Android 13, touch **Display**.
4. Touch **Auto-rotate screen**.

Setting Screen Timeout

The screen turns off and goes into Suspend mode after the selected period of inactivity.

1. Go to **Settings**.
 - On Android 11, touch **Display > Advanced > Screen timeout**.
 - On Android 13, touch **Display > Screen Timeout**.

2. Select one of the sleep values:
 - **15 seconds**
 - **30 seconds**
 - **1 minute**
 - **2 minutes**
 - **5 minutes**
 - **10 minutes**
 - **30 minutes**
 - **Never** (default)
3. On Android 13, turn on the **Screen** attention switch to prevent your screen from turning off while you are looking at it.

Setting Dark Theme

The Dark Theme setting reduces the light emitted by the device, making the screen easier to read.

1. Go to **Settings**.
2. Touch **Display > Dark theme** and turn on the switch.
3. Touch **Schedule**.
4. Select one of the schedule values:
 - **None** (default)
 - **Turns on at custom time**
 - **Turns on from sunset to sunrise**
 - **Turns on at bedtime**

Setting Colors

Select a color scheme for the screen.

1. Go to **Settings**.
2. Touch **Display > Colors**.
3. Select one of the color values:
 - **Natural** (default)
 - **Boosted**
 - **Adaptive**

Setting Charging LED Light

Enable (default) or disable the charging LED light.

1. Go to **Settings**.
2. Touch **Display > Charging LED**.

3. Turn the **Charging LED** switch off or on if needed.

Setting the Screen Saver

The screen can show photos, a colorful background, or a clock while the device is charging and/or docked.

1. Go to **Settings**.
2. Touch **Display > Screen saver**, and turn on the switch.
3. Touch **When to start** to select an option:
 - **Never** (default)
 - **While charging**
 - **While docked and charging**
4. Select one of the screen saver options:
 - **Clock** - Touch **CUSTOMIZE** to select clock settings.
 - **Colors** - It displays the color pattern on the device.
 - **Photo Frame** - Touch **CUSTOMIZE** to select photos on the device.
 - **Photo Table** - Touch **CUSTOMIZE** to select photos on the device.
 - **Photos** - Touch **CUSTOMIZE** to select photos on the device.
5. Touch **Preview** to view a preview of the screen saver.

Setting Ambient Display

The Ambient display setting wakes the screen when notifications are received.

1. Go to Settings.
2. On Android 11, touch **Display > Advanced**.
3. On Android 13, touch **Display**.
4. Touch Ambient display.
5. In the **When to show** section, enable or disable an option using the switch.

Setting Font Size

Set the size of the font in system apps.

1. Go to **Settings**.
2. On Android 11, touch **Display > Advanced > Font size**.
3. On Android 13, touch **Display size and text**. Use the **Font size +** and **-** to vary the font size.
4. Select a font size option:
 - **Small**
 - **Default**
 - **Large**
 - **Largest**

Setting Touch Panel Mode

The device display is able to detect touches using a finger, a conductive-tip stylus, or a gloved finger.



NOTE: A glove can be made of medical latex, leather, cotton, or wool. For optimal performance, use a Zebra-certified stylus.

1. Go to **Settings**.
2. On Android 11, touch **Display > Advanced**.
3. On Android 13, touch **Display**.
4. Touch **Display > Advanced**.
5. Touch **Touch Panel UI**.

Setting the Date and Time

You are only required to set the time zone or set the date and time if the wireless LAN does not support Network Time Protocol (NTP) or when not connected to a cellular/wireless network.

1. Go to **Settings**.
2. Touch **System > Date & time**
3. On Android 11,
 - a) Touch **Use network-provided time** to disable automatic date and time synchronization.
 - b) Touch **Use network-provided time zone** to disable automatic time-zone synchronization.
4. On Android 13,
 - a) Touch **Set time automatically** to disable automatic date and time synchronization.
 - b) Touch **Set time zone automatically** to disable automatic time-zone synchronization.
5. Touch **Date** to select the date in the calendar.
6. Touch **OK**.
7. Touch **Time**.
 - a) Touch the circle, drag to the current hour, and then release.
 - b) Touch the circle, drag to the current minute, and then release.
 - c) Touch **AM** or **PM**.
8. Touch **OK**.
9. Touch **Use 24-hour format**.

General Sound Settings

Press the volume buttons on the device to display on-screen volume controls.

Use the Sound settings to configure media and alarm volumes.

1. Go to **Settings**.
2. On Android 11, touch **Sound**.

3. On Android 13, touch **Sound & Vibrations**.
4. Touch an option to set sounds.

Sound Options

Use the Sound Options menu to control the type of tone, the volume of tone the device will use for different functions.

- **Media volume** - Controls the music, games, and media volume.
- **Alarm volume** - Controls the alarm clock volume.
- **Notification Volume**- controls notification volume (A13 only).
- **Do Not Disturb** - Mutes some or all sounds and vibrations.
- On Android 11, **Media** - Shows the media player in Quick Settings while sound is playing, allowing quick access.
- On Android 13, **Media** - Touch to open media options.
 - **Pin media player** - touch to show media player in Quick Settings.
 - **Show media on lock screen** - Touch to toggle the media player on the lock screen on and off.
 - **Show media recommendations** Google provides recommendations based on your activity.
- **Default notification sound** - Select a sound to play for all system notifications.
- **Default alarm sound** - Select a sound to play for alarms.
- **Screen locking sound** - Touch to toggle sound on and off. (A13 only)
- **Charging sounds** - Touch to toggle sound on and off. (A13 only)
- **Touch sounds** - Touch to toggle sound on and off. (A13 only)

Remapping a Button

Buttons on the device can be programmed to perform different functions or as shortcuts to installed apps. For a list of key names and descriptions, refer to: techdocs.zebra.com.



NOTE: It is not recommended to remap the scan button.

1. Go to **Settings**.
2. Touch **Key Programmer**. A list of programmable buttons displays.
3. Touch the **BUTTON REMAPPING** tab or the **SHORTCUT** tab that lists the available functions and applications.
4. Touch a function or application shortcut to map to the button.



NOTE: If you select an application shortcut, the application icon appears next to the button on the Key Programmer screen.

Keyboards

The device provides multiple keyboard options.

- Android Keyboard - AOSP devices only
- Gboard - GMS devices only
- Enterprise Keyboard



NOTE: By default, the Enterprise and Virtual Keyboards are disabled. The Enterprise Keyboard is available for download from the [Zebra Support Site](#).

Keyboard Configuration

This section describes configuring the device's keyboard.

Enabling Keyboards




1. Go to **Settings**.
2. Touch **System** > **Languages & input** > **On-screen keyboard** > **Manage on-screen keyboards**.
3. Touch a keyboard to enable.

Switching Between Keyboards

To switch between keyboards, touch in a text box to display the current keyboard.



NOTE: By default, the Gboard is enabled. All other virtual keyboards are disabled.

- On the Gboard keyboard, touch and hold  (GMS devices only).
- On the Android keyboard, touch, and hold  (AOSP devices only).
- On the Enterprise keyboard, touch . Only available with Mobility DNA Enterprise License. Not pre-installed on the device. Contact Zebra Support for more information.

Using the Android and Gboard Keyboards

Use the Android or Gboard keyboards to enter text in a text field.

- To configure the keyboard settings, touch and hold "," (comma) and then select **Android keyboard settings**.

Edit Text

Edit entered text and use menu commands to cut, copy, and paste text within or across apps. Some apps do not support editing some or all of the text they display; others may offer their own way to select text.

Entering Numbers, Symbols, and Special Characters

1. Enter numbers and symbols.
 - Touch and hold one of the top-row keys until a menu appears then select a number or special character.
 - Touch the Shift key once for a single capital letter. Touch the Shift key twice to lock in uppercase. Touch the Shift key a third time to unlock Capslock.
 - Touch **?123** to switch to the numbers and symbols keyboard.
 - Touch the =< key on the numbers and symbols keyboard to view additional symbols.
2. Enter special characters.
 - Touch and hold a number or symbol key to open a menu of additional symbols. A larger version of the key displays briefly over the keyboard.

Enterprise Keyboard

The Enterprise Keyboard contains multiple keyboard types.



NOTE: Only available with Mobility DNA Enterprise License.

- Numeric
- Alpha
- Special characters
- Data capture.

Numeric Tab

The numeric keyboard is labeled **123**. The keys displayed vary on the app being used. For example, an arrow displays in **Contacts**, however **Done** displays in **Email** account setup.

Alpha Tab

The alpha keyboard is labeled using the language code. For English, the alpha keyboard is labeled **EN**.

Additional Character Tab

The additional characters keyboard is labeled **#*/**.

- Touch 😊 to enter emoji icons in a text message.
- Touch **ABC** to return to the Symbols keyboard.

Scan Tab

The Scan tab provides an easy data capture feature for scanning barcodes.

Language Usage

Use the **Language & input** settings to change the device's language, including words added to the dictionary.

Changing the Language Setting

1. Go to **Settings**.
2. Touch **System > Languages & input**.
3. Touch **Languages**.
A list of available languages displays.
4. If the desired language is not listed, touch **Add a language** and select a language from the list.
5. Touch and hold **≡** to the right of the desired language, then drag it to the top of the list.
The operating system text changes to the selected language.

Adding Words to the Dictionary

Add frequently-used unique words to the PS20's dictionary.

1. Go to **Settings**.
2. On Android 11, touch **System > Languages & input > Advanced > Personal dictionary**.
3. On Android 13, touch **System > Languages & input > Personal dictionary**.
4. If prompted, select the language where this word or phrase is stored.
5. Touch **+** to add a new word or phrase to the dictionary.
6. Enter the word or phrase.
7. In the **Shortcut** text box, enter a shortcut for the word or phrase.

Notifications

The user can configure notifications for the device and for specific apps. Device notifications settings allow the user to configure how notifications occur on the device. App notification settings allow the user to configure how notifications for a specific app occur.

Device Notification Settings

To view your device notification settings:

- On Android 11, touch **Settings > Apps & notifications > Notifications**.
- On Android 13, touch **Settings > Notifications**.

App Notification Settings

to view your app notification settings:

- On Android 11, go to **Settings > Apps & notifications > App info** and select an app.
- On Android 13, go to **Settings > App > All Apps**, and select an app.

Setting App Notifications

Configure the notifications settings for a specific app.

1. Go to **Settings**.
2. On Android 11, touch **Apps & notifications > SEE ALL XX APPS**. The App info screen displays.
3. On Android 13, touch **Apps > All Apps**.
4. Select an app.
5. Touch **Notifications**.

Options vary depending on the app selected.

6. On Android 11, select an available option:

Show notifications - Select to turn all notifications from this app on (default) or off. Touch a notification category to display additional options.

- **Alerting** - Allow notifications from this app to make a sound.
 - **Pop on screen** - Allow notifications from this app to pop notifications on the screen.
- **Alerting** - Allow notifications from this app to make sound or vibrate the device.
 - **Pop on screen** - Allow notifications from this app to pop notifications on the screen.
- **Silent** - Do not allow notifications from this app to make a sound.
 - **Minimize** - In the Notification panel, collapse notifications to one line.
- **Silent** - Do not allow notifications from this app to make sound or vibrate.
 - **Minimize** - In the Notification panel, collapse notifications to one line.
- **Advanced** - Touch for additional options.
 - **Sound** - Select a sound to play for notifications from this app.
 - **Vibrate** - Allow notifications from this app to vibrate the device.
 - **Blink light** - Allow notifications from this app the light the Notification LED blue.
 - **Show notification dot** - Allow notifications from this app to add a notification dot to the app icon.
 - **Override Do Not Disturb** - Allow these notifications to interrupt when Do Not Disturb is enabled.

Advanced

- **Allow notification dot** - Do not allow this app to add a notification dot to the app icon.
 - **Additional settings in the app** - Open the app settings.
7. On Android 13, touch the switch to turn on or off notifications for this app.
 - **Allow notification dot** - Do not allow this app to add a notification dot to the app icon.
 - **Additional settings in the app** - Open the app settings.

Viewing Notifications

View and control device notifications to track important device functions and reduce unnecessary distractions.

1. Go to **Settings**.
 - On Android 11, touch **Apps & Notifications**.
 - On Android 13, touch **Notifications > Apps Settings**.
2. Scroll down to **Notifications** to view how many apps have notifications turned off.

Controlling Lock Screen Notifications

Control whether notifications can be seen when the device is locked.

On Android 11:

1. Go to **Settings**.
2. Touch **Apps & notifications > Notifications**.
3. Touch **Notifications on lockscreen** and select one of the following:
 - **Show alerting and silent notifications (default)**
 - **Show alerting notifications only**
 - **Don't show notifications.**

On Android 13:

4. Go to **Settings > Notifications > Notifications on lock screen** and select one of the following:
 - **Show conversations, default, and silent** (default option).
 - **Hide silent conversations and notifications.**
 - **Don't show any notifications.**

Applications

Apart from the standard pre-installed Android applications, the following table lists Zebra-specific applications installed on the device.

Installed Applications

Aside from the common Google apps, the Zebra-specific apps that are installed on the device are described in this section.

Table 12 Apps














Icon	Description
	Battery Manager - Display battery information, including charge level, status, health and wear level.
	Bluetooth Pairing Utility – Use to pair a Zebra Bluetooth scanner with the device by scanning a barcode.
	Cradle Firmware Updater - Use to update cradle firmware.
	Cradle Utility - Use to control cradle functionality.
	DataWedge - Enables data capture using the imager.
	DWDemo - Provides a way to demonstrate the data capture features using the imager.
	Enterprise Browser - Industrial browser that provides everything needed to quickly build device apps for barcode scanning, signature capture, payment processing, printing, and most other enterprise applications. For more information, go to techdocs.zebra.com/enterprise-browser/ (A11 only)

Table 12 Apps (Continued)

Icon	Description
	License Manager - Use to manage software licenses on the device.
	RxLogger - Use to diagnose device and app issues.
	Settings - Use to configure the device.
	StageNow - Allows the device to stage a device for initial use by initiating the deployment of settings, firmware, and software.
	Worry Free Wifi Analyzer - A diagnostic intelligent app. Use to diagnose surrounding area and display network stats, such as coverage hole detection, or AP in the vicinity. Refer to the Worry Free Wi-Fi Analyzer Administrator Guide for Android.
	Zebra Bluetooth Settings - Use to configure Bluetooth logging.

Accessing Apps

Access all apps installed on the device using the APPS window.

1. On the Home screen, swipe up from the bottom of the screen.
2. Slide the **APPS** window up or down to view more app icons.
3. Touch an icon to open the app.

Switching Between Recently Used Apps

Use the Recent button to switch between recently used apps.


1. Touch **Recent**.
A window appears on the screen with icons of recently used apps.
2. Slide the apps displayed up and down to view all recently used apps.
3. Swipe left or right to remove the app from the list and force close the app.
4. Touch an icon to open an app or touch **Back** to return to the current screen.

Battery Manager

The Battery Manager provides detailed information about the battery.

This section also provides battery swap procedures for supported devices.




Opening Battery Manager


- To open the Battery Manager app, swipe up from the bottom of the Home screen, and then touch .

Battery Manager Information

The Battery Manager displays detailed information about battery charging, health, and status.

Table 13 Battery Icons

Battery Icon	Description
	Battery charge level is between 85% and 100%.
	Battery charge level is between 19% and 84%.
	Battery charge level is between 0% and 18%.

- Level** - The current battery charge level as a percentage. Displays -% when the level is unknown.
- Wear** - The health of the battery in graphical form. When the wear level exceeds 80%, the bar color changes to red.
- Health** - The health of the battery. If a critical error occurs,  appears. Touch to view the error description.
 - Decommission** - The battery is past its useful life and should be replaced. See system administrator.
 - Good** - The battery is good.
 - Charge error** - An error occurred while charging. See system administrator.
 - Over Current** - An over-current condition occurred. See system administrator.
 - Dead** - The battery has no charge. Replace the battery.
 - Over Voltage** - An over-voltage condition occurred. See system administrator.
 - Below Temperature** - The battery temperature is below the operating temperature. See system administrator.
 - Failure Detected** - A failure has been detected in the battery. See system administrator.
 - Unknown** - See system administrator.

- **Charge Status**
 - **Not charging** - The device is not connected to AC power.
 - **Not charging** - The device is not charging.
 - **Charging-AC** - The device is connected to AC power and charging or is fast charging via USB.
 - **Charging-USB** - The device is connected to a host computer with a USB cable and charging.
 - **Discharging** - The battery is discharging.
 - **Full** - The battery is fully charged.
 - **Unknown** - The battery status is unknown.
- **Time until Full** - The amount of time until the battery is fully charged.
- **Time since charging** - The amount of time since the device began charging.
- **Time until empty** - The amount of time until the battery is empty.
- **Advanced info** - Touch to view additional battery information.
 - **Battery present status** - Indicates that the battery is present.
 - **Battery level** - The battery charge level as a percentage of scale.
 - **Battery scale** - The battery scale level used to determine battery level (100).
 - **Battery voltage** - The current battery voltage in millivolts.
 - **Battery temperature** - The current battery temperature in degrees Centigrade.
 - **Battery technology** - The type of battery.
 - **Battery current** - The average current into or out of the battery over the last second in mAh.
 - **Battery manufacture date** - The date of manufacture.
 - **Battery serial number** - The battery serial number. The number matches the serial number printed on the battery label.
 - **Battery part number** - The battery part number.
 - **Battery rated capacity** - Lists the rated capacity of the backup battery in mAh.
 - **Battery decommission status** - Indicates if the battery is past its life span.
 - **Battery Good** - The battery is in good health.
 - **Decommissioned Battery** - The battery is past its useful life and should be replaced.
 - **Base cumulative charge** - Cumulative charge using Zebra charging equipment only.
 - **Battery usage number** - The health of the battery as a result of charging and discharging. A high number indicates low battery health.
 - **Usage decommission threshold** - When the Battery usage number is greater than or equal to the Usage decommission threshold, the battery is past its useful life and should be replaced.
 - **App version** - The application version number.

Camera

This section provides information for taking photos and recording videos using the integrated digital cameras.


The device saves photos and videos on internal storage.



NOTE: This app is available on the Plus configuration.



Taking Photos on Android 11

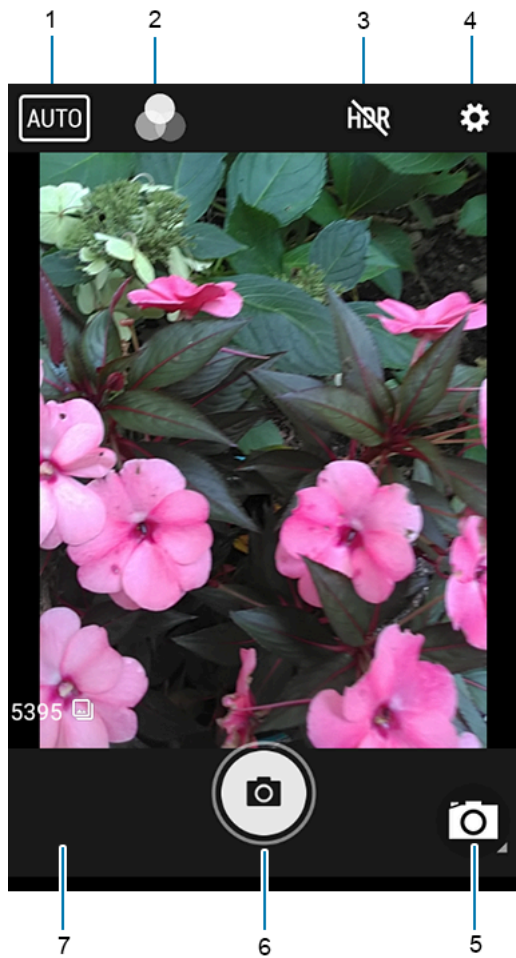1. Swipe up from the bottom of the Home screen and touch **Camera**.



1	Scene mode
2	Color effect
3	High dynamic range
4	Settings
5	Camera mode

6	Shutter button
7	Gallery


2. If necessary, touch the Camera Mode icon and touch .
3. Frame the subject on the screen.
4. To zoom in or out, press two fingers on the display and pinch or expand your fingers. The zoom controls appear on the screen.
5. Touch an area on the screen to focus. The focus circle appears. The two bars turn green when in focus.
6. Touch .

The camera takes a photo and a shutter sound plays.


The photo momentarily displays as a thumbnail in the lower-left corner.

Taking Photos on Android 13

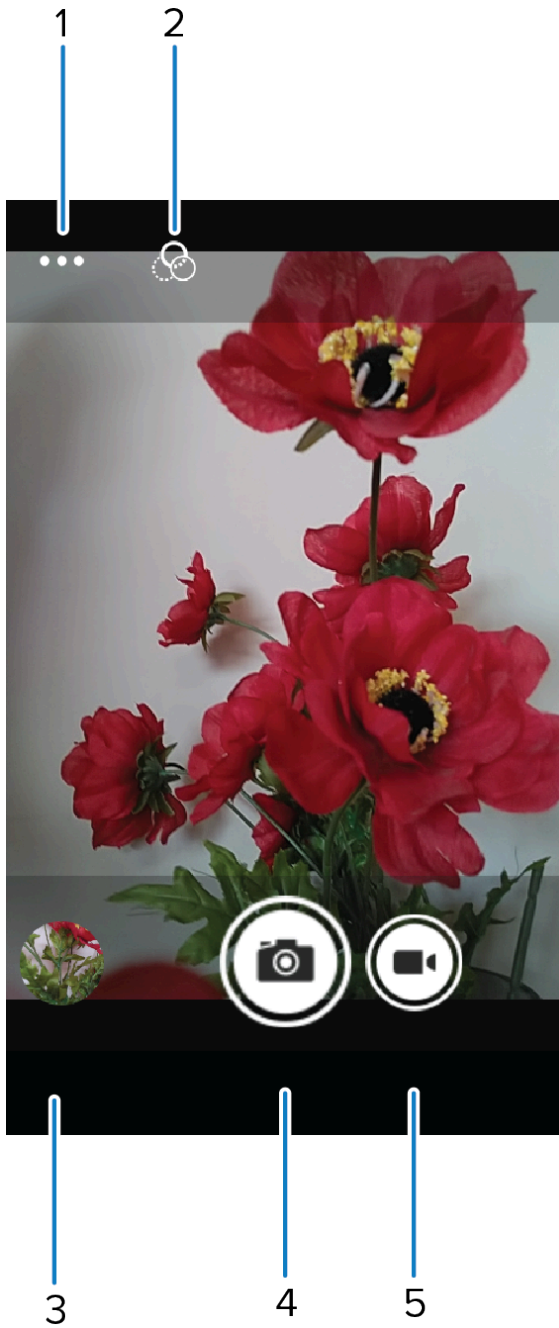

This section describes how to use the photo feature on the Camera app.



1	Settings
2	Color filters
3	Gallery
4	Shutter button
5	Video mode


1. Swipe up from the bottom of the Home screen and touch **Camera**. The front-facing camera opens in Photo mode.
2. Frame the subject on the screen.
3. Use two fingers and expand the image on the screen to zoom in with the camera.
4. Touch an area on the screen to focus the camera. The yellow focus box displays and focuses on that area.
5. Touch  to take a photo.
A thumbnail of the most recent photo displays in the gallery button (3).

Recording Videos on Android 11

1. Swipe up from the bottom of the Home screen and touch **Camera**.
2. Point the camera and frame the scene.
3. To zoom in or out, press two fingers on the display and pinch or expand fingers. The zoom controls appear on the screen.
4. Touch  to start recording.
The video time remaining appears in the top left of the screen.
5. Touch  to end the recording.
The video momentarily displays as a thumbnail in the lower left corner.

Recording Videos on Android 13

This section describes how to use the video feature on the Camera app.

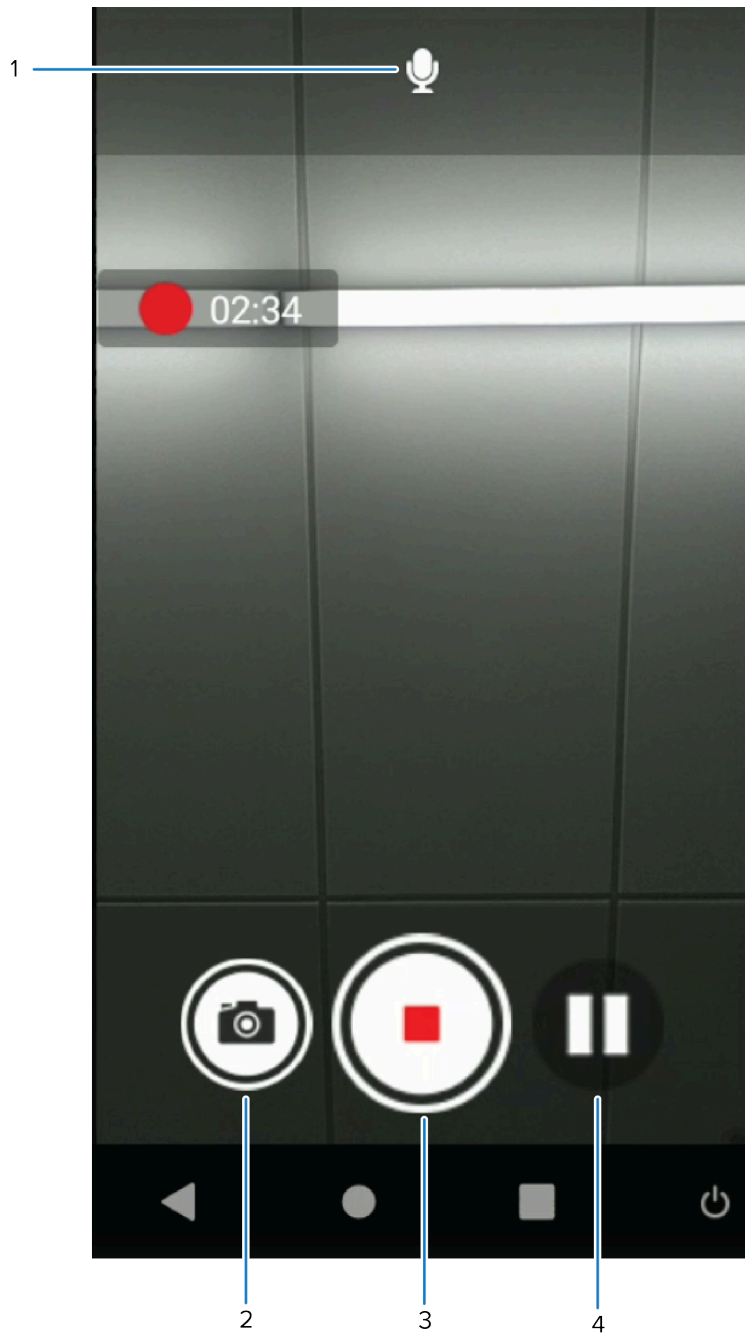


1	Microphone
2	Camera button
3	Start/Stop recording button
4	Pause recording button

1. Open the Camera app.

2. Touch the video button. Recording begins automatically.
3. Point the camera and frame the scene.
4. Touch an area of the screen to focus. The yellow focus box displays and brings that area into focus.
5. Use two fingers to expand the image on the screen to zoom in.
6. Touch the pause button (4) to pause the recording. Touch it again to continue recording.
7. Take a photo during recording by touching the camera button (2).
8. Press the Start/Stop recording button (3) to end the recording.

Camera Settings on Android 11


In Photo mode, camera settings appear on the screen. Touch **⋮** >  to display the camera settings options. Settings vary depending on whether the front or rear camera is active.

- **General** - These settings apply to both the still camera and video camera.
 - **GPS location** - Turn On (default) or Off.
 - **Face Detection** - Select to turn face detection Off (default) or On.
 - **Storage** - Set the location to store the photo to: Phone or SD Card.
 - **Camera Sounds** - Select to play a shutter sound when taking a photo. Options: Disable or Enable (default).
 - **Location Tags** - Includes location information when pictures and videos are taken.
 - **Dirty Lens Detection** - Notifies when the camera lens might be dirty. Options: Disable (default) or Enable.
 - **QR Code Mode** - Enable to scan QR Codes with the option to launch URL. Options: Disable (default) or Enable.
 - **Google Lens** - Select to enable Google-developed recognition technology that brings up relevant information related to identified objects within an image.
 - **Digital Level** - Display a level line to ensure the photo or video is level. Options: Disable (default) or Enable.
 - **Gestures** - View gestures and power user controls. Gestures include: Swipe Down, Swipe Up, Side Swipe, Tap, Tap + Hold, Double Tap, and Hold Zoom.

- **Still Camera** - These settings apply only to the still camera.
 - **Countdown timer** - Select Off (default), 2 seconds, 5 seconds or 10 seconds.
 - **Countdown timer** - Select Off (default), 3 seconds, or 10 seconds.
 - **Continuous Shot** - Select to take a series of photos quickly while holding the capture button. Off (default) or On.
 - **Grid line** - Enable to apply a 3x3 grid guide to the camera viewport.
 - **Selfie Mirror** - Select to save a mirror image of the photo. Available for the front camera only. Options: Off (default) or On.
 - **Picture size** - The size (in pixels) of the photo: 13M pixels (rear camera default), 8M pixels, 5M pixels (front camera default), 3M pixels, HD1080, 2M pixels, HD720, 1M pixels, or WVGA.
 - **Picture size** - The size (in pixels) of the photo to: 13M pixels (rear camera default), 8M pixels (rear camera only), 5M pixels (front camera default), 3M pixels, HD1080, 2M pixels, HD720, 1M pixels, WVGA, VGA, or QVGA.
 - **Picture size** - The size (in pixels) of the photo to: 16M pixels (rear camera only, default), 8M pixels (front camera default), 5M pixels, WVGA, VGA, or QVGA.
 - **Picture size** - The size (in pixels) of the photo to: 16M pixels (rear camera only, default), 8M pixels, 5M pixels (front camera default), WVGA, VGA, or QVGA.
 - **Picture quality** - Set the picture quality setting to: Low, Standard, or High (default).
 - **Redeye reduction** - Helps eliminate the redeye effect. Available for the rear camera only. Options: Disabled (default), or Enable.
 - **Exposure** - Set the exposure settings to: -2, -1.5, -1, -0.5, 0 (default), +0.5, +1, +1.5, +2.
 - **White balance** - Select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors:
 - **Incandescent** - Adjust the white balance for incandescent lighting.
 - **Fluorescent** - Adjust the white balance for fluorescent lighting.
 - **Auto** - Adjust the white balance automatically (default).
 - **Daylight** - Adjust the white balance for daylight.
 - **Cloudy** - Adjust the white balance for a cloudy environment.
 - **Selfie Flash** - Turns the screen white to help produce a little extra light in dimmer settings. Available for the front camera only. Options: Off (default), or On.
 - **Shutter Sound** - Select to play a shutter sound when taking a photo. Options: Disable or Enable (default).
 - **AF Animation** - Select to enable or disable the camera focus ring in the camera preview. Options: Disable (default) or Enable.
 - **AutoFocus Animation** - Select to enable or disable the camera focus ring in the camera preview. Options: Disable (default) or Enable.
 - **Picture Format** - All still images are saved in JPEG format.
 - **Picture Format** - Save still images as JPEG (default), or RAW+JPEG.
 - **Picture Format** - All still images are saved in JPEG (default) or RAW format.
 - **Photo Grid** - Displays a 3 x 3 grid guide on the camera viewport. Options: Disabled (default), or Enable.

- **MFNR** - Sets multi-frame noise reduction to improve quality in low light conditions. Options: Enabled (default), or Disabled.
- **Video Camera** - These settings apply only to the video camera.
 - **Video quality** - Set video quality to: 4k UHD, HD 1080p (default), HD 720p, SD 480p, VGA, CIF, or QVGA.
 - **Video quality** - Set video quality to: 4k UHD (rear camera only), HD 1080p (default), HD 720p, SD 480p, VGA, CIF, or QVGA.
 - **Video duration** - Set to: 30 seconds (MMS), 10 minutes, 30 minutes (default), or no limit.
 - **Video duration** - Set to: 30 seconds (MMS), 10 minutes (default), 30 minutes, or no limit.
 - **Image Stabilization** - Set to reduce blurry videos due to device movement. Options: On or Off (default).
 - **Noise Reduction** - Off (default), Fast, or High Quality.
 - **Noise Reduction** - Off, Fast, or High Quality (default).
 - **HEVC Encoder** - Save video recordings using high-efficiency video codec (HEVC/h265) for smaller file size. Options: Disabled (default), or Enable.
 - **Video Encoder** - Set the video encoder to: MPEG4, H264 (default), or H265.
 - **Audio Encoder** - Set the audio encoder to: AMRNB, or AAC (default).
 - **Video Rotation** - Set the rotation of the video to: 0 (default), 90, 180, or 270.
 - **Time Lapse** - Set the time lapse interval to: Off (default), or a time between 0.5 seconds and 24 hours.
- **System**
 - **Restore defaults** - Select to restore all settings to the default values.
 - **Version Info** - Displays the software version of the camera app.
 - **About** - Displays the software version of the camera app.

Camera Settings on Android 13

The front camera offers settings to control the quality and appearance of photos taken using the PS20. Touch the **⋮** >  icon to access settings.

General

- **Face Detection** - touch to toggle automated facial detection off (default) and on.
- **Storage** - The PS20 only allows local Phone storage.

Still camera

- **Countdown timer** - touch to select the length of time on the timer. Select **Off**, **2 seconds**, **5 seconds** or **10 seconds**. This defines the delay between pressing the camera button and a photo capture.
- **Continuous shot** - this option is disabled on the PS20.
- **Selfie Mirror** - Touch to turn on or off (default). The Selfie Mirror option vertically flips the camera image.
- **Picture Size** - touch to select the size (in pixels) of the photo. Select **5M**, **3M**, **HD1080**, **2M**, **HD720**, **1M**, or **WVGA**.

- **Picture quality** - touch to select picture quality. Select **Low**, **Standard**, or **High** (default).
- **Exposure** - touch to select an exposure setting. Lower values create a darker image, and higher values result in a brighter image. Select **-1**, **-0.5**, **0.0** (default) **0.5**, **1**, **1.5**, **2.0**.
- **White Balance** - select how the camera adjusts colors in different kinds of light, to achieve the most natural-looking colors.
- **Selfie Flash** - touch to turn the flash on and off (default). The flash turns the screen white to help produce a little extra light in dimmer settings.
- **Shutter Sound** - touch to turn the shutter sounds on and off (default). When Shutter Sound is on, the device plays a sound when the camera takes a photo.
- **AF Animation** - touch to turn AF Animation on or off (default).

Video camera

- **Video quality** - touch to select one of the video quality options. Select **HD 1080p**, (default) **HD720p**, **DS 480p**, **VGA**, **CIF**, or **QVGA**
- **Video duration** - touch to select the maximum duration of a video. Select **30 seconds(MMS)**, **10 minutes**, **30 minutes** (default) or **no limit**.
- **Image Stabilization** - touch to turn image stabilization on or off (default). When active, Image Stabilization reduces the effect of camera movement on video quality.
- **Noise Reduction** - touch to set Noise Reduction to **Off**, **Fast**, or **High Quality**.
- **Video Encoder** - touch to select the video compression method the video camera uses. Select **H264** (default) or **H265**. H264 uses moderate compression. H265 produces higher video quality at lower bit rates.
- **Audio Encoder** - touch to select the audio compression method the video camera uses. Select **AMRNB** or **AAC** (default).
- **Video Rotation** - touch to select the video rotation setting. Select **0**, (default) **90**, **180**, or **270**. When video rotation is set, the camera display is normal during recording, and the video is rotated during playback.
- **Time lapse** - touch to set the video duration. The video will be compressed down to the length of time selected. Select **0.5 seconds**, (default) **1 second**, **1.5 seconds**, **2 seconds**, **2.5 seconds**, **3 seconds**, or **4 seconds**.


System


- **Restore defaults** - touch to restore all camera settings to their default status.

Updating Cradle Firmware

The Cradle Firmware Updater app (CradleFWUpdater) allows the manual updating of cradle firmware using the device.

1. Go to the Zebra Support & Downloads website, zebra.com/support, or contact a Zebra Support Representative.
2. Download the MC18CradleFWvx_x firmware file to a host computer.
3. Using Android Debug Bridge (adb) or the sideload process, copy the firmware file to the device.

4. Swipe up from the bottom of the Home screen and touch  CradleFWUpdater.

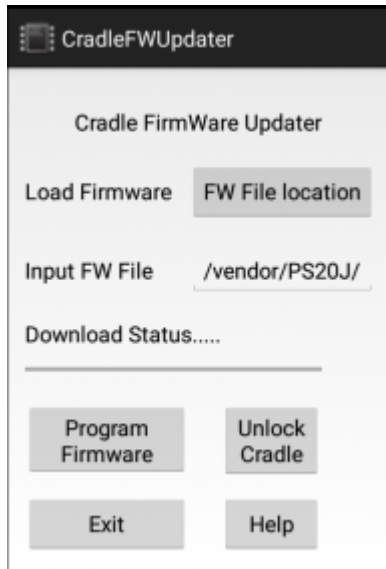

The CradleFWUpdater screen displays.

5. Dock the device in the cradle.
6. Select FW File location.
The Files app opens.
7. Select the appropriate HEX firmware file and select OK.
The path of the selected file displays in the Input FW File text box.
8. Verify the filename and extension.
9. Select Program Firmware. A warning dialog displays, "Please don't remove device from cradle until FW Update complete. Continue?."
10. Select OK to initiate the firmware update process.




NOTE: During the firmware initiation process, the application resets the cradle. If the following error dialog displays: Please manually reset the cradle and then press OK, the user is required to manually reset the cradle.

To manually reset the cradle:


- a) Disconnect power from the power supply unit of the cradle.
- b) Reconnect power to the power supply unit of the cradle.
- c) Select OK within 10 seconds after power on and before the LEDs on the cradle start glowing, to remove the error message and continue. Failing to select OK before the LEDs starts glowing will re-display the error message. If the user fails continuously 2 times, the firmware update process stops.
- d) If the app is successful, it will start the downloading process.

- After resetting the cradle, the app starts the firmware download process.

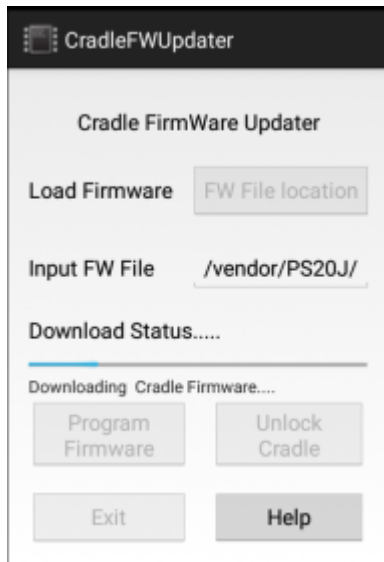

CAUTION: Do not attempt to disconnect power from the cradle or remove the device from the cradle during a cradle firmware update. Removing the device from the cradle while the firmware update is ongoing would result in an incomplete firmware update, leaving the cradle with partial firmware. To recover from the situation of partially downloaded firmware, open the Cradle Firmware Updater app and perform a manual reset of the cradle power when alerted.

- When Download Complete displays on the screen, the firmware update process is completed successfully. Select **Unlock Cradle** to unlock and remove the device from the cradle. Select **Help** for app information and instructions for using the app.

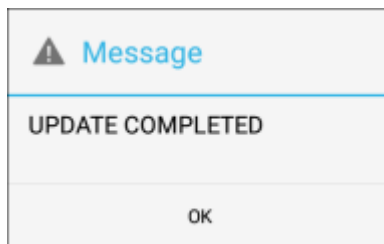

Sending the File Using the Recovery Method

- Put the device in Recovery Mode.
- Select **Update via adb > FullPackageUpdate**.
- Enter the following at a command prompt:

```
adb sideload <packagename>
```

- Reboot the device.



NOTE: It is also possible to use MDM to update Cradle Firmware through a recovery package.

Cradle Utility


The Cradle Utility controls the functions and information pertaining to the cradle.

Use the Cradle Utility to:

- Perform cradle operations (for example, unlock cradle or set LED)
- Configure cradle information (for example, Row ID or Column ID)
- Read the cradle manufacturing information
- Read the cradle diagnostics information.

Controlling the Cradle

- Tap the CRADLE UNLOCK tab to set the cradle unlock information.

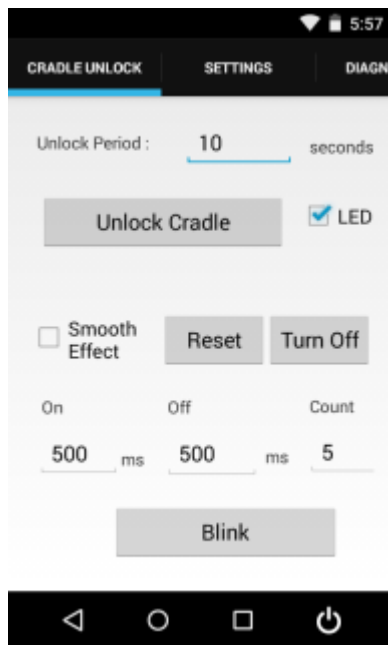

- **Unlock Period:** The duration in seconds for which the device remains in unlocked state (if not removed from the cradle). For example; if unlock period is set to 15 and unlock signal is received, the device will unlock and lock back after 15 seconds (if its not removed by user).
- **Unlock Cradle:** Press Unlock Cradle to manually unlock the device from the cradle.
- **LED:** Check the LED box to enable the cradle LED indication.
- **Smooth Effect:** Check the Smooth Effect box to enable smooth blinking of the LEDs.
- **LED Setting > On:** The duration (in ms) that the cradle LED remains turned on or blinks during unlock.
- **LED Setting > Off:** The duration (in ms) that the cradle LED remains turned off or blinks during unlock.
- **LED Setting > Count:** The number of times the cradle LED blinks when user presses the blink button.
- **Blink:** Tap to test the cradle LED operation.

Setting the Cradle


The Cradle Utility allows you to manually enter cradle settings. To automatically enter cradle settings, use the optional Smart Cradle Configuration app (CradleSmartConfig).

Setting the cradle charging rate: Depending on the cradle installation configuration, the store technician can configure each individual cradle slot to enable/disable fast charge. Each cradle can be configured to charge its docked terminal at 1 A (normal charging mode - default setting) or 1.5 A (fast charging mode).



NOTE: The cradle charging rate is retained across firmware upgrades.


- Tap the Settings tab to set the cradle information.

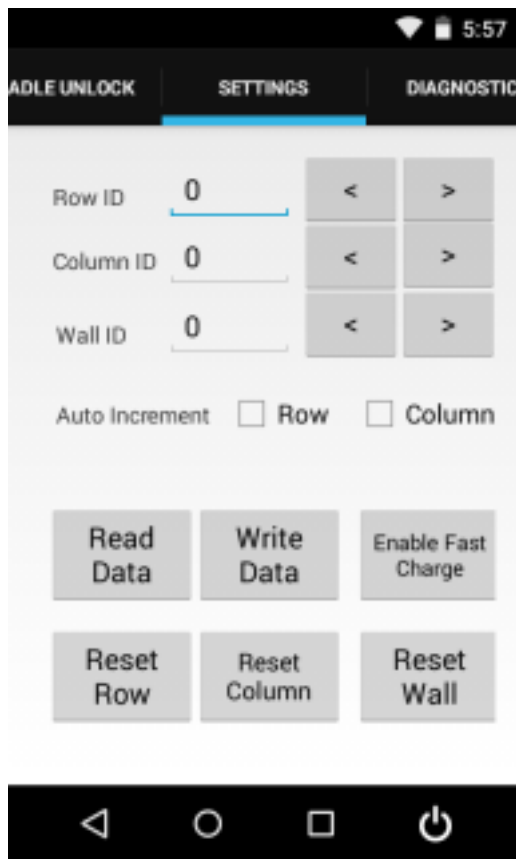

- **Row ID:** The cradle row number in the dispenser wall.
- **Column ID:** The cradle column number in the dispenser wall.
- **Wall ID:** The number of dispenser wall where the cradle is positioned.
- **Read Data:** Retrieve setting data from the cradle memory and display on the screen.
- **Write Data:** Tap this button to program the row/col/wall information onto the cradle. Note that each slot on the Three Slot Cradle needs to be programmed separately.
- **Enable Fast Charge:** Enable the cradle to charge the device at a current of 1.5 A (default setting is 1 A)
- **Reset Row:** Tap to update the Row ID in the text field to “0” on the application.
- **Reset Column:** Tap to update the Column ID in the text field to “0” on the application.
- **Reset Wall:** Tap to update the Wall ID in the text field to “0” on the application.

Performing Cradle Diagnostics


- Touch Diagnostic tab to perform the cradle diagnostics.

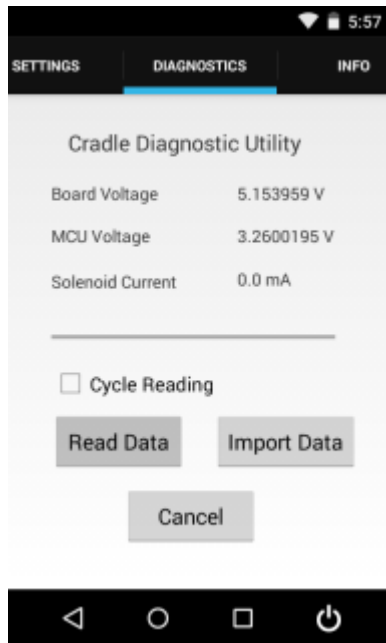

- **Cycle Reading:** Check the Cycle Reading box to perform continuous diagnostics and display the cradle status information. During diagnostics, a progress bar is shown on the screen.
- **Read Data:** Tap to start performing diagnostics.
- **Import Data:** Tap to save the recorded results of the diagnostics on a file.

Viewing Cradle Information

- To view cradle information, touch the Info tab.

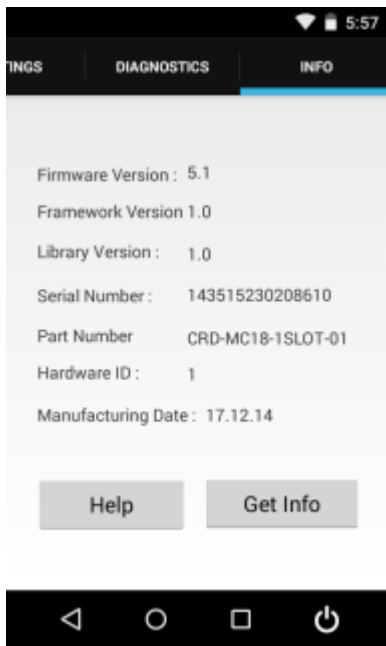

Smart Cradle Configuration

The Smart Cradle Configuration app (CradleSmartConfig) avoids the need to manually enter the row, column, and wall ID's during the cradle wall configuration. Unlike using the Cradle Utility, where these values are entered for each slot, CradleSmartConfig guides the user through the configuration process. Additionally, the app implements automatic error checks and provides auditing mechanisms (Quick/Full) once the configuration is completed.

Use CradleSmartConfig to:

- Declare the wall map (row, column, wall, current)
- Declare empty/blank spots (kiosk, TV, computer monitor, or unique store shapes)
- Follow a screen guided sequence to read/program each slot based on the guided map
- Catch errors (duplication, skipped slots, and non-programmed slots).

Support

The CradleSmartConfig app provides users with control over basic functions.

CradleSmartConfig supports the following:

- Single slot and three slot cradles.
- Selectively removing certain cradle slots from the matrix, as placeholders for a kiosk, TV, computer monitor, or unique store shapes.
- Scrolling the screen left/right and up/down.

- A panning view of the cradle wall to be shown below the cradle icons as an indication of where the current focus is.

Prerequisites and Assumptions

In order for CradleSmartConfig to function properly, several conditions must be met.

CradleSmartConfig requires the following prerequisites or assumes the following:

- The customer knows by a paper map or plan what the rows and columns should be set to for the wall.
- The wall is rectangular.
- Empty/blank spots are known (spots that do not have cradles).
- All three slot cradles should be the same type.
- SmartCradleConfig is installed on the device before starting.
- The default charging rate setting is 1A.

Error Prevention

CradleSmartConfig alerts users to potential errors.

The app can help alert users to errors by:

- Detecting if a slot has already been programmed properly.
- Detecting if a slot was missed (for example, 1,2,3,1,2,3,2,3)
- Providing screen guides as to the direction of the next slot to program.
- Guiding when to move up or down a row.
- Visual cues when an error is made.
- Automatically programming Wall/Row/Column/Current once it has detected it moved to the proper next slot.
- Signaling when ready to move to the next slot.

Accessing CradleSmartConfig

1. Go to the Zebra Support & Downloads website, zebra.com/ps20-info.
2. Download CradleSmartConfig to a host computer.




NOTE: This app is not pre-loaded on the device and must be downloaded and installed prior to use.

3. Use the sideload process to copy the CradleSmartConfig.apk file onto a single device.
4. Install the app.

Using CradleSmartConfig



NOTE: Prior to using CradleSmartConfig, all new cradles should be mounted to a wall, including all power connections. We assume they are not programmed, and all cradles are functioning with a unique, factory-set serial number.

1. Swipe up from the bottom of the Home screen and touch **CradleSmartConfig** .
The CradleSmartConfig screen displays.




2. Complete the following:
 - Rows - The cradle row number in the dispenser wall.
 - Columns - The column number in the dispenser wall.
 - Wall ID - The number of dispenser wall where the cradle is positioned.
 - Fast Charge - Touch to enable the cradle to charge the device at a current of 1.5 A (default setting is 1 A).
 - SHD Mode - Touch to enable super high density (SHD) mode, where the cradles are mounted horizontal to the ground.



NOTE: The cradle ID, location, and charging rate are retained across firmware upgrades.

3. Select **SINGLE SLOT** to program a wall of single slot cradles or select **THREE SLOT** to program a wall of three slot cradles.
A map of cradle icons display, based on the number of rows and columns entered in the previous step. For reference, the top left corner is Row 1, Column 1 (R1C1).
4. (Optional) Navigate around the screen. To scroll left/right and up/down:
 - a) Touch and drag your finger on the screen.
 - b) Locate the graphic on the bottom of the screen to show where you are on the map. Scroll bars allow you to drag the screen to see a portion of the total wall.

5. (Optional) Delete cradle slots not used. For example, placeholders for a kiosk, TV, computer monitor, or unique store shapes. To delete cradle slots:
 - a) Touch and hold (long press) the cradle slot icon.
 - b) Select DELETE to confirm.

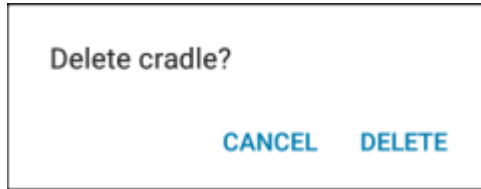


6. Insert the device in the first cradle in the top left corner (Row 1, Column 1).
7. Touch Start.

A Warning dialog displays indicating the correct sequence to follow when configuring the cradles.
8. Select Ok.


CradleSmartConfig programs the row, column, and wall information onto the cradle.

After the first cradle is programmed successfully, a checkmark appears in the location of the cradle icon, and an arrow on the screen points in the direction of where to insert the device in the next slot. An audible sound or visual cradle charge indication may be present.

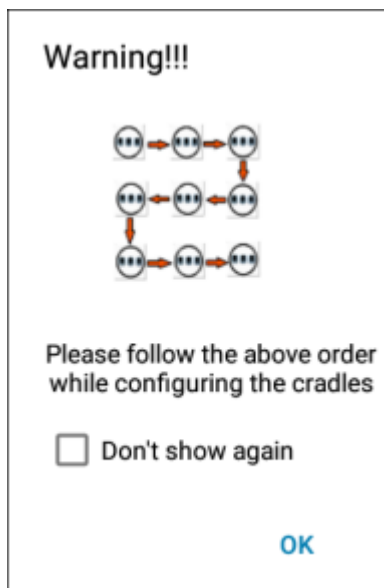


9. Remove the device from the first cradle, and move in the specified direction to insert the device in the next slot.

CradleSmartConfig directs the user to move in the proper direction. If the device is inserted into the wrong slot, the user is prompted.

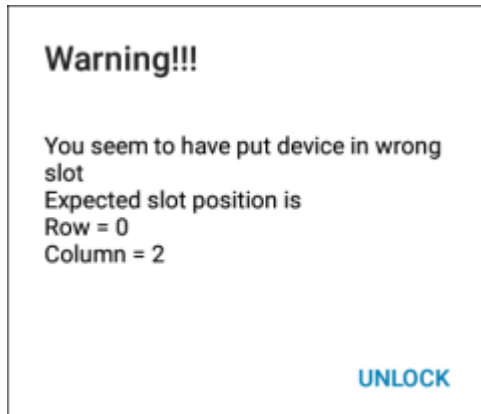


If the device is inserted into the same slot, a message indicates that the cradle has already been configured.

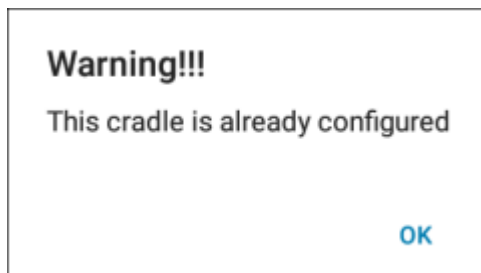


Note that each slot on the Three Slot Cradle needs to be programmed separately. The app guides the user to change rows in a zig-zag pattern for efficiency, with the first row going from left to right with serial numbers (last digits) 1,2,3 and the next row going from right to left with serial numbers (last digits) 3,2,1. The app also guides the user to skip the empty or blank areas. In a single slot cradle, the HW serial number's last digit is 0.

10. Moving in the direction specified, repeat until all cradles are configured.

If the user abandons programming before the entire wall is completed, the user must start over from the beginning.

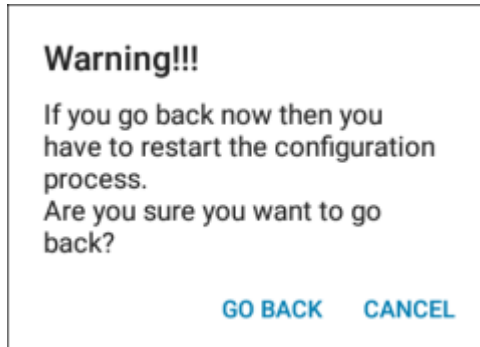

The app detects when it has reached the end of the wall, and the Configuration complete dialog displays.

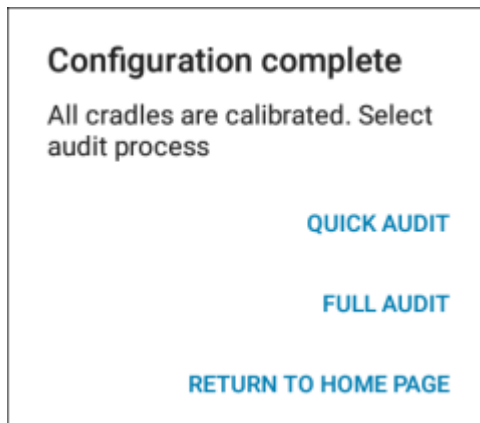

11. Select one of the following:
 - QUICK AUDIT - A sample of cradles are validated, and the expected data is compared to what is actually found. Blinking cradles are displayed one after the other at the four corners. The device to be validated should be placed in the middle slot of the blinking icon.
 - FULL AUDIT - All cradles are validated, and the expected data is compared to what is actually found.
 - RETURN TO HOME PAGE - Displays the CradleSmartConfig screen.


Auditing

Auditing validates that the cradles have been programmed correctly. The expected results should match the results found.

Performing a Quick Audit


1. The four corner cradles will blink one after another. Place the device in the middle slot of the first blinking cradle icon.

If the audit was successful and the expected results match the results found, a green screen displays. If the audit failed and the expected results do not match the results found, a red screen displays.

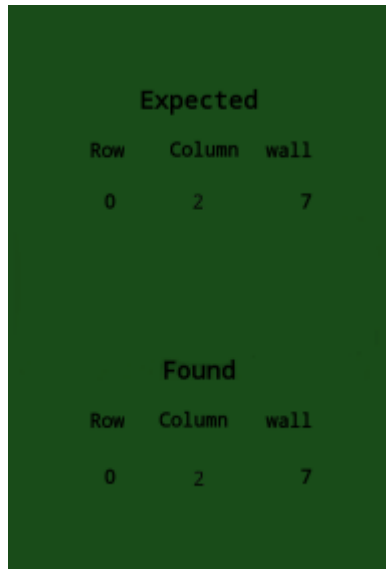

2. Moving in the direction specified, repeat until all cradles are validated.

The app detects when it has reached the end of the wall and the Full Audit is completed screen displays.

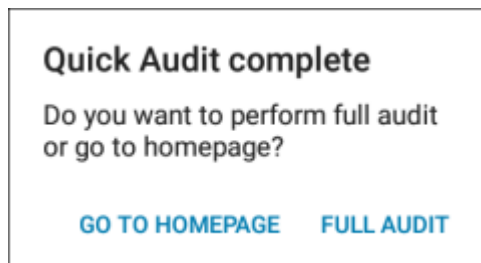


3. Select **GO TO HOMEPAGE** to return to the SmartCradleConfig screen.

Performing a Full Audit

A full audit will check all of the cradles to verify that they have been programmed correctly.


1. Place the device in the first cradle, first slot in the top left corner (Row 1, Column 1).

The app detects the cradle in operation and starts validating the current slot.

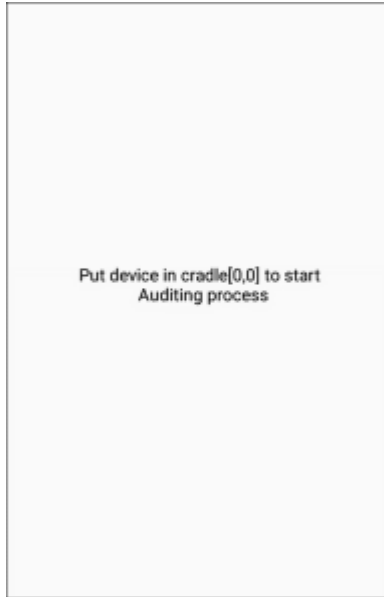

2. Moving in the direction specified, repeat until all cradles are validated.


The app detects when it has reached the end of the wall and the **Full Audit is completed** screen displays.

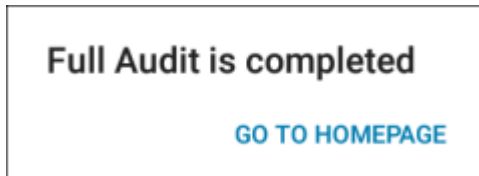

3. Select **GO TO HOMEPAGE** to return to the **SmartCradleConfig** screen.

Wall Map Examples

the CradleSmartConfig app displays a wall map to show cradle configurations.

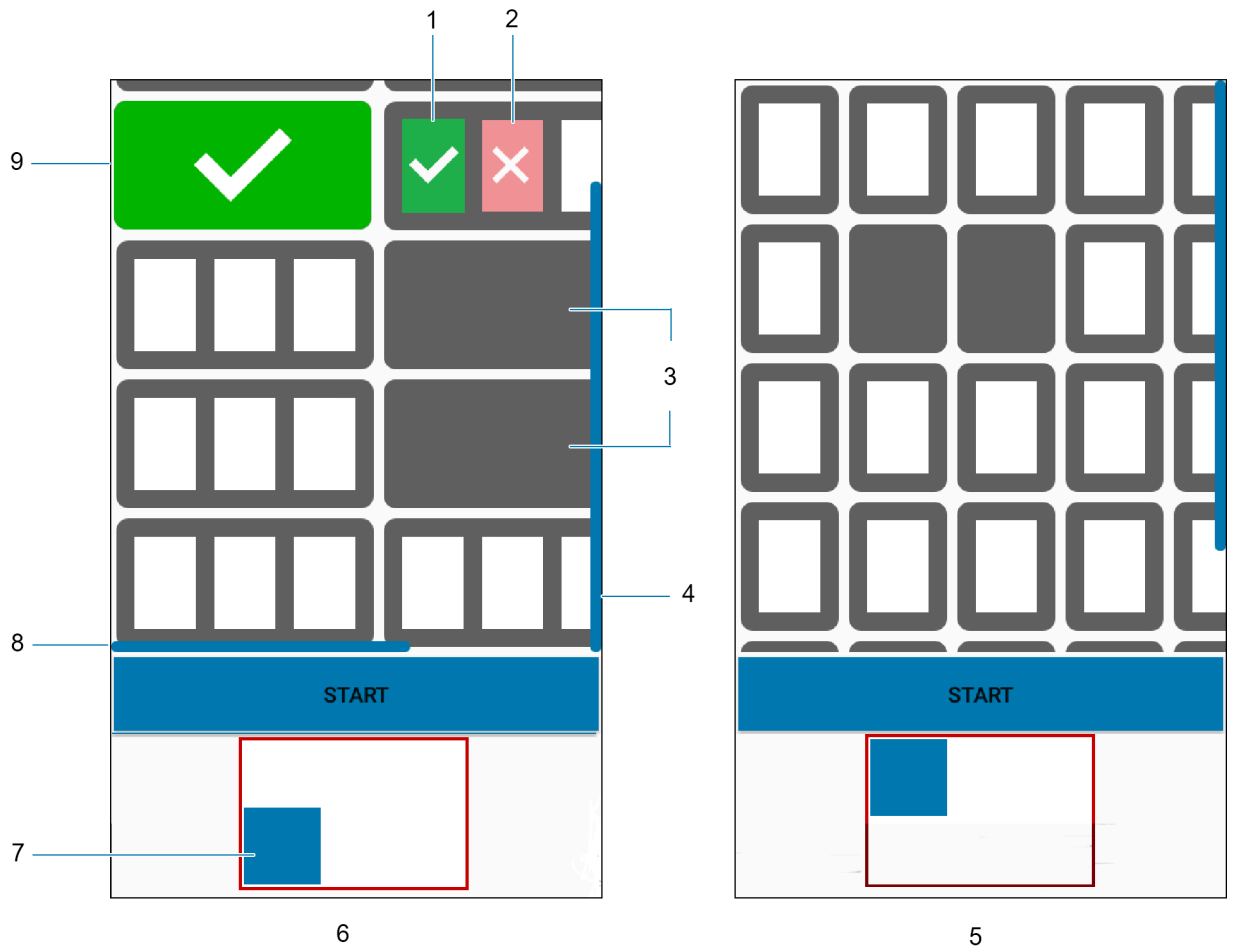

Item	Description
1	Success
2	Fail
3	Deleted slots
4	Vertical scroll bar
5	Single Slot Cradle: 5 Rows, 5 Columns
6	Three Slot Cradle: 5 Rows, 3 Columns
7	Wall map location
8	Horizontal scroll bar
9	Three slots success

DataWedge Demonstration









Use DataWedge Demonstration (DWDemo) to demonstrate data capture functionality. To configure DataWedge, refer to techdocs.zebra.com/datawedge/.



NOTE: DataWedge is enabled on the Home screen. To disable this feature, go to the DataWedge settings and disable the **Launcher** profile.


DataWedge Demonstration Icons

Table 14 DataWedge Demonstration Icons

	Icons	Description
Illumination		Imager illumination is on. Touch to turn illumination off.
Illumination		Imager illumination is off. Touch to turn illumination on.
Data Capture		The data capture function is through the internal imager.
Data Capture		An RS6000 Bluetooth imager is connected.
Data Capture		An RS6000 Bluetooth imager is not connected.
Scan Mode		Imager is in picklist mode. Touch to change to normal scan mode.
Scan Mode		Imager is in normal scan mode. Touch to change to picklist mode.
Menu		Opens a menu to view the application information or to set the application DataWedge profile.

Selecting a Scanner

See the Data Capture section for more information.

1. To select a scanner, touch  > **Settings** > **Scanner Selection**.
2. Press the programmable button or touch the yellow scan button to capture data.
The data appears in the text field below the yellow button.

Enterprise Browser

The Enterprise Browser is an industrial browser that provides everything needed to quickly build device apps for barcode scanning, signature capture, payment processing, printing and most other enterprise applications.

Enterprise Browser includes a runtime environment inside which a company's application logic can be executed and controlled using HTML5 and CSS3 for presentation and JavaScript to access Enterprise Browser APIs for scanners, cameras, card readers and other device peripherals.

The base Enterprise Browser installation includes all necessary components to allow a Windows development host to easily build device apps and set runtime settings for local or mass-deployment using Zebra StageNow or a mobile device management (MDM) system. If migrating from another platform, Enterprise Browser also can run apps built for PocketBrowser, making it an ideal path for moving apps to a newer UI, device or platform.

For more information, refer to techdocs.zebra.com/enterprise-browser/.


Enterprise Browser Application

The application is accessible from the apps screen.

Download the Enterprise Browser application from the [Enterprise Browser Support](#) page. Then go to the [Zebra Licensing Portal](#) to view and manage the Enterprise Browser licenses.

Swipe up from the bottom of the Home screen, and touch **Enterprise Browser**.

Figure 14 Enterprise Browser

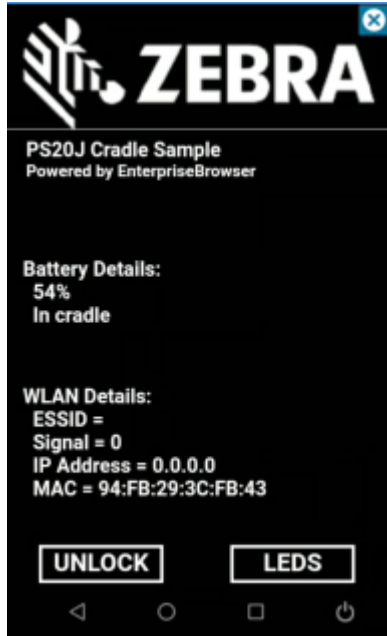

The default Enterprise Browser page provides the following information:

- **Battery Details:**
 - Battery strength in percentage
 - Whether in cradle or not

- **WLAN Details:**
 - ESSID name
 - Signal
 - IP Address of the device
 - MAC address of the device

The buttons at the bottom of the screen:

- **UNLOCK** - Unlocks the device in the cradle.
- **LEDS** - Illuminates the cradle LEDs.

RxLogger

RxLogger is a comprehensive diagnostic tool that provides application and system metrics, and diagnoses device and application issues.

RxLogger logs the following information: CPU load, memory load, memory snapshots, battery consumption, power states, wireless logging, TCP dumps, Bluetooth logging, logcat, FTP push/pull, ANR dumps, etc. All generated logs and files are saved onto flash storage on the device (internal or external).

RxLogger Configuration

RxLogger is built with an extensible plug-in architecture and comes packaged with a number of plug-ins already built-in. For information on configuring RxLogger, refer to techdocs.zebra.com/rxlogger/.

To open the configuration screen, from the RxLogger home screen touch **Settings**.

Configuration File

All RxLogger settings are stored in a file on the device, permitting remote configuration and mass deployment of setting files using an enterprise mobile management (EMM) system.

The config.json configuration file is located in the RxLogger\config folder. Copy the file from the device to a host computer using a USB connection. Edit the configuration file and then replace the JSON file on the device. There is no need to stop and restart the RxLogger service because the file change is automatically detected.

The config.json configuration file is located on the microSD card in the RxLogger\config folder. Copy the file from the device to a host computer using a USB connection. Edit the configuration file and then replace the JSON file on the device. There is no need to stop and restart the RxLogger service because the file change is automatically detected.




IMPORTANT: The RxLogger configuration file is human-readable, but it should not be edited by hand as doing so can lead to unpredictable behavior. Zebra recommends modifying RxLogger settings only through the RxLogger UI.


- File name: config.json
- Location: /<internal_storage>/RxLogger
- With external SD Card: /storage/sdcard1/RxLogger
- With no external SD Card: /storage/sdcard0/RxLogger When a new settings file is pushed to the device, RxLogger restarts all affected modules and applies the new settings immediately.

Copy the file from the device to a host computer using a USB connection. Edit the configuration file through the RxLogger UI and then replace the JSON file on the device. There is no need to stop and restart the RxLogger service because the file change is automatically detected.

Enabling Logging

1. Swipe the screen up and select .
2. Touch **Start**.

Disabling Logging

1. Swipe the screen up and select .
2. Touch **Stop**.

Extracting Log Files

1. Connect the device to a host computer using a USB connection.
2. Using a file explorer, navigate to the RxLogger folder.
3. Copy the file from the device to the host computer.
4. Disconnect the device from the host computer.

Backing Up Data


RxLogger Utility allows the user to make a zip file of the RxLogger folder in the device, which by default contains all the RxLogger logs stored in the device.

- To save the backup data, touch  > **BackupNow**.

RxLogger Utility

RxLogger Utility is a data monitoring application for viewing logs in the device while RxLogger is running. Logs and RxLogger Utility features are accessed using Main Chat Head.

Initiating the Main Chat Head

1. Open **RxLogger**.
2. Touch  > **Toggle Chat Head**.
The Main Chat Head icon appears on the screen.
3. Touch and drag the Main Chat Head icon to move it around the screen.

Removing the Main Chat Head

1. Touch and drag the icon.
A circle with an X appears.
2. Move the icon over the circle and then release.

Viewing Logs

1. Touch the Main Chat Head icon.
The RxLogger Utility screen appears.
2. Touch a log to open it.
The user can open many logs with each displaying a new Sub Chat Head.
3. If necessary, scroll left or right to view additional Sub Chat Head icons.
4. Touch a Sub Chat Head to display the log contents.

Removing a Sub Chat Head Icon

- To remove a Sub Chat Head icon, press and hold the icon until it disappears.

Backing Up In Overlay View

RxLogger Utility allows the user to make a zip file of the RxLogger folder in the device, which by default contains all the RxLogger logs stored in the device.

The Backup icon is always available in Overlay View.

1. Touch .
The Backup dialog box appears.
2. Touch **Yes** to create the backup.

Data Capture

This section provides information for capturing barcode data using various scanning options.

The imager allows the collection of data by scanning bar codes.

The imager has the following features:

- Reads a variety of barcode symbologies, including the most popular linear, postal, and 2-D code types.
- Contains advanced, intuitive aiming light for easy point-and-shoot operation.



NOTE: Bluetooth scanners are not supported.

The device supports data capture using:

- Integrated SE2100 Imager
- Integrated SE4710 Imager

Scanning Considerations

Typically, scanning is a simple matter of aim, scan, and decode, with a few quick trial efforts to master it.

However, consider the following to optimize scanning performance:

- **Range** — Scanners decode optimally over a particular working range — minimum and maximum distances from the barcode. This range varies according to barcode density and scanning device optics. Scan within range for quick and constant decodes; scanning too close or too far away prevents decodes. Move the scanner closer and further away to find the right working range for the barcodes being scanned.
- **Angle** — Scanning angle is important for quick decodes. When the illumination/flash reflects directly back into the imager, the specular reflection can blind/saturate the imager. To avoid this, scan the barcode so that the beam does not bounce directly back. Do not scan at too sharp an angle; the scanner needs to collect scattered reflections from the scan to make a successful decode. Practice quickly shows what tolerances to work within.
- Hold the device farther away for larger symbols.
- Move the device closer for symbols with bars that are close together.



NOTE: Scanning procedures depend on the app and device configuration. An app may use different scanning procedures from the one listed above.

Scanning Barcodes

Use the imager to capture barcode data.



NOTE: To read a barcode, a scan-enabled app is required. The device contains the DataWedge app that allows the user to enable the scanner to decode barcode data and display the barcode content.

To scan a barcode:

1. Launch a scanning application.
2. Press the Scan key and aim the device at a barcode.

3. Adjust the position of the device so that the:

- Red aiming dot appears at the center of the barcode on devices with the SE4710 imager.
- White LED appears around the barcode on devices with the SE2100 imager.

Ensure the barcode is within the area formed by the aiming pattern. On devices with the SE4710 imager, the aiming dot is used for increased visibility in bright lighting conditions.

Figure 15 SE4710 Imager Decode Mode


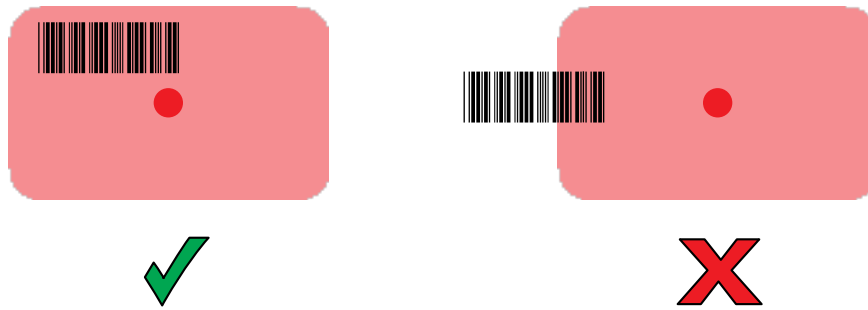


Figure 16 SE4710 Imager Picklist Mode



NOTE: Picklist Mode is only available on a device with the SE4710 imager. In Picklist Mode, the imager does not decode the barcode until the crosshair or aiming dot touches the barcode.

Figure 17 SE2100 Imager Decode Mode

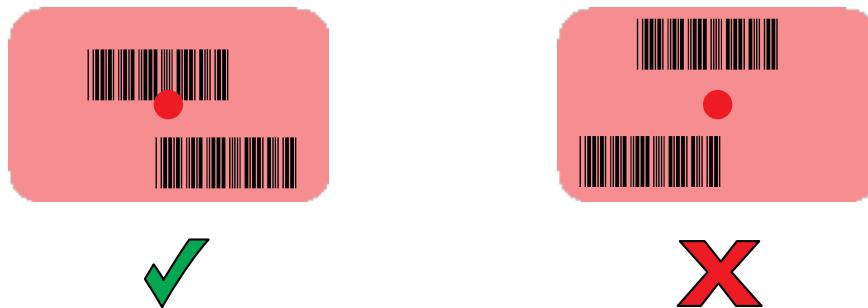

4. Release the Scan key.

The barcode data displays on the screen.

Decode Screen Notification

Display a translucent green screen overlay as a notification for each successful decode.

Scan Params in DataWedge includes an option for **Decode Screen Notification**. Enable this option to display a translucent green screen overlay as a notification for each successful decode. In addition, Scan Params includes options for **Decode Screen Notification Timer** and **Decode Screen Translucency Level**, which allow you to set the green screen overlay time in milliseconds and the level of translucency.



NOTE: For **Decode Screen Notification** to work, **Display over other apps** permission must be granted for the application.

Figure 18 Translucent Green Overlay Decode Screen Notification



Hands-Free Scanning

Hands-Free Scanning allows the user to capture barcode data when a barcode is placed within the view of the device without pressing the trigger.


Hands-Free Scanning is enabled using the **Hands Free Trigger** settings or when the device is placed in the cart/mount. Hands-Free Scanning is set to disabled by default.

Settings

Use the Hands-Free Trigger setting to configure scanning mode and the proximity trigger sensitivity.

Swipe down from the Status bar to open the Quick Access panel and then touch  > **Hands-Free Trigger** .


Figure 19 Hands Free Trigger Settings

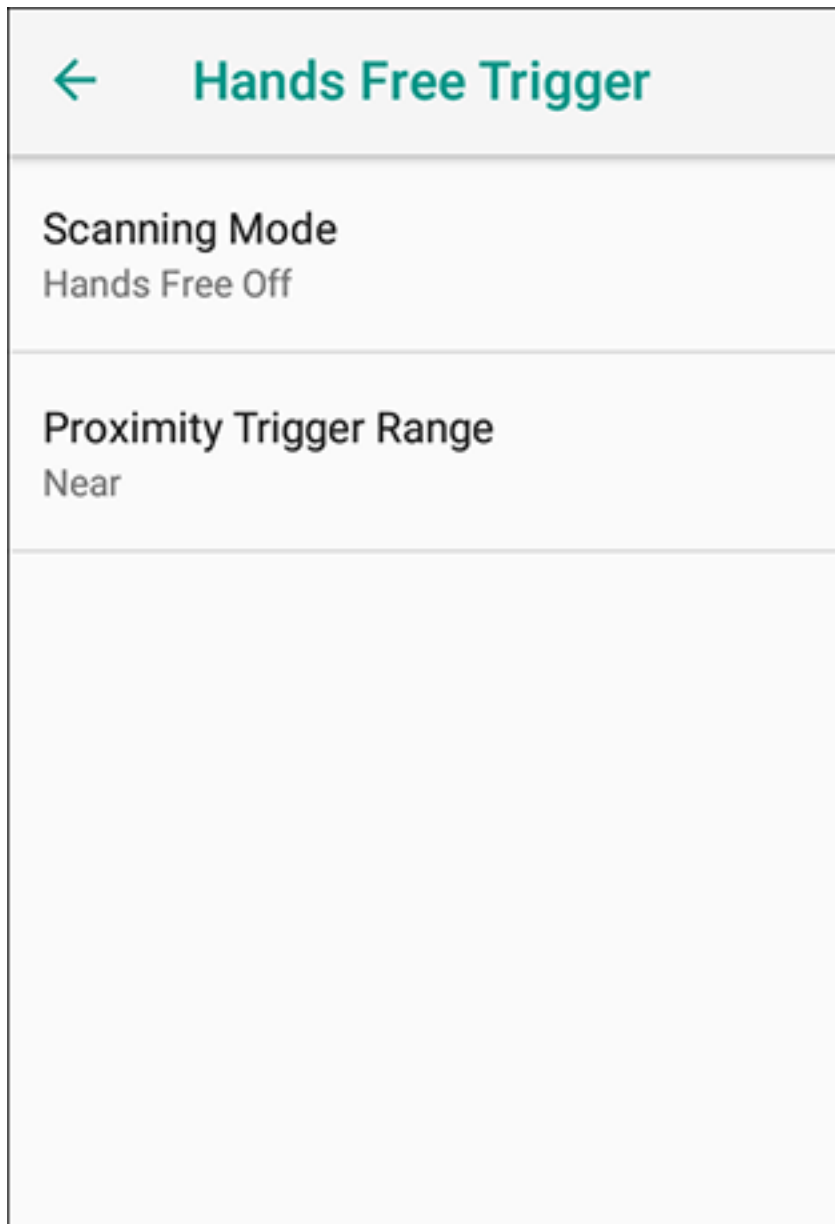

Scanning Mode

Use the **Scanning Mode** settings to configure how the device functions while in hands free scanning mode.

Figure 20 Scanning Mode Dialog Box

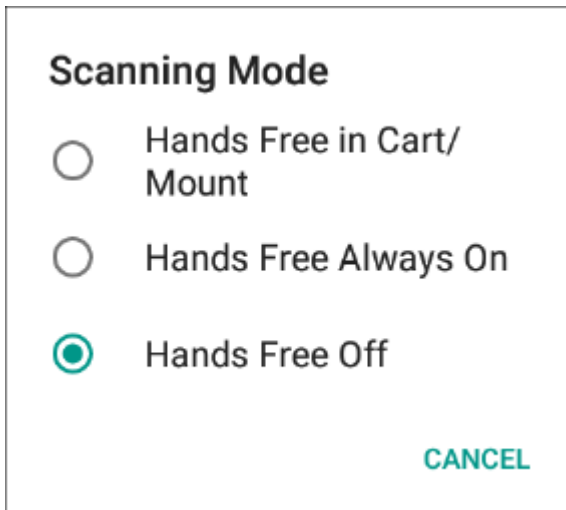


NOTE: In order to use the **Hands Free in Cart/Mount** scanning mode, the devices in a store must be calibrated to the cart orientation first. A properly calibrated device with hands-free scanning mode enabled will detect when it has been placed in a cart and automatically enable the hands-free trigger. While in the cart, the device displays a shopping cart notification in the status bar. For more information about creating and deploying the calibration file, refer to the PS20 Personal Shopper Calibration App User Guide at zebra.com/ps20-info.

- **Hands Free in Cart/Mount** - Select to enable scanning when the device is in the cart/mount. The device detects the difference between in-motion and stationary states. When the device is in the Motion state, proximity scanning is disabled. When the device is in the Stationary state or in a hands free cart/mount, proximity scanning is enabled.
- **Hands Free Always On** - Select to place the device in hands free scanning mode.
- **Hands Free Off** - Select to disable hands free scanning mode (default).

Proximity Range

To configure the proximity sensor range sensitivity, touch **Proximity Trigger Range**.

Figure 21 Proximity Trigger Range Dialog Box

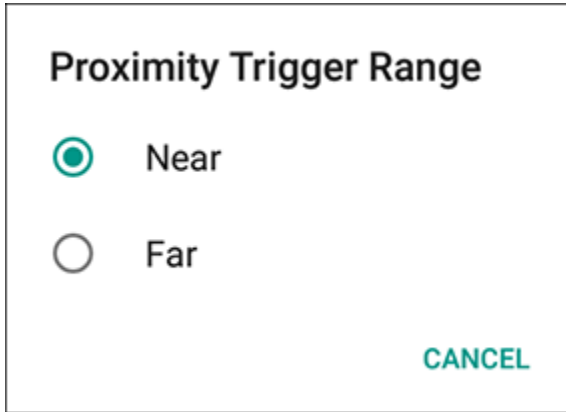

- **Near** — Proximity sensor detects and generates a trigger when the barcode is within 0 to 15 cm (nominal) (default). Ideally, 0-5 in (approx. 13 cm) is supported.
- **Far** — Proximity sensor detects and generates a trigger when the barcode is within 0 to 26 cm (nominal). The maximum range is 10 in (approx. 26 cm).

DataWedge

DataWedge is a utility that adds advanced barcode scanning capability to any application without writing code. It runs in the background and handles the interface to built-in barcode scanners. The captured barcode data is converted to keystrokes and sent to the target application as if it was typed on the keypad.

DataWedge allows any app on the device to get data from input sources such as a barcode scanner, MSR, RFID, voice, or serial port and manipulate the data based on options or rules.



Configure DataWedge to:

- Provide data capture services from any app.
- Use a particular scanner, reader, or other peripheral devices.
- Properly format and transmit data to a specific app.

To configure DataWedge, refer to techdocs.zebra.com/datawedge/.

Enabling DataWedge



This procedure provides information on how to enable DataWedge on the device.

1. Swipe up from the bottom of the Home screen and touch .
2. Touch  > **Settings**.
3. Touch the **DataWedge enabled** checkbox.

A blue checkmark appears in the checkbox indicating that DataWedge is enabled.

Disabling DataWedge

This procedure provides information on how to disable DataWedge on the device.

1. Swipe up from the bottom of the Home screen and touch .
2. Touch .
3. Touch **Settings**.
4. Touch **DataWedge enabled**.

Supported Decoders

This sections provides the supported decoders for each data capture option.

SE2100 Internal Imager Supported Decoders

Lists the supported decoders for the SE2100 internal imager.

Table 15 SE2100 Supported Decoders

Decoder	Default State	Decoder	Default State	Decoder	Default State
Australian Postal	O	EAN8	X	MSI	O
Aztec	X	Grid Matrix	O	PDF417	X
Canadian Postal	O	GS1 DataBar	X	QR Code	X
Chinese 2 of 5	O	GS1 DataBar Expanded	X	Decoder Signature	O
Codabar	X	GS1 DataBar Limited	O	TLC 39	O
Code 11	O	GS1 Datamatrix	-O	Trioptic 39	O
Code 128	X	GS1 QRCode	O	UK Postal	O
Code 39	X	HAN XIN	—	UPCA	X
Code 93	O	Interleaved 2 of 5	O	UPCE0	X
Composite AB	O	Japanese Postal	O	UPCE1	O
Composite C	O	Korean 3 of 5	O	US4state	O
Discrete 2 of 5	O	MAIL MARK	X	US4state FICS	O
Datamatrix	X	Matrix 2 of 5	O	US Planet	O
Dutch Postal	O	Maxicode	X	US Postnet	O
DotCode	O	MicroPDF	O		
EAN13	X	MicroQR	O		

Key: X = Enabled, O = Disabled, — = Not Supported

SE4710 Internal Imager Supported Decoders

Lists the supported decoders for the SE4710 internal imager.

Table 16 Internal Imager SE4710 Supported Decoders

Decoder	Default State	Decoder	Default State	Decoder	Default State
Australian Postal	O	EAN8	X	MSI	O
Aztec	X	Grid Matrix	O	PDF417	X
Canadian Postal	O	GS1 DataBar	X	QR Code	X
Chinese 2 of 5	O	GS1 DataBar Expanded	X	Decoder Signature	O
Codabar	X	GS1 DataBar Limited	O	TLC 39	O
Code 11	O	GS1 Datamatrix	O	Trioptic 39	O
Code 128	X	GS1 QRCode	O	UK Postal	O
Code 39	X	HAN XIN	O	UPCA	X
Code 93	O	Interleaved 2 of 5	O	UPCE0	X
Composite AB	O	Japanese Postal	O	UPCE1	O
Composite C	O	Korean 3 of 5	O	US4state	O
Discrete 2 of 5	O	MAIL MARK	X	US4state FICS	O
Datamatrix	X	Matrix 2 of 5	O	US Planet	O
Dutch Postal	O	Maxicode	X	US Postnet	O
DotCode	O	MicroPDF	O		
EAN13	X	MicroQR	O		

Key: X = Enabled, O = Disabled, - = Not Supported

Wireless

This section provides information on the wireless features of the device.

The following wireless features are available on the device:

- Wireless Local Area Network (WLAN)
- Bluetooth
- Cast

Wireless Local Area Networks

Wireless local area networks (WLANs) allow the device to communicate wirelessly inside a building. Before using the device on a WLAN, the facility must be set up with the required hardware to run the WLAN (sometimes known as infrastructure). The infrastructure and the device must both be properly configured to enable this communication.

Refer to the documentation provided with the infrastructure (access points (APs), access ports, switches, Radius servers, etc.) for instructions on how to set up the infrastructure.

Once the infrastructure is set up to enforce the chosen WLAN security scheme, use `wireless & networks (A11)` `Network & internet (A13)` to open settings and configure the device to match the security scheme.

The device supports the following WLAN options:

- Open
- Wireless Equivalent Privacy (WEP)
- Wi-Fi Protected Access (WPA)/WPA2 Personal (PSK)
- WPA/WPA2/WPA3 Enterprise (EAP) (A11 only)
 - Lightweight Extensible Authentication Protocol (LEAP).
 - Protected Extensible Authentication Protocol (PEAP) - with MSCHAPV2 and GTC authentication.
 - Transport Layer Security (TLS)
 - Password (PWD).
 - Tunneled Transport Layer Security (TTLS) - with Password Authentication Protocol (PAP), MSCHAP and MSCHAPv2 authentication, and GTC authentication.

- WPA/WPA2-Enterprise (A13 only)
 - Protected Extensible Authentication Protocol (EAP_ with MSCHAPV2 and GTC authentication
 - Transport Layer Security (TLS)
 - Tunneled Transport Layer Security (TTLS) with Password Authentication Protocol (PAP) with hSCHAP and MSCHAPv2 authentication, and GTC authentication.
 - Password (PWD).
 - Extensible Authentication Protocol Method for Subscriber Identity Module (SIM)
 - Extensible Authentication Protocol Method for Authentication and Key Agreement (AKA)
 - Improved Extensible Authentication Protocol Method for Authentication and Key Agreement (AKA')
 - Lightweight Extensible Authentication Protocol (LEAP).
- WPA3-Enterprise 192-bit
- WPA3-Enterprise (A13 only)
 - Protected Extensible Authentication Protocol (PEAP) - with MSCHAPV2 and GTC authentication.
 - Transport Layer Security (TLS)
 - Tunneled Transport Layer Security (TTLS) - with Password Authentication Protocol (PAP) with MSCHAP and MSCHAPv2 authentication, and GTC authentication.
 - Password (PWD)
 - Extensible Authentication Protocol Method for Subscriber Identity Module (SIM)
 - Extensible Authentication Protocol Method for Authentication and Key Agreement (AKA)
 - Improved Extensible Authentication Protocol Method for Authentication and Key Agreement (AKA')
 - Lightweight Extensible Authentication Protocol (LEAP)

The **Status** bar displays icons that indicate Wi-Fi network availability and Wi-Fi status.



NOTE: To extend the life of the battery, turn off Wi-Fi when not in use.

Connecting to a Wi-Fi Network

Most of the PS20's functionality requires an internet connection. Connect to an available Wi-Fi network to use the device features.

1. Go to **Settings**.
2. Touch **Network & internet**.
3. Touch **Wi-Fi** to open the **Wi-Fi** screen. The device searches for WLANs in the area and lists them.
4. On Android 11, touch **Wi-Fi** to open the **Wi-Fi** screen. The device searches for WLANs in the area and lists them.
5. On Android 13, touch **Internet** to open the **Internet** screen. The device searches for WLANs in the area and lists them.
6. Touch **Internet** to open the **Internet** screen. The device searches for WLANs in the area and lists them.
7. Scroll through the list and select the desired WLAN network.

8. For open networks, touch the profile once or press and hold and then select **Connect** or for secure networks, enter the required password or other credentials, then touch **Connect**. See the system administrator for more information.

The device obtains a network address and other required information from the network using the dynamic host configuration protocol (DHCP) protocol. To configure the device with a fixed internet protocol (IP) address, see [Configuring the Device to Use a Static IP Address](#).

9. In the Wi-Fi setting field, **Connected** appears, indicating that the device is connected to the WLAN.
- 10.

Removing a Wi-Fi Network

Remove a remembered or connected Wi-Fi network.

1. Go to **Settings**.
2. Touch **Network & Internet**.
3. On A11, touch **Wi-Fi**.
4. On A13, touch **Internet**.
5. Scroll down to the bottom of the list and touch **Saved networks**.
6. Touch the name of the network.
7. Touch **FORGET**.

WLAN Configuration

This section provides information on configuring Wi-Fi settings.

Configuring a Secure Wi-Fi Network

Use the internet settings to set up the correct secure Wi-Fi connection.

1. Go to **Settings**.
2. Touch **Network & Internet**.
3. On Android 11, touch **Wi-Fi**.
4. On Android 13, touch **Internet**.
5. Slide the switch to the **ON** position.
The device searches for WLANs in the area and lists them on the screen.
6. Scroll through the list and select the desired WLAN network.
7. Touch the desired network. If network security is **Open**, the device automatically connects to the network. For all other network security, a dialog box appears.
8. If network security is **WPA/WPA2-Personal**, **WPA3-Personal**, or **WEP**, enter the required password and then touch **Connect**.

9. If network security is **WPA/WPA2/WPA3 Enterprise**:
 - a) Touch the **EAP method** drop-down list and select one of the following:
 - **PEAP**
 - **TLS**
 - **TTLS**
 - **PWD**
 - **LEAP**
 - b) Fill in the appropriate information. Options vary depending on the **EAP method** chosen.
 - When selecting **CA certificate**, Certification Authority (CA) certificates are installed using the **Security** settings.
 - When using the EAP methods PEAP, TLS, or TTLS, specify a domain.
 - Touch **Advanced options** to display additional network options.
10. If the network security is **WPA3-Enterprise 192-bit**:
 - Touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the Security settings.
 - Touch **User certificate** and select a user certificate. Note: User certificates are installed using the Security settings.
 - In the **Identity** text box, enter the username credentials.



NOTE: By default, the network Proxy is set to None and the IP settings is set to DHCP. See [Configuring for a Proxy Server](#) for setting the connection to a proxy server and see [Configuring the Device to Use a Static IP Address](#) for setting the device to use a static IP address.

11. Touch **Connect**.

Manually Adding a Wi-Fi Network

Manually add a Wi-Fi network if the network does not broadcast its name (SSID) or to add a Wi-Fi network when out of range.

1. Go to **Settings**.
2. Touch **Network & Internet**.
 - On Android 11, touch **Wi-Fi**.
 - On Android 13, touch **Network**.
3. Touch **Network & Internet > Wi-Fi**.
4. Slide the Wi-Fi switch to the **On** position.
5. Scroll to the bottom of the list and select **Add network**.
6. In the **Network name** text box, enter the name of the Wi-Fi network.

7. In the **Security** drop-down list set the type of security to:
 - **None**
 - **Enhanced Open**
 - **WEP**
 - **WPA/WPA2-Personal**
 - **WPA3-Personal**
 - **WPA/WPA2/WPA3-Enterprise** (A11 only)
 - **WPA/WPA2-Enterprise** (A13 only)
 - **WPA-Enterprise** (A13 only)
 - **WPA3-Enterprise 192-bit**
8. If the network security is **None** or **Enhanced Open**, touch **Save**.
9. If the network security is **None**, touch **Save**.
10. If the network security is **WEP**, **WPA3-Personal**, or **WPA/WPA2-Personal**, enter the required password and then touch **Save**.
11. If network security is **WPA/WPA2/WPA3 Enterprise**:
 - a) Touch the **EAP method** drop-down list and select one of the following:
 - **PEAP**
 - **TLS**
 - **TTLS**
 - **PWD**
 - **LEAP**
 - b) Fill in the appropriate information. Options vary depending on the **EAP method** chosen.
 - When selecting **CA certificate**, Certification Authority (CA) certificates are installed using the **Security** settings.
 - When using the EAP methods PEAP, TLS, or TTLS, specify a domain.
 - Touch **Advanced options** to display additional network options.
12. If the network security is WPA3-Enterprise 192-bit:
 - Touch **CA certificate** and select a Certification Authority (CA) certificate. Note: Certificates are installed using the Security settings.
 - Touch **User certificate** and select a user certificate. Note: User certificates are installed using the Security settings.
 - In the **Identity** text box, enter the username credentials.




NOTE: By default, the network Proxy is set to None and the IP settings is set to DHCP. See [Configuring for a Proxy Server](#) for setting the connection to a proxy server and see [Configuring the Device to Use a Static IP Address](#) for setting the device to use a static IP address.

13. Touch **Save**. To connect to the saved network, touch and hold on the saved network and select **Connect to network**.

Configuring for a Proxy Server


A proxy server is a server that acts as an intermediary for requests from clients seeking resources from other servers. A client connects to the proxy server and requests some service, such as a file, connection, web page, or other resource, available from a different server. The proxy server evaluates the request according to its filtering rules. For example, it may filter traffic by IP address or protocol. If the request is validated by the filter, the proxy provides the resource by connecting to the relevant server and requesting the service on behalf of the client.

It is important for enterprise customers to be able to set up secure computing environments within their companies, making proxy configuration essential. Proxy configuration acts as a security barrier ensuring that the proxy server monitors all traffic between the Internet and the intranet. This is normally an integral part of security enforcement in corporate firewalls within intranets.

1. Go to **Settings > Network & Internet**.
2. On Android 11, touch **Wi-Fi**.
3. On Android 13, touch **Internet**.
4. Slide the Wi-Fi switch to the **On** position.
5. In the network dialog box, select and touch a network.
6. If configuring the connected network, touch  to edit the network details and then touch the down arrow to hide the keyboard.
7. Touch **Advanced options**.
8. Touch **Proxy** and select **Manual**.
9. In the **Proxy hostname** text box, enter the address of the proxy server.
10. In the **Proxy port** text box, enter the port number for the proxy server.
11. In the **Bypass proxy for** text box, enter addresses for web sites that are not required to go through the proxy server. Use a comma “,” between addresses. Do not use spaces or carriage returns between addresses.
12. If configuring the connected network, touch **Save** otherwise, touch **Connect**.
13. Touch **Connect**.

Configuring the Device to Use a Static IP Address

By default, the device is configured to use Dynamic Host Configuration Protocol (DHCP) to assign an Internet protocol (IP) address when connecting to a wireless network.

1. Go to **Settings**.
2. Touch **Network & Internet**.
 - On Android 11, touch **Wi-Fi**.
 - On Android 13, touch **Internet**.
3. Slide the Wi-Fi switch to the **On** position.
4. In the network dialog box, select and touch a network.
5. If configuring the connected network, touch  to edit the network details and then touch the down arrow to hide the keyboard.
6. Touch **Advanced options**.

7. Touch **IP settings** and select **Static**.
8. In the **IP address** text box, enter an IP address for the device.
9. If required, in the **Gateway** text box, enter a gateway address for the device.
10. If required, in the **Network prefix length** text box, enter the prefix length.
11. If required, in the **DNS 1** text box, enter a Domain Name System (DNS) address.
12. If required, in the **DNS 2** text box, enter a DNS address.
13. If configuring the connected network, touch **Save** otherwise, touch **Connect**.

Wi-Fi Preferences

Use the Wi-Fi preferences to configure advanced Wi-Fi settings. From the Wi-Fi screen, scroll down to the bottom of the screen.

- On Android 11, touch **Wi-Fi preferences**.
- On Android 13, touch **Network preferences**.
- **Turn on Wi-Fi automatically** - When enabled, Wi-Fi automatically turns back on when near high-quality saved networks.
- On Android 11, touch **Open Network notification**. On Android 13, touch **Notify for public networks**. When enabled, this option notifies the user when an open network/public network is available.
- **Advanced** - touch to expand options (A11 only).
 - **Additional settings** - Touch to view additional Wi-Fi settings.
 - **Install Certificates** - Touch to install certificates.
 - **Network rating provider** - Disabled (AOSP devices). To help determine what constitutes a good Wi-Fi network, Android supports external Network rating providers that provide information about the quality of open Wi-Fi networks. Select one of the providers listed or **None**. If none are available or selected, the Connect to open networks feature is disabled.
 - **Wi-Fi Direct** - Displays a list of devices available for a direct Wi-Fi connection.

Additional Wi-Fi Settings

Use the Additional Settings menu to configure additional Wi-Fi settings.



NOTE: Additional Wi-Fi settings are for the device, not for a specific wireless network.

- **Regulatory**
 - **Country Selection** - Displays the acquired country code if 802.11d is enabled, else it displays the currently selected country code.
 - **Region code** - Displays the current region code.

- **Band and Channel Selection**
 - **Wi-Fi frequency band** - Set the frequency band to: **Auto** (default), **5 GHz only** or **2.4 GHz only**.
 - **Available channels (2.4 GHz)** - Touch to display the **Available channels** menu. Select specific channels and touch **OK**.
 - **Available channels (5 GHz)** - Touch to display the **Available channels** menu. Select specific channels and touch **OK**.
- **Logging**
 - **Advanced Logging** - Touch to enable advanced logging or change the log directory (A11 only).
 - **Advanced Logging** - Touch to enable logging, enable Wi-Fi Verbose Logging, or change the log directory (A13 only).
 - **Wireless logs** - Use to capture Wi-Fi log files.
 - **Fusion Logger** - Touch to open the **Fusion Logger** application. This application maintains a history of high level WLAN events which helps to understand the status of connectivity.
 - **Fusion Status** - Touch to display live status of WLAN state. Also provides information about the device and connected profile.
- **About**
 - **Version** - Displays the current version information. Touch the version to display addition version details.

Wi-Fi Direct

Wi-Fi Direct devices can connect to each other without having to go through an access point. Wi-Fi Direct devices establish their own ad-hoc network when required, letting you see which devices are available and choose which one you want to connect to.

1. Go to **Settings > Network & internet**.
 - On Android 11, touch **Wi-Fi > Wi-Fi Preferences > Advanced > Wi-Fi Direct**.
 - On Android 13, touch **Internet > Network preferences > Wi-Fi Direct**.
2. The device begins searching for another Wi-Fi Direct device.
3. Under **Peer devices**, touch the other device name.
4. On the other device, select **Accept**.

Connected appears on the device. On both devices, in their respective Wi-Fi Direct screens, the other device name appears in the list.

Bluetooth

Bluetooth devices can communicate without wires, using frequency-hopping spread spectrum (FHSS) radio frequency (RF) to transmit and receive data in the 2.4 GHz Industry Scientific and Medical (ISM) band (802.15.1). Bluetooth wireless technology is specifically designed for short-range (10 m (32.8 ft)) communication and low power consumption.

Devices with Bluetooth capabilities can exchange information (for example, files, appointments, and tasks) with other Bluetooth enabled devices such as printers, access points, and other mobile devices.

The device supports Bluetooth Low Energy. Bluetooth Low Energy is targeted at applications in the healthcare, fitness, security, and home entertainment industries. It provides reduced power consumption and cost while maintaining standard Bluetooth range.

Adaptive Frequency Hopping

Adaptive Frequency Hopping (AFH) is a method of avoiding fixed frequency interferers, and can be used with Bluetooth voice. All devices in the piconet (Bluetooth network) must be AFH-capable in order for AFH to work. There is no AFH when connecting and discovering devices. Avoid making Bluetooth connections and discoveries during critical 802.11b communications.

- Channel Classification - A method of detecting an interference on a channel-by-channel basis, or pre-defined channel mask.
- Link Management - Coordinates and distributes the AFH information to the rest of the Bluetooth network.
- Hop Sequence Modification - Avoids interference by selectively reducing the number of hopping channels.
- Channel Maintenance - A method for periodically re-evaluating the channels.

When AFH is enabled, the Bluetooth radio “hops around” (instead of through) the 802.11b high-rate channels. AFH coexistence allows enterprise devices to operate in any infrastructure.

The Bluetooth radio in this device operates as a Class 2 device power class. The maximum output power is 2.5 mW and the expected range is 10 m (32.8 ft). A definition of ranges based on power class is difficult to obtain due to power and device differences, and whether in open space or closed office space.



NOTE: It is not recommended to perform Bluetooth wireless technology inquiry when high rate 802.11b operation is required.

Security

The current Bluetooth specification defines security at the link level. Application-level security is not specified. This allows application developers to define security mechanisms tailored to their specific need. Link-level security occurs between devices, not users, while application-level security can be implemented on a per-user basis. The Bluetooth specification defines security algorithms and procedures required to authenticate devices, and if needed, encrypt the data flowing on the link between the devices. Device authentication is a mandatory feature of Bluetooth while link encryption is optional.

Pairing of Bluetooth devices is accomplished by creating an initialization key used to authenticate the devices and create a link key for them. Entering a common personal identification number (PIN) in the devices being paired generates the initialization key. The PIN is never sent over the air. By default, the Bluetooth stack responds with no key when a key is requested (it is up to user to respond to the key request event). Authentication of Bluetooth devices is based-upon a challenge-response transaction. Bluetooth allows for a PIN or passkey used to create other 128-bit keys used for security and encryption. The encryption key is derived from the link key used to authenticate the pairing devices. Also worthy of note is the limited range and fast frequency hopping of the Bluetooth radios that makes long-distance eavesdropping difficult.

Recommendations are:

- Perform pairing in a secure environment.
- Keep PIN codes private and do not store the PIN codes in the device.
- Implement application-level security.

Bluetooth Profiles

The device supports the Bluetooth services listed.

Table 17 Bluetooth Profiles

Profile	Description
Service Discovery Protocol (SDP)	Handles the search for known and specific services as well as general services.
Serial Port Profile (SPP)	Allows use of RFCOMM protocol to emulate serial cable connection between two Bluetooth peer devices. For example, connecting the device to a printer.
Object Push Profile (OPP)	Allows the device to push and pull objects to and from a push server.
Human Interface Device Profile (HID)	Allows Bluetooth keyboards, pointing devices, gaming devices and remote monitoring devices to connect to the device.
Out of Band (OOB)	Allows exchange of information used in the pairing process. Pairing is completed using the Bluetooth radio, but requires information from the OOB mechanism. Using OOB with NFC enables pairing when devices simply get close, rather than requiring a lengthy discovery process.
Generic Attribute Profile (GATT)	Provides profile discovery and description services for Bluetooth Low Energy protocol. It defines how attributes are grouped together into sets to form services.
Generic Access Profile (GAP)	Use for device discovery and authentication.
OBject EXchange (OBEX)	Facilitates the exchange of binary objects between devices.

Bluetooth Power States

The Bluetooth radio is off by default.

- **Suspend** - When the device goes into Sleep mode, the Bluetooth radio stays on.
- **Airplane Mode** -
 - Android A10 OS version and previous versions - When the device is placed in Airplane Mode, the Bluetooth radio turns off. When Airplane mode is disabled, the Bluetooth radio returns to the prior state. When in Airplane Mode, the Bluetooth radio can be turned back on if desired.
 - Android A11 OS version and versions onward - When the device is placed in Airplane Mode, the Bluetooth radio is not turned off when the device is connected to a Bluetooth headset or hearing device.
- **Airplane Mode** - When the device is placed in Airplane Mode, the Bluetooth radio is not turned off when the device is connected to a Bluetooth headset or hearing device.


Bluetooth Radio Power

Turn off the Bluetooth radio to save power or if entering an area with radio restrictions (for example, an airplane). When the radio is off, other Bluetooth devices cannot see or connect to the device. Turn on the Bluetooth radio to exchange information with other Bluetooth devices (within range). Communicate only with Bluetooth radios in close proximity.




NOTE: To achieve optimal battery life, turn off radios when not in use.

Enabling Bluetooth

1. Swipe down from the Status bar to open the Notification panel.
2. Touch  to turn Bluetooth on.

Disabling Bluetooth

1. Swipe down from the Status bar to open the Notification panel.
2. Touch  to turn Bluetooth off.

Discovering Bluetooth Device(s)

The device can receive information from discovered devices without pairing. However, once paired, the device and a paired device exchange information automatically when the Bluetooth radio is on.

1. Ensure that Bluetooth is enabled on both devices.
2. Ensure that the Bluetooth device to discover is in discoverable mode.
3. Ensure that the two devices are within 10 meters (32.8 feet) of one another.
4. Swipe down from the Status bar to open the Quick Access panel.
5. Touch and hold **Bluetooth**.
6. Touch **Pair new device**. The device begins searching for discoverable Bluetooth devices in the area and displays them under **Available devices**.
7. Scroll through the list and select a device. The Bluetooth pairing request dialog box appears.
8. Touch **Pair** on both devices.
9. The Bluetooth device is added to the **Paired devices** list and a trusted (“paired”) connection is established.

Changing the Bluetooth Name

By default, the device has a generic Bluetooth name that is visible to other devices when connected.

1. Go to **Settings**.
2. Touch **Connected devices > Connection preferences > Bluetooth**.
3. If Bluetooth is not on, move the switch to turn Bluetooth on.
4. Touch **Device name**.
5. Enter a name and touch **RENAME**.

Connecting to a Bluetooth Device


Once paired, connect to a Bluetooth device.

1. Go to **Settings**.
2. Touch **Connected devices > Connection preferences > Bluetooth**.

3. In the list, touch the unconnected Bluetooth device.
When connected, **Connected** appears below the device name.

Selecting Profiles on the Bluetooth Device

Some Bluetooth devices have multiple profiles.

1. Go to **Settings**.
2. Touch **Connected devices** > **Connection preferences** > **Bluetooth**.
3. In the **Paired Devices** list, touch  next to the device name.
4. Turn on or off a profile to allow the device to use that profile.


Unpairing a Bluetooth Device

Unpairing a Bluetooth device erases all pairing information.

1. Go to **Settings**.
2. Touch **Connected devices** > **Connection preferences** > **Bluetooth**.
3. In the **Paired Devices** list, touch  next to the device name.
4. Touch **FORGET**.

Cast

Use **Cast** to mirror the device screen on a Miracast enabled wireless display.

1. Go to **Settings**.
2. Touch **Connected devices** > **Connection preferences** > **Cast**.
3. Touch  > **Enable wireless display**.
The device searches for nearby Miracast devices and lists them.
4. Touch a device to begin casting.

Accessories

This section provides information for using the accessories for the device.

A typical Personal Shopper system is comprised of a family of hardware devices interconnected through a WLAN radio backbone to the retail establishment's server(s). The hardware devices are the device personal shoppers, single-slot or three-slot cradles, power supplies, and cables. A dispenser typically refers to a piece of furniture that has mounted to it the cradles, their power supplies, and cables.

Customers (retail establishments) design their own dispensers to meet their particular floor space and display requirements. The information in this chapter should help a customer to design a dispenser and to understand the installation requirements.



IMPORTANT: The MC18 cradles are compatible with the device.

Device Accessories

This table lists the accessories available for the device.

Table 18 Accessories

Accessory	Part Number	Description
Cradles		
High Density (HD) Three Slot Cradle (Locking).	CRD-MC18-3SLCKH-01	The cradle is used for docking up to three devices in HD installation configuration. The cradle slots are equipped with a mechanism that locks the devices inside the slots. The devices are placed with the display facing to the front. Requires power supply unit (PWR-BGA12V108W0WW), DC line cord and country specific AC line cord (sold separately).
High Density (HD) Three Slot Cradle (Non-Locking)	CRD-MC18-3SLOTH-01	The cradle is used for docking up to three devices in HD installation configuration. The devices are placed with the display facing to the front. Requires power supply unit (PWR-BGA12V108W0WW), DC line cord and country specific AC line cord (sold separately).

Table 18 Accessories (Continued)

Accessory	Part Number	Description
Super High Density (SHD) Three Slot Cradle (Locking)	CRD-MC18-3SLCKS-01	The cradle is used for docking up to three devices in SHD installation configuration. The cradle slots are equipped with a mechanism that locks the devices inside the slots. The devices are placed with the display facing up. Requires power supply unit (PWR-BGA12V108W0WW), DC line cord and country specific AC line cord (sold separately).
Single Slot Cradle	CRD-MC18-1SLOT-01	The cradle is used for docking a single device. The devices are placed with the display facing to the front. Requires power supply unit (PWR-BGA12V108W0WW), DC line cord and country specific AC line cord (sold separately).
Chargers		
Power Supply Unit	PWR-BGA12V108W0WW	100-240VAC, 12VDC, 9A. Requires country specific AC line cord and DC cable (sold separately).
AC Line Cord	23844-00-00R	AC Line Cord, 7.5 feet long, grounded, three wire for power supplies. Associated Country: United States
AC Line Cord	50-16000-221R	AC Line Cord, 1.8 meter, meter grounded, three wire, USA NEMA 5-15P. Associated Country: United States
AC Line Cord	50-16000-671R	AC Line Cord, 1.8 meter, grounded, three wire, CIE 23-16 plug. Associated Country: Italy.
AC Line Cord	50-16000-217R	AC Line Cord, 1.9 meter, grounded, three wire, AS 3112 plug. Associated Countries: Australia, New Guinea
AC Line Cord	50-16000-218R	AC Line Cord, 1.8 meter, grounded, three wire, NEMA 1-15P plug. Associated Country: Japan.
AC Line Cord	50-16000-219R	AC Line Cord, 1.8 meter, grounded three wire, BS1363 plug. Associated countries: Hong Kong, Iraq, Malaysia, Singapore, United Kingdom.
AC Line Cord	50-16000-220R	AC Line Cord, 1.8 meter, grounded three wire CEE 7/7plug. Associated countries: Europe, Abu Dhabi, Bolivia, Dubai, Egypt, Iran, Russia, Vietnam.
AC Line Cord	50-16000-257R	AC Line Cord, 1.8 meter, grounded three wire, IEC 60320 C13 plug. Associated Country: China.
AC Line Cord	50-16000-669R	1.9 meter grounded three wire, BS 546 Plug. Associated country: India.
AC Line Cord	50-16000-672R	1.9 meter grounded three wire, S132 Plug. Associated country: Israel.

Table 18 Accessories (Continued)

Accessory	Part Number	Description
AC Line Cord	50-16000-678R	36 inch grounded three wire. Associated country: United States
Cables		
Programming Cable	CBL-PS20-USBCHG-01	PS20 USB communication cable for connecting the device to a host computer.
Interconnection Cable Long	25-66430-01R	PS20 cradle interconnection cable (60 Inch / 1.5 Meter). Connects cradles to each other to run off one power supply unit (PWR-BGA12V108W0WW).
Interconnection Cable Short	25-66431-01R	PS20 cradle interconnection cable (12.6 Inch / 32 centimeter). Connects cradles to each other to run off one power supply unit (PWR-BGA12V108W0WW).
Cradle Interconnection Extension Cable	CBL-MC18-EXINT1-01	PS20 cradle interconnection extension cable (12.6 Inch / 32 centimeter). Connects two interconnection cables (25-66431-01R sold separately) together to provide additional length which might be required in some installation designs.
DC Charging Cable	CBL-DC-394A1-01	DC charging cable (19.5 Inch / .5 Meter) used to connect a power supply unit (PWR-BGA12V108W0WW) to one Single Slot Cradle.
DC “Y” Charging Cable Long	CBL-DC-392A1-02	DC “Y” charging cable (79.4 Inch / 2 Meter). Connects a power supply unit (PWR-BGA12V108W0WW) to two separate Three Slot Cradles.
DC “Y” Charging Cable Short	CBL-DC-393A1-02	DC “Y” charging cable (39.7 Inch / 1 Meter). Connects a power supply unit (PWR-BGA12V108W0WW) to two separate Three Slot Cradles.
Miscellaneous		
PS20 Lithium Ion Battery	BTRY-PS20-35MA-01	PS20 PowerPrecision+ Lithium Ion Battery.
	BTRY-PS20-35MA-10	PS20 PowerPrecision+ Lithium Ion Battery (QTY-10).
Release Key	KT-MC18-CKEY-20	Tool used to mechanically unlock the device from the Three Slot Cradle and the Single Slot Cradle (QTY-20).
Terminal Reboot Tool	KT-MC18-REBOOT-05	Tool used to perform cold boot of the device (QTY-5).
Cradle Cover Removal Tool	KT-MC18-CTOOL-01	Tool used for removing the Three Slot Cradle cover.

Table 18 Accessories (Continued)

Accessory	Part Number	Description
Deployment Kit	KT-MC18-CSTKIT-01	PS20 Deployment Starter Kit. Includes: 20-pack of Release Key (KT-MC18-CKEY-20) 5-pack of Terminal Reboot Tool (KT-MC18-REBOOT-05) One Three Slot Cradle Cover Removal Tool (KT-MC18-CTOOL-01)
Cart Holder Mounting Kit	PSS-3SH01-00R	Kit for mounting the device on a shopping cart.
Soft Holster	SG-PS20-SFTHLT-01	Allows for wearing the device on the hip (includes belt clip) or crossbody, with an additional shoulder strap.
Tempered Glass Screen Protector	MISC-PS20-SCRN-05	Provides additional protection for device display (5-pack).

Installing the Single Slot Cradle

- Select the charging mode
- Mount the Single Slot Cradles on a dispenser wall
- Connect the wires to the cables
- Set the cradle(s)

Charging Modes

Single Slot Cradles can be installed in the following charging modes:

- Standard charging
- Fast charging

There are some general charging considerations that must be taken into account when designing a dispenser and ordering hardware elements of a system:

Standard Charging Mode

- In standard charging mode, no more than 12 cradles can be powered off of one power supply unit (p/n PWR-BGA12V108W0WW) using “Y” power cable CBL-DC-392A1-02.
- In standard charging mode, the current draw by each docked device can reach a maximum of 1A.


Fast Charging Mode

- In fast charging mode, no more than six cradles can be powered off of one power supply unit (p/n PWR-BGA12V108W0WW) using power cable CBL-DC-394A1-01.
- In fast charging mode, the current draw by each docked device can reach a maximum of 1.5A.


Mounting the Single Slot Cradle on a Dispenser Wall

The cradle contains two mounting holes in the back housing so that it can be hanged on screws fixed to supporting furniture. In addition, it comes with plugs and a variety of cable routing outlets.


1. Loosen two captive screws securing the front cover to the base.

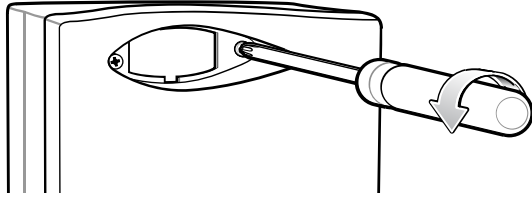


2. Pull the front cover away from the base and then lift it out of the base.

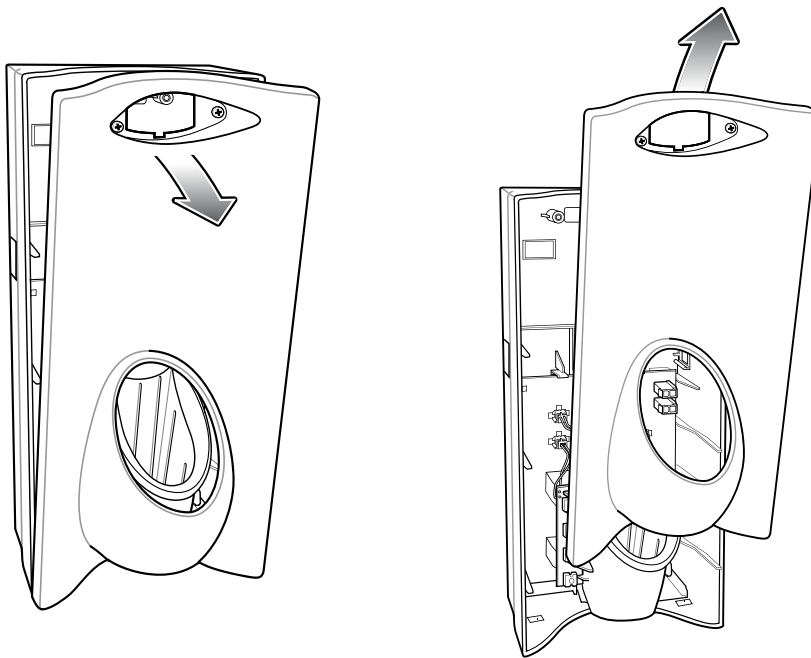

3. Use two screws to hang the cradle on a wall.

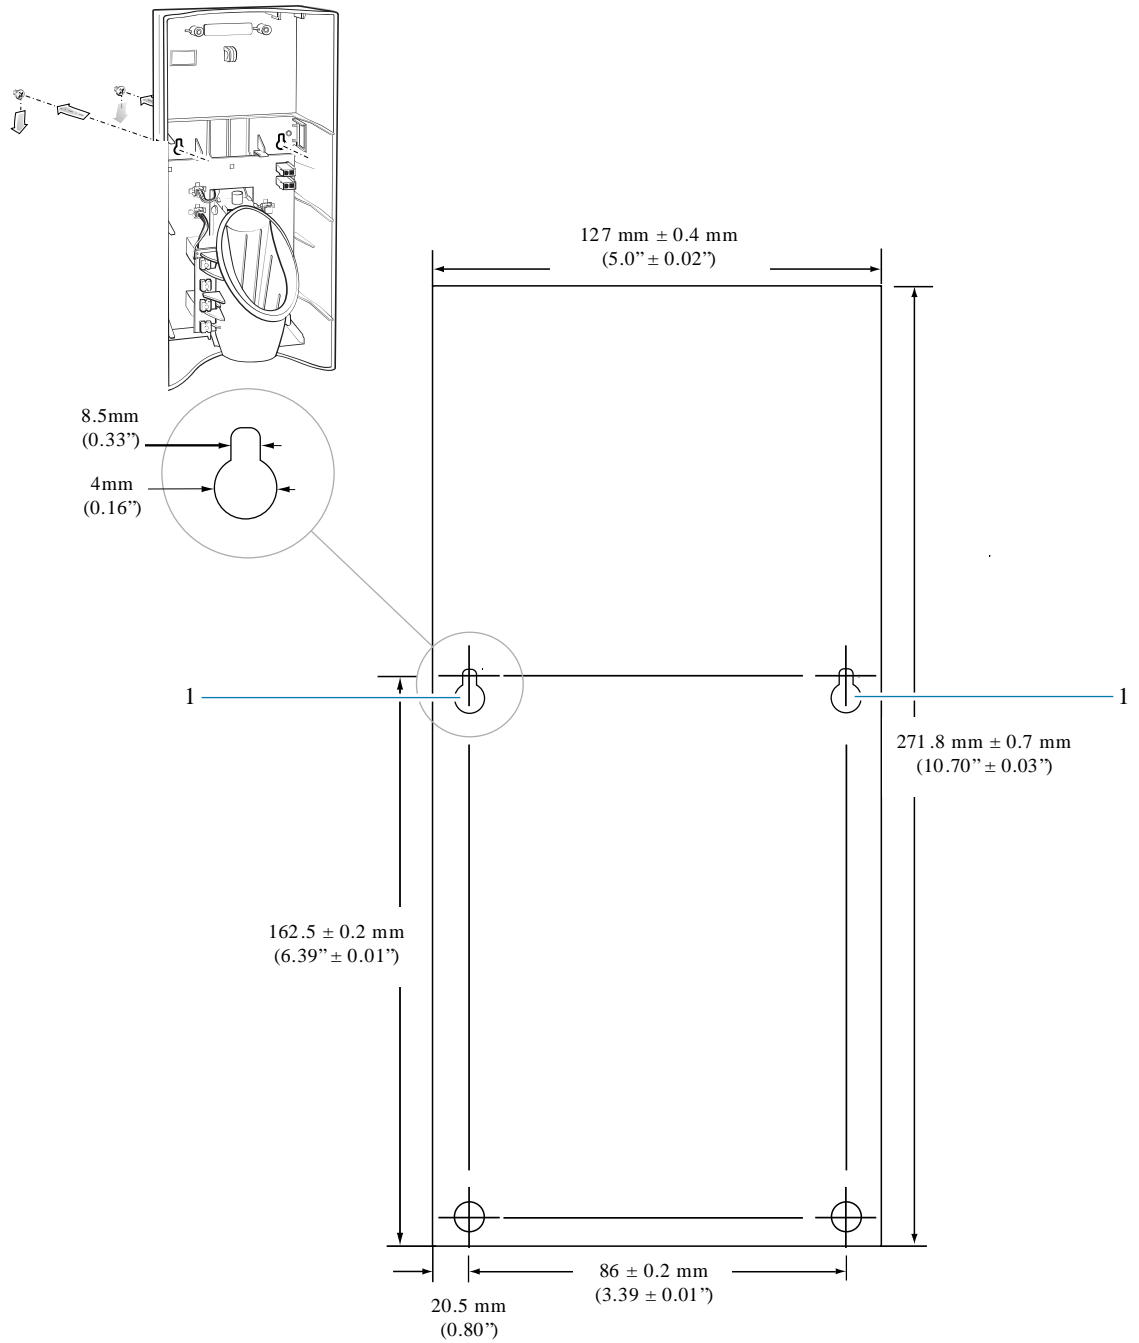

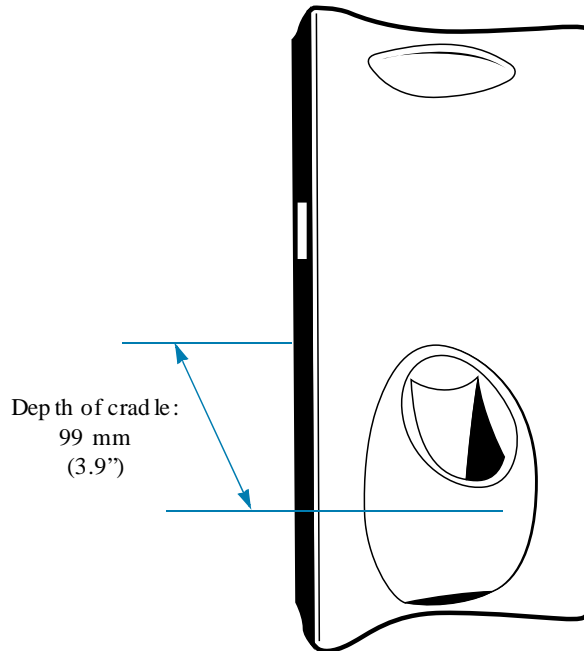


Wiring



NOTE: During installation, ensure all interconnect cables are fully enclosed within the power supply or cradle enclosure.


1. Install power supply, including AC line cord and power cable, into Decorative Housing.

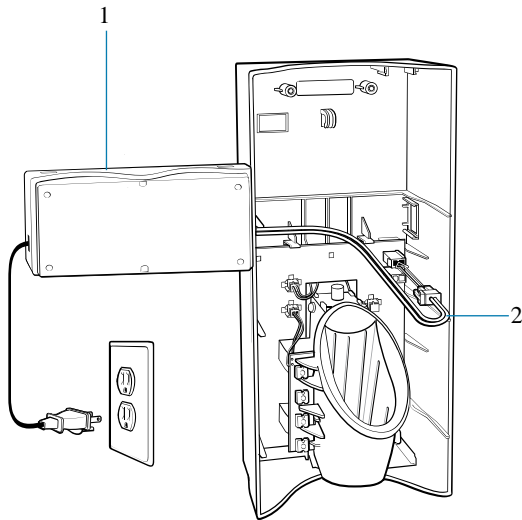

1	Power Supply PWR-BGA12V108W0WW (inside Decorative Housing)
2	Power Cable CBL-DC-394A1-01


2. Insert power cable through a cable outlet of cradle back housing.
3. Plug the connector into the power connector on the printed circuit board.

4. If more than one cradle is being installed, connect the interconnect cable from the first cradle to the second cradle.

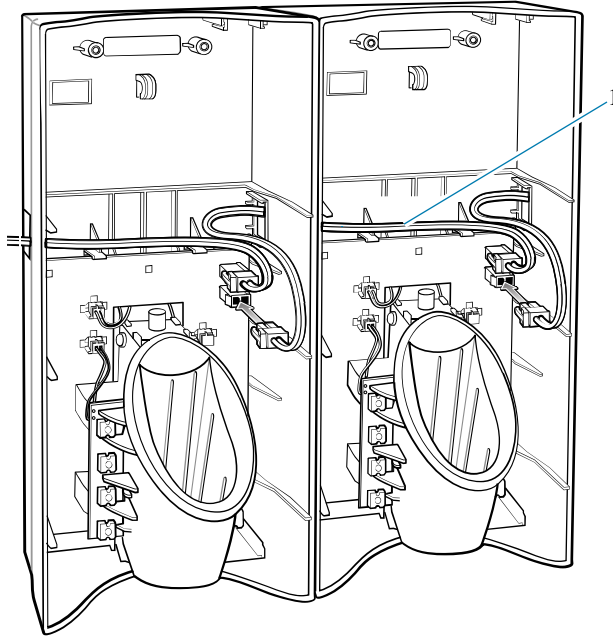

1	Interconnect Cable 25-66431-01R
---	---------------------------------


5. Use plugs to cover unused cable outlets.

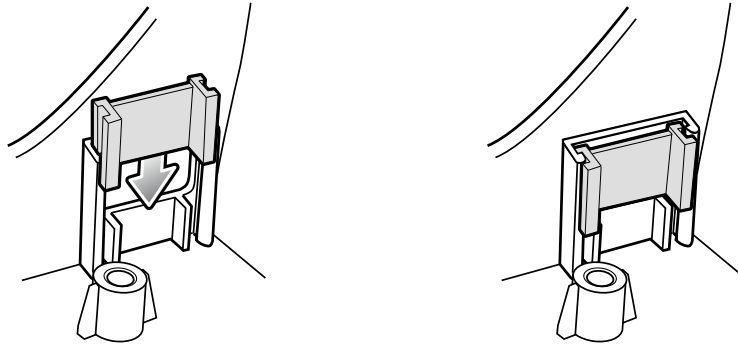

Assembly


1. Replace the cover.

2. Secure the cover with screws.

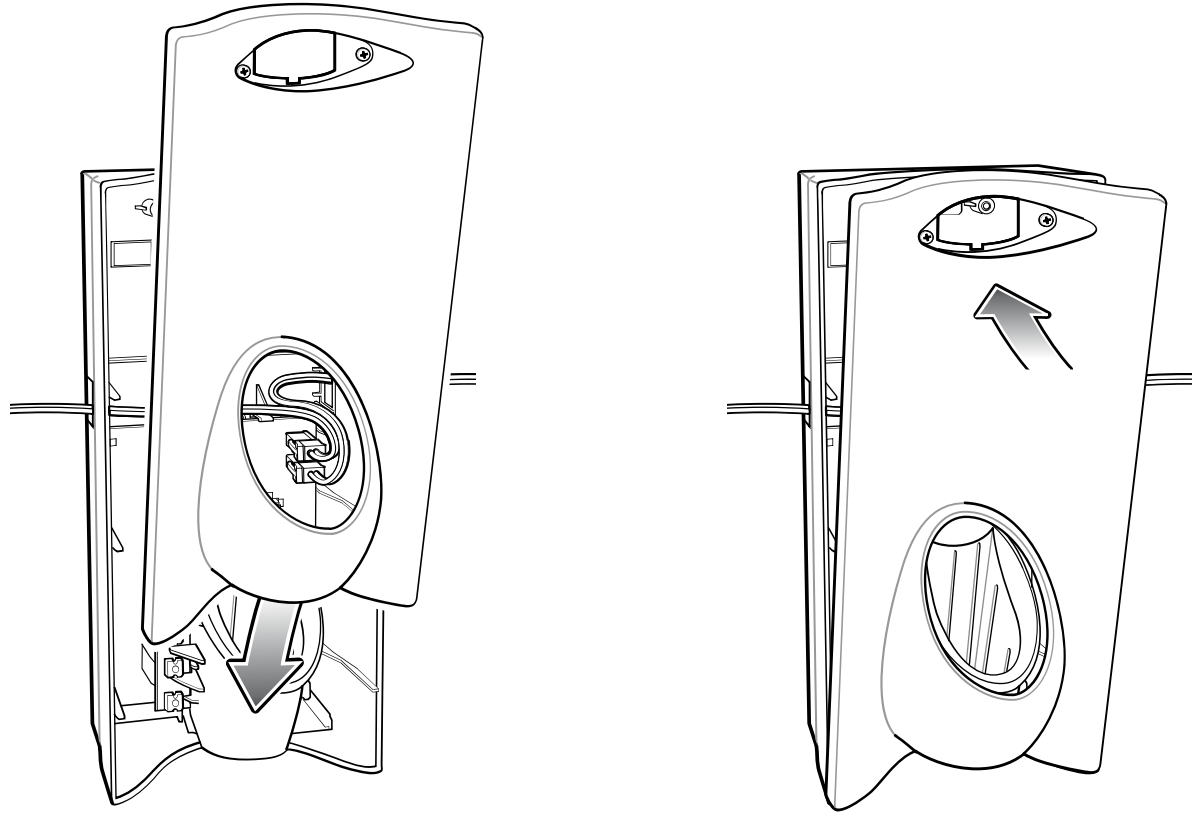

IMPORTANT: Do not install the target cover until you are sure that you do not need to remove the front cover again.

3. Insert the barcode target cover.
4. Push the target cover into the front cover until it snaps into place.

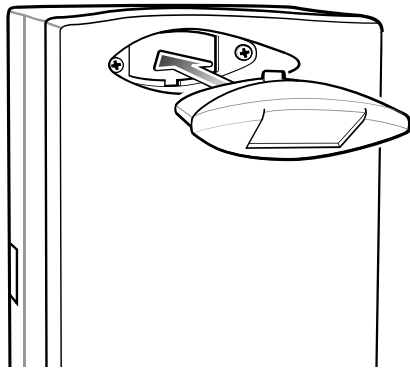


System Cabling

There are some general limitations that must be taken into account when designing a dispenser and ordering hardware elements of a Personal Shopper system.


- No more than six cradles can be powered off each leg of the “Y” power cable.
- A power supply cable runs from the power supply to one or two cradles.
- Cradle interconnection cables run between each successive cradle in the chain.
- The power supply is air cooled, and as such expects some circulation of fresh air around it. Do not enclose it in a small airtight location.
- Power supplies must be mounted in their natural, landscape orientation. They contain fans and their vents must allow for the free flow of air.
- Power supplies should be mounted either above or below dispensers and entrance heads. Mounting of power supplies to the right or left is not preferred.
- When laying out your furniture and cabling plan, routing should be as direct as possible. Routing should follow vertical and horizontal runs through the modules. A set of labels, numbered 1 to 12, is part of each power supply unit. These labels are to be used to track the number of loads on a particular supply. Each label is designed to be attached to the cradle interconnection cable when a cradle is added to the daisy chain. When all labels are used, the supply is fully loaded.

The following image shows how the maximum number of cradles can be cabled to a power supply using power cable CBL-DC-394A1-01.

Figure 22 Maximum Number of Charge Cradles per Power Supply

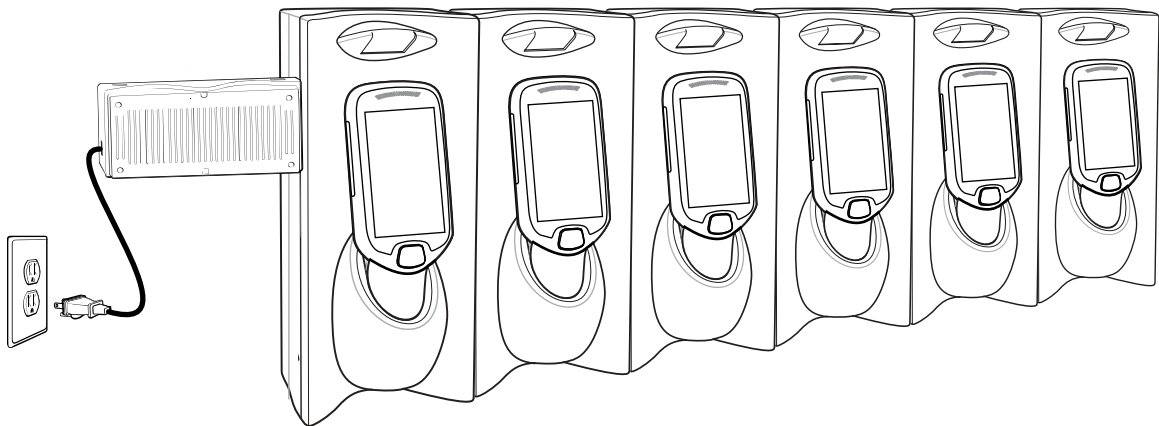

The following image shows how the maximum number of cradles can be cabled to a power supply using the “Y” power cable CBL-DC-392A1-02. Note that there are only six cradles per leg of the power supply cable, and only 12 cradles in total.

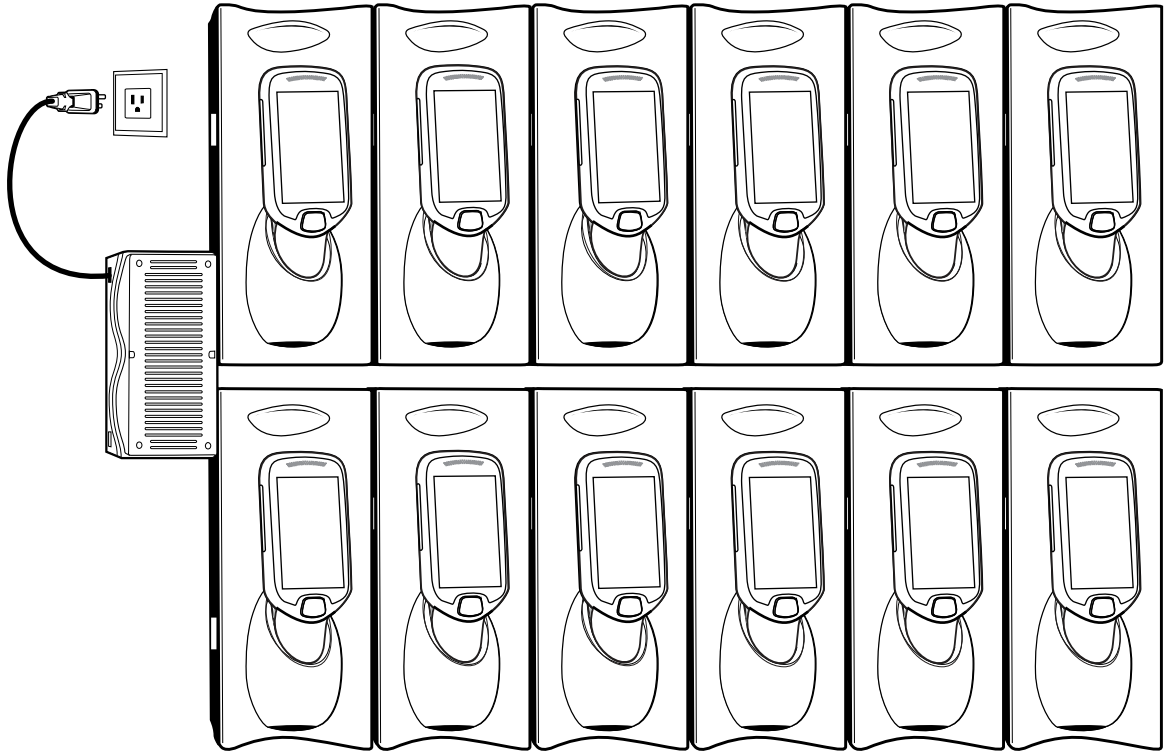Figure 23 Maximum Number of Charge Cradles per Power Supply with “Y” Power Cable

Installing the Three Slot Cradle

- Select the mounting configuration
- Select the charging mode
- Mount the Three Slot Cradles on a dispenser wall
- Set the cradle(s)

Mounting Configurations

Three slot cradles can be installed in the following mounting configurations:

- High Density (HD) configuration - Using HD cradles
- Super High Density (SHD) configuration - Using SHD cradles
- Desktop configuration - Using stand-alone cradle(s) on a flat surface


High Density Configuration

The cradle can be installed in a high-density configuration so that the display of the devices are facing the user. In this configuration, cradles are installed with a vertical gap of 35 mm between each other.




NOTE: In high-density configuration, the devices have a 10-degree forward-facing tilt that should be taken in consideration, especially if furniture is planned to be placed in front of the dispenser wall.

Figure 24 Installation in High-Density Configuration

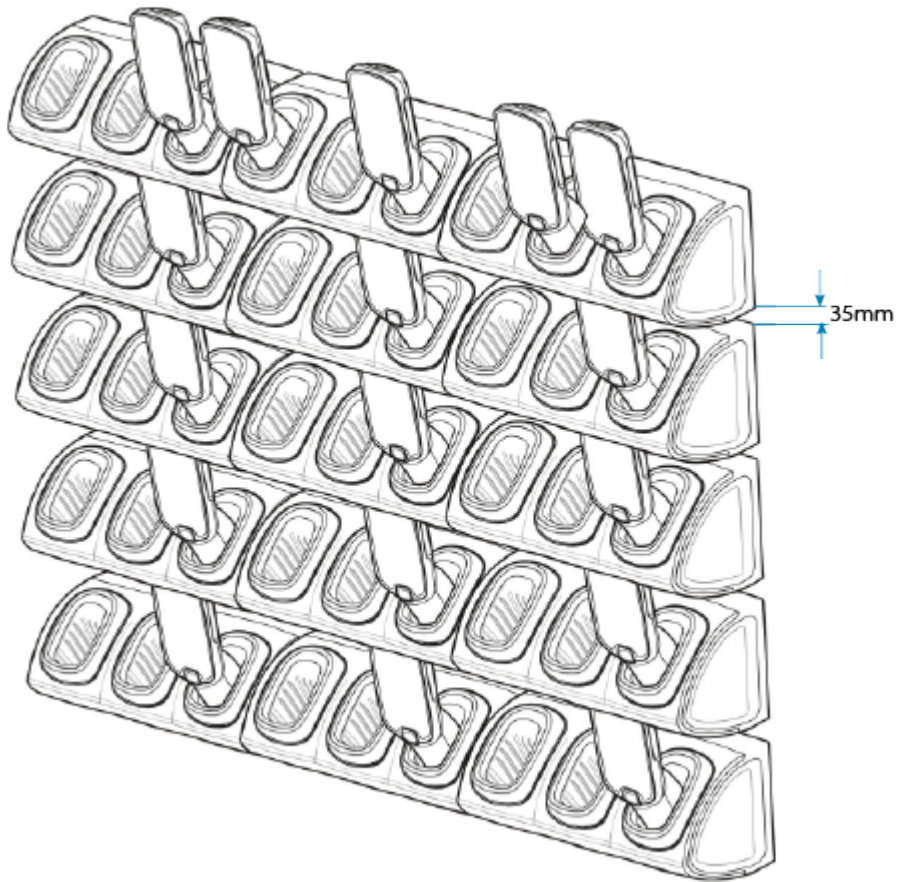

The installation of the dispenser wall can be designed so that it tilts slightly backward at the following angles:


Figure 25 Dispenser Wall Angles

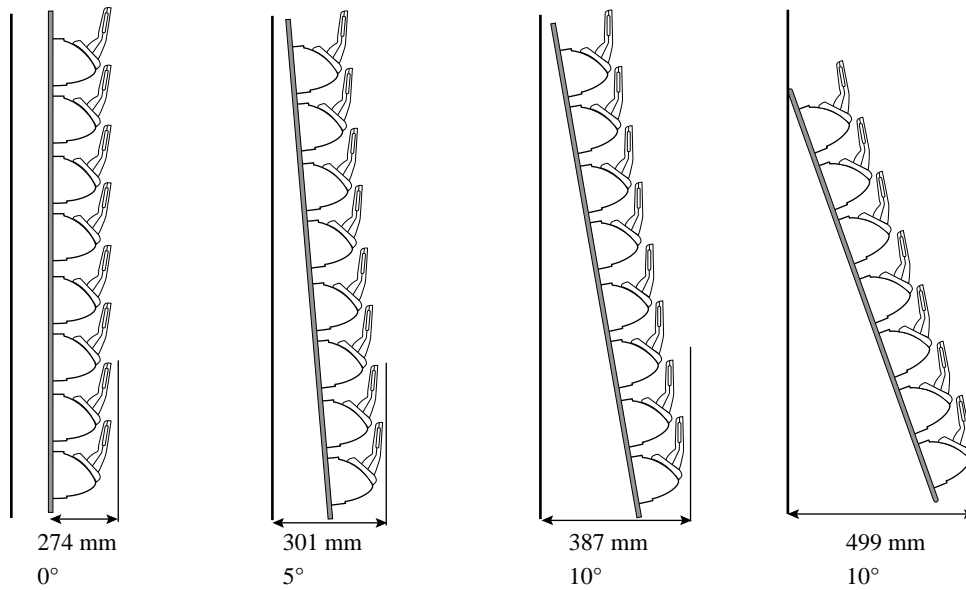

Desktop Configuration

In the desktop configuration, the cradle can be placed on a flat tabletop or shelf at checkout or backroom locations.

Figure 26 Installation in Desktop Configuration

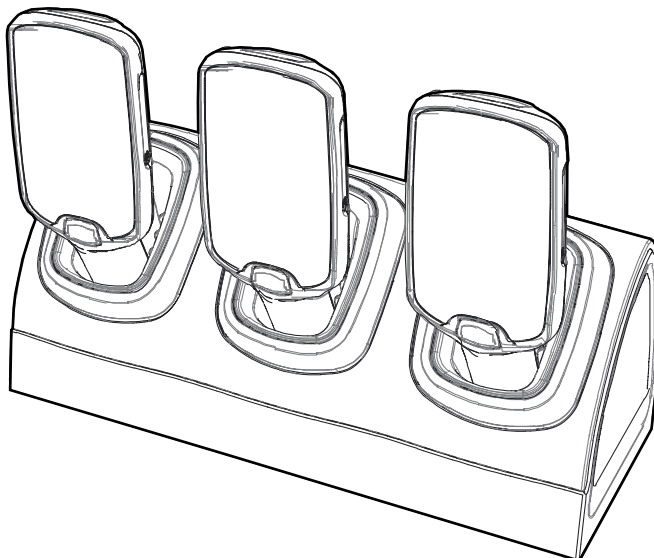

Charging Modes

Three Slot Cradles can be installed in the following charging modes:

- Standard charging

- Fast charging


There are some general charging considerations that must be taken into account when designing a dispenser and ordering hardware elements of a system.

Standard Charging Mode

- In standard charging mode, no more than four cradles can be powered off of one power supply unit (p/n PWR-BGA12V108W0WW) using “Y” power cable (p/n CBL-DC-392A1-02 or p/n CBL-DC-393A1-02), power extension cables (p/n CBL-MC18-EXINT1-01) and interconnect cables (p/n 25-66431-01R).
- In standard charging mode, the current draw by each docked device can reach a maximum of 1A.
- Cable routing should be as direct as possible. Routing should follow vertical and horizontal runs through the modules.

The following illustration shows how the four cradles can be cabled to a power supply unit in standard charging mode.

Figure 27 Standard Charging Mode - Cable Connections

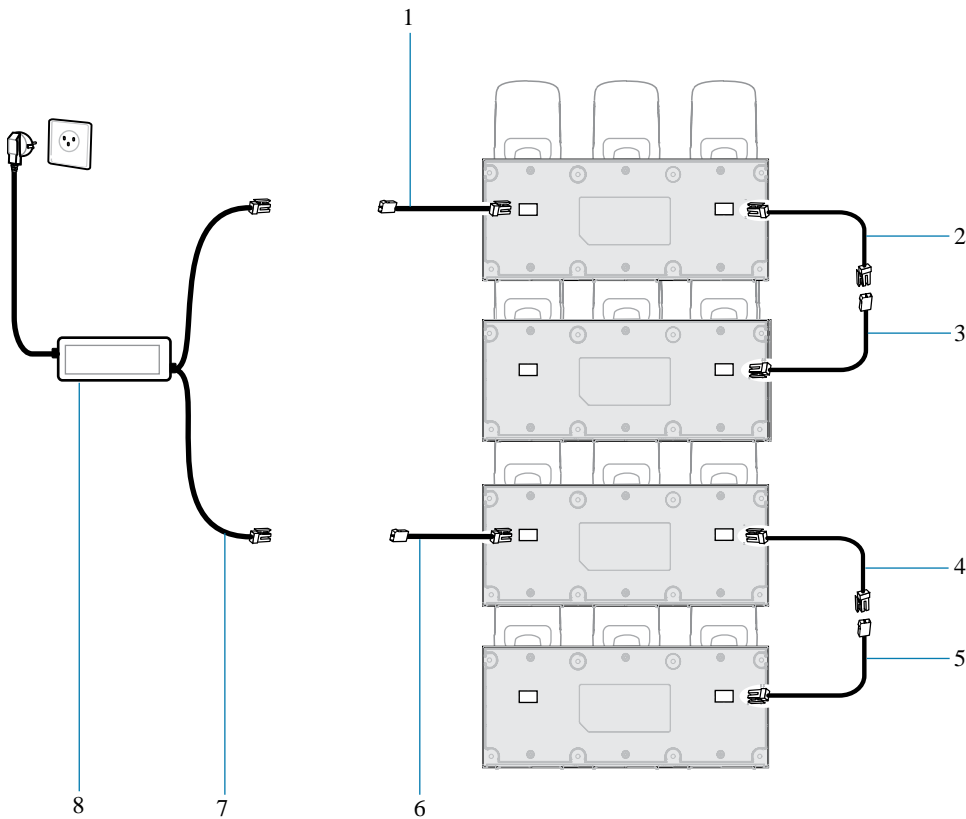

1	Power Extension Cable (p/n CBL-MC18-EXINT1-01)
2	Interconnect Cable (p/n 25-66431-01R)
3	Cradle Interconnection Extension Cable (p/n CBL-MC18-EXINT1-01)
4	Interconnect Cable (p/n 25-66431-01R)
5	Cradle Interconnection Extension Cable (p/n CBL-MC18-EXINT1-01)


6	Power Extension Cable (p/n CBL-MC18-EXINT1-01)
7	“Y” Power Cable: CBL-DC-392A1-02 or CBL-DC-393A1-02
8	Power Supply Unit PWR-BGA12V108W0WW

Fast Charging Mode

- In fast charging mode, no more than three cradles can be powered off of one power supply unit (p/n PWR-BGA12V108W0WW) using “Y” power cable (p/n CBL-DC-392A1-02 or p/n CBL-DC-393A1-02), Interconnect cables (p/n 25-66431-01R) and cradle interconnection extension cables (p/n CBL-MC18-EXINT1-01).
- In fast charging mode, the current draw by each docked device can reach a maximum of 1.5A.
- Cable routing should be as direct as possible. Routing should follow vertical and horizontal runs through the modules.

The following illustration shows how the three cradles can be cabled to a power supply unit in fast charging mode.

Figure 28 Fast Charging Mode Cable Connections

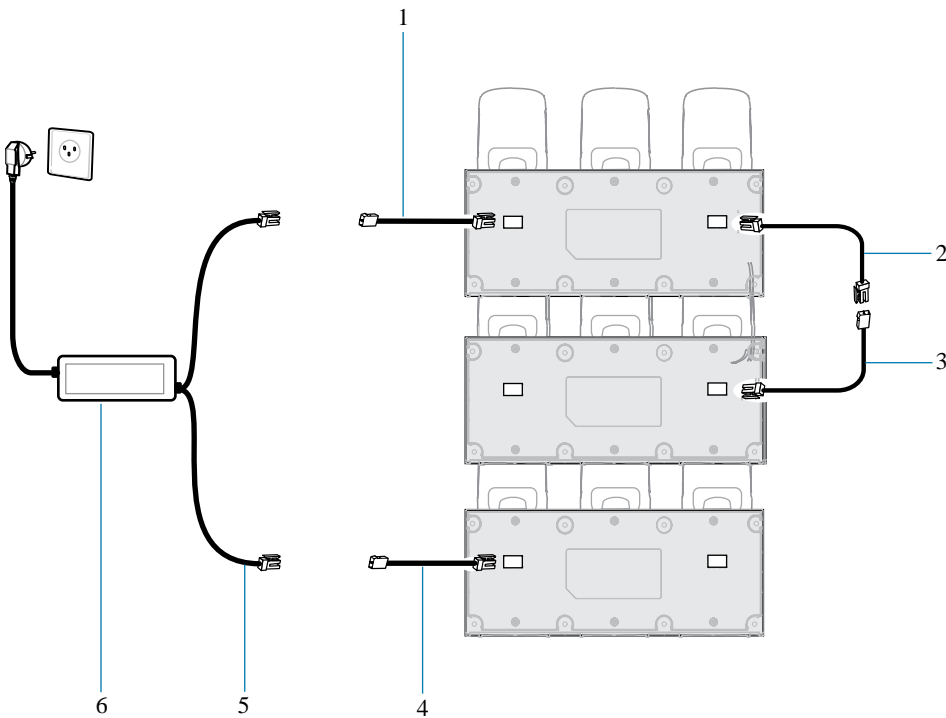

1	Power Extension Cable (p/n CBL-MC18-EXINT1-01)
2	Interconnect Cable (p/n 25-66431-01R)
3	Cradle Interconnection Extension Cable (p/n CBL-MC18-EXINT1-01)
4	Power Extension Cable (p/n CBL-MC18-EXINT1-01)
5	“Y” Power Cable: CBL-DC-392A1-02 or CBL-DC-393A1-02

Mounting the Three Slot Cradle on a Dispenser Wall

The cradle can be bolted to a dispenser wall or any supporting furniture using eight mounting holes. The back cover of the cradle has two access holes for routing power cables to/from a power supply unit or adjacent cradle.




CAUTION: DO NOT connect more than four cradles when in standard charging mode or three cradles when in fast charging mode to a single power supply unit/. DO NOT connect the power supply unit to a power outlet until all installation steps are completed.




NOTE: This procedure is only an example installation of Three Slot Cradles in fast charging mode - high-density configuration.

1. Use the wall mount template to plan and mark the screw locations on the dispenser wall.

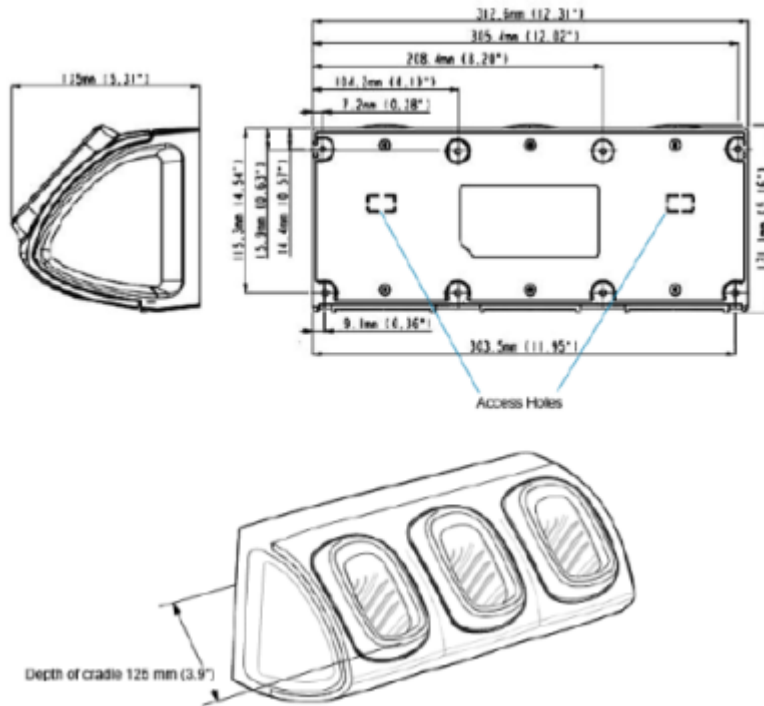


2. In all cradles, plug the power extension cable (p/n CBL-MC18-EXINT1-01) to free the connector on the left slot.

3. Plug the interconnect cable (p/n 25-66431-01R) to free the connector on the right slot.

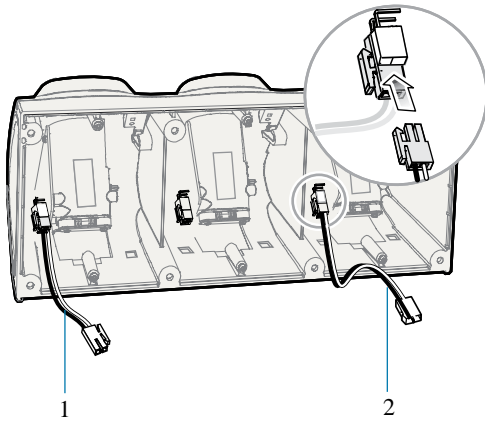


1	Interconnect Cable (p/n 25-66431-01R)
2	Cradle Interconnection Extension Cable (p/Interconnect Cable n CBL-MC18-EXINT1-01)

4. On all of the back covers, knock out the stamped access hole(s).

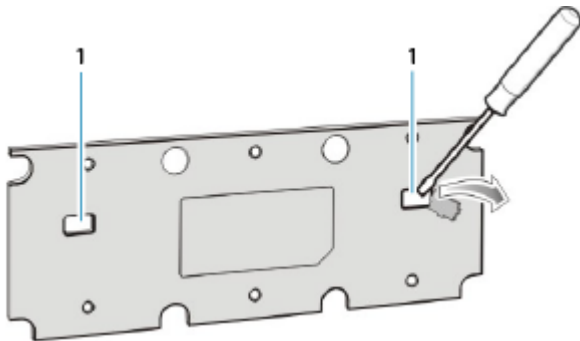


1	Stamped Access Holes
---	----------------------


5. Route interconnect cables through access holes in back covers.

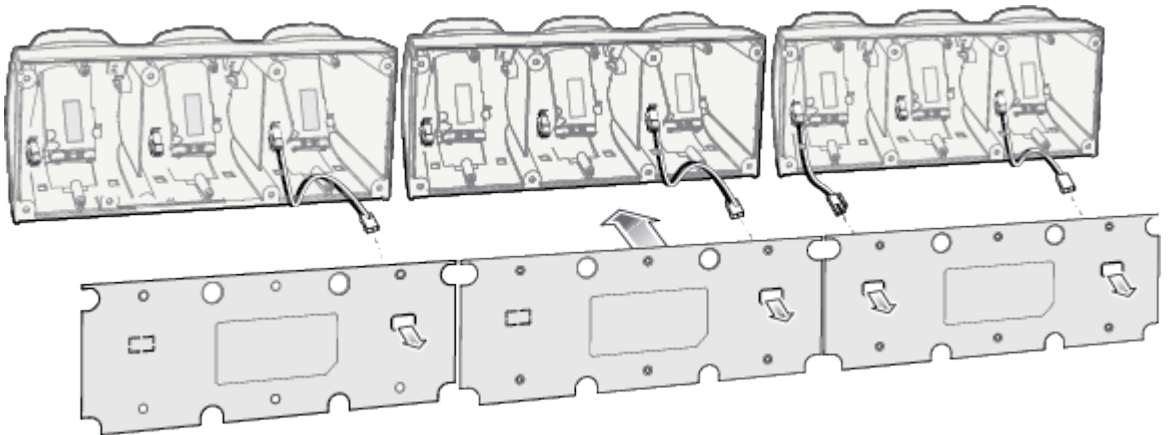

- Secure the back cover of each cradle using six T10 Torx screws (supplied). Torque screws to 6 Kgf-cm (5.2 in-lb).

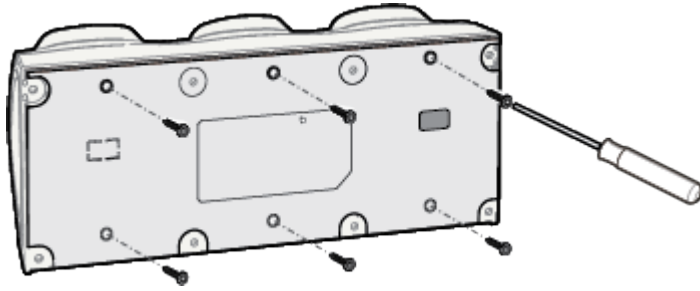


- Insert the front cover removal tool into two slots, lever upwards and pull to remove front cover from cradle.

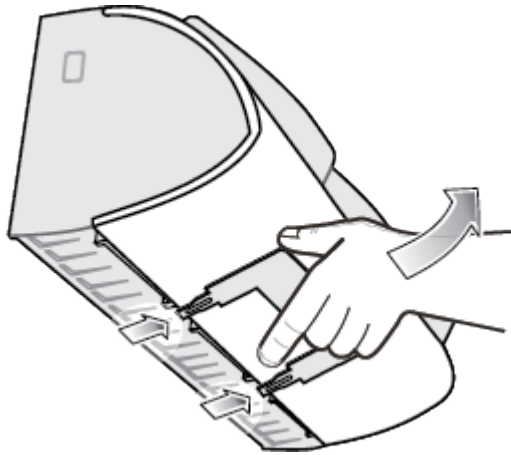


- Position the cradle on the dispenser wall and route all interconnect cables through the access holes in the dispenser wall.

9. Fasten the cradle to the wall using eight screws (not supplied). Make sure to use additional wall mounting hardware, as needed, for safe mounting, according to the wall type.

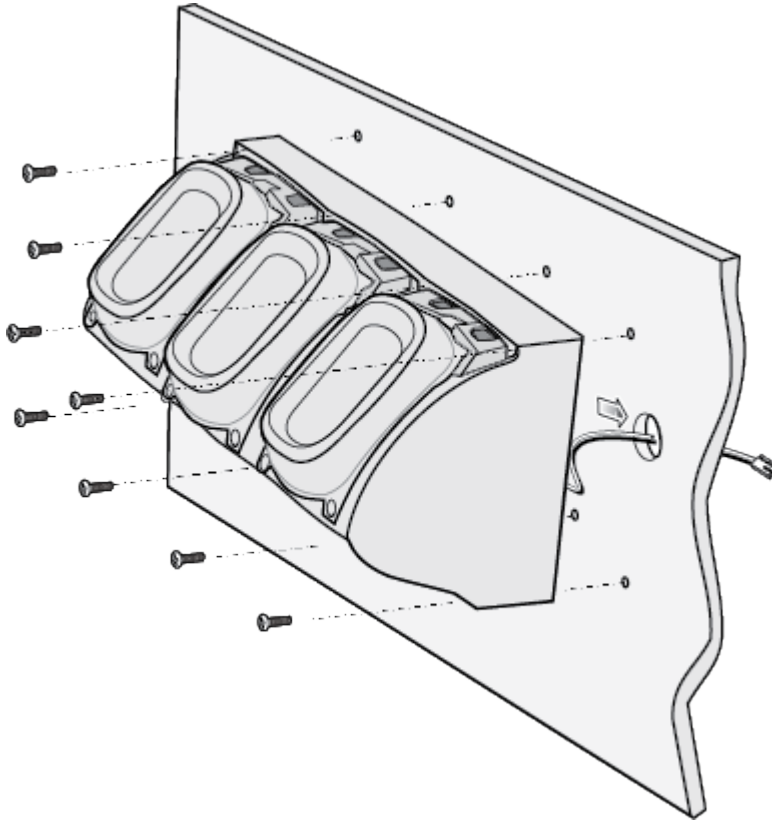


10. Insert tabs on upper side of front cover into slots on cradle and rotate cover down until it snaps into place.

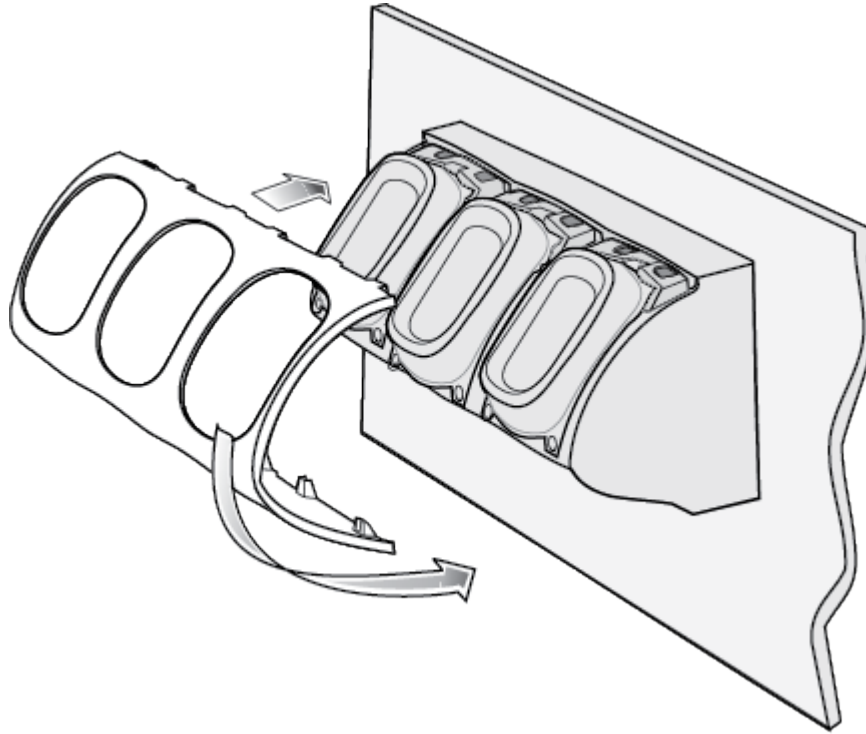

11. Plug Power Extension Cable (p/n CBL-MC18-EXINT1-01) to interconnect cable (p/n 25-66431-01R).
12. Plug “Y” cable (CBL-DC-392A1-02) to Interconnect cables (p/n 25-66431-01R).
13. Plug “Y” cable (CBL-DC-392A1-02) to power supply unit.
14. Secure power supply unit (p/n PWR-BGA12V108W0WW) to the back of the dispenser wall.

15. Connect the power cord to the power supply unit and to a 110/220 VAC outlet.

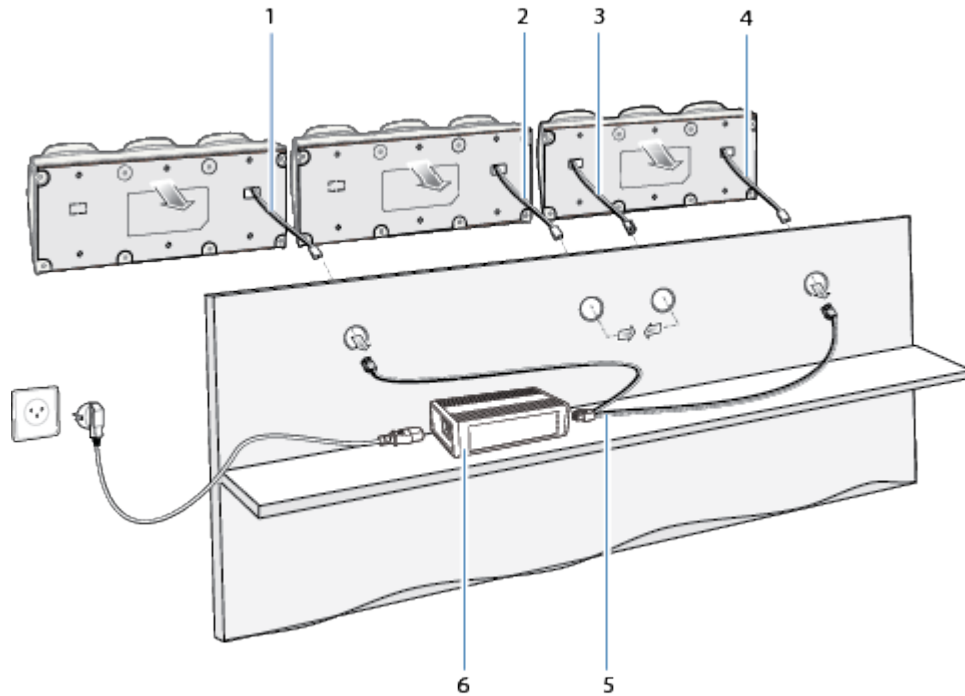

1	Power Extension Cable (p/n CBL-MC18-EXINT1-01)
2	Power Extension Cable (p/n CBL-MC18-EXINT1-01)
3	Interconnect Cable (p/n 25-66431-01R)
4	Cradle Interconnection Extension Cable (p/n CBL-MC18-EXINT1-01)
5	DC “Y” Charging Cable Long (CBL-DC-392A1-02)
6	Power Supply Unit (PWR-BGA12V108W0WW)

16. Place the socket onto the cradle and secure the four screws.
 17. Place the socket cover onto the cradle and secure the two screws.

Releasing the Device from the Charging Cradles

Use one of the following methods to release the device from the charging cradles:

- Software Release Using the Menu
- Software Release Using the Cradle Utility
- Manual Release using a Release Key.



NOTE: Devices can also be removed via any customer application that used the EMDK personal shopper interface.

Software Release Using the Menu

The device cradles contain a locking mechanism that locks the device inside the cradle when docked. The device releases from the cradle when a software command is received from the system.

1. Touch and hold the soft **Power** button until the menu appears.
2. Touch **Cradle unlock**.
The cradle unlocks the device.
3. Remove the device from the cradle.

Software Release Using the Cradle Utility

The device cradles contain a locking mechanism that locks the device inside the cradle when docked. The device releases from the cradle when a software command is received from the system.

1. On the Home screen, swipe up from the bottom of the screen.
2. Touch **CradleUtility**.
3. Tap the **CRADLE UNLOCK** tab to set the cradle unlock information.
4. Touch **Unlock Cradle**.

Manual Release Using a Release Key

The device cradles contain a locking mechanism that locks the device inside the cradle when docked. If the device fails to unlock during normal operation, use a release key (KT-MC18-CKEY-20) to unlock the device.




CAUTION: Do not use any device to unlock the cradle other than the tools described below. Failure to comply could result in damage to the cradle and void the warranty.

Manual Release of the Device from the Single Slot Cradle

1. Insert the release key into the slot located at the bottom side of the cradle.


2. While pressing the release key all the way into the slot, remove the device from the cradle.

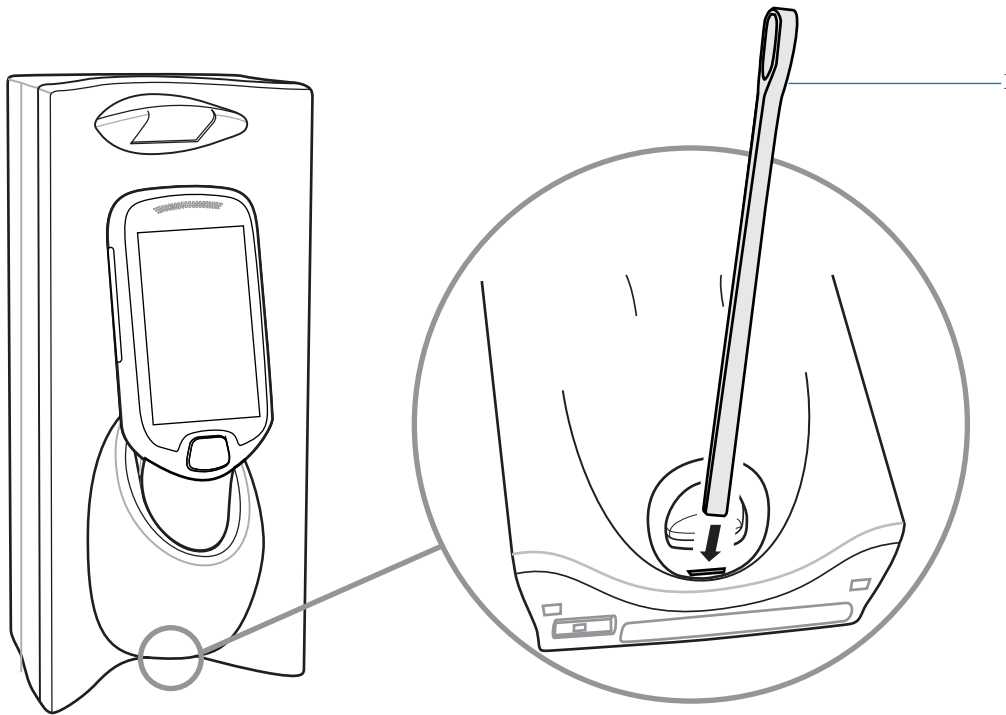

1	Release key
---	-------------

Manual Release of the Device from the Three Slot Cradle

1. Insert the release key straight into the slot, to a point where the bend stops.
2. Hold the release key pressed inside the slot and remove the device from the slot.

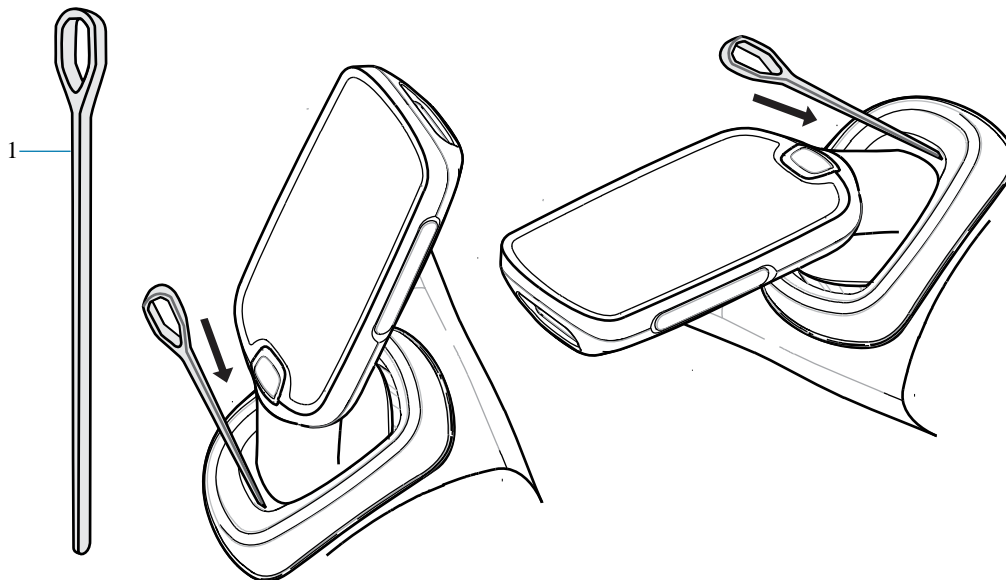


1	Release key
---	-------------

USB Programming Cable


The USB programming cable is attached to a battery cover. Use this cable to connect the device to a host computer.

Installing the USB Programming Cable

1. Power off the device.
2. Remove the standard battery cover that comes installed on the device, if it is not already removed.
 - a) Loosen the captive screw that secures the battery cover, using a Phillips (PH00) screwdriver.
 - b) Lift the battery cover from the handle.
3. Slide the tab at the top of the battery cover with the USB programming cable into the slot on the back of the device.

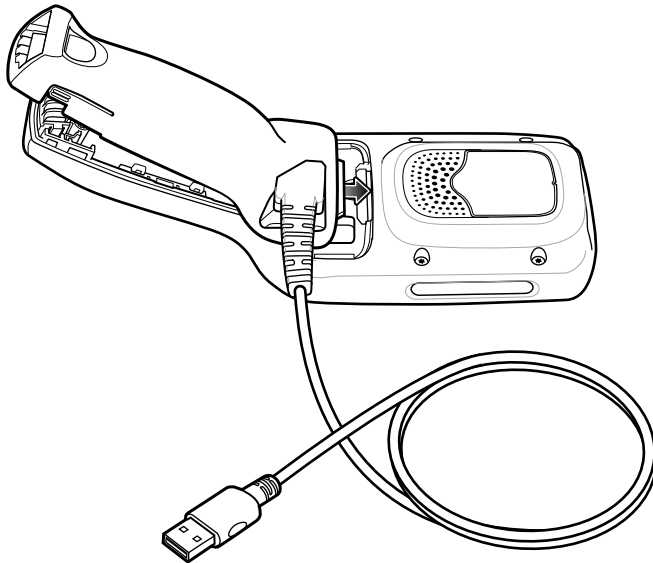


4. Push the bottom of the battery cover down, until it snaps into place.

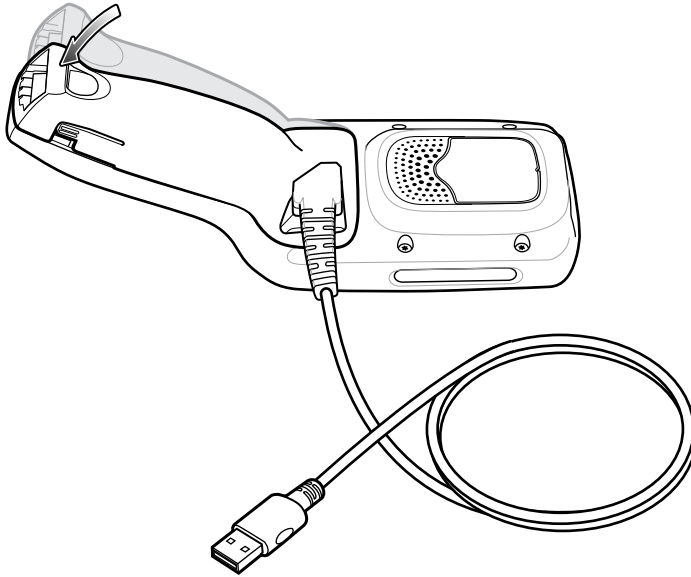

Connecting the Device to the Host Computer


- To connect the device to the host computer, insert the USB programmable cable from the device into USB slot on the host computer.

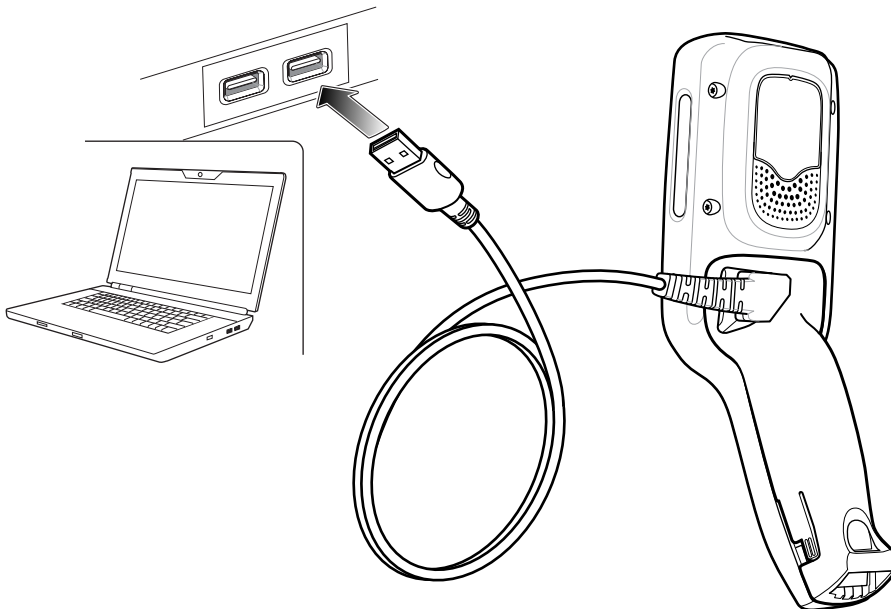

Removing the USB Programming Cable

1. Squeeze the left and right tabs in, on the bottom of the battery cover.

2. Lift the bottom of the battery cover up.
3. Slide the top of the battery cover out to remove.

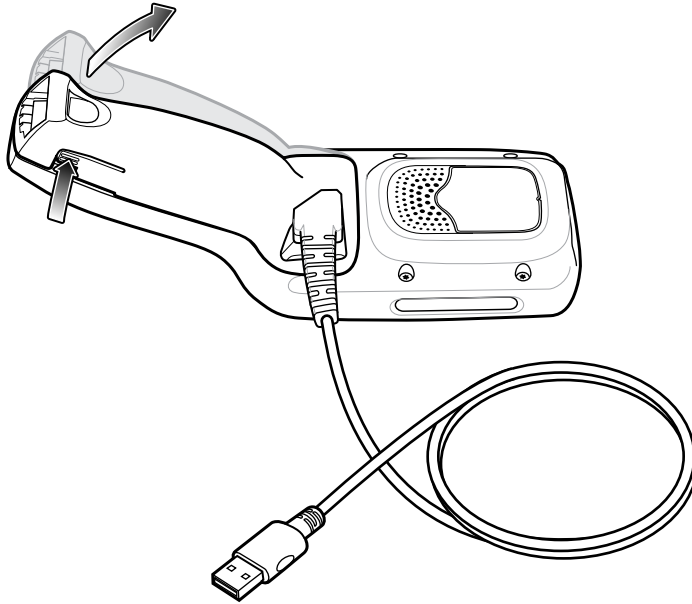


Soft Holster

The soft holster provides a holder for the MC18/PS20 and allows for wearing the device on the hip, using a belt clip, or crossbody, using the detachable shoulder strap.


Always place the device with the correct orientation when using the soft holster with a belt clip or shoulder strap, as shown in the following diagrams.

Using the Belt Clip


1. Secure the belt clip on the soft holster, if it is not already attached.

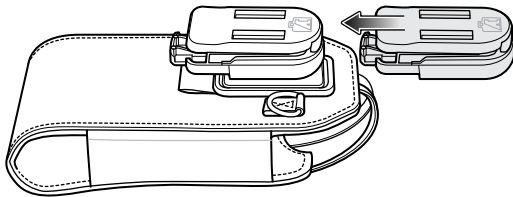


2. Secure the belt clip on the belt or waistband.

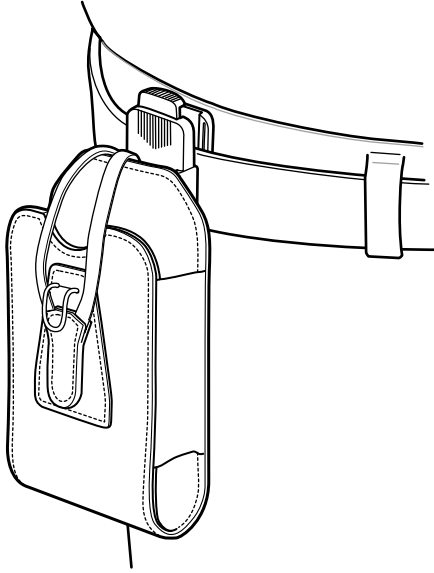

3. To insert the device, slide the device into the soft holster, with the screen facing the user.

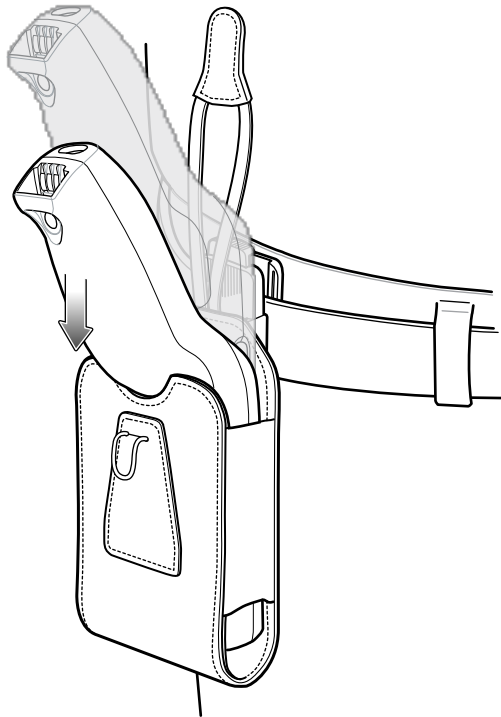

4. Secure the device with the restraining strap and place over the device and hook to secure in place.

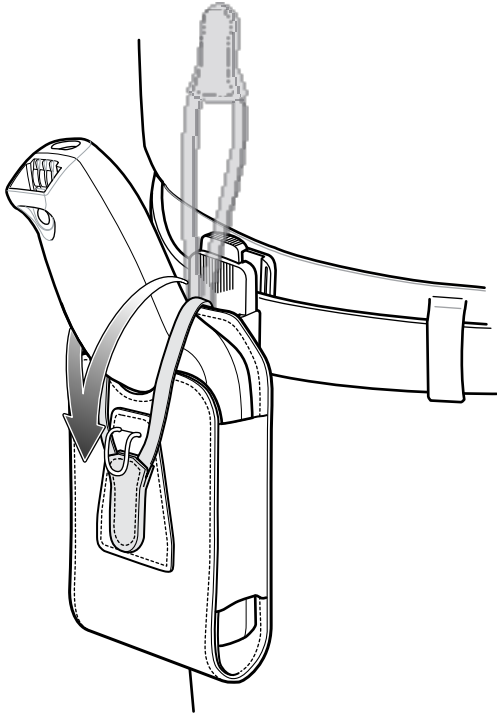

5. To remove the device, lift the restraining strap to release. Lift the device out of the soft holster.

Using the Shoulder Strap

1. Connect the clips on the shoulder strap to the rings on the soft holster, if not already attached.

2. Place the shoulder strap over your head and rest on your shoulder.



3. Lift the strap and insert the device into the soft holster, with the screen facing the user.
4. Secure the device with the restraining strap and place over the device and hook to secure in place.

Application Deployment

This section provides steps on device security, app development, and app management. It also provides instructions for installing apps and updating the device software.



NOTE: Ensure that the date is set correctly before installing certificates or when accessing secure websites.

Security

The device implements a set of security policies that determine whether an application is allowed to run and, if allowed, with what level of trust. To develop an application, you must know the security configuration of the device, and how to sign an application with the appropriate certificate to allow the application to run (and to run with the needed level of trust).



NOTE: Ensure the date is set correctly before installing certificates or when accessing secure web sites.

Secure Certificates

If the VPN or Wi-Fi networks rely on secure certificates, obtain the certificates and store them in the device's secure credential storage, before configuring access to the VPN or Wi-Fi networks.

If downloading the certificates from a web site, set a password for the credential storage. The device supports X.509 certificates saved in PKCS#12 key store files with a .p12 extension (if key store has a .pfx or other extension, change to .p12).

The device also installs any accompanying private key or certificate authority certificates contained in the key store.

Installing a Secure Certificate

If required by the VPN or Wi-Fi network, install a secure certificate on the device.

1. Copy the certificate from the host computer to the root of the device's internal memory.
2. Go to **Settings**.
3. Touch **Security > Encryption & credentials**.
4. Touch **Install a certificate**.
5. Navigate to the location of the certificate file.
6. Touch the filename of the certificate to install.

7. If prompted, enter the password for credential storage. If a password has not been set for the credential storage, enter a password for it twice, and then touch **OK**.
8. Enter a name for the certificate and in the Credential use drop-down, select **VPN and apps** or **Wi-Fi**.
9. Touch **OK**.

The certificate can now be used when connecting to a secure network. For security, the certificate is deleted from the internal memory.

Configuring Credential Storage Settings

Configure credential storage from the device settings.

1. Go to **Settings**.
2. Touch **Security > Advanced > Encryption & credentials**.
3. Select an option.
 - Touch **Trusted credentials** to display the trusted system and user credentials.
 - Touch **User credentials** to display user credentials.
 - Touch **Install from storage** to install a secure certificate from the internal storage.
 - Touch **Clear credentials** to delete all secure certificates and related credentials.

Android Development Tools

Development tools for Android include Android Studio, EMDK for Android, and StageNow.

Android Development Workstation

Android development tools are available at developer.android.com.

To start developing applications for the device, download Android Studio. Development can take place on a Microsoft® Windows®, Mac® OS X®, or Linux® operating system.

Applications are written in Java or Kotlin, but compiled and executed in the Dalvik virtual machine. Once the Java code is compiled cleanly, the developer tools make sure the application is packaged properly, including the AndroidManifest.xml file.

Android Studio contains a full featured IDE as well as SDK components required to develop Android applications.

Enabling Developer Options

The **Developer options** screen sets development-related settings. By default, the Developer Options are hidden.

1. Go to **Settings**.
2. Touch **About phone**.
3. Scroll down to **Build number**.
4. Tab **Build number** seven times.

The message **You are now a developer!** appears.

5. Touch **Back**.
 - On Android 11, touch **System > Advanced > Developer options**.
 - On Android 13, touch **System > Developer options**.
6. Slide the **USB debugging** switch to the ON position.

EMDK for Android

EMDK for Android provides developers with tools to create business applications for enterprise mobile devices. It is designed for use with Google's Android Studio and includes Android class libraries such as Barcode, sample applications with source code, and the associated documentation.

EMDK for Android allows applications to take full advantage of the capabilities that Zebra devices have to offer. It embeds Profile Manager technology within Android Studio IDE, providing a GUI-based development tool designed specifically for Zebra devices. This allows fewer lines of code, resulting in reduced development time, effort, and errors.

See Also

[For more information, go to techdocs.zebra.com.](https://techdocs.zebra.com)

StageNow for Android

StageNow is Zebra's next-generation Android Staging Solution built on the MX platform. It allows quick and easy creation of device profiles, and can deploy to devices simply by scanning a barcode, reading a tag, or playing an audio file.

The StageNow Staging Solution includes the following components:

- The StageNow Workstation tool installs on the staging workstation (host computer) and lets the administrator easily create staging profiles for configuring device components, and perform other staging actions such as checking the condition of a target device to determine suitability for software upgrades or other activities. The StageNow Workstation stores profiles and other created content for later use.
- The StageNow Client resides on the device and provides a user interface for the staging operator to initiate staging. The operator uses one or more of the desired staging methods (print and scan a barcode, read an NFC tag or play an audio file) to deliver staging material to the device.

See Also

[For more information, go to techdocs.zebra.com.](https://techdocs.zebra.com)

GMS Restricted

GMS Restricted mode deactivates Google Mobile Services (GMS). All GMS apps are disabled on the device and communication with Google (analytics data collection and location services) is disabled.

Use StageNow to disable or enable GMS Restricted mode. After a device is in GMS Restricted mode, enable and disable individual GMS apps and services using StageNow. To ensure GMS Restricted mode persists after an Enterprise Reset, use the Persist Manager option in StageNow.

For more information on StageNow, go to techdocs.zebra.com.

ADB USB Setup

To use the ADB, install the development SDK on the host computer then install the ADB and USB drivers.

Before installing the USB driver, make sure that the development SDK is installed on the host computer. Go to developer.android.com/sdk/index.html for details on setting up the development SDK.

The ADB and USB drivers for Windows and Linux are available on the Zebra Support Central web site at zebra.com/support. Download the ADB and USB Driver Setup package. Follow the instructions with the package to install the ADB and USB drivers for Windows and Linux.

Enabling USB Debugging

By default, USB debugging is disabled.

1. Go to **Settings**.
2. Touch **About phone**.
3. Scroll down to **Build Number**.
4. Tap **Build Number** seven times.

The message **You are now a developer!** appears.

5. Touch **Back**.
 - On Android 11, touch **System > Advanced > Developer options**.
 - On Android 13, touch **System > Developer options**.
6. Slide the **USB debugging** switch to the **ON** position.

7. Touch **OK**.

8. Connect the device to the host computer using the Rugged Charge/USB Cable.

The **Allow USB debugging?** dialog box appears on the device.

If the device and host computer are connected for the first time, the **Allow USB debugging?** dialog box with the **Always allow from this computer** check box displays. Select the check box, if required.

9. Touch **OK**.
10. Touch **OK** or **Allow**.
11. On the host computer, navigate to the **platform-tools** folder and open a command prompt window.
12. Type `adb devices`.

The following displays:

```
List of devices attached          XXXXXXXXXXXXXXXXXXXX device
```

Where XXXXXXXXXXXXXXXXXXXX is the device number.



NOTE: If device number does not appear, ensure that ADB drivers are installed properly.


Application Installation Methods

After an application is developed, install the application onto the device using one of the supported methods.

- USB connection
- Android Debug Bridge
- Mobile device management (MDM) platforms that have application provisioning. Refer to the MDM software documentation for details.

Installing Applications Using the USB Connection

Use the USB connection to install applications onto the device.

1. Connect the device to a host computer using the USB Programming Cable. See [Installing the USB Programming Cable](#) on page 124 and [Connecting the Device to the Host Computer](#) on page 125.
2. On the device, pull down the Notification panel and touch **Charging this device via USB**.
By default, **No data transfer** is selected.
3. Touch **File Transfer**.
4. On the host computer, open a file explorer application.
5. On the host computer, copy the application APK file from the host computer to the device.
6. Disconnect the device from the host computer. See [Disconnecting from the Host Computer](#) on page 35.
7. Swipe the screen up and select  to view files on the Internal Storage.
8. Locate the application APK file.
9. Touch the application file.
10. Touch **Continue** to install the app or **Cancel** to stop the installation.
11. To confirm installation and accept what the application affects, touch **Install**. Otherwise, touch **Cancel**.
12. Touch **Open** to open the application or **Done** to exit the installation process.
The application appears in the App list.
13. Disconnect the USB programming cable. See [Removing the USB Programming Cable](#) on page 125.

Installing Applications Using the Android Debug Bridge

Use ADB commands to install applications onto the device.

1. Ensure that the ADB drivers are installed on the host computer.
2. Connect the device to a host computer using the USB Programming Cable. See [Installing the USB Programming Cable](#) on page 124 and [Connecting the Device to the Host Computer](#) on page 125.
3. Go to **Settings**.
 - On Android 11, touch **System > Advanced > Developer options**.
 - On Android 13, touch **System > Developer options**.
4. Slide the **USB debugging** switch to the **ON** position.

5. Touch **OK**.
6. If the device and host computer are connected for the first time, the **Allow USB debugging?** dialog box with the **Always allow from this computer** check box displays. Select the check box, if required.
7. Touch **OK** or **Allow**.
8. On the host computer, navigate to the **platform-tools** folder and open a command prompt window.
9. Type `adb install <application>`.
where: <application> = the path and filename of the apk file.
10. Disconnect the USB programming cable. See [Removing the USB Programming Cable](#) on page 125.

Installing Applications Using the Wireless Android Debug Bridge

Use ADB commands to install an application onto the device.

Go to the Zebra Support & Downloads web site at zebra.com/support and download the appropriate Factory Reset file to a host computer.




IMPORTANT: Ensure the latest adb files are installed on the host computer.



IMPORTANT: The device and host computer must be on the same wireless network.

1. Go to **Settings**
 - On Android 11, touch **System > Advanced > Developer options**.
 - On Android 13, touch **System > Developer options**.
2. Slide the **Wireless debugging** switch to the **ON** position.
3. If the device and host computer are connected for the first time, the **Allow wireless debugging on this network?** dialog box with the **Always allow from this network** check box displays. Select the check box, if required.
4. Touch **ALLOW**.
5. Touch **Wireless debugging**.
6. Touch **Pair with pairing code**.

The **Pair with device** dialog box displays.

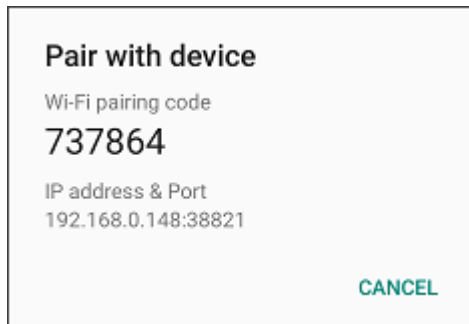

7. On the host computer, navigate to the **platform-tools** folder and open a command prompt window.

8. Type `adb pair XX.XX.XX.XX.XXXXXX`.
where `XX.XX.XX.XX.XXXXXX` is the IP address and port number from the **Pair with device** dialog box.
9. Type: `adb connect XX.XX.XX.XX.XXXXXX`
10. Press **Enter**.
11. Type the pairing code from the **Pair with device** dialog box.
12. Press **Enter**.
13. Type `adb connect`.
The device is now connected to the host computer.
14. Type `adb devices`.
The following displays:

```
List of devices attached          XXXXXXXXXXXXXXXXXXXX device
```

Where XXXXXXXXXXXXXXXXXXXX is the device number.



NOTE: If device number does not appear, ensure that ADB drivers are installed properly.

15. On the host computer command prompt window type:

```
adb install <application>
```

16. On the host computer, type:
`adb disconnect`.

Uninstalling an Application

Free up device memory by removing unused apps.

1. Go to **Settings**.
2. On A11, touch **Apps & notifications**.
3. On A13, touch **Apps**.
4. Touch **See all apps** to view all apps in the list.
5. Scroll through the list to the app.
6. Touch the app. The **App info** screen appears.
7. Touch **Uninstall**.
8. Touch **OK** to confirm.

Android System Update

System Update packages can contain either partial or complete updates for the operating system. Zebra distributes the System Update packages on the Zebra Support & Downloads website. Perform a system update using either a microSD card or using ADB.

Performing a System Update Using ADB

Use ADB to perform a system update.

1. Connect the device to a host computer using the USB Programming Cable. See [Installing the USB Programming Cable](#) on page 124 and [Connecting the Device to the Host Computer](#) on page 125.
2. Go to **Settings**.



NOTE: If you are unable to go to **Settings** because the device is locked, perform the steps in [Entering into Recovery Mode](#), and then proceed to the next step.

3. On Android 11, touch **System > Advanced > Developer options**.
4. On Android 13, touch **System > Developer options**.
5. Slide the **USB debugging** switch to the **ON** position.
6. Touch **OK**.
7. If the device and host computer are connected for the first time, the **Allow USB debugging?** dialog box with the **Always allow from this computer** check box displays. Select the check box, if required.
8. Touch **OK** or **Allow**.
9. On the host computer, navigate to the **platform-tools** folder and open a command prompt window.
10. Type `adb devices`.



NOTE: If the device number does not appear, ensure that the ADB drivers are installed properly.

11. Type `adb reboot recovery`.
12. Press **Enter**.
The System Recovery screen appears on the device.
13. Tap the touch panel to advance to the next menu choice and navigate to **apply upgrade from adb**.



IMPORTANT: If **Apply downgrade from ADB** is selected, an Enterprise Reset is performed on whatever upgrade or downgrade package is provided.

14. Press **Scan**.
15. Tap the touch panel to navigate to **Full OTA Package or Diff OTA Package**.
16. Press **Scan**.
17. On the host computer command prompt window type `adb sideload <file>`.
where: <file> = the path and filename of the zip file.
18. Press **Enter**.

The System Update installs (progress appears as a percentage in the Command Prompt window) and then the System Recovery screen appears on the device.

19. Press **Scan** to reboot the device.
20. Disconnect the USB programming cable. See [Removing the USB Programming Cable](#) on page 125.

Entering into Recovery Mode

Use the terminal reboot tool to place the device in Recovery Mode when you upgrade the device's software.

1. Insert the Terminal Reboot Tool into the Power Connector.
2. Press and hold the Scan key for 10 seconds until the display powers off.
3. Hold the Scan key and Terminal Reboot Tool for one to three seconds.
4. Release the Scan key.

The device enters into Recovery Mode.

Verifying System Update Installation

Verify that the system update was successful.

1. Go to **Settings**.
2. Touch **About phone**.
3. Scroll down to **Build number**.
4. Ensure that the build number matches the new system update package file number.

Android Enterprise Reset

An Enterprise Reset erases all user data in the /data partition, including data in the primary storage locations (/sdcard and emulated storage), while preserving the contents of the /enterprise folder and its subfolders. The contents of the /enterprise folder and its subfolders are preserved. Zebra distributes the Enterprise Reset packages on the Zebra Support & Downloads website.

Before performing an Enterprise Reset, provision all necessary configuration files and restore after the reset.

Performing an Enterprise Reset from Device Settings

Perform an Enterprise Reset from the device settings.

1. Go to **Settings**,
 - On Android 11, touch **System** > **Advanced**
 - On Android 13, touch **System**.
2. Touch **Reset Options** > **Erase all data (enterprise reset)**
3. Touch **Erase all data** twice to confirm the Enterprise Reset.

Performing an Enterprise Reset Using ADB

Use the Android Debug Bridge to reset the PS20 as part of a system update or debugging process.

1. Connect the device to a host computer using the USB Programming Cable. See [Installing the USB Programming Cable](#) on page 124 and [Connecting the Device to the Host Computer](#) on page 125.

2. Go to **Settings**.



NOTE: If you are unable to go to **Settings** because the device is locked, perform the steps in [Entering into Recovery Mode](#), and then proceed to the next step.

3. On Android 11, touch **System > Advanced > Developer options**.

4. On Android 13, touch **System > Developer options**.

5. Slide the **USB debugging** switch to the **ON** position.

6. Touch **OK**.

7. If the device and host computer are connected for the first time, the **Allow USB debugging?** dialog box with the **Always allow from this computer** check box displays. Select the check box, if required.

8. Touch **OK** or **Allow**.

9. On the host computer, navigate to the **platform-tools** folder and open a command prompt window.

10. Type `adb devices`.

The following displays:

```
List of devices attached
XXXXXXXXXXXXXXXXXX device
```

Where XXXXXXXXXXXXXXXXXXXX is the device number.



NOTE: If the device number does not appear, ensure that the ADB drivers are installed properly.

11. Type `adb reboot recovery`.

12. Press **Enter**.

The System Recovery screen appears on the device.

13. Tap the touch panel to advance to the next menu choice and navigate to **Apply upgrade from ADB**.

14. Press **Scan**.

15. On the host computer command prompt window type `adb sideload <file>`

where: <file> = the path and filename of the zip file.

16. Press **Enter**.

The Enterprise Reset package installs, and then the System Recovery screen appears on the device.

17. Press **Scan** to reboot the device.

18. Disconnect the USB programming cable. See [Removing the USB Programming Cable](#) on page 125.

Android Factory Reset

A Factory Reset erases all data in the /data and /enterprise partitions in internal storage and clears all device settings. A Factory Reset returns the device to the last installed operating system image. To revert to a previous operating system version, re-install that operating system image. Zebra distributes the Factory Reset packages on the Zebra Support & Downloads website.

Performing a Factory Reset Using ADB

Perform a Factory Reset using ADB.

1. Connect the device to a host computer using the USB Programming Cable. See [Installing the USB Programming Cable](#) on page 124 and [Connecting the Device to the Host Computer](#) on page 125.
2. Go to **Settings**.



NOTE: If you are unable to go to **Settings** because the device is locked, perform the steps in [Entering into Recovery Mode](#), and then proceed to **Settings**.

3. On Android 11, touch **System > Advanced > Developer options**.
4. On Android 13, touch **System > Developer options**.
5. Slide the **USB debugging** switch to the **ON** position.
6. Touch **OK**.
7. If the device and host computer are connected for the first time, the **Allow USB debugging?** dialog box with the **Always allow from this computer** check box displays. Select the check box, if required.
8. Touch **OK** or **ALLOW**.
9. Type `adb devices`.

The following displays:

```
List of devices attached
XXXXXXXXXXXXXXXXXX device
```

Where XXXXXXXXXXXXXXXXXXXX is the device number.



NOTE: If the device number does not appear, ensure that the ADB drivers are installed properly.

10. Type:


```
adb reboot recovery
```
11. Press **Enter**.

The System Recovery screen appears on the device.
12. Tap the touch panel to advance to the next menu choice and navigate to **Apply upgrade from ADB**.
13. Press **Scan**.
14. On the host computer command prompt window type `adb sideload <file>`.

where: <file> = the path and filename of the zip file.

15. Press **Enter**.
The Factory Reset package installs, and then the System Recovery screen appears on the device.
16. Press **Scan** to reboot the device.
17. Disconnect the USB programming cable. See [Removing the USB Programming Cable](#) on page 125.

Android Storage

The device contains multiple types of file storage.

- Random Access Memory (RAM)
- On-device Storage
- Internal storage
- Enterprise folder.



NOTE: For more information, refer to Knowledge Articles - Best Practices in Mobile Computing: Flash at zebra.com/ps20-info.

Random Access Memory

Executing programs use RAM to store data. Data stored in RAM is lost upon a reset.

The operating system manages how applications use RAM. It only allows applications and component processes and services to use RAM when required. It may cache recently used processes in RAM, so they restart more quickly when opened again, but it will erase the cache if it needs the RAM for new activities.

The screen displays the amount of used and free RAM.

- **Performance** - Indicates memory performance.
- **Total memory** - Indicates the total amount of RAM available.
- **Average used (%)** - Indicates the average amount of memory (as a percentage) used during the period of time selected (default - 3 hours).
- **Free** - Indicates the total amount of unused RAM.
- **Memory used by apps** - Touch to view RAM usage by individual apps.

Viewing Memory

View the amount of memory used and free RAM.

1. On Android 11, go to **Settings > System > Advanced > Developer options**.
2. On Android 13, go to **Settings > System > Developer options**.
3. Touch **Memory**.

Internal Storage

The device has internal storage. The internal storage content can be viewed and files copied to and from when the device is connected to a host computer. Some applications are designed to be stored on the internal storage rather than in internal memory.

Viewing Internal Storage

View available and used internal storage on the device.

1. Go to **Settings**.
2. Touch **Storage**.

Internal Storage displays the total amount of space on internal storage and amount used.

If the device has removable storage installed, touch **Internal shared storage** to display the amount of internal storage used by apps, photos, videos, audio, and other files.

Enterprise Folder

The Enterprise folder (within internal flash) is a super-persistent storage that is persistent after a reset and an Enterprise Reset.

The Enterprise folder is erased during a Factory Reset. The Enterprise folder is used for deployment and device-unique data. The Enterprise folder is approximately 128 MB (formatted). Applications can persist data after an Enterprise Reset by saving data to the enterprise/user folder. The folder is ext4 formatted and is only accessible from a host computer using ADB or from an MDM.

Managing Apps

Apps use two kinds of memory: storage memory and RAM. Apps use storage memory for themselves and any files, settings, and other data they use. They also use RAM when they are running.

1. Go to **Settings**.
 - On Android 11, touch **Apps & notifications**.
 - On Android 13, touch **Apps**.
2. Touch **See all XX apps** to view all apps on the device.
3. Touch **⋮** > **Show system** to include system processes in the list.
4. Touch an app, process, or service in the list to open a screen with details about it and, depending on the item, to change its settings, permissions, notifications and to force stop or uninstall it.

App Details




Apps have different kinds of information and controls.

- **Force stop** - Stop an app.
- **Disable** - Disable an app.
- **Uninstall** - Remove the app and all of its data and settings from the device.
- **Notifications** - Set the app notification settings.
- **Permissions** - Lists the areas on the device that the app has access to.

- **Storage & cache** - Lists how much information is stored and includes buttons for clearing it.
- **Mobile data & Wi-Fi** - Provides information about data consumed by an app.
- **Advanced**
 - **Screen time** - Displays the amount of time the app has displayed on the screen.
 - **Battery** - Lists the amount of computing power used by the app.
 - **Open by default** - If you have configured an app to launch certain file types by default, you can clear that setting here.
 - **Display over other apps** - Allows an app to display on top of other apps.
 - **App details** - Provides a link to additional app details on the Play store.
 - **Additional settings in the app** - Opens settings in the app.
 - **Modify system settings** - Allows an app to modify the system settings.

Managing Downloads

Files and apps downloaded using the Browser or Email are stored on the USB drive or Internal storage in the Download directory. Use the Downloads app to view, open, or delete downloaded items. Files and apps downloaded using the Browser or Email are stored on the microSD card or Internal storage in the Download directory. Use the Downloads app to view, open, or delete downloaded items.

1. Swipe the screen up and touch .
2. Touch  > **Downloads**.
3. Touch and hold an item, select items to delete and touch . The item is deleted from the device.

Maintenance and Troubleshooting

This section explains how to maintain and troubleshoot the device.

Maintaining the Device

Follow these guidelines to maintain the device properly.

- To avoid scratching the screen, use a Zebra approved capacitive compatible stylus intended for use with a touch-sensitive screen. Never use an actual pen or pencil or other sharp object on the surface of the device screen.
- The touch-sensitive screen of the device is glass. Do not drop the device or subject it to strong impact.
- Protect the device from temperature extremes. Do not leave it on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store the device in any location that is dusty, damp, or wet.
- Use a soft lens cloth to clean the device. If the surface of the device screen becomes soiled, clean it with a soft cloth moistened with an approved cleanser.
- Periodically replace the rechargeable battery to ensure maximum battery life and product performance. Battery life depends on individual usage patterns.

Battery Safety Guidelines

To use the device safely, you must follow the battery guidelines.

- The area in which the units are charged should be clear of debris and combustible materials or chemicals. Particular care should be taken when the device is charged in a non-commercial environment.
- Follow the battery usage, storage, and charging guidelines found in this guide.
- Improper battery use may result in a fire, explosion, or other hazard.
- To charge the mobile device battery, the ambient battery and charger temperatures must be between +32°F and +104°F (0°C and +40°C).
- Do not use incompatible batteries and chargers, including non-Zebra batteries and chargers. Use of an incompatible battery or charger may present a risk of fire, explosion, leakage, or other hazard. If you have any questions about the compatibility of a battery or a charger, contact the Global Customer Support Center.

- For devices that utilize a USB port as a charging source, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not disassemble, open, crush, bend, deform, puncture, or shred the battery.
- Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
- Do not short-circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place a battery into a microwave oven or dryer.
- Battery usage by children should be supervised.
- Please follow local regulations to properly dispose of used rechargeable batteries.
- Do not dispose of batteries in a fire.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with water for 15 minutes, and seek medical advice.
- If you suspect damage to your equipment or battery, contact Customer Support to arrange for inspection.

Cleaning Instructions

Use caution and avoid damaging the device when using cleaning materials.



CAUTION: Always wear eye protection. Read the warning label on alcohol product before using. If you have to use any other solution for medical reasons please contact the Global Customer Support Center for more information.



WARNING: Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines.

Approved Cleanser Active Ingredients

100% of the active ingredients in any cleaner must consist of one or some combination of the following: isopropyl alcohol, bleach/sodium hypochlorite¹ (see important note below), hydrogen peroxide, ammonium chloride, or mild dish soap.



IMPORTANT: Use pre-moistened wipes and do not allow liquid cleaner to pool.

Due to the powerful oxidizing nature of sodium hypochlorite, the metal surfaces on the device are prone to oxidation (corrosion) when exposed to this chemical in the liquid form (including wipes). In the event that these type of disinfectants come in contact with metal on the device, prompt removal with an alcohol-dampened cloth or cotton swab after the cleaning step is critical.

¹ When using sodium hypochlorite (bleach) based products, always follow the manufacturer's recommended instructions: use gloves during application and remove the residue afterwards with a damp alcohol cloth or a cotton swab to avoid prolonged skin contact while handling the device.

Approved cleaners include:

- Purell Ethanol Wipes
- 409 Glass Cleaner
- Windex Blue

Harmful Ingredients

The following chemicals are known to damage the plastics on the device and should not come in contact with the device: acetone; ketones; ethers; aromatic and chlorinated hydrocarbons; aqueous or alcoholic alkaline solutions; ethanolamine; toluene; trichloroethylene; benzene; carboric acid and TB-lysoform.

Many vinyl gloves contain phthalate additives, which are often not recommended for medical use and are known to be harmful to the housing of the device.

Device Cleaning Instructions

Do not apply liquid directly to the device. Dampen a soft cloth or use pre-moistened wipes. Do not wrap the device in the cloth or wipe, instead gently wipe the unit. Be careful not to let liquid pool around the display window or other places. Before use, allow the unit to air dry.



NOTE: For thorough cleaning, it is recommended to first remove all accessory attachments, such as hand straps or cradle cups from the mobile device and to clean them separately.

Special Cleaning Notes

Do not handle the device while wearing vinyl gloves containing phthalates. Remove vinyl gloves and wash hands to eliminate any residue left from the gloves.

If products containing any of the harmful ingredients listed above are used prior to handling the device, such as a hand sanitizer that contains ethanolamine, hands must be completely dry before handling the device to prevent damage to the device.



IMPORTANT: If the battery connectors are exposed to cleaning agents, thoroughly wipe off as much of the chemical as possible and clean with an alcohol wipe. It is also recommended to install the battery in the terminal prior to cleaning and disinfecting the device to help minimize buildup on the connectors. When using cleaning/disinfectant agents on the device, it is important to follow the directions prescribed by the cleaning/disinfectant agent manufacturer.

Cleaning Materials Required

- Alcohol wipes
- Lens tissue
- Cotton-tipped applicators
- Isopropyl alcohol
- Can of compressed air with a tube.

Cleaning Frequency

The cleaning frequency is at the customer's discretion due to the varied environments in which the mobile devices are used and may be cleaned as frequently as required. When dirt is visible, it is recommended to clean the mobile device to avoid the build-up of particles, which makes the device more difficult to clean later on.

For consistency and optimum image capture, it is recommended to clean the camera window periodically especially when used in environments prone to dirt or dust.

Cleaning the Device

This section describes how to clean the housing, display, and camera for the device.

Housing

Thoroughly wipe the housing, including all buttons and triggers, using an approved alcohol wipe.

Display

The display can be wiped down with an approved alcohol wipe, but care should be taken not to allow any pooling of liquid around the edges of the display. Immediately dry the display with a soft, non-abrasive cloth to prevent streaking.

Camera and Exit Window

Wipe the camera and exit window periodically with lens tissue or other material suitable for cleaning optical material such as eyeglasses.

Cleaning Battery Connectors

1. Remove the main battery from the mobile computer.
2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
3. To remove any grease or dirt, rub the cotton portion of the cotton-tipped applicator back and forth across the connectors on the battery and terminal sides. Do not leave any cotton residue on the connectors.
4. Repeat at least three times.
5. Use a dry cotton-tipped applicator and repeat steps 3 and 4. Do not leave any cotton residue on the connectors.
6. Inspect the area for any grease or dirt and repeat the cleaning process if necessary.



CAUTION: After cleaning the battery connectors with bleach-based chemicals, follow the Battery Connector Cleaning instructions to remove bleach from the connectors.

Cleaning Cradle Connectors

1. Remove the DC power cable from the cradle.
2. Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.

3. Rub the cotton portion of the cotton-tipped applicator along the pins of the connector. Slowly move the applicator back and forth from one side of the connector to the other. Do not leave any cotton residue on the connector.
4. All sides of the connector should also be rubbed with the cotton-tipped applicator.
5. Remove any lint left by the cotton-tipped applicator.
6. If grease and other dirt can be found on other areas of the cradle, use a lint-free cloth and alcohol to remove.
7. Allow at least 10 to 30 minutes (depending on ambient temperature and humidity) for the alcohol to air dry before applying power to cradle.

If the temperature is low and humidity is high, longer drying time is required. Warm temperature and low humidity requires less drying time.



CAUTION: After cleaning the cradle connectors with bleach-based chemicals, follow the Cleaning Cradle Connectors instructions to remove bleach from the connectors.

Troubleshooting

In rare circumstances, to troubleshoot the device, you may need to reset the device.

Resetting the Device

This section describes options to reset the device.

There are four reset functions:

- Soft reset
- Hard reset
- Enterprise reset.
- Factory reset.

Performing a Soft Reset

Perform a soft reset if applications stop working.

1. Press and hold the soft **Power** button until the menu appears.
2. Touch **Restart**.

The device reboots.

Performing a Hard Reset - Device in Cradle



CAUTION: Perform a hard reset only if the device stops responding.

1. Ensure power is applied to the cradle.
2. Press and hold the Scan key for 10 seconds until the display powers off.
3. Release the Scan key.

4. Briefly press and release the Scan key.


The device reboots.

Performing a Hard Reset - Device Out of Cradle



CAUTION: Perform a hard reset only if the device stops responding.

1. Insert the Terminal Reboot Tool into the Power Connector.

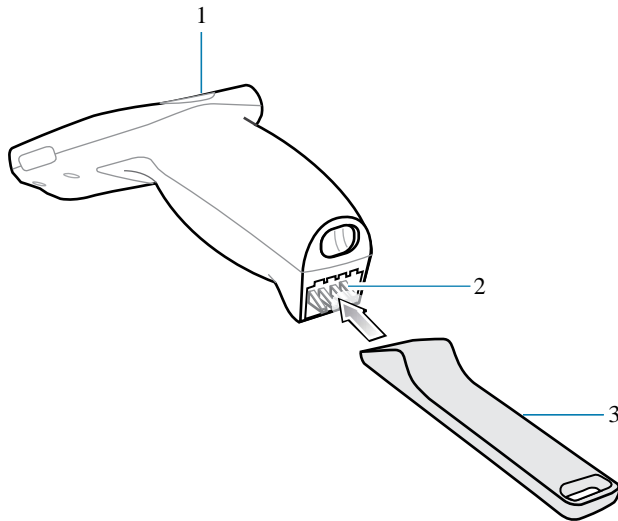

1	Scan key
2	Power connector
3	Terminal reboot tool

2. Press and hold the Scan key for 10 seconds until the display powers off.
3. Release the Scan key.
4. Remove the Terminal Reboot Tool.

The device reboots.

Entering into Recovery Mode

Use the terminal reboot tool to place the device in Recovery Mode when you upgrade the device's software.

1. Insert the Terminal Reboot Tool into the Power Connector.
2. Press and hold the Scan key for 10 seconds until the display powers off.
3. Hold the Scan key and Terminal Reboot Tool for one to three seconds.
4. Release the Scan key.

The device enters into Recovery Mode.

Troubleshooting the Device

Provides solutions to common device issues.

Table 19 Troubleshooting the PS20

Problem	Cause	Solution
When pressing the power button the device does not turn on.	Battery not charged.	Charge or replace the battery in the device.
	Battery not installed properly.	Install the battery properly.
	System crash.	Perform a soft reset. If the device still does not turn on, perform a hard reset.
Battery did not charge.	Battery failed.	Replace battery. If the device still does not operate, perform a reset.
	Device removed from cradle while battery was charging.	Insert device in cradle. The battery fully charges in approximately four hours.
	Extreme battery temperature.	Battery does not charge if ambient temperature is below 0°C (32°F) or above 40°C (104°F).
During data communication with a host computer, no data transmitted, or transmitted data was incomplete.	Device removed from cradle or disconnected from host computer during communication.	Replace the device in the cradle, or reattach the communication cable and re-transmit.
	Incorrect cable configuration.	See the system administrator.
	Communication software was incorrectly installed or configured.	Perform setup.
Device shuts off.	Device is inactive.	When the device ships, by default, the Sleep period is Never. If the device is running on battery power, this period can be changed to 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, or 30 minutes. The device turns off after the set period of inactivity. Change the setting if you need a longer delay before the automatic shutoff feature activates.
	Battery is depleted.	Replace the battery.
	Battery is not inserted properly.	Install the battery properly.
	The device's battery is low and it powers down to protect memory content.	Place the device in the cradle to re-charge the battery.
A message appears stating that the device memory is full.	Too many files stored on the device.	Delete unused memos and records. If necessary, save these records on the host computer (or use an SD card for additional memory).
	Too many applications installed on the device.	Remove user-installed applications on the device to recover memory. Select > Storage > FREE UP SPACE > REVIEW RECENT ITEMS . Select the unused program(s) and tap FREE UP .

Cradle Troubleshooting

Provides solutions to common cradle issues

Table 20 Cradle Troubleshooting

Symptom	Possible Cause	Action
Device battery is not charging.	Device was removed from cradle or cradle was unplugged from AC power too soon.	Ensure cradle is receiving power. Ensure device is seated correctly. Confirm main battery is charging. The battery fully charges in approximately four hours.
	Battery is faulty.	Verify that other batteries charge properly. If so, replace the faulty battery.
	The device is not fully seated in the cradle.	Remove and re-insert the device into the cradle, ensuring it is firmly seated.
	Extreme battery temperature.	Battery does not charge if ambient temperature is below 0°C (32°F) or above 40°C (104°F).
When the device is placed in the cradle, the cradle LED does not blink.	Cradle is not powered.	Ensure cradle is receiving power.
	Cradle firmware is corrupted.	Contact system administrator.
	The device is not operational.	Contact system administrator.
	Communication error between the cradle and device.	Contact system administrator.
Cradle LED blinks red.	The cradle is issued an unlock command and it fails to unlock.	Contact system administrator.
	Cradle is overheating due to continuous lock/unlock or other cradle faults.	Contact system administrator.

Specifications

For device technical specifications, go to www.zebra.com.

Data Capture Supported Symbologies

Table 21 Data Capture Supported Symbologies

Item	Description
1D Barcodes	Code 39, Code 128, Code 93, Codabar, MSI, UPC/EAN, Interleaved 2 of 5, RSS, Composite, TLC-39
2D Barcodes	PDF-417, Micro PDF-417, Composite, TLC-39, Datamatrix, DotCode, QR Code, Micro QRCode, Maxicode, Postal codes, Aztec Code, Han Xin

Interface Connector Pin-Outs

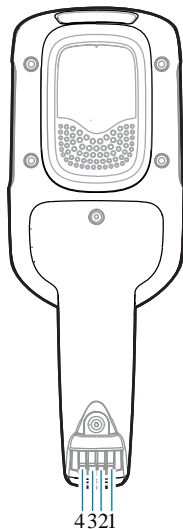


Table 22 Power Connector Pin-Outs

Pin	Signal	Description
1	+5V	Input power

Table 22 Power Connector Pin-Outs (Continued)

Pin	Signal	Description
2	TX	Transmit Output to Cradle
3	RX	Receive Input from Cradle
4	GND	Ground

Accessory Specifications

This section describes the device's accessory specifications.

1-Slot Cradle Technical Specifications

Table 23 1-Slot Cradle Technical Specifications

Item	Description
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-20°C to 60°C (-4°F to 140°F)
Battery Charging Temperature	0°C to 40°C (32°F to 104°F) ambient temperature
Humidity	10% to 95% non-condensing
Size (L x W x H)	98 mm x 127 mm x 272 mm (4 in. x 5 in. x 10.7 in.)
Weight	620 g (21.87 oz)
Power Supply	12.0 VDC,9.0 A
Electrostatic Discharge (ESD)	+/- 15 k VDC air discharge +/- 8 k VDC contact discharge

3-Slot Cradle Technical Specifications

Table 24 3-Slot Cradle Technical Specifications

Item	Description
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-20°C to 60°C (-4°F to 140°F)
Battery Charging Temperature	0°C to 40°C (32°F to 104°F) ambient temperature
Humidity	10% to 95% non-condensing
Size (L x W x H)	129 mm x 134 mm x 310 mm (5 in x 5.2 in x 12.2 in)
Weight	1550 g (54.67 oz)
Power Supply	12.0 VDC,9.0 A

Table 24 3-Slot Cradle Technical Specifications (Continued)

Item	Description
Electrostatic Discharge (ESD)	+/- 15 k VDC air discharge +/- 8 k VDC contact discharge

Cable Specifications

This section describes the device's cable specifications.

Power Supply Cable, Y-type Specifications

The 16 AWG wire should have the following specifications: UL1007, 300 Volt, PVC, -40° C to 80° C operating temperature.

Table 25 Wire Run List & Specifications

Wire Color	AWG	Connector 1 Molex 39-01-2060 housing; 4x, 39-00-0211 contacts	Connector 2 Molex 39-01-2025 housing; 2x, 39-00-0211 contacts	Connector 3 Molex 39-01-2025 housing; 2x, 39-00-0211 contacts	Function
Red	16	1	1		(+) term
Black	16	6	2		(-) term
Red	16	2		1	(+) term
Black	16	5		2	(-) term

Cradle Interconnection Cable Specifications

The 16 AWG wire should have the following specifications: UL1007, 300 Volt, PVC, -40° C to 80° C operating temperature.

Table 26 Wire Run List & Specifications

Wire Color	AWG	Connector 1 Molex 39-01-2025 housing; 2x, 39-00-0211 contacts	Connector 2 Molex 39-01-2025 housing; 2x, 39-00-0211 contacts	Function
Red	16	1	1	(+) term
Black	16	2	2	(-) term

